




HV Detection PCB – located within Accumulator, measuring vehicle side of AIRs

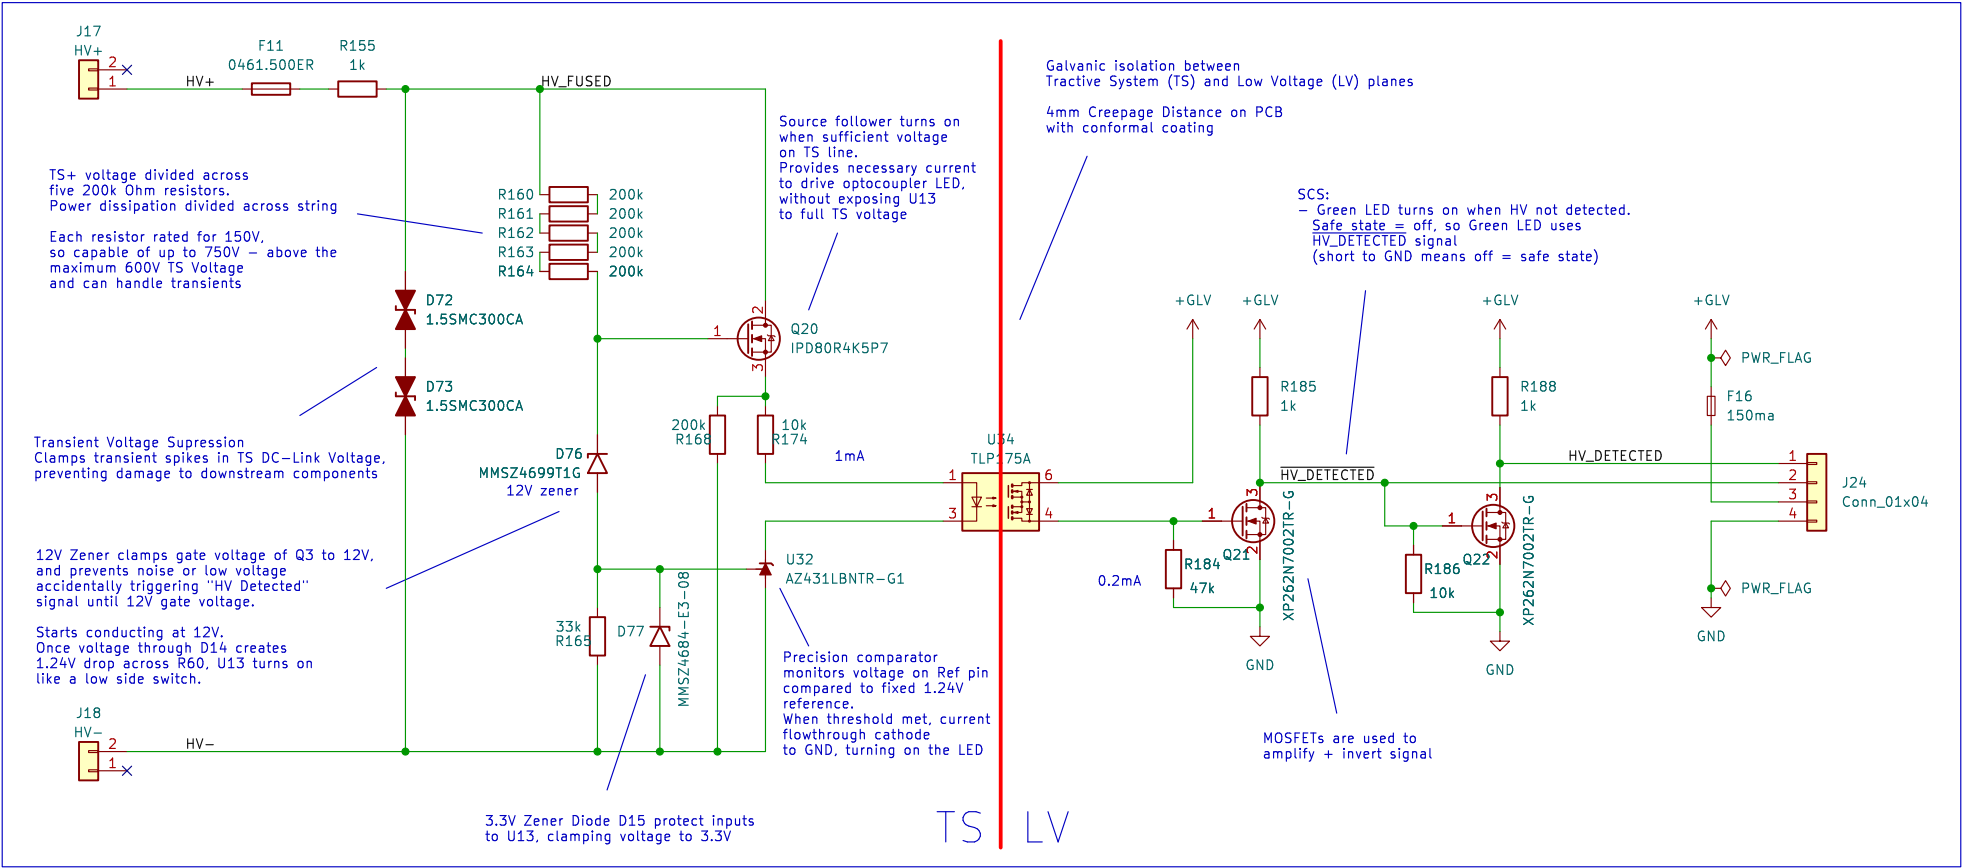

Traction Relay Controller PCB – Inputs and Outputs

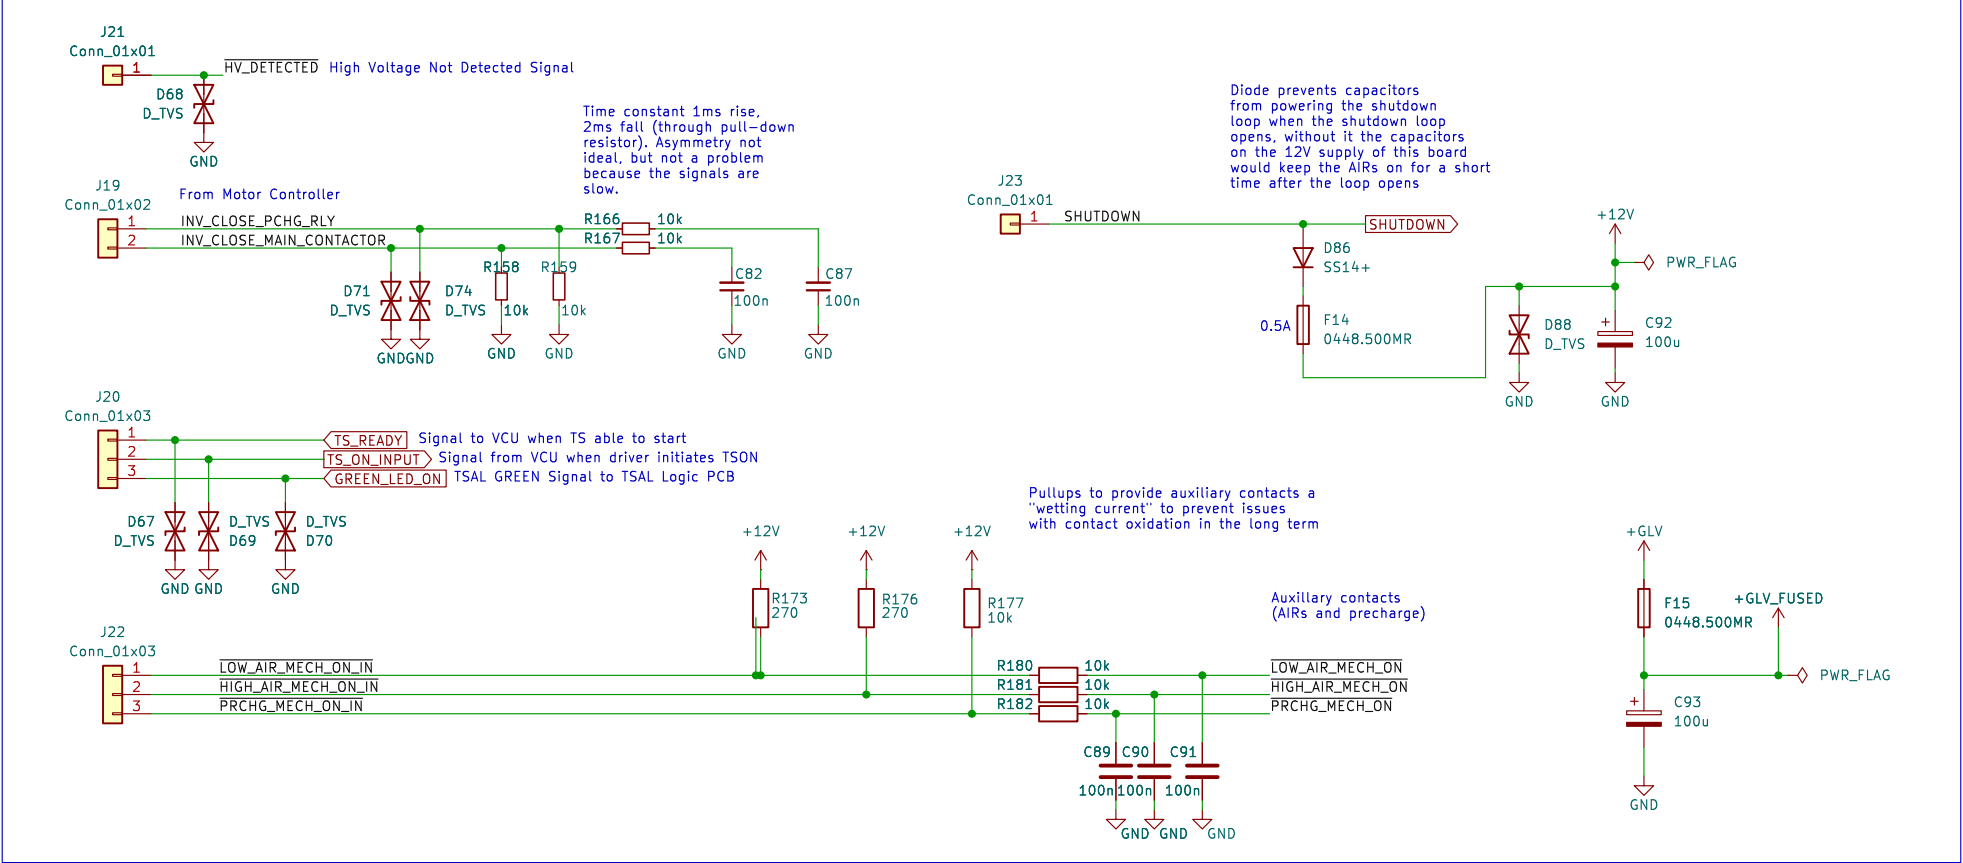

Traction Relay Controller PCB – AIR Control Logic

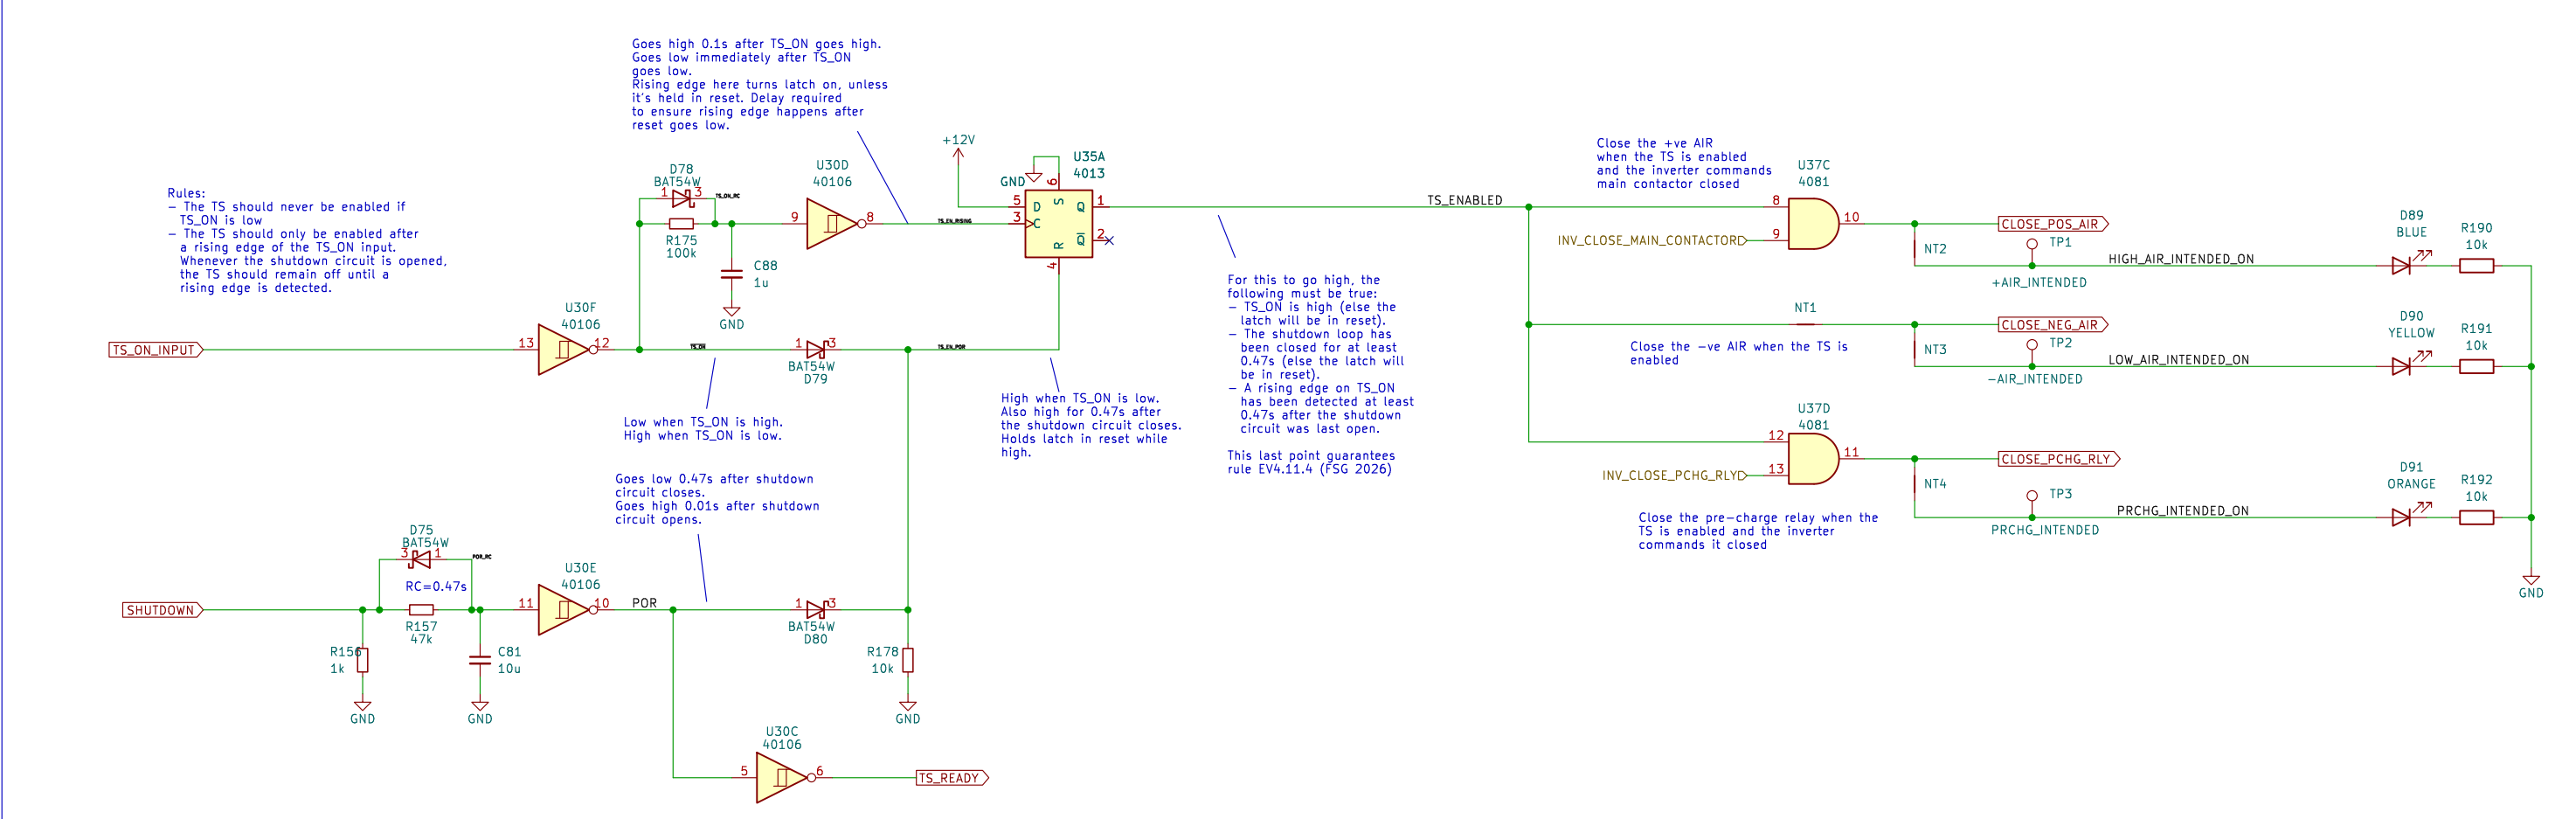

Traction Relay Controller PCB – GREEN Light Implausibility Check

