



HV Detection PCB – DC Link Side, located within HV Junction Box

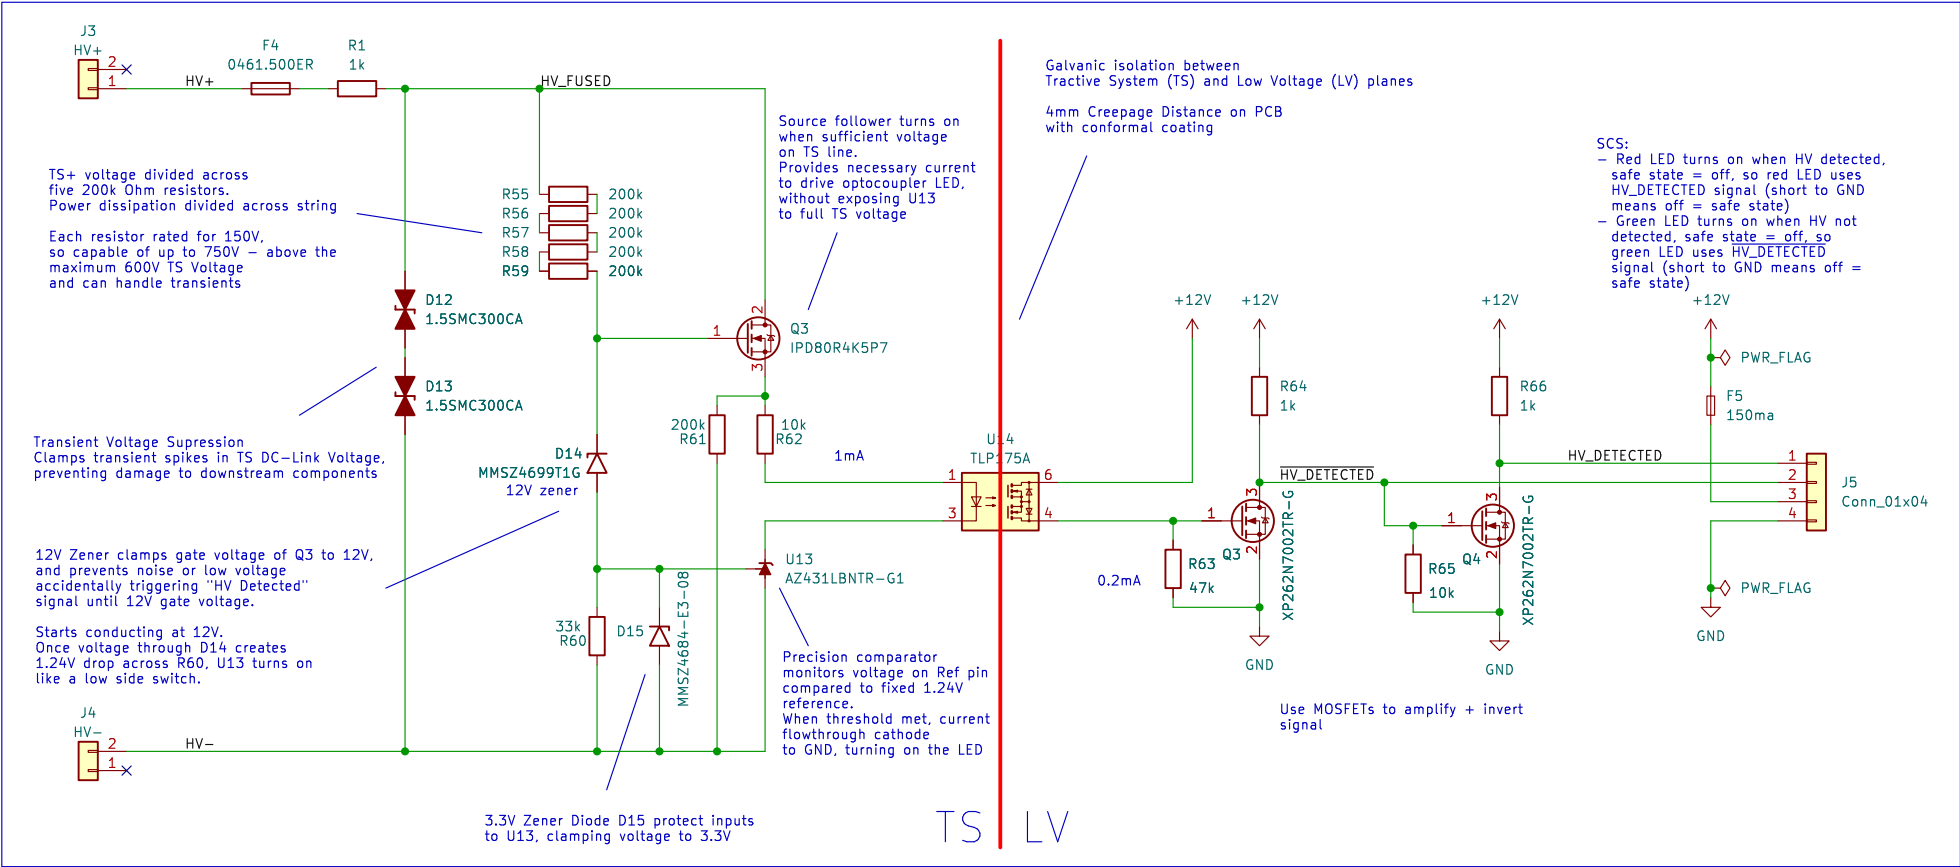

TSAL Logic PCB – located within LV Electronics Box (PCB Integrated with AMS/IMD latching logic)

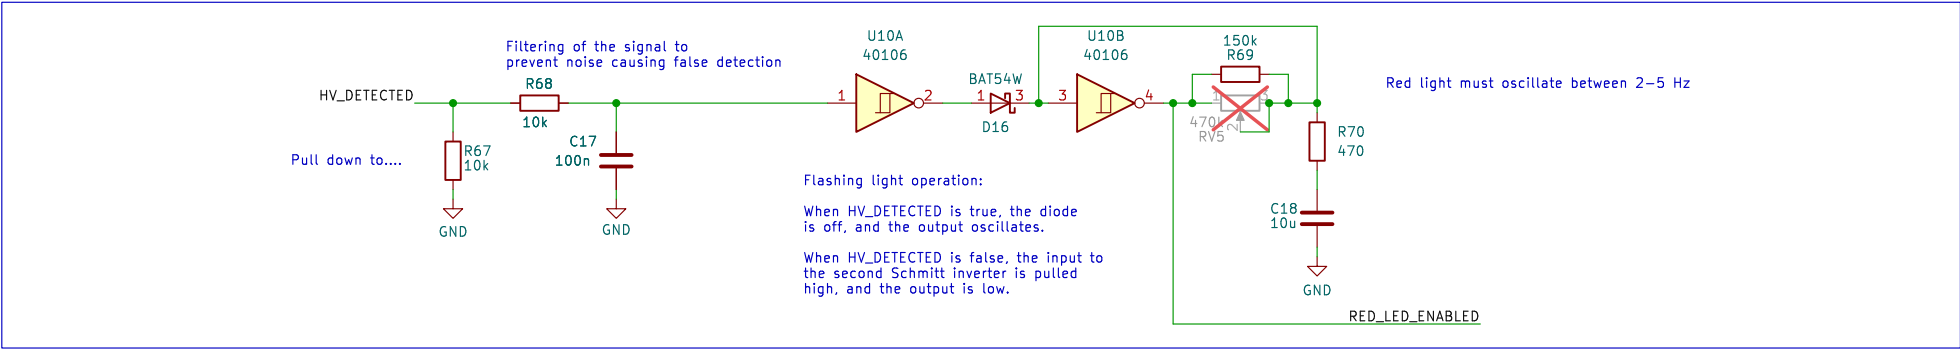

TSAL Driver PCB – located at top of Roll Hoop

