




HV Detection PCB – located within Accumulator, measuring vehicle side of AIRs

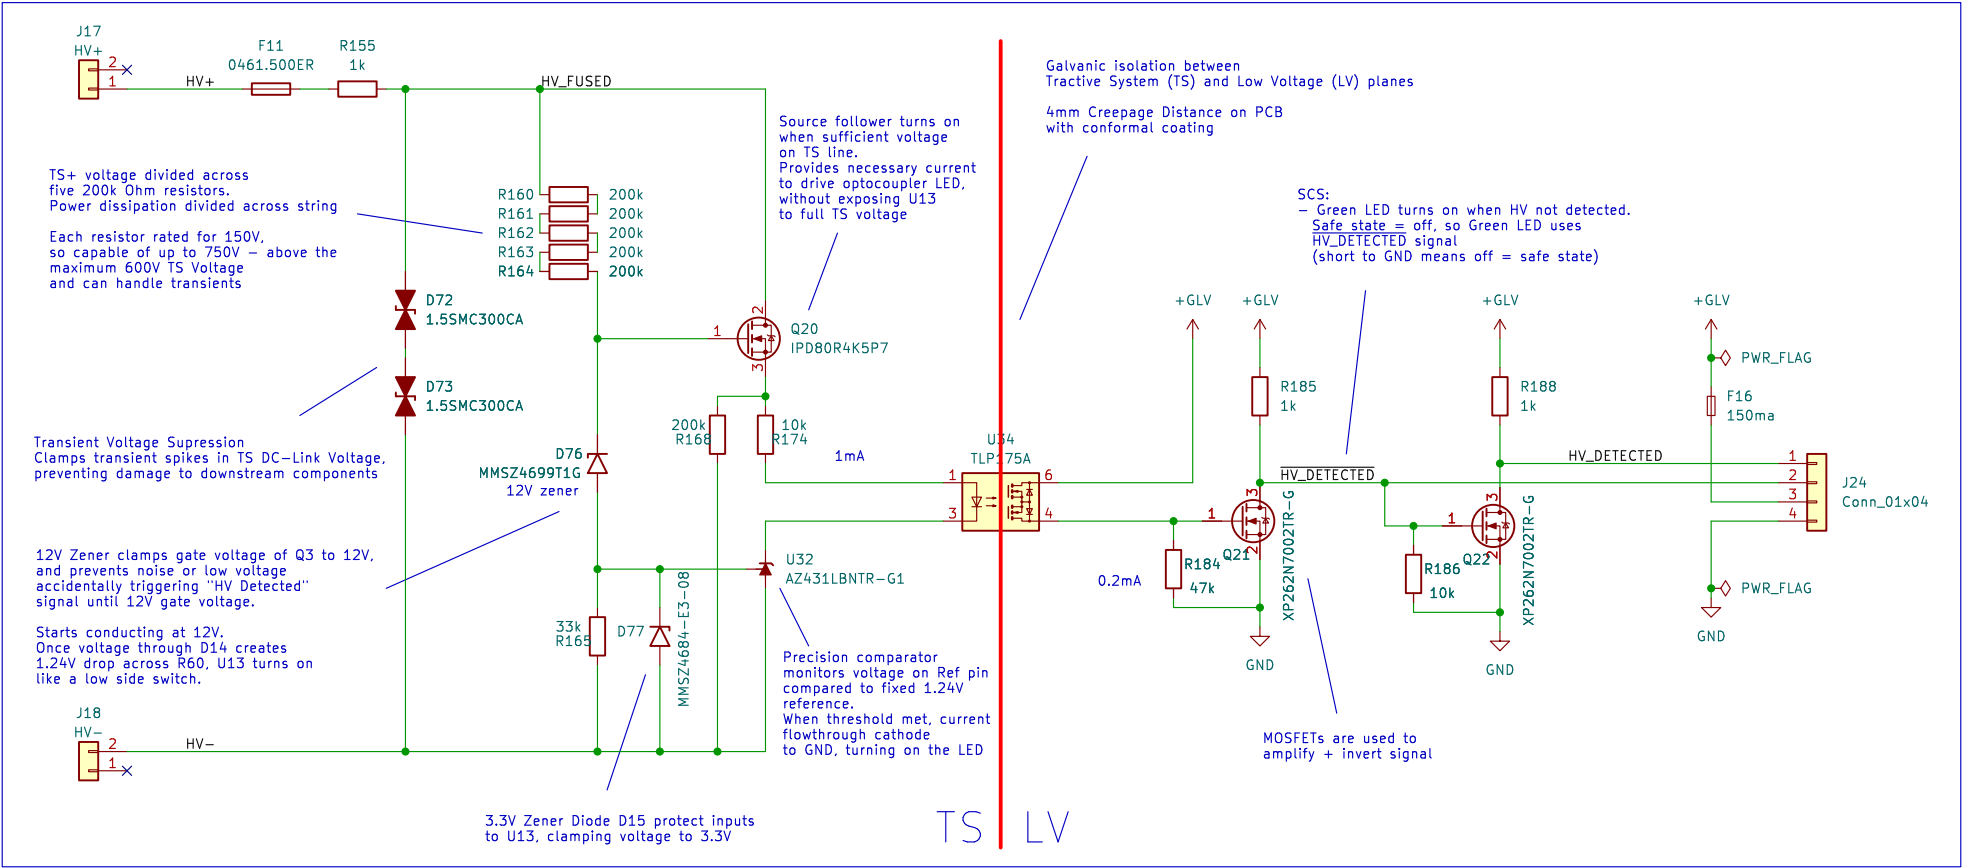

Tractive Relay Controller PCB – Inputs and Outputs

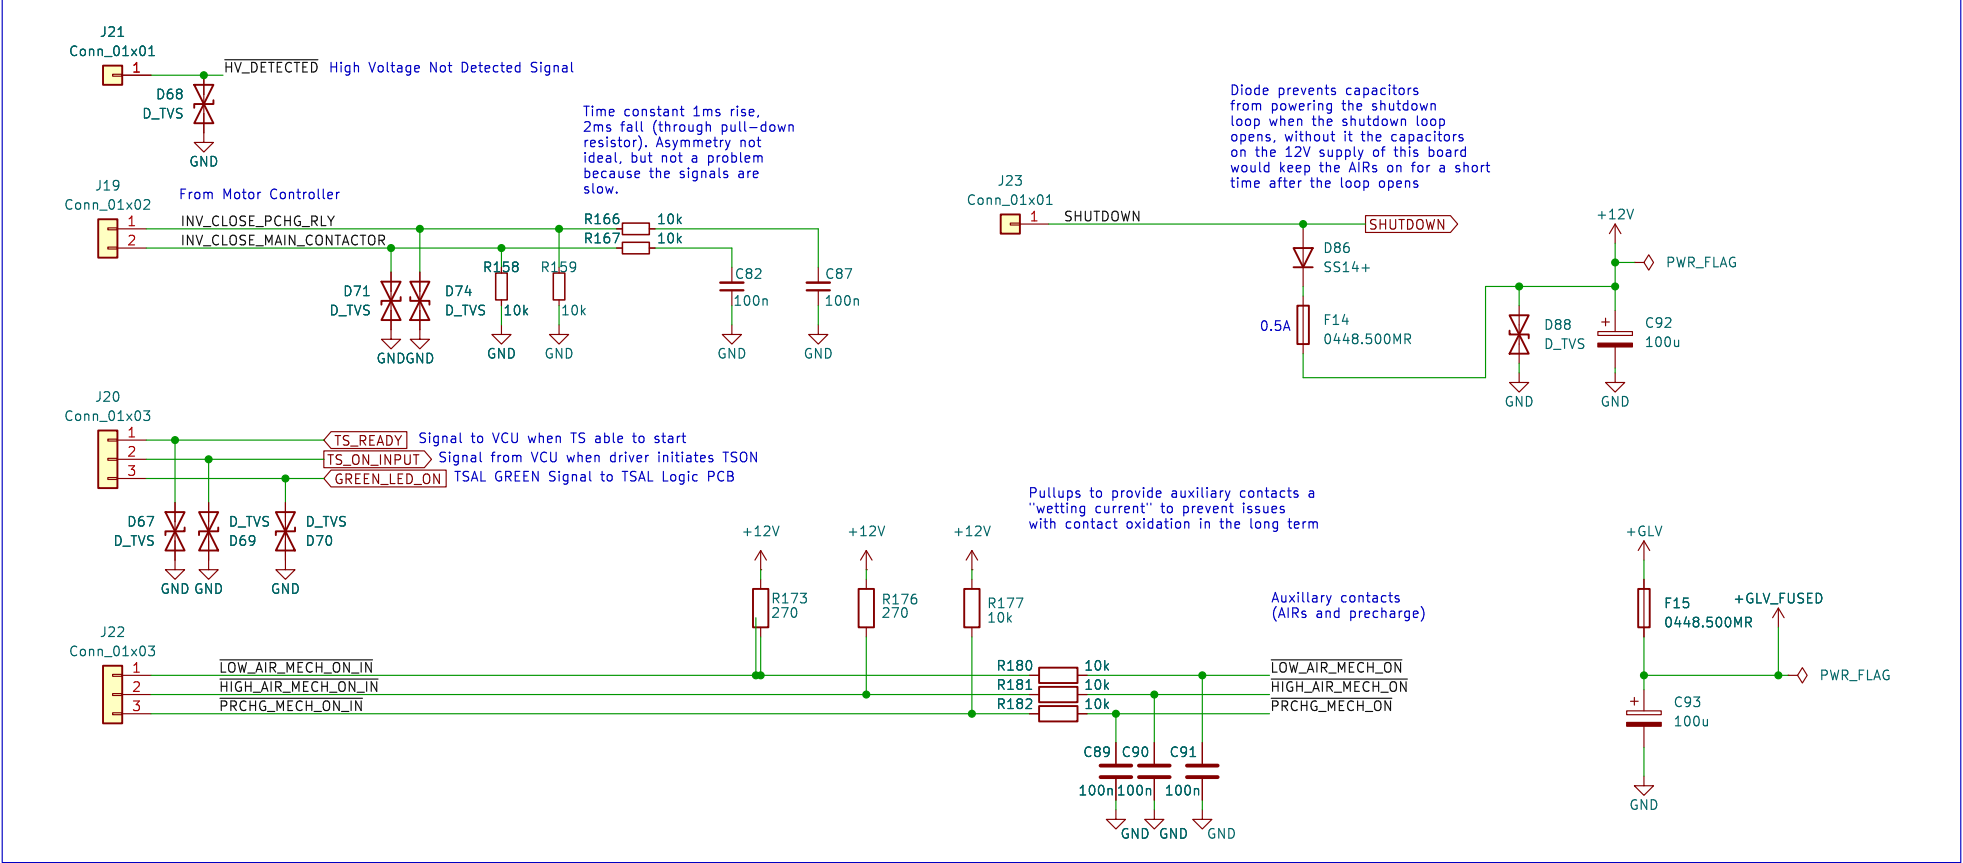

Tractive Relay Controller PCB – AIR Control Logic

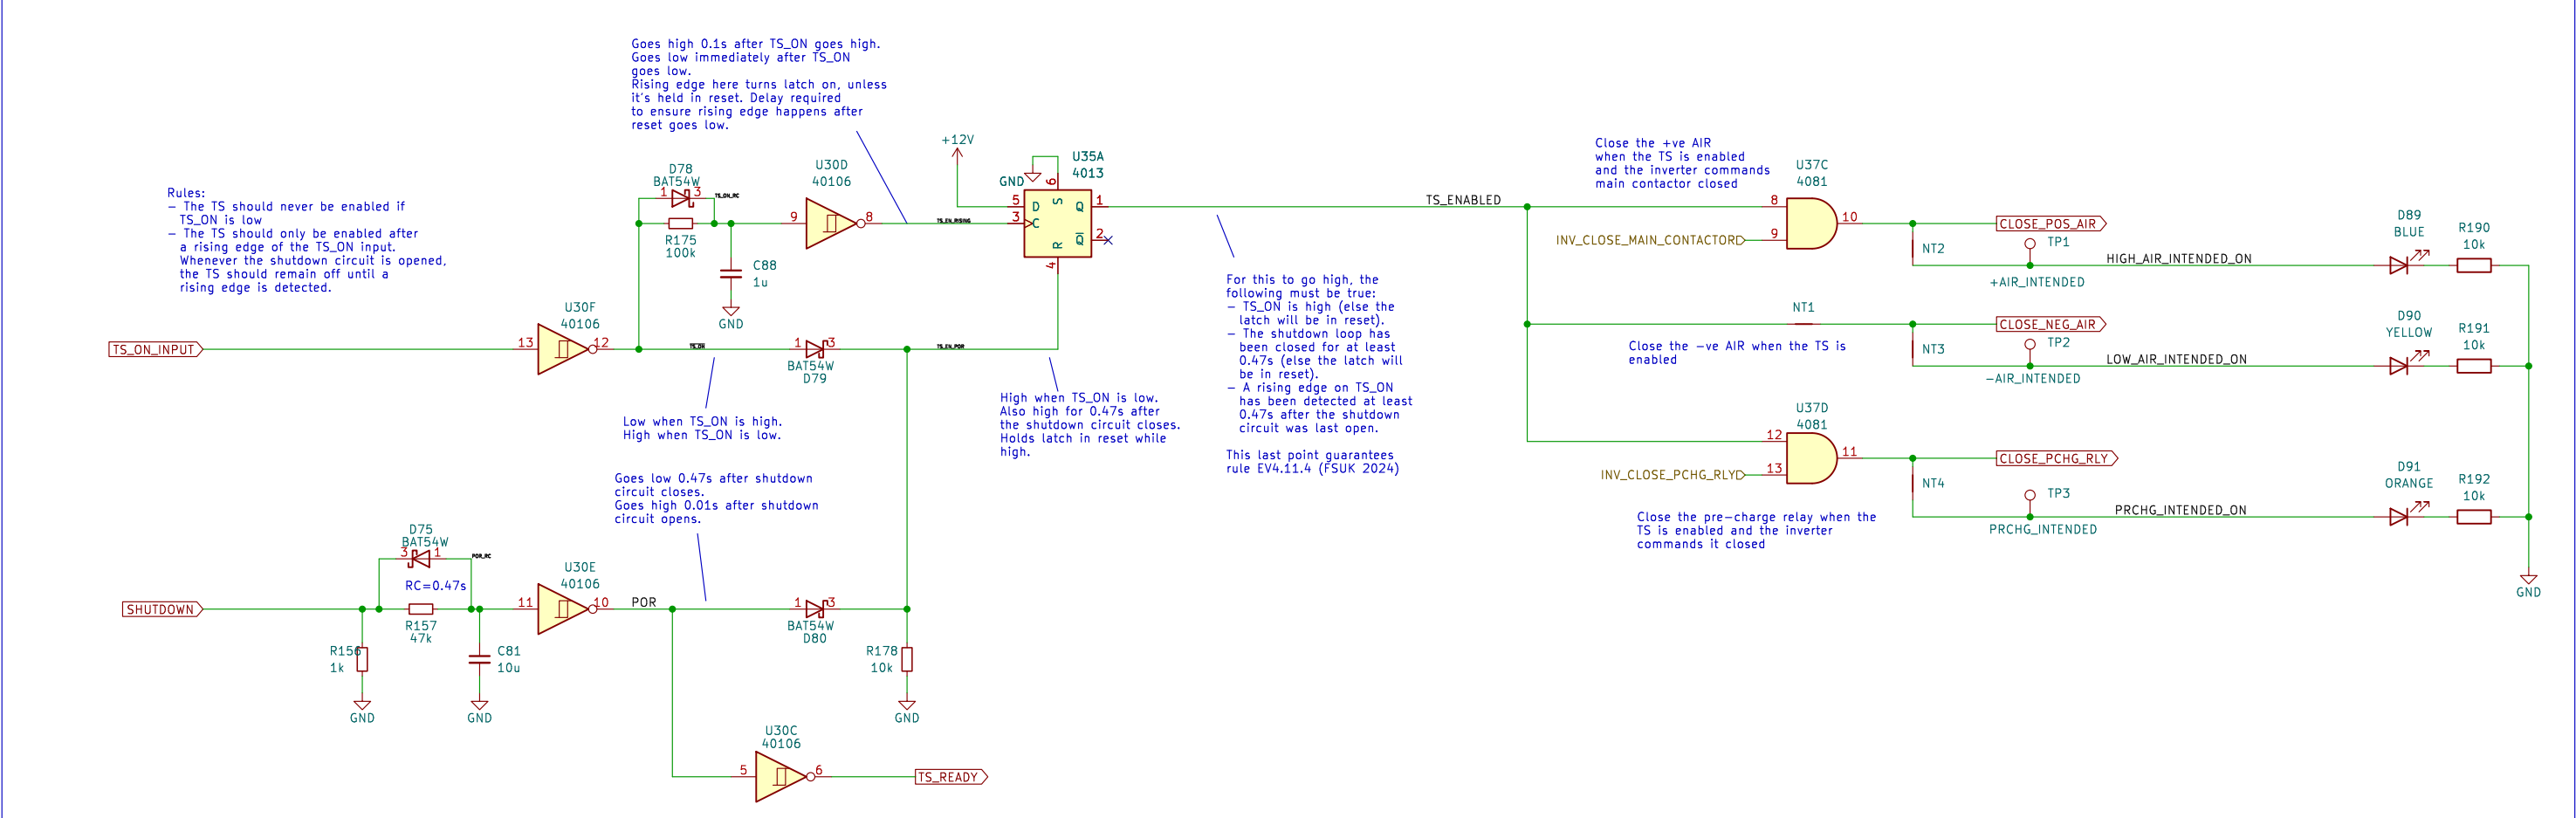

Tractive Relay Controller PCB – GREEN Light Implausibility Check

