




HV Detection PCB – DC Link Side, located within HV Junction Box

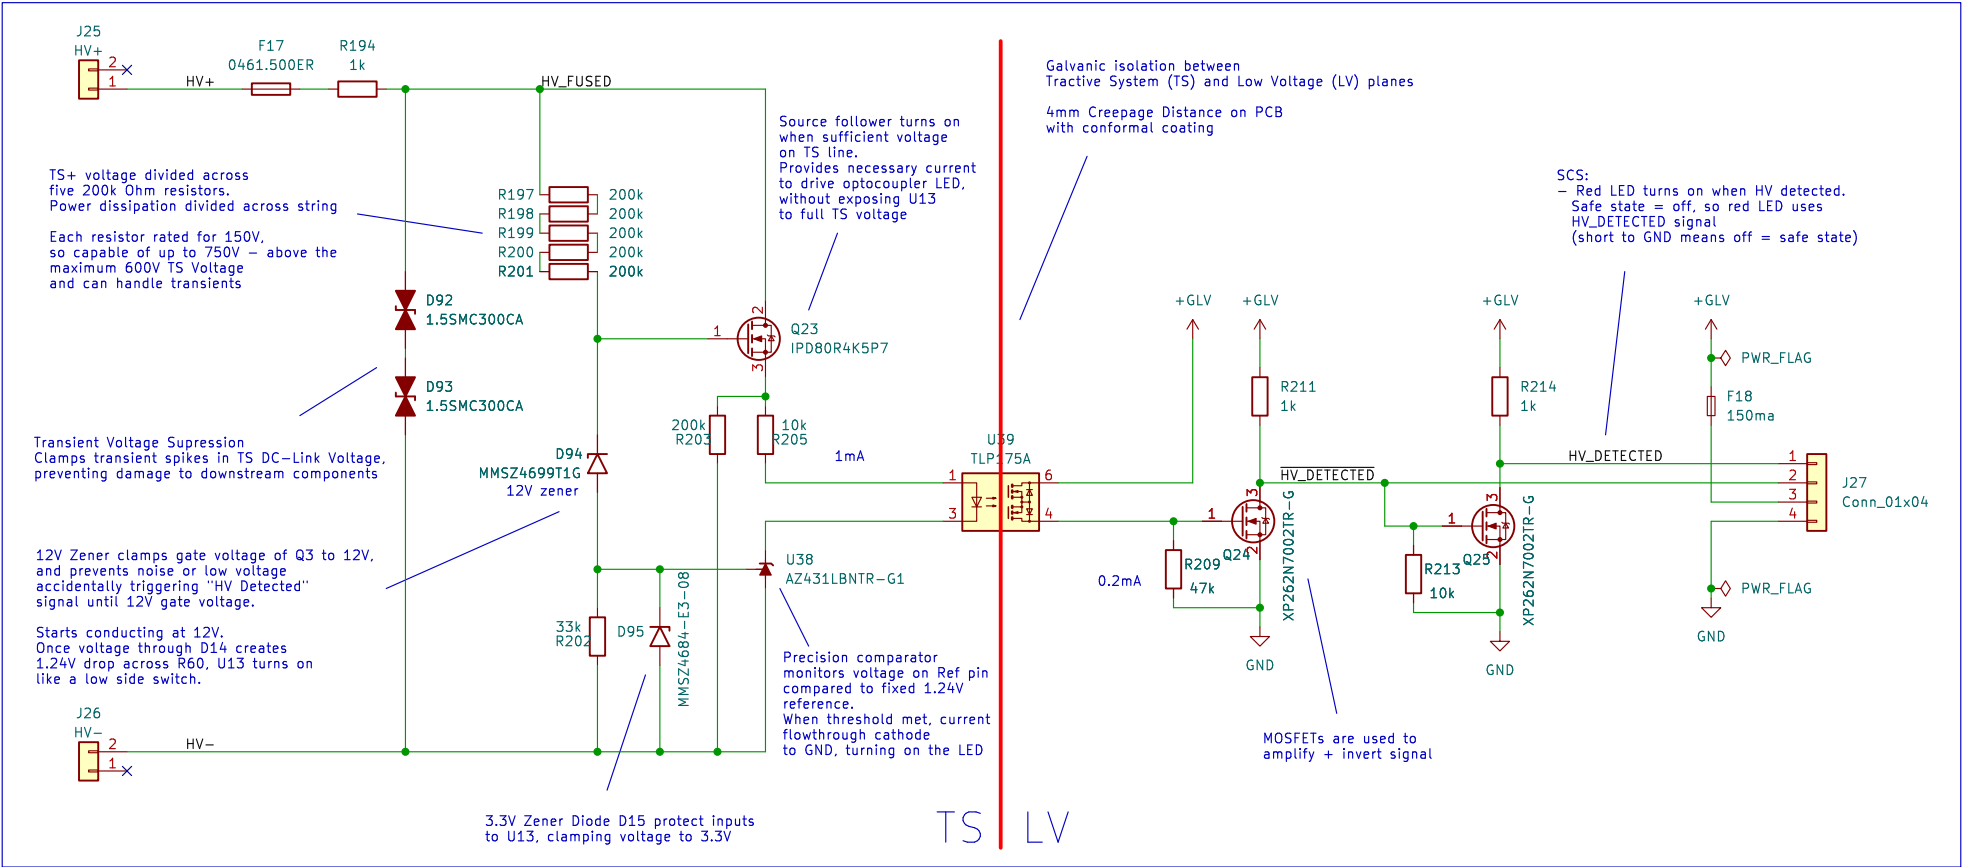

TSAL Logic PCB – located within LV Electronics Box (PCB Integrated with AMS/IMD latching logic)

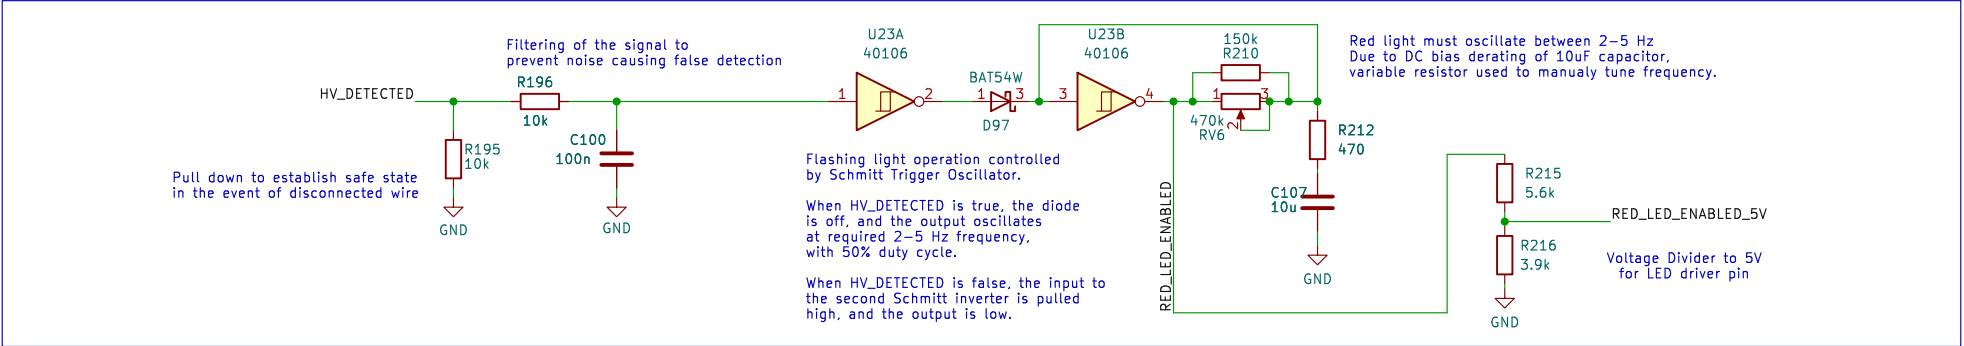

TSAL LED PCB – located at top of Roll Hoop

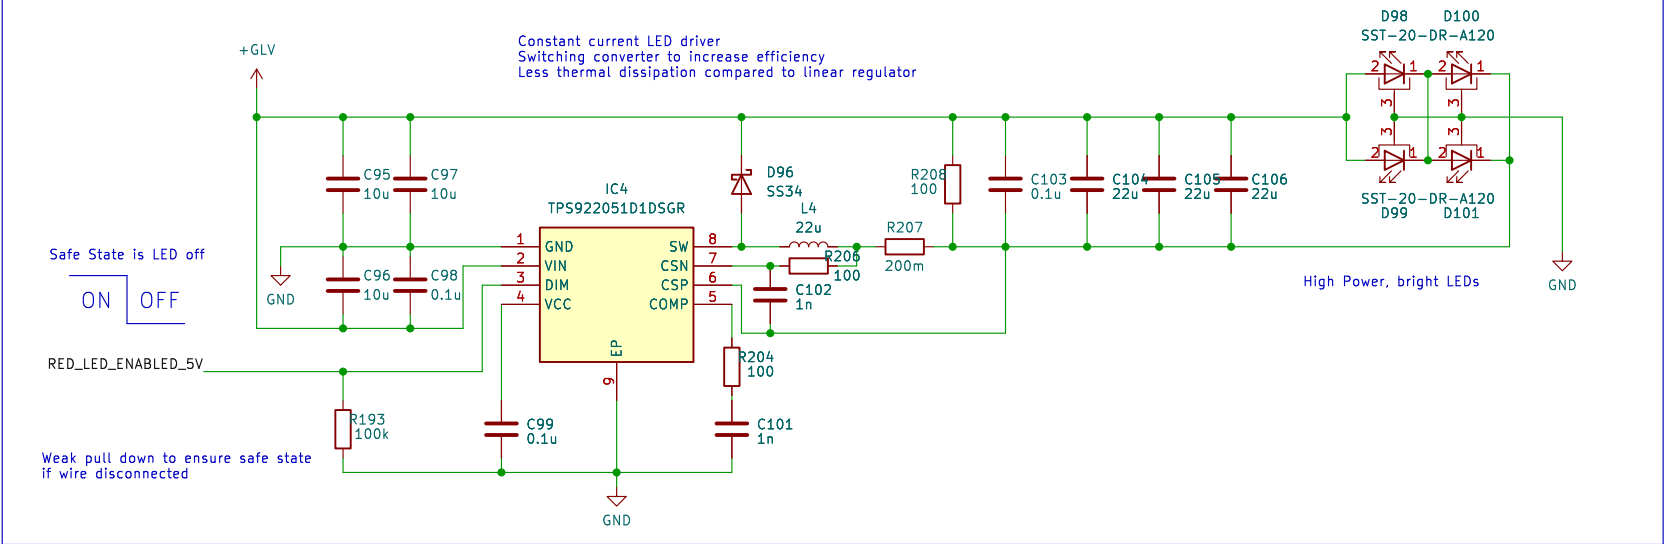

IS HV Detected outside the TSAC?	RED LIGHT Behaviour
Yes	Flash at 2–5Hz
No	OFF

