

Properties

- The resistance values for sine and cosine coils must be equal. The resistance value for the reference coil may differ from that of the sine and cosine coils. Depending on resolver type, values range from 20Ω to 60Ω .
- - Voltage V_{ref} measured across the reference coil must be just under 4VAC at a frequency of 5kHz. This voltage never changes and is independent of the position the machine is in.
- The voltage across the sine coil is between 0V and V_{ref} , depending on machine position. The frequency has the same value as the frequency at V_{ref} ;
- The voltage across the cosine coil also varies between 0V and V_{ref} and the frequency is identical to the frequency for V_{ref} and V_{sin} ;
- The V_{sin} and V_{cos} voltages can never both be equal to 0V or V_{ref} simultaneously.
- This measuring method can also be applied for the servo motor resolvers.

Diagrams

Based on

This section is based on:

- I7980-96 (cable list);
- A0200978.21_ (cabling).

Contents

This section contains the following subjects:


Standard diagrams.....	103
• CE machines without series transformer per machine.....	103
• CE machines with series transformer per machine.....	104
• Non CE machines without series transformer per machine	104
• Non CE machines with series transformer per machine	105
Diagrams for options	105
• Batching motion	106
• Outside cam motion with leveling.....	106
• Hot wire cutter (eCTTH) > Without centre hot wire cutters	107
• Hot wire cutter (eCTTH) > With 1 centre hot wire cutter	107
• Thermal cutter (eCTTH) > With 2 centre thermal cutters	108
• Fabric lighting above the fabric	108
• Fabric lighting above the fabric	108
• Fabric lighting underneath the fabric.....	110
Power supply diagrams > General	110
• General > Power supplies – Overview.....	110
• General > Power Supply Control and Power fail.....	111
Power supply diagrams > +26V DC	112
• +26VDCS	112
• +26VDCS on the MCB print	113
• +26VDC1	114
• +26VDC2	114
• +26VDCPICAN	115
• +26VDC (In the case of ATB-prints configuration)	115
• +26VDC (In the case of configuration without ATB-prints).....	116
• +26VDC on the EB print.....	116
• +26VDC on the IBR print	117
• +26VDC on the UEB-X print (without ERGO)	117
• +26VDC on the UEB-X print (with ERGO)	118
• +26VDC on the UEB-Y print	118
• +26VDC on the ATB_X print	119
• +26VDC on the ATB_Y print	119
• +26VDC on the ATB_Z print	119

Power supply diagrams > 290V	120
Power supply diagrams > 48V AC	121
Power supply diagrams > 41V DC	121
Power supply diagrams > +12VDC	122
Power supply diagrams > -12VDC	122
Power supply diagrams > +5VDC	123
Connecting the machine terminal and the diagnostic plug	124
Emergency stop diagrams	125
• Emergency stops in case of dobbie or outside cam motion	125
• Emergency stops in case of dobbie or outside cam motion with double beam	126
• Emergency stops in case of jacquard	126
• Emergency stops in case of jacquard with double beam	127
Control button diagrams	128
• Control buttons > Detections	128
• Control buttons > Protection logic (second contact)	129
Signals diagrams	130
• Signal lights	130
• Warning lights	130
• Warning lights only with double beam	131
PICAN diagram	132
• PICAN diagram > with jacquard and without Picanol-PFL	133
• PICAN diagram > with jacquard and with Picanol-PFL	133
• PICAN diagram > dobbie or outside cam motion without Picanol-PFL	133
• PICAN diagram > dobbie or outside cam motion and Picanol-PFL	134
• PICAN diagram > jacquardette CX180	134
• PICAN diagram > DWC	135
• PICAN diagram > CAN dobbie	135
• PICAN diagram > jacquard	136


Contents

- CE machines without series transformer per machine [103]
- CE machines with series transformer per machine [103]
- Non CE machines without series transformer per machine [104]
- Non CE machines with series transformer per machine [104]

: see options

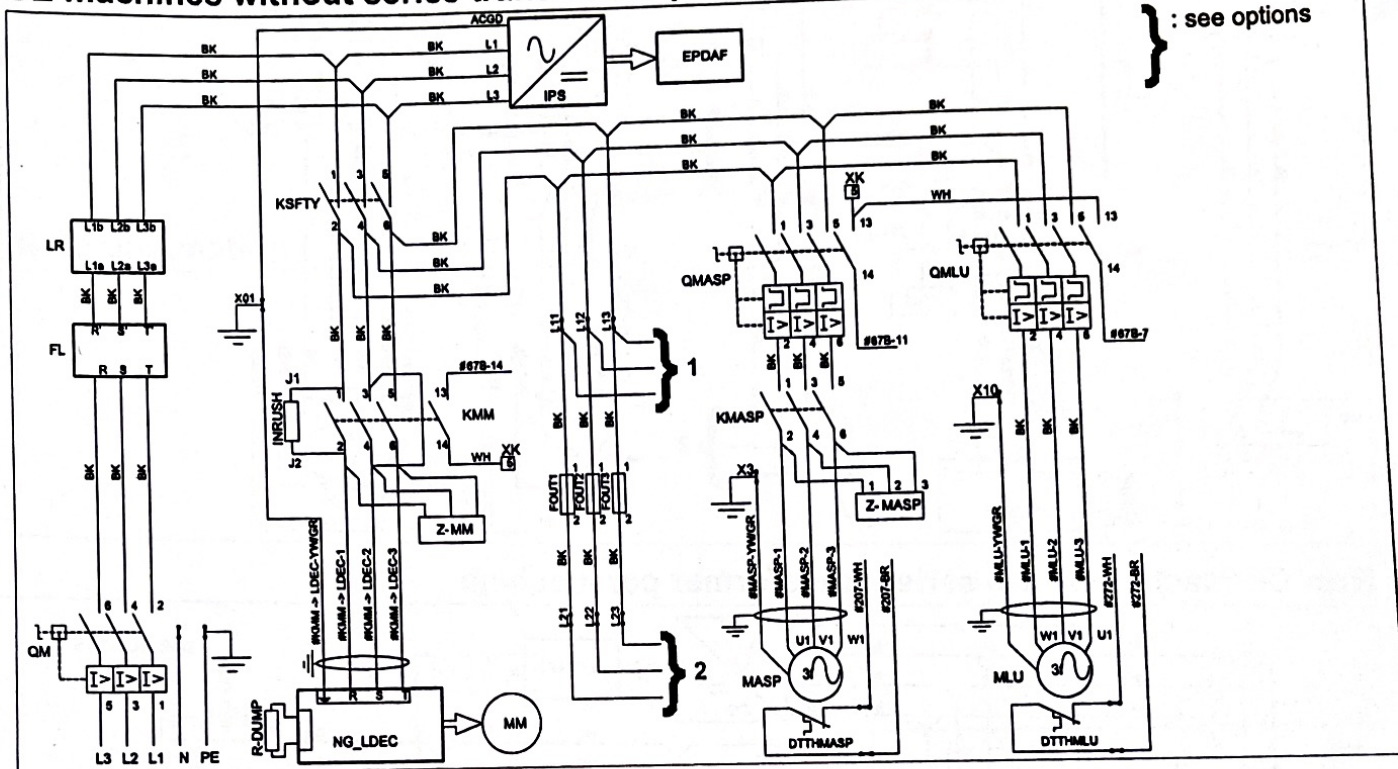

■ : see options

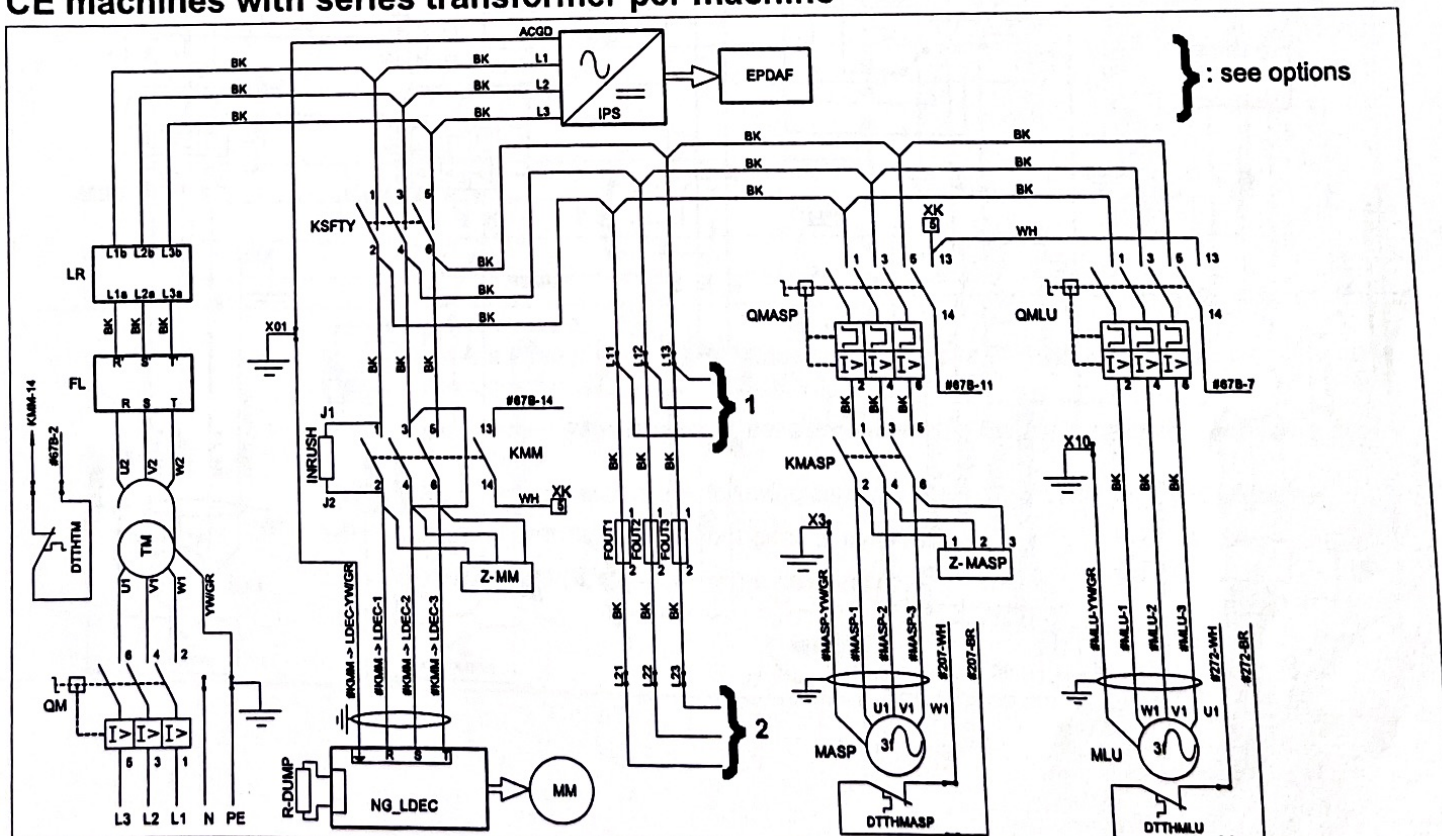


OptiMax-i

LET'S GROW
TOGETHER


Non CE machines without series transformer per machine

: see options

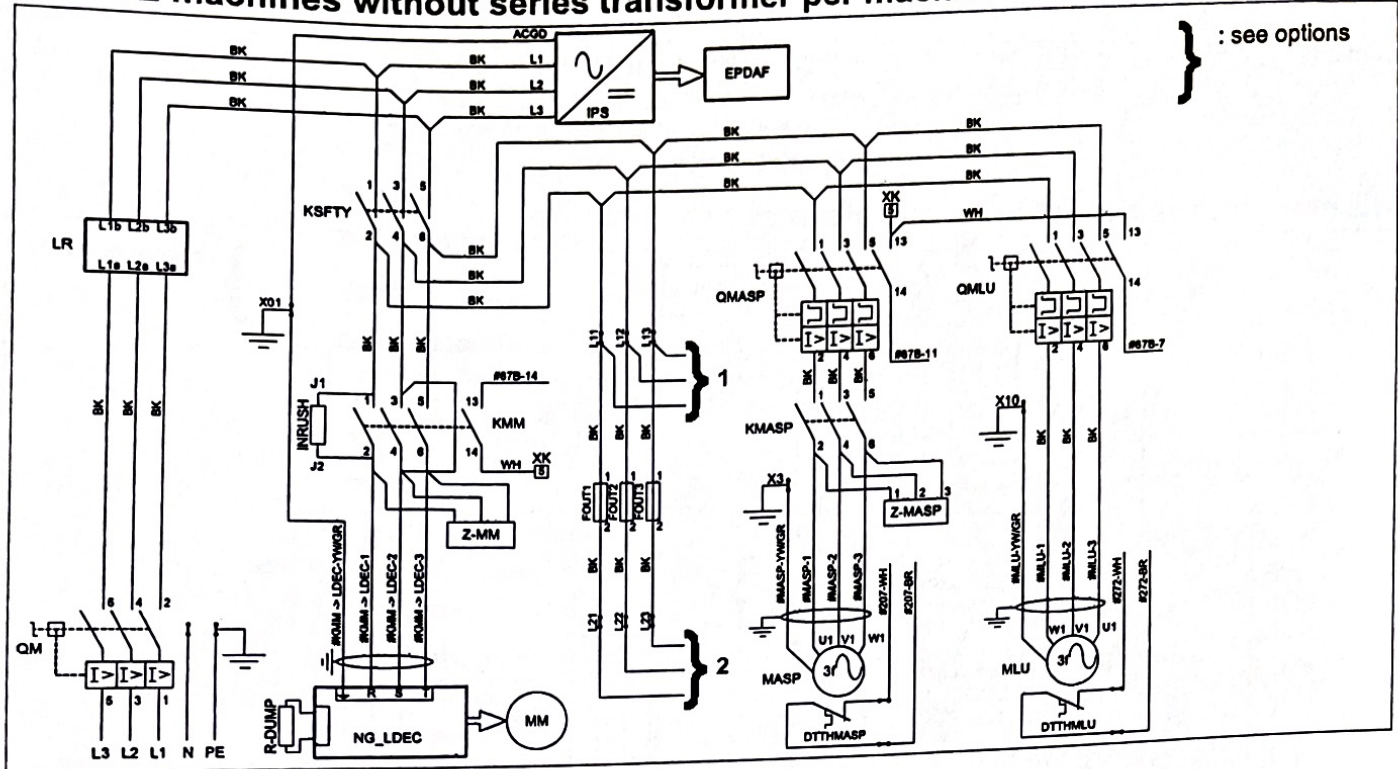

Non CE machines with series transformer per machine

: see options

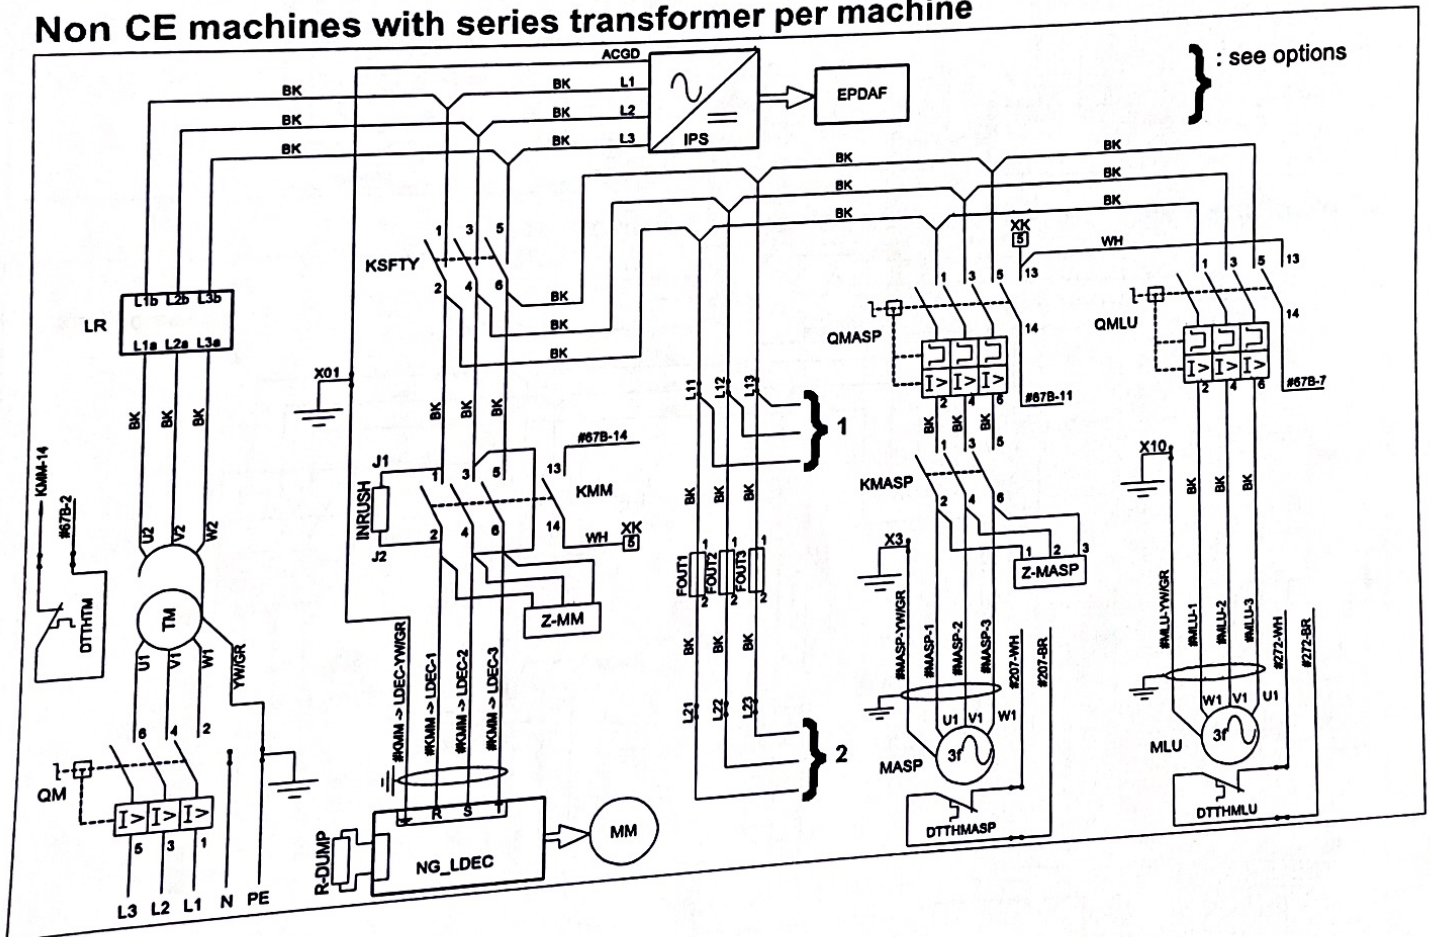

Contents



- Batching motion [105]
- Outside cam motion with leveling [106]
- Hot wire cutter (eCTTH) > Without centre hot wire cutters [106]
- Hot wire cutter (eCTTH) > With 1 centre hot wire cutter [107]
- Thermal cutter (eCTTH) > With 2 centre thermal cutters [107]
- Fabric lighting above the fabric [108]
- Fabric lighting above the fabric [108]
- Fabric lighting underneath the fabric [108]
- Secondary aspirator (MASP-2) [109]

Batching motion

The diagram illustrates the electrical connections for a batching motion system. It includes a power supply section, a control section, and a terminal block for the batching motion (BM).

Power Supply Section:

- Input lines: L1, L2, L3.
- Ground connection: X04 (capacitor).
- Output lines: #*-L1, #*-L2, #*-L3, #*-YV/GR.

Control Section:

- Relay assembly: 328, 327, 326, 325.
- Wiring: #*-328, #*-327, #*-326, #*-325.

Terminal Blocks:

- XK:** 1, 4, 5, 6.
- BM:** 1, 3, 5, 2, 4, 6.
- PD1:** 1, 3, 5, 2, 4, 6.

Wiring Details:

- Line #*-L1 connects to terminal 1 of XK.
- Line #*-L2 connects to terminal 4 of XK.
- Line #*-L3 connects to terminal 5 of XK.
- Line #*-YV/GR connects to terminal 6 of XK.
- Line #*-328 connects to terminal 328 of the relay assembly.
- Line #*-327 connects to terminal 327 of the relay assembly.
- Line #*-326 connects to terminal 326 of the relay assembly.
- Line #*-325 connects to terminal 325 of the relay assembly.




- Three-phase voltage is present, but it is possible that the batching motion requires a two-phase voltage.






- **K-STRT-STP (48VAC):** control signal for batching motion;
- **BM-STA (+26VDCL2):** detects the batching motion status.

Outside cam motion with leveling

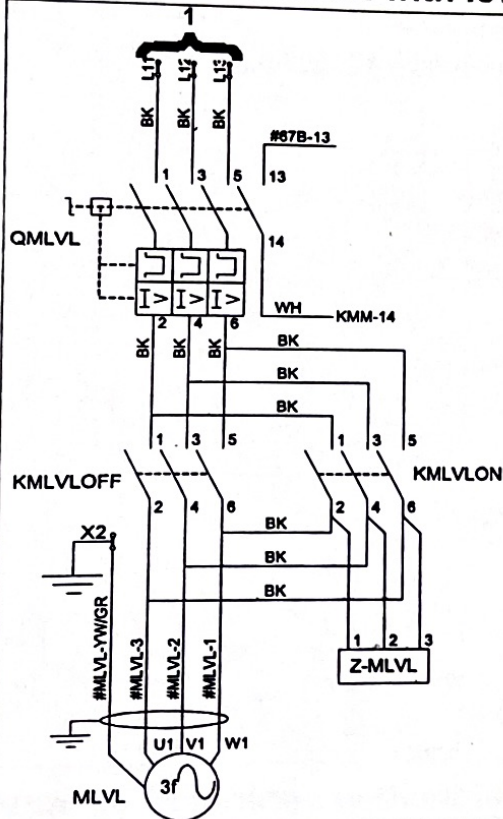

Hot wire cutter (eCTTH) > Without centre hot wire cutters

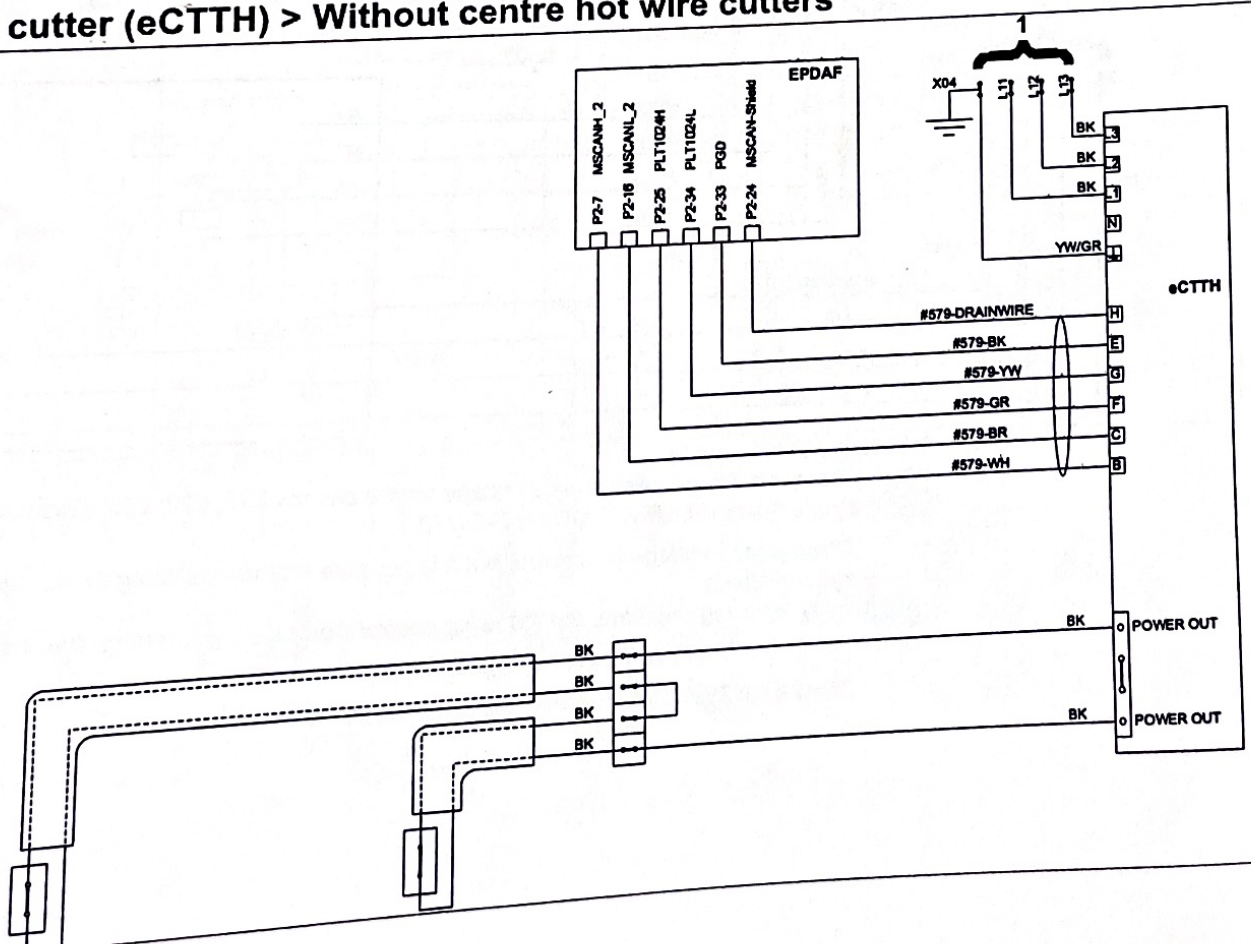


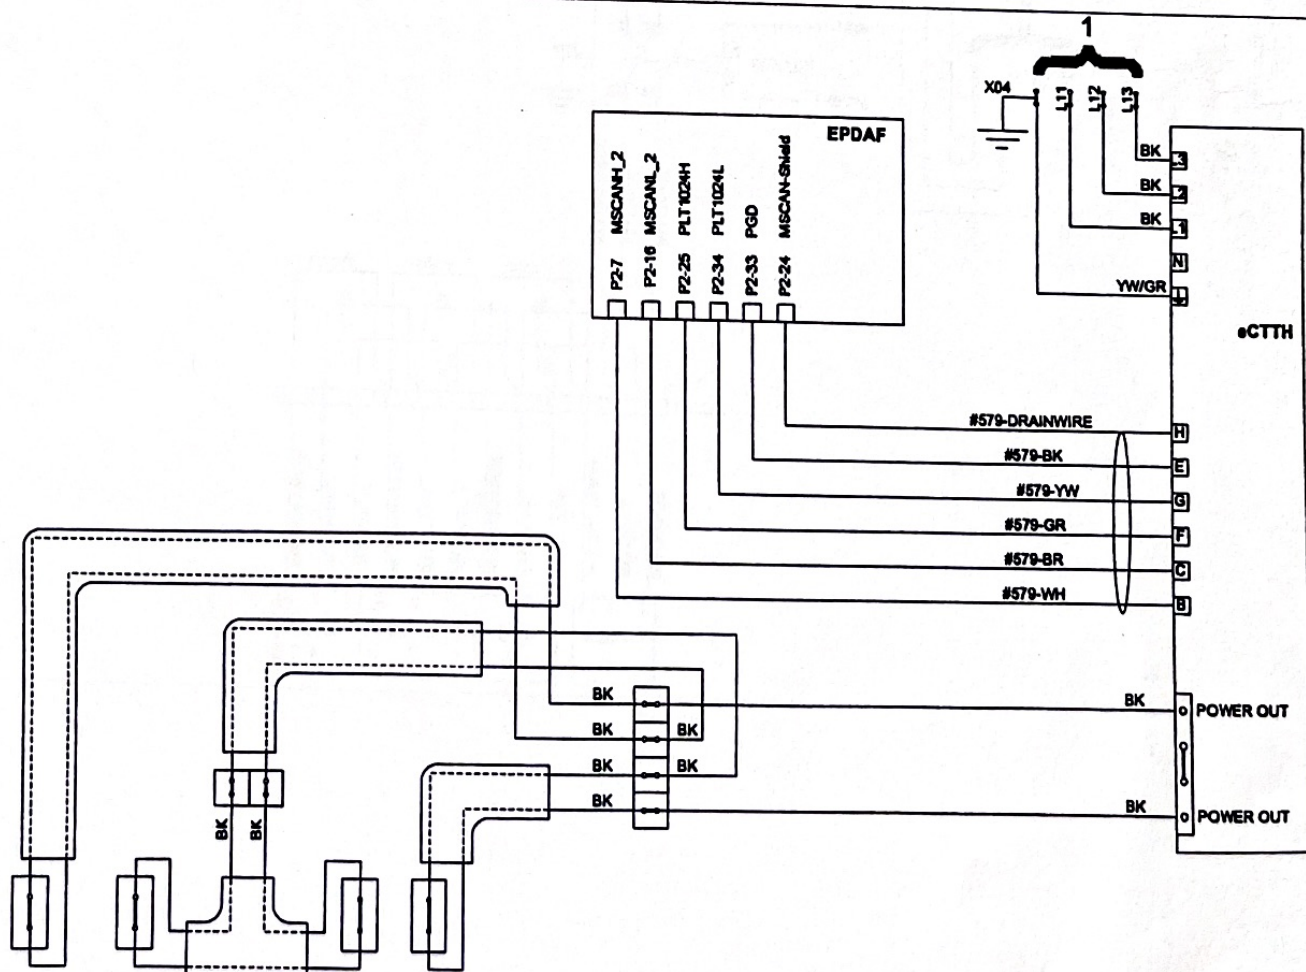


OptiMax i

LET'S GROW
TOGETHER


Fabric lighting above the fabric

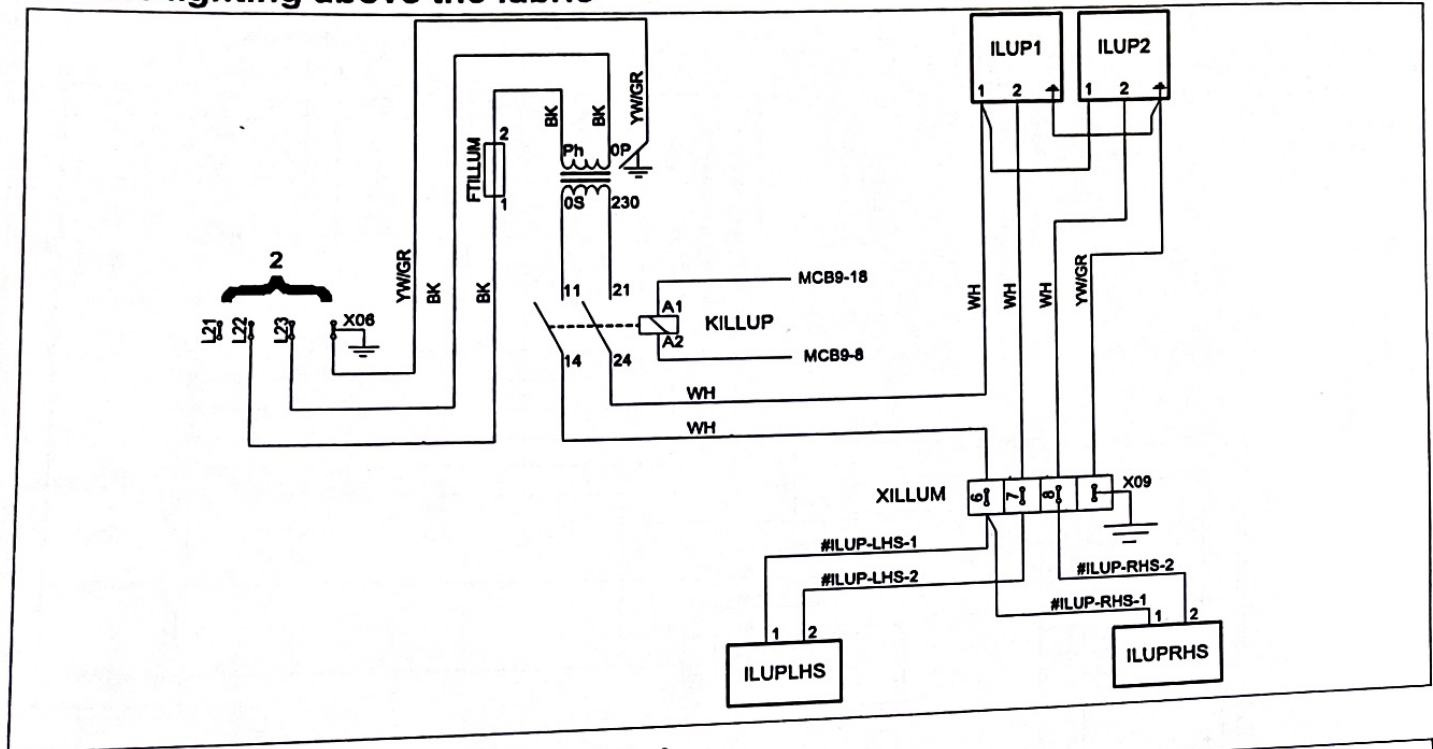

Fabric lighting underneath the fabric

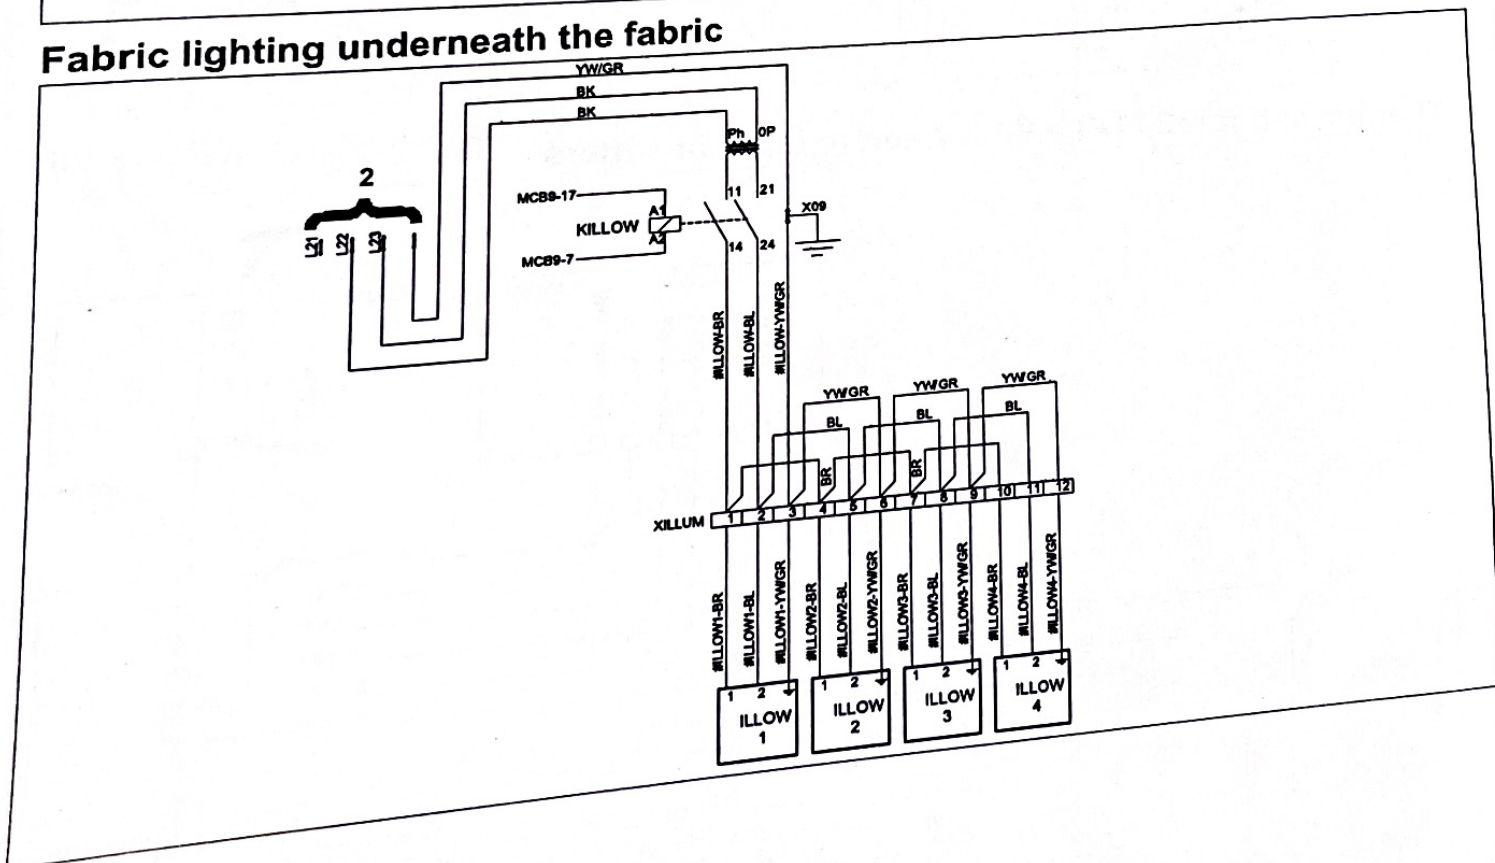

Secondary aspirator (MASP-2)

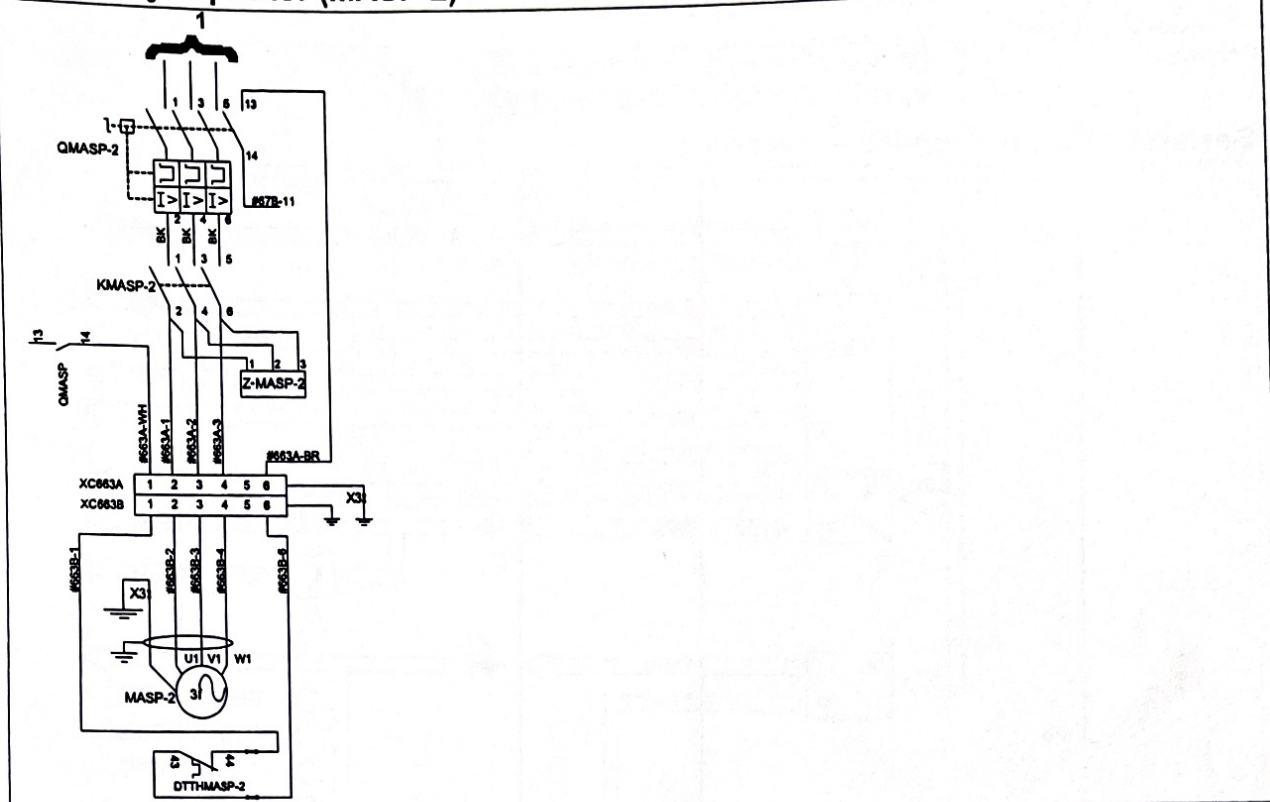


Power supply diagrams > General


Contents

- General > Power supplies – Overview [110]
- General > Power Supply Control and Power fail [110]

General > Power supplies – Overview

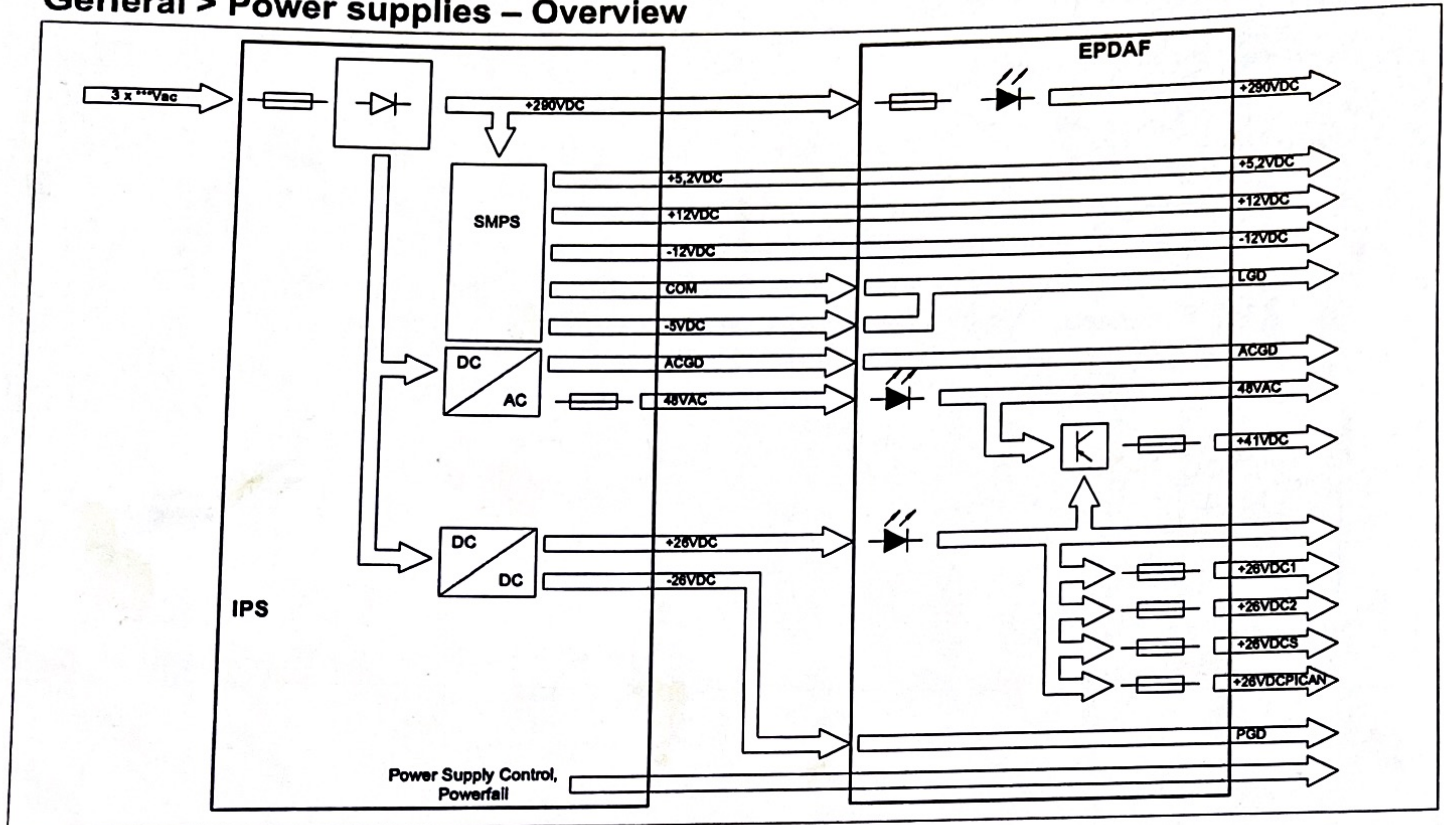

General > Power Supply Control and Power fail

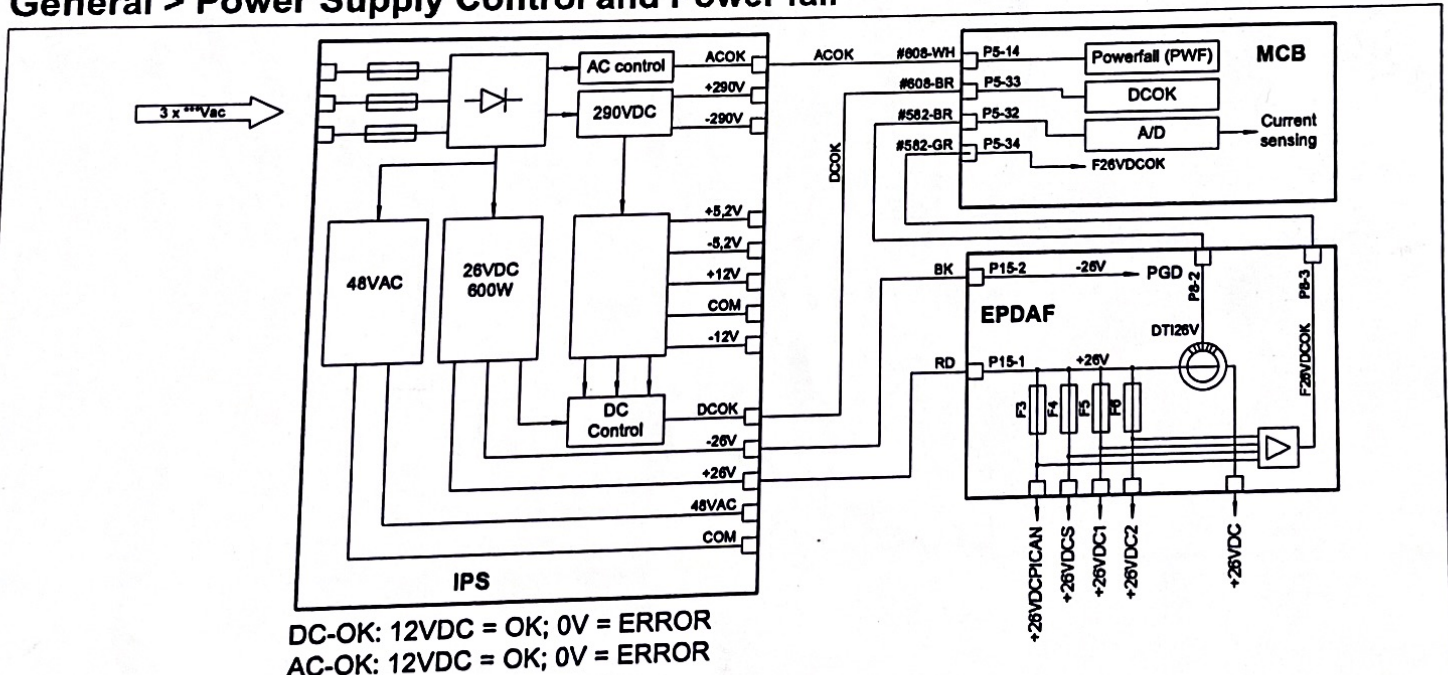

Power supply diagrams > +26V DC


Contents

- +26VDCS [112]
- +26VDCS on the MCB print [112]
- +26VDC1 [113]
- +26VDC2 [114]
- +26VDCPICAN [114]
- +26VDC (in the case of ATB-prints configuration) [115]
- +26VDC (in the case of configuration without ATB-prints) [115]
- +26VDC on the IBR print [116]
- +26VDC on the UEB-X print (without ERGO) [117]
- +26VDC on the UEB-X print (without ERGO) [117]
- +26VDC on the UEB-Y print [118]
- +26VDC on the ATB X print [118]
- +26VDC on the ATB Y print [119]
- +26VDC on the ATB Z print [119]


OptiMax-i


LET'S GROW
TOGETHER

+26VDCS

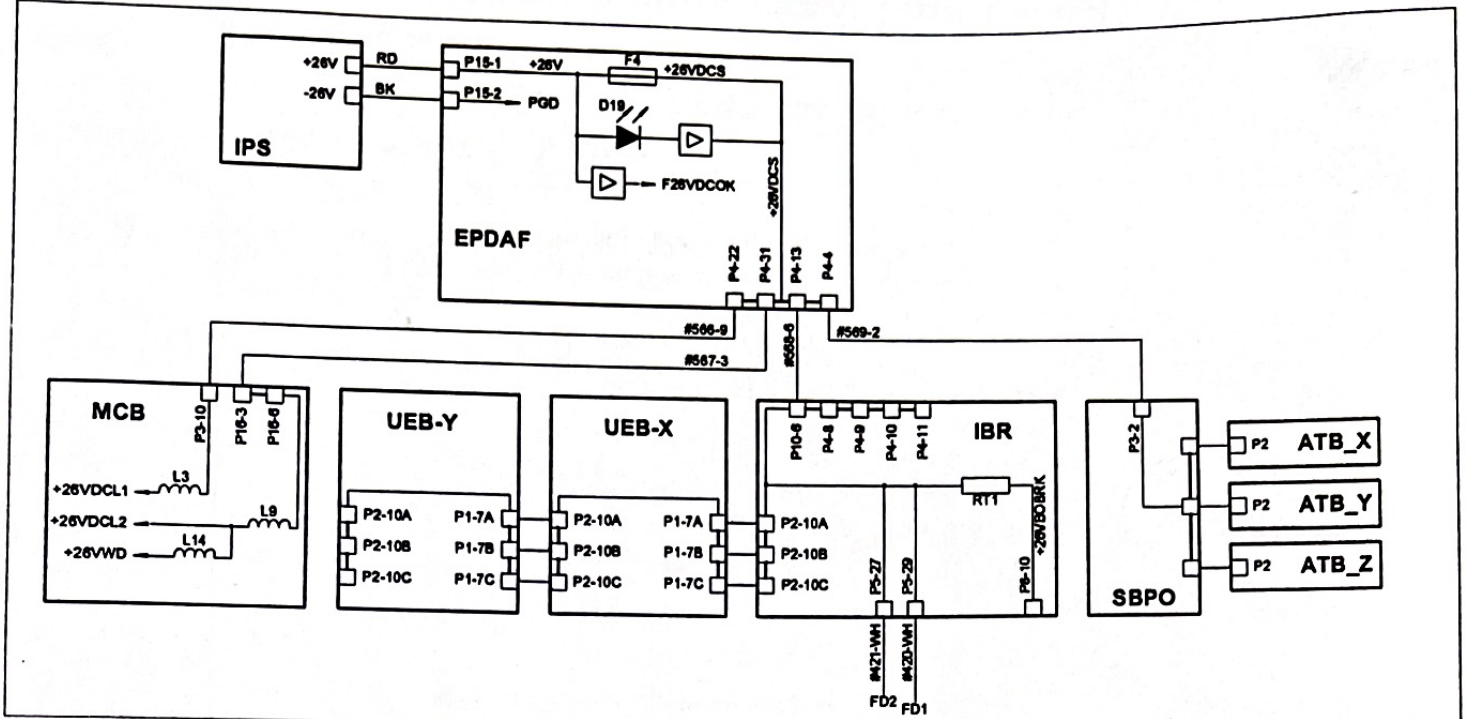

+26VDCS on the MCB print

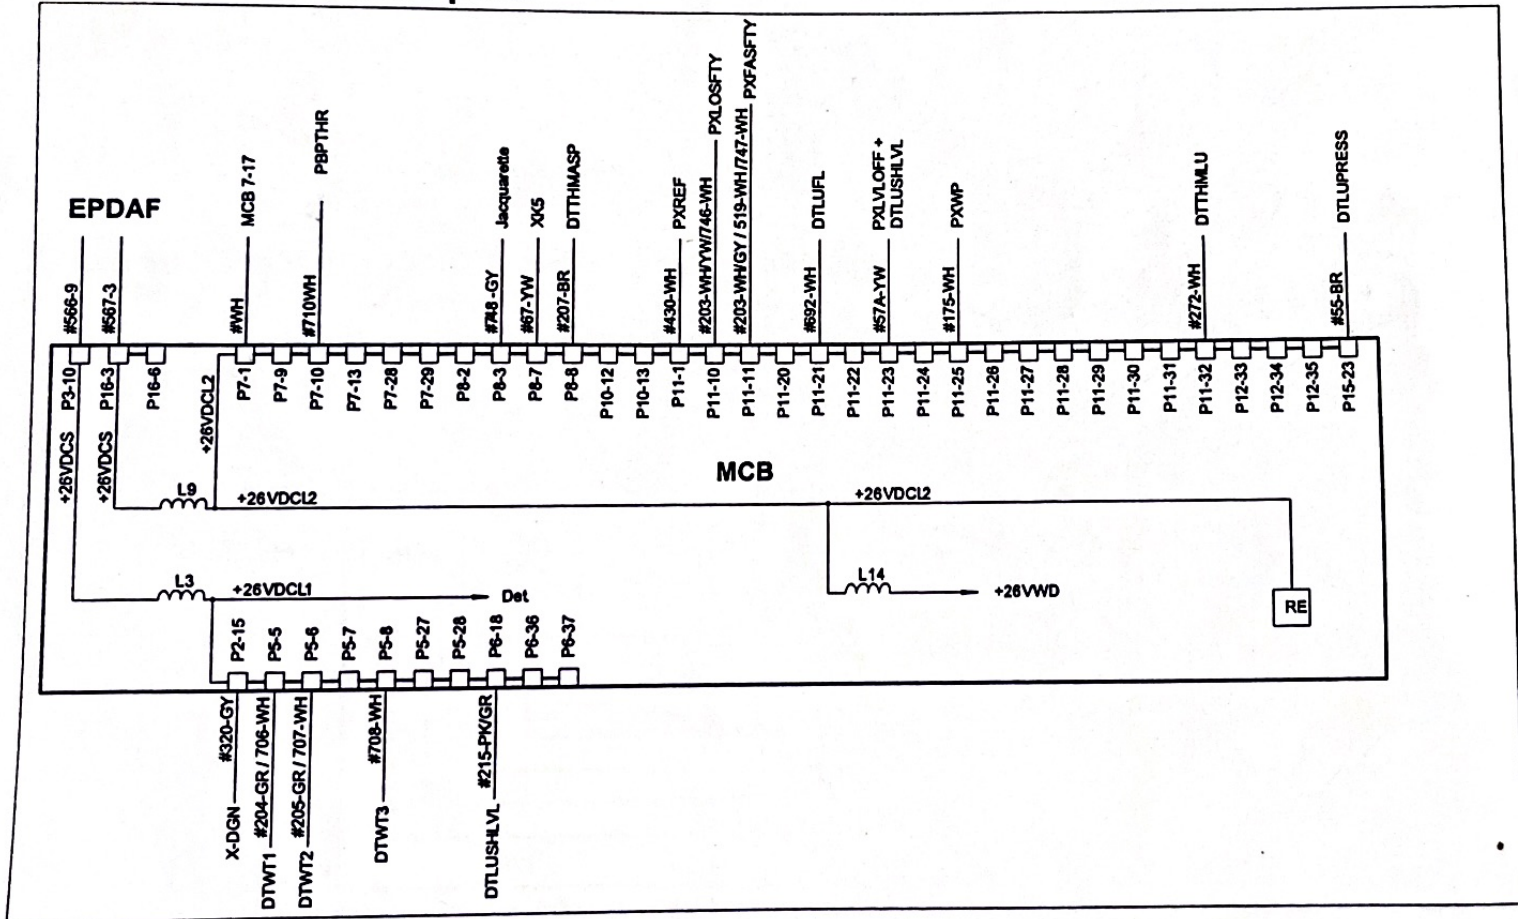

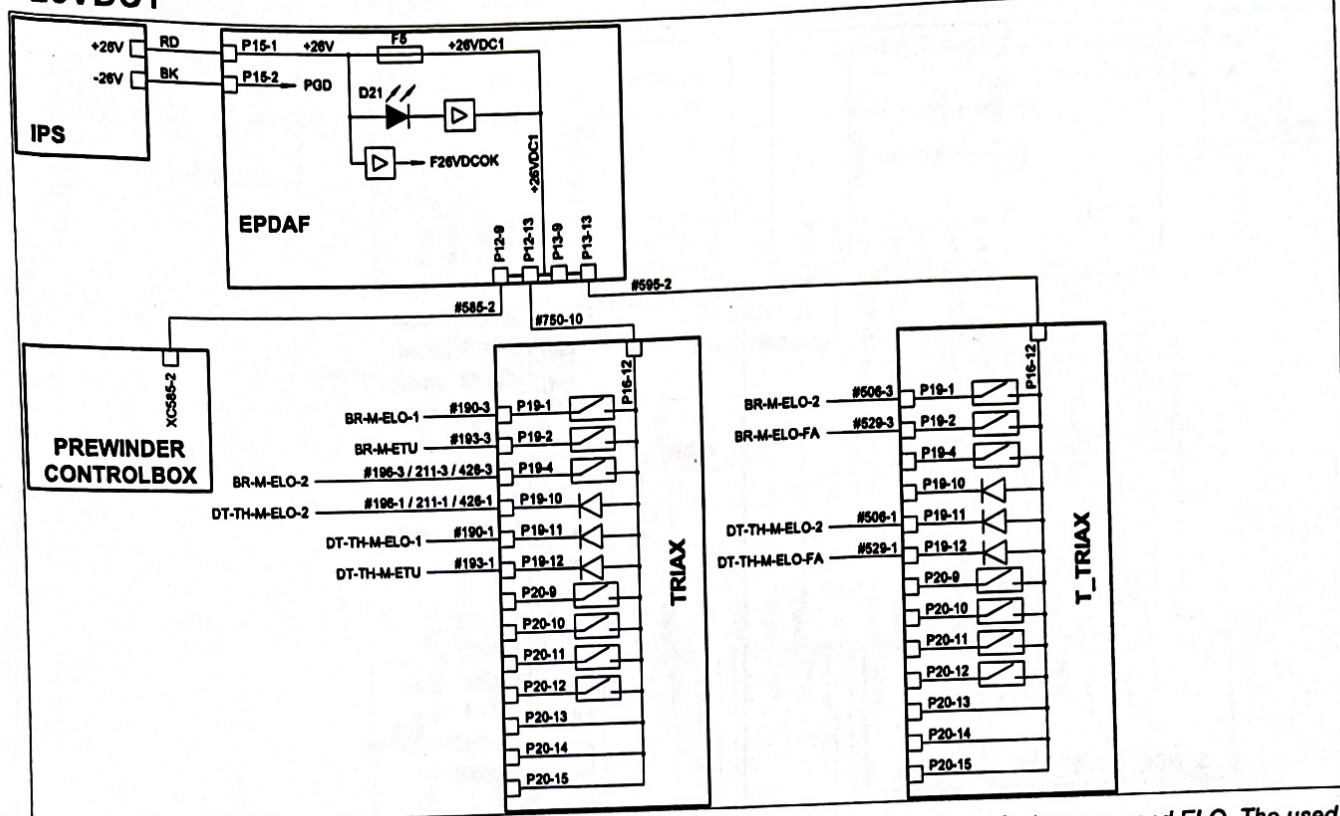


Depending on the machine specifications, the machine may feature a second ELO. The used cable numbers depend on its function.

The ELO2 can have one of the following functions:


- ELO on the LHS;
- ELO fancy in the case of NQSC;
- ELO fancy in the case of QSC;
- PICOLENO.

OptiMax-i

+26VDC2

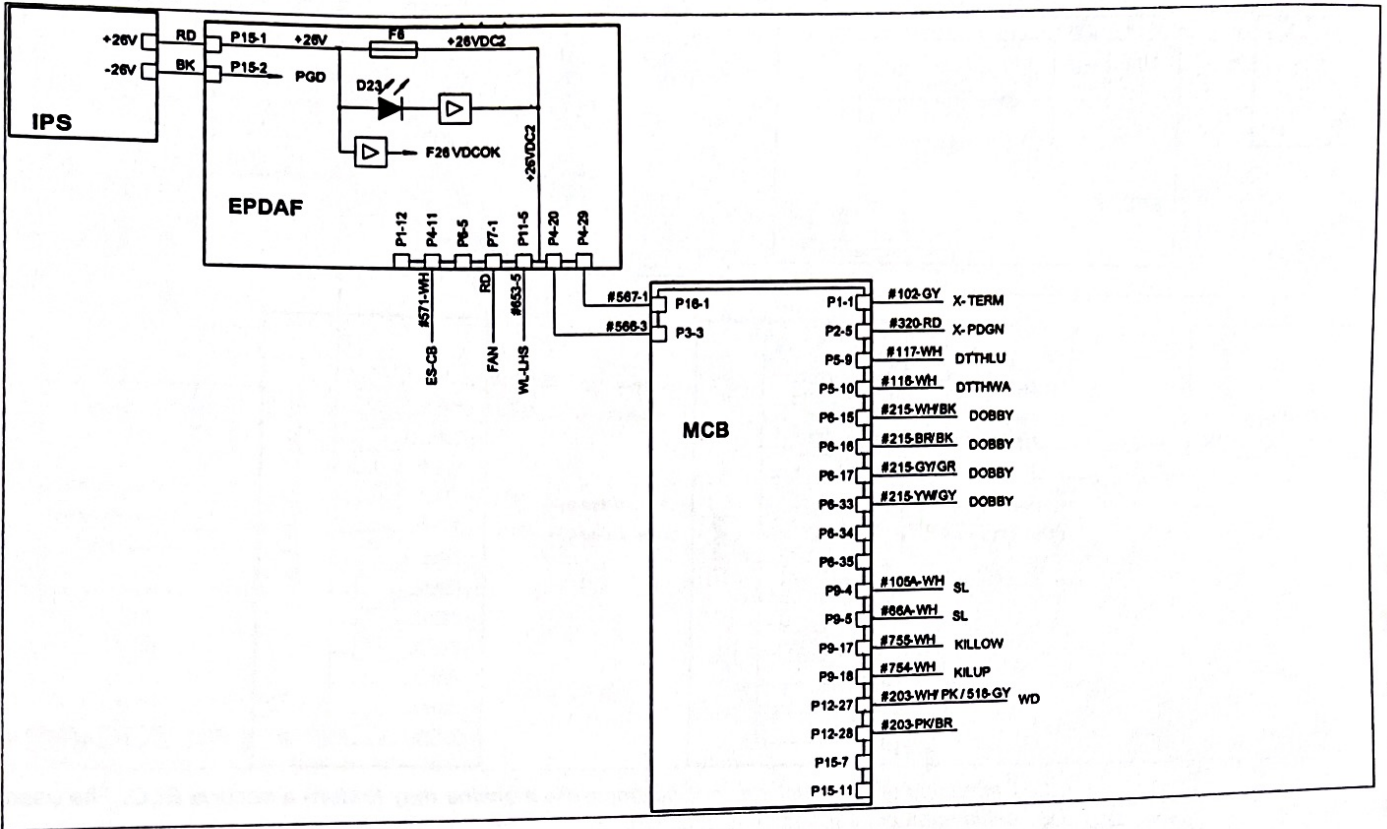


+26VDCPICAN

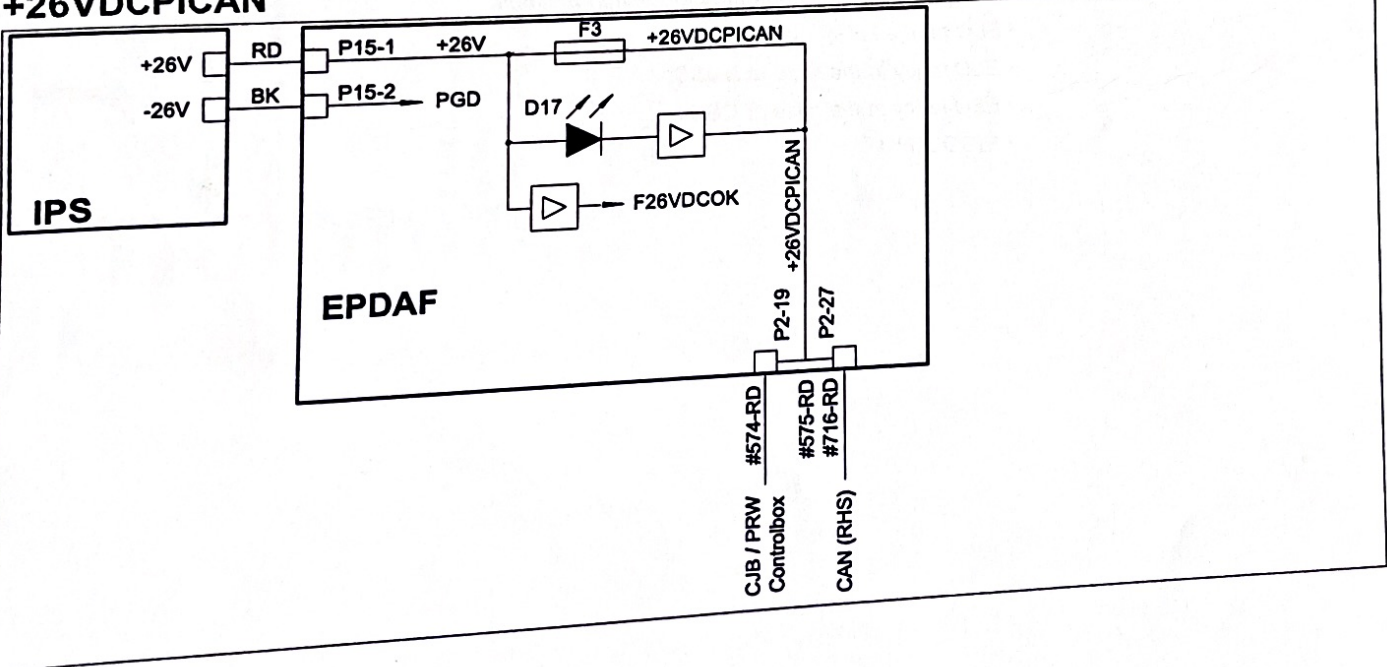


LET'S GROW TOGETHER

+26VDC (in the case of ATB-prints configuration)

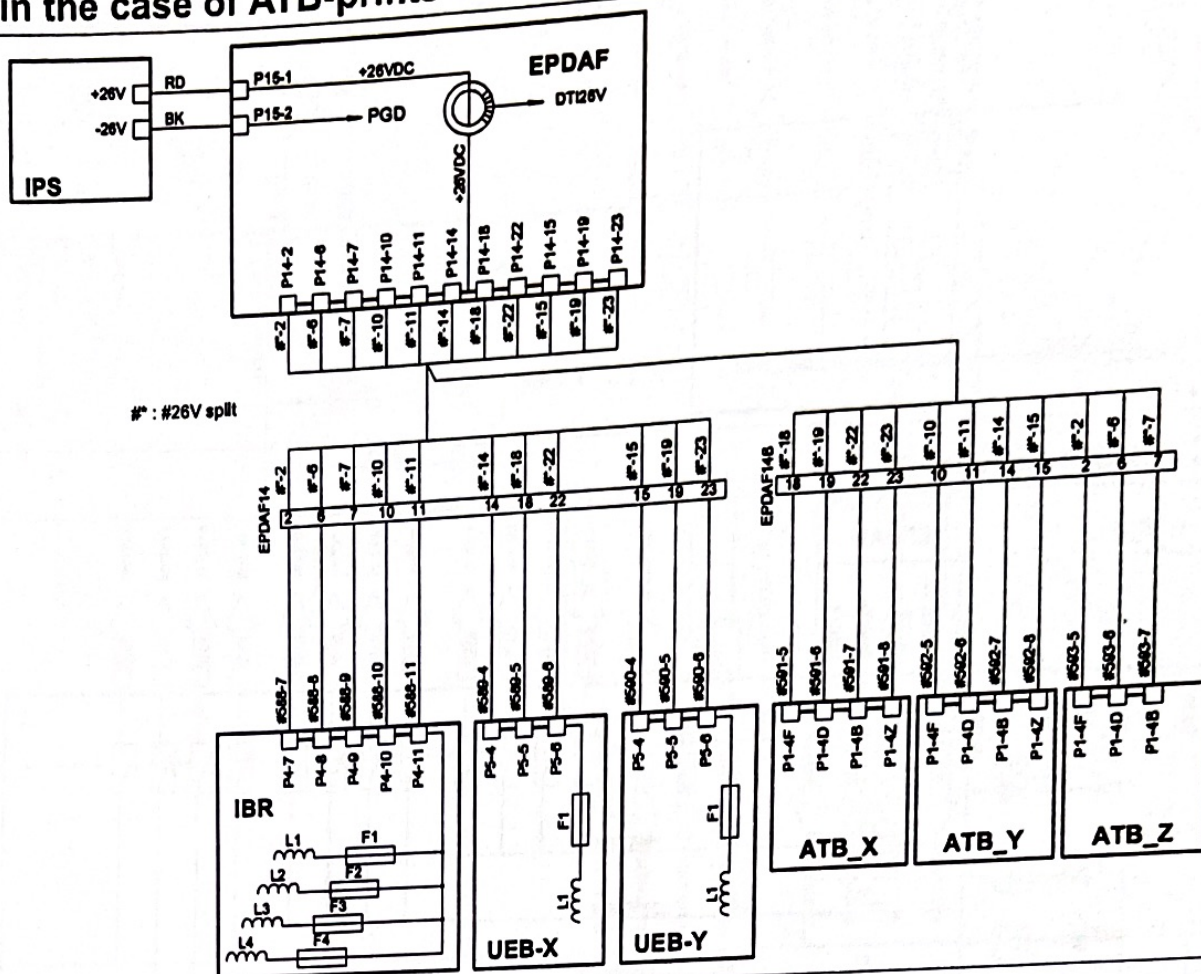


+26VDC (in the case of configuration without ATB-prints)

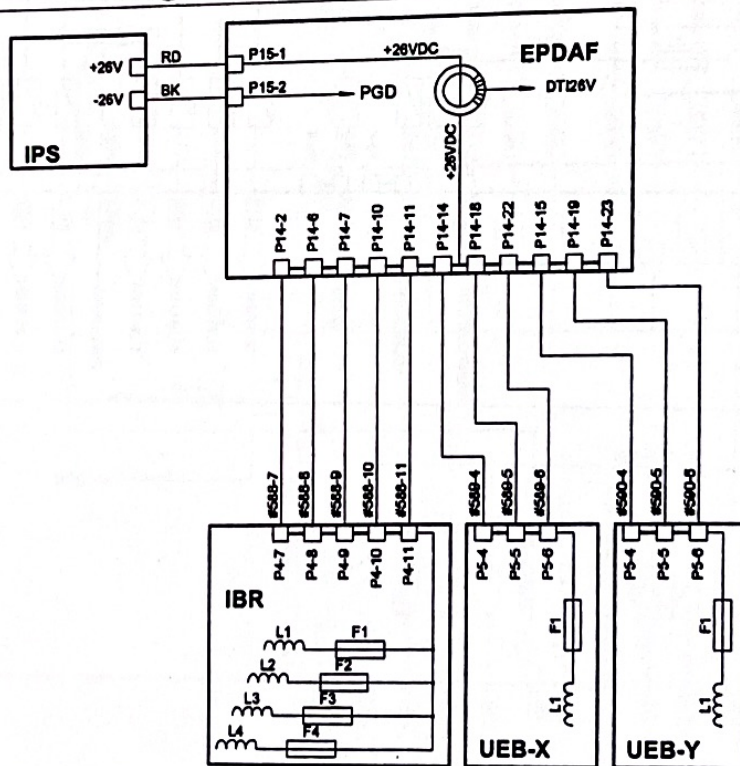


OptiMax-i

+26VDC on the EB print

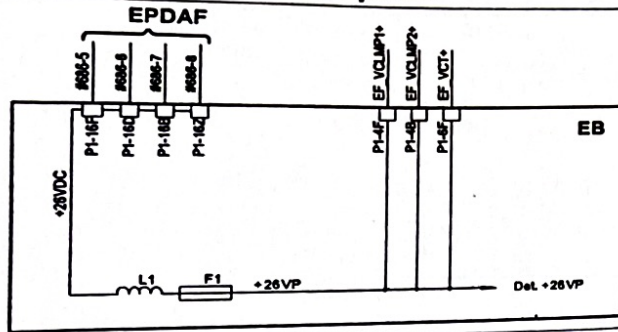


+26VDC on the IBR print

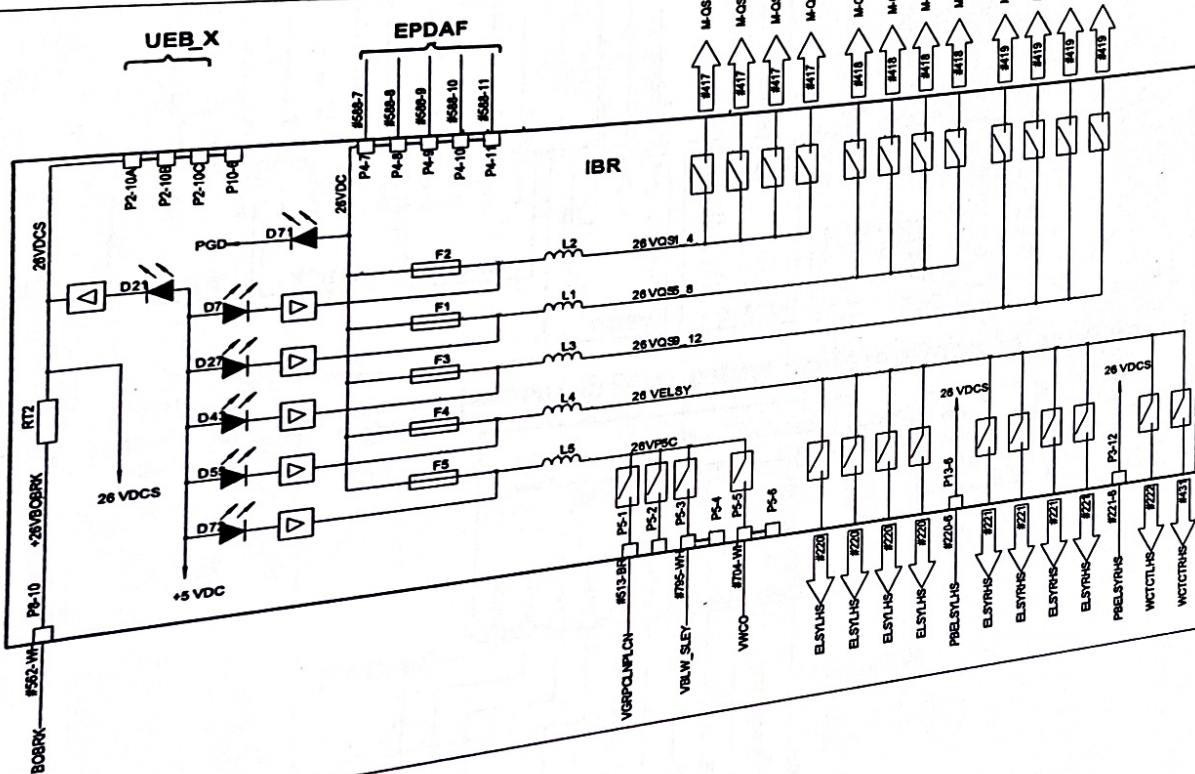


LET'S GROW
TOGETHER

OptiMax-i

+26VDC on the UEB-X print (without ERGO)

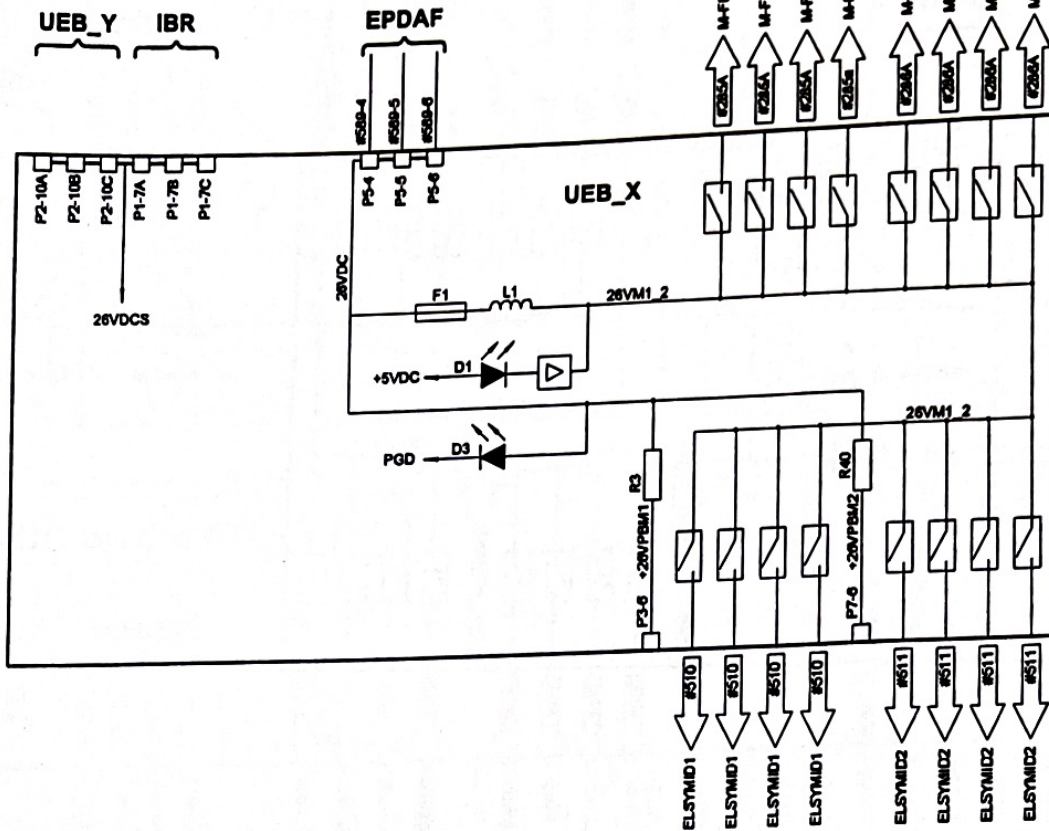


+26VDC on the UEB-X print (with ERGO)

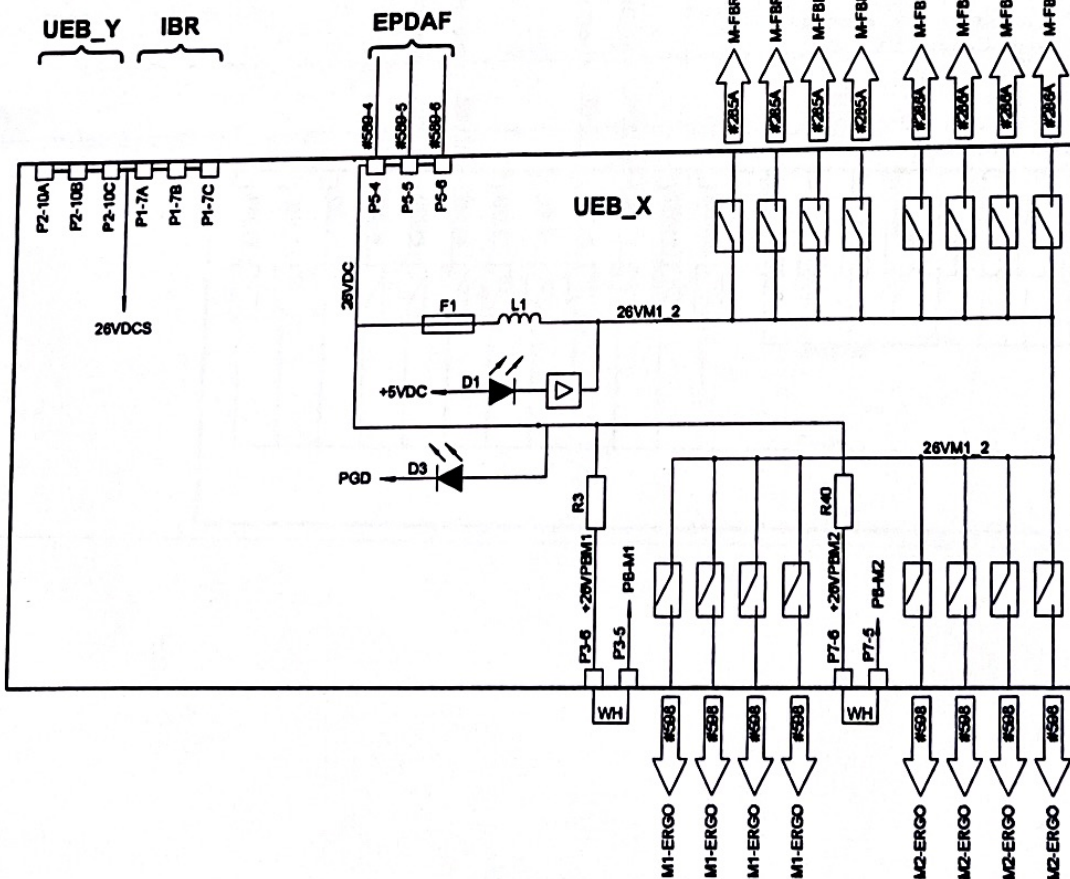


OptiMax-i

**LET'S GROW
TOGETHER** 


+26VDC on the UEB-Y print

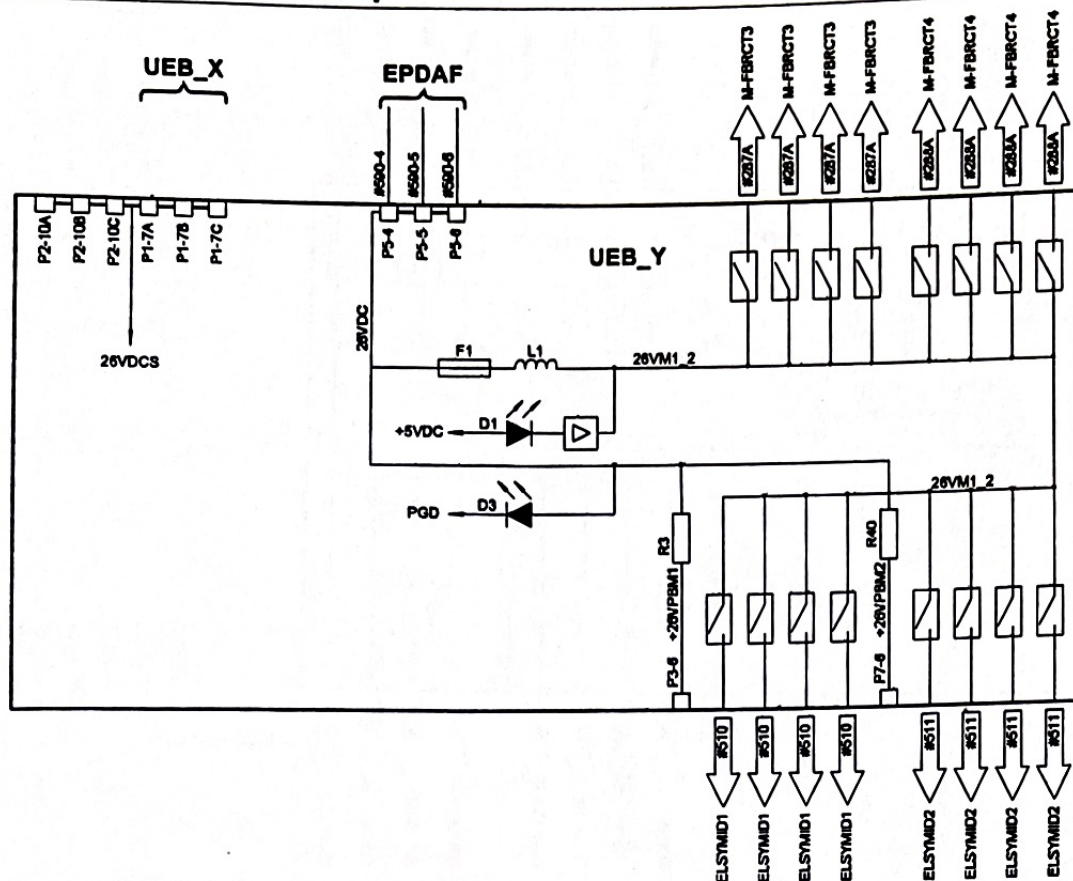

+26VDC on the ATB_X print

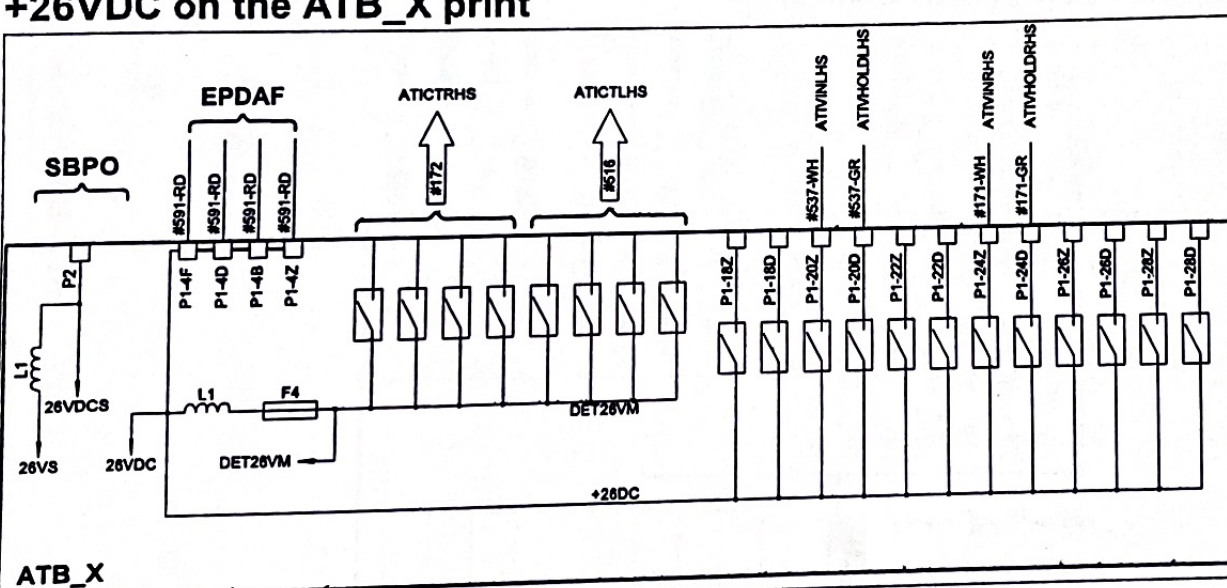

+26VDC on the ATB_Y print

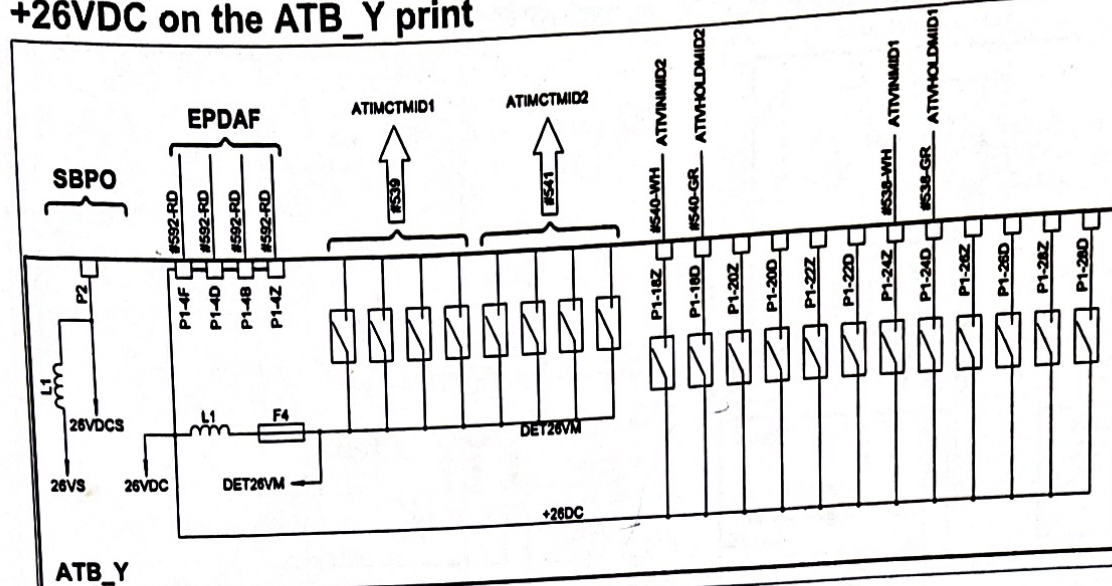

+26VDC on the ATB_Z print

