



Power supply diagrams > 290V

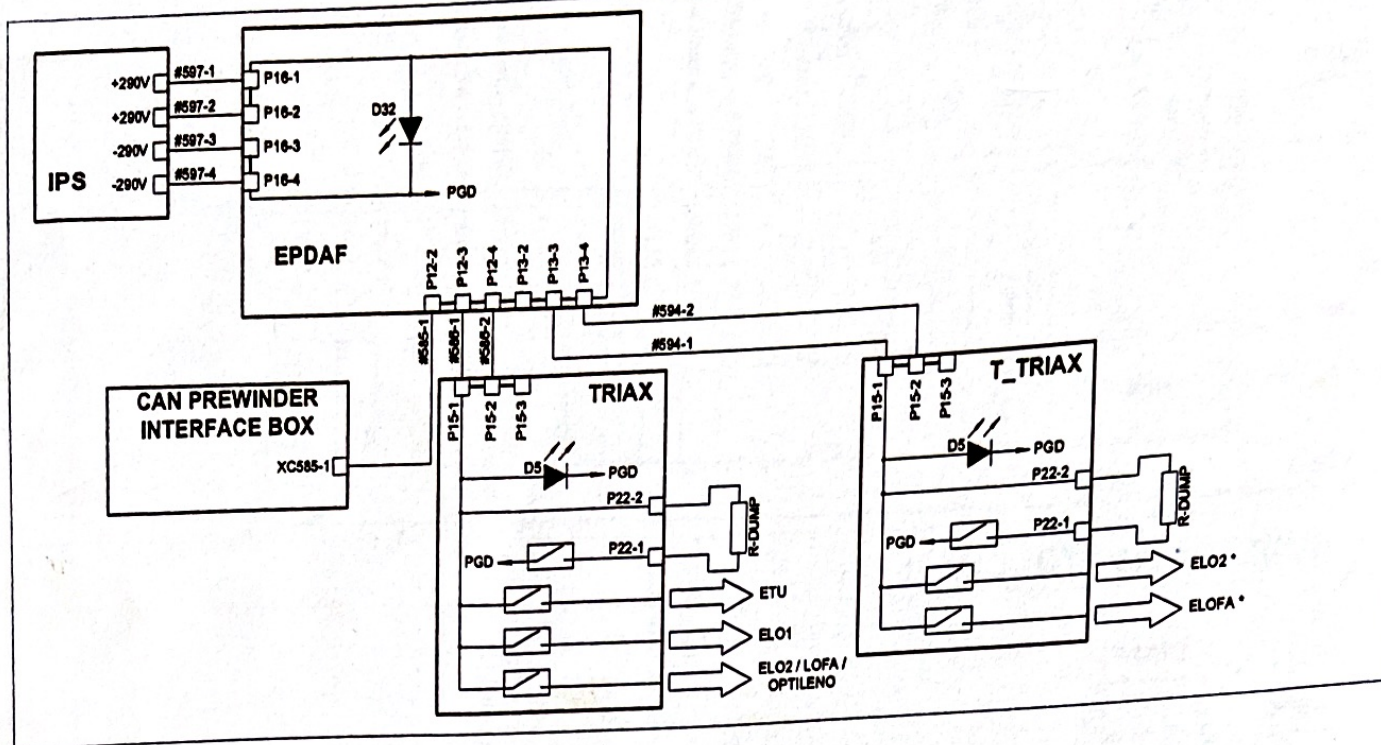


Power supply diagrams > 48V AC

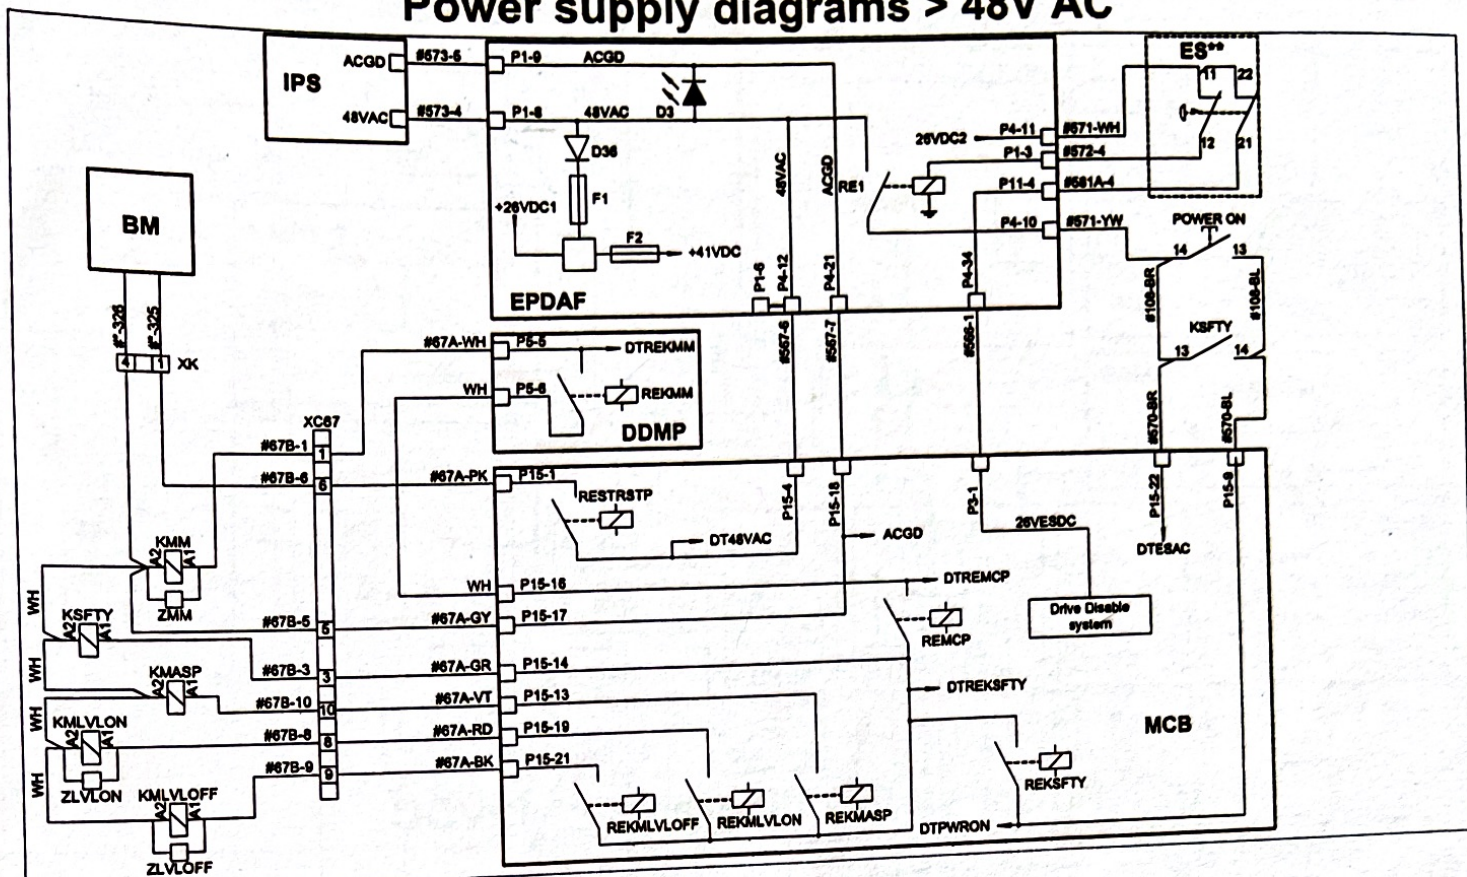


* = batching motion cable

** = See Emergency stop diagrams [125]


Power supply diagrams > 41V DC

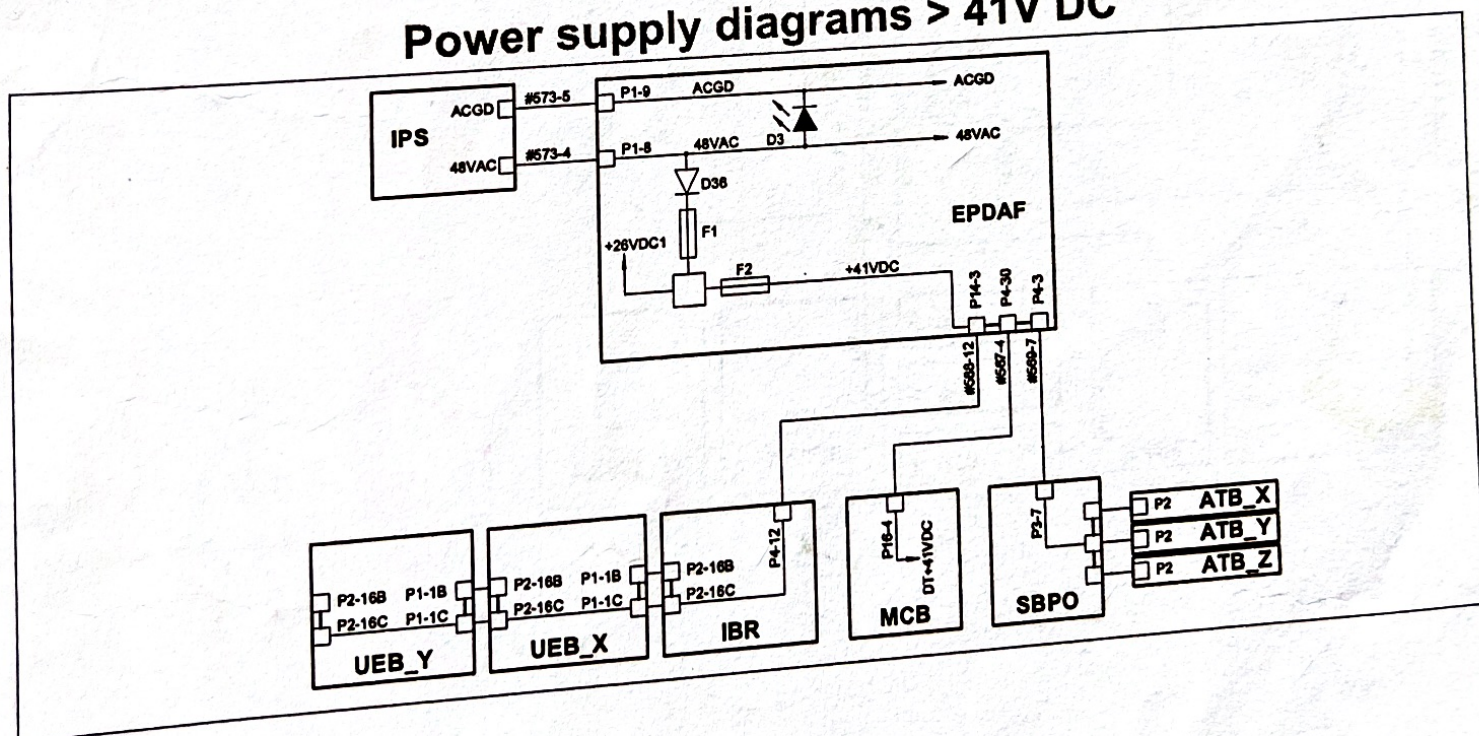


Power supply diagrams > +12VDC

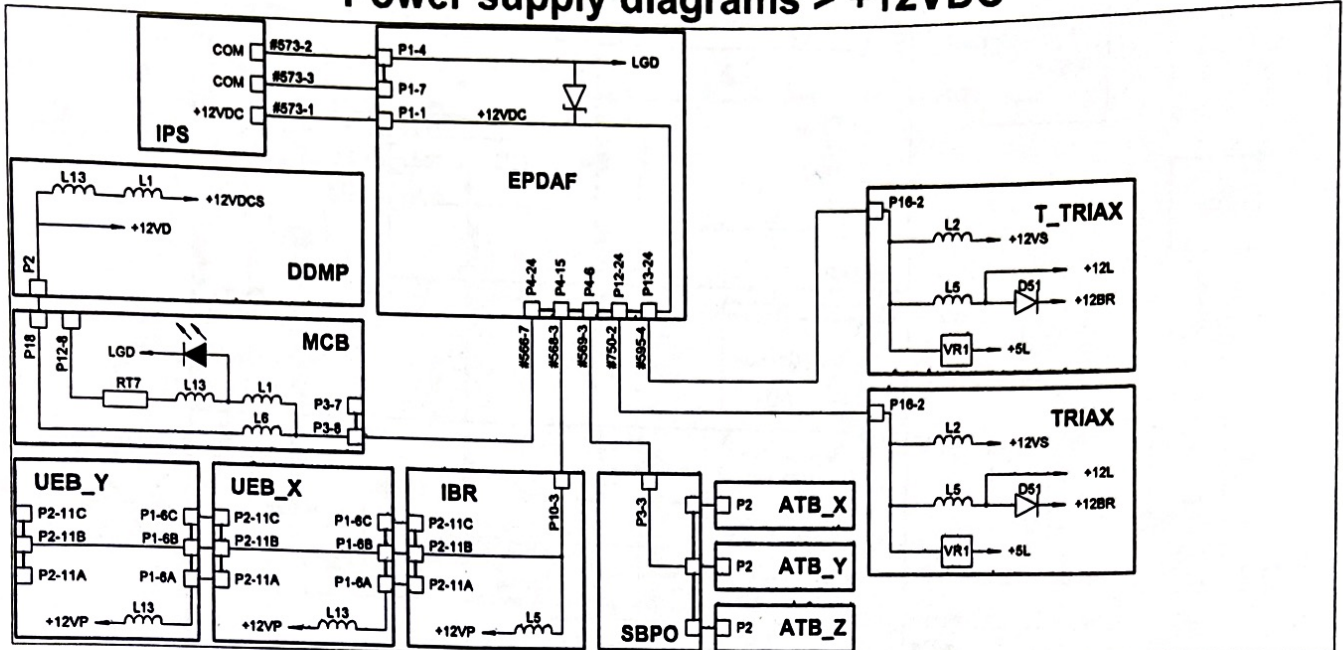

Power supply diagrams > -12VDC

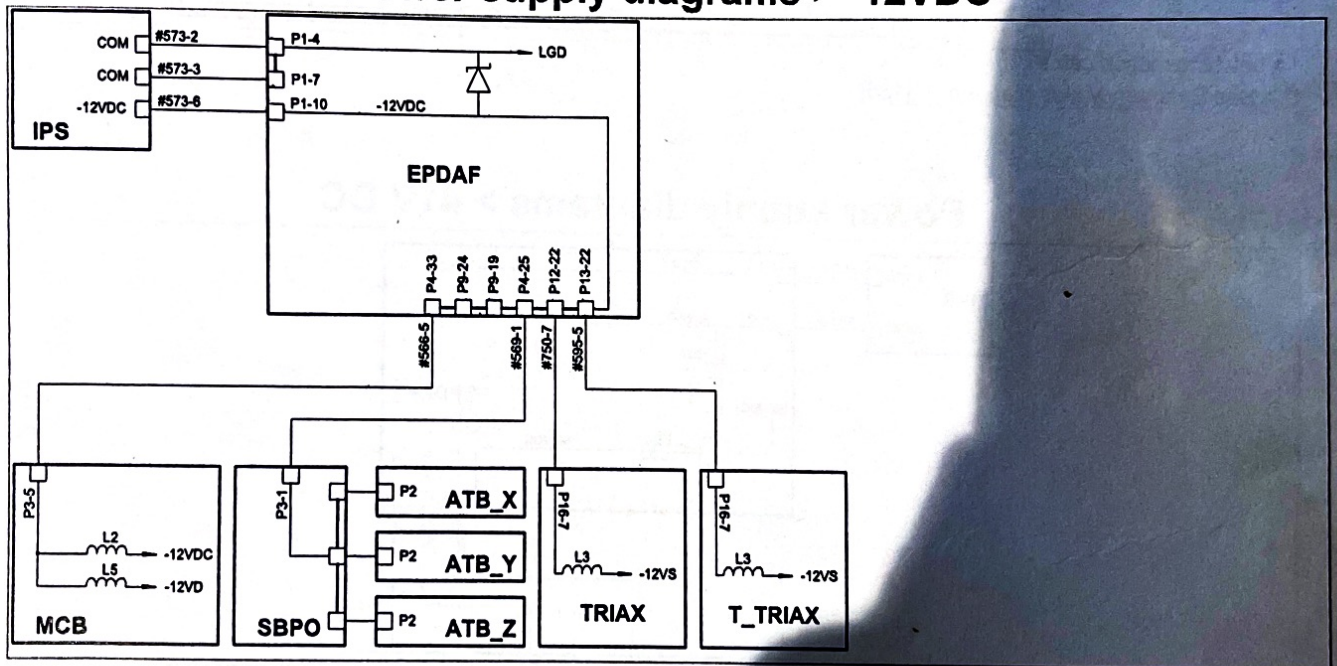

Power supply diagrams > +5VDC

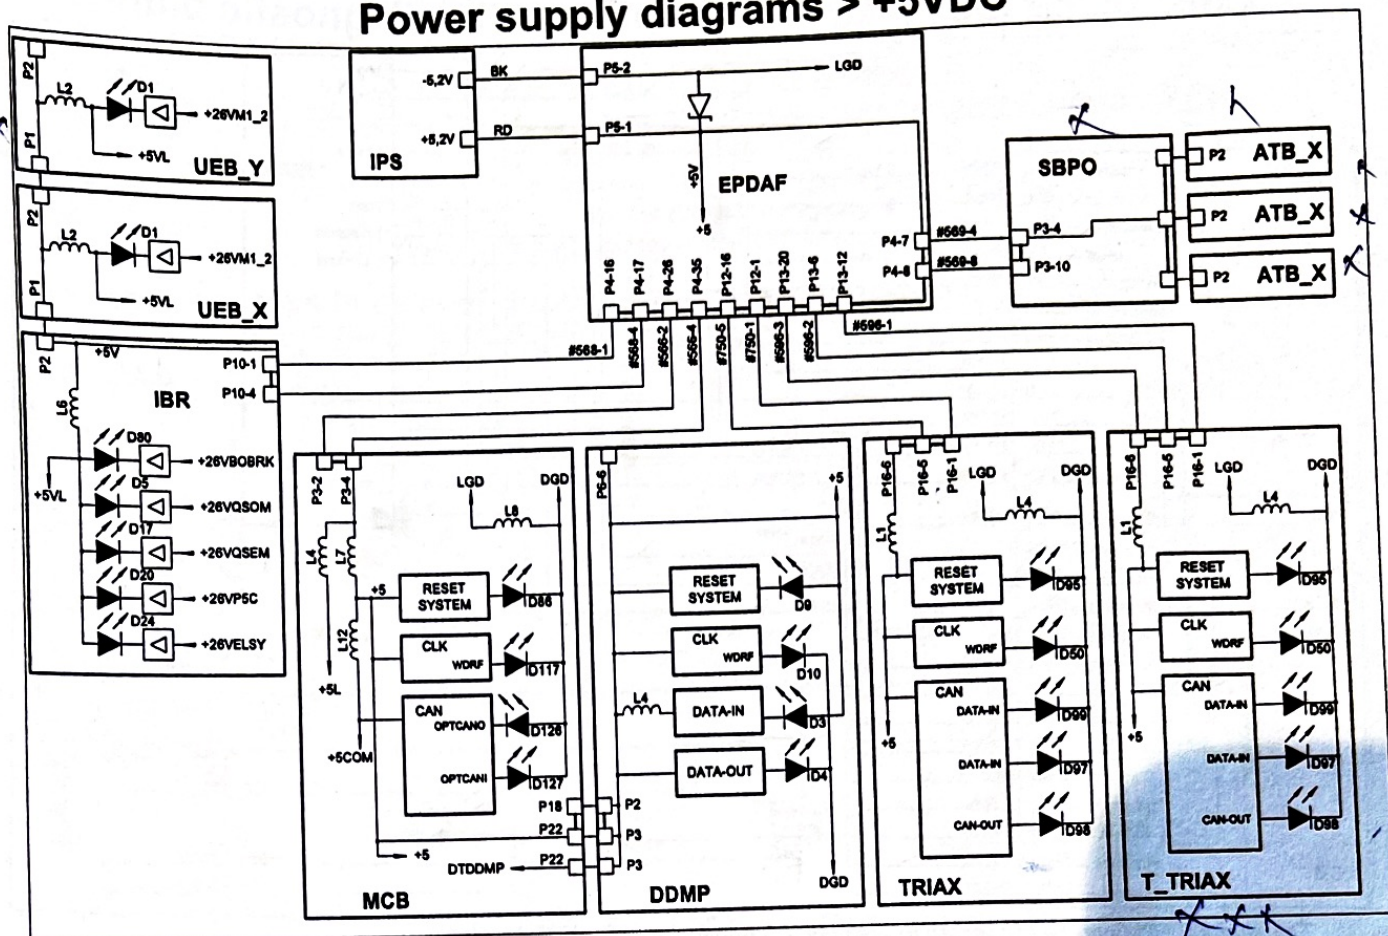


MCB- 70/232
DDMP- 72/232
IBR- 75-232

LET'S GROW TOGETHER

OptiMax-i

Connecting the machine terminal and the diagnostic plug

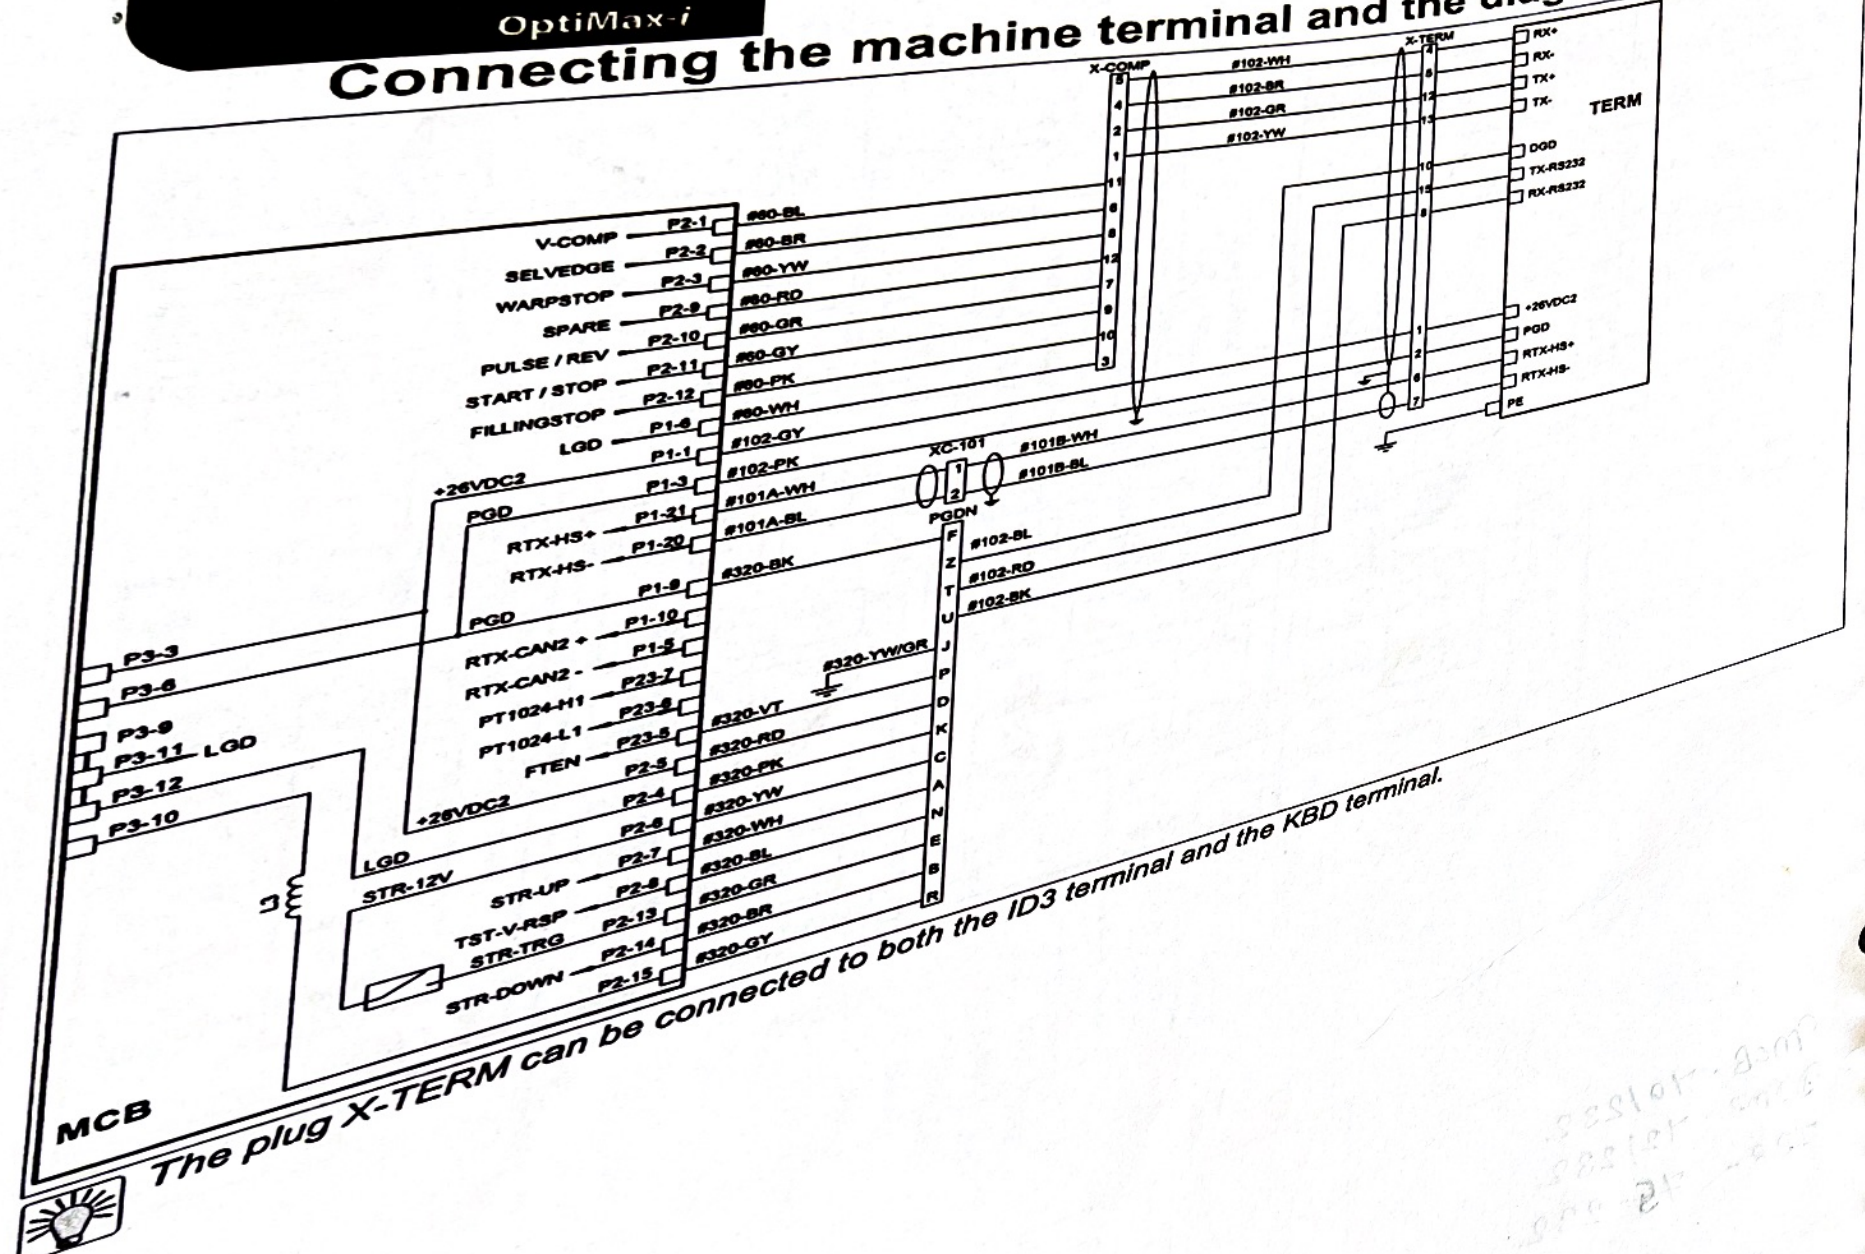


828101-80MP
828101-8076
800-21-8000

Emergency stop diagrams

Contents

- Emergency stops in case of dobbie or outside cam motion [125]
 - Emergency stops in case of dobbie or outside cam motion with double beam [126]
 - Emergency stops in case of jacquard [126]
 - Emergency stops in case of jacquard with double beam [127]
-  *On non-CE machines, the ESRHS emergency stop is not present.
The contacts are bypassed on the EPDAF print.*


Emergency stops in case of lobby or outside cam motion

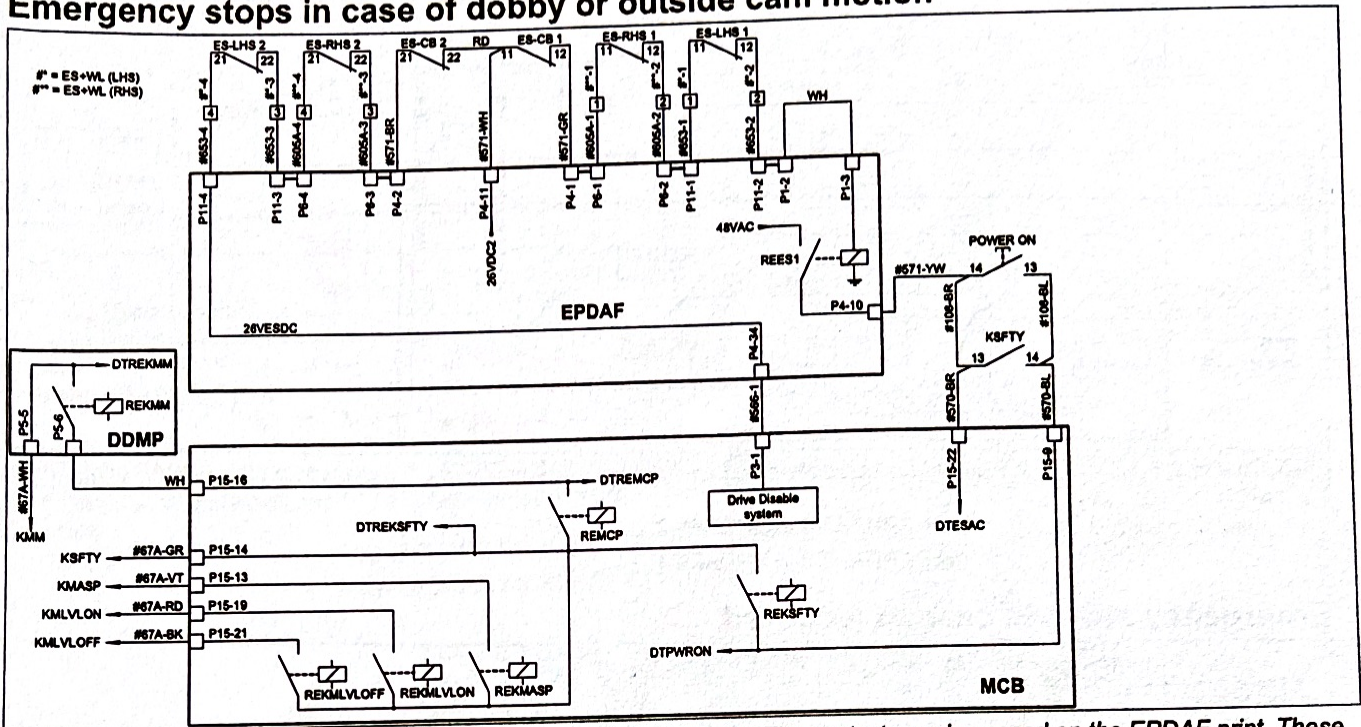

 On non-CE machines, the ESRHS emergency stop is not present. The contacts are bypassed on the EI-DAT print. These are:

- from EPDAF6-1 to EPDAF6-2;
- from EPDAF6-3 to EPDAF6-4.


Emergency stops in case of dobby or outside cam motion with double stop

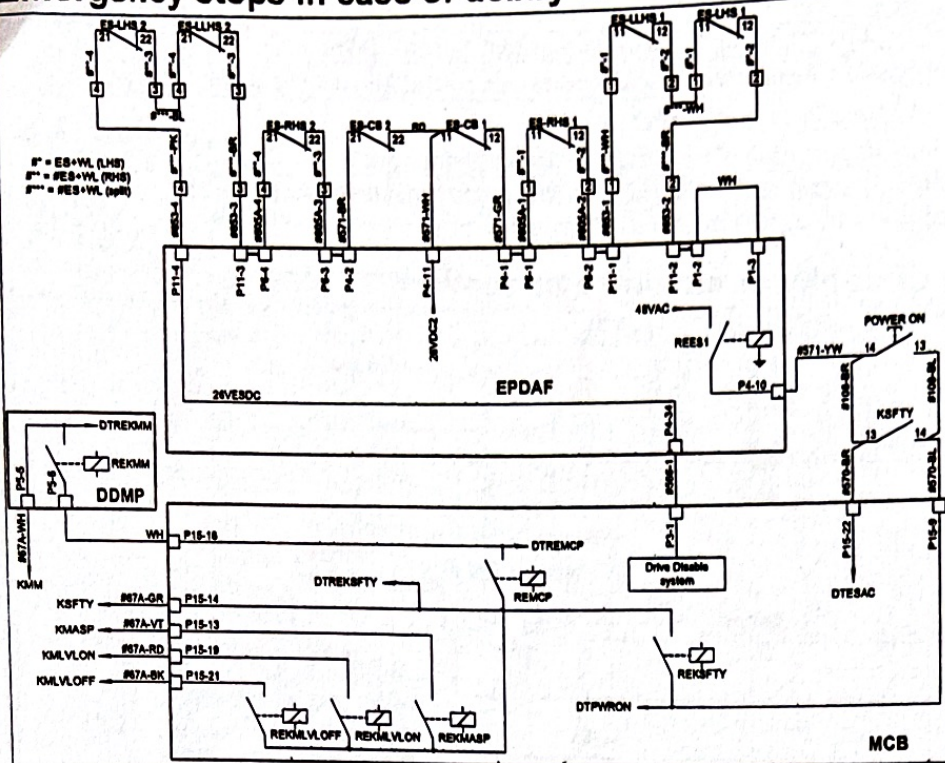

On non-CE machines, the ESRHS emergency stop is not present. The contacts are bypassed on the EPDAF print. These are:

- from EPDAF6-1 to EPDAF6-2;
- from EPDAF6-3 to EPDAF6-4.

Emergency stops in case of jacquard

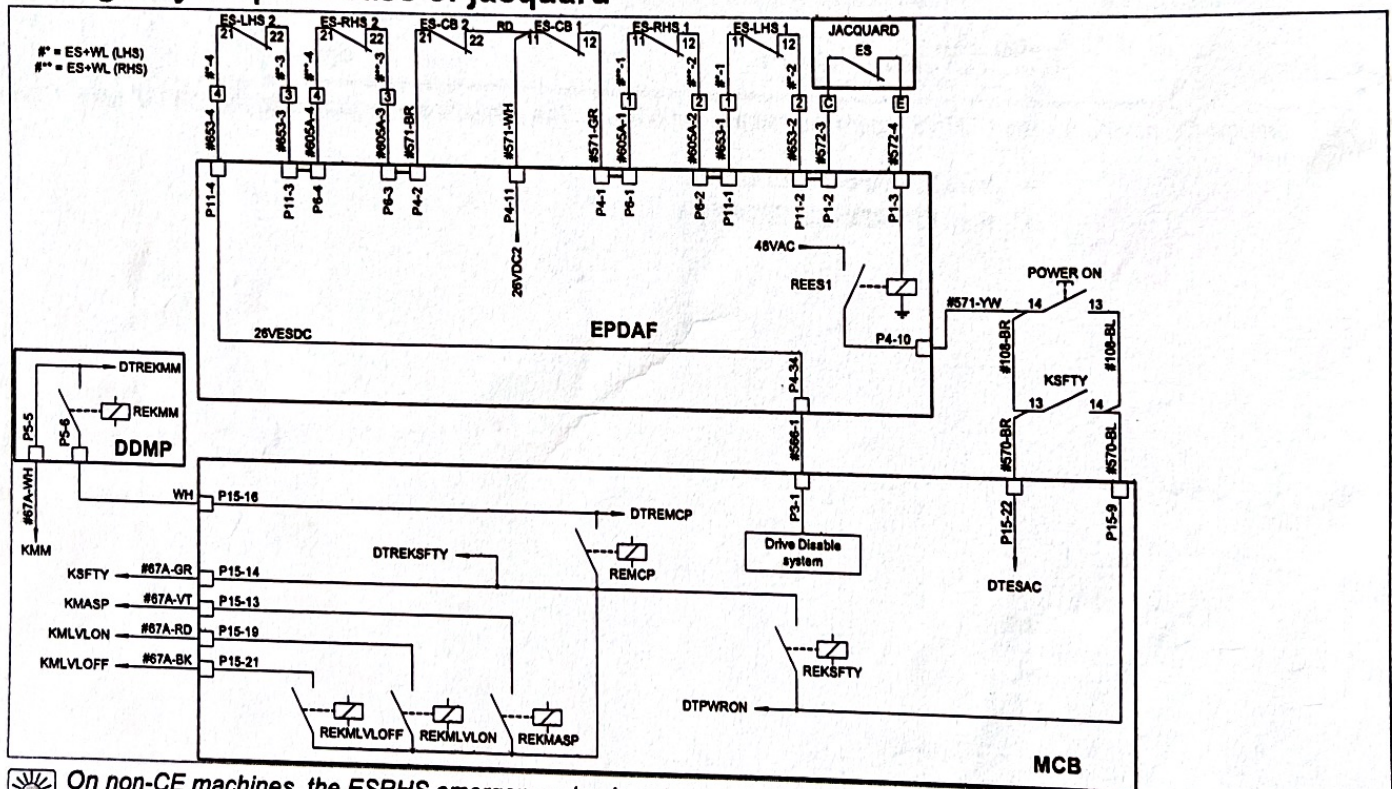

On non-CE machines, the ESRHS emergency stop is not present. The contacts are bypassed on the EPDAF print. These are:

- from EPDAF6-1 to EPDAF6-2;
- from EPDAF6-3 to EPDAF6-4.

On non-CE machines, the ESRHS emergency stop is not present. The contacts are bypassed on the EPDAF print. These are:


- from EPDAF6-1 to EPDAF6-2;
- from EPDAF6-3 to EPDAF-4.

Control button diagrams

Contents


- Control buttons > Detections [128]
- Control buttons > Protection logic (second contact) [129]

Control buttons > Detections

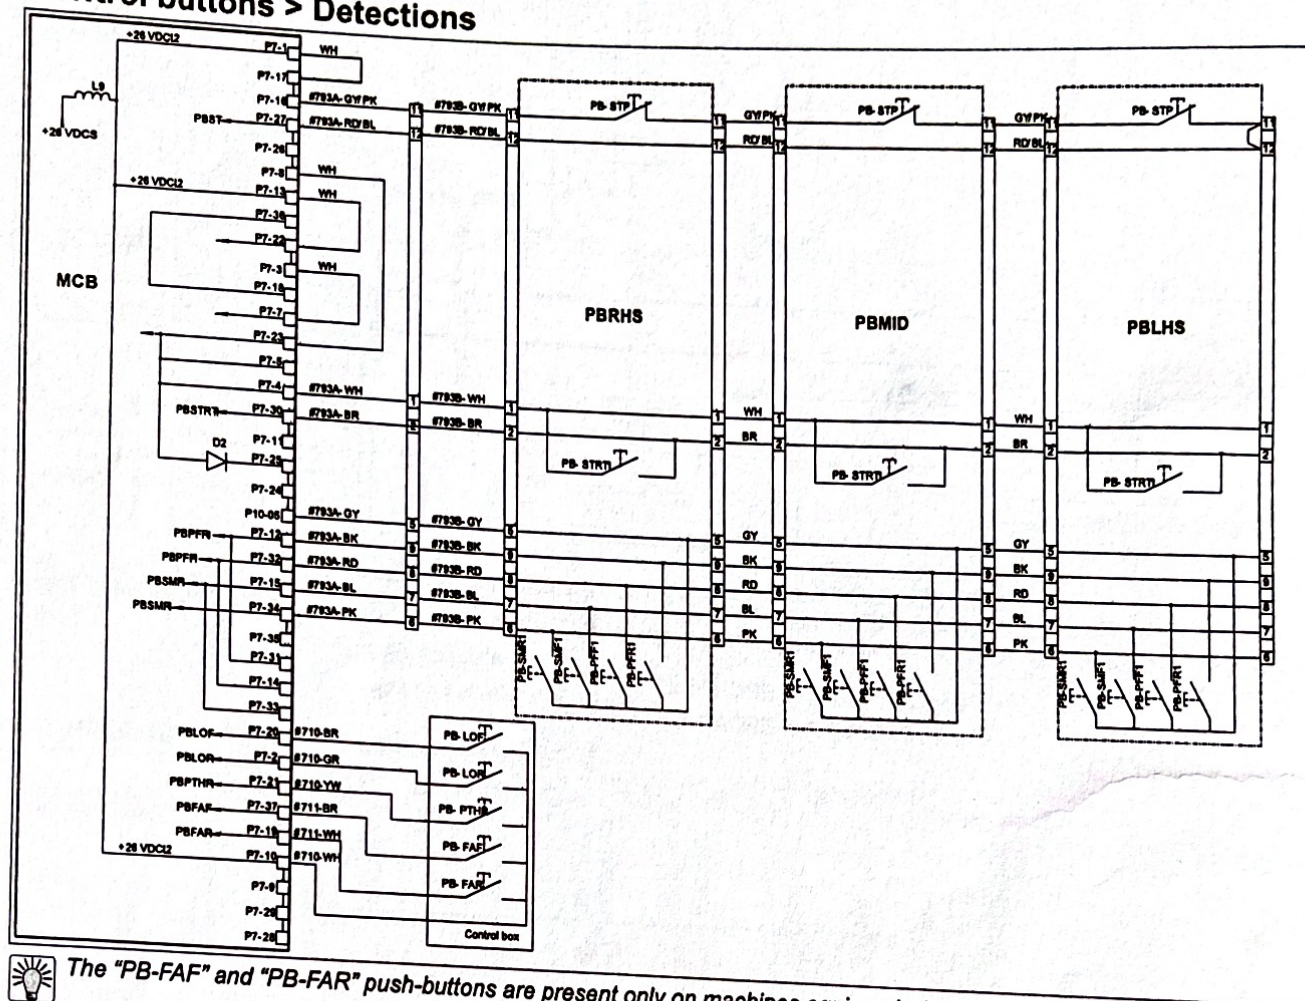

The "PB-FAF" and "PB-FAR" push-buttons are present only on machines equipped with a fancy beam.

TOGETHER
Control buttons > Protection logic (second contact)




Signals diagrams

Contents


- Signal lights [130]
- Warning lights [130]
- Warning lights only with double beam [131]

Signal lights

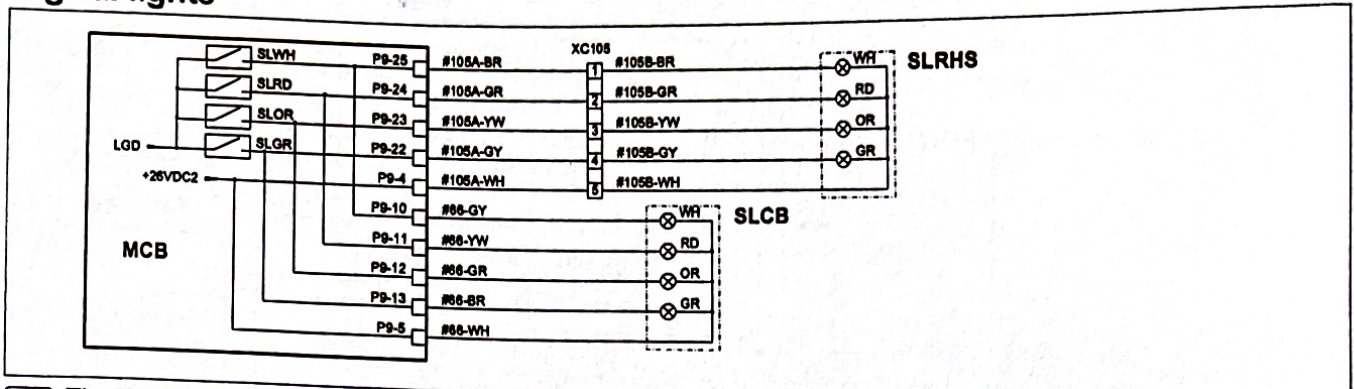


The "SLRHS" signal light is present only on machines equipped with jacquard.

Warning lights

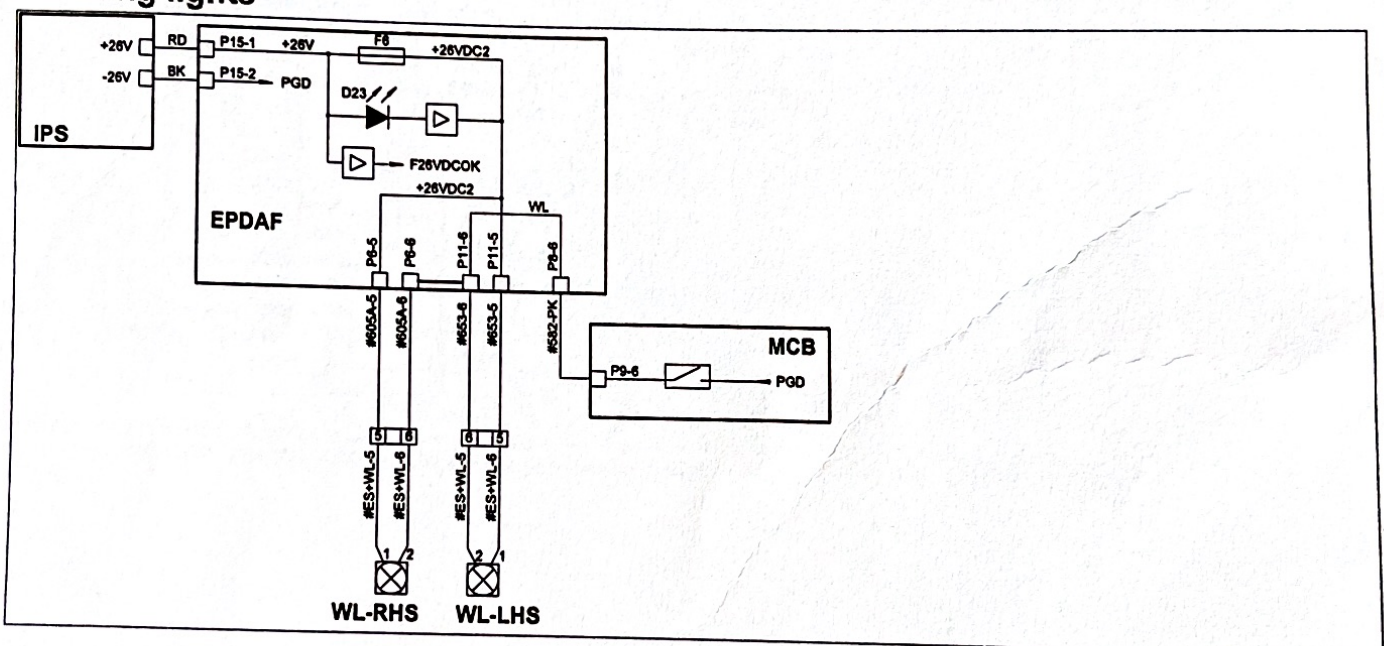

TOGETHER

Warning lights only with double beam

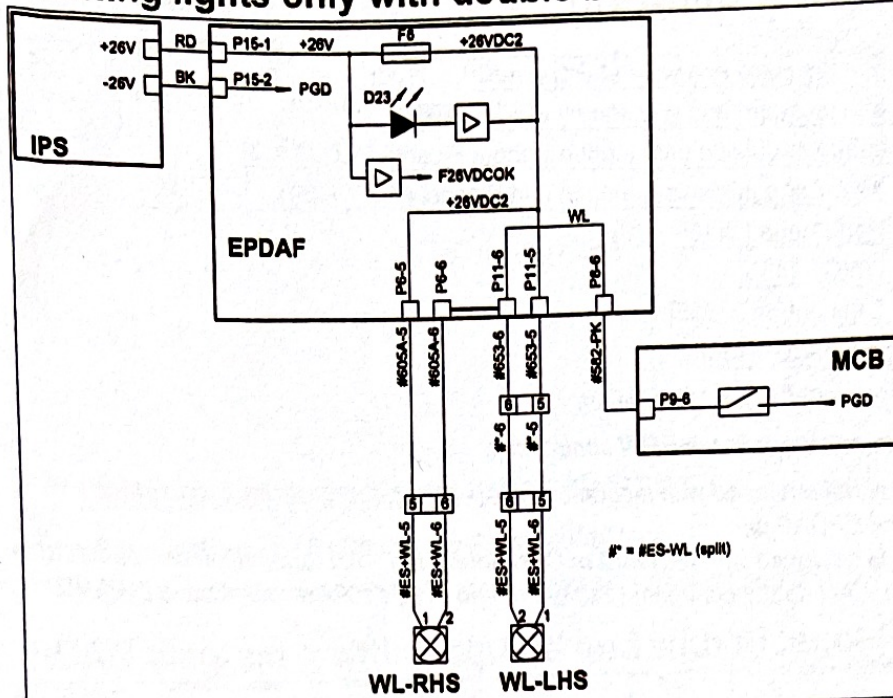

PICAN diagram

Contents


- PICAN diagram > with jacquard and without Picanol-PFL [133]
- PICAN diagram > with jacquard and with Picanol-PFL [133]
- PICAN diagram > dobby or outside cam motion without Picanol-PFL [133]
- PICAN diagram > dobby or outside cam motion and Picanol-PFL [134]
- PICAN diagram > jacquardette CX180 [134]
- PICAN diagram > DWC [135]
- PICAN diagram > CAN dobby [135]
- PICAN diagram > jacquard [136]



The PICAN bus is ended with a termination.

- *Two 120 ohm terminations in the PRW control box.*
- *If the machine is not equipped with jacquard or CAN dobby, there will be 2 terminations of 120 Ohm on the EPDAF print.*
- *If the machine is equipped with jacquard or CAN dobby, the CAN termination can be found in the jacquard or CAN dobby controller (120 Ohm) and the PT1024 termination in the EPDAF (120 Ohm).*


PICAN diagram > with jacquard and without Picanol-PFL

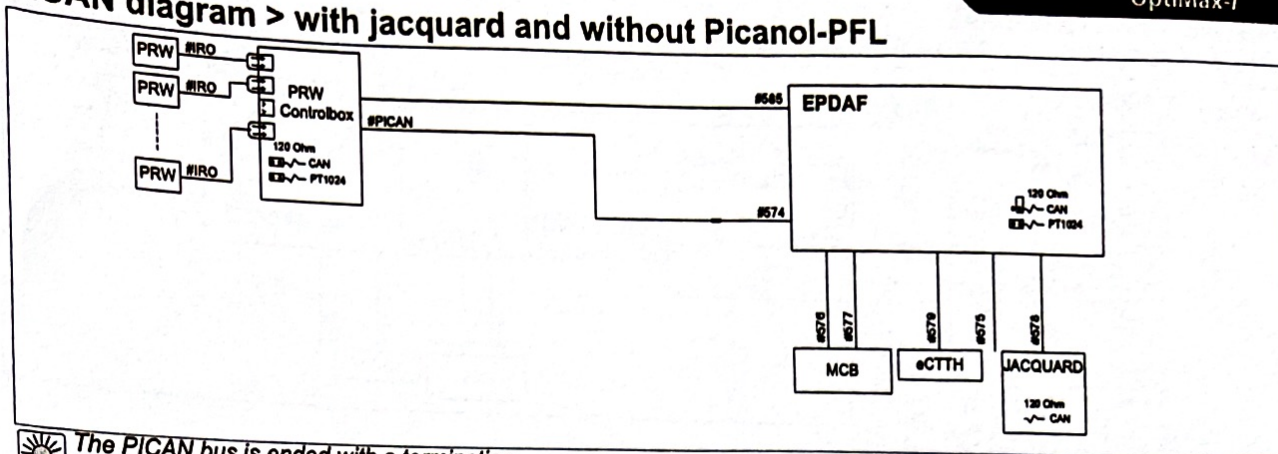

The PICAN bus is ended with a termination.

- 2 terminations of 120 Ohm in the PRW control box;
- CAN termination inside the jacquard controller (120 ohm) and PT1024 termination on the EPDAF print (120 ohm).


PICAN diagram > with jacquard and with Picanol-PFL

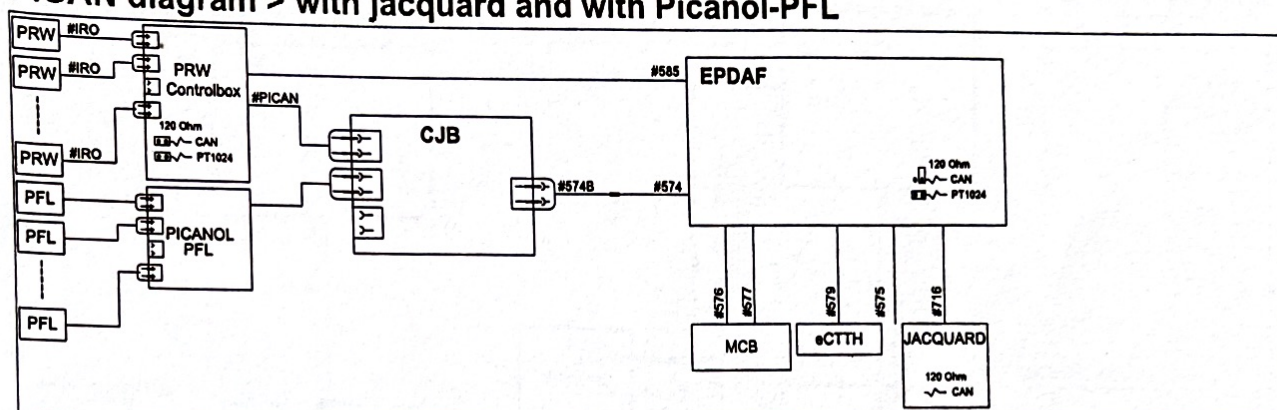

The PICAN bus is ended with a termination.

- 2 terminations of 120 Ohm in the PRW control box;
- CAN termination inside the jacquard controller (120 ohm) and PT1024 termination on the EPDAF print (120 ohm).


PICAN diagram > doobby or outside cam motion without Picanol-PFL

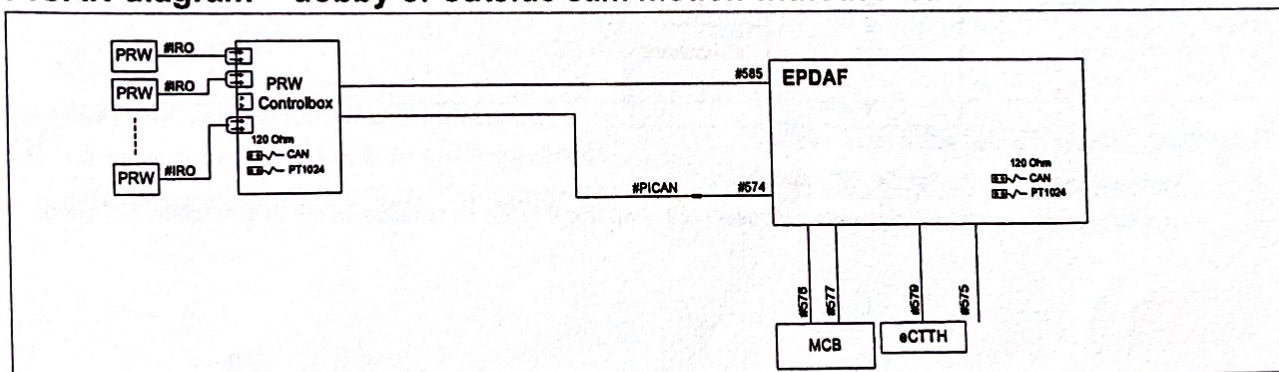

The PICAN bus is ended with a termination.

- Two 120 ohm terminations in the PRW control box;
- Two 120 ohm terminations on the EPDAF print.


PICAN diagram > hobby or outside cam motion and Picanol-PFL

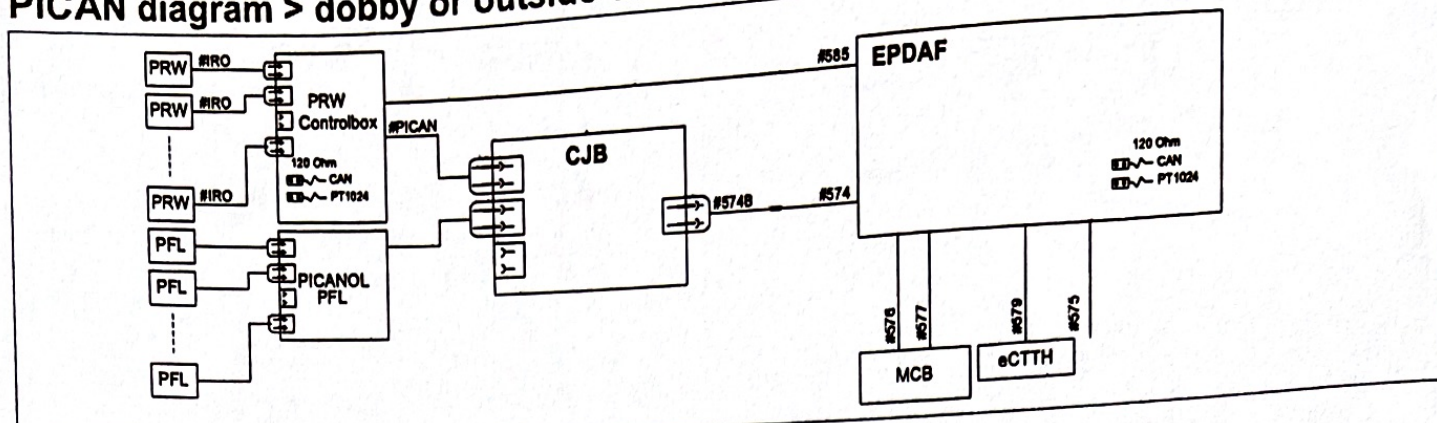

The PICAN bus is ended with a termination.

- Two 120 ohm terminations in the PRW control box;
- Two 120 ohm terminations on the EPDAF print.


PICAN diagram > jacquette CX180

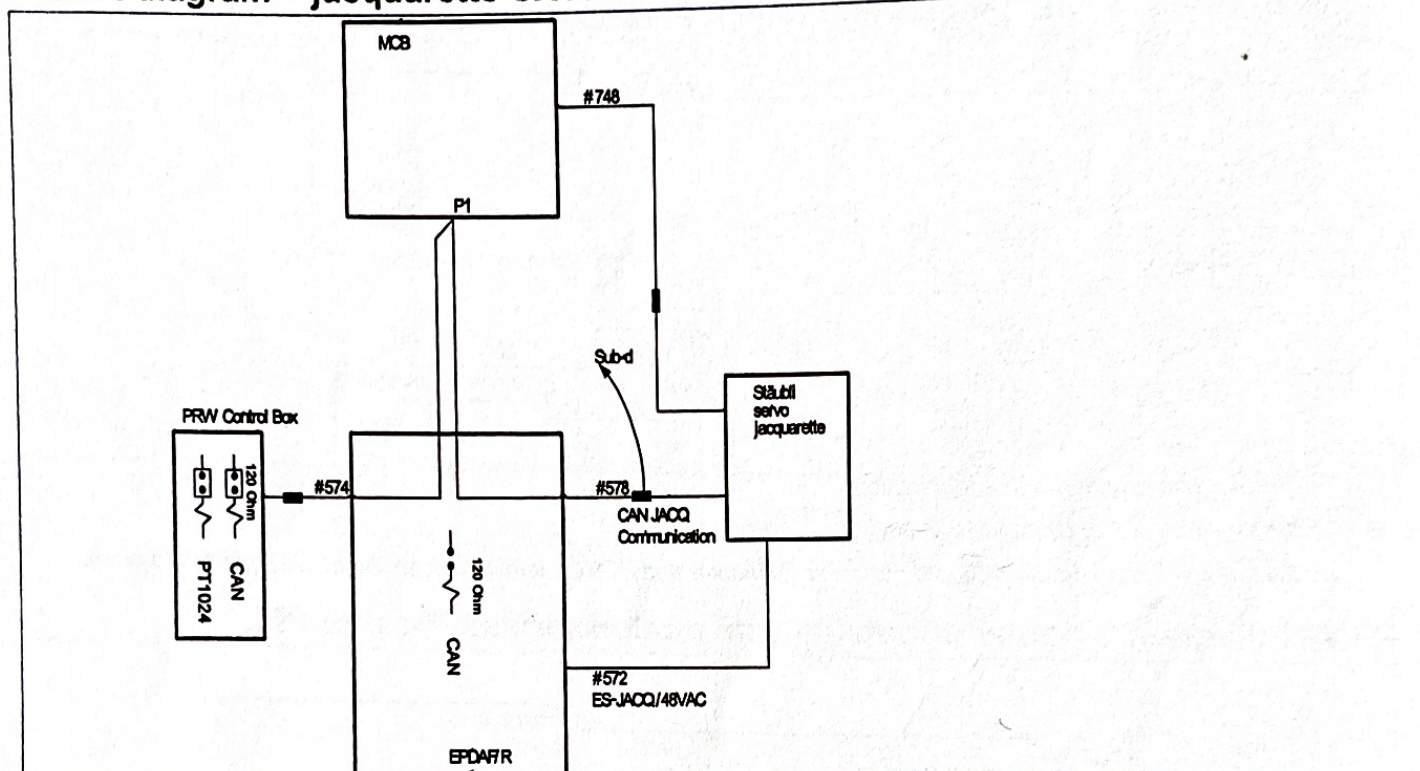

The PICAN bus is ended with a termination.

- 2 terminations of 120 Ohm in the PRW control box;
- CAN termination inside the jacquette controller (120 ohm) and PT1024 termination on the EPDAF print (120 ohm).


PICAN diagram > DWC

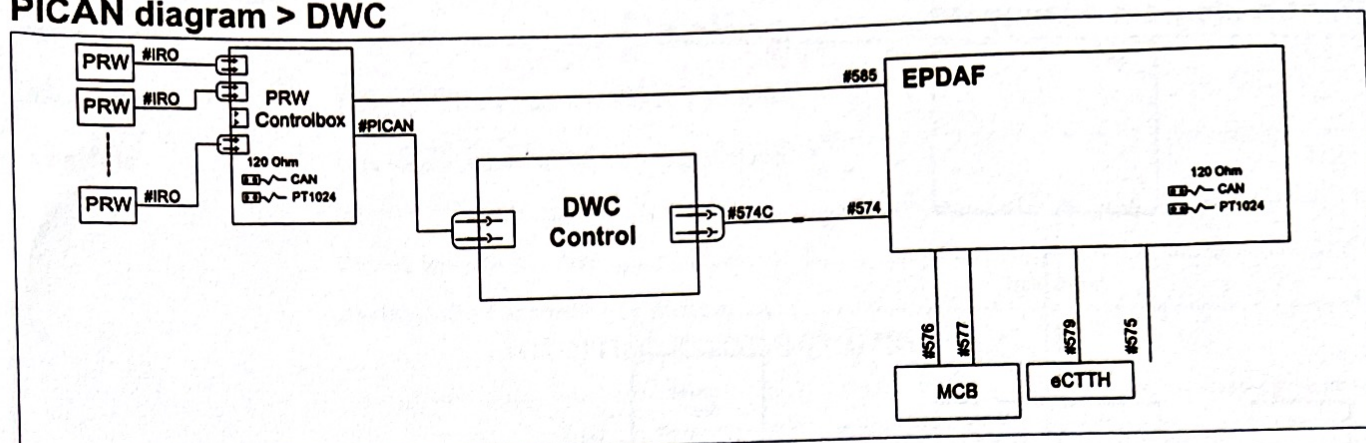

The PICAN bus is ended with a termination.

- Two 120 ohm terminations in the PRW control box;
- Two 120 ohm terminations on the EPDAF print.

PICAN diagram > CAN dooby

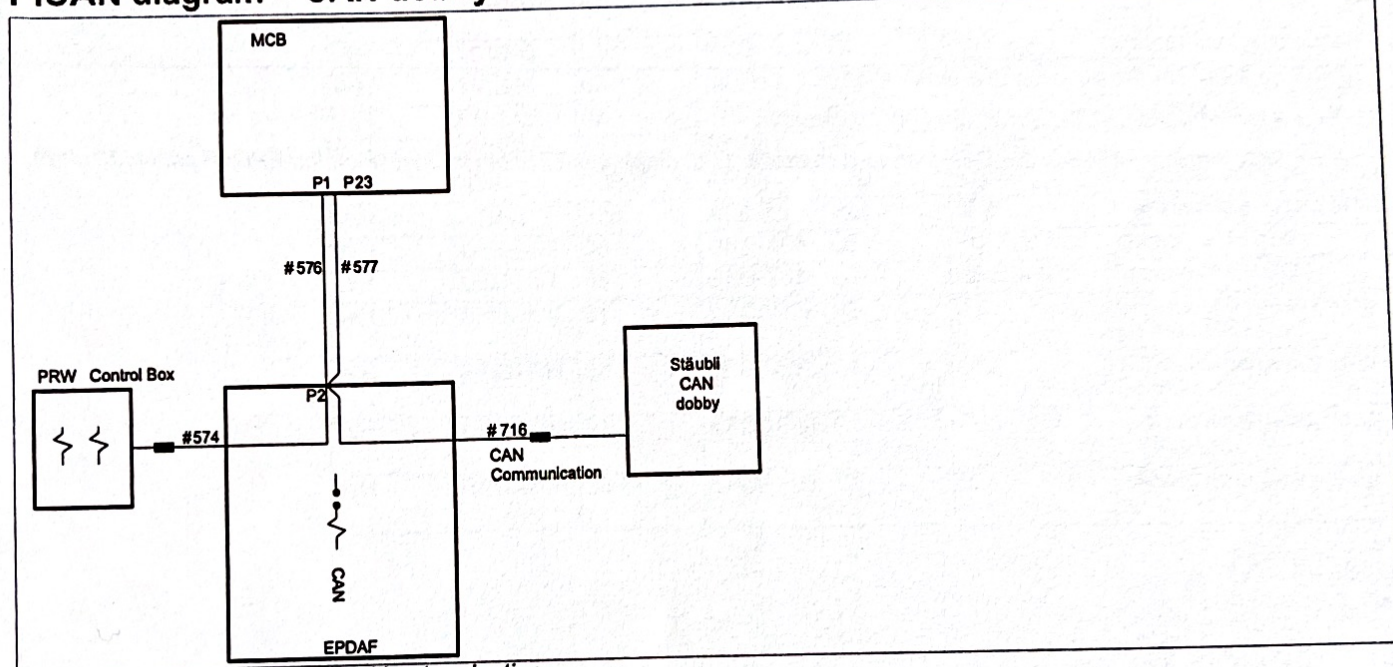


The PICAN bus is ended with a termination.

- 2 terminations of 120 Ohm in the PRW control box;
- CAN termination inside the CAN dooby controller (120 ohm) and PT1024 termination on the EPDAF print (120 ohm).

OptiMax-i

PICAN diagram > jacquard

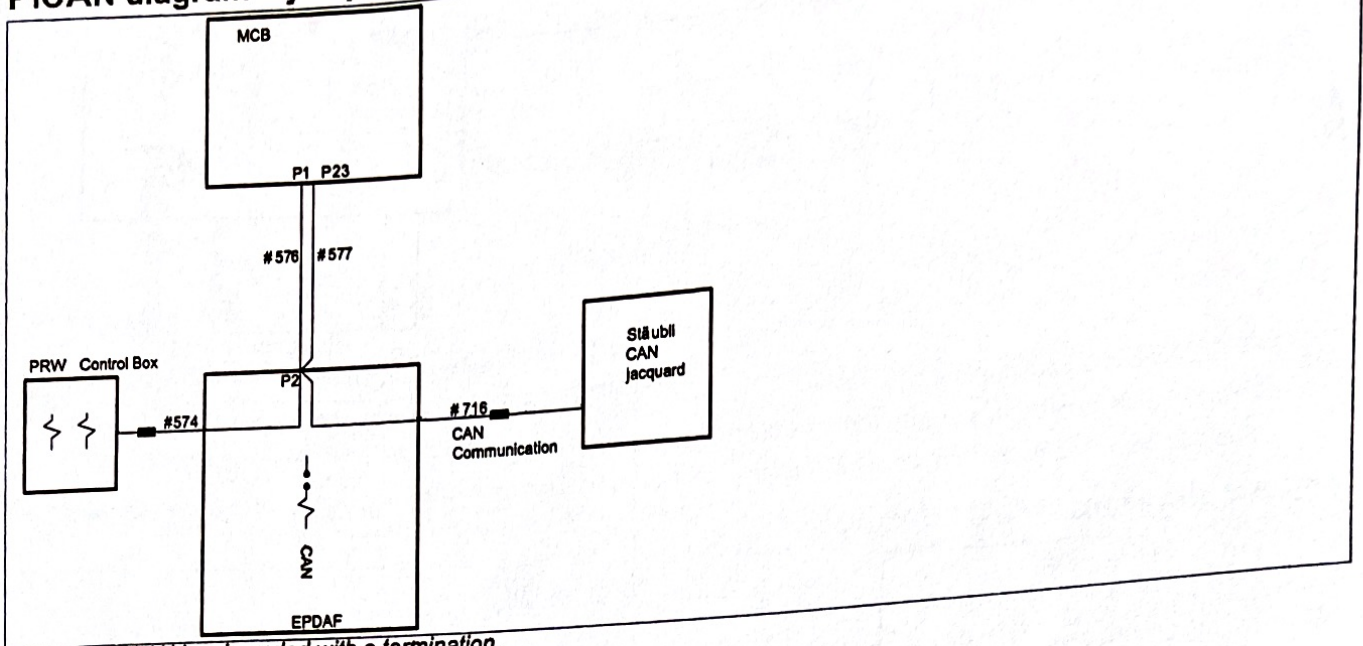

The PICAN bus is ended with a termination.

- 2 terminations of 120 Ohm in the PRW control box;
- CAN termination inside the CAN jacquard controller (120 ohm) and PT1024 termination on the EPDAF print (120 ohm).

Cabling

Based on

This part is based upon I7980-96 (cable list).

Contents

This section contains the following subjects:

Internal connections.....	137
Cables without number	138
Cables sorted according to number.....	145

Internal connections

Wire	From	Point	To	Point	Signal	Comment
WH	MCB07	08	MCB07	23	CVR1 & 2	without guards 2
WH	MCB07	13	MCB07	22	CVR1	
WH	MCB07	03	MCB07	07	CVR2	without guards 2
WH	MCB15	16	DDMP05	06	KMM	
WH	TRIAx18	01	TRIAx18	02	CANMODE	in case of second TRIAX print
WH	MCB10	01	MCB10	04	HS	without hand protection
WH	MCB10	02	MCB10	07	HS	without hand protection
WH	EPDAF01	02	EPDAF01	03	ESJ	no-jacquard
WH	MCB07	01	MCB07	17	STOP1	
WH	ATB-Y	32F	ATB-Y	32D	ATBID	identification ATB-Y print
WH	ATB-Z	32B	ATB-Z	32Z	ATBID	identification ATB-Z print
WH	UEB-X03	05	UEB-X03	06	PBESMID1	In case of ERGO
WH	UEB-X07	05	UEB-X07	06	PBESMID2	In case of ERGO
WH	EPDAF11	01	EPDAF11	02	ES1	without emergency stop on the LHS
WH	EPDAF11	03	EPDAF11	04	ES2	without emergency stop on the LHS
WH	EPDAF06	01	EPDAF06	02	ES1	without emergency stop on the LHS
WH	EPDAF06	03	EPDAF06	04	ES2	without emergency stop on the LHS


Cables without number

Contents


- Cables without number > part 1 [138]
- Cables without number > Cables on the QSC back rest [143]

Cables without number > part 1


Wires thermal elements

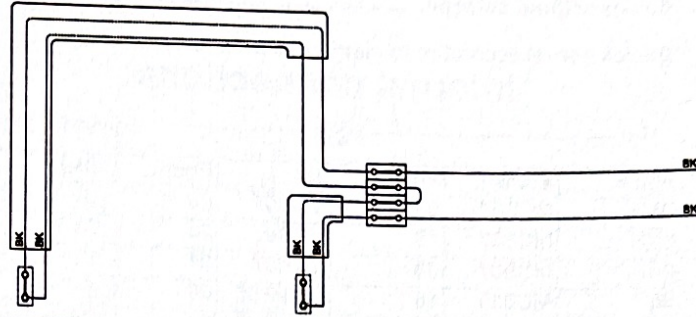


Wires centre thermal elements

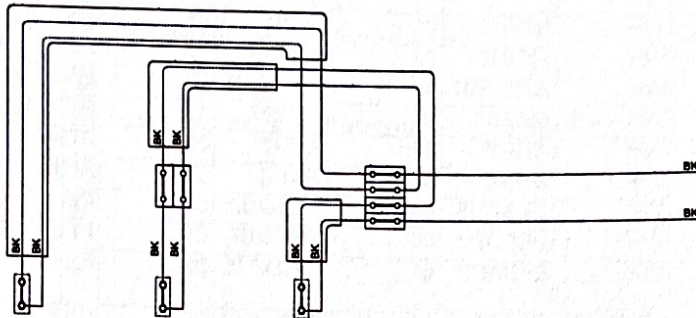

Wires centre thermal elements

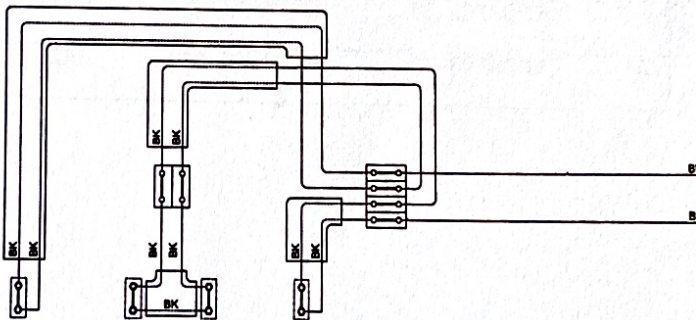


Intermediate cable push buttons



Wire	From	Point	To	Point	Signal
WH	PB.*	1	PB.**	1	
BR	PB.*	2	PB.**	2	
GR	PB.*	3	PB.**	3	
YW	PB.*	4	PB.**	4	
GY	PB.*	5	PB.**	5	
PK	PB.*	6	PB.**	6	
BL	PB.*	7	PB.**	7	
RD	PB.*	8	PB.**	8	
BK	PB.*	9	PB.**	9	
VT	PB.*	10	PB.**	10	
GY/PK	PB.*	11	PB.**	11	
RD/BL	PB.*	12	PB.**	12	


*: LHS or MID

** MID or RHS

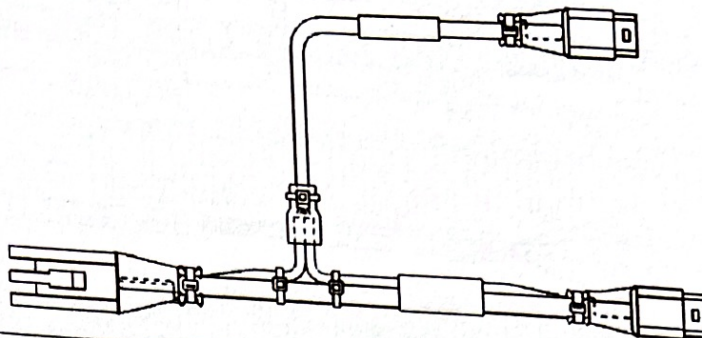

Wire	From	Point	To	Point	Signal
WH	XC581A	1	XCES	1	ES1SUP
BR	XC581A	2	XCES-WL	2	ES1
BR	XC581A	3	XCES	3	ES2SUP
PK	XC581A	4	XCES-WL	4	ES2
GR	XC581A	5	XCES-WL	5	26VDC2
GR	XC581A	5	XCES	5	
YW	XC581A	6	XCES-WL	6	WL
YW	XC581A	6	XCES	6	
GY	XC581A	7	XCES-WL	7	PBESLHS
GY	XC581A	7	XCES	7	


ES + WL

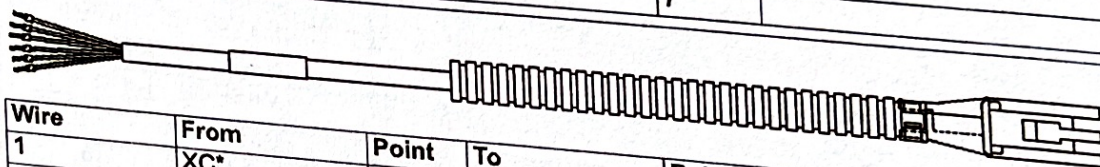

Wire	From	Point	To	Point	Signal
1	XC*	1	ES	1	ES1SUP
2	XC*	2	ES	2	ES1
3	XC*	3	ES	3	ES2SUP
4	XC*	4	ES	4	ES2
5	XC*	5	WL	5	26VDC2
6	XC*	6	WL	6	WL

*: XC605A or XC653 or XCES-WL

PB MD

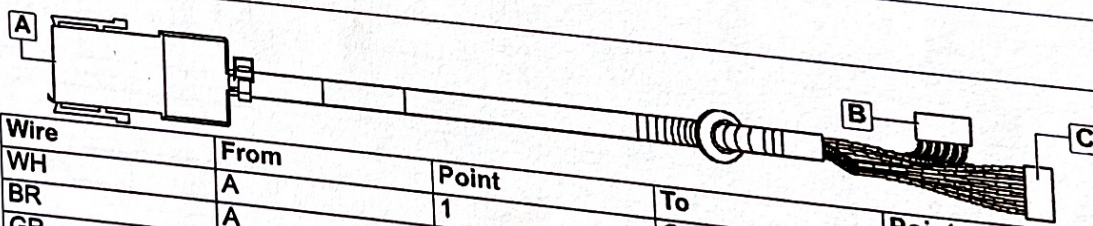

Wire	From	Point	To	Point
WH	A	1	C	1
BR	A	2	C	2
GR	A	3	C	3
YW	A	4	C	4
GY	A	5	C	5
PK	A	6	C	6
BL	A	7	C	1
RD	A	8	C	2
BK	A	9	C	3
VT	A	10	C	4
GY/PK	A	11	C	5
RD/BL	A	12	C	6

KMM ----> NG_LDEC

