ARMSTRONG G1000

FRU PARTS IDENTIFIER

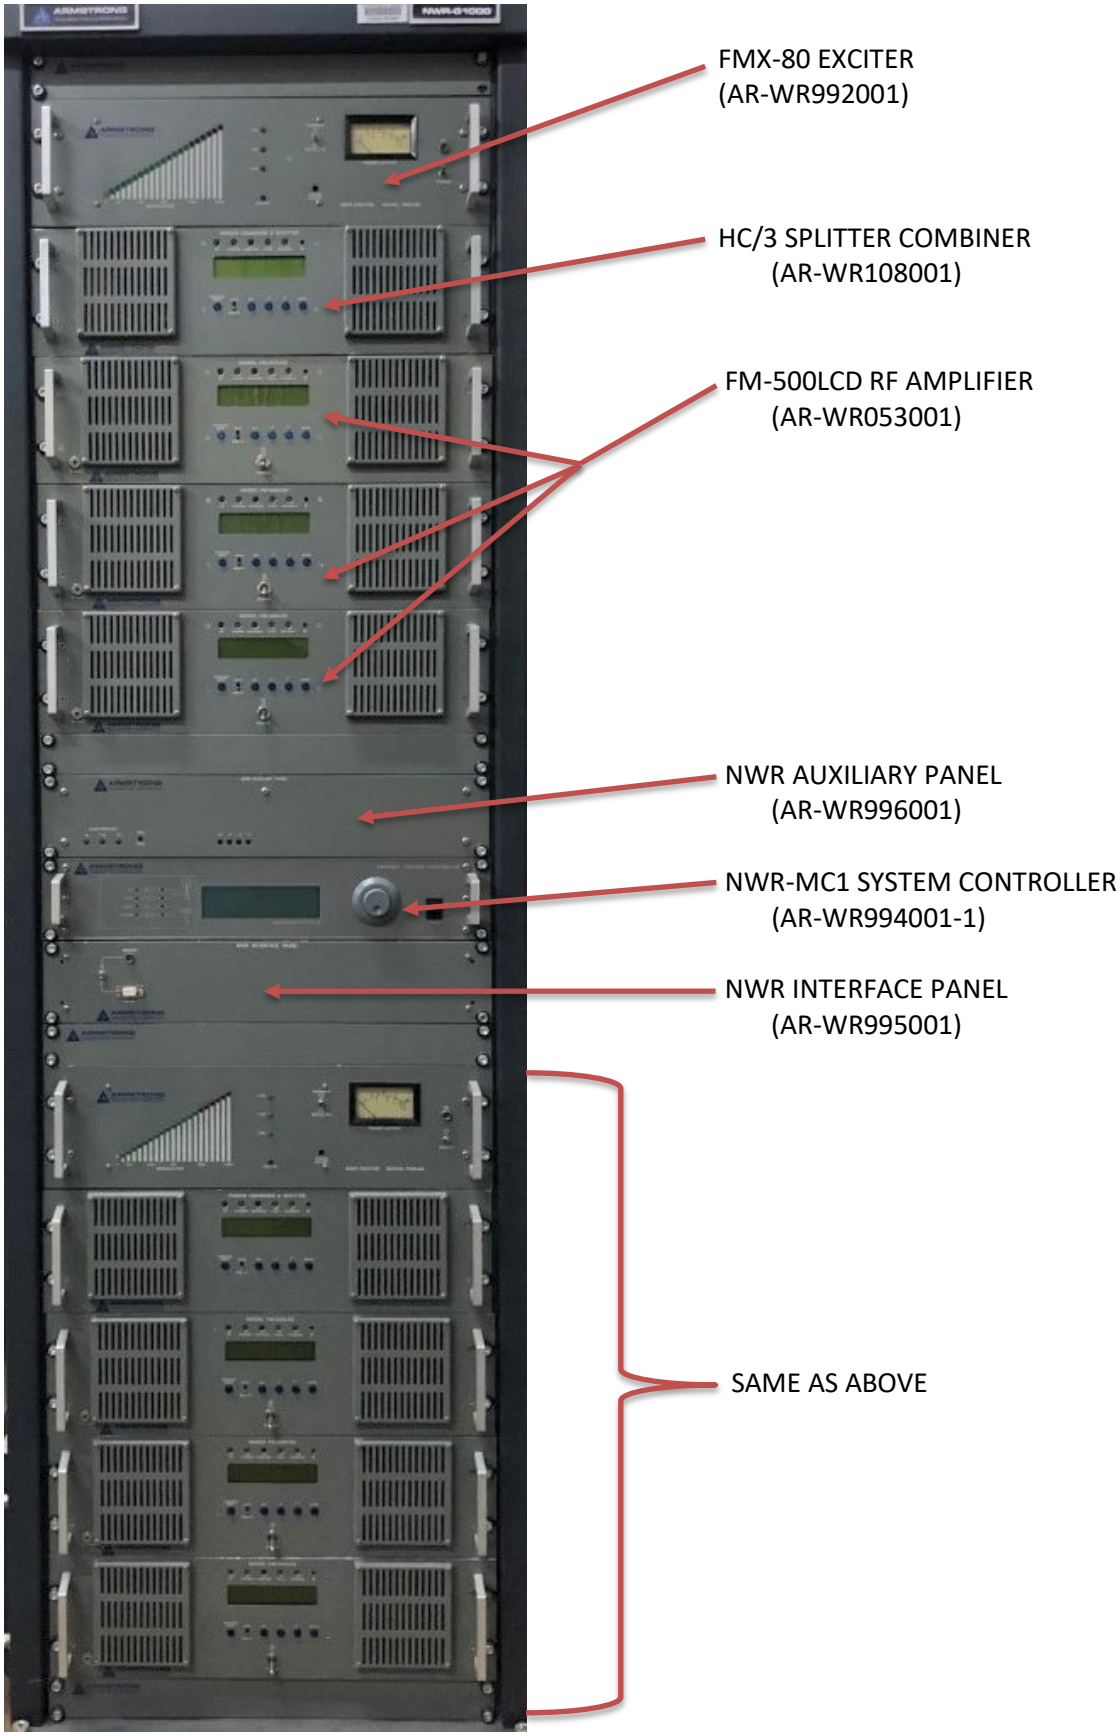
FMX-80 EXCITER
(AR-WR992001)
HC/3 SPLITTER COMBINER
(AR-WR108001)
FM-500LCD RF AMPLIFIER
(AR-WR053001)
NWR AUXILIARY PANEL
(AR-WR996001)
NWR-MC1 SYSTEM CONTROLLER
(AR-WR994001-1)
NWR INTERFACE PANEL
(AR-WR995001)
SAME AS ABOVE

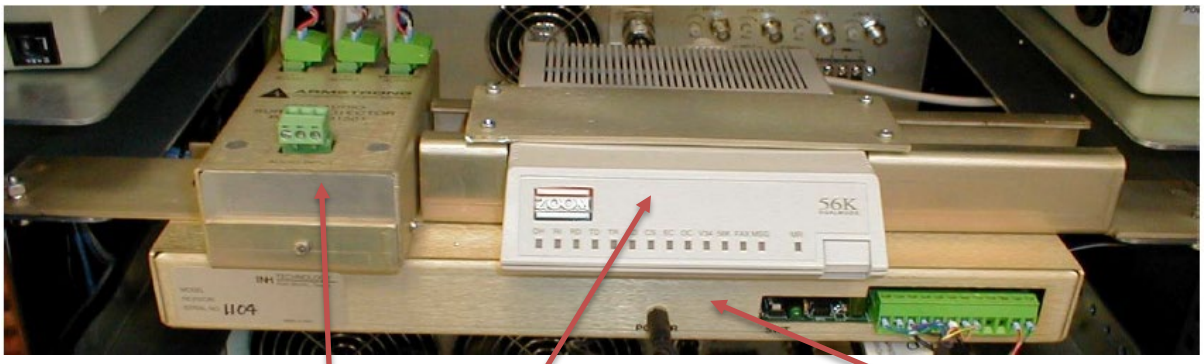

AUDIO SURGE PROTECTOR
(AR-WR991501)

MODEM
(AR-MOD001)

ROAMS UNIT
(B345)

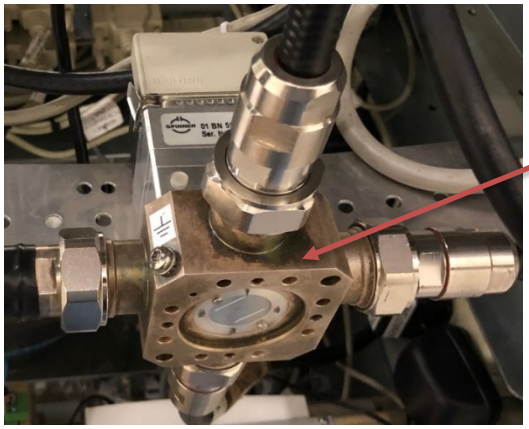

G1000 COAX RELAY
(AR-WR101201)

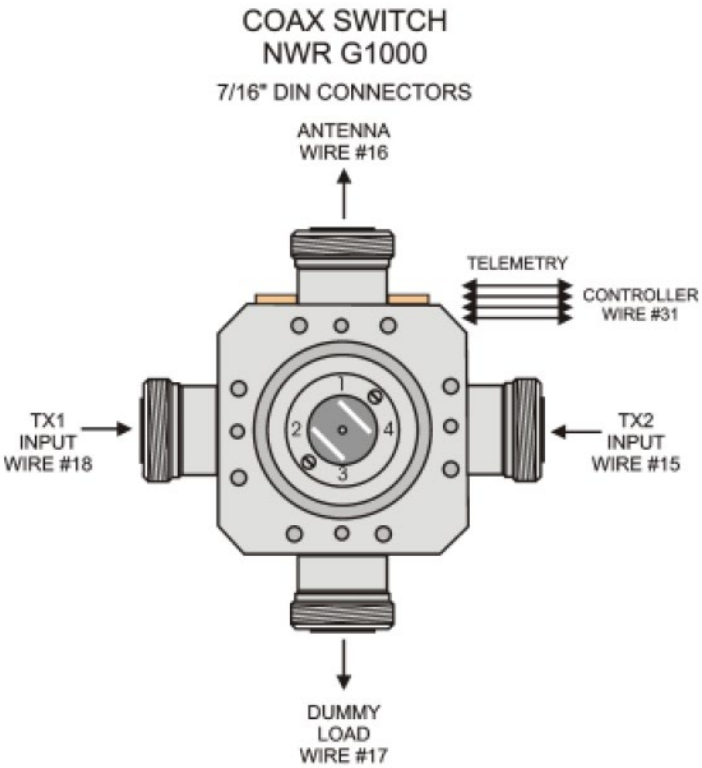

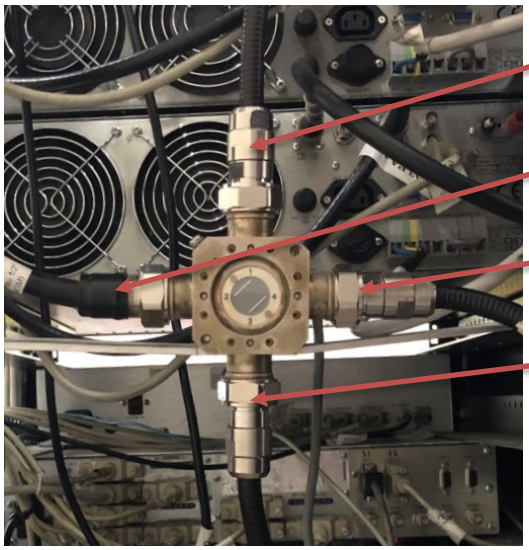

CABLE 16 - COAX RELAY PORT 1 TO TOP COVER (CAVITY)
(AR-CA3011)

CABLE 18 - COAX RELAY PORT 2 TO TX1 SPLITTER COMBINER
(AR-CA3012)

CABLE 15 - COAX RELAY PORT 4 TO TX2 SPLITTER COMBINER
(AR-CA3012)

CABLE 17 - COAX RELAY PORT 3 TO TOP COVER (LOAD)
(AR-CA3011)

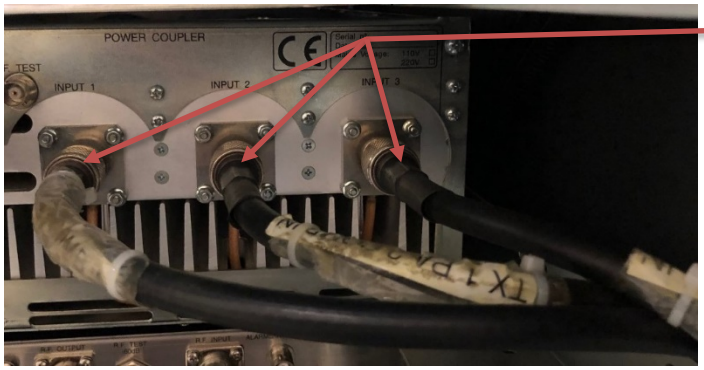

CABLE - FM-500LCD OUT TO COMBINER IN
(AR-CA2091)

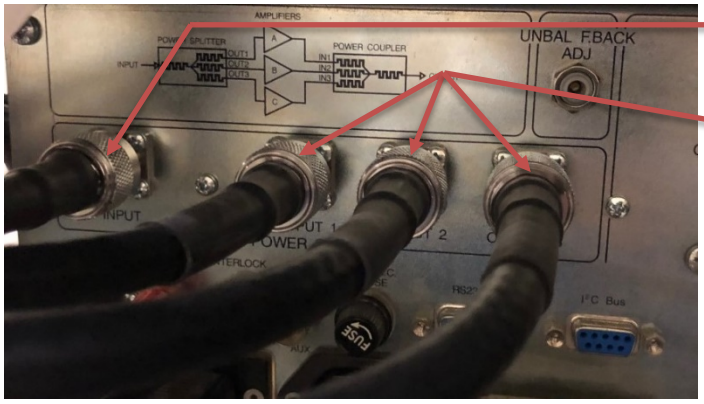

CABLE – FMX-80 TO SPLITTER INPUT
(AR-CA2091)

CABLE – SPLITTER OUTPUT TO FM-500LCD INPUT
(AR-CA2091)

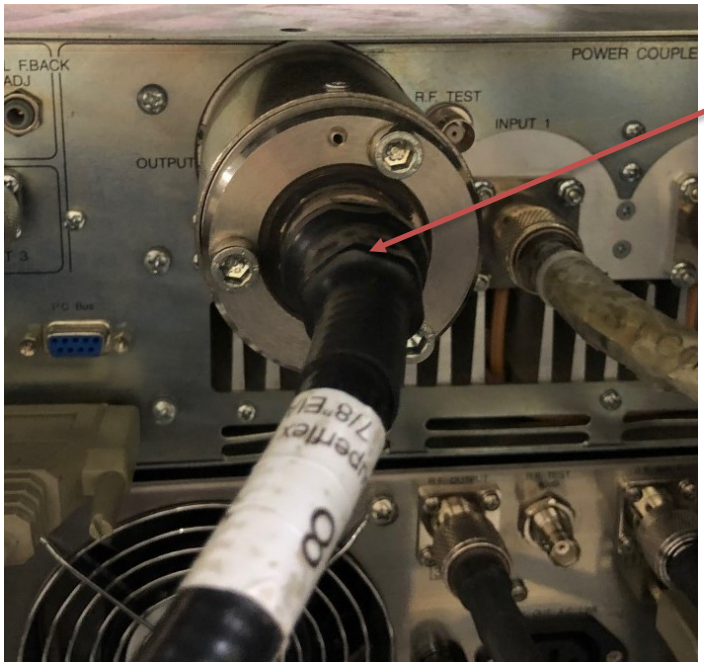

CABLE – COMBINER OUTPUT TO COAX RELAY
(AR-CA3012)

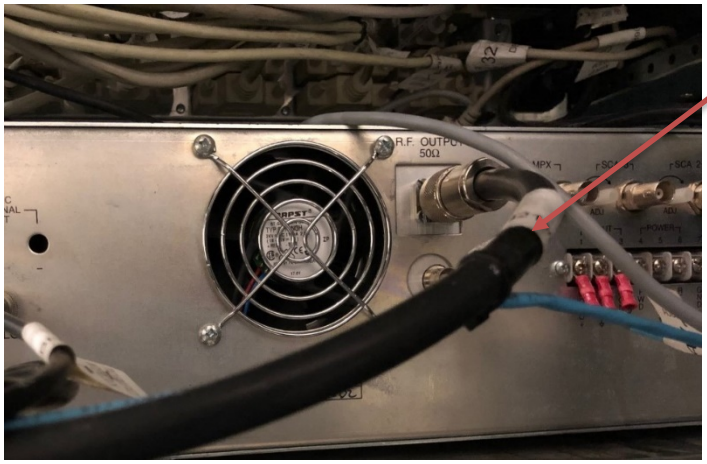

CABLE – FMX-80 OUTPUT TO SPLITTER INPUT
(AR-CA2019)

CABLE 54 – CABINET TOP TO DUMMY LOAD
(AR-CA54)

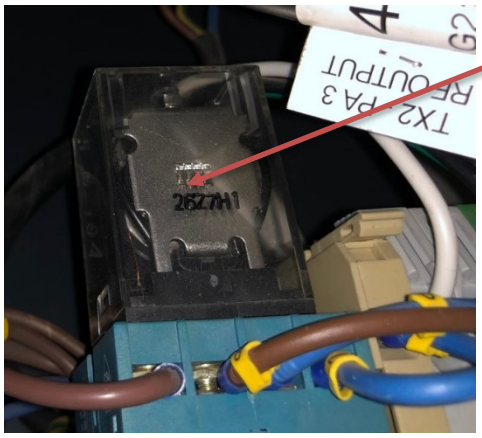

AC SWITCHOVER RELAY
(AR-K99001)

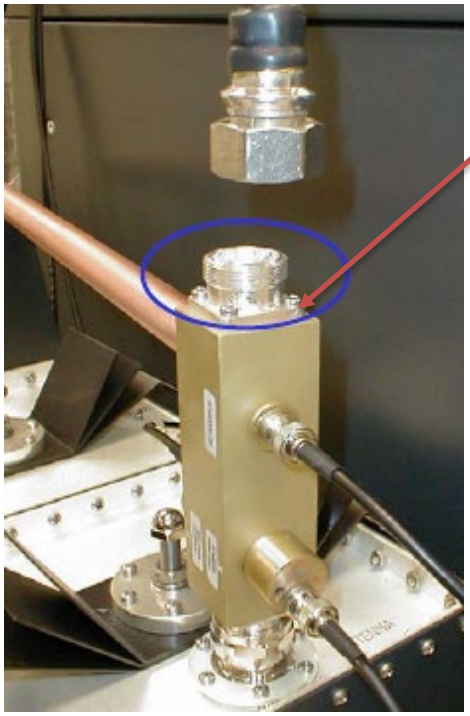

G1000 DIRECTIONAL COUPLER/SHORTING STUB
(AR-WR107201)

G1000 – 7/16 DIN CONNECTOR

CABLE 53 – CABINET TOP TO CAVITY INPUT
(AR-CA3013)

G1000 BANDPASS CAVITY
(AR-WR997101)

CABLE 54 – CABINET TOP TO DUMMY LOAD
(AR-CA54)

MAINTENANCE ITEMS

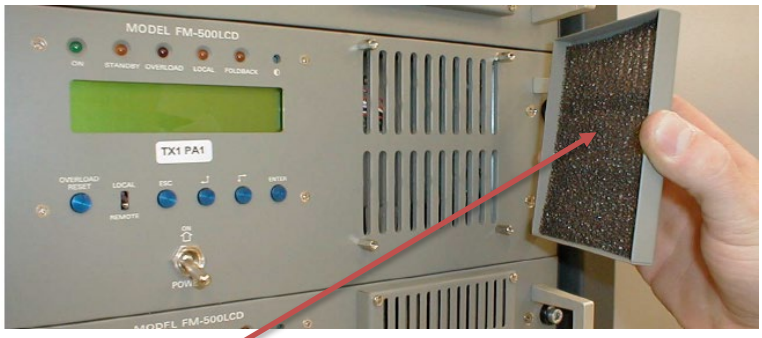

AIR INTAKE FILTER
(AR-WRFM10)

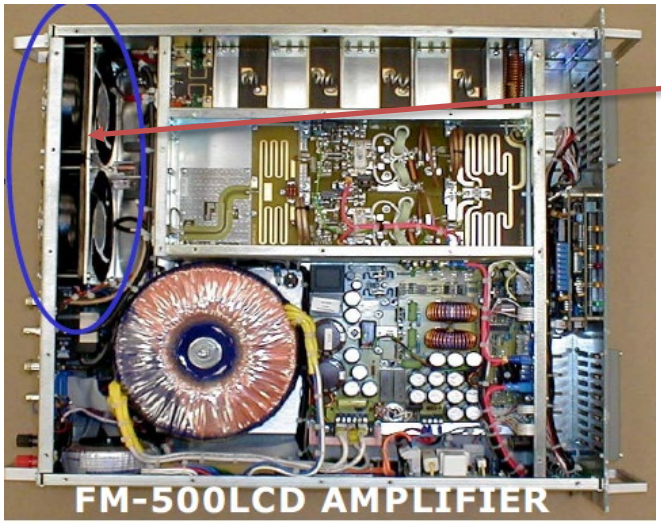

FANS (B120M115AC110)

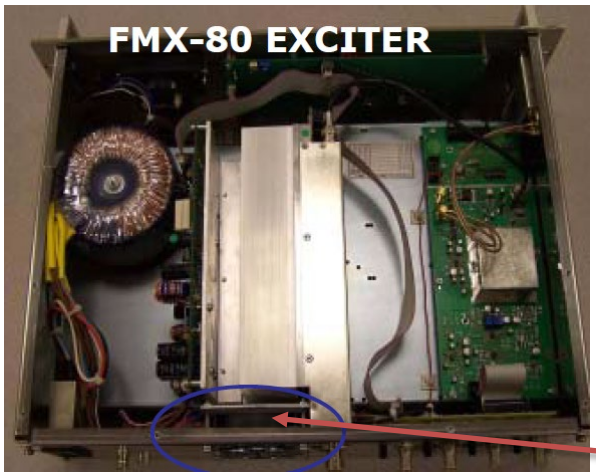

FAN (B80M24DC47)

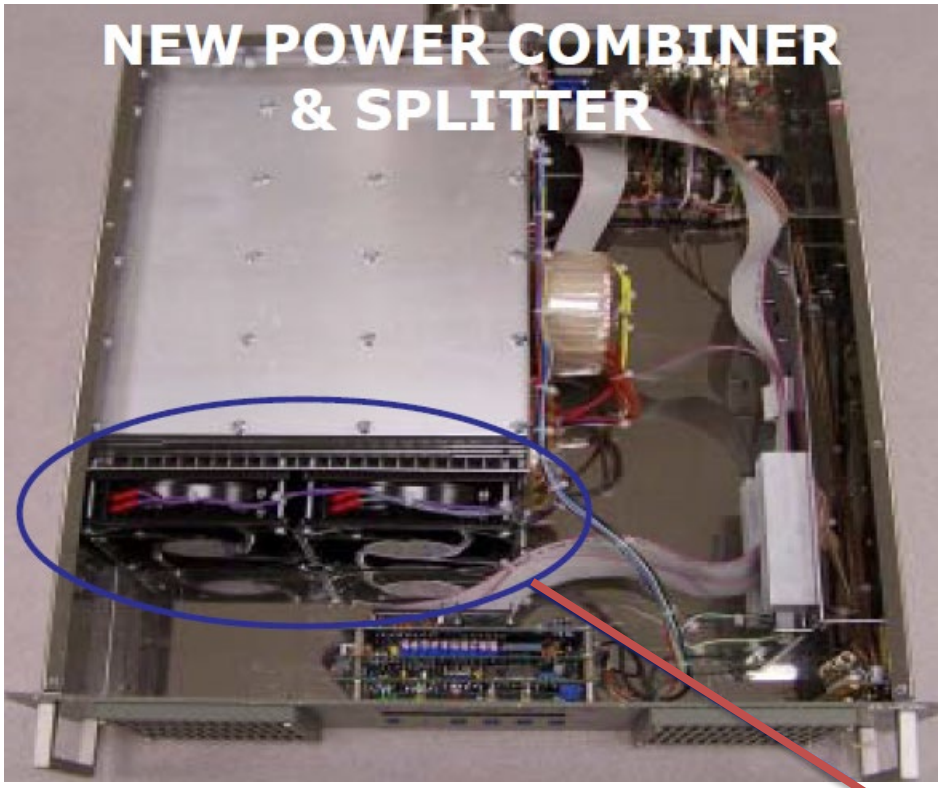

FANS (B120M115AC110)

ARMSTRONG

G300 AND G1000 (CLASSIC) FUSE CHART

FUSE LOCATION	REF DES	FUSE SIZE FOR 120 VAC MAINS	FUSE SIZE FOR 240 VAC MAINS	FUSE TYPE	CENTURIA PART NUMBER
FMX-80 Main AC Fuse	F1	6.3A	6.3A	218 (5x20mm) SLOW BLOW 250 VAC, GLASS	F30630
FMX-80 POWER SUPPLY (INTERNAL)	FS1	10A	10A	218 (5x20mm) SLOW BLOW 250 VAC, GLASS	F31000
FM-500LCD MAIN AC FUSE	F2	15A	10A	3AB (1.25"x.25") SLOW BLOW 250 VAC, CERAMIC	F21000-C (10A) F21500-C (15A)
FM-500LCD AUX AC FUSE	F1	6.25A	6.25A	3AG (1.25"x.25") SLOW BLOW 250 VAC, GLASS	F20625
FM-500LCD PA FUSE	F3	25A	25A	GL (10x38mm) SLOW BLOW, CERAMIC	F42500-C
COMBINER MAIN AC FUSE		240 VAC ONLY	3.15A	218 (5x20mm) SLOW BLOW 250 VAC, GLASS	F30315
COMBINER AUX AC FUSE	F1	240 VAC ONLY	6.25A	3AG (1.25"x.25") SLOW BLOW 250 VAC, GLASS	F20625
NWR-MC1 MAIN AC FUSE	F1	2A	120 VAC ONLY	218 (5x20mm) SLOW BLOW 250 VAC, GLASS	F30200
NWR-MC1 COAX SWITCH LINE (INTERNAL)	F2	3.15A	3.15A	218 (5x20mm) SLOW BLOW 250 VAC, GLASS	F30315
NWR-MC1 POWER SUPPLY (INTERNAL)	FS1	1.6A	1.6A	218 (5x20mm) SLOW BLOW 250 VAC, GLASS	F30160
NWR-AUX PANEL MAIN AC FUSE	F1	1A	120 VAC ONLY	218 (5x20mm) SLOW BLOW 250 VAC, GLASS	F30100
AC SWITCHOVER RELAY FUSE	F1	1A	1A	218 (5x20mm) SLOW BLOW 250 VAC, GLASS	F30100
NWR-IP1B MAINS METERING (INTERNAL)	F1	1A	1A	218 (5x20mm) SLOW BLOW 250 VAC, GLASS	F30100

- **A "(1)" indicates the routing for the G1000 Transmitters only.**
- **A "(4)" indicates the routing for the G300 & G100 Transmitters only.**
- **Common routing for all transmitters is identified by cable number only.**

CABLE		FROM	TO
1	(1)	TX1 -F.M.EXCITER -- R.F. OUTPUT	TX1-POWER COMBINER & SPLITTER -- INPUT
1	(4)	TX1 -F.M.EXCITER -- R.F. OUTPUT	TX1 -FM-500LCD (PA1) --RF INPUT
2	(1)	TX2 -F.M.EXCITER -- R.F. OUTPUT	TX2 -POWER COMBINER & SPLITTER -- INPUT
2	(4)	TX2 -F.M.EXCITER -- R.F. OUTPUT	TX2 -FM-500LCD (PA1)--RF INPUT
3	(1)	TX1 -POWER COMBINER & SPLITTER--OUTPUT 1	TX1 -FM-500LCD (PA1) --RF INPUT
4	(1)	TX1 -POWER COMBINER & SPLITTER--OUTPUT 2	TX1 -FM-500LCD (PA2)--RF INPUT
5	(1)	TX1 -POWER COMBINER & SPLITTER –OUTPUT 3	TX1 -FM-500LCD (PA3)--RF INPUT
6	(1)	TX2 -POWER COMBINER & SPLITTER--OUTPUT 1	TX2 -FM-500LCD (PA1)--RF INPUT
7	(1)	TX2 -POWER COMBINER & SPLITTER--OUTPUT 2	TX2 -FM-500LCD (PA2)--RF INPUT
8	(1)	TX2 -POWER COMBINER & SPLITTER--OUTPUT 3	TX2 -FM-500LCD (PA3)--RF INPUT
9	(1)	TX1 -FM-500LCD (PA1)--RF OUTPUT	TX1 -POWER COMBINER & SPLITTER--INPUT 1
10	(1)	TX1 -FM-500LCD (PA2)--RF OUTPUT	TX1 -POWER COMBINER & SPLITTER--INPUT 2
11	(1)	TX1 -FM-500LCD (PA3)--RF OUTPUT	TX1 -POWER COMBINER & SPLITTER --INPUT 3
12	(1)	TX2 -FM-500LCD (PA1)--RF OUTPUT	TX2 -POWER COMBINER & SPLITTER--INPUT 1
13	(1)	TX2 -FM-500LCD (PA2)--RF OUTPUT	TX2 -POWER COMBINER & SPLITTER--INPUT 2
14	(1)	TX2 -FM-500LCD (PA3)--RF OUTPUT	TX2 -POWER COMBINER & SPLITTER--INPUT 3
15	(1)	TX2- POWER COMBINER & SPLITTER-- OUTPUT	COAX SWITCH -- 4
15	(4)	TX1- FM-500LCD (PA1)--RF OUTPUT	COAX SWITCH -- 4
16		COAX SWITCH--1	CABINET TOP -- RF OUTPUT (BANDPASS FILTER)
17	(1)	COAX SWITCH --3	CABINET TOP -- RF OUTPUT (DUMMY LOAD)
17	(4)	COAX SWITCH --3	DUMMY LOAD INPUT
18	(1)	TX1 -POWER COMBINER & SPLITTER-- OUTPUT	COAX SWITCH --2
18	(4)	TX2 -FM-500LCD (PA1)--RF OUTPUT	COAX SWITCH --2
19		NOT USED	NOT USED
20		FWD PWR SAMPLE (CABINET TOP)	NWR INTERFACE PANEL--FWD PWR INPUT
21		RFL PWR SAMPLE(CABINET TOP)	NWR INTERFACE PANEL--RFL PWR INPUT
22		NWR INTERFACE PANEL-- ANALOG SCM	NWR-MC1 - SCM ---BALANCED ANALOG INPUT
23		NWR INTERFACE PANEL-- DIGITAL SCM	NWR-MC1 - SCM ---DIGIITAL/ANALOG INPUT
24		NWR INTERFACE PANEL--RELAY SCM	NWR-MC1 - SCM ---RLY OUTPUT
25		NWR INTERFACE PANEL-- ANALOG TLM 1	NWR-MC1 -TLM 1--- BALANCED ANALOG INPUT
26		NWR INTERFACE PANEL-- DIGITAL TLM 1	NWR-MC1 -TLM 1--- DIGITAL/ANALOG INPUT
27		NWR INTERFACE PANEL--RELAY TLM 1	NWR-MC1 -TLM 1--- RLY OUTPUT
28		NWR INTERFACE PANEL—ANALOG TLM 2	NWR-MC1 -TLM 2--- BALANCED ANALOG INPUT
29		NWR INTERFACE PANEL-- DIGITAL TLM 2	NWR-MC1 -TLM 2--- DIGITAL/ANALOG INPUT
30		NWR INTERFACE PANEL--RELAY TLM 2	NWR-MC1 -TLM 2--- RLY OUTPUT
31		NWR-MC1 SYSTEM CONTROLLER --- EXT 1	COAX RELAY
32		NWR INTERFACE PANEL--EXT 2 SCM	NWR-MC1 -- EXT 2
33		NWR-MC1 RS232	NWR INTERFACE PANEL-RS232 SCM
34	(1)	TX1- POWER COMBINER & SPLITTER --TELEMETERY CONNECTOR	NWR INTERFACE PANEL --HC/PA TXA
34	(4)	TX1- FM-500LCD-- TELEMETERY	NWR INTERFACE PANEL --HC/PA TXA
35	(1)	TX2 -POWER COMBINER & SPLITTER --TELEMETERY CONNECTOR	NWR INTERFACE PANEL-- HC/PA TXB
35	(4)	TX2 -FM-500LCD-- TELEMETERY	NWR INTERFACE PANEL-- HC/PA TXB
36	(1)	TX1- FM-500LCD (PA1)-- TELEMETERY	NWR INTERFACE PANEL-- PA1 TXA
37	(1)	TX1 -FM-500LCD (PA2)-- TELEMETERY	NWR INTERFACE PANEL-- PA2 TXA
38	(1)	TX1 -FM-500LCD (PA3)-- TELEMETERY	NWR INTERFACE PANEL-- PA3TXA
39	(1)	TX2 -FM-500LCD (PA1)-- TELEMETERY	NWR INTERFACE PANEL-- PA1 TXB
40	(1)	TX2 -FM-500LCD (PA2)-- TELEMETERY	NWR INTERFACE PANEL-- PA2 TXB
41	(1)	TX2 -FM-500LCD (PA3)-- TELEMETERY	NWR INTERFACE PANEL-- PA3TXB
42		CABINET TOP -- RF SAMPLE	NWR AUXILIARY PANEL--– RF SAMPLE
43	(1)	TX1 -F.M.EXCITER -- INTERLOCK	TX1 -POWER COMBINER & SPLITTER -- INTERLOCK
43	(4)	TX1 -F.M.EXCITER -- INTERLOCK	TX1- FM-500LCD (PA1) -- INTERLOCK
44	(1)	TX2 -F.M.EXCITER -- INTERLOCK	TX2 -POWER COMBINER & SPLITTER -- INTERLOCK
44	(4)	TX2 -F.M.EXCITER -- INTERLOCK	TX2- FM-500LCD (PA1) -- INTERLOCK
45		AUDIO SURGE PROTECTOR -- OUT 1	NWR AUXILIARY PANEL -- AUDIO IN
46		AUDIO SURGE PROTECTOR -- OUT 2	TX1- F.M.EXCITER --(audio) INPUT (1,2,3)
47		AUDIO SURGE PROTECTOR -- OUT 3	TX2 -F.M.EXCITER --(audio) INPUT (1,2,3)
48		TX1 -F.M.EXCITER -- REMOTE CONTROL	NWR AUXILIARY PANEL---TX1 EXCITER
49		TX2 -F.M.EXCITER -- REMOTE CONTROL	NWR AUXILIARY PANEL-- TX2 EXCITER
50		ROAMS-- I/O CONNECTOR	NWR AUXILIARY PANEL-- ROAMS
51		NWR INTERFACE PANEL -- INTERFACE PANEL	NWR AUXILIARY PANEL-- IN/OUT INTERFACE
52		NWR INTERFACE PANEL -- MODEM	MODEM – RS232C SERIAL PORT
53		CABINET TOP -- RF OUTPUT(BANDPASS FILTER)	BANDPASS CAVITY -- RF INPUT
54	(1)	CABINET TOP -- RF OUTPUT(DUMMY LOAD)	DUMMY LOAD -- INPUT
55		DIRECTIONAL COUPLER -- FWD PWR SAMPLE	CABINET TOP -- FWD PWR SAMPLE
56		DIRECTIONAL COUPLER -- RFL PWR SAMPLE	CABINET TOP -- RFL PWR SAMPLE
57		DIRECTIONAL COUPLER -- RF SAMPLE	CABINET TOP -- RF SAMPLE
58-79		NOT USED	NOT USED
80	(1)	TX1 -POWER COMBINER & SPLITTER -- AUX OUT A.C. LINE	TX1 -F.M.EXCITER -- MAINS VOLTAGE
80	(4)	TX1-FM-500 LCD -- AUX OUT A.C. LINE	TX1 -F.M.EXCITER -- MAINS VOLTAGE
81	(1)	TX2 -POWER COMBINER & SPLITTER -- AUX OUT A.C. LINE	TX2 -F.M.EXCITER -- MAINS VOLTAGE
81	(4)	TX2-FM-500 LCD -- AUX OUT A.C. LINE	TX2 -F.M.EXCITER -- MAINS VOLTAGE
82		CIRCUIT BREAKER – TX1 PAI IB BOX	TX1- FM-500LCD (PA1)-- MAINS VOLTAGE
83	(1)	CIRCUIT BREAKER – TX1 PA2 IB BOX	TX1-- FM-500LCD (PA2)-- MAINS VOLTAGE
84	(1)	CIRCUIT BREAKER – TX1 PA3 IB BOX	TX1- FM-500LCD (PA3)-- MAINS VOLTAGE
85		CIRCUIT BREAKER – TX2 PAI IB BOX	TX2- FM-500LCD (PA1)-- MAINS VOLTAGE
86	(1)	CIRCUIT BREAKER – TX2 PA2 IB BOX	TX2 -FM-500LCD (PA2)-- MAINS VOLTAGE
87	(1)	CIRCUIT BREAKER – TX2 PA3 IB BOX	TX2 -FM-500LCD (PA3)-- MAINS VOLTAGE
88	(1)	CIRCUIT BREAKER -- TX1 HC & EXC IB BOX	TX1- POWER COMBINER & SPLITTER -- MAINS VOLTAGE
89	(1)	CIRCUIT BREAKER -- TX2 HC & EXC IB BOX	TX2 -POWER COMBINER & SPLITTER -- MAINS VOLTAGE
90		CIRCUIT BREAKER---CONTROL	NWR-MC1 SYSTEM CONTROLLER – MAINS VOLTAGE
91		TX1 MAIN AC INPUT	NWR INTERFACE PANEL -- MAINS 1
92		TX2 MAIN AC INPUT	NWR INTERFACE PANEL -- MAINS 2
93		CIRCUIT BREAKER---CONTROL	NWR AUXILIARY PANEL-- MAINS INPUT
94		MODEM --- PHONE	ROAMS --- I/O CONNECTOR (PINS 11,12)