



R6

Multifunctional
Dashcam & Action Cam



USER MANUAL

User **GUIDE**



Safety Information

Before using this product, please read this manual carefully and keep it for future reference.



Important Notice

This product is a dash cam and action camera. Please use it properly according to this manual. Improper use may cause product damage, affect product performance, or even result in danger.



Do Not



To ensure the safety of yourself and others, always pay attention to your surroundings while using this product and avoid distractions caused by operating the device.



Do not disassemble, repair, or modify this product by yourself to avoid damage or voiding the warranty.



When the product is not in use, do not leave it exposed to direct sunlight for extended periods or place it in high-temperature environments.



Do not immerse this product in water or use it in environments exposed to high-pressure water jets.



Do not use non-original chargers or damaged charging cables to avoid battery damage or potential hazards.



Precautions



Fully charge the device before first use. A 5V / 2A or lower charger is recommended.



Please use a compatible microSD card. (Class 10 or above is recommended.)



Before installation, make sure the mounting base is securely installed to prevent the product from falling off while driving.



Please check and clean the lens regularly to ensure clear recording footage.



If the product is not used for an extended period, it is recommended to charge it once every three months to maintain battery performance.



Waterproof Information



The main unit is rated IP65, providing dust protection and water resistance.



Improper installation of waterproof accessories or an incompletely secured cover may reduce water resistance. Please make sure all parts are properly installed before use.



Battery Safety Information



Do not dispose of the product in fire or place it near high-temperature heat sources.



Do not disassemble, puncture, crush, or modify the product.



Keep the product out of reach of children.



When disposing of the product, please recycle it according to local regulations.



Disclaimer

The recorded footage produced by this product may be affected by environmental conditions or device settings. The company is not responsible for any loss of footage or failure to record.

The company reserves the right to modify product specifications and contents without prior notice.

CONTENTS



Thank you for purchasing this product. Please read this user manual carefully before use to ensure proper operation and achieve the best performance.

※ Click the icon of each chapter to quickly jump to the corresponding page.

	01 Safety Information ——— 02		07 APP Overview ——— 11 AiRide Cam
	02 Contents ——— 03		08 Specifications ——— 12
	03 Package Contents ——— 04		09 FAQ & ——— 13 Troubleshooting
	04 Product Overview ——— 05		10 Maintenance & ——— 15 Precautions
	05 Installation ——— 06		11 Warranty ——— 17
	06 Getting Started ——— 09		12 Regulatory ——— 18 Information

Friendly Reminder



The illustrations and screenshots in this manual are for reference only. The actual product appearance and functions may vary due to version updates. The company reserves the right to modify product specifications and contents without prior notice.



Package Contents





[Back to Contents](#)

Please check that the package contains the following items.


R6 Main Unit × 1

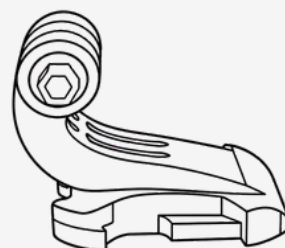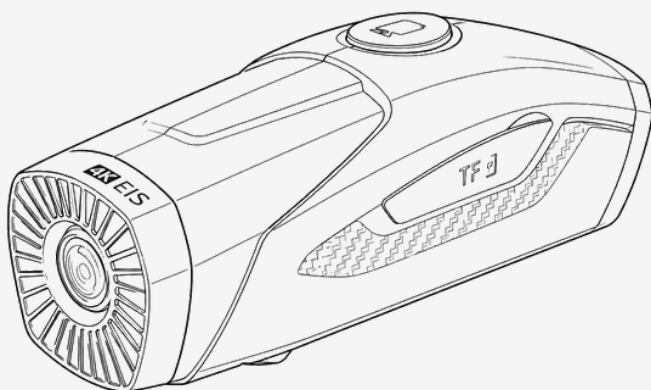


Helmet Mount
× 1




Mounting Base
× 1

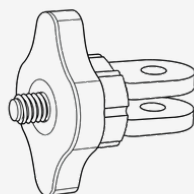


Camera Adapter
× 1

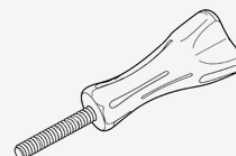

Long Screw
× 1

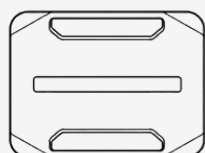

Helmet Mounting Base
× 1



Waterproof USB Type-C
Charging Cable
× 1



Notice


If any accessories are missing, please contact the dealer immediately.

Product Overview




[Back to Contents](#)


Top View

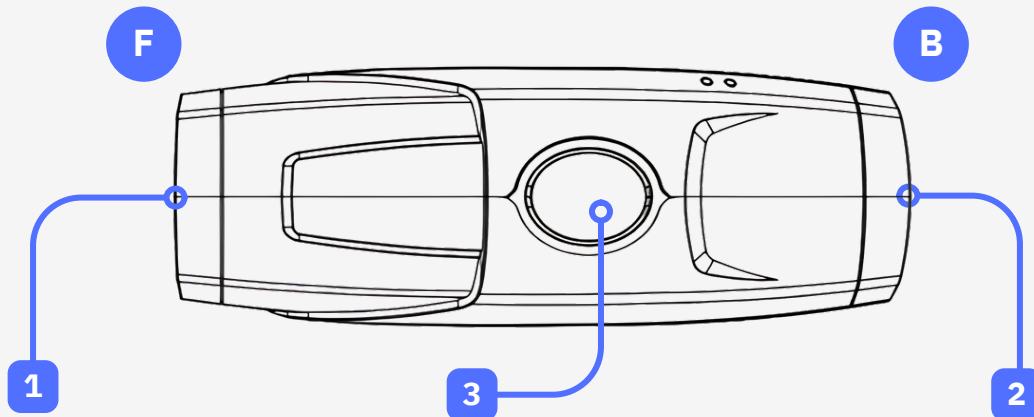

Left View

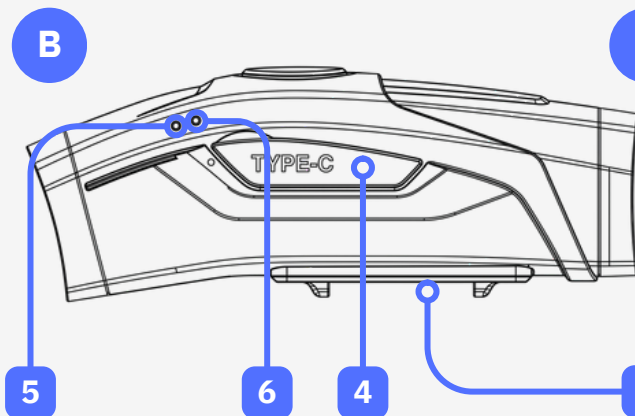

Right View

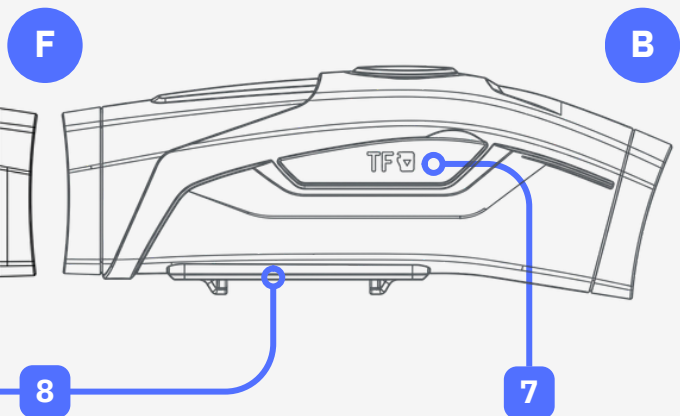



- | | |
|--|---|
| 1 Front Camera | 5 Recording /
Wi-Fi Indicator Light |
| 2 Rear Camera | 6 Charging Indicator Light |
| 3 Power Button | 7 microSD Card Slot |
| 4 Charging Port /
Reset Button | 8 Base |

Installation








[Back to Contents](#)



How to Install on the Top of a Helmet.

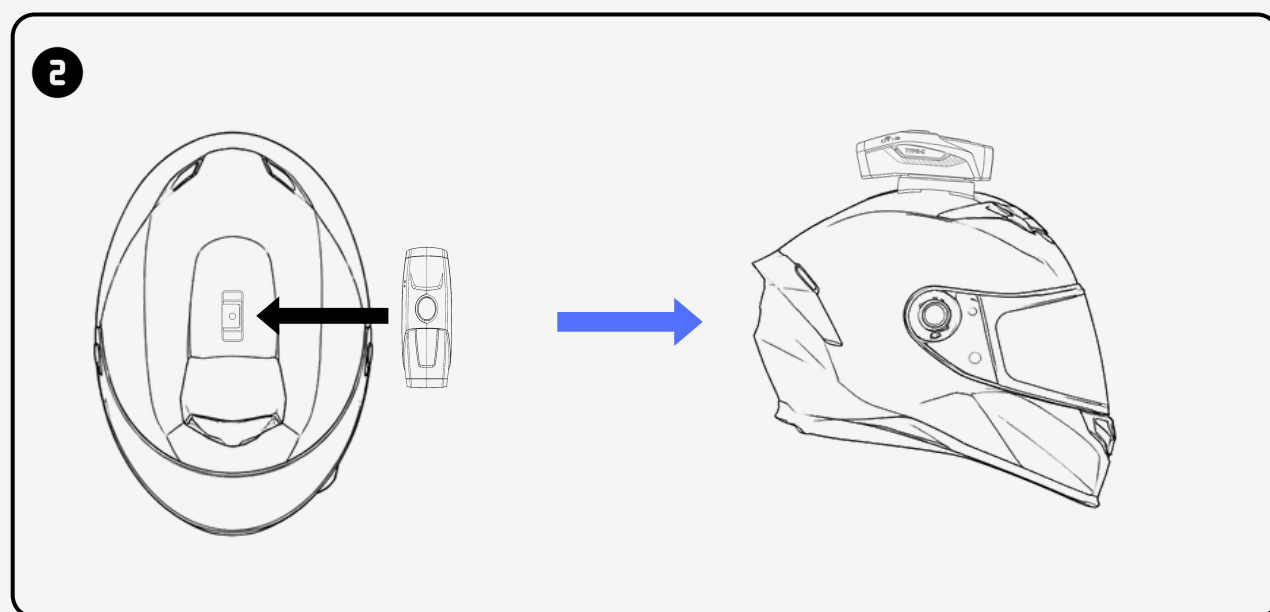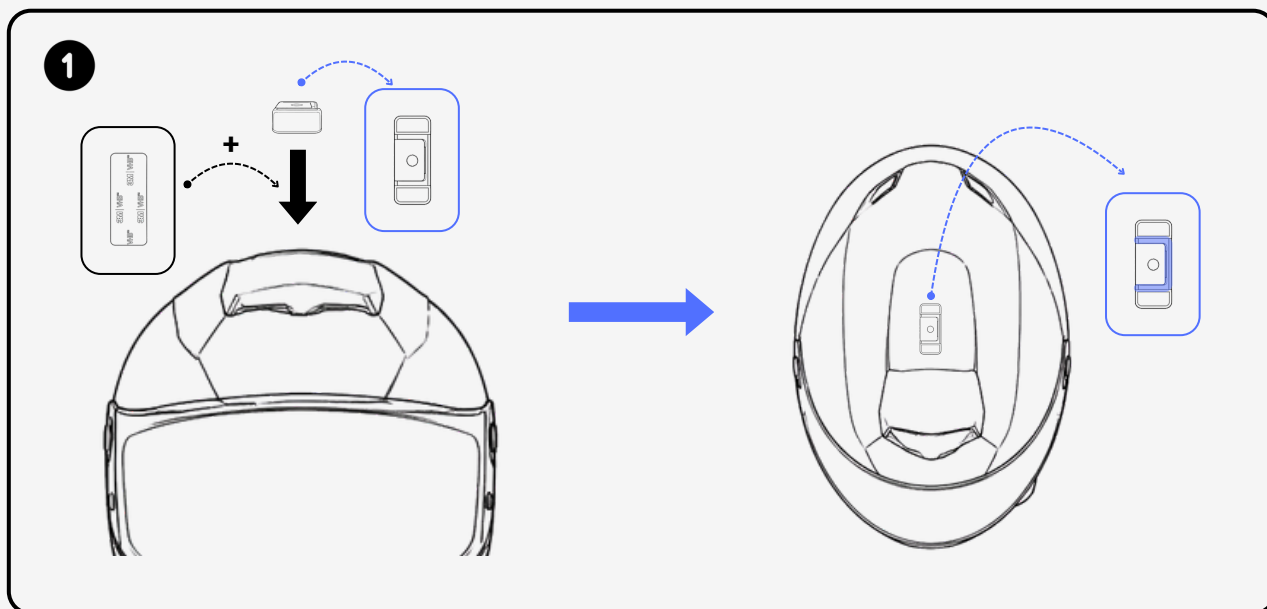

How to Install on the Side of a Helmet.

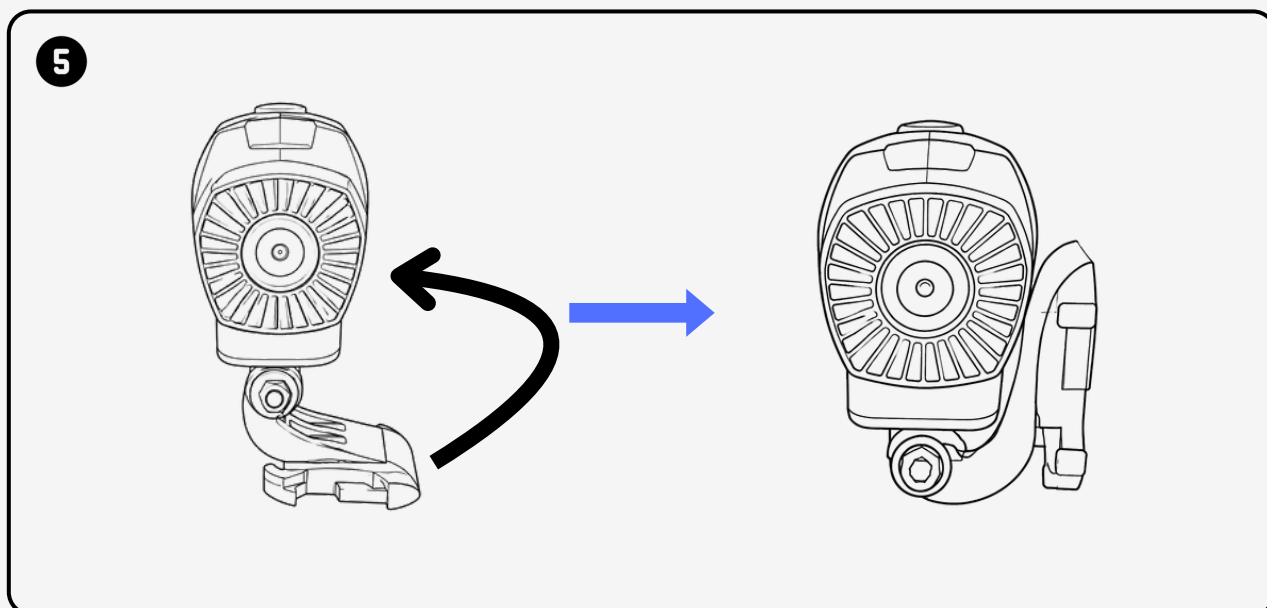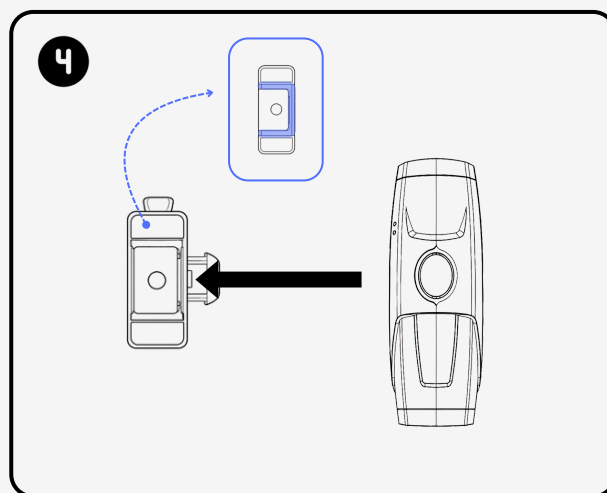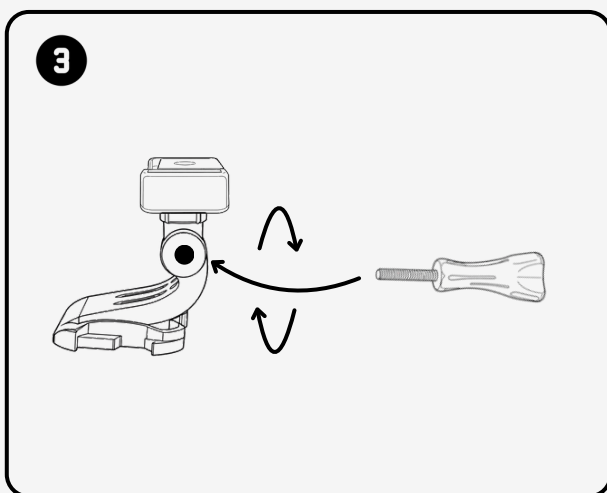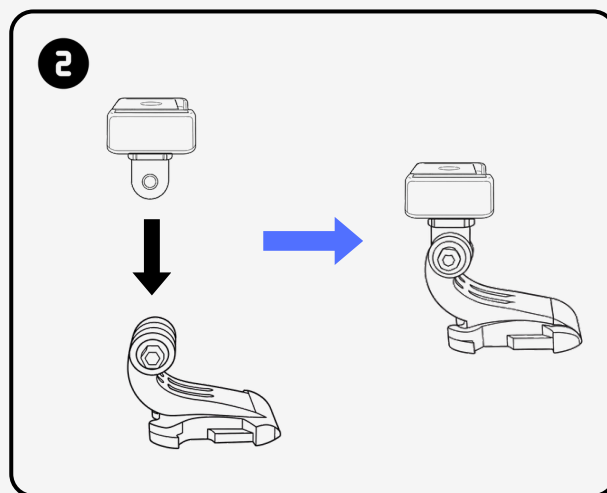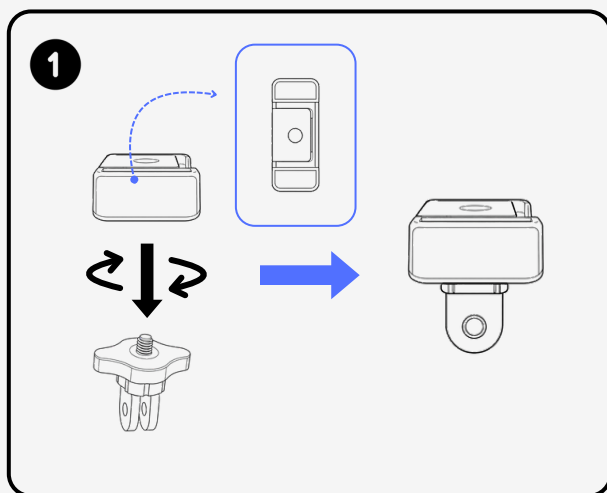

How to Install on the Side of a Helmet.

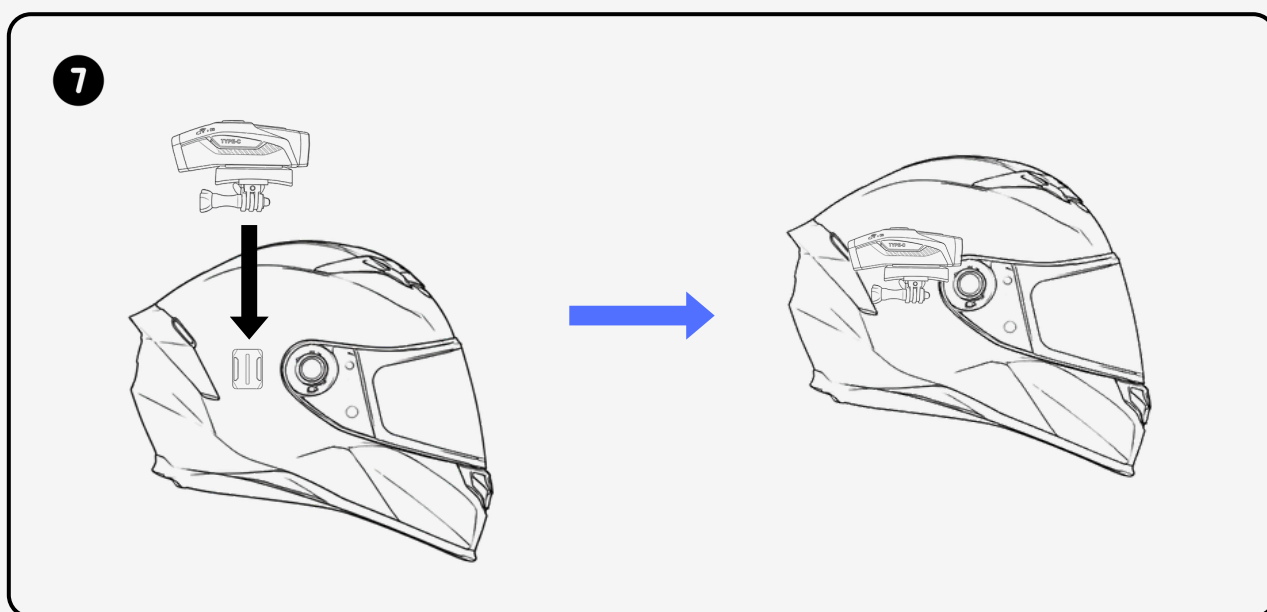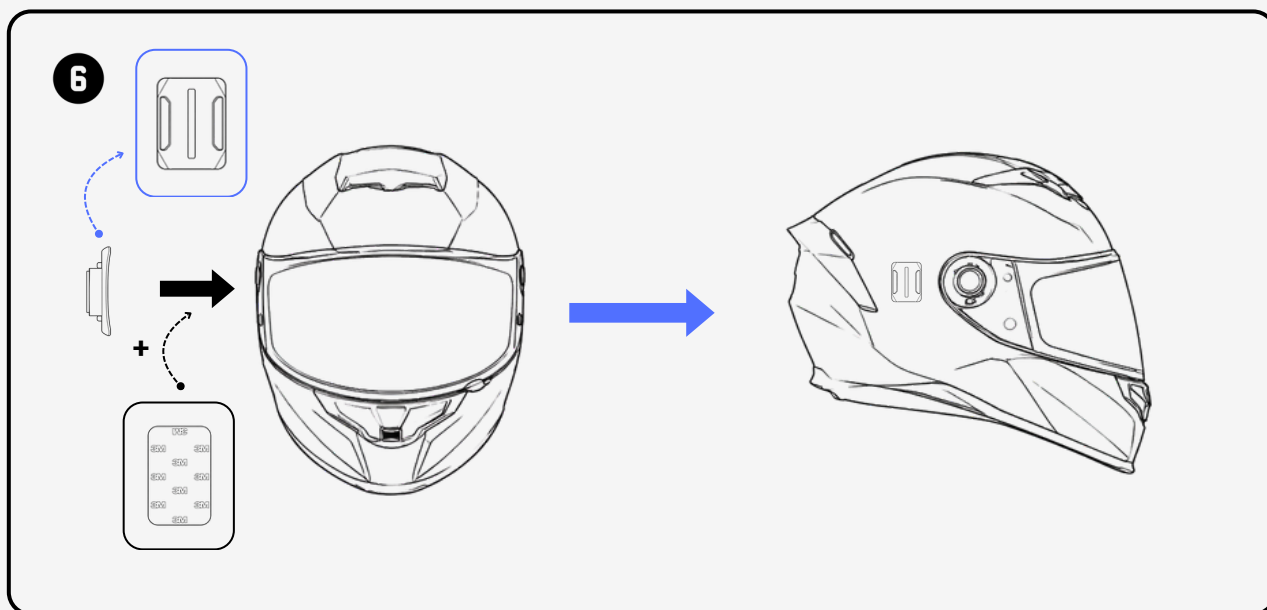

Getting Started



[Back to Contents](#)

Power On / Off, Enable Wi-Fi connection to a smartphone, and switch between Single Recording / Dual Recording modes.


※ **Please insert a memory card before use. The product will not function properly without a memory card.**

01 Power On / Off

Press and hold the **【Power Button】** for 2 seconds to power on / off the device.

- Power On: The device vibrates twice, and the **【Power Button】** flashes red.
- Power Off: The device powers off after vibrating for 3 seconds.

※ **Recording starts automatically after the product is powered on. To pause recording or adjust settings, please operate through the APP.**

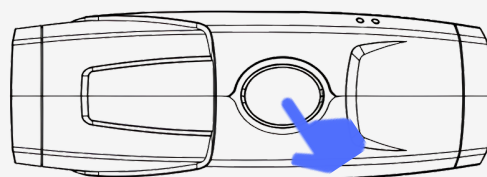

Hold 2 sec

02 Enable Wi-Fi


After powering on, press the **【Power Button】** once to enter Wi-Fi mode.

- Wi-Fi Enabled: The **【Recording / Wi-Fi Indicator Light】** flashes blue rapidly.
- Wi-Fi Connecting: The **【Recording / Wi-Fi Indicator Light】** flashes blue slowly.
- Wi-Fi Connected: The **【Recording / Wi-Fi Indicator Light】** stays solid blue.

Wi-Fi Connection:

1. Open the Wi-Fi settings on your smartphone and enable WLAN.
2. Select the device name: R6_XXXXXX.
3. Enter the password: 12345678, and confirm the connection.

After the connection is successful, open the APP to use the device.

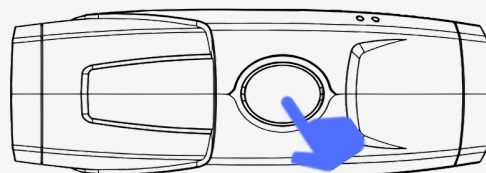

Press once



| Getting Started




[Back to Contents](#)

03 Single / Dual Recording Switch

After powering on, press the **【Power Button】** twice to switch recording modes.


- Single Recording Mode: The **【Power Button】** flashes red.
- Dual Recording Mode: The **【Power Button + Recording / Wi-Fi Indicator Light】** flashes red.

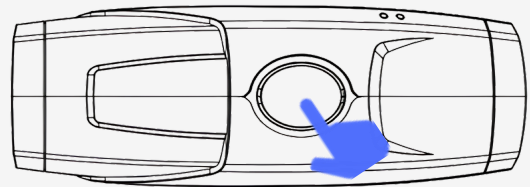

Press twice

APP Overview

AiRide Cam



[Back to Contents](#)

Download APP

Tap the icon or scan the QR Code to download and install the APP.



AiRide Cam



Click to Download



Scan QR Code

Main APP Features



Live Preview

View Recorded
Footage in Real Time



Recording Control

Start / Stop Recording



File Management

View / Download / Delete



Resolution Settings

Adjust Video Resolution



Loop Settings

2 / 3 / 5 Minutes



File Format

MOV / TS

Function Description

- Video Resolution: Select the resolution of recorded videos.
- EV Adjustment: Adjust the exposure brightness.
-1: Darkest, +1: Brightest.
- Loop Recording Duration: Set the length of each video file.
Available options: 2 min / 3 min / 5 min.
- Recording: Select whether to enable or disable audio recording during video recording.
- Date / Time Stamp: Select whether to display the date / time watermark on recorded videos.
- File Format:
MOV: Saves recorded videos in MOV format.
TS: Saves recorded videos in TS format.
- Format microSD Card: When this option is selected, the device will format the memory card while updating the configuration file.

Specifications



[Back to Contents](#)

Main Features

- Recording Mode: Front and Rear Dual Recording
- Protection Rating: IP67 Dustproof and Waterproof
- Auto Start/Stop: Starts recording while moving, powers off after about 3 minutes of inactivity
- Dimensions: L128 × W38 × H38 mm
- Operating Temperature: -20°C to +70°C

Video Recording

- Single-Camera Recording: Up to 4K UHD 30FPS
- Single-Camera Recording: 2K 60FPS
- Single-Camera Recording: 1080P 60FPS
- Dual-Camera Recording: 2K 30FPS + 2K 30FPS
- Dual-Camera Recording: 1080P 60FPS + 1080P 60FPS

Lens & Functions

- Field of View: 120°
- Lens: 6G / F1.8 Aperture
- Audio Recording: Mono Recording with Noise Reduction
- Emergency Lock: Built-in G-Sensor
- Wireless Connection: 5G Wi-Fi

Storage & Battery

- Memory Card: Supports up to 256GB microSD
- Recommended Speed Class: U3 or Above
- Video Encoding: H.264 / H.265
- Video Format: MP4 / TS
- Battery Capacity: 2000mAh, Fast Charging Supported
- Battery Life: Up to approx. 300 minutes in single 4K mode, approx. 240 minutes in dual 2K mode

FAQ & Troubleshooting



[Back to Contents](#)

Q1. Unable to Power On

- Please check whether the battery has sufficient power. It is recommended to charge for at least 30 minutes.
- Press and hold the **【Power Button】** for approximately 3 seconds to restart the device.

Q2. Unable to Record

- Please check whether a microSD memory card is installed.
- A U3 or higher speed class microSD card is recommended.
- When the memory card is full, format the card or delete files before recording again.

Q3. Unable to Connect to APP

- Please confirm that the camera Wi-Fi function is enabled.
- Select the camera's Wi-Fi name from the smartphone Wi-Fi list.
- If connection still fails, close the APP and restart it before trying again.

Q4. Wi-Fi Not Found

- Please confirm that the camera Wi-Fi function is enabled.
- The connection may fail if the camera and smartphone are too far apart. Keep them within 5 meters.
- Restart the camera and try again.

Q5. Blurry Image

- Check whether there is dust or dirt on the lens surface. Use a clean and soft lens cloth for cleaning.
- Confirm that the lens protective film has been removed.
- Check for water droplets on the lens and wipe dry before use.

Q6. Unable to Charge

- Please confirm that the charging cable is an original accessory and properly connected.
- It is recommended to use a 5V / 2A or lower charger.
- Make sure the charging port is free of foreign objects or moisture and keep it dry.

FAQ & Troubleshooting



[Back to Contents](#)

Q7. Memory Card Not Recognized

- A microSD card with U3 or higher speed class is recommended.
- Confirm that the memory card is properly inserted.
- Format the memory card in the camera before use.

Q8. Recording Stops Automatically

- The memory card write speed may be insufficient. A U3 or higher speed class card is recommended.
- Check whether the memory card is full.
- Overheating may cause recording to stop. Allow the camera to cool down before use.

Maintenance & Precautions



[Back to Contents](#)

Operating Environment

- Use this product in an environment between -20°C and +70°C.
- When not in use, avoid prolonged exposure to high temperatures or direct sunlight.
- Keep the product away from fire, heaters, and other high-temperature sources.

Safety Precautions

- Before use, confirm that the product and accessories are properly installed.
- Always remain focused on road safety or the surrounding environment when using this product.
- Do not operate the product in a way that distracts you while driving, riding, or during other high-risk activities.
- Do not disassemble, modify, or repair the product by yourself.

Waterproof Information

- The main unit is rated IP65 for dust and water resistance.
- Do not immerse the product in water for extended periods or spray it directly with high-pressure water.
- Ensure the waterproof cover is completely closed before use.
- Do not use the product in wet or rainy conditions if waterproof accessories are not properly installed.

Battery and Charging

- This product uses a built-in lithium battery. Do not disassemble or replace the battery.
- Use a 5V / 2A or lower power adapter for charging.
- Keep the charging port dry during charging.
- If the product will not be used for an extended period, charge it once every 3 months.

Memory Card

- A microSD Class 10 / U3 or higher speed class memory card is recommended.
- Format the memory card in the product before first use.
- Turn off the power before inserting or removing the memory card.
- Do not remove the memory card while recording to avoid data loss.

Maintenance & Precautions



[Back to Contents](#)

Cleaning and Maintenance

- Use a soft, dry cloth to clean the product surface.
- Do not use alcohol, thinner, or corrosive cleaning agents.
- If the product has been exposed to seawater, rinse the exterior with fresh water and dry completely before storage.

Stored Data

- Back up important videos regularly.
- Formatting the memory card will erase all data. Please complete a backup before formatting.
- This product cannot guarantee recovery of all deleted files.

Warranty



[Back to Contents](#)

Warranty Period

This product comes with a one-year limited warranty from the date of purchase (subject to the warranty policy of each region's distributor).

To request warranty service, please provide proof of purchase (such as invoice, order record, or warranty card) to verify warranty eligibility.

Warranty Coverage

Under normal use conditions, failures caused by defects in materials or workmanship are eligible for free inspection and warranty service during the warranty period.

The following conditions are not covered under warranty

- Damage caused by improper use or failure to follow this manual.
- Damage caused by human factors (drops, impacts, pressure, water damage, etc.).
- Product disassembly, modification, or repair by unauthorized persons.
- Failures caused by the use of non-original accessories, chargers, or incompatible devices.
- Damage caused by natural disasters, fire, flooding, lightning, or other force majeure events.
- Cosmetic wear, scratches, or other damage that does not affect product functionality.

Repair Service

For products beyond the warranty period or conditions not covered by warranty, you may still contact the original retailer or customer service center for inspection and repair. Related costs will be quoted based on the actual inspection results.

Contact Information

For product support, warranty requests, or repair services, please contact the original retailer or visit the official website for the latest information.

Need Help?



Official Website:

www.iride.com.tw



Email :

summitech2014@gmail.com



J-TREK & IRIDE



J-TREK & IRIDE



@summitech2014

※ **Customer Service Hours: Monday to Friday, 10:00–18:00**
(Service unavailable on national holidays and weekends)



※ Warranty terms may vary depending on the region or distributor policy. Please refer to the warranty terms provided by the original place of purchase.
※ The company reserves the right of final interpretation and modification of product specifications, functions, accessories, and warranty terms without prior notice.

Regulatory Information



[Back to Contents](#)

FCC Notice

(Applicable to Low-Power RF Devices)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

EU Declaration of Conformity

Hereby, iRide & J-TREK declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.iride.com.tw

技適マークに関する注意事項（低出力無線設備）

1. 技術基準適合証明について

本製品は、電波法に基づく技術基準適合証明を取得しています。

2. 使用上の注意（電波法に関する警告）

本製品を分解または改造して使用することは、電波法により禁止されています。

分解または改造した場合、技術基準適合証明が無効となり、電波法違反として罰せられることがありますので、絶対に分解・改造しないでください。

NCC 低功率射頻器材技術規範

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前述合法通信，指依電信管理法規定作業之無線電通信。

低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。