B.One Door Sensor

Model: (B1SS02-ZW-IN)

All Things. Be One®

USER MANUAL

Table Of Contents

1. Important Safety Information

Before using B.One Door Sensor, please read the following information to avoid any potential dangers:

1. Read the instructions in this manual carefully.

2. Disconnect the device from power source before cleaning. Clean device with a damp cloth, do not use detergents.

3. Keep out of reach of children.

4. Under no circumstances should you open the device. This must only be carried out by a qualified engineer.

5. Do NOT turn ON/OFF the device with wet hands due to risk of electric shock.

2. B.One Door Sensor

Suitable for any door or window, the B.One Door Sensor has been engineered to make your home smarter. The Door Sensor detects the opening and closing of any door or window to which it is fixed. It is powered by 2 AAA batteries. It can communicate with an associated Z-Wave controller/gateway or a Z-Wave device such as Siren, Smart Switch etc.

3. Key benefits of B.One Door Sensor

- Z-Wave Plus certified for wide compatibility (500 series of products).

- B.One Door Sensor improves your security system. Monitoring your entrances 24/7, this sensor can detect when a door or window has been opened. If your connected alarm is armed, the sensor will alert your smart phone immediately.

- Easy Installation. Use double-sided tape to stick this sensor on windows or doors, Can be easily moved from place to place as needed.

- The sensor has a in-built tamper switch. The sensor sends notifications to the connected controller/gateway if tampered with.

- Get real time alerts to your smart device when a door or window is opened or closed.

- Batteries used in the door sensor last upto 1 year. The sensor notifies the user when the battery is low.

- Supports OTA firmware updates.

4. LED indication on B.One Door Sensor

- **Blue Light:** Blue light blinks when door/window is opened or closed or when the sensor is tampered with.

5. Items Included in the Box

B.One Door Sensor, 2xAAA Batteries, User Manual.

6. Technical Specifications of B.One Door Sensor

Power supply	Two AAA 1.5V Batteries
Storage environment	-10~50°C, 0%~90% RH
Operating Temperature	0~40°C
Radio Protocol	Z-Wave Plus
Radio Frequency	908.42MHz(US) 868.42MHz(EU) 921.42MHz(AU)
Range	More than 100m outdoors about 30m indoors
dimensions	75 x 28 x 18mm, Magnet: 75 x 12 x 18mm
Working Current	About 60mA
Standby current	About 30uA

7. B.One Edge App

B.One Edge App lets you manage your home from anywhere, anytime. Manage your home security, energy, comfort and IR remote controlled electronic devices from anywhere in the world with one simple B.One Edge App.

Supports over 110 devices and all prominent wireless protocol standards

You can download the B.One Edge App from the Play Store or App Store

Play Store Url: https://bit.ly/2n7F4wd   App Store Url: https://apple.co/2lCyKwo

B.One Edge App allows you to do the following:

- Add Devices and create Actions across different devices.

- Provide access to Family and Friends to enable control of your devices.

- Control your connected Devices from anywhere.
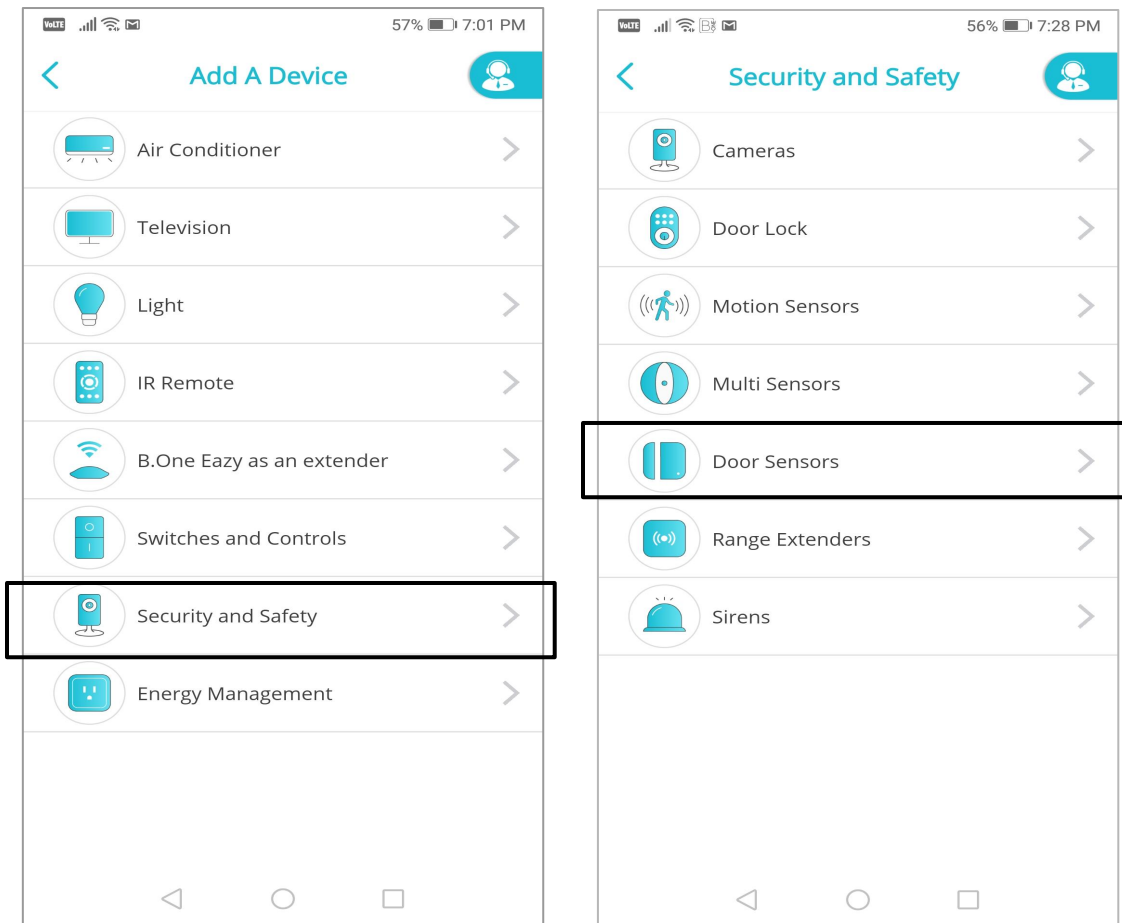
For detailed information, please visit http://support.b1hub.com/application/

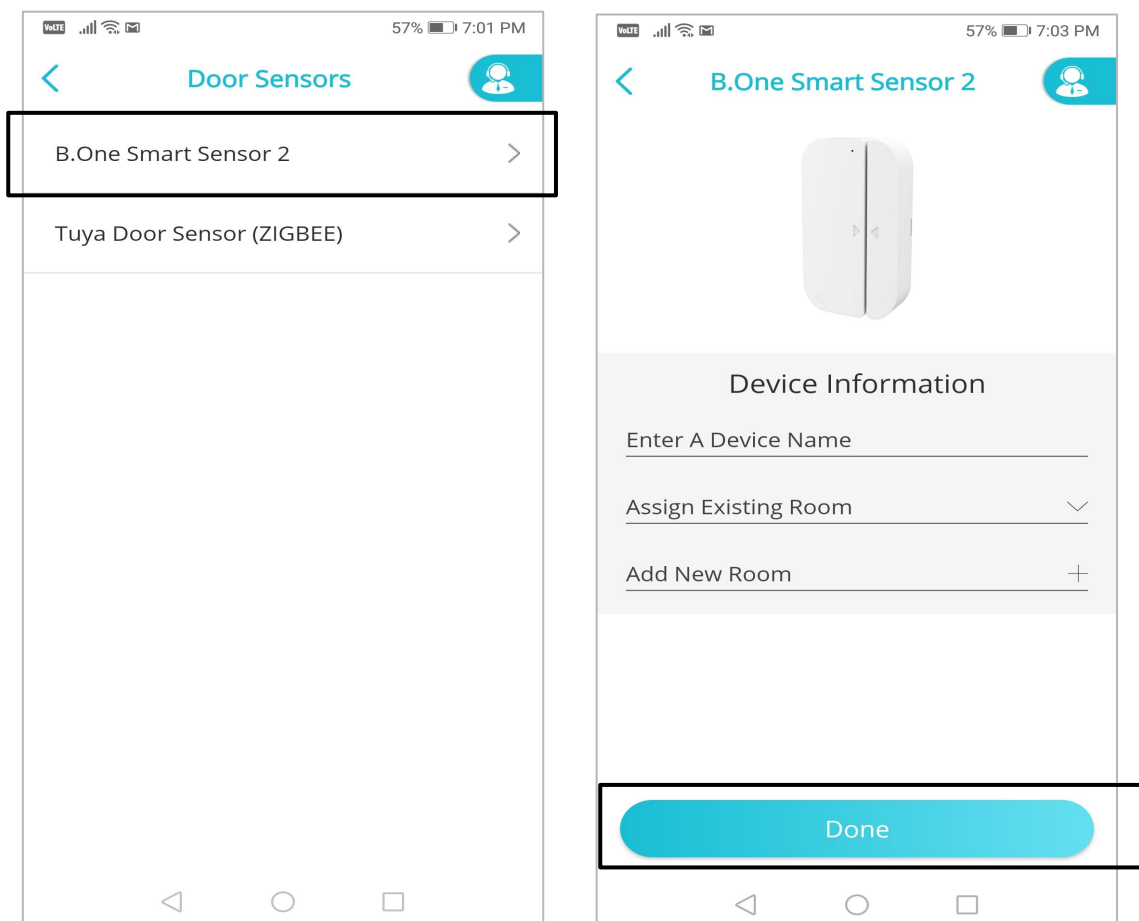# 8. Setting up B.One Door Sensor in B.One Edge App

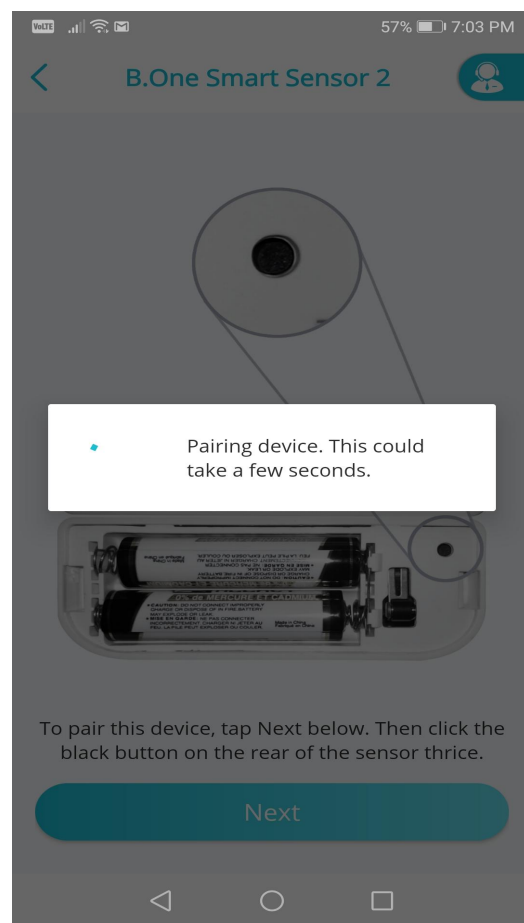In the B.One Edge App:

- Tap on Devices. Select Add Device.
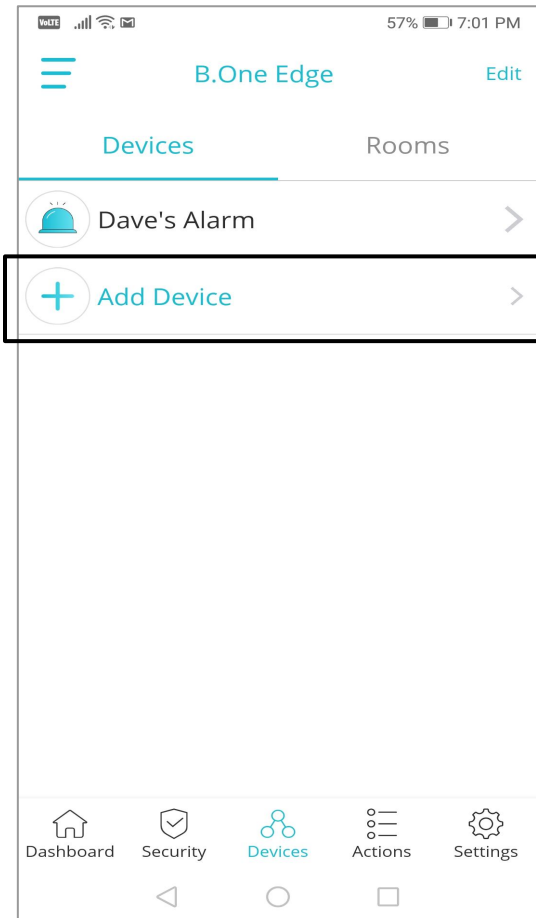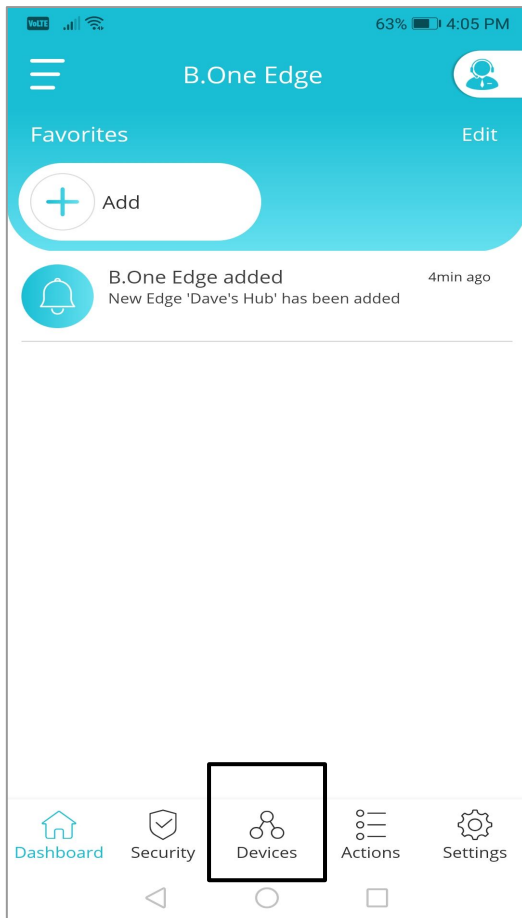
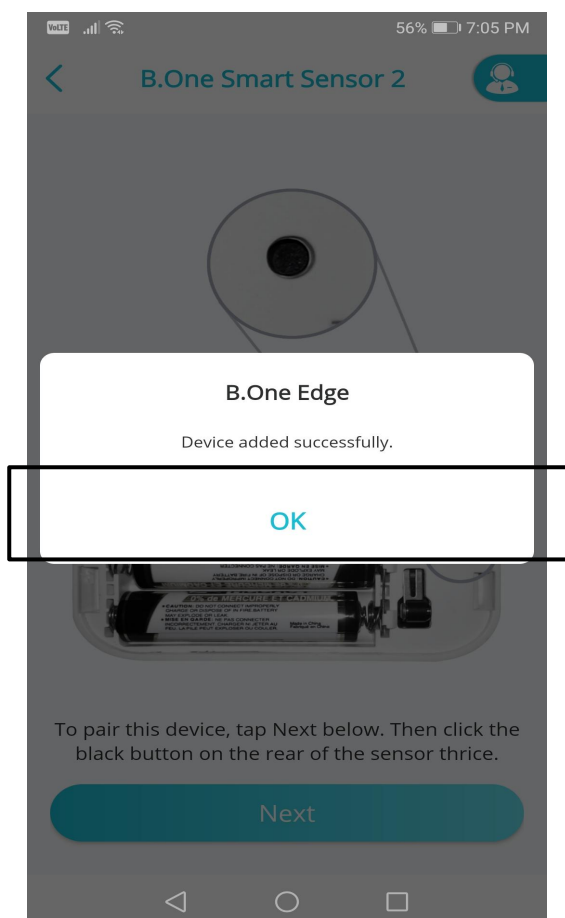● Tap on **Security and Safety**, tap on **Door Sensors**.

● Tap on **B.One Smart Sensor2 .** Enter the device information and tap **Done**.

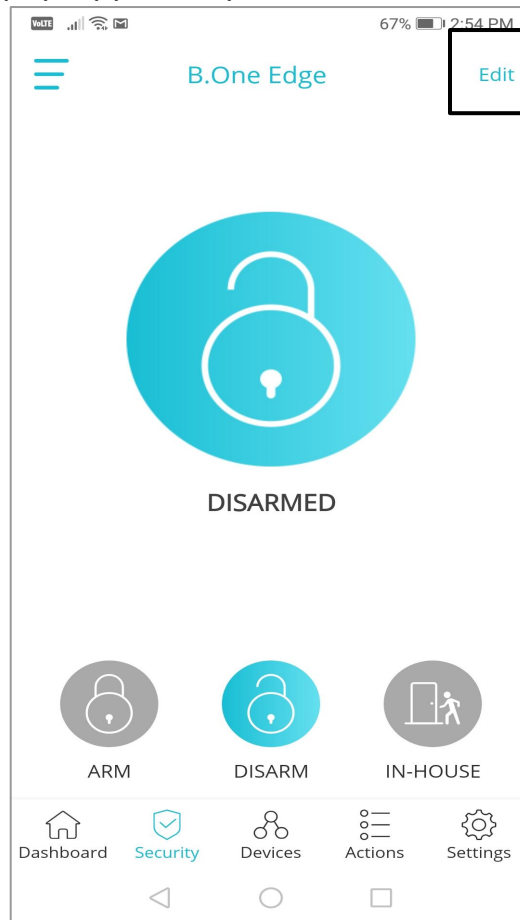● Tap **Next** & press the button thrice located on the rear of the door sensor.
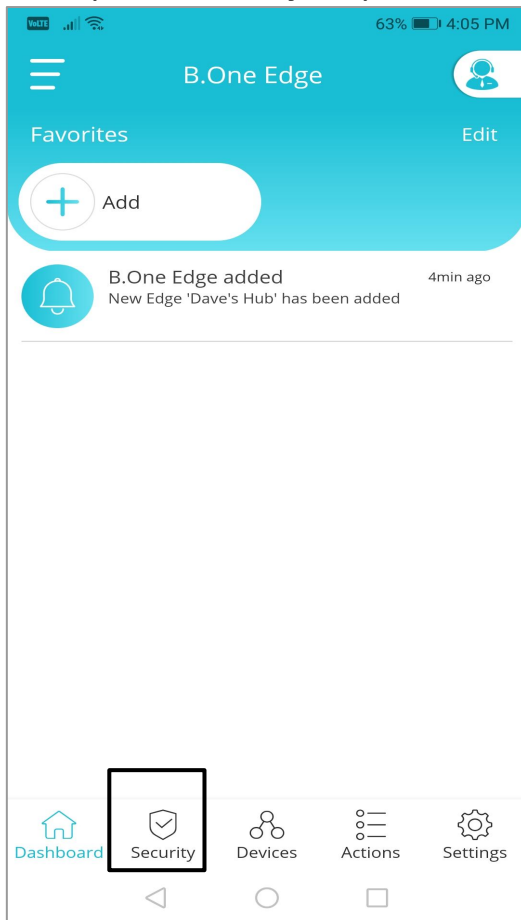

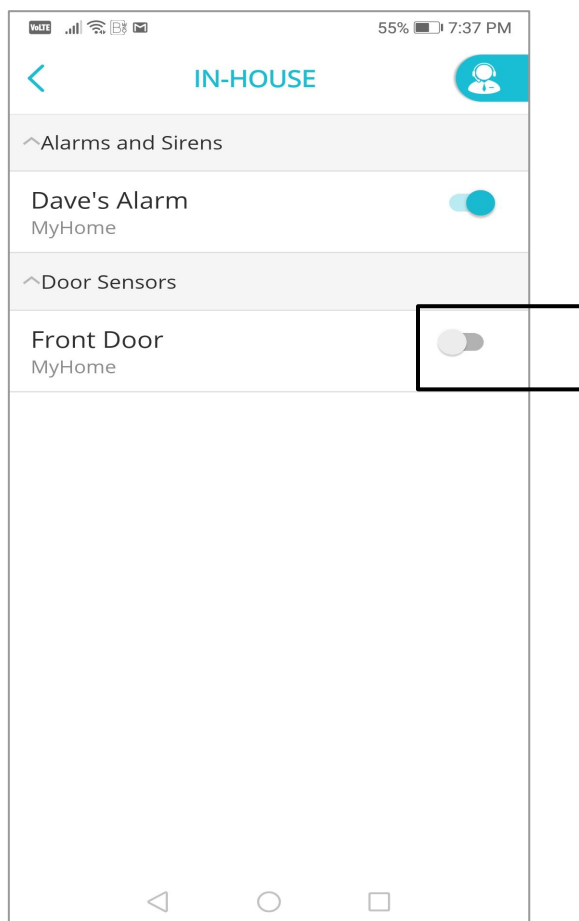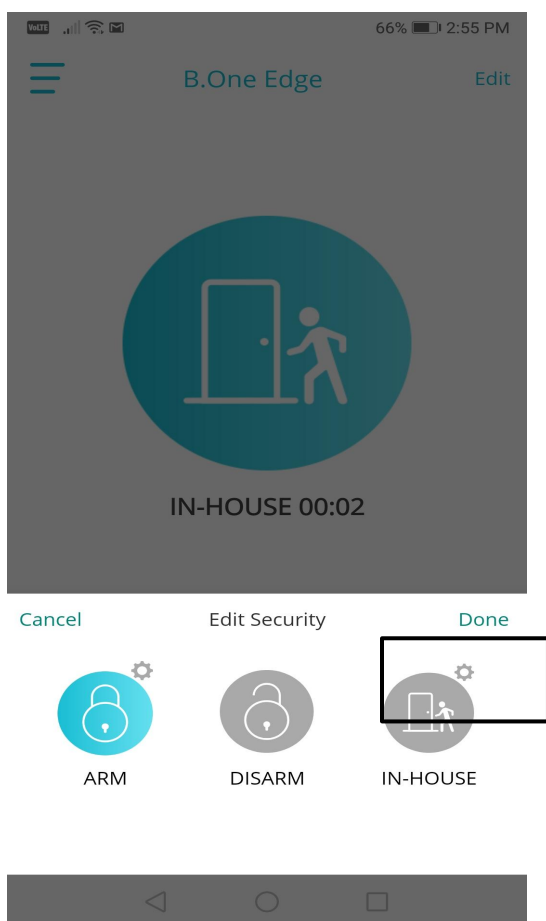● A popup appears Device added successfully. Tap **OK**

9. Linking B.One Door Sensor to In-House Security

- Open B.One Edge App
- Tap on **Security**. Tap In-House, a popup appear tap OK. Select **Edit** on top right

- Tap on **Settings** icon above in-house icon & enable the desired device.

- **Device Tamper Alert Feature**
  The device tamper feature in the B.One Door Sensor sends a notification to your phone when the device setup is tampered. To reset tamper condition, user must switch to Disarm mode and then Arm mode in **Security** tab of B.One Edge App.
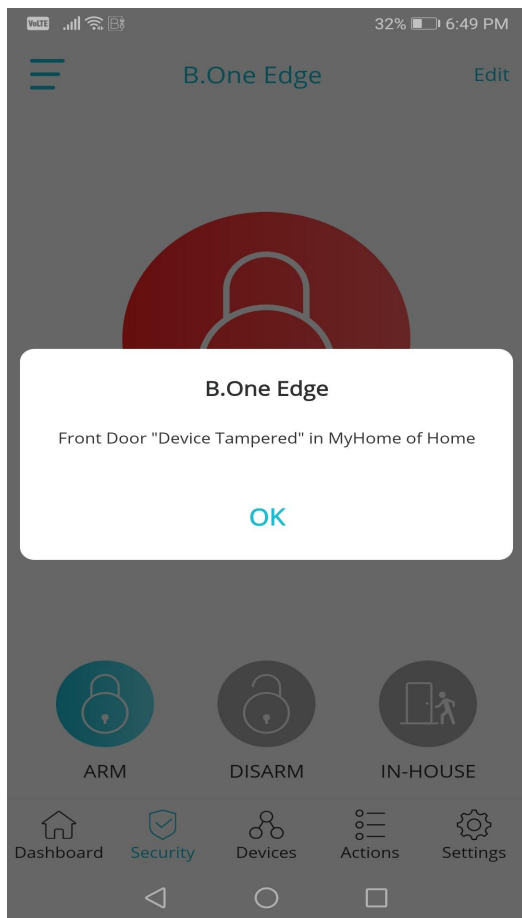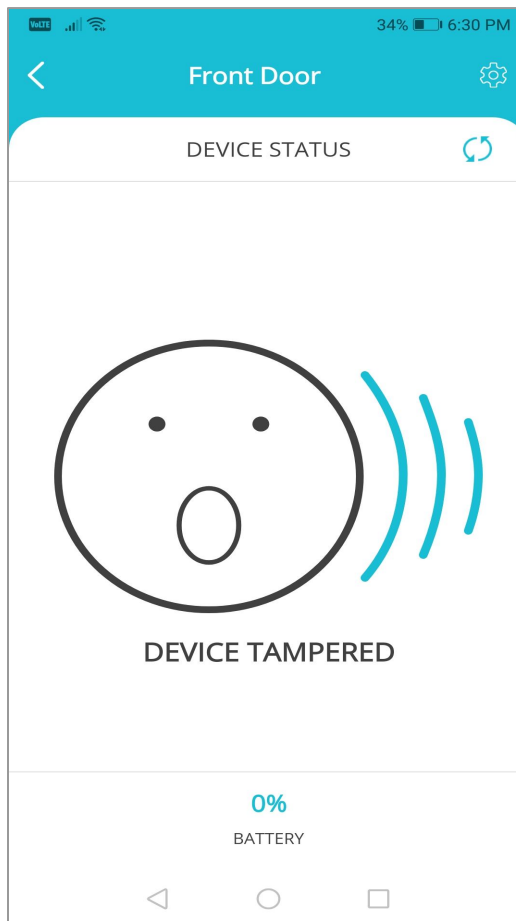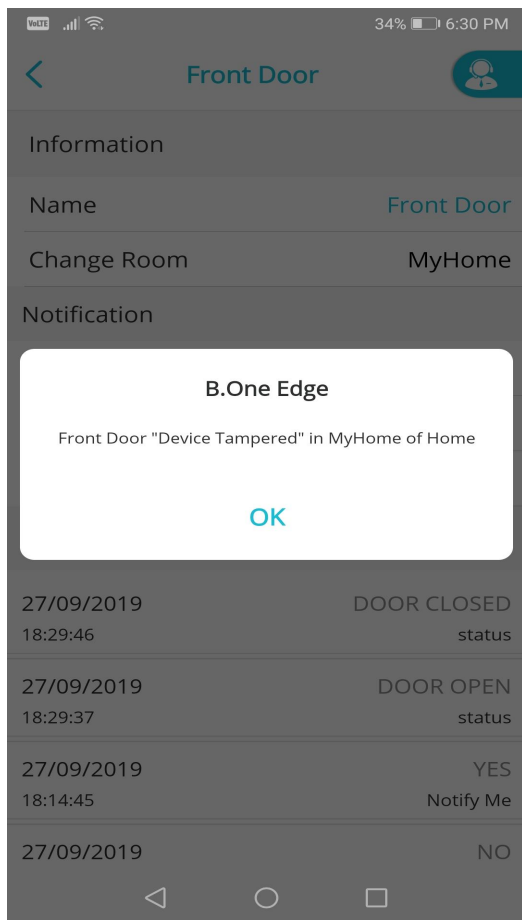
FAQs

1. **How does the B.One Door Sensor work ?**

   User needs to enable Security mode to either Armed Mode or In-House Mode. The door sensor will be activated when an activity such as door open, door close or device tampered is detected.

2. **How do I activate/deactivate Door Sensor from alarming?**

   Open B.One Edge App, tap **Security,** tap edit at the top right corner. Now, tap settings icon next to in-house mode icon. Use the toggle switch to turn ON/OFF

3. **How to delete B.One Door Sensor?**

   Open B.One Edge App, tap on **Devices**. Tap on **Edit** at the top-right corner and tap on '**-**' icon from the list of devices. A screen appears to delete the device, tap **Delete Device**. Now, press the black button thrice located on the rear end of the door sensor. A popup appears successfully deleted device, tap **OK.**

4. **How to check the activity on my door sensor?**

   Open B.One Edge App, tap on **Devices**. Select your door sensor, now tap on settings icon on the top right corner. You can check all the activities under **History.**

5. **How do I enable/disable push notifications for my door sensor?**

   Open B.One Edge App, tap on **Devices**. Select your door sensor, now tap on settings icon on the top right corner. Use the toggler beside **Notify Me** to turn ON/OFF push notifications. Also you can check all activities of door sensor in the Dashboard tab of B.One Edge App.

6. **Do I get notified when I forget to close any door before leaving my place?**

   Yes, in order to get notified user must activate Arm mode in security tab, in case any door is open a screen appears in your B.One Edge App stating **"**B.One has discovered that the following door/window is open/tampered, still would you like to continue**"**. Now close the respective doors & tap continue.

7. **If I encounter any issues with the device or the B.One App, how do I get Assistance?**

Open B.One App, tap Settings, tap Customer Support, select FAQ/Email/Call and follow on screen instructions.

Alternatively, you may contact us via
Email : Support@blazeautomation.com
USA Toll-Free number: 1888-810-4071
INDIA Toll-Free number: 1800-212-5828
AUSTRALIA Toll-Free number: 1800-180-810