
| If PA4 (SS) is LOW during startup UART mode is enabled. PA2 (MISO) changes to RXD and SPI is disabled

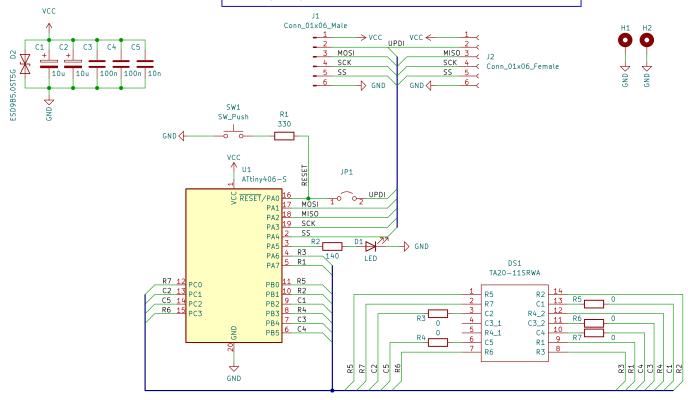

*Additional information can be found at https://github.com/sunriax/.matrix

g.raf^engineering	
Sheet: / File: matrix.kicad_sch	
Title: Matrix Display Controller	
Size: A4 Date: 2022-02-24	Rev: 1.0
KiCad E.D.A. kicad (6.0.1)	ld: 1/1
4 5	