

Bios - Basic input/output system

- POST

Power on self test

→


3v

smis > Bios
cmos >

EPROM -

UEFI -

F2 - F5C

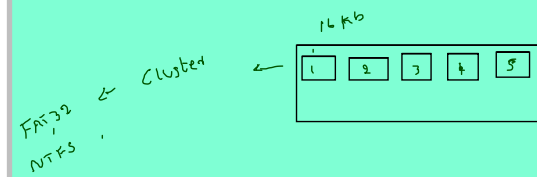

F11 → F12
F12 → USB
Legacy UEFI

MBR - Legacy - Bios

GPT - UEFI

Rufus

Power ISO

ventoy