SVA NYC

REGISTRATION


DIGITAL IMAGING CENTER

CANON C5560I · MEZZANINE

When the front and back of a 2-sided print don't line up.

WHAT DO YOU SEE?


FRONT BACK

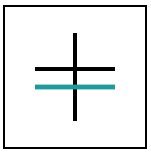

BACK MOVED UP OR DOWN

Same gap on every sheet.

FIX IT WITH THE STEPS BELOW

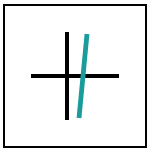

BACK MOVED SIDEWAYS OR CROOKED

This is a hardware issue. The steps below won't fix it.

CALL LDI FOR SERVICE



GAP CHANGES SHEET TO SHEET

Check the paper guides and that the paper is flat and the right type. Print 3 test sheets.

STILL OFF? CALL LDI

FIX: MOVE THE BACK UP OR DOWN

STAFF ONLY

PRINTER

1

PRINT TEST PAGE

Paper Type Management Settings → Output Test Page

Don't change settings here.

→

FIERY

2

SHIFT THE IMAGE

Job Properties → Image Shift

Move the front or back up or down.

→

FIERY

3

PRINT AGAIN

Lines up? Print the job.

Still off? Call LDI.

☐ PRINTER SCREEN ■ FIERY SOFTWARE ON THE COMPUTER