SVA NYC

COPIER REGISTRATION


DIGITAL IMAGING CENTER

CANON COPIER · MEZZANINE

When the front and back of a 2-sided print don't line up.

WHAT DO YOU SEE?


— FRONT — BACK

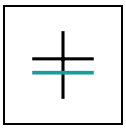

BACK MOVED UP OR DOWN

Same gap on every sheet.

FIX IT WITH THE STEPS BELOW

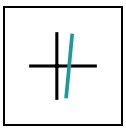

BACK MOVED SIDEWAYS OR CROOKED

This is a hardware issue. The steps below won't fix it.

CALL LDI FOR SERVICE



GAP CHANGES SHEET TO SHEET

Check the paper guides and that the paper is flat and the right type. Print 3 test sheets.

STILL OFF? CALL LDI

FIX: MOVE THE BACK UP OR DOWN

STAFF ONLY

Best workflow: fix it in the Fiery first, then test at two points: a Fiery test print (step 2) and a printer test page (step 3).

FIERY

1

SHIFT THE IMAGE

Print → Fiery Features → Full Properties → Finishing → Image Shift

Check Image Shift. Change Y on the Back (up or down).

→

FIERY

2

TEST PRINT

Click OK, then print 1 sheet.

Lines up? Print the job.

→

PRINTER

3

CHECK THE PRINTER

Paper Type Management Settings → Output Test Page

Test page off too? Call LDI. Don't change settings here.

■ FIERY PRINT SETTINGS ON THE COMPUTER □ PRINTER SCREEN