

EAN-Overlay Graphics

Date: 2026-06-12

Exports: [Export Summary Sheet](#)

EULA: [End User License Agreement](#)

Web: sightlineintelligence.com

[Contact Us](#)

Sales: +1 (541) 716-5137

Support: +1 (503) 616-3063

1	Overview	1	8	Using the Overlay DLL	9
1.1	Additional Support Documentation	1	9	Overlay Examples	9
1.2	Sightline Software Requirements	1	9.1	Drawing Crosses Example	9
2	Related Commands	1	9.1.1	DrawLegacy Command Software 2.24.15 and Below	10
3	Basic Overlay Objects	2	10	Cooler Countdown	11
3.1	Overlay Tabs	2	11	Troubleshooting	13
4	User Specified Fonts	3	11.1	Logo Watermark Overlay Error Message	13
5	KLV Data Overlays	4	11.2	Logo Watermark Not Displayed	13
6	Tracking, Detection and Related Algorithms Overlays	5	11.3	Splash Screen Not Displayed at Startup	13
7	Logo Watermark Overlays	7	11.4	Color Text Appears with a Shadow	14
7.1	Upload User Logo or Splash Screen	8	11.5	Special Characters Do Not Display Correctly	14
7.2	Enable User Logo	8	11.6	Questions and Additional Support	14
7.3	Adjust Logo Properties	9			

 **CAUTION:** Alerts to a condition or improper procedure that can result in equipment or component damage if not avoided.

 **IMPORTANT:** Identifies information that is critical to successful setup, configuration, or operation of the system.

 Provides supplementary information that aids in the use or understanding of the system or subject matter but is not critical to operation.



1 Overview

This document provides an overview of the Sightline protocol commands and related information for various types of graphical overlays supported by Sightline video processors:

- Basic overlay objects - lines, circles, rectangles, and text.
- User specified fronts
- Data overlays on the screen originate from KLV data associated with the frame.
- Overlay objects that are a result of tracking, detection, or other algorithms.
- Graphical logo or splash screen.
- User designed overlays using a DLL.

1.1 Additional Support Documentation

The [Panel Plus](#) User Guide is accessible from the Help menu within the application.

The Interface Command and Control (IDD) describes the native communications protocol.

Additional Engineering Application Notes (EANs) and ICDs are available on the [Product Support Documentation](#) page in the [Sightline Knowledge Base](#).

1.2 Sightline Software Requirements

IMPORTANT: The Panel Plus software version should match the firmware version running on the OEM. Firmware and Panel Plus software versions are available on the [Software Releases](#) page.

Table 1: Sightline OEM Software Requirements

OEMs	Initial Software Release	Provisions
4110-OEM	3.11.x	--
1710-OEM	3.9.x	--
4100-OEM	3.7.x	Three channel processing requires 3.9.x and above.
1750-OEM	3.6.x	Dual channel processing and Snap All Cams requires 3.7.x and above.
4000-OEM	3.00.xx	AI-Assist and AI-Detect are not supported. Blending requires 3.3.x and above.
Legacy OEMs are supported up to 3.5.x		
1500-OEM	2.20.xx	--
3000-OEM	2.22.xx	Rev B6 requires updated firmware to accommodate the change in memory.

2 Related Commands

Table 2: Graphic Overlay Related Commands

Command	Description
SetOverlayMode (0x06)	Enable or disable certain overlay graphics.
CurrentOverlayMode (0x042)	Current overlay graphics. Same format as Set Overlay Mode.
CurrentOverlayObject (0x68)	Get status of objects by ID.
CurrentOverlayObjectParameters (0x6B)	Details of graphic object by ID.
DrawOverlay (0x9C)	Create / delete overlay graphic objects, allows users to specify camera index as well as exact length of string.
LogoParameters (0x9B)	Used to set the opacity of the logo (watermark) and its placement relative to the bottom right corner of the output frame.
Deprecated Commands	Description
DrawObject (0x3B)	Used to create / delete overlay graphic objects. Each object was assigned an ID. Use DrawOverlay (0x9C) instead.

Display parameters set by the [SetDisplayParameters \(0x16\)](#) command are applied before overlays are drawn.



3 Basic Overlay Objects

This section covers basic lines, circles, rectangles, and text overlay objects. Up to 128 graphical objects can be added to an image. Prior to version 3.1 only 64 graphical objects could be added.

Once an overlay object is created it gets a unique ID (with a range of 1 - 199 inclusive) that can be referenced for editing or deleting. Use Panel Plus to design the layout and experiment with combinations of overlay objects.

The following guidelines should be considered when creating basic overlays:

- Painting basic overlay objects uses processing time. Use less overlays whenever possible.
- Too many overlay objects can clutter the video.
- Place overlay objects on the perimeter of the frame, out of the way of the most useful video information.
- Limit colors. Use black and white whenever possible.
- To make the text more legible use white with a black outline or use black over a light gray (alpha-blended) box or square.

3.1 Overlay Tabs

In Panel Plus, overlay objects can be created from the *Overlay* tab shown in [Figure 1](#).

- Use the *Cursor* checkbox to paint a cursor on the video. The [IDD](#) command is [ModifyTracking \(0x05\)](#) with the modify mode value of 0.
- Use the appropriate tabs to add lines, boxes, circles, text, KLV based text, crosses, and squares.
- Boxes, squares, and circles can be color-filled. The transparency of the object (alpha-blended with the background) can also be controlled.
- The *Cross* overlay is implemented as two perpendicular lines.
- Use the *KLV Widget* tab to show a heading arrow based on the KLV platform heading and sensor relative azimuth angle.
- To save overlay objects and make them persist through restarts, Panel Plus main menu » *Parameters* » *Save to board*.

 Only objects marked as *Save Object* are saved.

☒ Cursor
☒ Follow Mouse
☐ Put at Column: 0, and Row: 0

Lines Boxes Circles Text KLV Cross Square KL

From row: 400 and Column: 0
 To row: 400 and Column: 400
 Color: White Shadow: None
 Line Thickness: 1

☐ Move With Camera
☐ Origin Upper Left
☐ Save Object

Update Add Delete
 Current Object Index: New Item

Remove All User Font... Advanced Overlay Settings... Logo Parameters...

Figure 1: Panel Plus Overlays Tab



Graphical Overlay Notes:

- Text strings can be up to 64 characters long. Do not include the NULL character at the end of the string.
- All overlay objects created pertain to the active (commanded) camera. It is important to specify the video source (camera ID) that the overlay object will be displayed.
- Each overlay type has a set of parameters. For example, when drawing a line, it is important to know the following information:
 - The row and column pair of coordinates for each of the end points.
 - Color
 - Line shadow (only applicable for horizontal and vertical lines).
 - The frame of reference for the coordinates - top left of the image or center.
- Advanced parameters are used in cases where the camera is moving. Since the video processing board calculates the scene registration, it can put the graphical object at a fixed screen coordinate. Or it can move as the camera moves, leaving the graphical object in the same place in the scene.
- Numerous fonts are supported. Some of these fonts support scaling. See the [DrawOverlay \(0x9C\)](#) command in the IDD for complete details.
- Both ASCII (7-bit) and ISO 8859 (8-bit) character encoding methods are supported.
- Users can generate a graphical overlay object with any ID in the 1 - 199 range, but there are only 128 user objects that can be drawn simultaneously.
- Drawing large numbers of graphical objects may result in increased latency and/or dropped frames. The performance graphs can be used to help understand the impact of the graphical objects on processing time. See [EAN-Performance-and-Latency](#) for more information.

4 User Specified Fonts

Sightline ARM platforms support utf-8 and TrueType fonts. In this example a Noto Sans Korean font is used to display Korean characters:

1. Go to the Google Fonts [website](#). Enter *Korean* in the search field.
2. Download the font zip file.
3. Extract the font from the .zip file. In this example it is *NotoSansKR-Regular.ttf*
4. Copy the font to the OEM `/home/slroot/sl/bin/fonts/` directory using WinSCP.

/home/slroot/sl/bin/fonts/				
NotoEmoji-Regular.ttf	409 KB	7/24/2024 12:44:07 PM	rw-rw-rw-	slroot
NotoSansJP-Regular....	4,442 KB	7/24/2024 12:44:08 PM	rw-rw-rw-	slroot
NotoSansKR-Variable...	10,119 KB	8/17/2023 4:53:04 PM	rw-r--r--	slroot
OFL.txt	5 KB	7/24/2024 12:44:08 PM	rw-rw-rw-	slroot
RobotoMono-Bold.ttf	85 KB	7/24/2024 12:44:08 PM	rw-rw-rw-	slroot

Figure 2: OEM Font Directory



5. In WinSCP sync the changes.

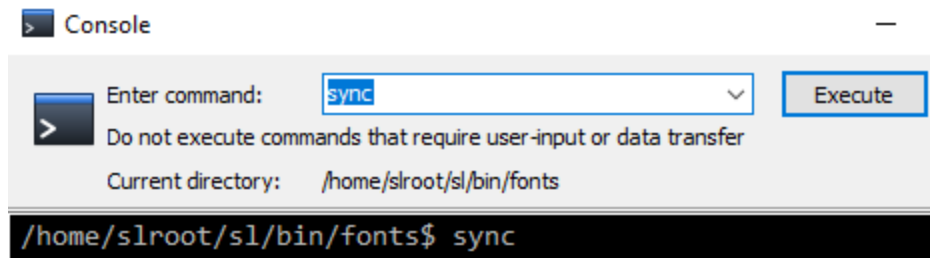


Figure 3: Sync Changes in WinSCP

6. In Panel Plus go to the *Overlay* tab » *User Font* to open the *User Font* dialog window.
7. Select the *NotoSansKR-Regular.ttf* font, and then click *Send*.

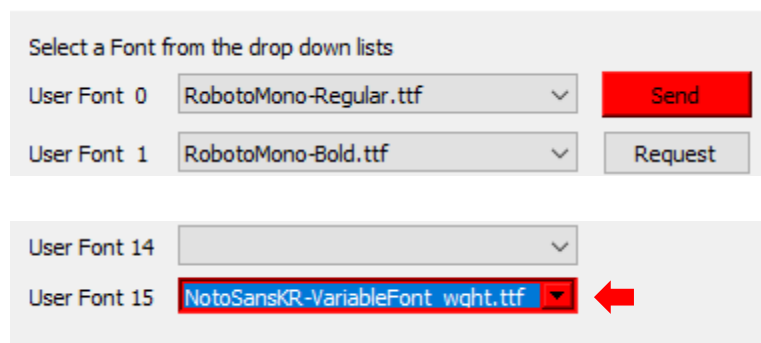


Figure 4: User Font Dialog Window

8. From the *Text* tab enter the text in the *Display* window in the newly created font. In this example it will be in Korean characters as shown in Figure 5. When complete click *Add*.

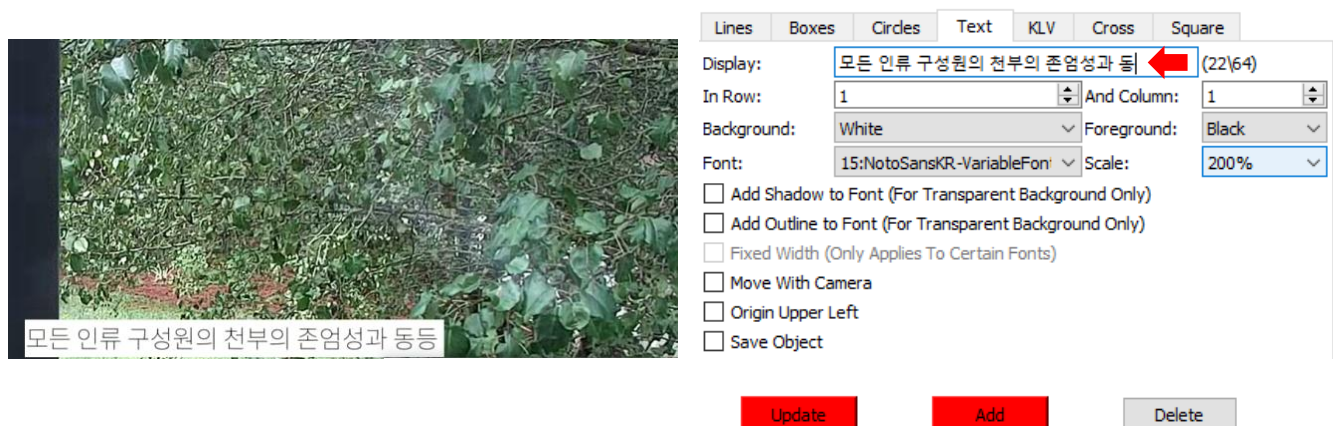


Figure 5: Adding Font Overlay in Panel Plus

5 KLV Data Overlays

Use the *KLV* tab to create an KLV data overlay graphic.

This document does not include KLV information. To learn more about KLV see [EAN-KLV-Metadata](#).



KLV Field: Use this drop-down menu to select a KLV data tag to display. Each type of data tag can be displayed with its associated units. For example, *Sensor Altitude* is a numerical value that can be expressed in meters or feet. UTC time is a string that can be displayed in various formats.

Display: Any user-defined text before or after the KLV can be added in this field (up to 64 total characters).

The example in **Figure 6** shows how to create a UTC Time overlay graphic. The graphic is formatted as *Time: year-month-day Hours:minutes:seconds*.

☒ Cursor
☒ Follow Mouse
☐ Put at Column: 0, and Row: 0

Lines Boxes Circles Text **KLV** Cross Square KL

Display: %s (2\64)
 In Row: 1 And Column: 1
 Background: White Foreground: Black
 Font: Default Scale: 100%
 KLV Field: UTC Time (use %s)
 KLV Format: YYYY-MM-DD hh:mm:ss

☐ Add Shadow to Font (For Transparent Background Only)
☐ Add Outline to Font (For Transparent Background Only)
☐ Fixed Width (Only Applies To Certain Fonts)
☐ Move With Camera
☒ Origin Upper Left
☒ Save Object

Update Add Delete

Current Objects: 1

Figure 6: KLV UTC Graphic Overlay Example

6 Tracking, Detection and Related Algorithms Overlays

As a result of some Sightline features, e.g., tracking, detecting and other related algorithms, some overlay objects are automatically drawn on the screen.

See the [IDD](#) and the following appropriate EANs for more information:

- Tracking boxes used during Tracking mode: [EAN-Target-Tracking](#)
- Ovals for detecting objects: [EAN-Detection-Modes](#)
- Focus metric data: [EAN-Lens-Focus-Control](#)
- Pixel statistics in track boxes: [EAN-Infrared-Temperature](#)
- Landing pattern detection and keep-out zone area: [EAN-Landing-Aid](#)
- Histogram and other Sightline overlay objects: [EAN-NUC-and-DPR](#)



Advanced control of these graphical objects can be found in the *Overlay Settings* dialog window in Panel Plus as shown in **Figure 8**. From the Panel Plus main menu » *Configure* » *Overlays*.

 Use the check boxes to show the graphical objects or turn them off.

 Each video source can have its own set of graphical overlay settings.

Track Classifier Conf/MTI Track Classifier Conf: This feature assigns a classification label and confidence to tracks and MTI tracks. It is particularly useful when the user wants to avoid a PiP window obscuring the displayed video. For details on setting up classification, see [EAN-Classifier-Development](#).

Draw Coasting Track Dashed: This feature is helpful during tracking as it indicates when a track is coasting. See [EAN-Target-Tracking](#) for more information.

Modern Mode: This feature updates the appearance of specific overlays, including the *Track Index*, *Track Box Pixel Stats*, *Auto Focus*, and PiP labels, to a more modern design. It is enabled automatically when no parameter file is present.

MTI Label Position: Controls the position of the MTI labels and is useful for deconflicting label overlap. Options: *Auto*, *Top-Right*, *Bottom-Right*, and *Bottom-Left*.

MTI Multi-Color: Color palettes for MTI detections. Useful for giving each detection a unique color (up to 15) to distinguish MTI objects. Overrides MTI Tracks and MTI Selectable Tracks selected color.

MTI Tracks Reticle: Enables the user to change the shape of MTI detections from an ellipse, rectangle, or triangle indicator. There is also an option to have the head classification character displayed above the reticle. *Include Confidence* can append the head classification confidence to this displayed character.

MTI Label Only: Only display the classification label of the head classification (when subclassification is not enabled). Used to declutter the screen when exact confidence percentages are not required.

MTI Conf Label Limit: Limit the number of classifications displayed for the object. If subclassification is enabled, this is useful to limit to the top subclasses. Valid values are *Auto* and 1-5.

MTI Display Label Limit: Limit the number of detection labels displayed. To reduce the information displayed, the user can limit the number of detection labels to the top N number of labels. The top N detections will be labeled first, up to the desired number. The value of 255 is *no limit*.

MTI Label De-conflict: Enable a label deconfliction algorithm to prevent labels from overlapping and blocking information. It is useful when objects are close together and label information is needed.

Display Detection Count: Enables a graphic to display the total number of objects that match a particular class for the given AI detection model. For example, *vehicle_person* models will count the number of detected people and vehicle objects and display the count with the sensitivity threshold percentage. The position and color can be controlled through *Counter Color* and *Counter Position*.

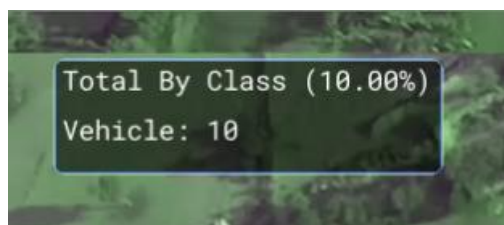


Figure 7: Display Detection Counter



The dialog window is titled "Overlay Settings" and contains several sections for configuring overlays. The "Configure:" section includes settings for Primary Track, Secondary Tracks, Selected Track, Primary Track Person Mode, MTI Tracks, and MTI Selectable Tracks. It also includes checkboxes for drawing targets locally, drawing a dashed coasting track, and limiting PIP label names. The "AI Overlays" section includes "AI Labels" and "AI Statistics" sub-sections. The "Show:" section includes checkboxes for Track Index, Track trail, Show Track Box Pixel Stats, MTI Track Index, Registration Ignored Edges, Modern Mode, Auto Focus, Histogram, Show user objects, Landing, Landing Keep Out, and Logo Watermark. At the bottom, there is a "Send" button and a dropdown for "Apply Settings to:" set to "Camera 0".

Figure 8: Advanced Overlay Configuration Dialog Window

7 Logo Watermark Overlays

Splash Screen: Used for displaying a splash screen at startup. If the splash JPG file is present on the unit, it will be displayed at startup. It will continue to be displayed until a Sightline command is received by the unit. For example, connecting to the unit with Panel Plus sends the [GetVersionNumber \(0x00\)](#) message and will disable the splash screen.

If the default camera is not connected, a No Video Source Available message will be displayed instead of the splash screen.

The splash screen file has no special parameters associated with it. It is shown on the output video when the Sightline system is powered up until the first command is received by the OEM board.

IMPORTANT: Splash screens are not compatible with systems using USB3 Vision cameras.

User Logo: Sightline supports placement of a customer logo watermark file on the video for branding purposes or some other fixed graphic. The file is stored in the OEM board memory. The watermark image is displayed in the lower right-hand corner of the displayed imagery.

When creating a logo, if it is 640x150, it will be downscaled by 2.

The first pixel (top left) in the logo file determines the color that will be set as transparent in the logo.



7.1 Upload User Logo or Splash Screen

The Sightline upgrade utility application can be used to manage the user logo and splash screen files. The following example shows how to upload a splash screen file or a user logo file with the Sightline upgrade utility. For more information on using this application see the [EAN-Firmware-Upgrade-Utility](#).

The following file types are used for the user logo and splash screen:

- User logo: *userLogo.png*
- Splash screen: *splash.jpg*

IMPORTANT: User logo and splash screen files should be under 1MB.

1. Place the *userLogo.png* or *splash.jpg* in *C:\Users\<username>\AppData\Roaming\Sightline Applications*. The file can also be put in any PC or network directory with writing permissions.
2. Use the firmware upgrade application to place the file on the OEM hardware as shown in **Figure 9**.

The following command line upgrade utility can be used to copy a watermark logo file from PC to the board:

```
#> SLAUpgradeCmd.exe -IP 192.168.1.75 -SF "C:/temp/userLogo.png" userLogo.png
```

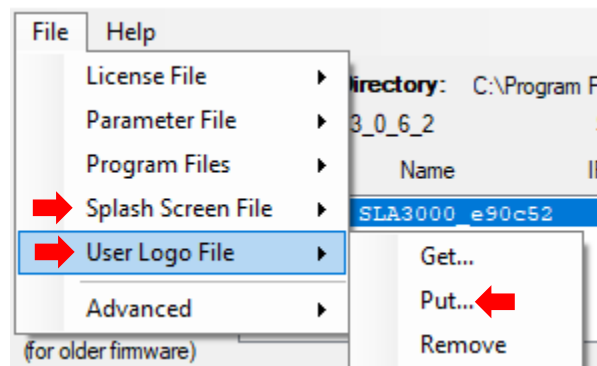


Figure 9: Loading Splash Screen or User Logo File

7.2 Enable User Logo

1. Connect with Panel Plus.
2. Click the *Overlay* tab.
3. Click *Advanced Overlay Settings*.
4. Check the *Logo Watermark* box to enable the logo.
5. In the *Apply Settings to* drop-down menu select the command camera associated with the logo.
6. Click *Send*.

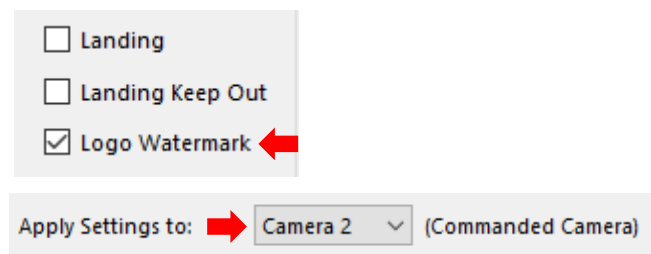


Figure 10: Enable User Logo

If the user logo fails to send or does not display, see the [Troubleshooting](#) section.



7.3 Adjust Logo Properties

The user logo is displayed as a fixed watermark aligned with the bottom right corner with specific alpha-blending. To control these parameters, use the *Logo Parameters* dialog window in Panel Plus. From the main menu » *Configure* » *Logo Parameters*.

This dialog window controls how the file is presented on the video. It also controls opacity, relative location, and the camera associated with the overlay.

1. In the *Apply to:* drop-down menu, select the correct camera associated with the overlay.
2. Use the slider to set the opacity of the logo:
 - Zero (0%) = the logo will not be shown
 - 255 (100%) = no background blending

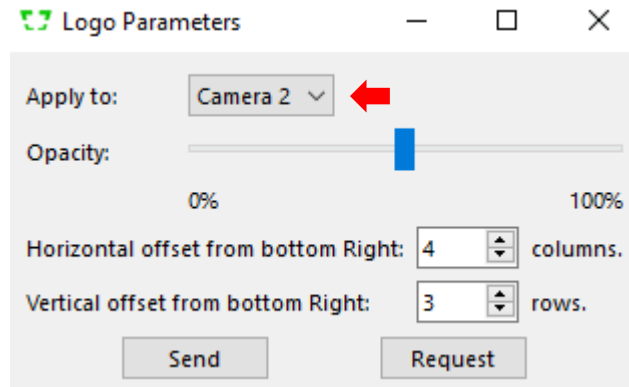


Figure 8: Logo Parameters Dialog Window

Configure the placement relative to the bottom right corner of the display frame. The offset can be adjusted from the lower right corner of the frame in the columns and rows fields.

8 Using the Overlay DLL

The overlay DLL offers advanced users the option of creating all the graphical overlays independent of Sightline protocol supported objects. See the [EAN-ARM-Development-1500-3000-OEM](#) or [EAN-ARM-Development](#) for more information including a DLL example.

9 Overlay Examples

Positioning the object on the screen can be done using a coordinate system where [0,0] is either in the center of the screen, or in the upper left corner by checking the *Origin Upper Left* box in the *Overlay* tab dialog.

9.1 Drawing Crosses Example

In software version 2.25.04 and above, a cross can be drawn from the *Cross* tab in the *Overlay* tab dialog.

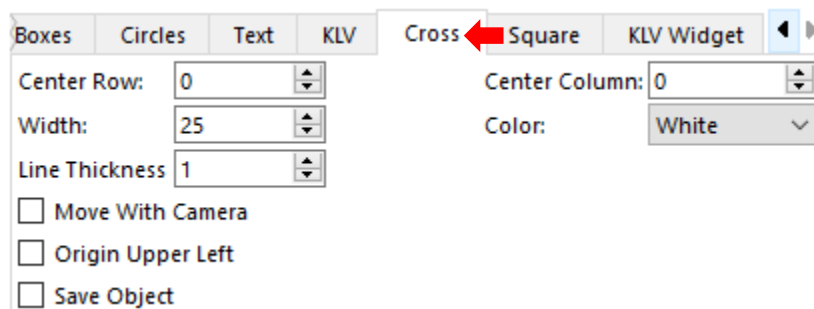


Figure 9: Cross Tab



Drawing a 25x25 pixel white cross in the middle of the video from cam0 results in the following command:

`DrawOverlay 51,AC,13,9C,00,01,01,04,09,00,00,00,00,19,00,00,00,0E,00,01,00,97`

9.1.1 DrawLegacy Command Software 2.24.15 and Below

The example shown in **Figure 13** is on a 1500-OEM REV E board with two analog NTSC video cameras. To draw a red cross on analog 0 and a violet cross on analog 1, an overlay graphic must be created individually per camera using a combination of the 0x1f command and the 0x3b command.

1. Create overlay on Camera 0:
`SetVideoMode 51,AC,10,1F,02,00,00,03,00,00,01,02,01,03,00,00,01,02,81`
2. Draw horizontal line (red):
`DrawObject 51,AC,0F,3B,01,01,84,02,00,00,F0,00,7F,02,F0,00,BE,9D`
3. Draw vertical line (red):
`DrawObject 51,AC,0F,3B,02,01,84,02,40,01,00,00,40,01,DF,01,BE,DC`
4. Create overlay on Camera 1:
`SetVideoMode 51,AC,10,1F,02,00,00,03,01,00,02,03,01,03,01,00,02,03,33`
5. Draw horizontal line (violet):
`DrawObject 51,AC,0F,3B,04,01,84,02,00,00,F0,00,7F,02,F0,00,EE,4F`
6. Draw vertical line (violet):
`DrawObject 51,AC,0F,3B,03,01,84,02,40,01,00,00,40,01,DF,01,EE,A0`



Red Cross Analog 0



Violet Cross Analog 2

Figure 10: Drawing Cross Example

Note the different Object ID for each object. This helps keep track of the different objects in this example. The indexes for the Horizontal Lines (1 and 4) and indexes for the Vertical Lines index (2 and 3) could be the same for both cameras. The system associates the drawing based on the camera order specified in `SetVideoMode (0x1f)`.

There are 128 available graphics objects per camera. Adding more graphics can reduce the performance of the system. There is currently no mechanism to draw the same graphic on two displays. Prior to 3.1 only 64 objects were available per camera.



10 Cooler Countdown

This process describes how to generate a startup splash screen with a countdown text to block video from displaying while an IR camera is cooling down (Figure 10).

User drawn overlays can be used to create a black opaque overlay that can be enabled by default at startup. A customer ARM application or other external program can then be used to display countdown text as an overlay.

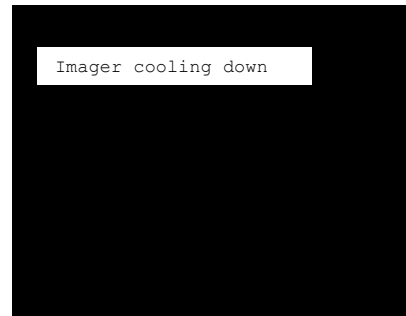


Figure 11: User Drawn Startup Splash Screen Example

1. Create a black opaque overlay that covers the entire screen:
 - a. Panel Plus » *Overlay* tab » *Boxes* tab.
 - b. Set up the example as shown in Figure 15.
 - c. Click *Add*.

The following command creates a black overlay box, 640 x 480 filled:

```
DrawOverlay
51,AC,13,9C,00,01,01,84,0
5,01,00,01,00,28,00,28,00,
11,00,01,00,0F
```

Note Current Objects field.
This is box object #1.

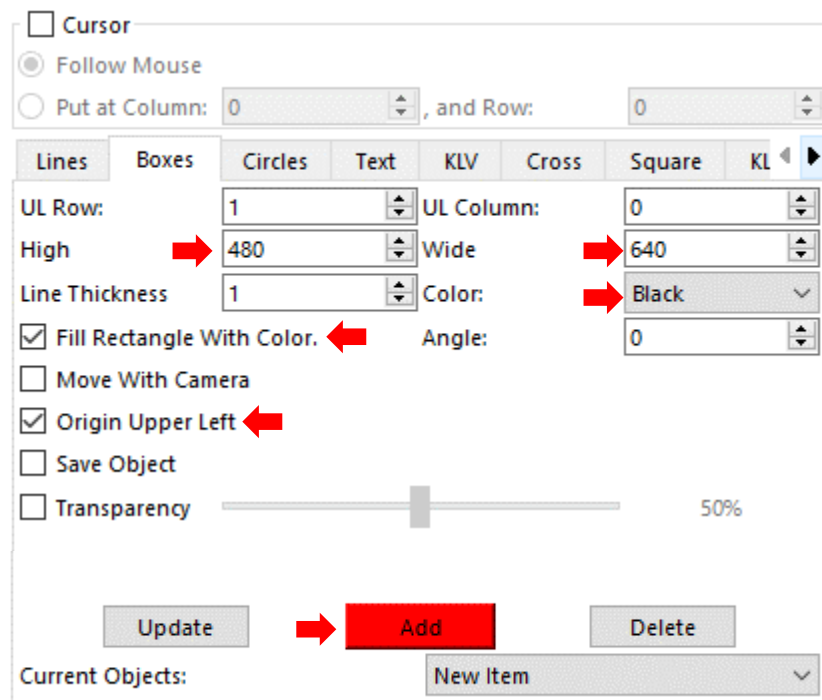


Figure 12: Create Black Opaque Overlay

2. Enable user drawn objects:
 - a. Panel Plus main menu » *Configure* » *Overlays*.
 - b. Check the *Show user objects* box.

Enable user drawn objects command: `SetOverlayMode 51,AC,08,06,05,07,00,10,0B,0B,40`

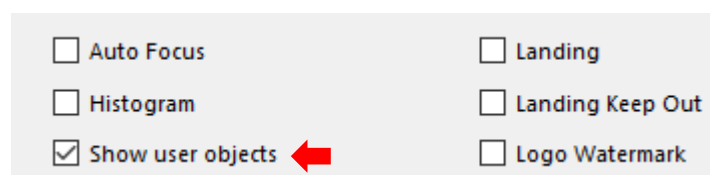


Figure 13: Enable User Drawn Objects



3. Set the overlay text:
 - a. Click the *Text* tab.
 - b. Set up the example as shown in **Figure 16**.
 - c. Click *Add*.

Set overlay setting text command example:

`DrawOverlay 51,AC,26,9C,00,01,01,84,06,01,00,01,00,20,20,00,00,10,13,49,6D,61,67,65,72,20,63,6F,6F,6C,69,6E,67,20,64,6F,77,6E,00,00,9B`

The screenshot shows the 'Set Overlay Text' dialog box with the following settings:

- Cursor:** ☒ Follow Mouse, ☐ Put at Column: 0, and Row: 0
- Tabs:** Lines, Boxes, Circles, **Text**, KLV, Cross, Square, KL
- Display:** Imager cooling down (19\64)
- In Row:** 1, **And Column:** 1
- Background:** White, **Foreground:** Black
- Font:** Default, **Scale:** 100%
- Options:**
 - ☐ Add Shadow to Font (For Transparent Background Only)
 - ☐ Add Outline to Font (For Transparent Background Only)
 - ☐ Fixed Width (Only Applies To Certain Fonts)
 - ☐ Move With Camera
 - ☒ Origin Upper Left
 - ☐ Save Object
- Buttons:** Update, Add (highlighted in red), Delete
- Current Objects:** New Item

Figure 14: Set Overlay Text

4. Save parameters and reset board. This saves the overlay settings to the parameter file for continual restarts. The ARM or other application writes/updates text to the screen.
5. Once the black overlay is no longer needed, delete the black overlay object by its ID, or uncheck the *Show user objects* box in the *Overlay Settings* dialog window.

Do not save the parameters so that it will display correctly on the next startup.

Commands:

- Delete black overlay object box #1 command:
`DrawOverlay 51,AC,13,9C,00,01,00,84,05,01,00,01,00,80,02,E0,01,11,00,01,00,16`
- Disable display of user objects command:
`SetOverlayMode 51,AC,0F,06,05,07,00,20,0B,0B,00,07,0B,01,01,20,00,03`



11 Troubleshooting

11.1 Logo Watermark Overlay Error Message

Make sure the user logo file name is correct. It should be in a PNG format and labeled *userLogo.png*.


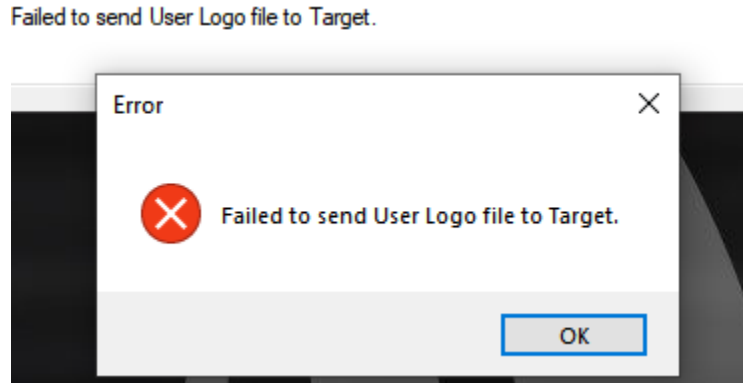


Figure 15: User Logo Error Message

11.2 Logo Watermark Not Displayed

If the file has been sent successfully, and the board has been restarted, try the following steps:

1. Connect to Panel Plus.
2. From the *Overlay* tab click *Advanced Overlay Settings*.
3. Check the *Logo Watermark* box and click *Send*.

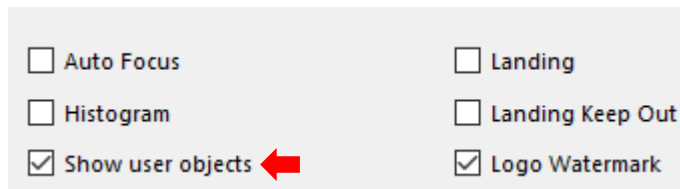

11.3 Splash Screen Not Displayed at Startup

If the Sightline upgrade utility application confirms a successful upload, but the splash screen is not shown at startup, it may be one of the following issues:

- The splash screen file is over the 1MB limit. Splash screen files over the 1MB limit will not show up at startup. Create a splash screen file under 1MB.
- Using the default settings in the GIMP application when creating a splash file. The default settings for creating splash files can cause file compatibility issues with Sightline software. Export the file as a JPG using the steps shown below.
 1. From the main menu bar in the GIMP application go to *File » Export As*.
 2. Name the file *splash.jpg*.
 3. Expand the *Advanced Options* section and use the settings shown.
 4. Click *Export* to export the new splash file.

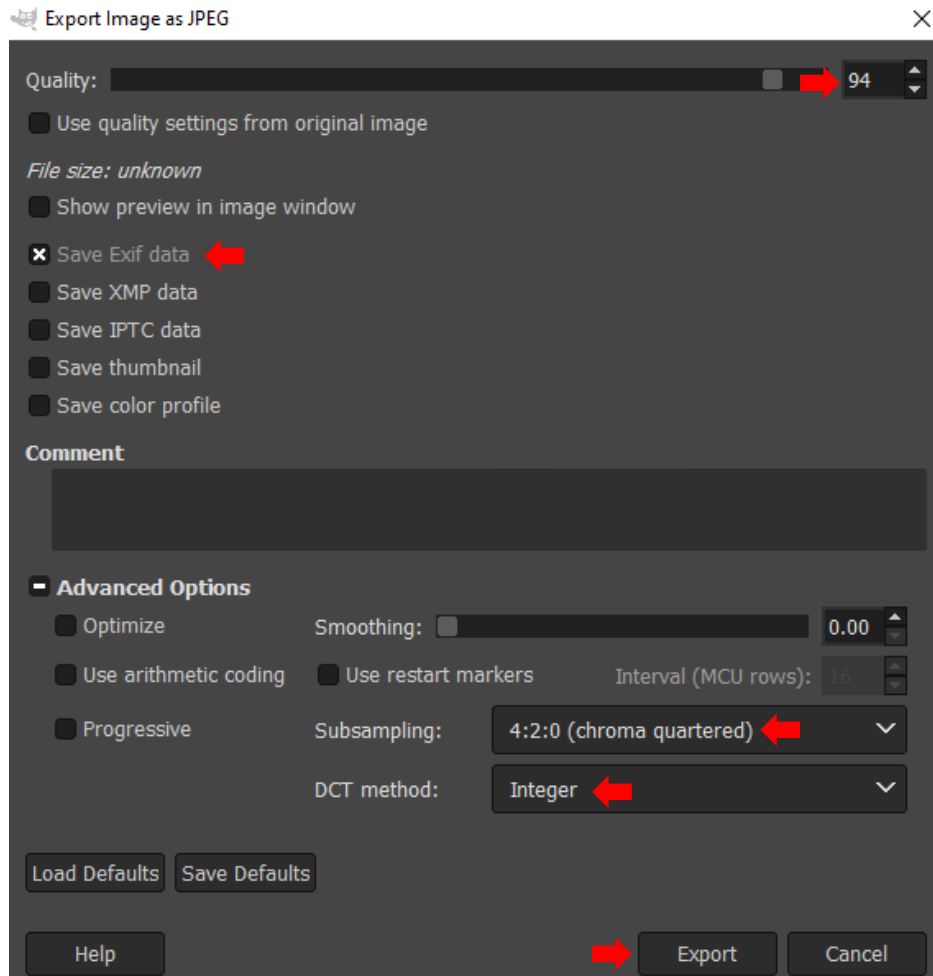


Figure 16: Export JPG Splash Screen Settings in GIMP

As an alternative solution, use Microsoft Paint to open the splash.jpg file and then resave it. The default settings in Microsoft Paint will not cause any file compatibility issues with Sightline software.

11.4 Color Text Appears with a Shadow

If a text overlay appears with a vertical shadow line of a different color, it can often be corrected by shifting the text one column to the right or left.

11.5 Special Characters Do Not Display Correctly

To use special characters like ° or ± in a text string, change the font to something other than the default (Courier or Courier Bold). For more information, see the [DrawOverlay \(0x9C\)](#) command in the IDD.

11.6 Questions and Additional Support

For questions and additional support, please contact [Sightline Support](#). Additional support documentation and Engineering Application Notes (EANs) can be found on the [Product Support Documentation](#) page in the [Sightline Knowledge Base](#).