This manual consists of the following 9 sections:

No.	Section	Description
A	INDEX	Index of the contents of this manual.
	INTRODUCTION	Brief explanation of each section.
B	HOW TO USE THIS MANUAL	Instructions on how to use this manual.
C	ABBREVIATIONS	Defines the abbreviations used in this manual.
D	RELAY LOCATIONS	Shows position of the Electronic Control Unit, Relays, Relay Block, etc. This section is closely related to the wiring diagram.
E	ELECTRICAL WIRING ROUTING	Describes position of the Parts Connectors, Ground points, etc. This section is closely related to the wiring diagram.
F	CONNECTOR LIST	Describes the form of the connectors for the parts appeared in this book. This section is closely related to the wiring diagram.
G	CONNECTOR INFORMATION	Indicates the reference page (See Page) showing the part name corresponding to the part number, and the installation position of the part in the vehicle. (For French, Spanish, German manuals only)
H	PART NUMBER OF CONNECTORS	Indicates the part number of the connectors used in this manual.
I	OVERALL ELECTRICAL WIRING DIAGRAM	Provides circuit diagrams showing the circuit connections.

HOW TO READ THIS SECTION

* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the wiring diagram section.

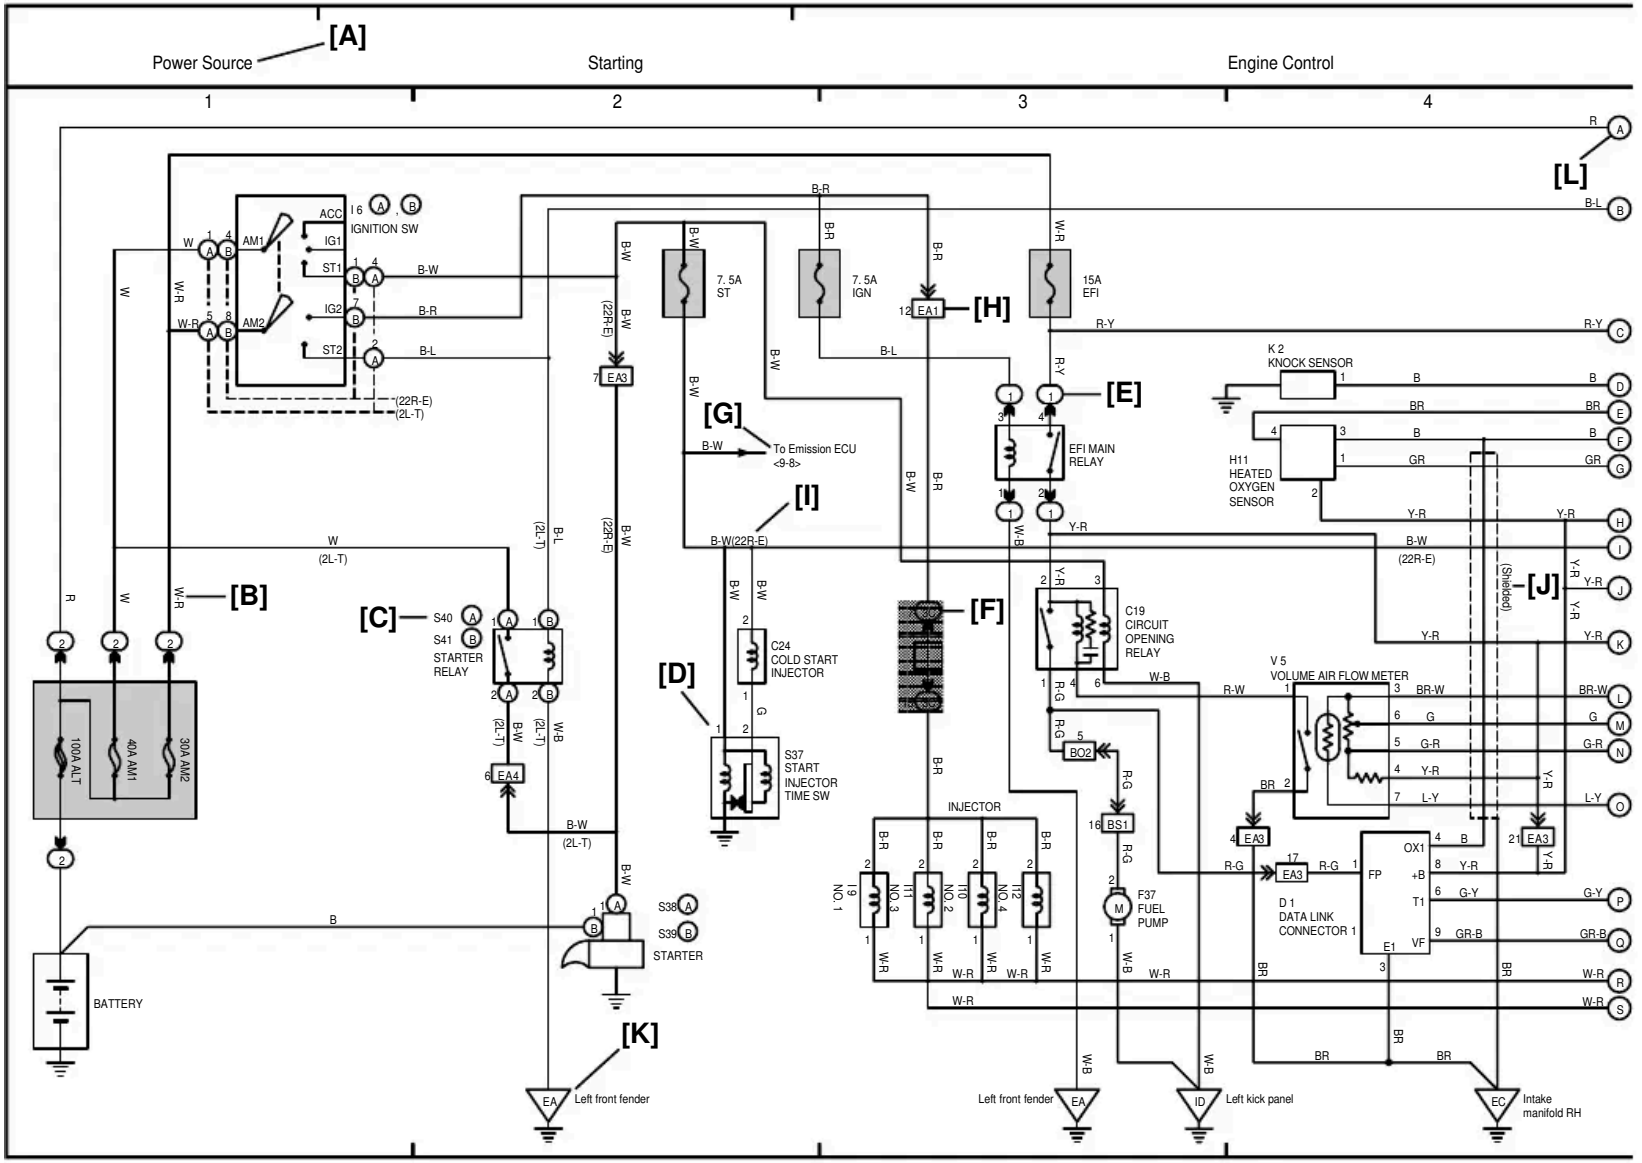

[A] : System Title

[B] : Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

B	= Black	W	= White	BR	= Brown
L	= Blue	V	= Voilet	SB	= Sky Blue
R	= Red	G	= Green	LG	= Light Green
P	= Pink	Y	= Yellow	GR	= Gray
O	= Orange				

The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

Example: L – Y

[C] : The position of the parts is the same as shown in the wiring diagram and wire routing.

[D] : Indicates the pin number of the connector.
The numbering system is different for female and male connectors.

Example: Numbered in order from upper left to lower right / Numbered in order from upper right to lower left

Female Male

The numbering system for the overall wiring diagram is the same as above.

[E] : Indicates a Relay Block. No shading is used and only the Relay Block No. is shown to distinguish it from the J/B.

Example: (1) Indicates Relay Block No.1

[F] : Junction Block (The number in the circle is the J/B No. and the connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts.

Example



3C indicates that it is inside Junction Block No.3

[G] : Indicates related system.

[H] : Indicates the wiring harness and wiring harness connector.
The wiring harness with male terminal is shown with arrows (»).
Outside numerals are pin numbers.

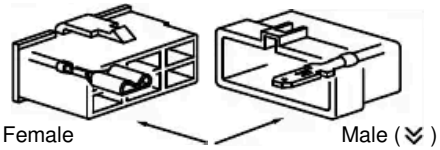

[I] : ( ) is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.

[J] : Indicates a shielded cable.

[K] : Indicates and located on ground point.

[L] : The same code occuring on the next page indicates that the wire harness is continuous.

HINT :

Junction connector in this manual include a short terminal which is connected to a number of wire harnesses. Always perform inspection with the short terminal installed. (When installing the wire harnesses, the harnesses can be connected to any position within the short terminal grouping. Accordingly, in other vehicles, the same position in the short terminal may be connected to a wire harness from a different part.)
Wire harness sharing the same short terminal grouping have the same color.

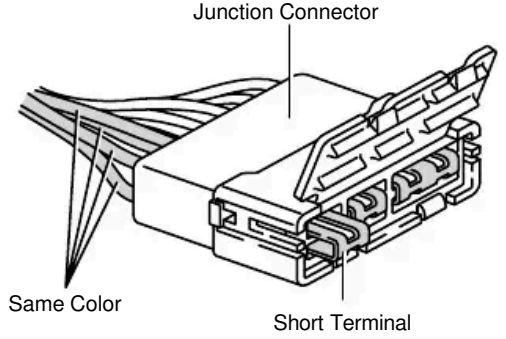

ABBREVIATIONS

The following abbreviations are used in this manual.

ABS	=	Anti–Lock Brake System
A/C	=	Air Conditioner
ACIS	=	Acoustic Control Induction System
A/T	=	Automatic Transmission
CD	=	Compact Disc
COMB.	=	Combination
DLC3	=	Data Link Connector 3
EC	=	Electrochromic
ECT	=	Electronic Control Transmission
ECU	=	Electronic Control Unit
EVAP	=	Evaporative Emission
G.C.C.	=	Gulf Cooperation Council
HID	=	High Intensity Discharge
J/B	=	Junction Block
LED	=	Light Emitting Diode
LH	=	Left–Hand
LHD	=	Left–Hand Drive
O/D	=	Overdrive
PPS	=	Progressive Power Steering
R/B	=	Relay Block
RH	=	Right–Hand
RHD	=	Right–Hand Drive
SRS	=	Supplemental Restraint System
SW	=	Switch
TEMP.	=	Temperature
TRC	=	Traction Control
VSC	=	Vehicle Stability Control
VSV	=	Vacuum Switching Valve
VVT	=	Variable Valve Timing
w/	=	With
w/o	=	Without

* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.

D RELAY LOCATIONS

[Engine Compartment]

(LHD)

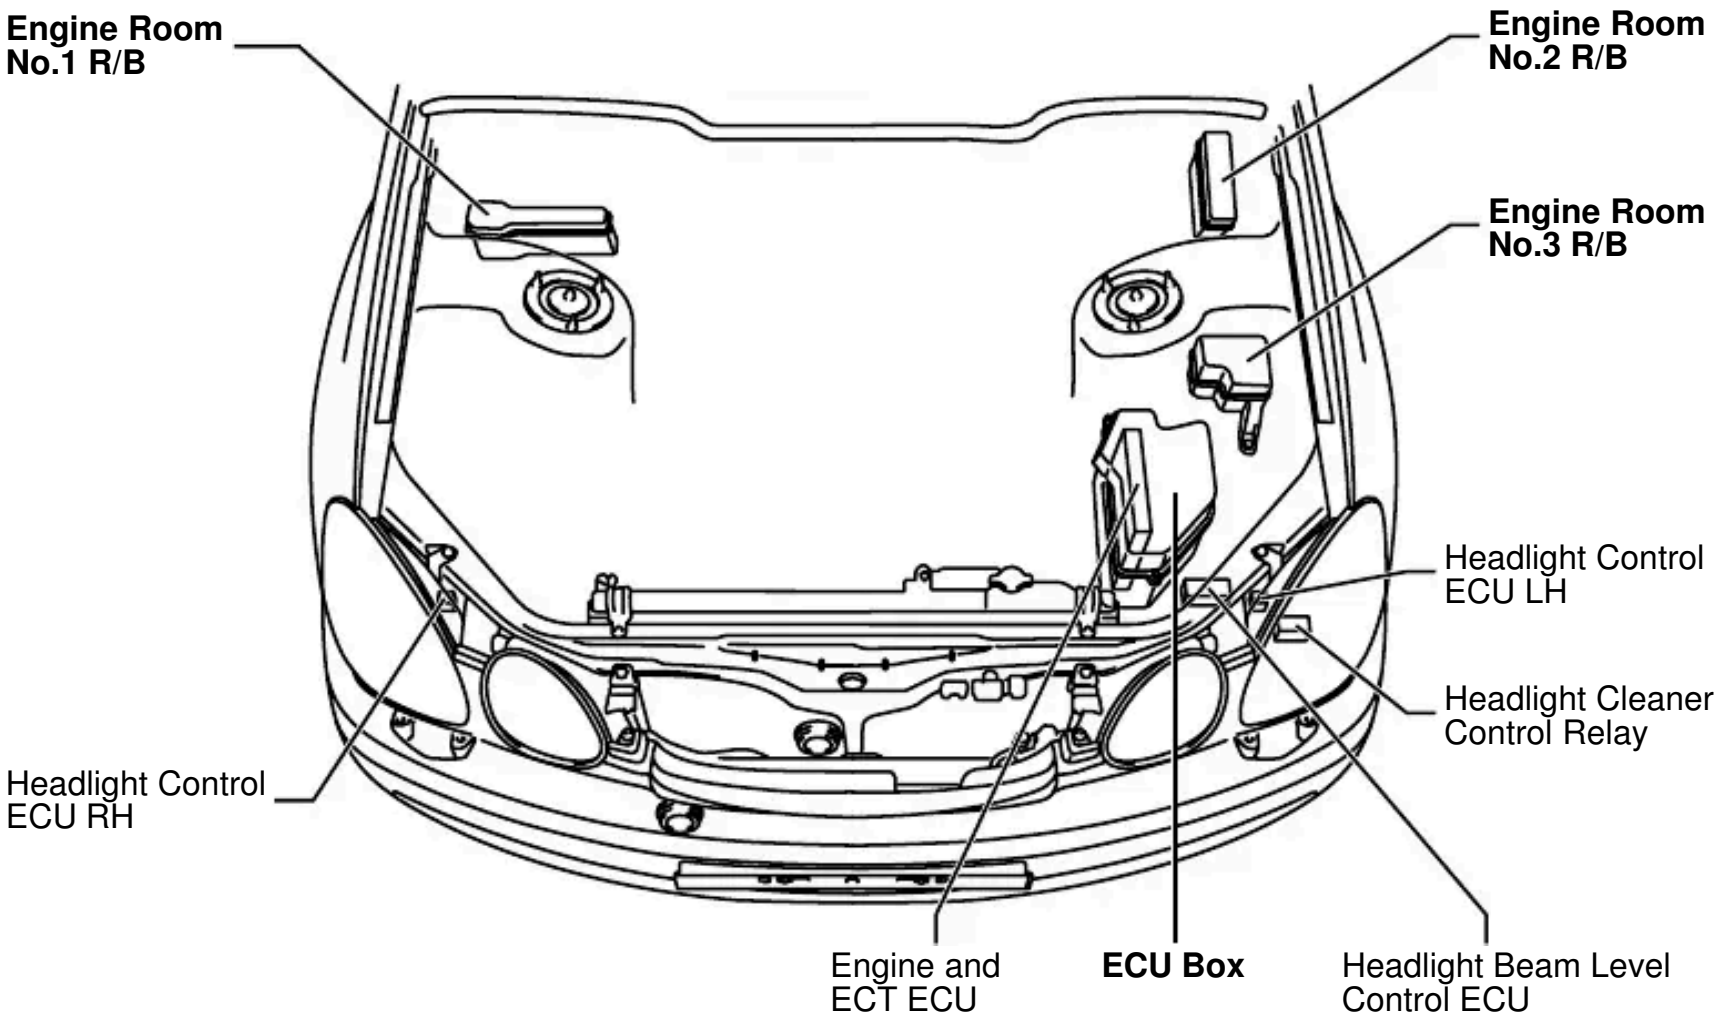

(RHD)

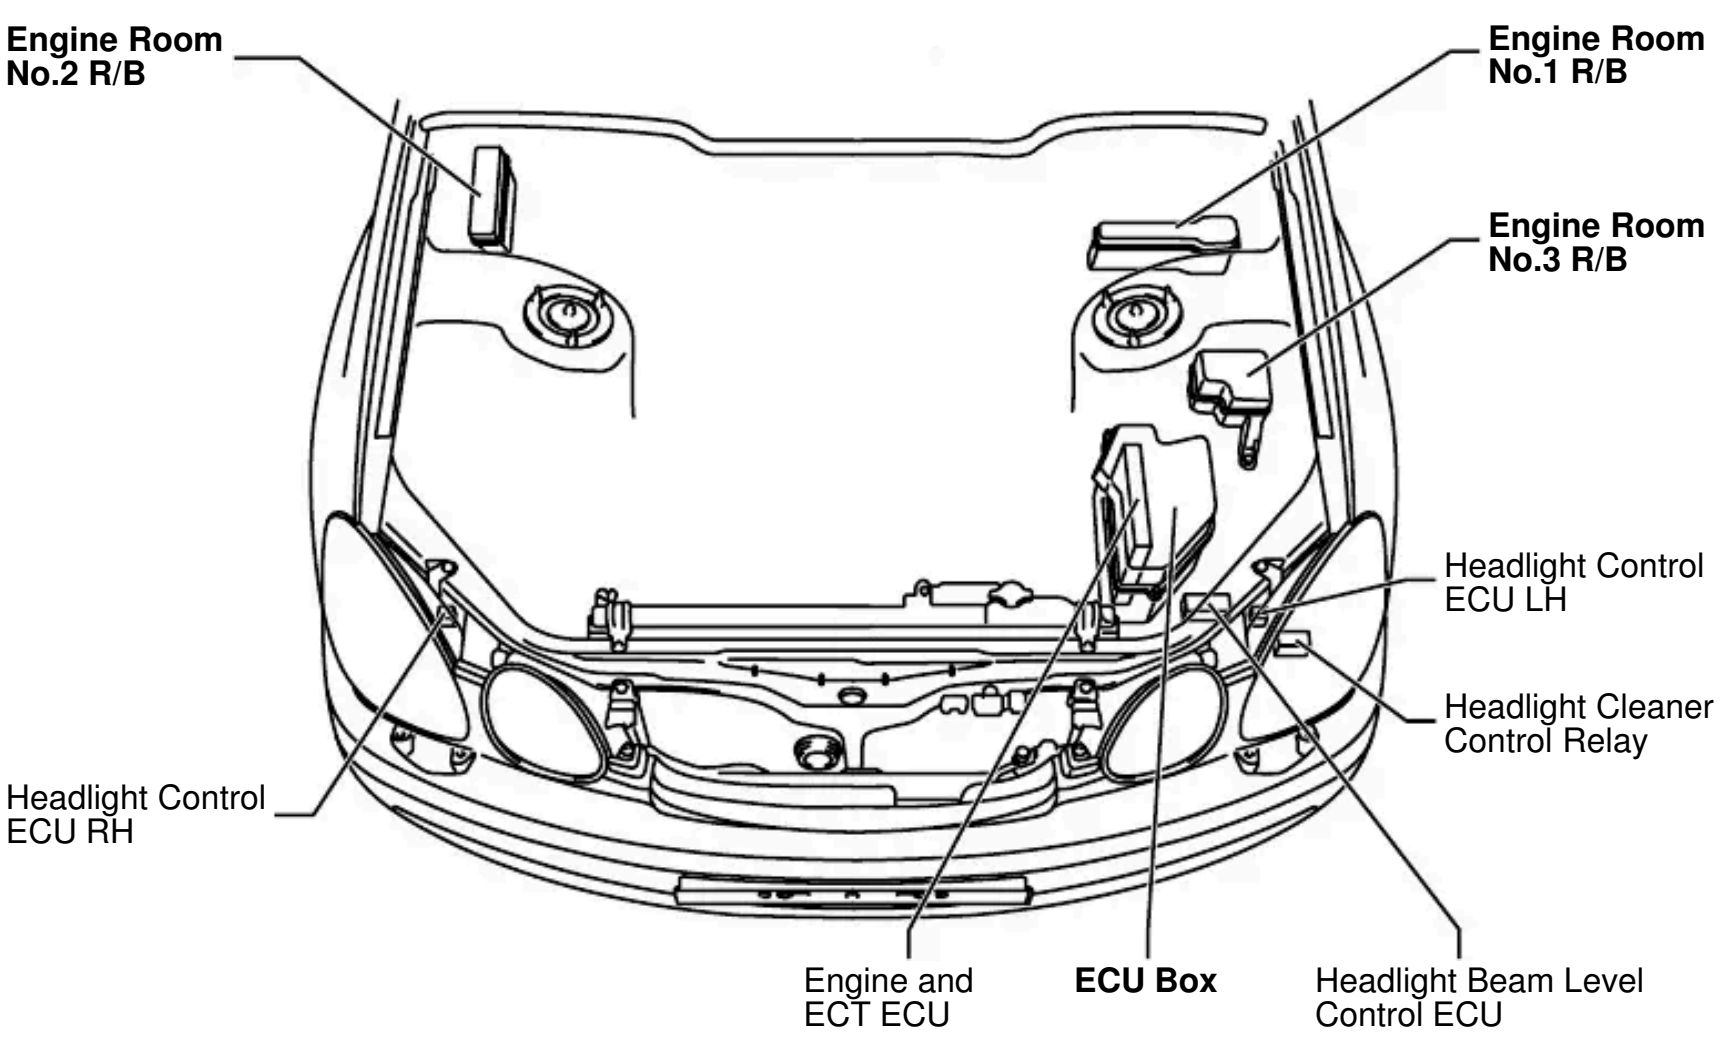

[Instrument Panel]
(LHD)

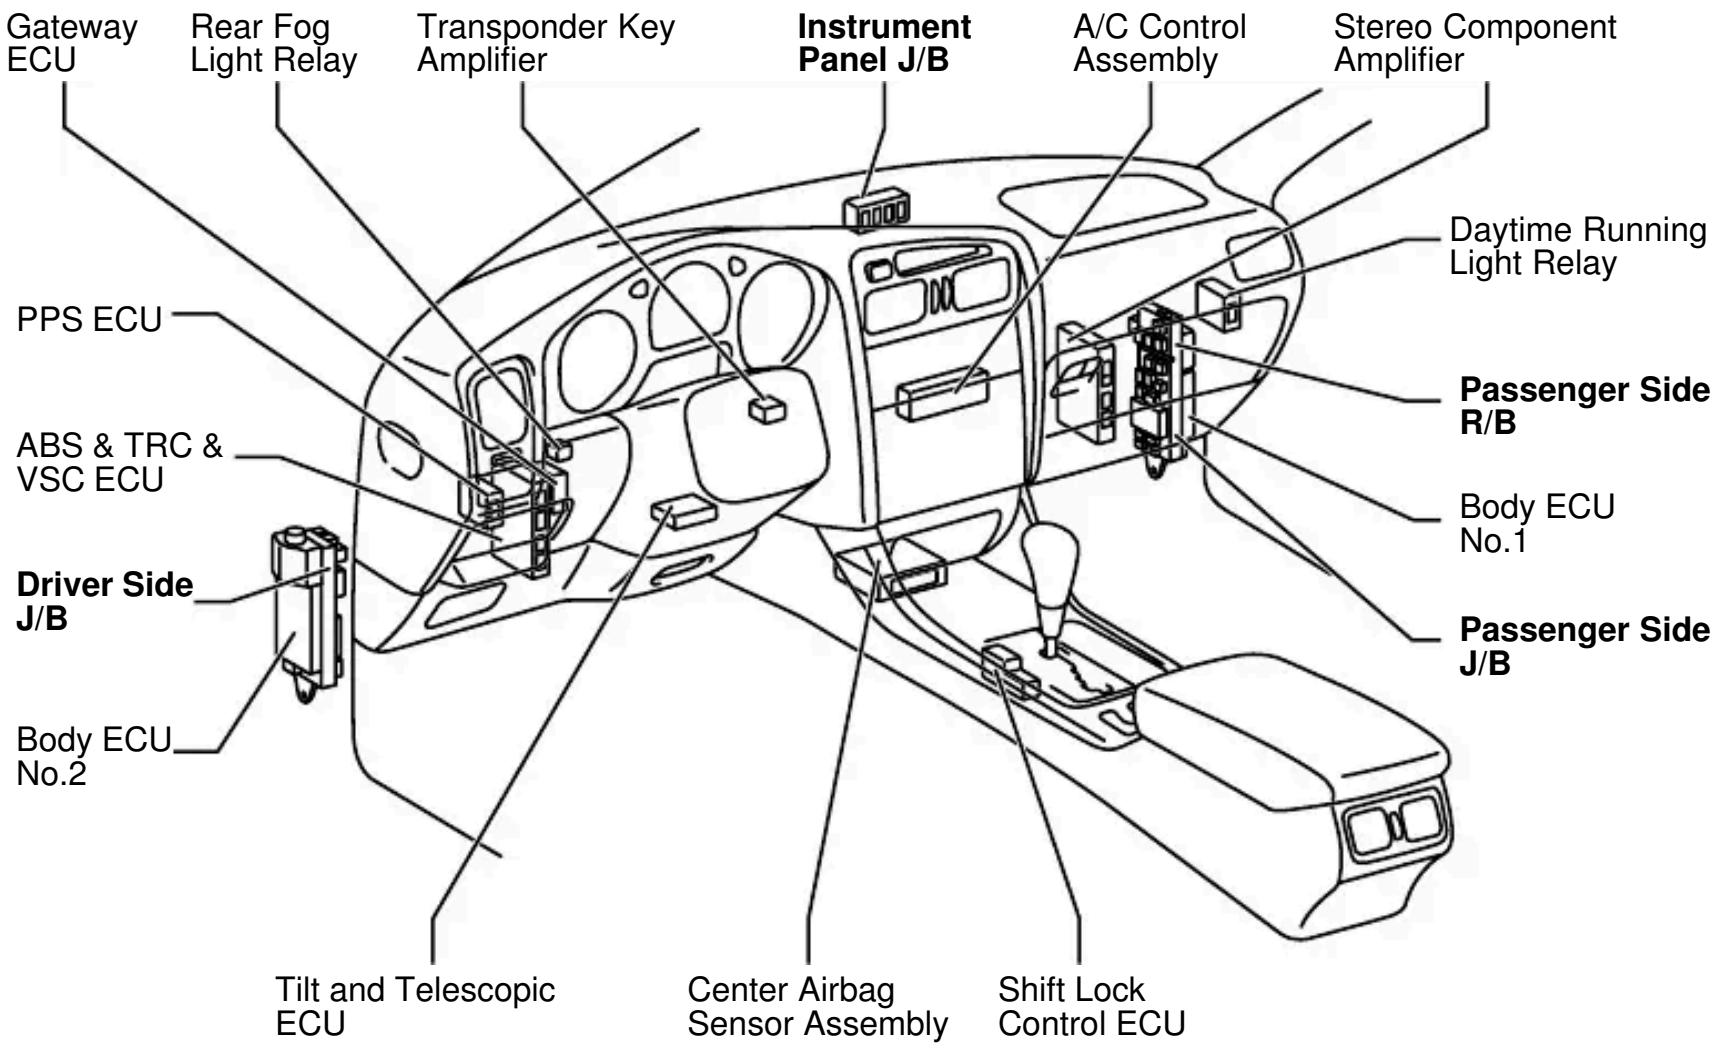

(RHD)

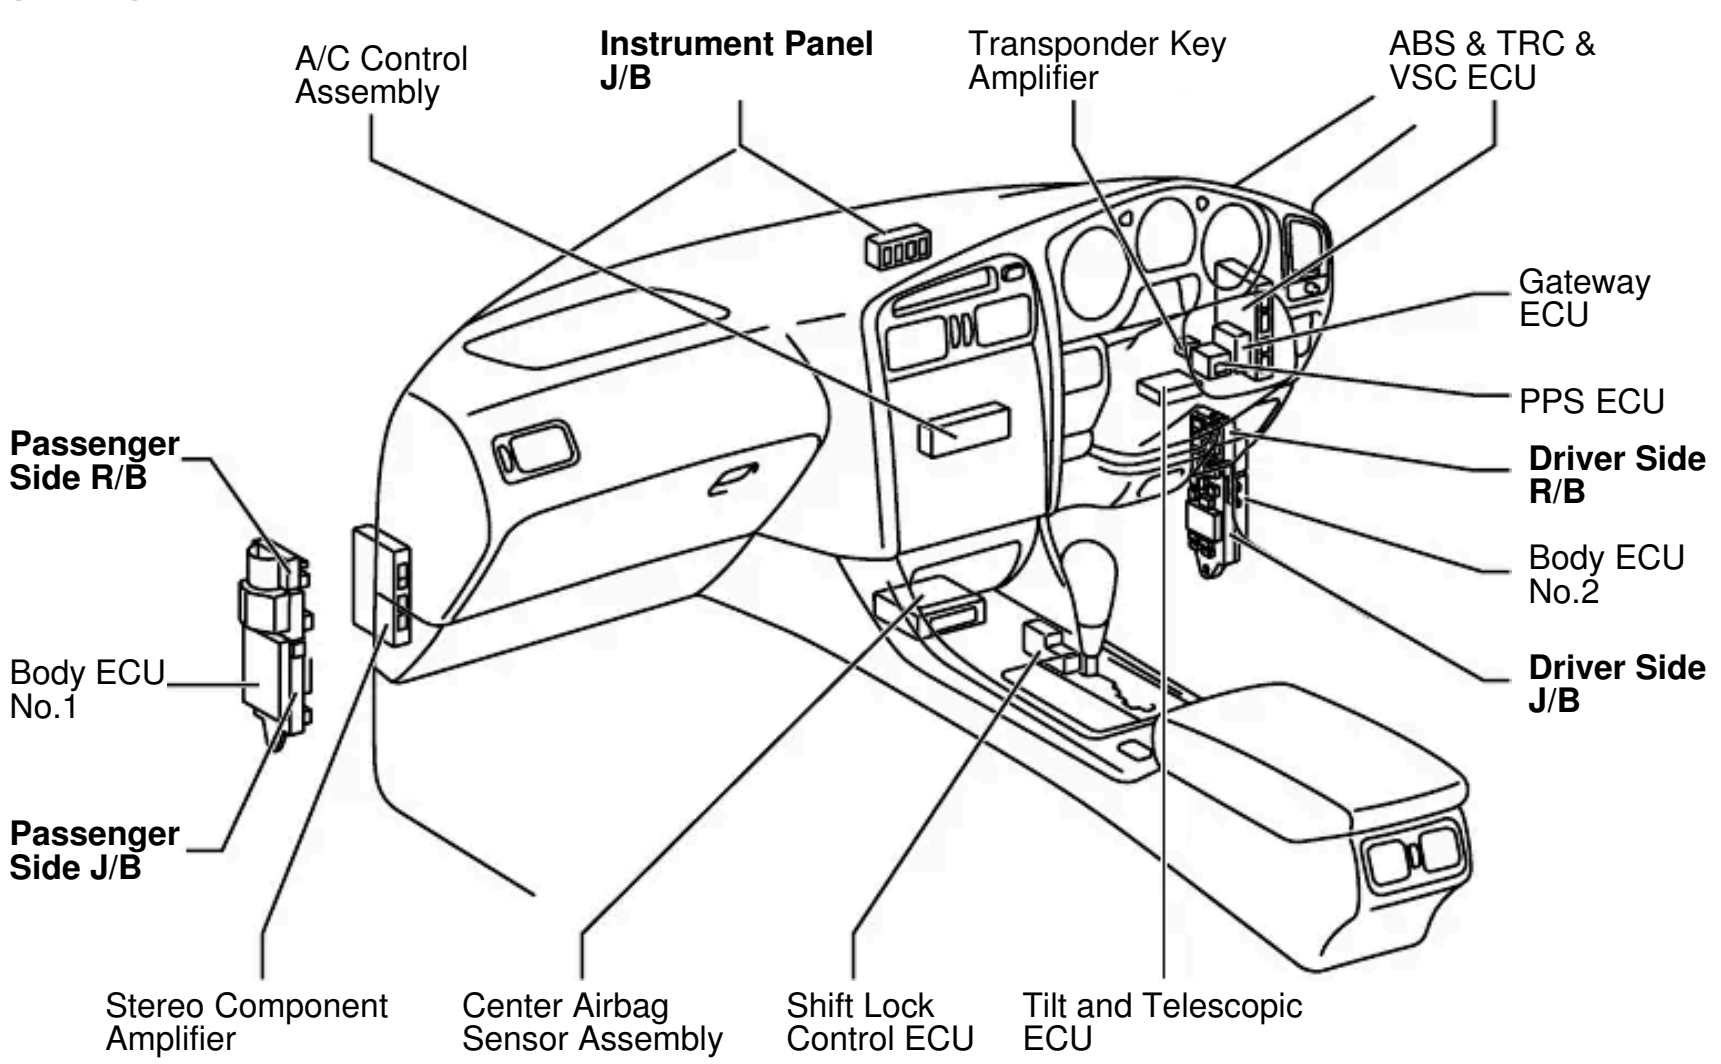

D RELAY LOCATIONS

[Body]

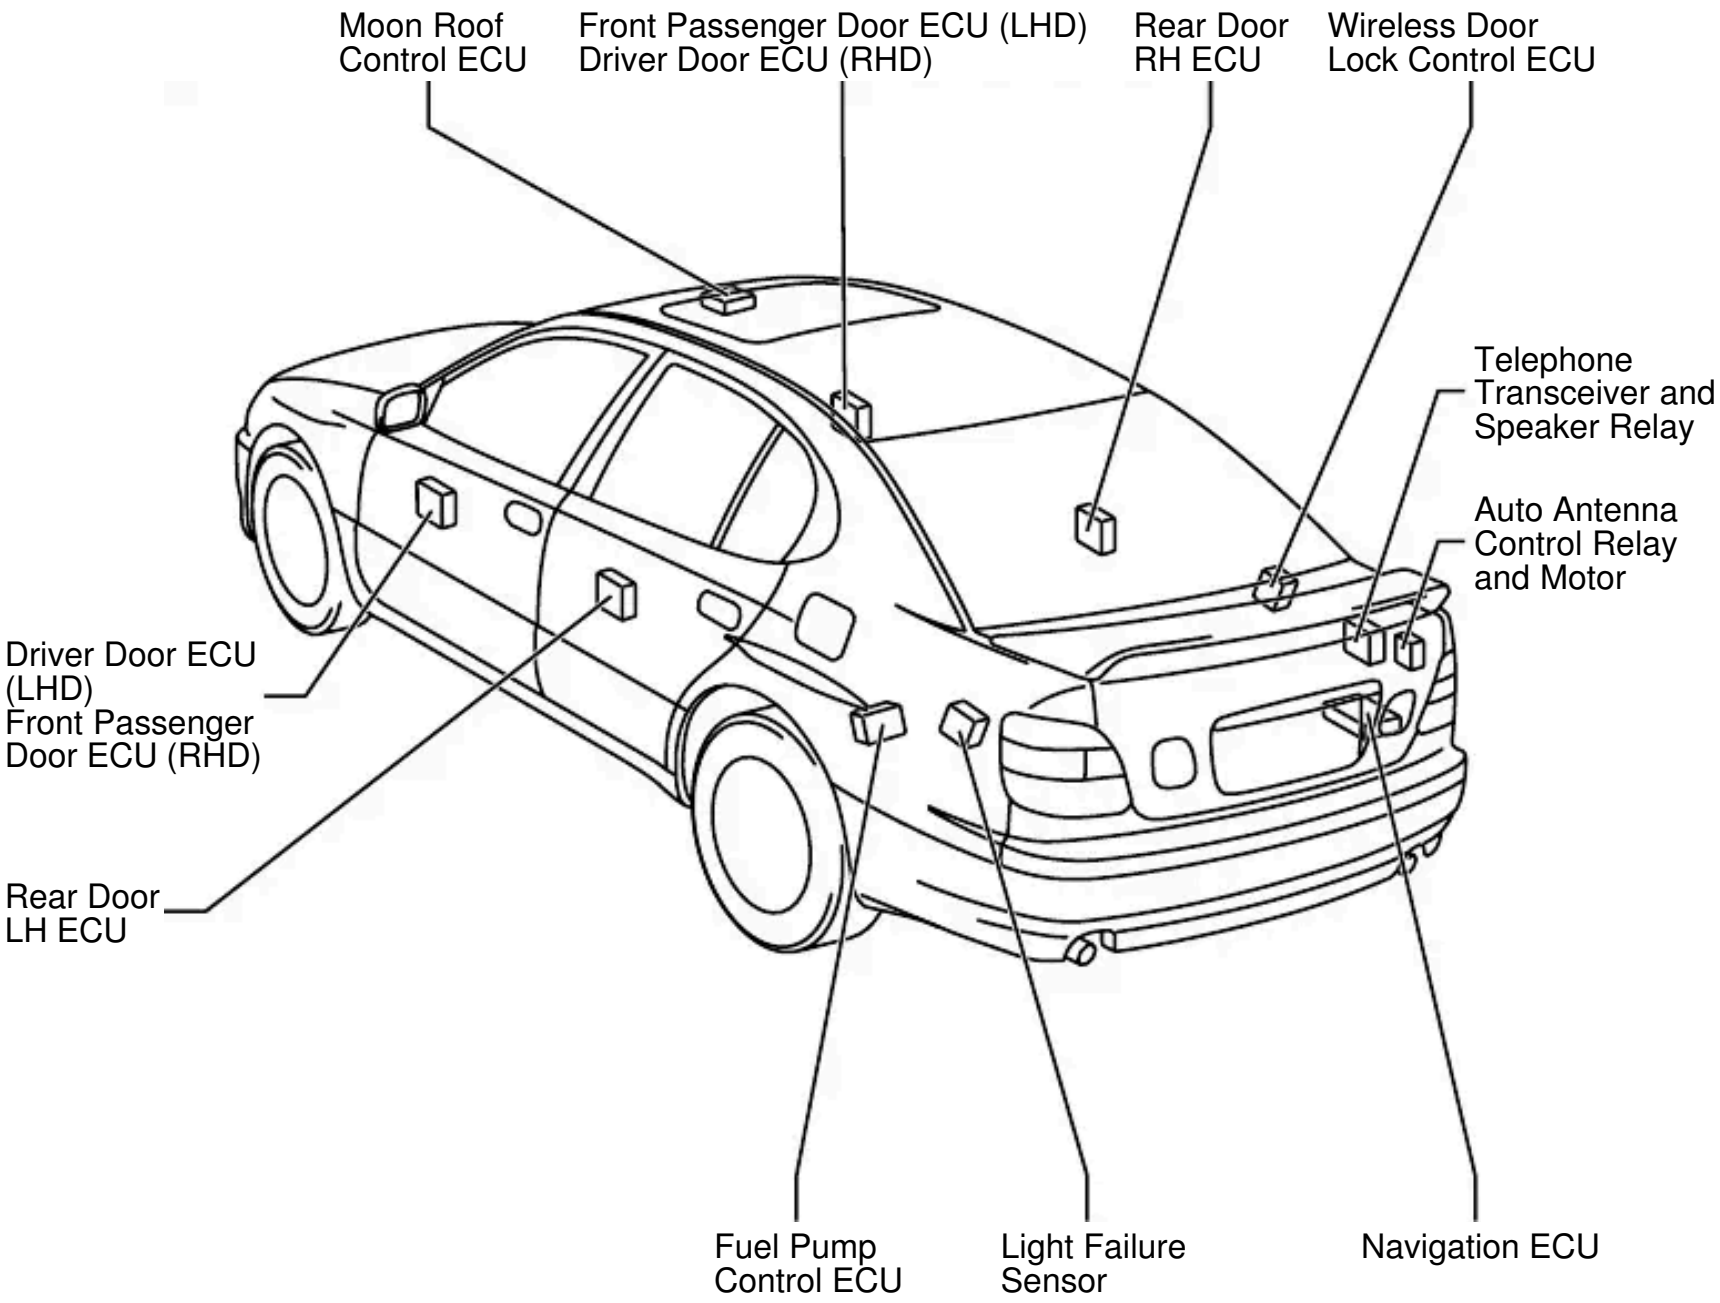

[Seat]

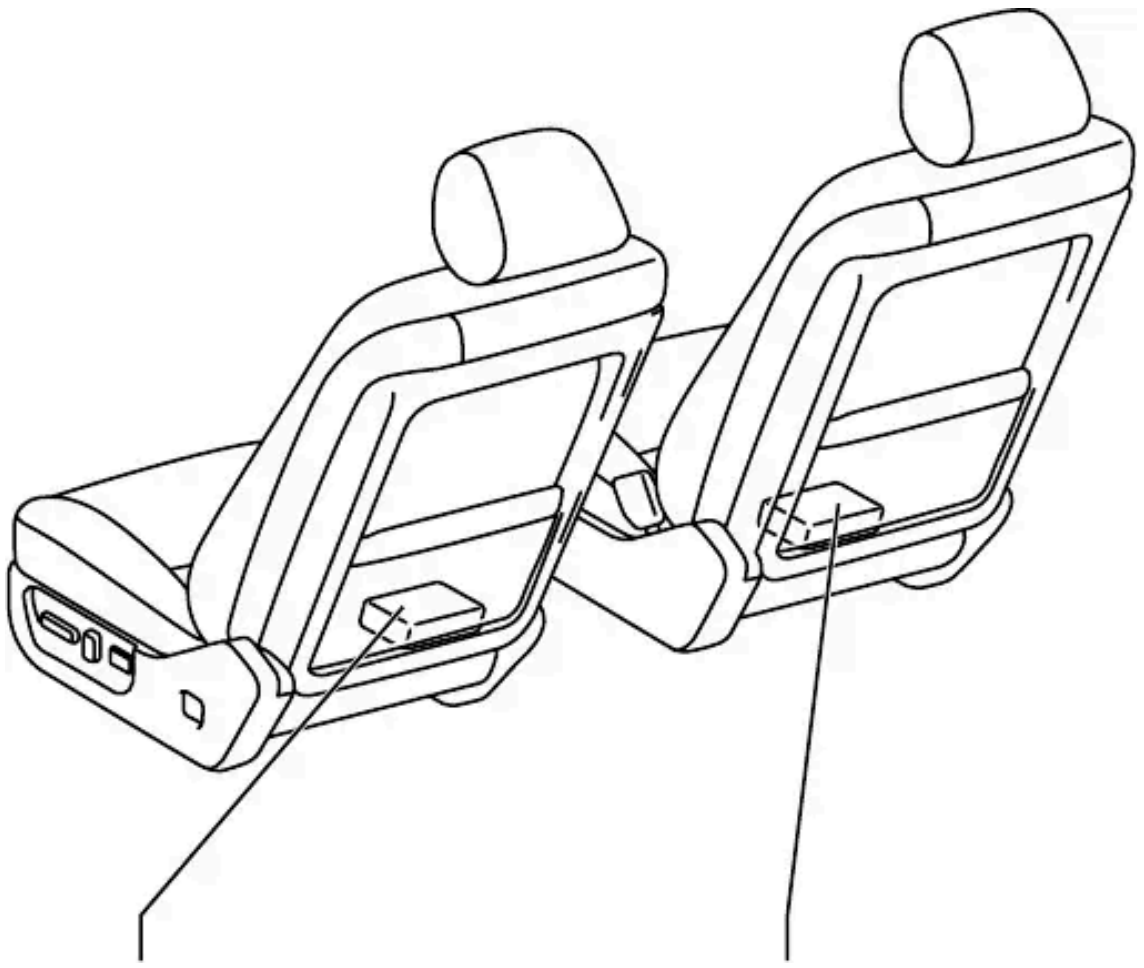

D RELAY LOCATIONS

① : Engine Room No.1 R/B	LHD : Engine Compartment Right (See Page 22) RHD : Engine Compartment Left (See Page 22)

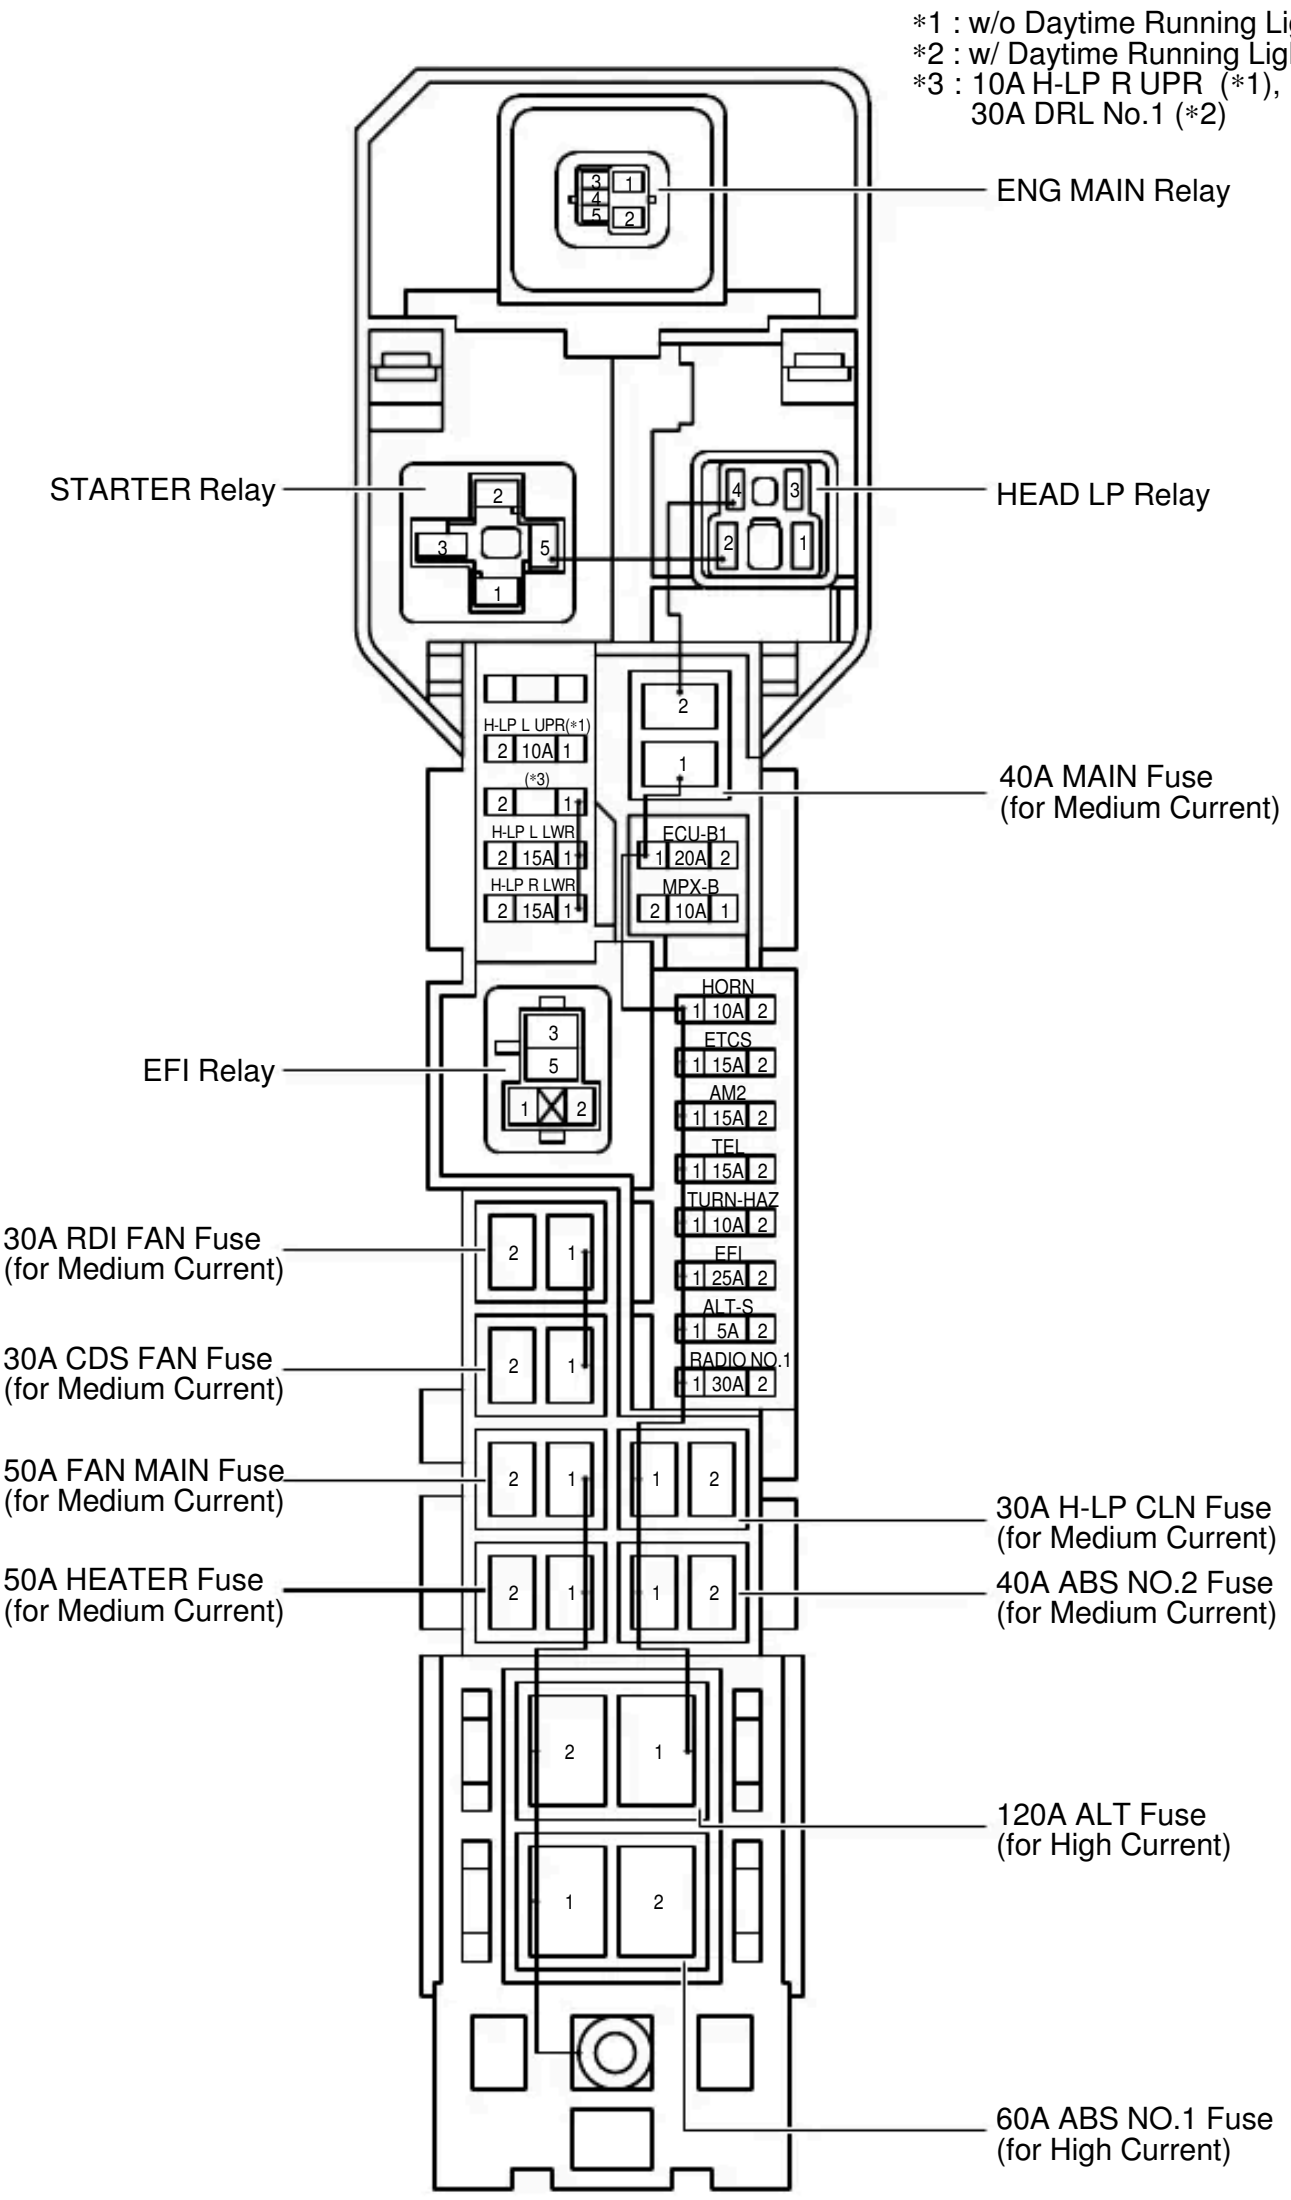

② : Engine Room No.2 R/B	LHD : Engine Compartment Left (See Page 22) RHD : Engine Compartment Right (See Page 22)

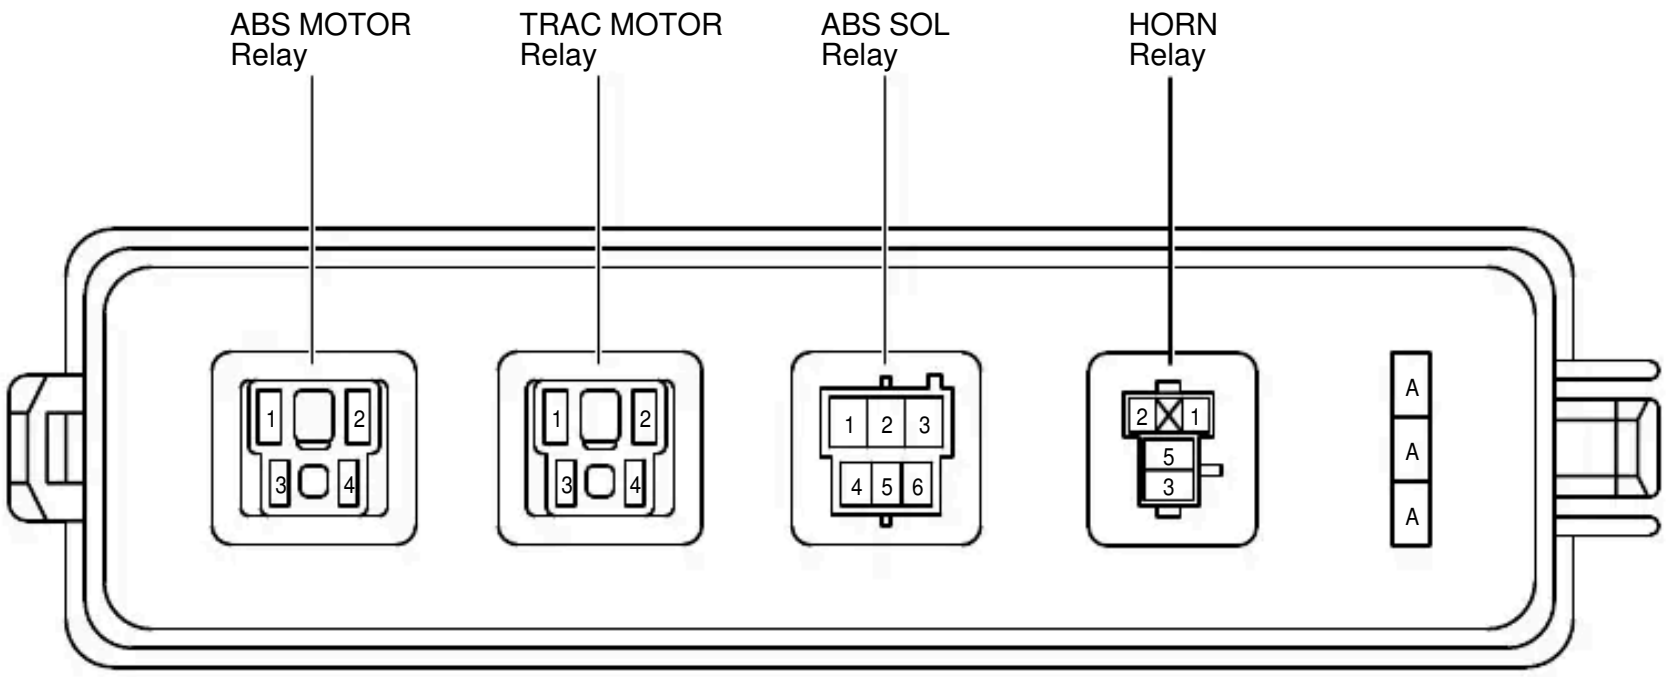

D RELAY LOCATIONS

③ : Engine Room No.3 R/B	Engine Compartment Left (See Page 22)

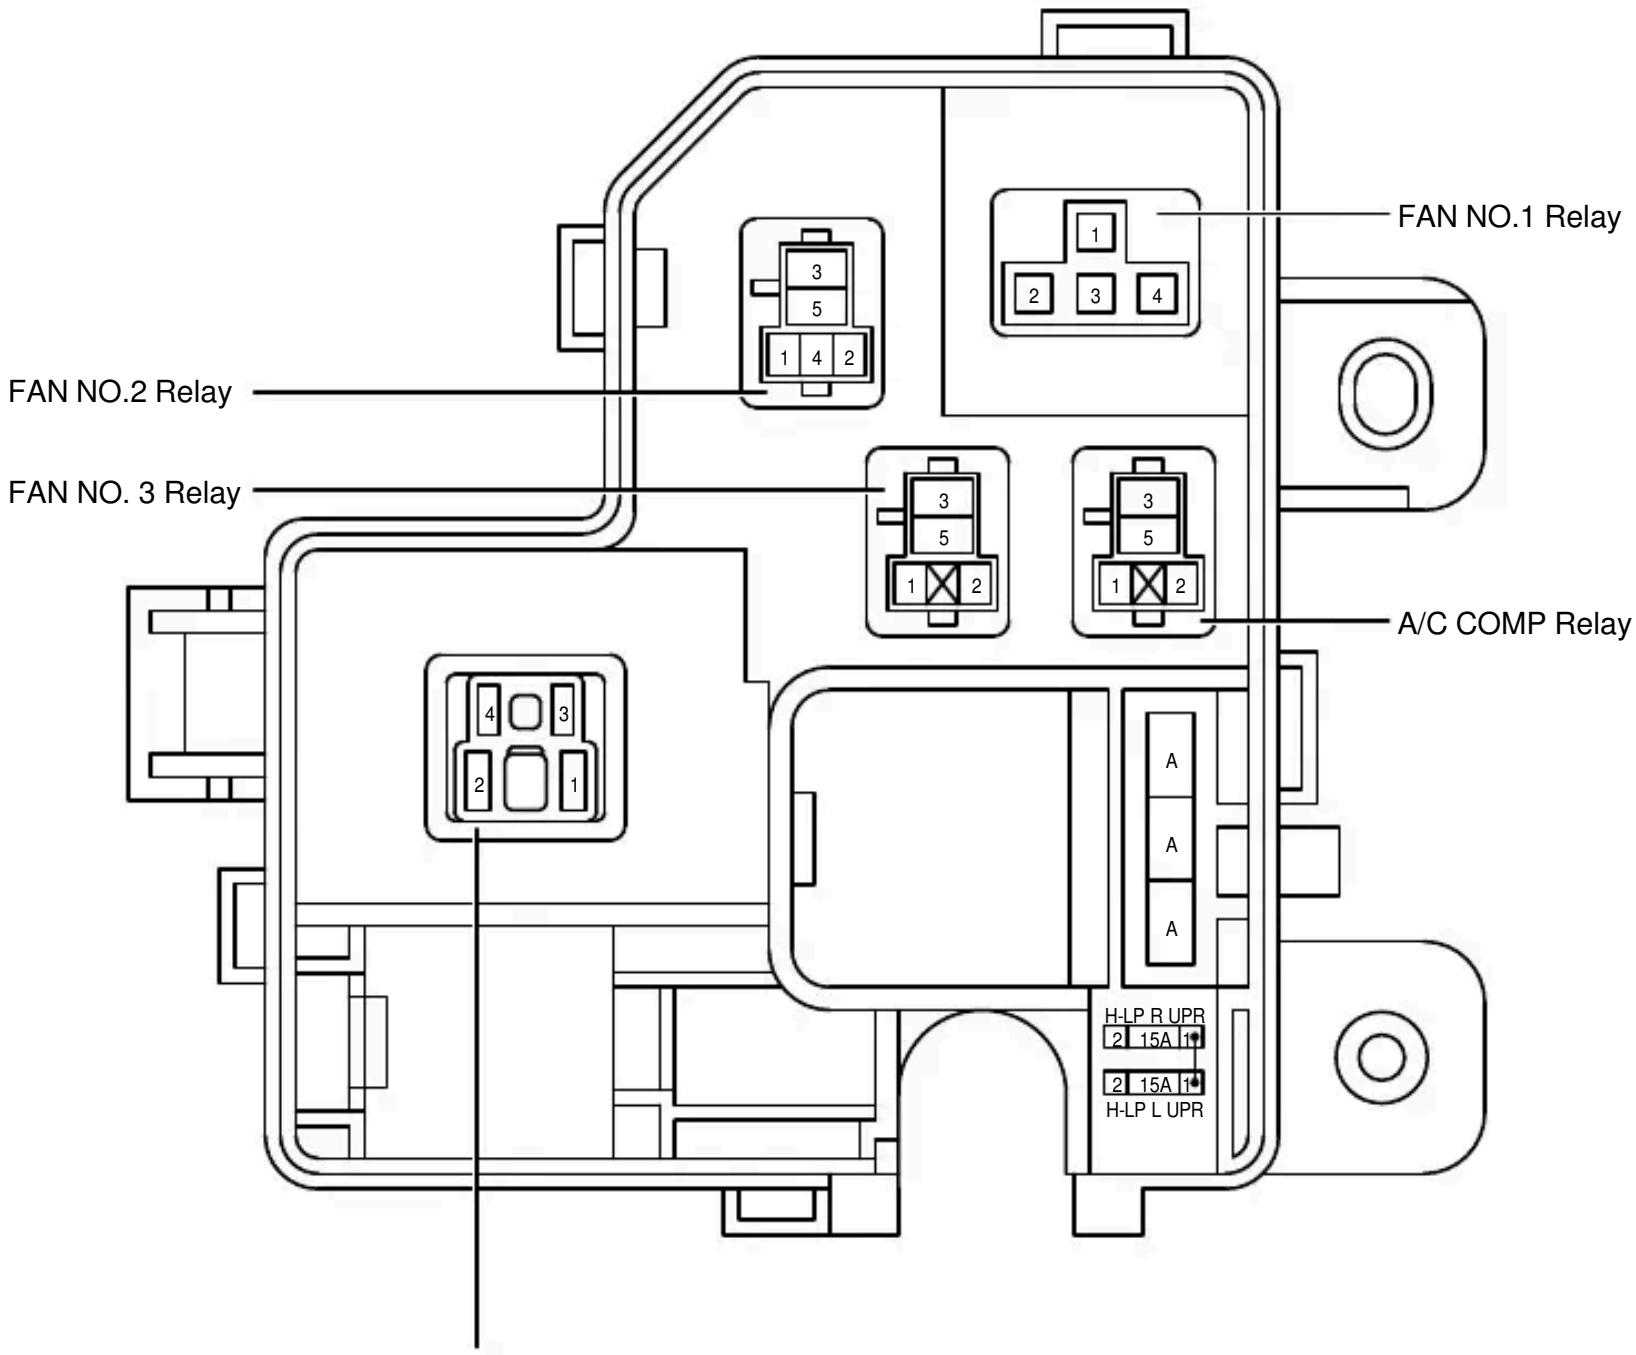

④ : Passenger Side R/B	LHD : Right Kick Panel (See Page 23) RHD : Left Kick Panel (See Page 23)

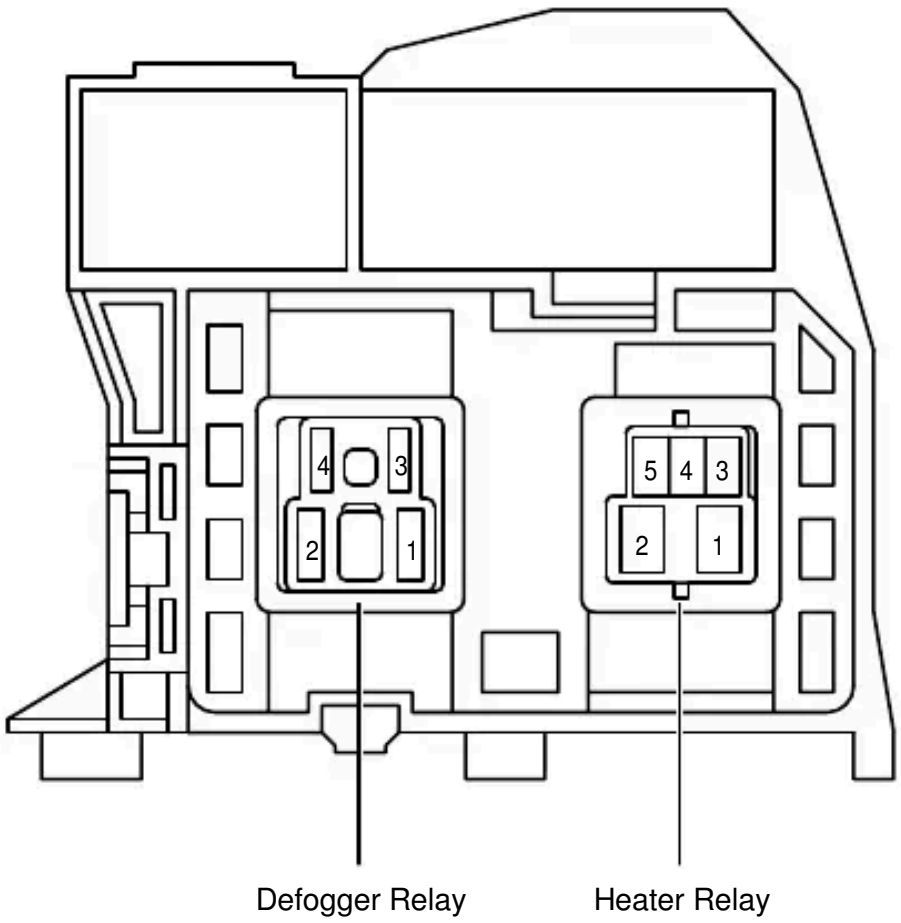

⑤ : Driver Side R/B	Right Kick Panel (See Page 23)

(RHD)

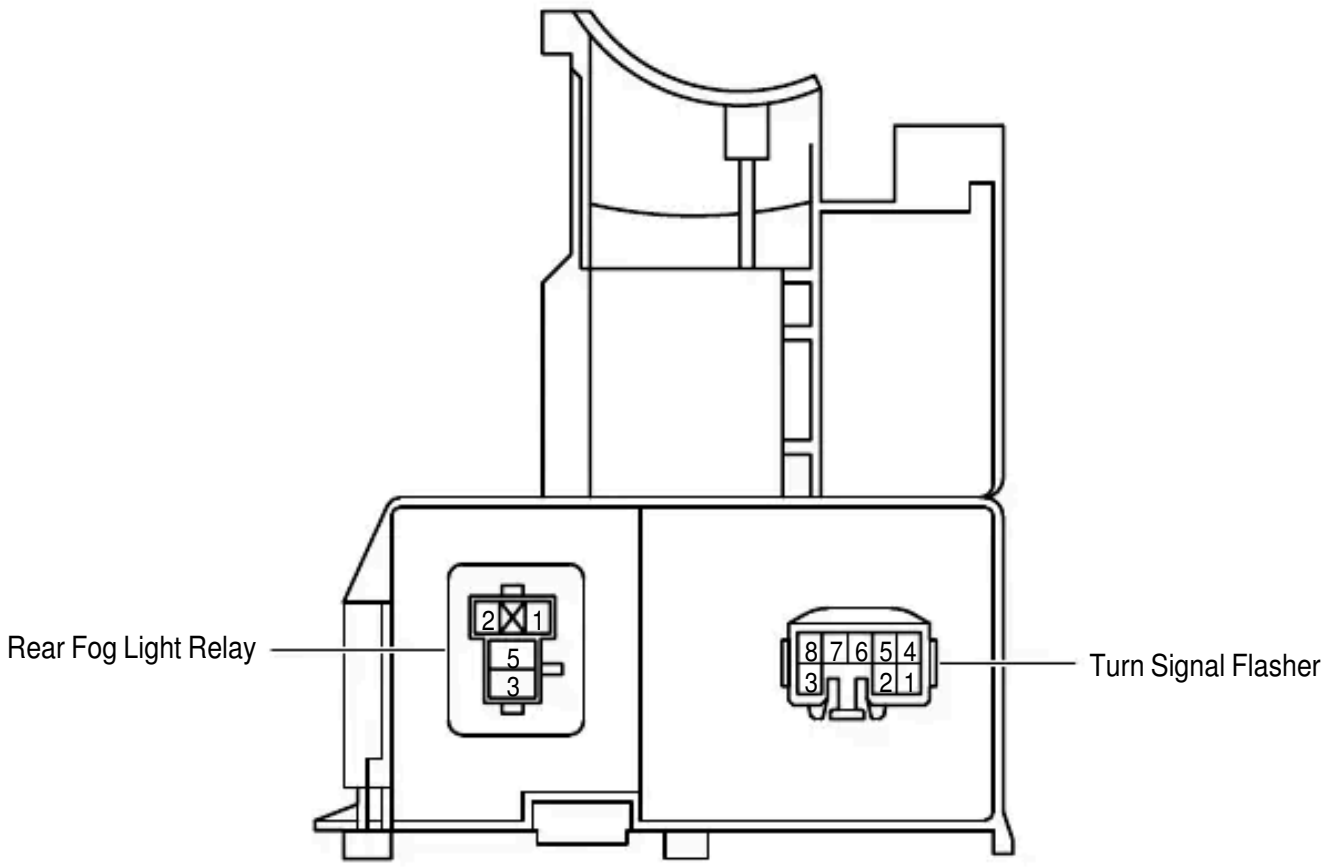

D RELAY LOCATIONS

: Driver Side J/B	LHD : Left Kick Panel (See Page 23)
	RHD : Right Kick Panel (See Page 23)

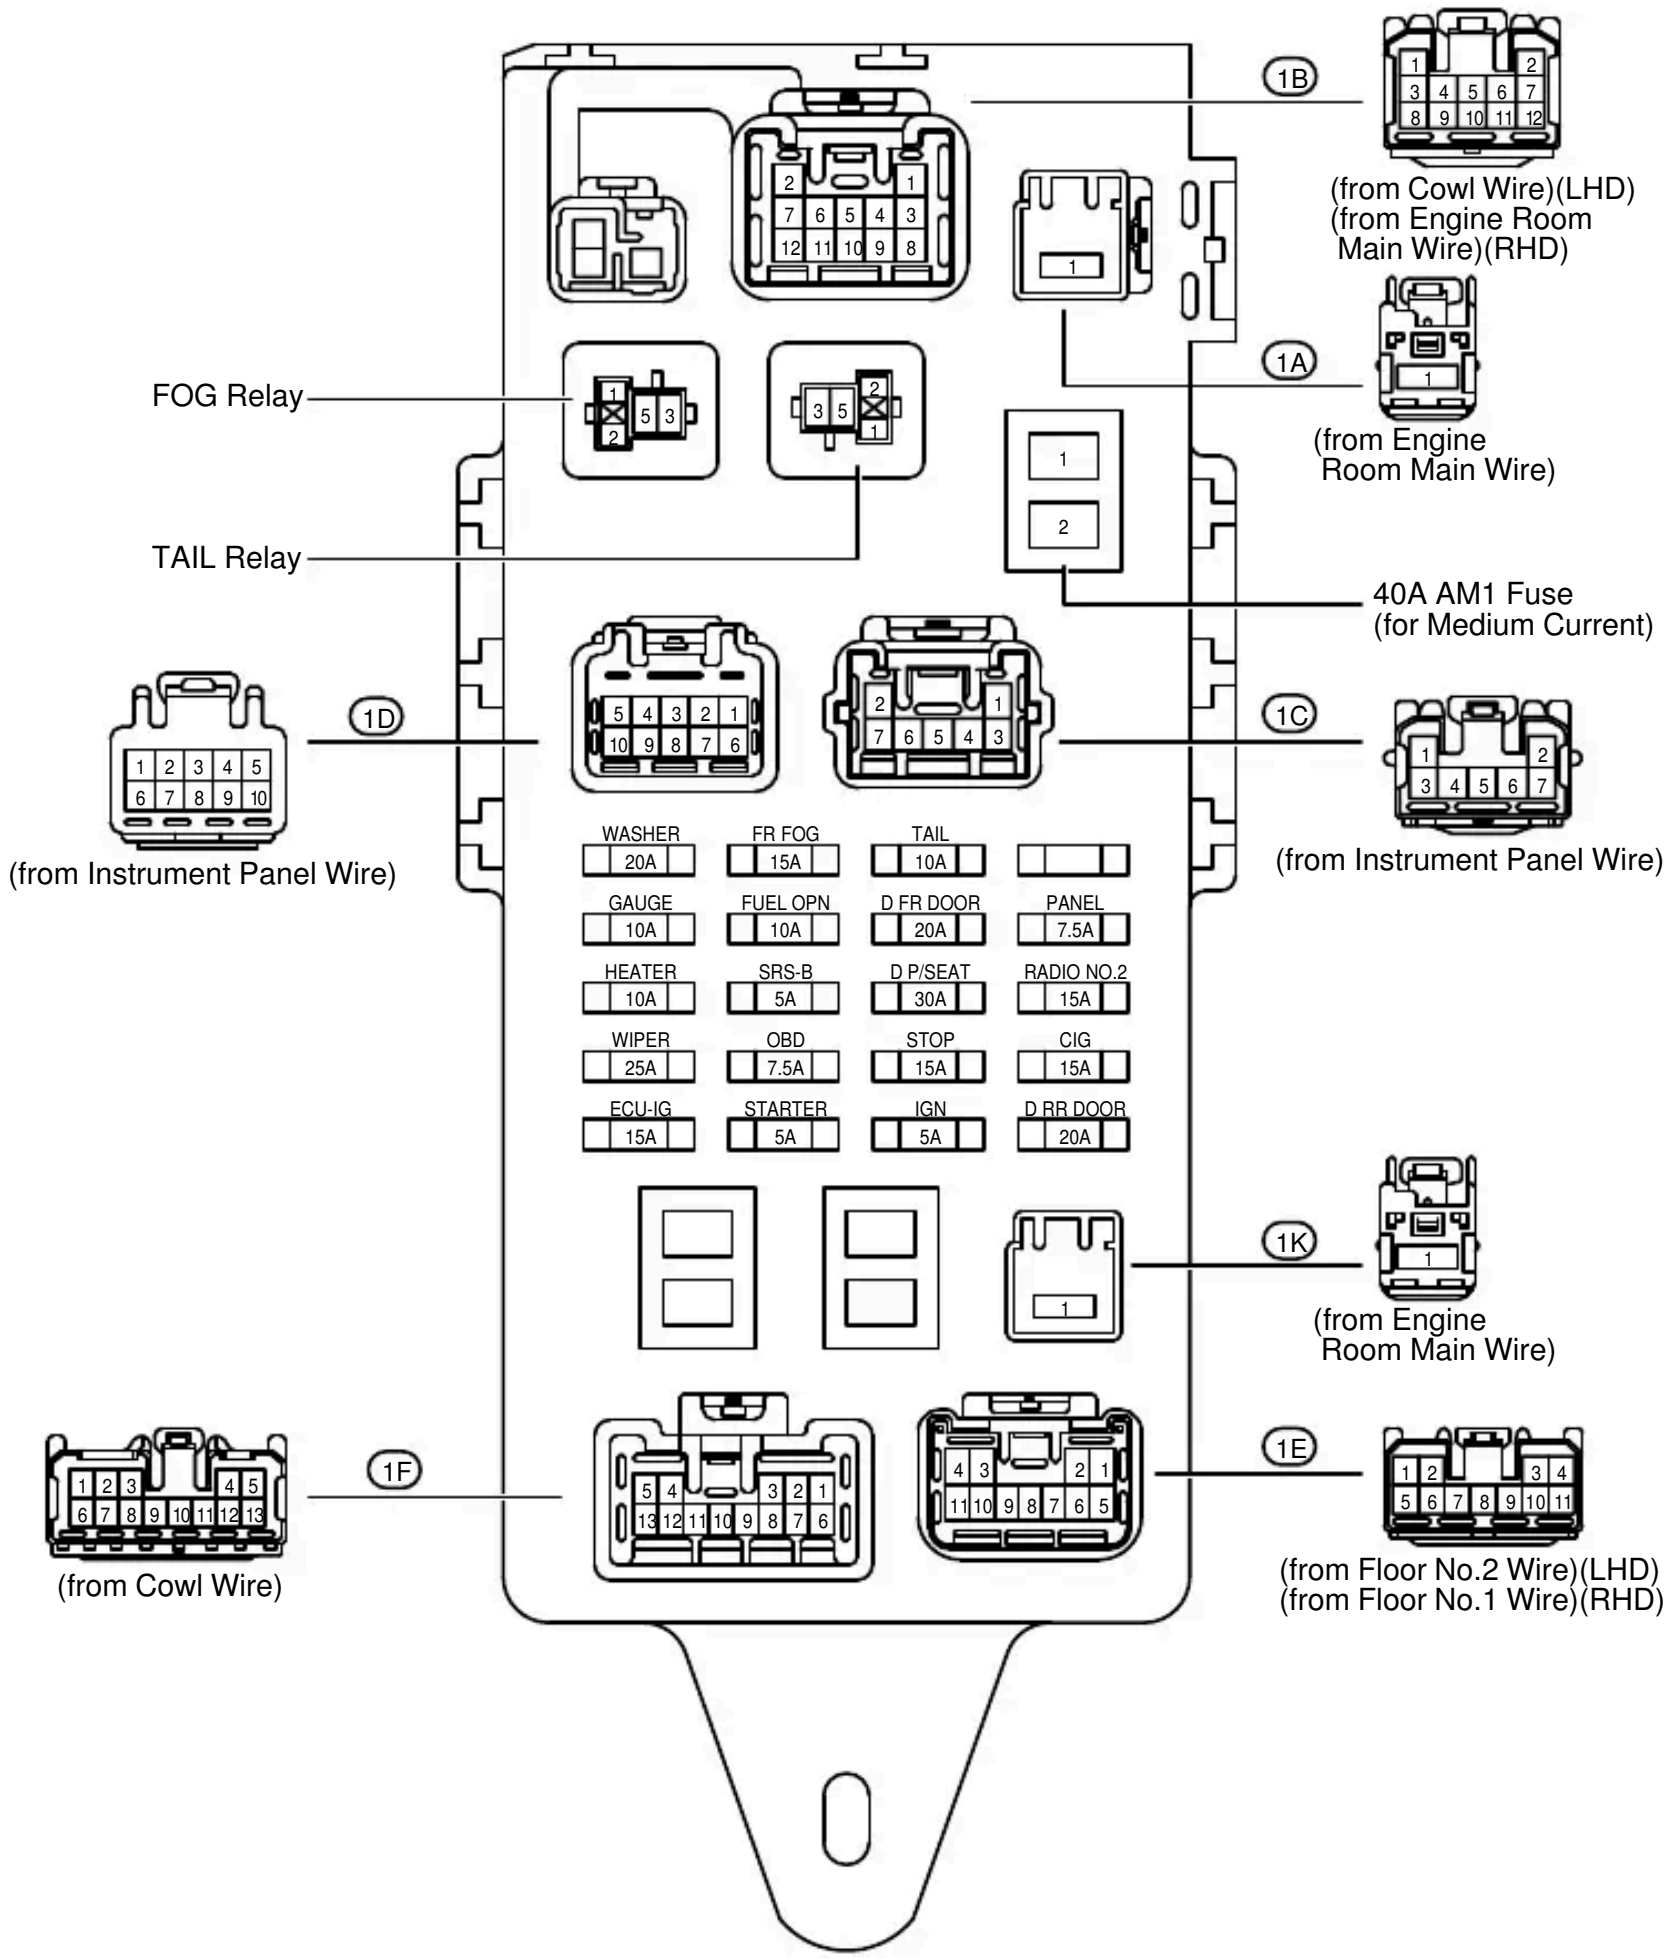

(Inner Circuit : See Page 36)

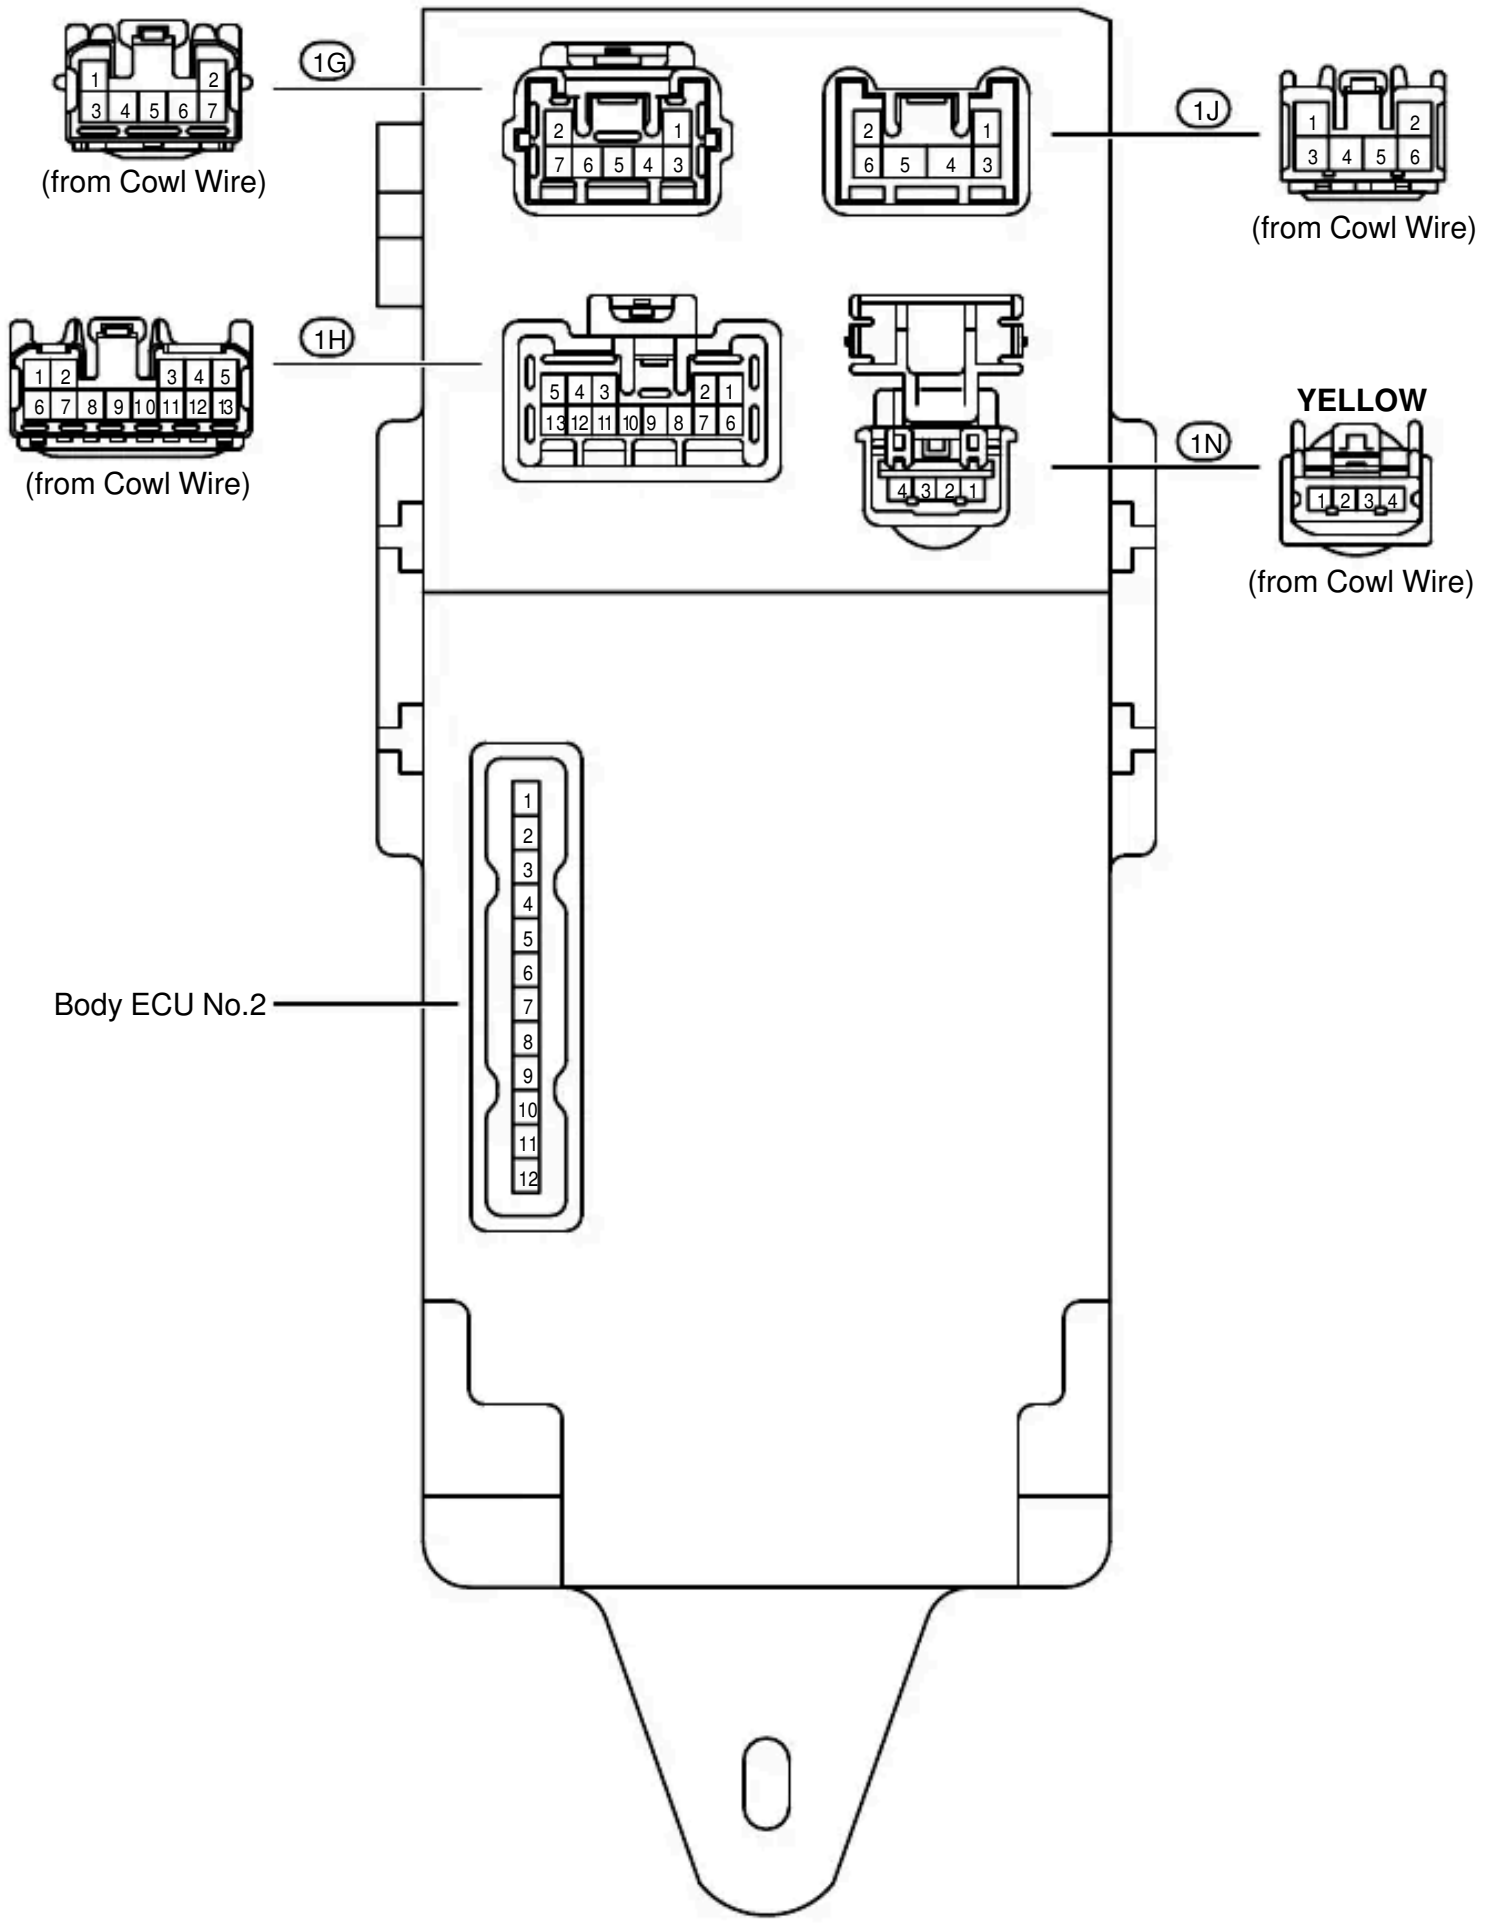

D RELAY LOCATIONS

: Passenger Side J/B	LHD : Right Kick Panel (See Page 23)
	RHD : Left Kick Panel (See Page 23)

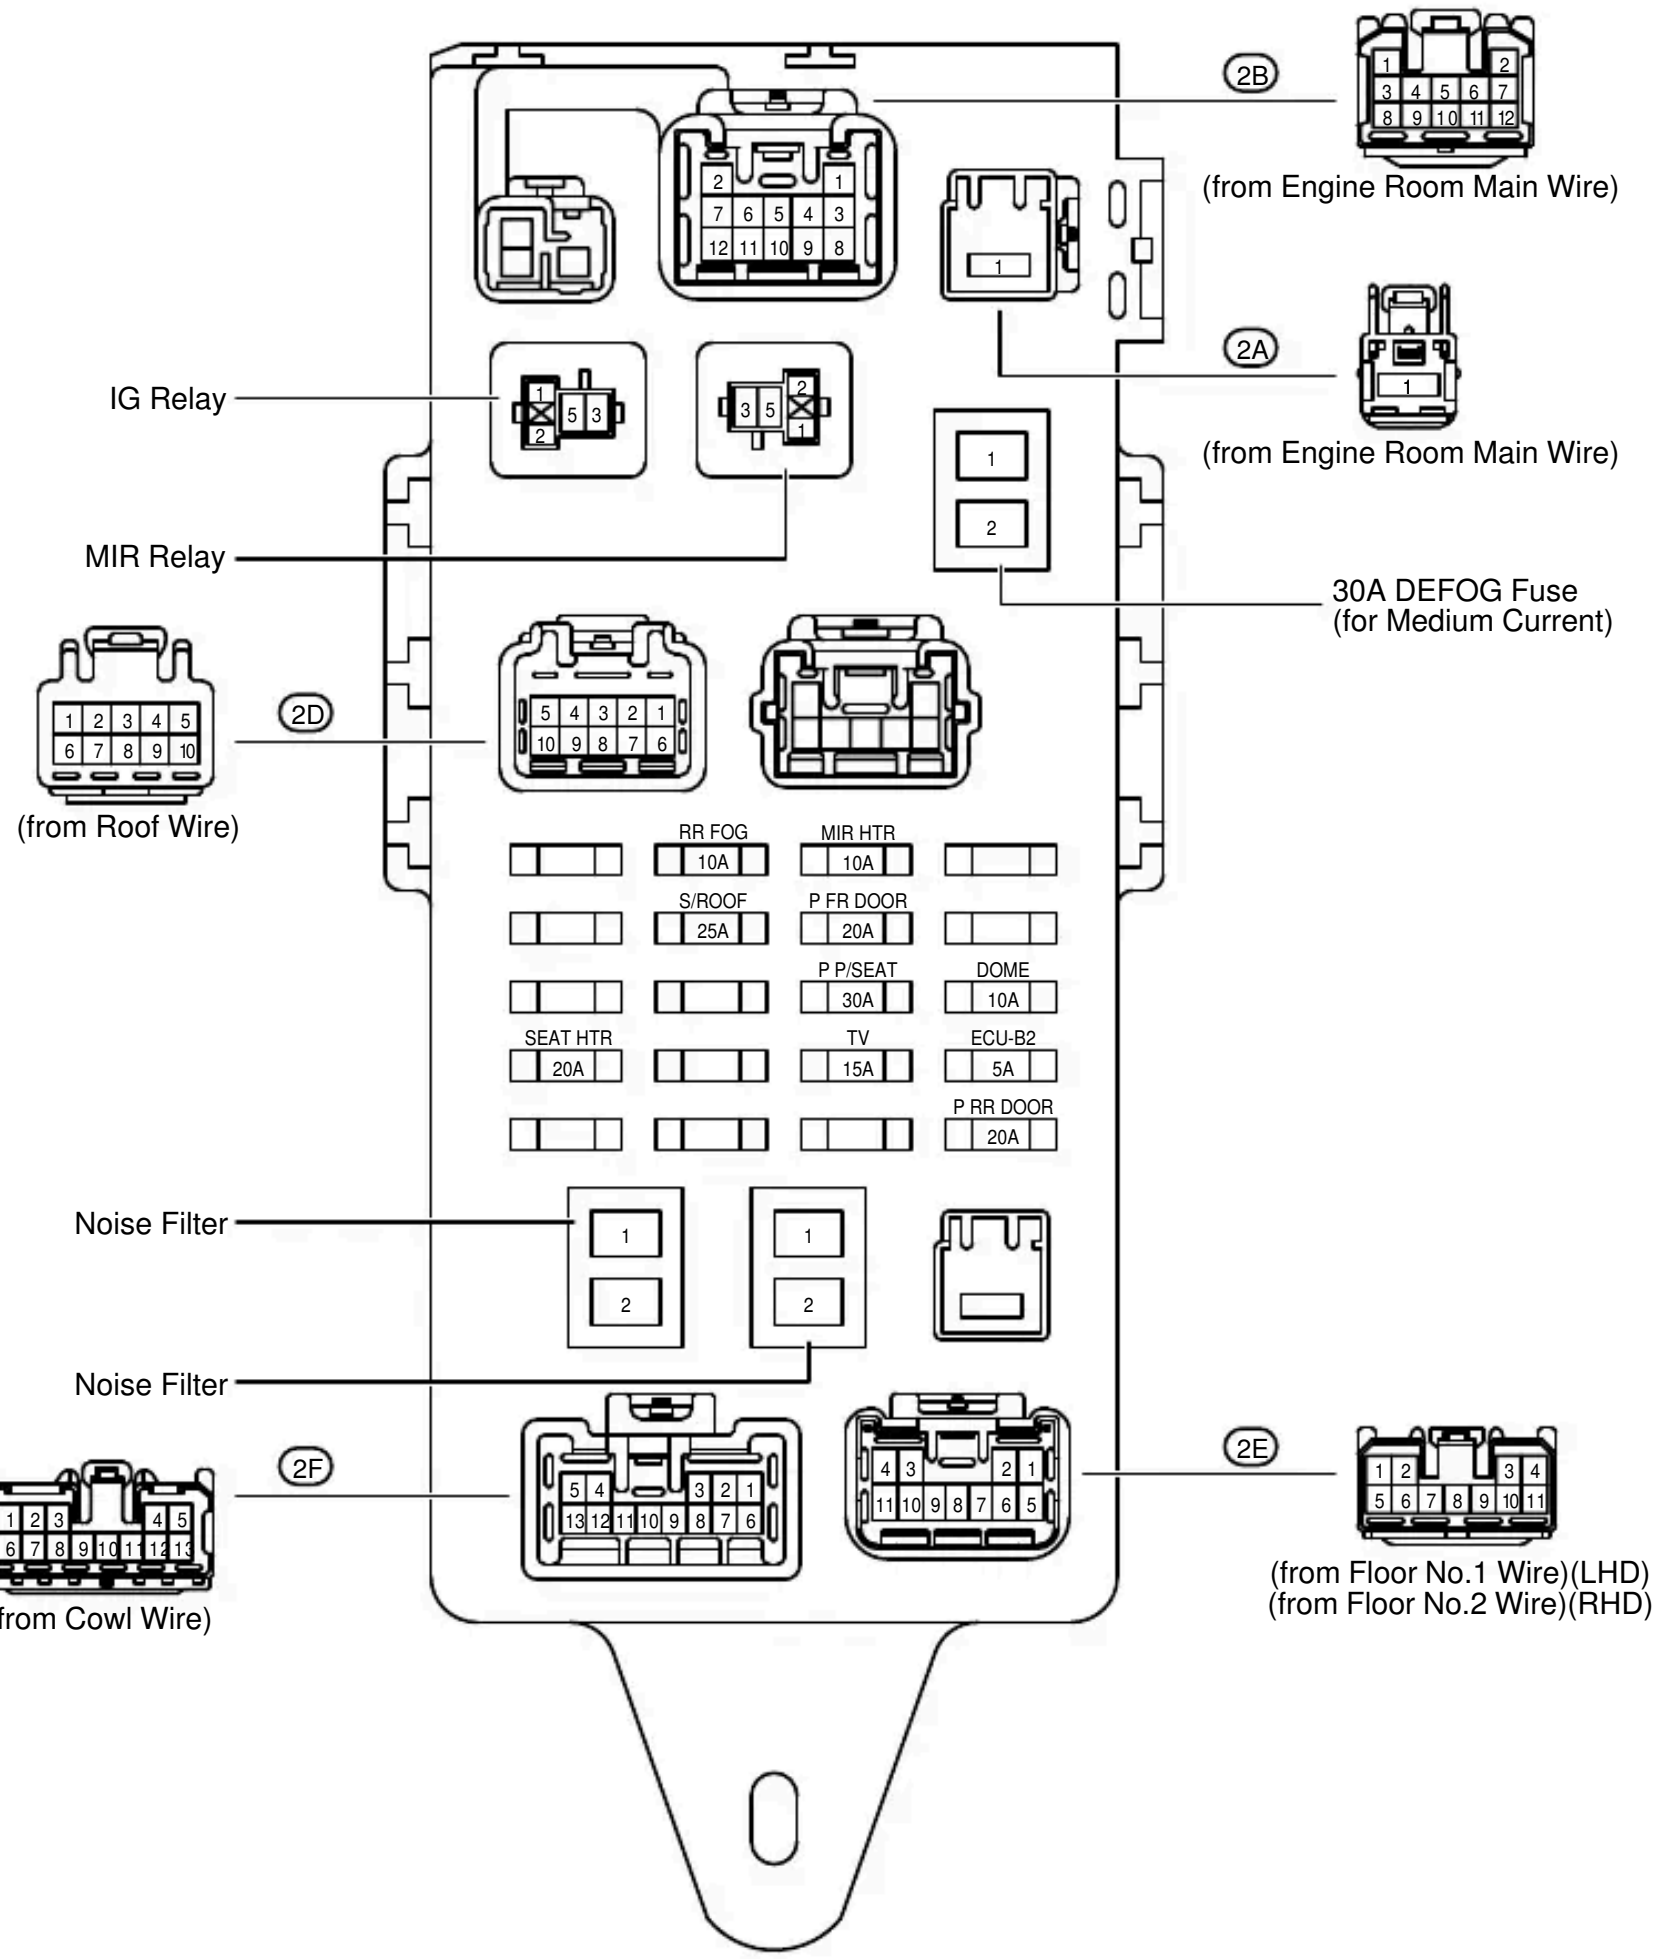

(Inner Circuit : See Page 37)

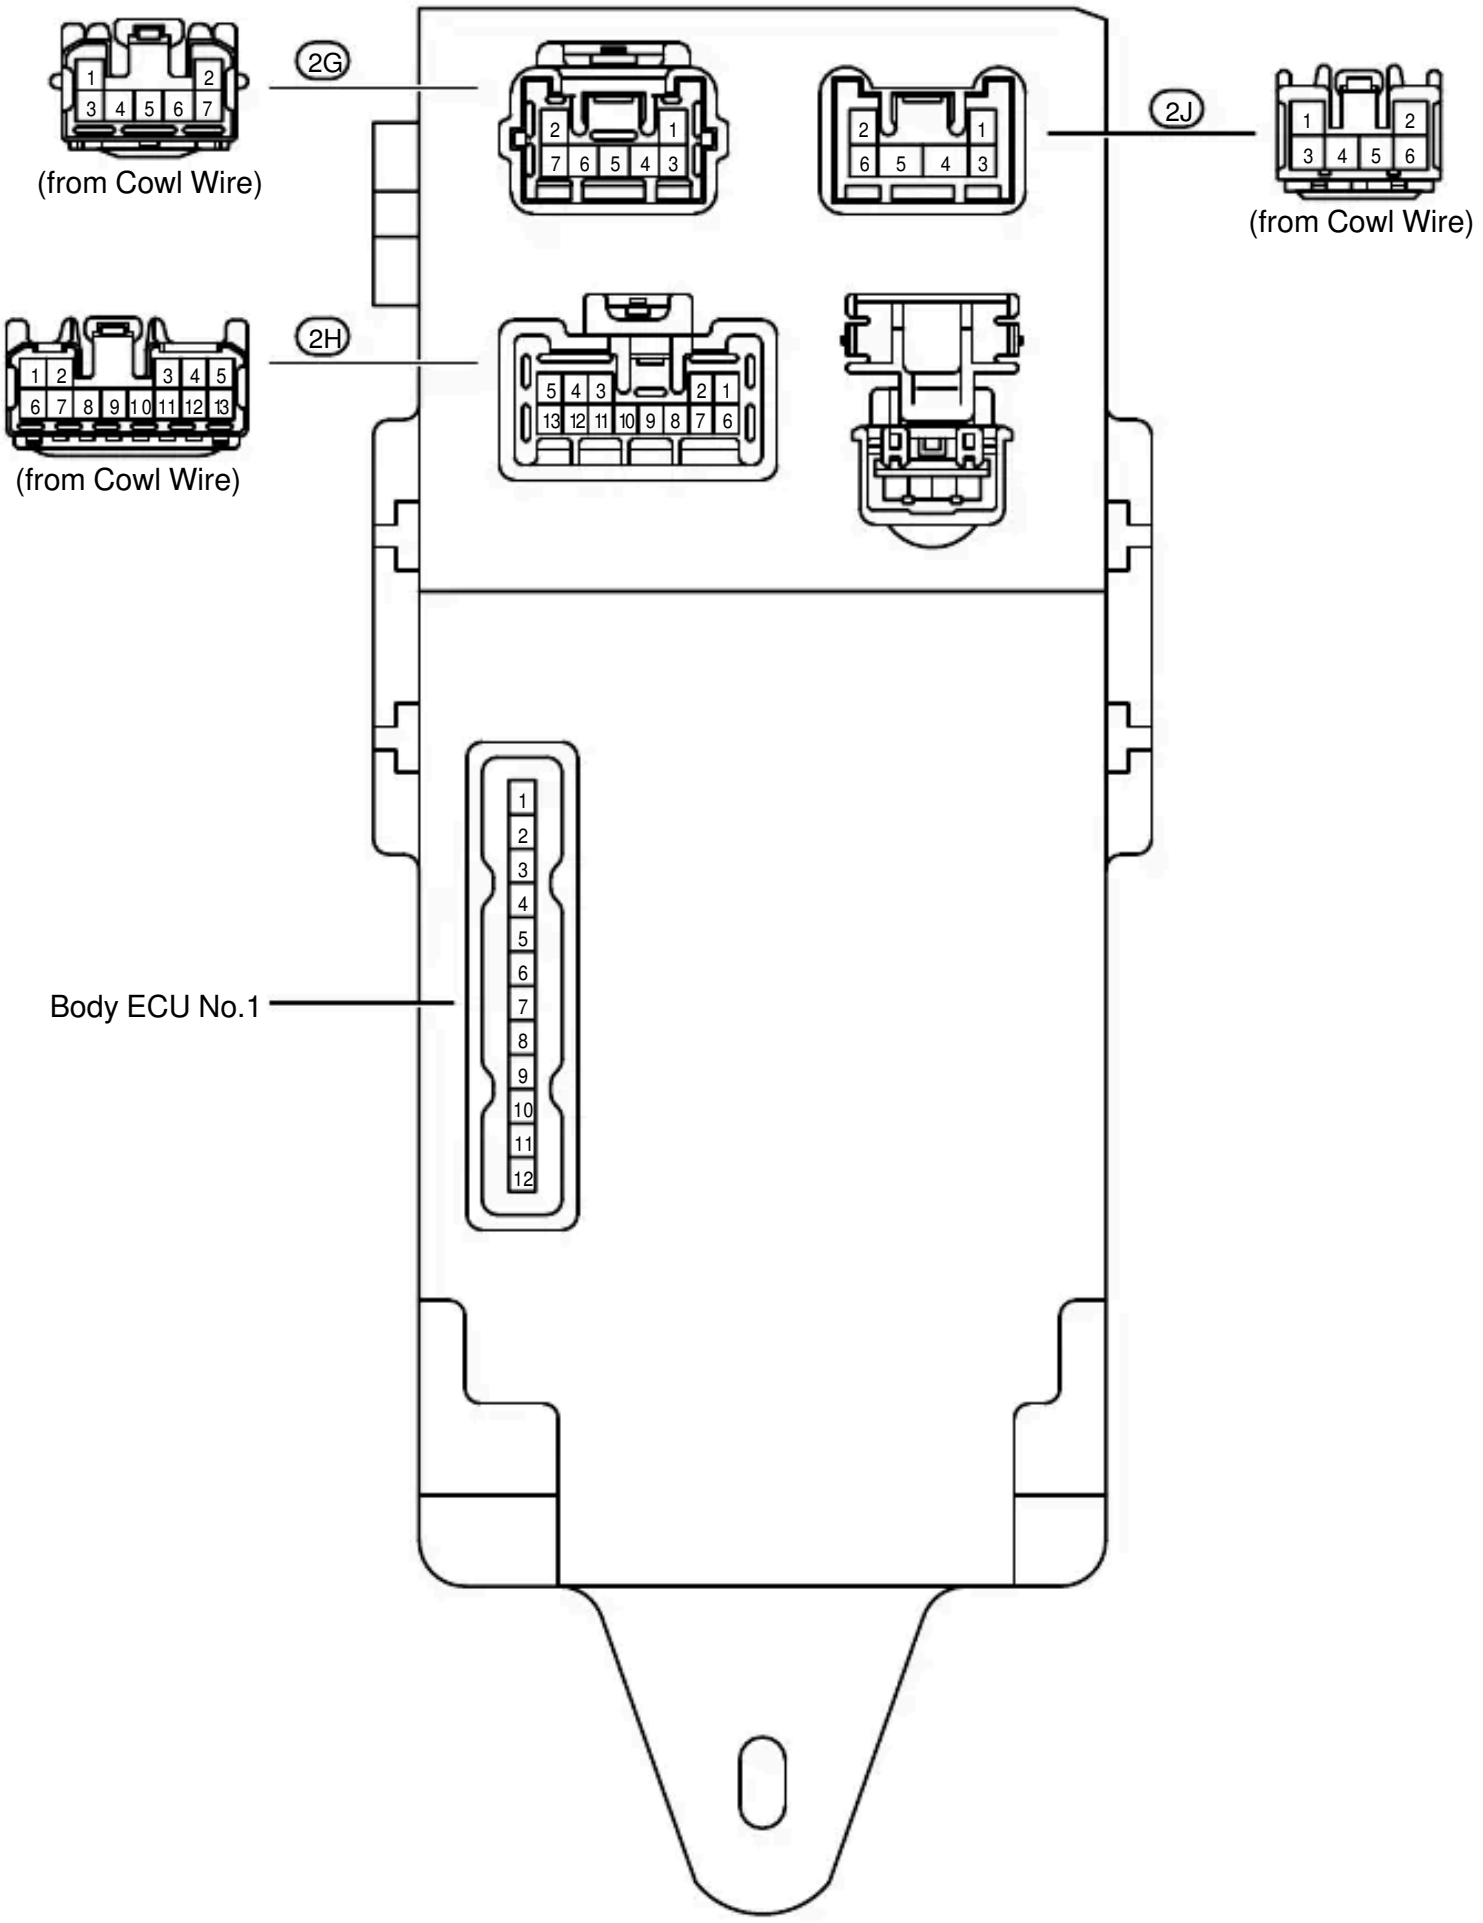

D RELAY LOCATIONS

: Instrument Panel J/B	Instrument Panel Reinforcement Center (See Page 23)

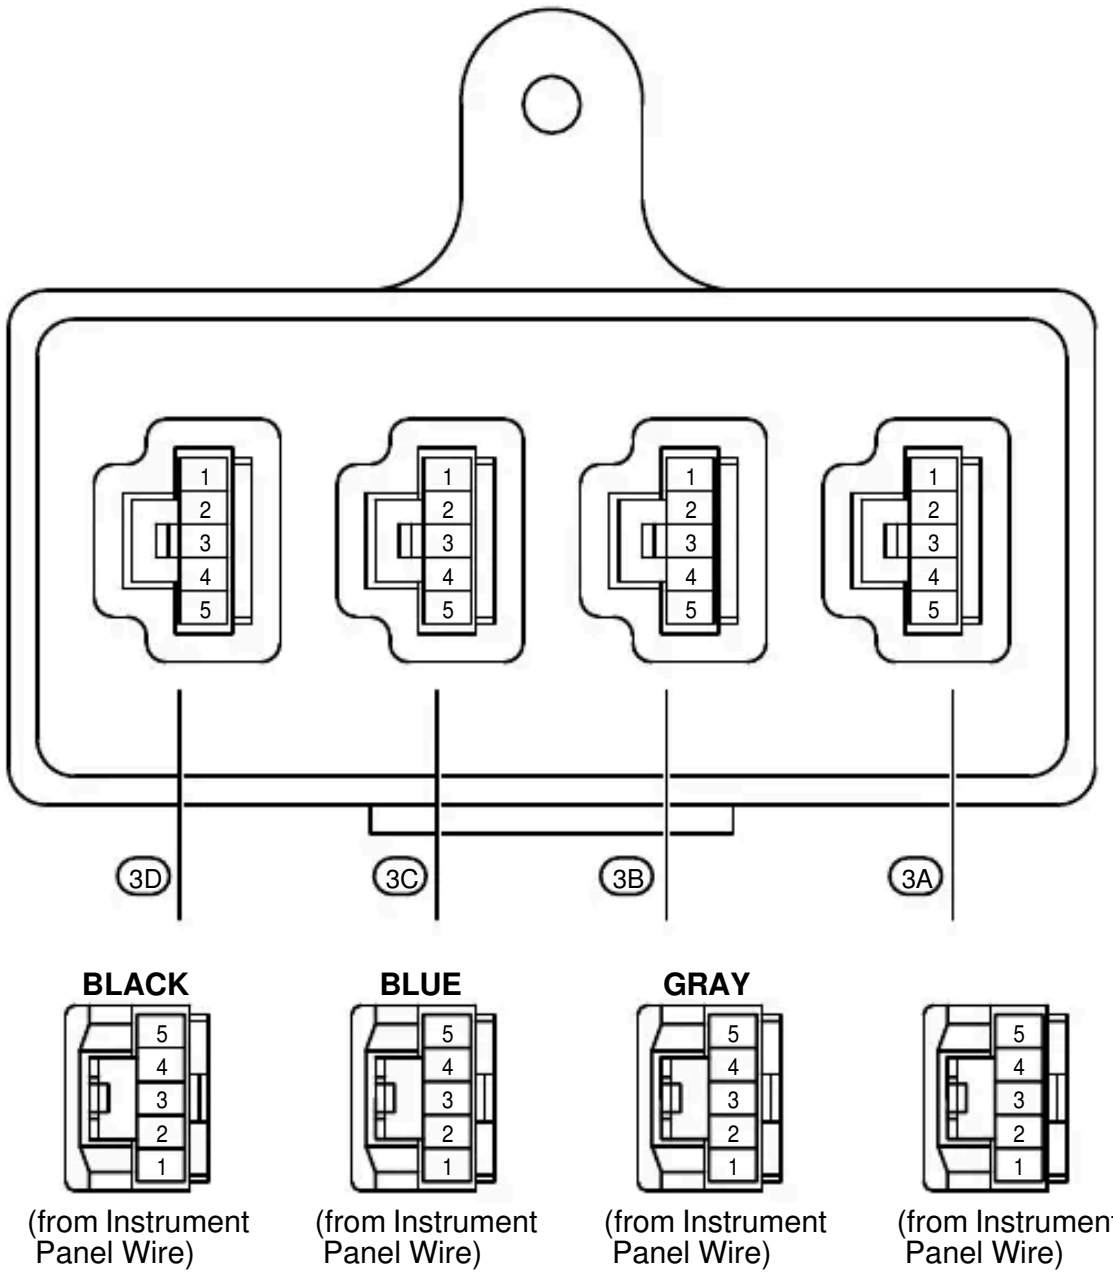

(Inner Circuit : See Page 38)

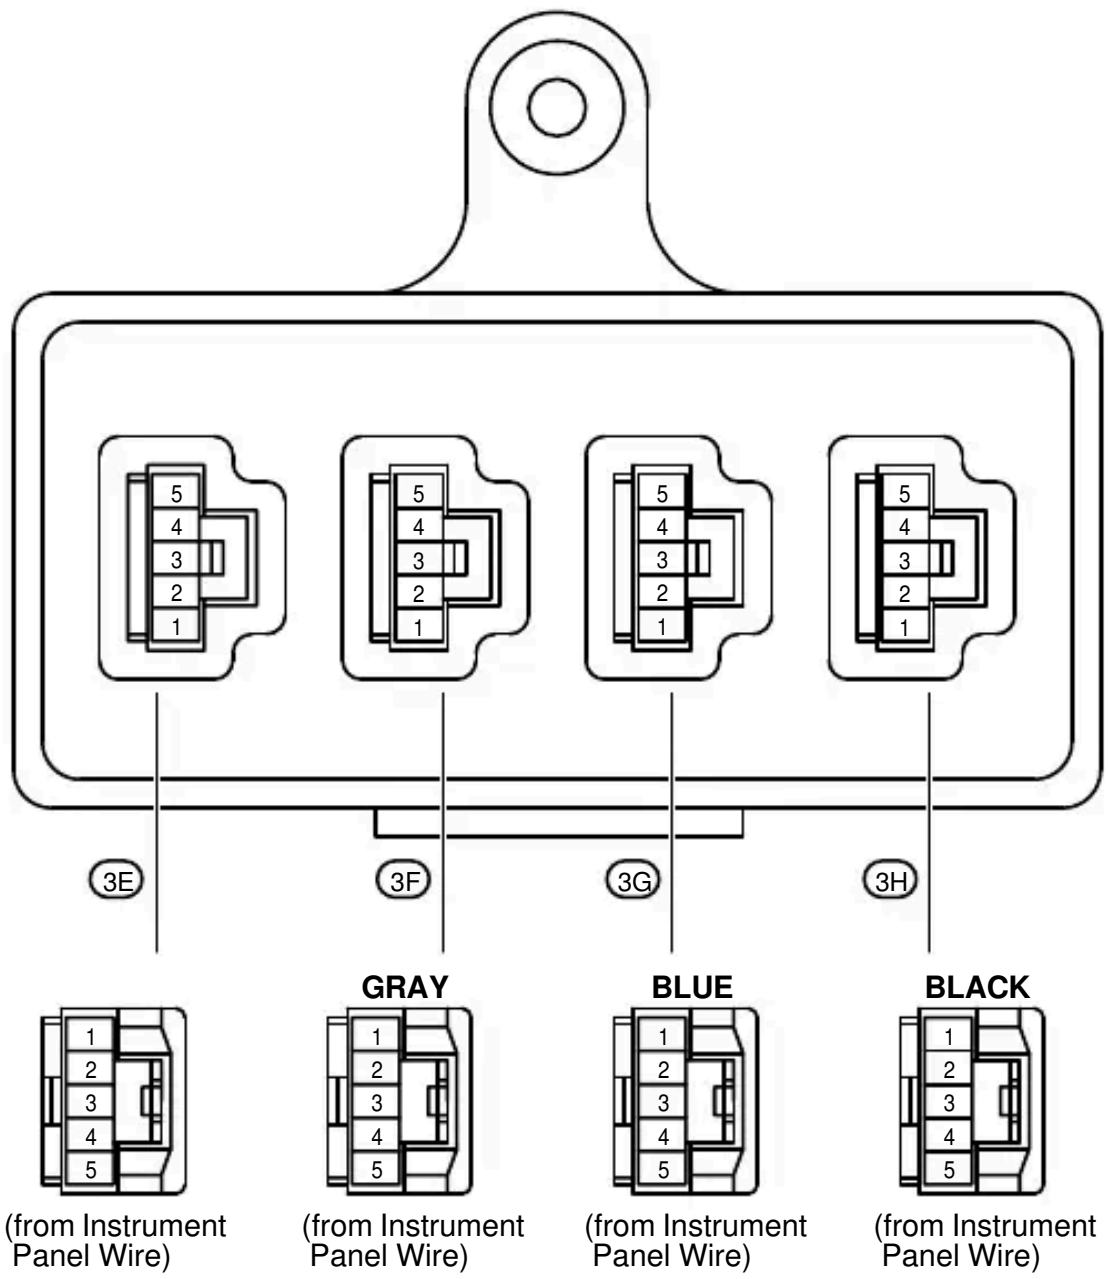

D RELAY LOCATIONS

[Driver Side J/B Inner Circuit]

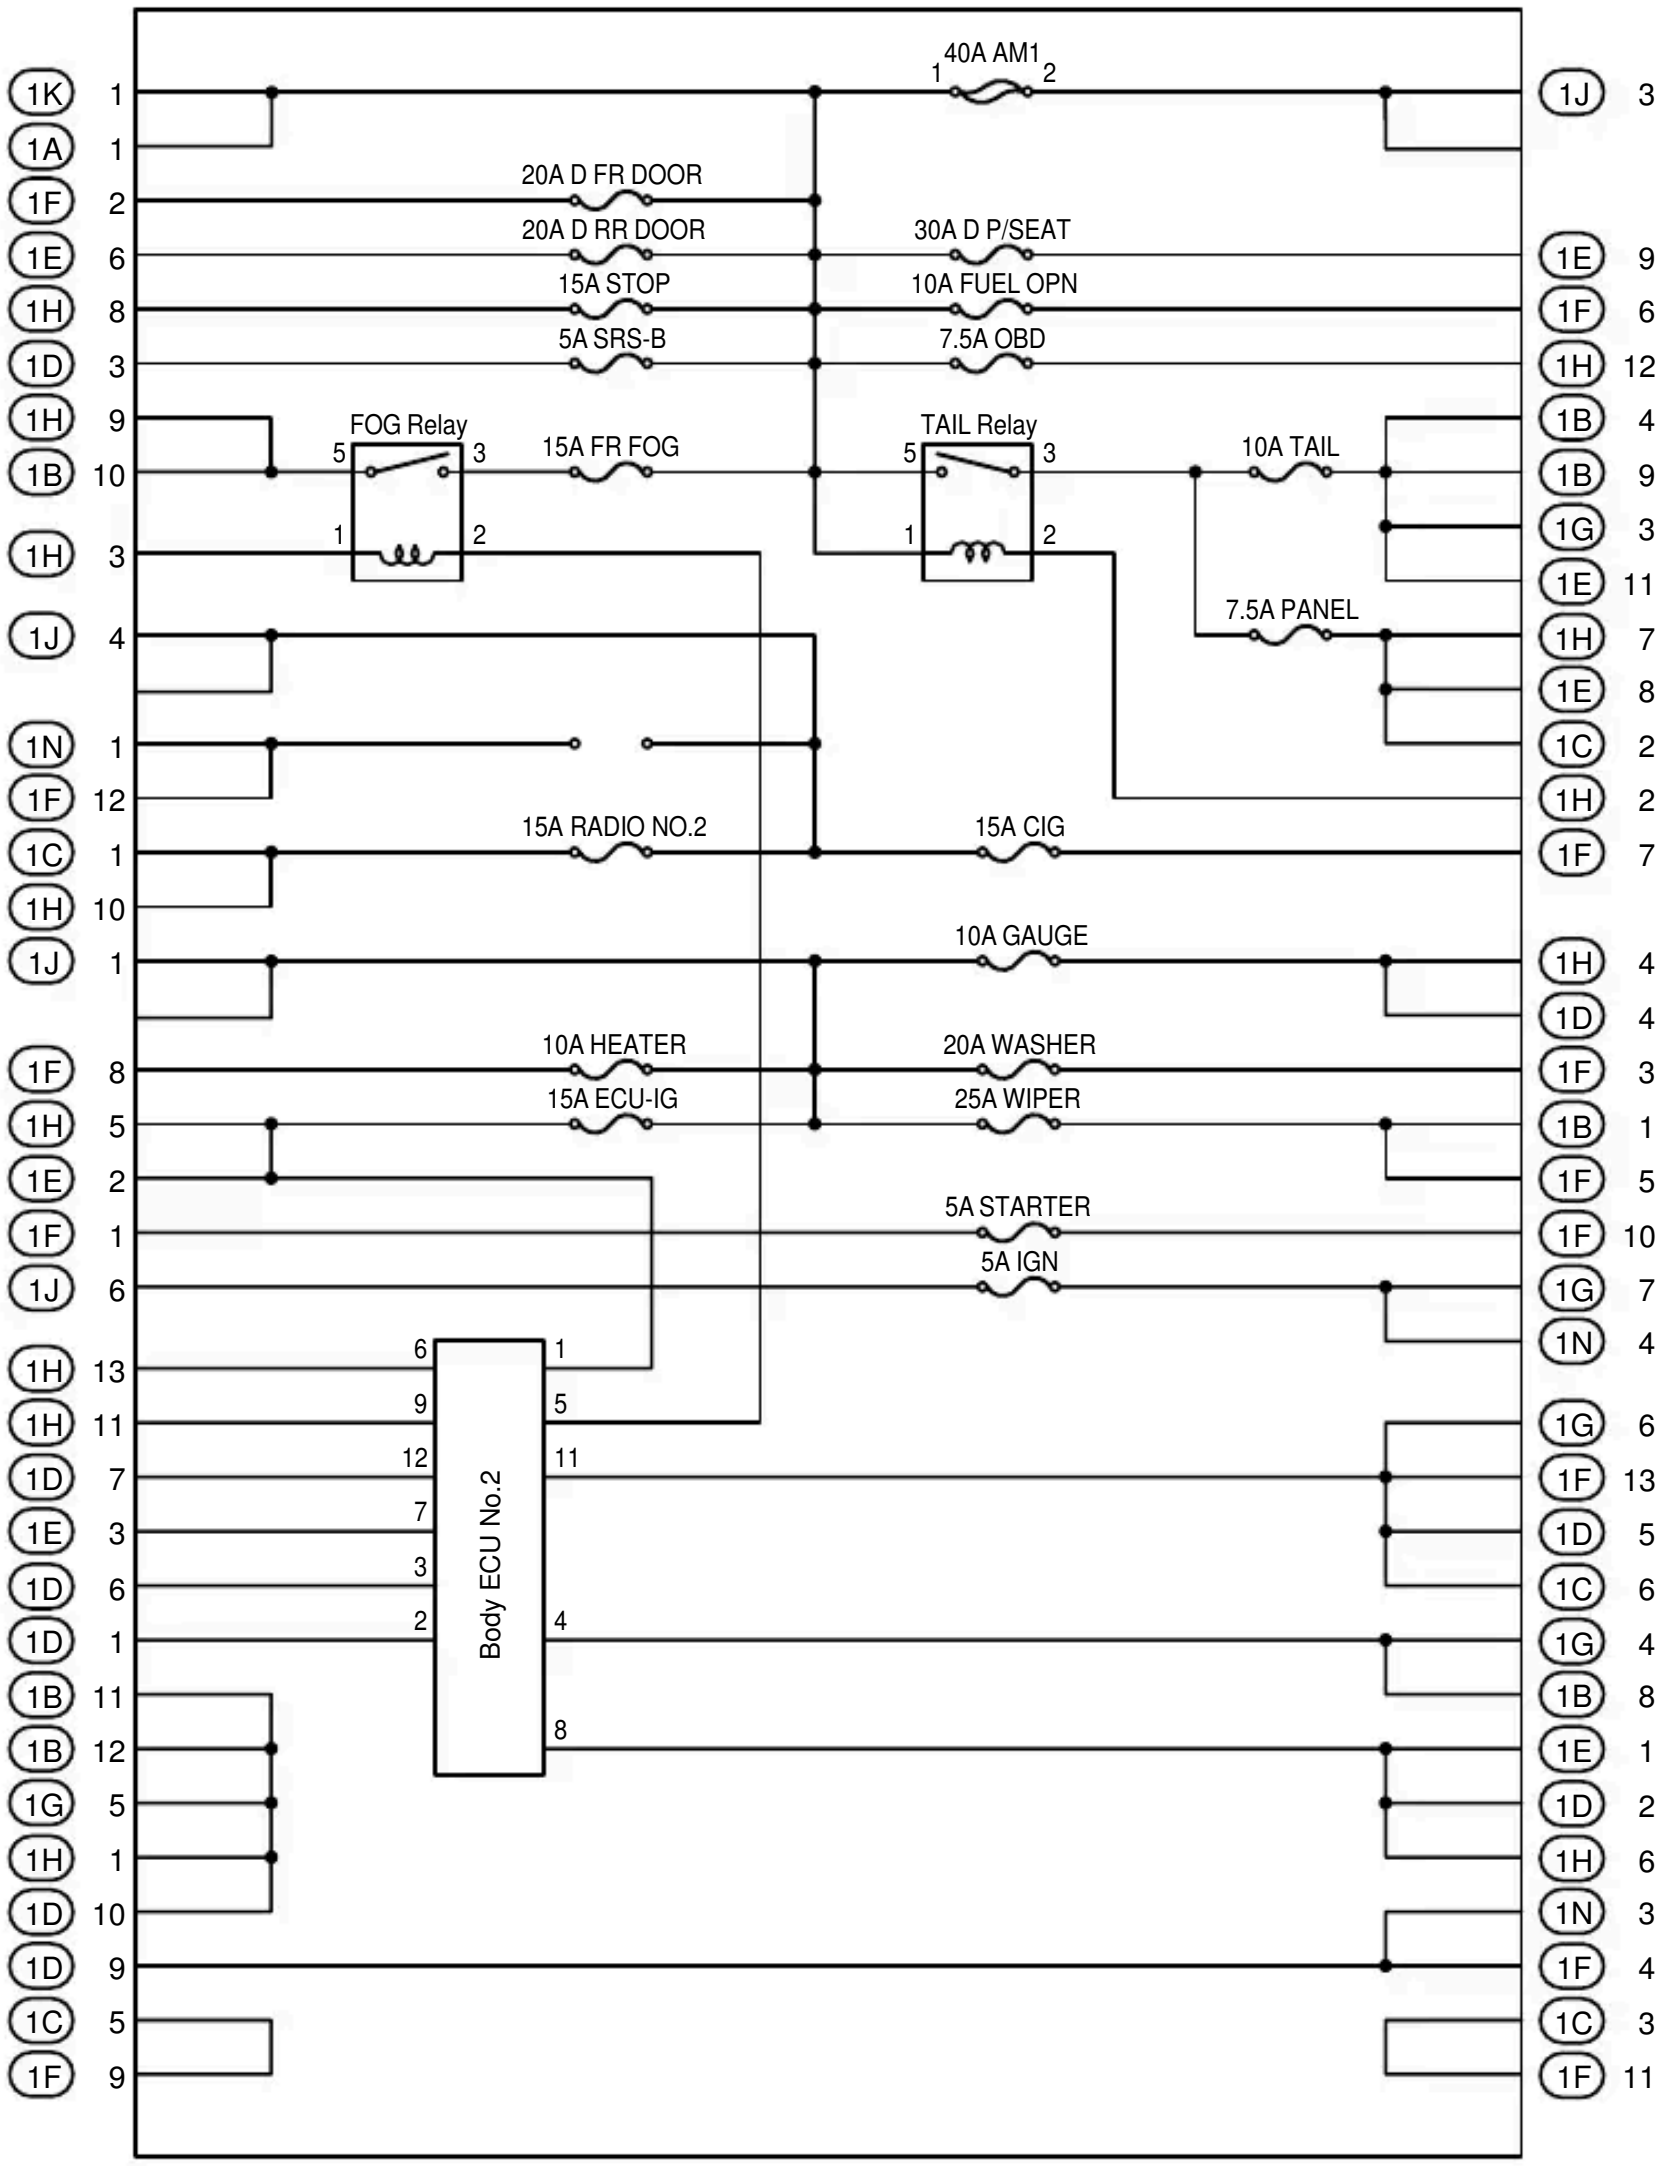

[Passenger Side J/B Inner Circuit]

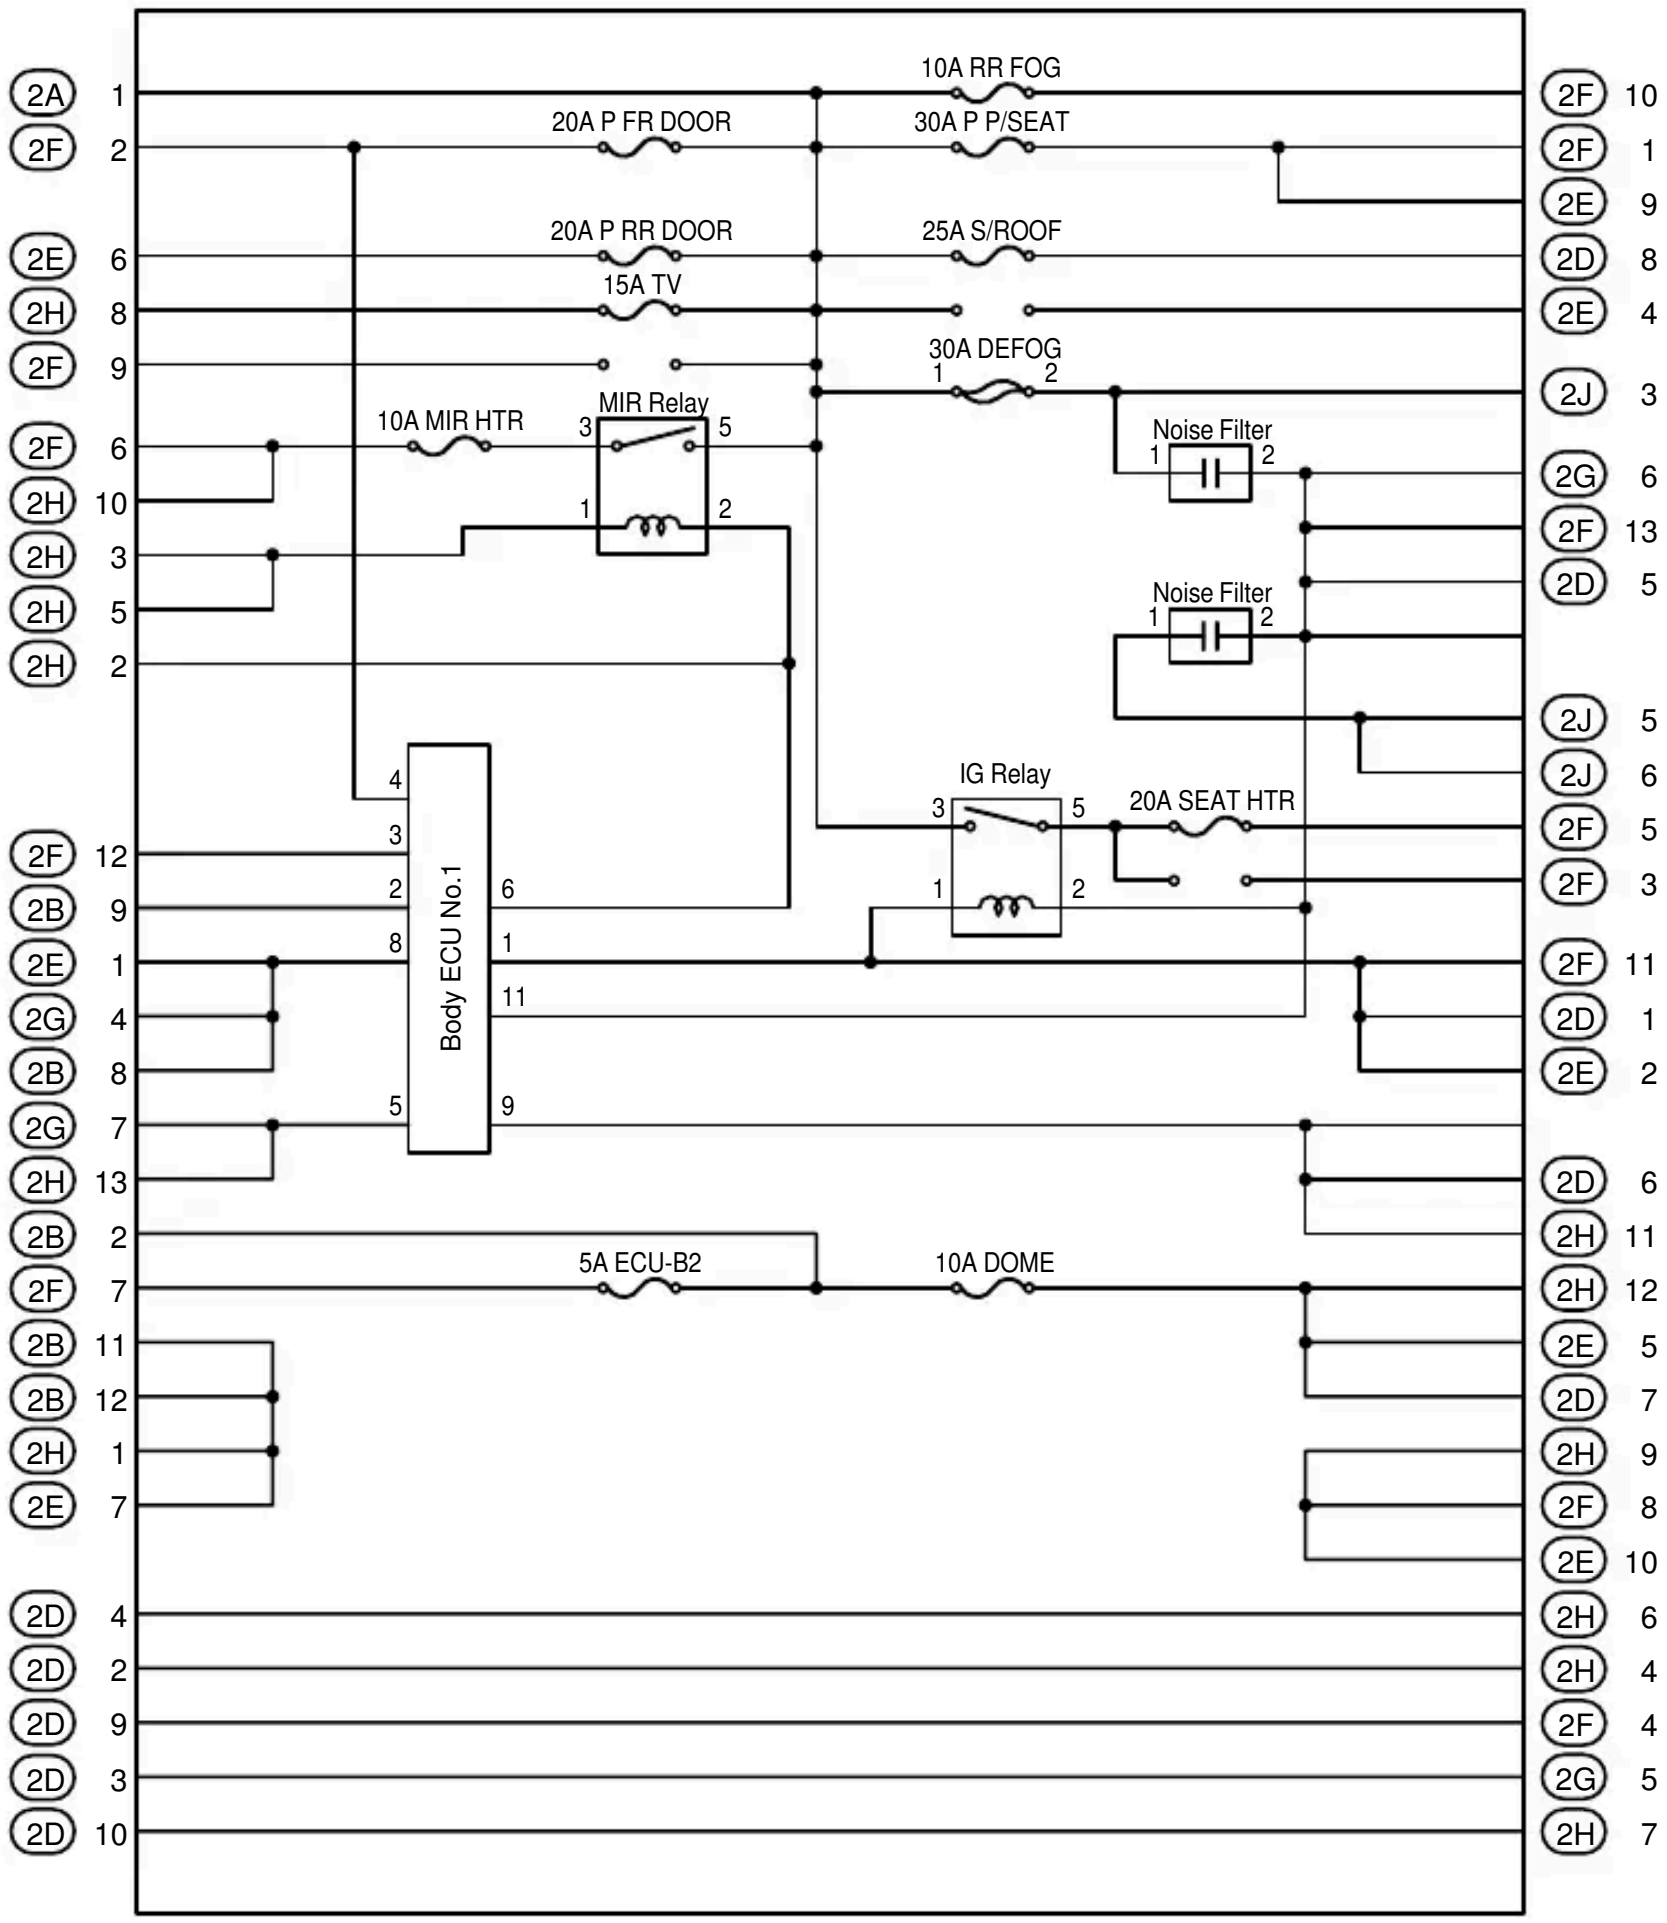

D RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

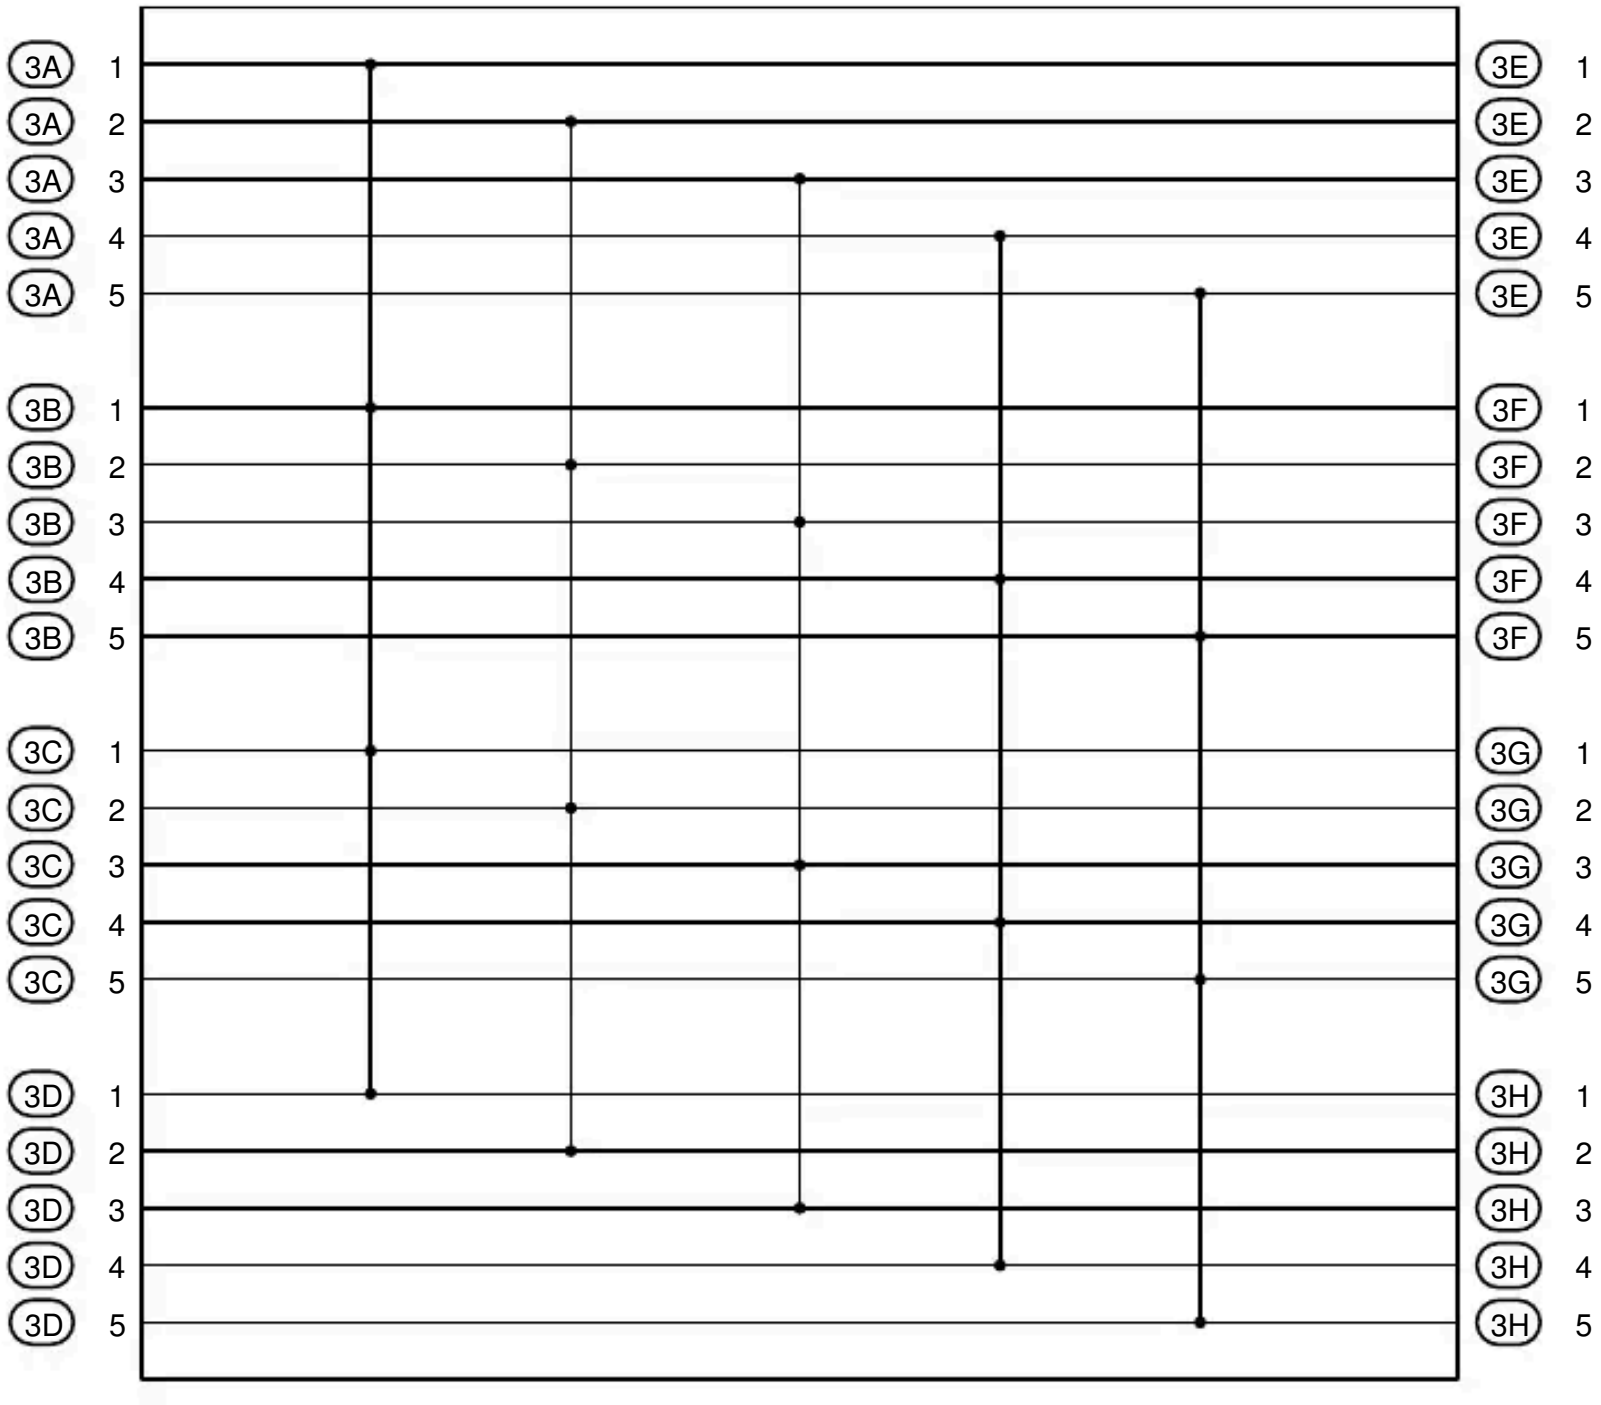

Position of Parts in Engine Compartment

[LHD : 3UZ–FE]

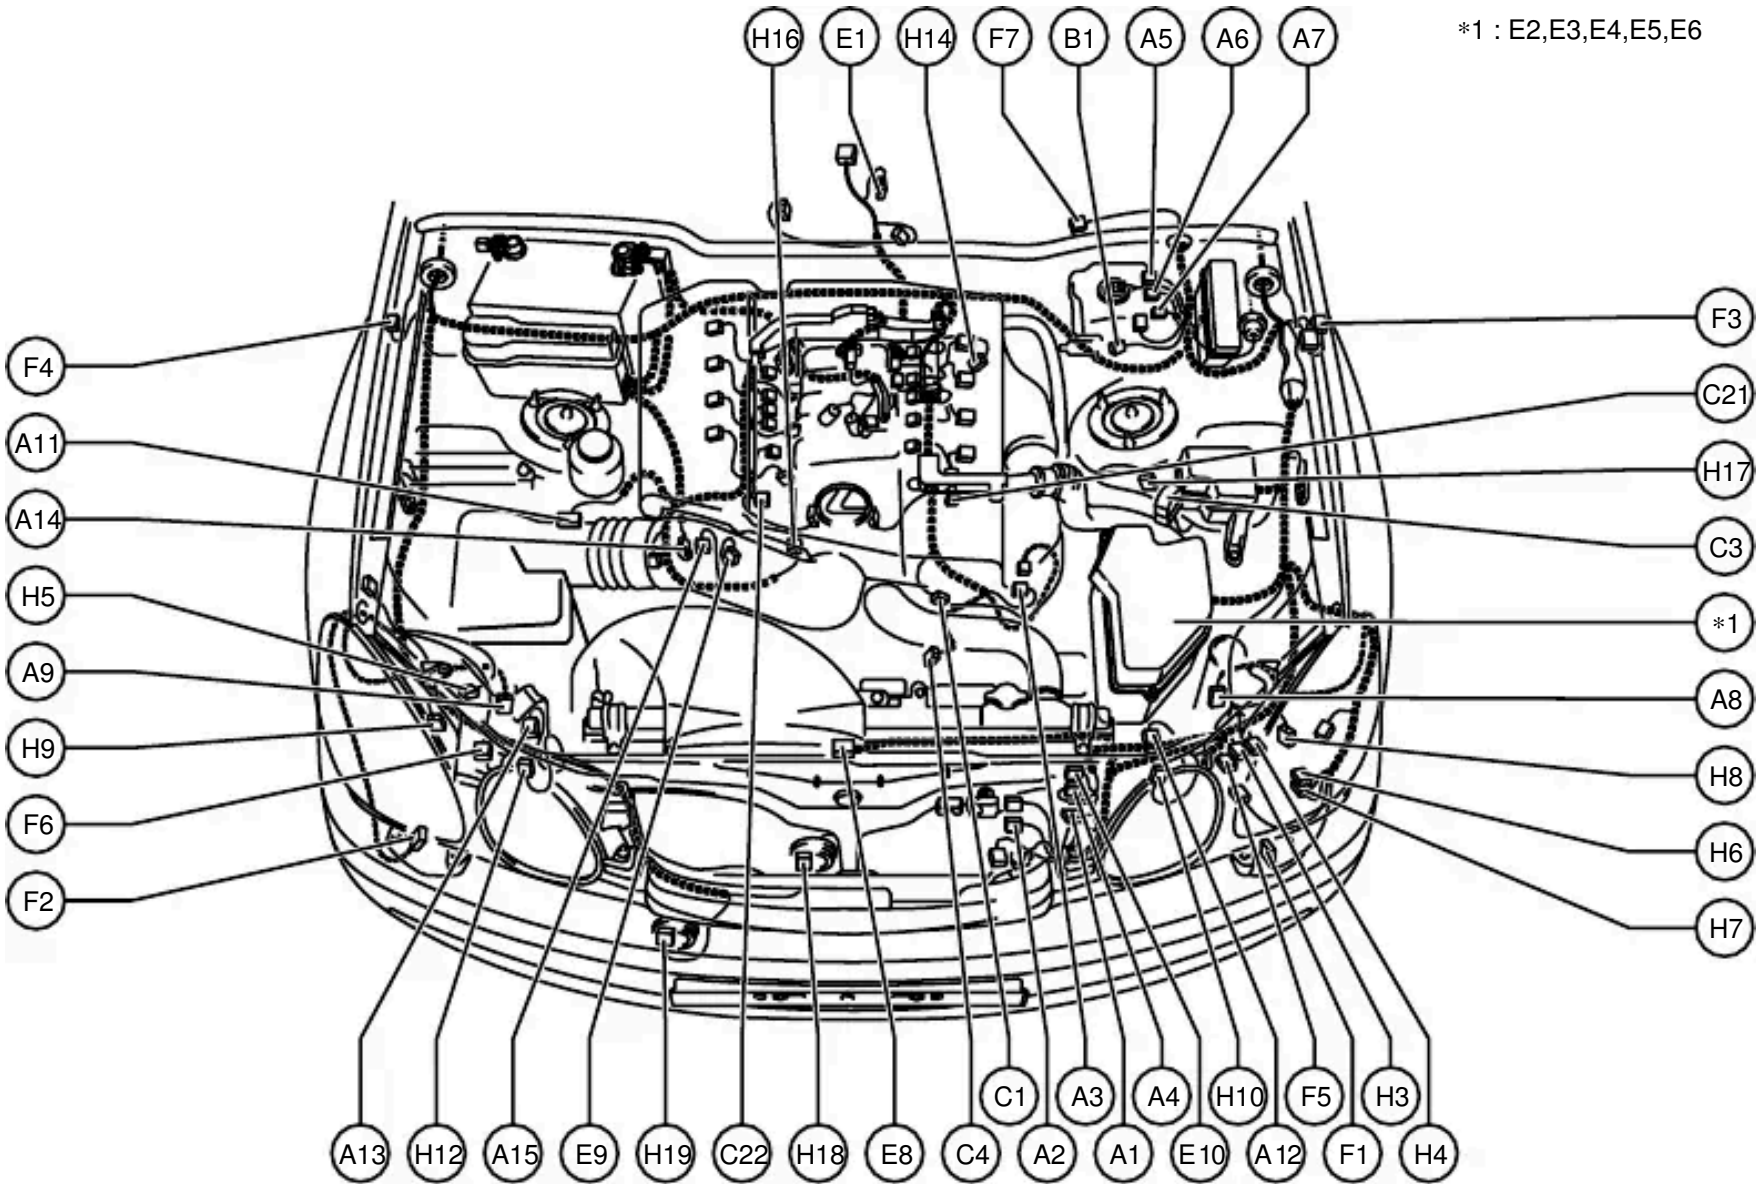

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Magnetic Clutch and Lock Sensor
A 4 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
A 5 ABS & TRC & VSC Actuator
A 6 ABS & TRC & VSC Actuator
A 7 ABS & TRC & VSC Actuator
A 8 ABS Speed Sensor Front LH
A 9 ABS Speed Sensor Front RH
A11 Air Flow Meter
A12 Airbag Sensor Front LH
A13 Airbag Sensor Front RH
A14 Alternator
A15 Alternator

B 1 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 3 Check Connector
C 4 Crankshaft Position Sensor
C21 Camshaft Timing Oil Control Valve LH
C22 Camshaft Timing Oil Control Valve RH

E 1 ECT Solenoid
E 2 Engine and ECT ECU
E 3 Engine and ECT ECU
E 4 Engine and ECT ECU
E 5 Engine and ECT ECU
E 6 Engine and ECT ECU
E 8 Engine Hood Courtesy SW
E 9 Engine Oil Level Sensor
E10 Exhaust Gas Sensor

F 1 Front Fog Light LH
F 2 Front Fog Light RH
F 3 Front Side Turn Signal Light LH
F 4 Front Side Turn Signal Light RH
F 5 Front Turn Signal and Clearance Light LH
F 6 Front Turn Signal and Clearance Light RH
F 7 Front Wiper Motor

H 3 Headlight Beam Level Control ECU
H 4 Headlight Beam Level Control ECU
H 5 Headlight Beam Level Control Motor
H 6 Headlight Cleaner Control Relay
H 7 Headlight Cleaner Motor
H 8 Headlight Control ECU LH
H 9 Headlight Control ECU RH
H10 Headlight LH (High)
H12 Headlight RH (High)
H14 Heated Oxygen Sensor (Bank 1 Sensor 1)
H16 Heated Oxygen Sensor (Bank 2 Sensor 1)
H17 Height Control Sensor (Front)
H18 Horn LH
H19 Horn RH

Position of Parts in Engine Compartment

[LHD : 3UZ–FE]

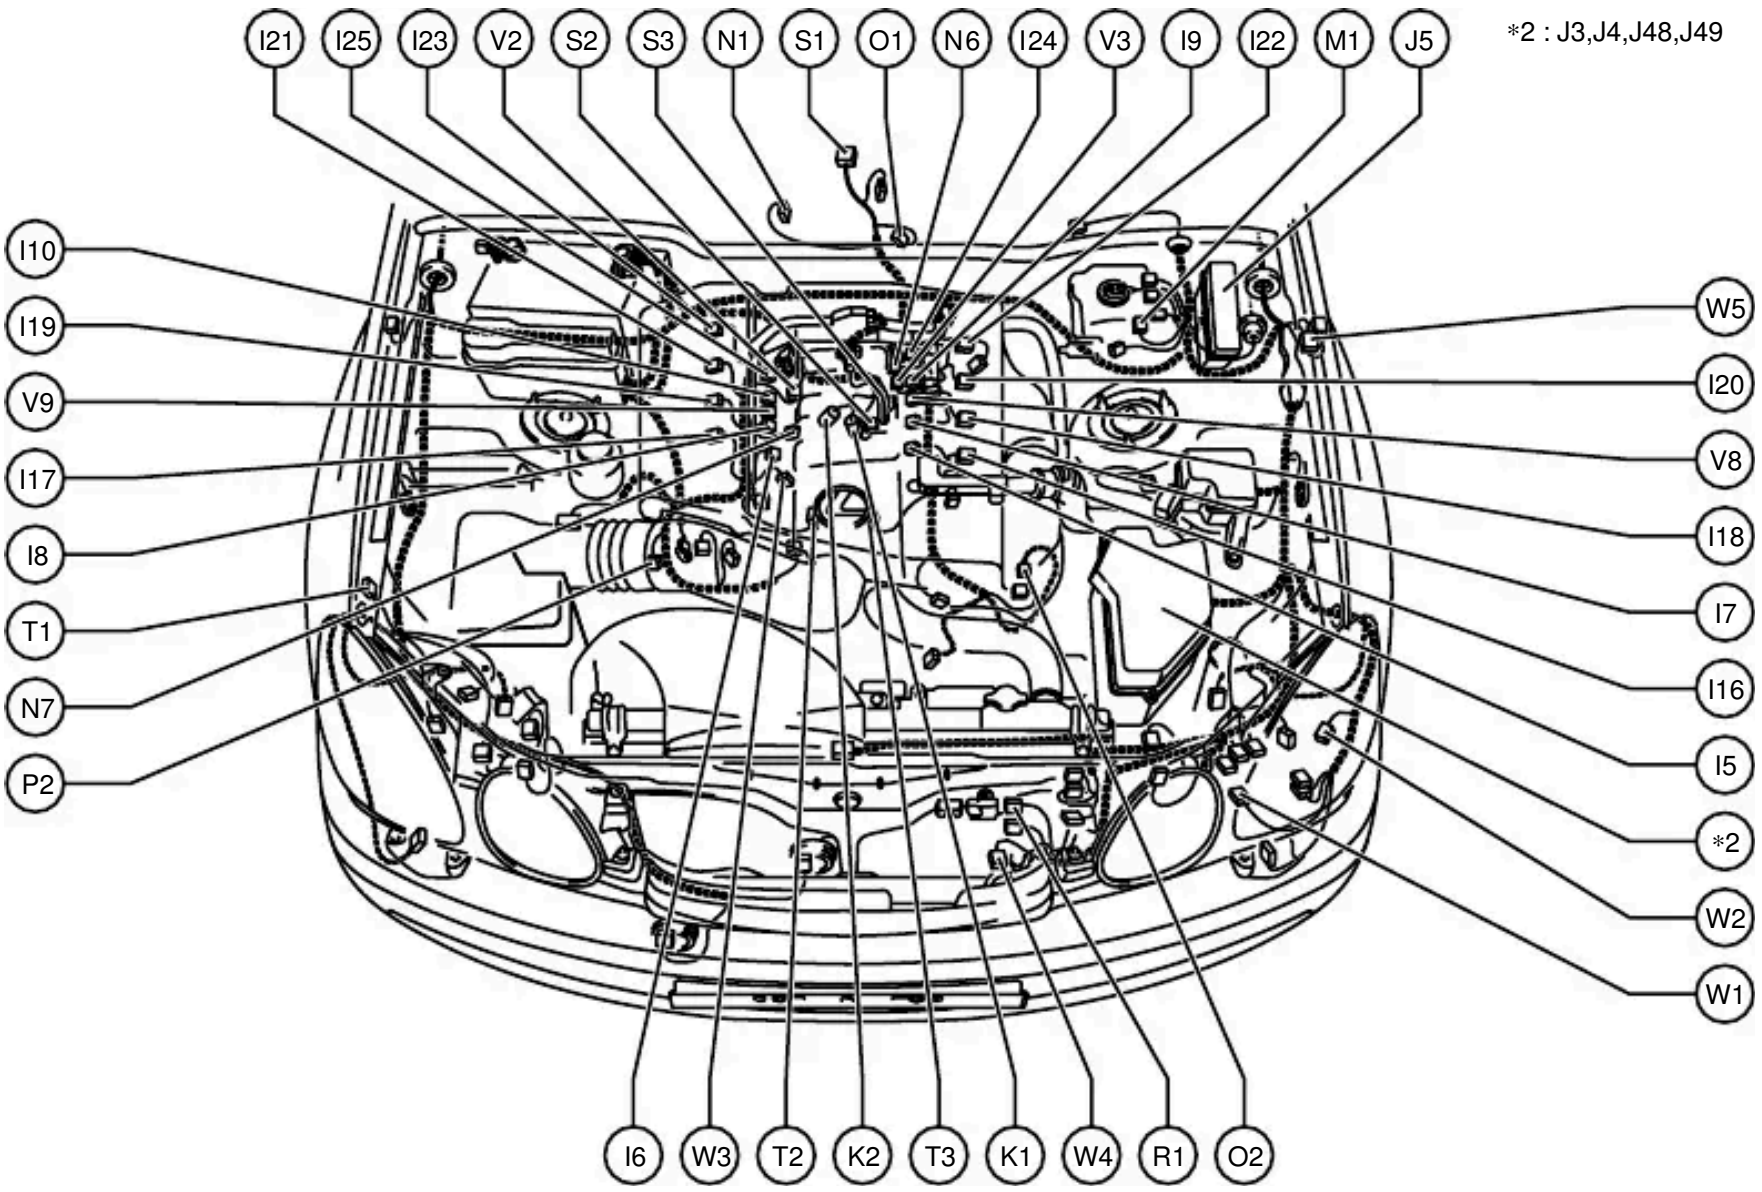

I 5 Injector No.1
I 6 Injector No.2
I 7 Injector No.3
I 8 Injector No.4
I 9 Injector No.5
I 10 Injector No.6
I 16 Ignition Coil and Igniter No.1
I 17 Ignition Coil and Igniter No.2
I 18 Ignition Coil and Igniter No.3
I 19 Ignition Coil and Igniter No.4
I 20 Ignition Coil and Igniter No.5
I 21 Ignition Coil and Igniter No.6
I 22 Ignition Coil and Igniter No.7
I 23 Ignition Coil and Igniter No.8
I 24 Injector No.7
I 25 Injector No.8

J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 48 Junction Connector
J 49 Junction Connector

K 1 Knock Sensor 1
K 2 Knock Sensor 2

M 1 Master Cylinder Pressure Sensor

N 1 Neutral Start SW
N 6 Noise Filter (Ignition No.1)
N 7 Noise Filter (Ignition No.2)

O 1 O/D Direct Clutch Speed Sensor
O 2 Oil Pressure SW

P 2 PPS Solenoid

R 1 Radiator Fan Motor

S 1 Speed Sensor (ECT)
S 2 Starter
S 3 Starter

T 1 Theft Deterrent Horn
T 2 Throttle Control Motor
T 3 Throttle Position Sensor

V 2 VSV (ACIS)
V 3 VSV (EVAP)
V 8 VVT Sensor LH
V 9 VVT Sensor RH

W 1 Washer Level Warning SW
W 2 Washer Motor
W 3 Water Temp. Sensor
W 4 Water Temp. SW
W 5 Wireless Door Lock Buzzer

Position of Parts in Engine Compartment

[LHD : 2JZ–GE]

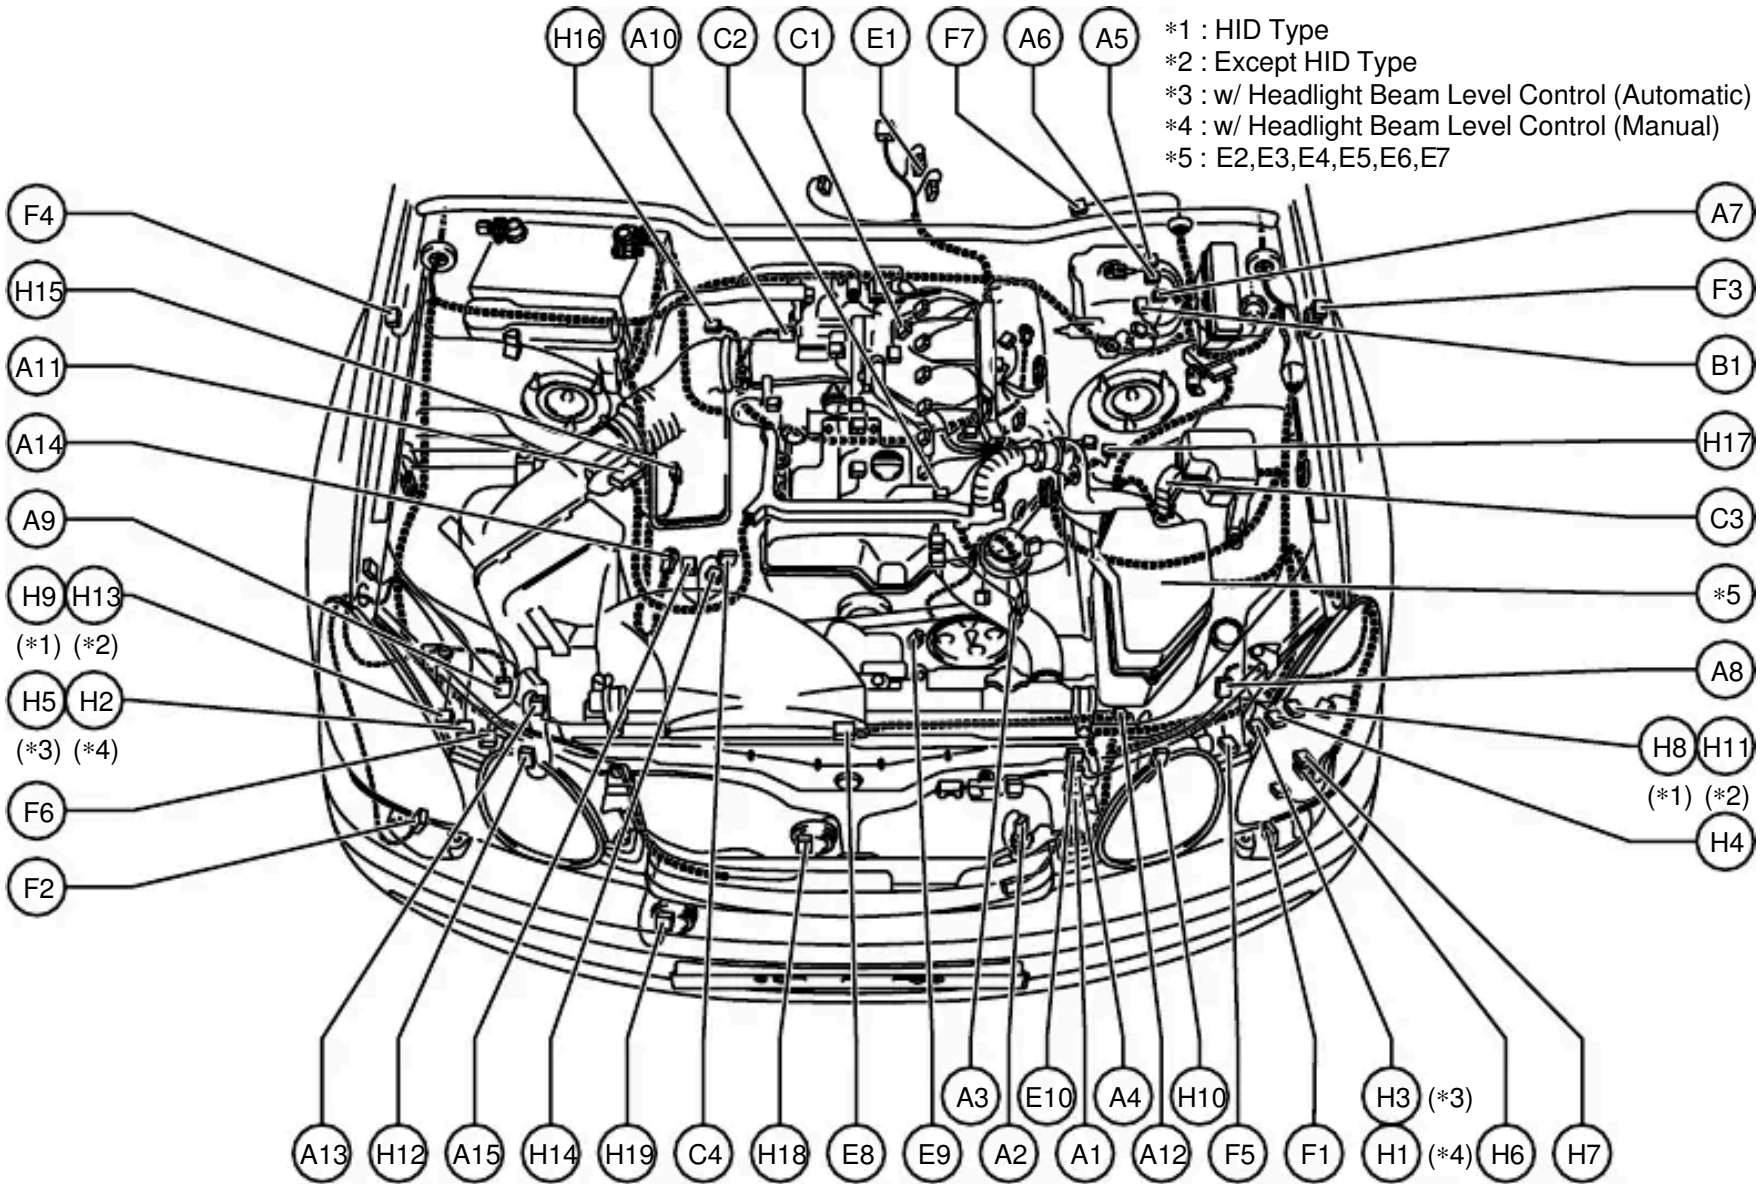

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Magnetic Clutch and Lock Sensor
A 4 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
A 5 ABS & TRC & VSC Actuator
A 6 ABS & TRC & VSC Actuator
A 7 ABS & TRC & VSC Actuator
A 8 ABS Speed Sensor Front LH
A 9 ABS Speed Sensor Front RH
A10 Accel Position Sensor
A11 Air Flow Meter
A12 Airbag Sensor Front LH
A13 Airbag Sensor Front RH
A14 Alternator
A15 Alternator

B 1 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 2 Camshaft Timing Oil Control Valve
C 3 Check Connector
C 4 Crankshaft Position Sensor

E 1 ECT Solenoid
E 2 Engine and ECT ECU
E 3 Engine and ECT ECU
E 4 Engine and ECT ECU
E 5 Engine and ECT ECU
E 6 Engine and ECT ECU
E 7 Engine and ECT ECU
E 8 Engine Hood Courtesy SW
E 9 Engine Oil Level Sensor
E10 Exhaust Gas Sensor

F 1 Front Fog Light LH
F 2 Front Fog Light RH
F 3 Front Side Turn Signal Light LH
F 4 Front Side Turn Signal Light RH
F 5 Front Turn Signal and Clearance Light LH
F 6 Front Turn Signal and Clearance Light RH
F 7 Front Wiper Motor

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight Beam Level Control ECU
H 4 Headlight Beam Level Control ECU
H 5 Headlight Beam Level Control Motor
H 6 Headlight Cleaner Control Relay
H 7 Headlight Cleaner Motor
H 8 Headlight Control ECU LH
H 9 Headlight Control ECU RH
H10 Headlight LH (High)
H11 Headlight LH (Low)
H12 Headlight RH (High)
H13 Headlight RH (Low)
H14 Heated Oxygen Sensor (Bank 1 Sensor 1)
H15 Heated Oxygen Sensor (Bank 1 Sensor 2)
H16 Heated Oxygen Sensor (Bank 2 Sensor 1)
H17 Height Control Sensor (Front)
H18 Horn LH
H19 Horn RH

Position of Parts in Engine Compartment

[LHD : 2JZ–GE]

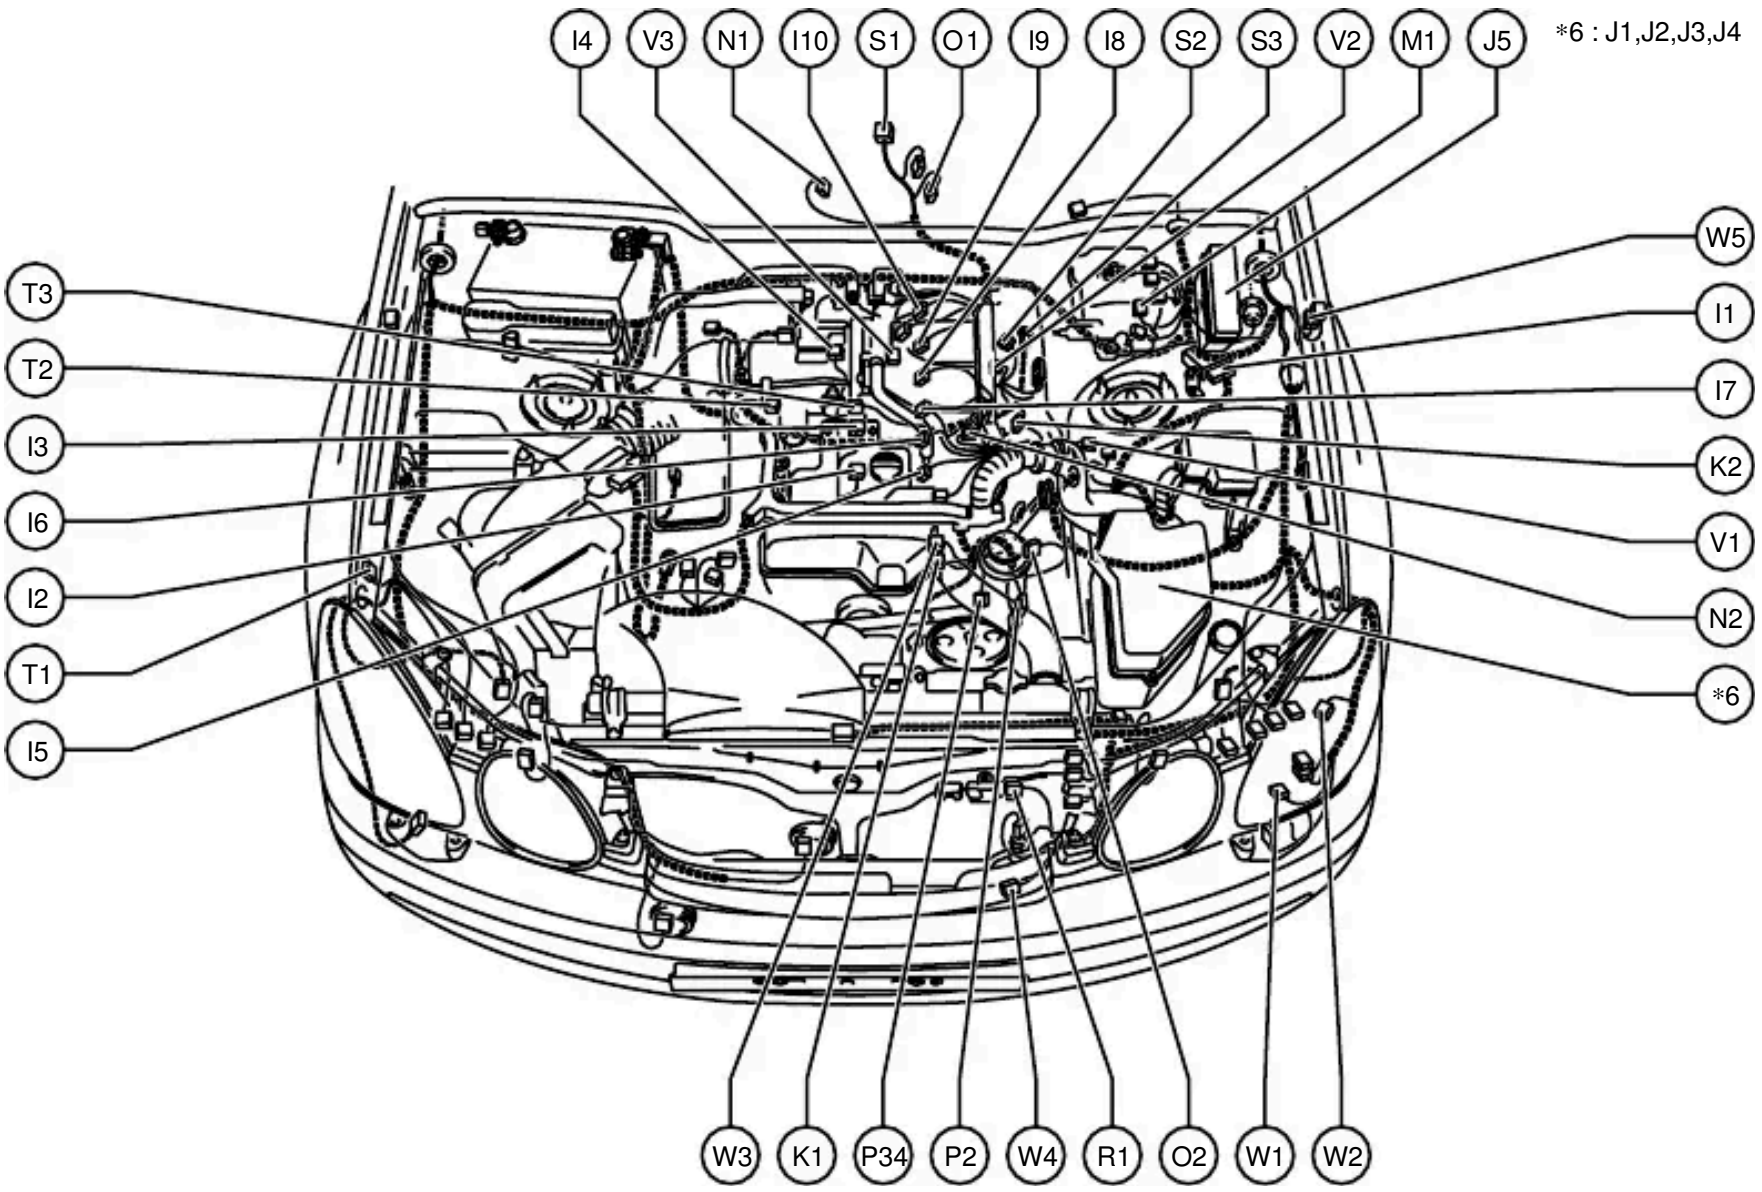

I 1 Igniter
I 2 Ignition Coil No.1
I 3 Ignition Coil No.2
I 4 Ignition Coil No.3
I 5 Injector No.1
I 6 Injector No.2
I 7 Injector No.3
I 8 Injector No.4
I 9 Injector No.5
I 10 Injector No.6

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector

K 1 Knock Sensor 1
K 2 Knock Sensor 2

M 1 Master Cylinder Pressure Sensor

N 1 Neutral Start SW
N 2 Noise Filter (Ignition)

O 1 O/D Direct Clutch Speed Sensor
O 2 Oil Pressure SW

P 2 PPS Solenoid
P34 Power Steering Oil Pressure Sensor

R 1 Radiator Fan Motor

S 1 Speed Sensor (ECT)
S 2 Starter
S 3 Starter

T 1 Theft Deterrent Horn
T 2 Throttle Control Motor
T 3 Throttle Position Sensor

V 1 Variable Resistor
V 2 VSV (ACIS)
V 3 VSV (EVAP)

W 1 Washer Level Warning SW
W 2 Washer Motor
W 3 Water Temp. Sensor
W 4 Water Temp. SW
W 5 Wireless Door Lock Buzzer

Position of Parts in Instrument Panel

[LHD]

*1 : 3UZ-FE

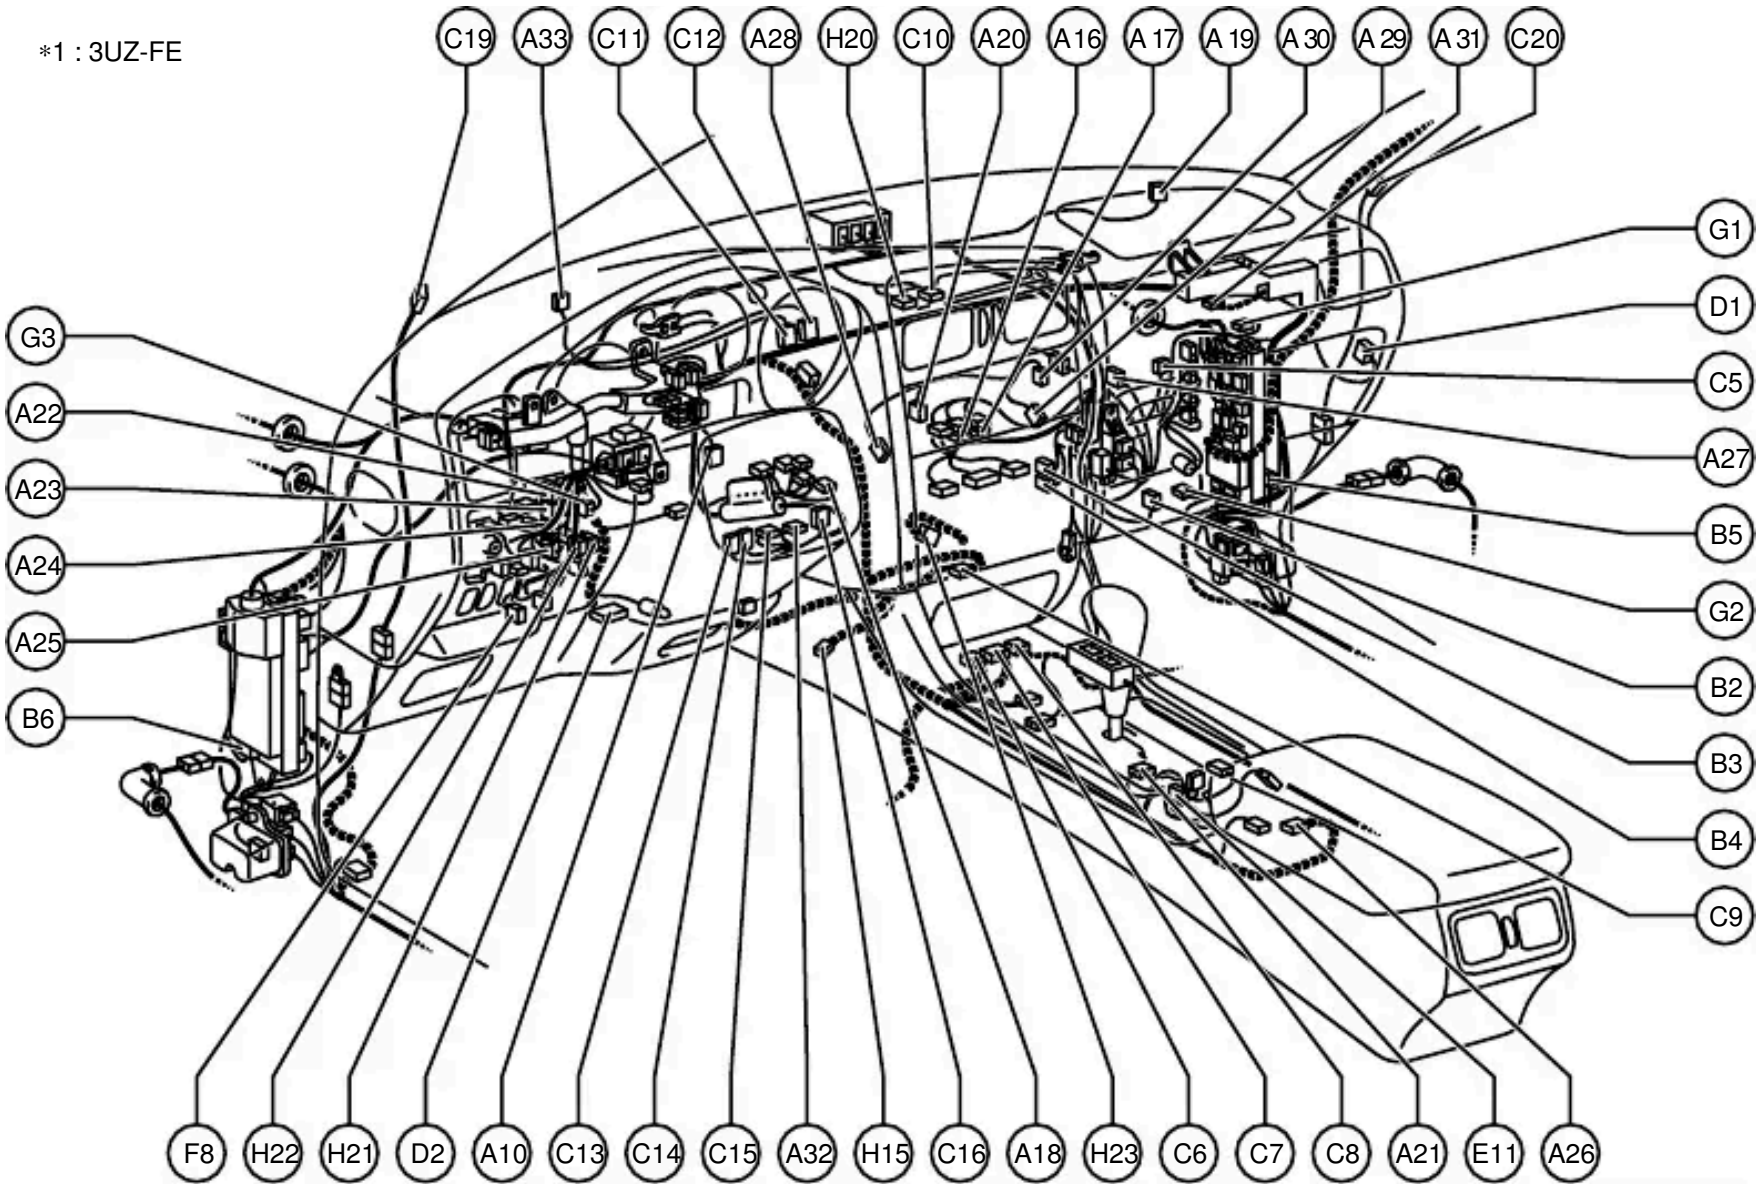

A10 Accel Positition Sensor
A16 A/C Control Assembly
A17 A/C Control Assembly
A18 A/C Room Temp. Sensor
A19 A/C Solar Sensor
A20 A/C Thermistor
A21 A/T Shift Position Illumination
A22 ABS & TRC & VSC ECU
A23 ABS & TRC & VSC ECU
A24 ABS & TRC & VSC ECU
A25 ABS & TRC & VSC ECU
A26 ABS Deceleration Sensor
A27 Air Inlet Control Servo Motor
A28 Air Mix Control Servo Motor (Driver Side)
A29 Air Mix Control Servo Motor (Front Passenger Side)
A30 Air Vent Mode Control Servo Motor
A31 Airbag Squib (Front Passenger Airbag Assembly)
A32 Airbag Squib (Steering Wheel Pad)
A33 Automatic Light Control Sensor

B 2 Blower Motor
B 3 Blower Motor Controller
B 4 Blower Motor Controller
B 5 Body ECU No.1
B 6 Body ECU No.2

C 5 CD Automatic Changer
C 6 Center Airbag Sensor Assembly
C 7 Center Airbag Sensor Assembly
C 8 Center Airbag Sensor Assembly
C 9 Cigarette Lighter
C10 Clock
C11 Combination Meter
C12 Combination Meter
C13 Combination SW
C14 Combination SW
C15 Combination SW
C16 Combination SW
C19 Curtain Shield Airbag Squib LH
C20 Curtain Shield Airbag Squib RH

D 1 Daytime Running Light Relay
D 2 DLC3

E 11 ECT Pattern Select SW

F 8 Fuel Lid Opener SW

G 1 Glove Box Light
G 2 Glove Box Light SW
G 3 Gateway ECU

H15 Heated Oxygen Sensor (Bank 1 Sensor 2)
H20 Hazard SW
H21 Headlight Beam Level Control SW
H22 Headlight Cleaner SW
H23 Heated Oxygen Sensor (Bank 2 Sensor 2)

Position of Parts in Instrument Panel

[LHD]

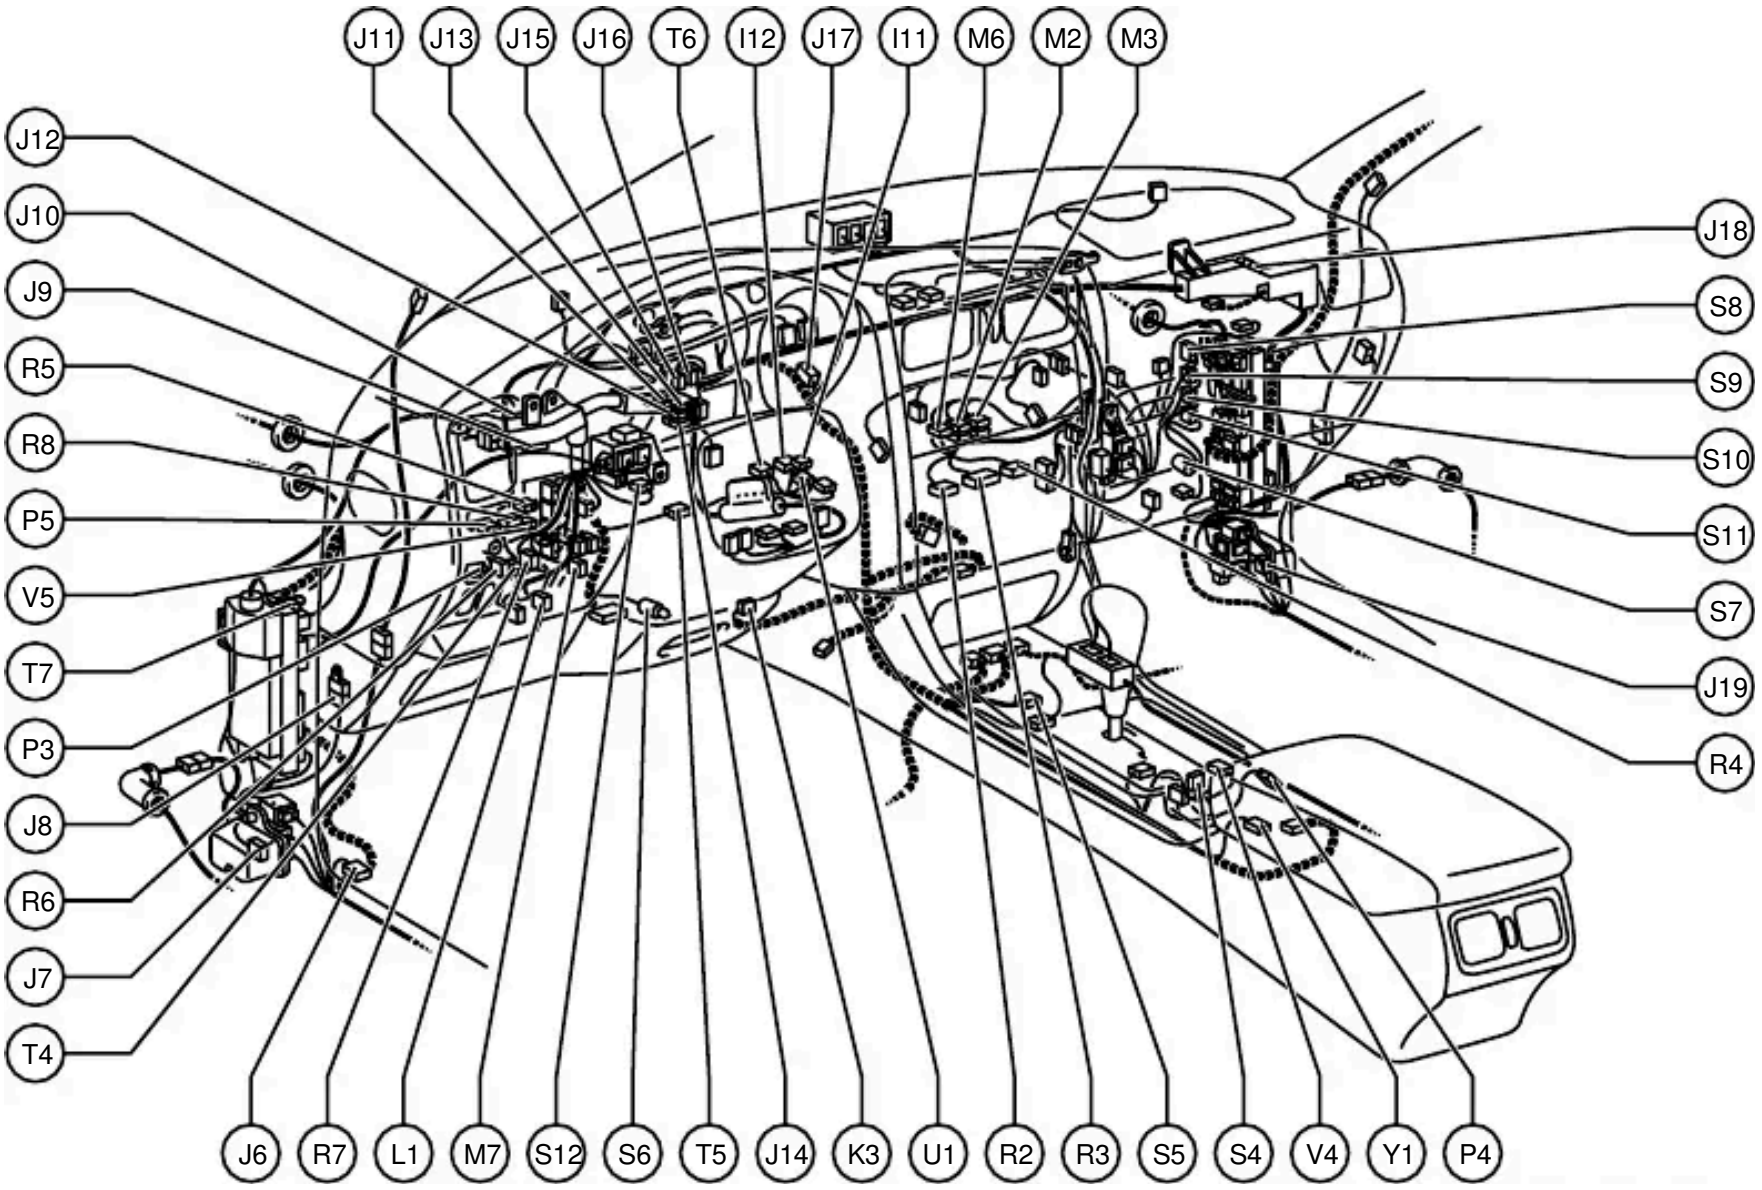

I 11 Ignition Key Cylinder Light
I 12 Ignition SW

J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector
J 17 Junction Connector
J 18 Junction Connector
J 19 Junction Connector

K 3 Kick Down SW

L 1 Luggage Compartment Door Opener SW

M 2 Multi–Display
M 3 Multi–Display
M 6 Multi–Display
M 7 Mirror Retractor SW

P 3 Parking Brake SW
P 4 Power Outlet
P 5 PPS ECU

R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player
R 5 Rear Fog Light Relay
R 6 Rear Fog Light SW
R 7 Remote Control Mirror SW
R 8 Rheostat

S 4 Seat Heater SW
S 5 Shift Lock Control ECU
S 6 Step Light LH
S 7 Step Light RH
S 8 Stereo Component Amplifier
S 9 Stereo Component Amplifier
S10 Stereo Component Amplifier
S11 Stereo Component Amplifier
S12 Stop Light SW

T 4 Telephone Microphone
T 5 Tilt and Telescopic ECU
T 6 Transponder Key Amplifier
T 7 Turn Signal Flasher

U 1 Unlock Warning SW and Key Interlock Solenoid

V 4 VSC Off SW
V 5 VSC Warning Buzzer

Y 1 Yaw Rate Sensor

Position of Parts in Body

[LHD]

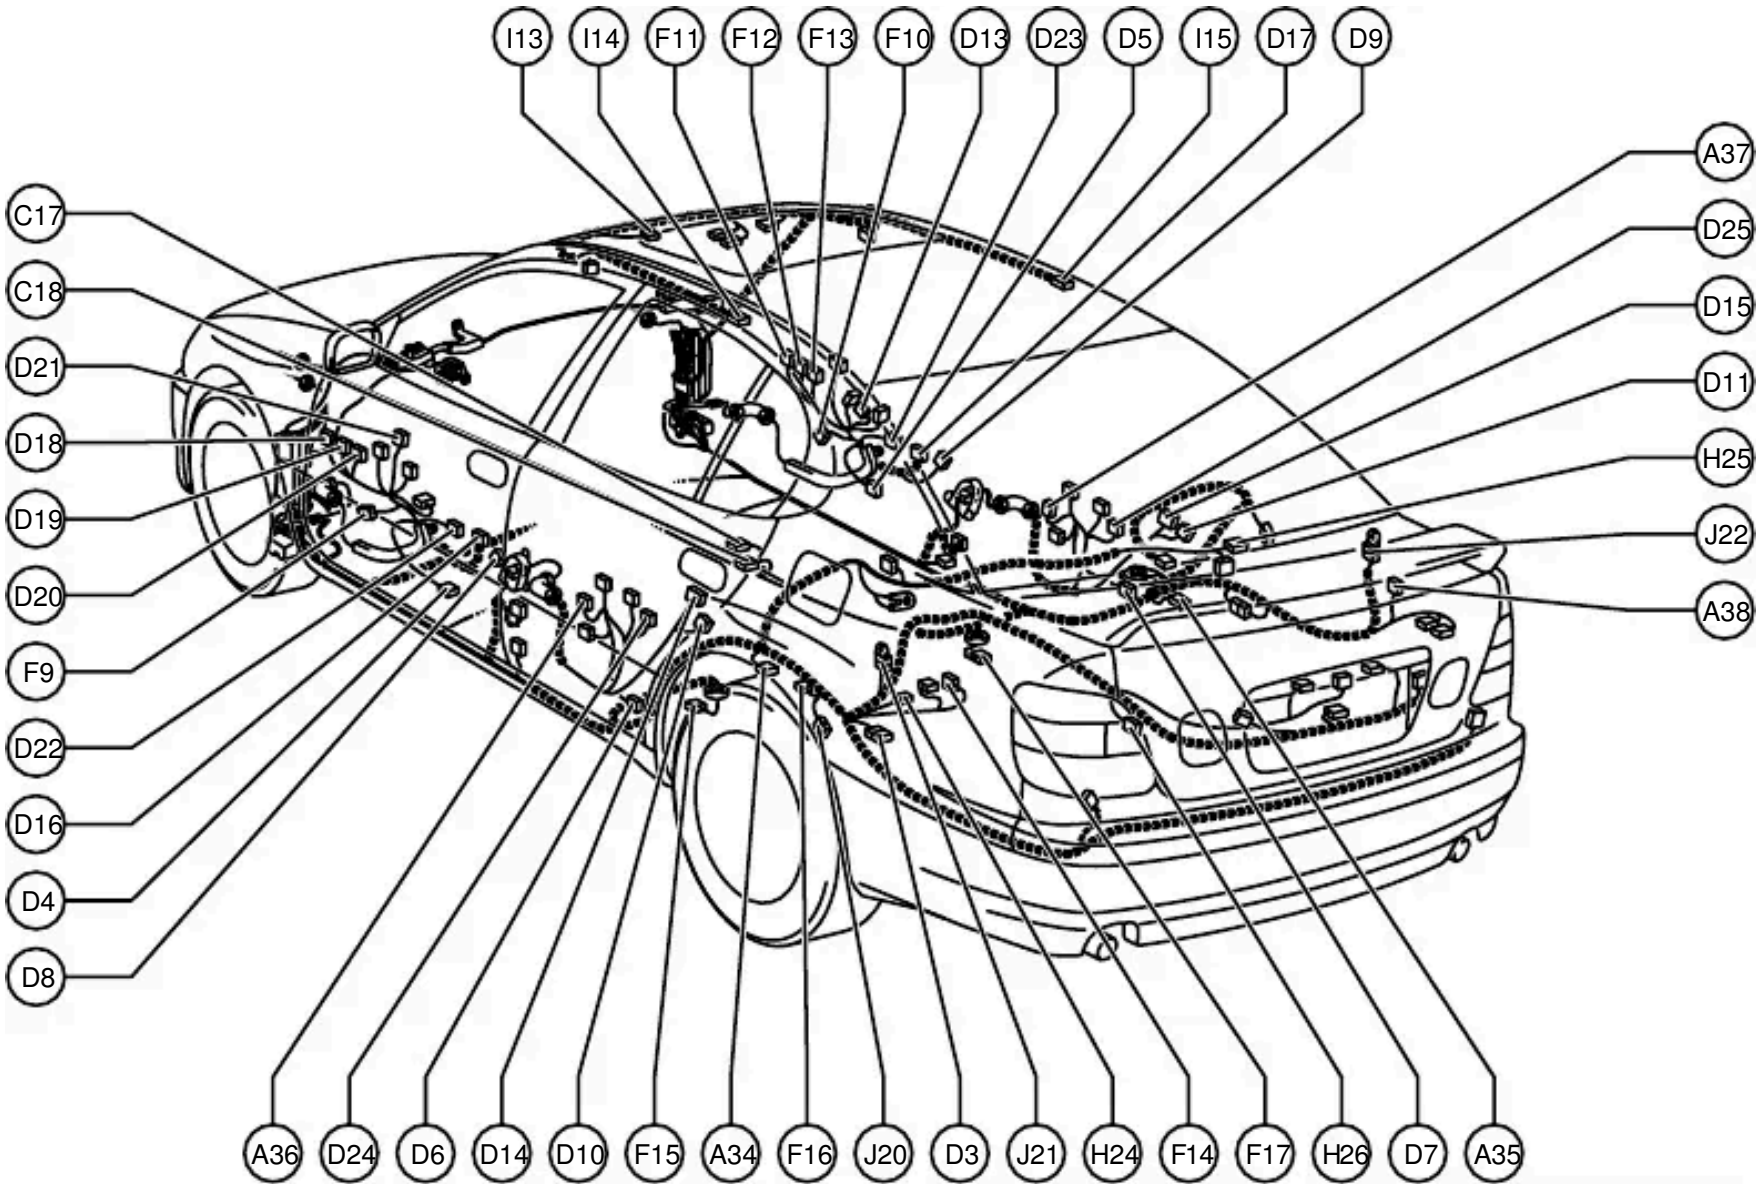

A34 ABS Speed Sensor Rear LH
A35 ABS Speed Sensor Rear RH
A36 Ashtray Illumination Rear LH
A37 Ashtray Illumination Rear RH
A38 Auto Antenna Control Relay and Motor

C17 Cellular Phone (Hand Set)
C18 Cellular Phone (Hand Set)

D 3 Diode (Luggage Door Open Detection)
D 4 Door Courtesy Light Front LH
D 5 Door Courtesy Light Front RH
D 6 Door Courtesy Light Rear LH
D 7 Door Courtesy Light Rear RH
D 8 Door Courtesy SW Front LH
D 9 Door Courtesy SW Front RH
D10 Door Courtesy SW Rear LH
D11 Door Courtesy SW Rear RH
D13 Door Lock Control SW RH
D14 Door Lock Motor and Door Lock Detection SW Rear LH
D15 Door Lock Motor and Door Lock Detection SW Rear RH
D16 Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front LH
D17 Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front RH
D18 Driver Door ECU
D19 Driver Door ECU
D20 Driver Door ECU
D21 Driving Position Memory SW
D22 Door Lock Motor and SW Front LH
D23 Door Lock Motor and SW Front RH
D24 Door Lock Motor and SW Rear LH
D25 Door Lock Motor and SW Rear RH

F 9 Front Door Speaker LH
F10 Front Door Speaker RH
F11 Front Passenger Door ECU
F12 Front Passenger Door ECU
F13 Front Passenger Door ECU
F14 Fuel Lid Opener Motor
F15 Fuel Pump and Sender
F16 Fuel Pump Control ECU
F17 Fuel Sender (Sub)

H24 Height Control Sensor (Rear)
H25 High Mounted Stop Light (Bulb Type)
H26 High Mounted Stop Light (LED Type)

I 13 Inner Mirror
I 14 Interior Light Rear LH
I 15 Interior Light Rear RH

J 20 Junction Connector
J 21 Junction Connector
J 22 Junction Connector

Position of Parts in Body

[LHD]

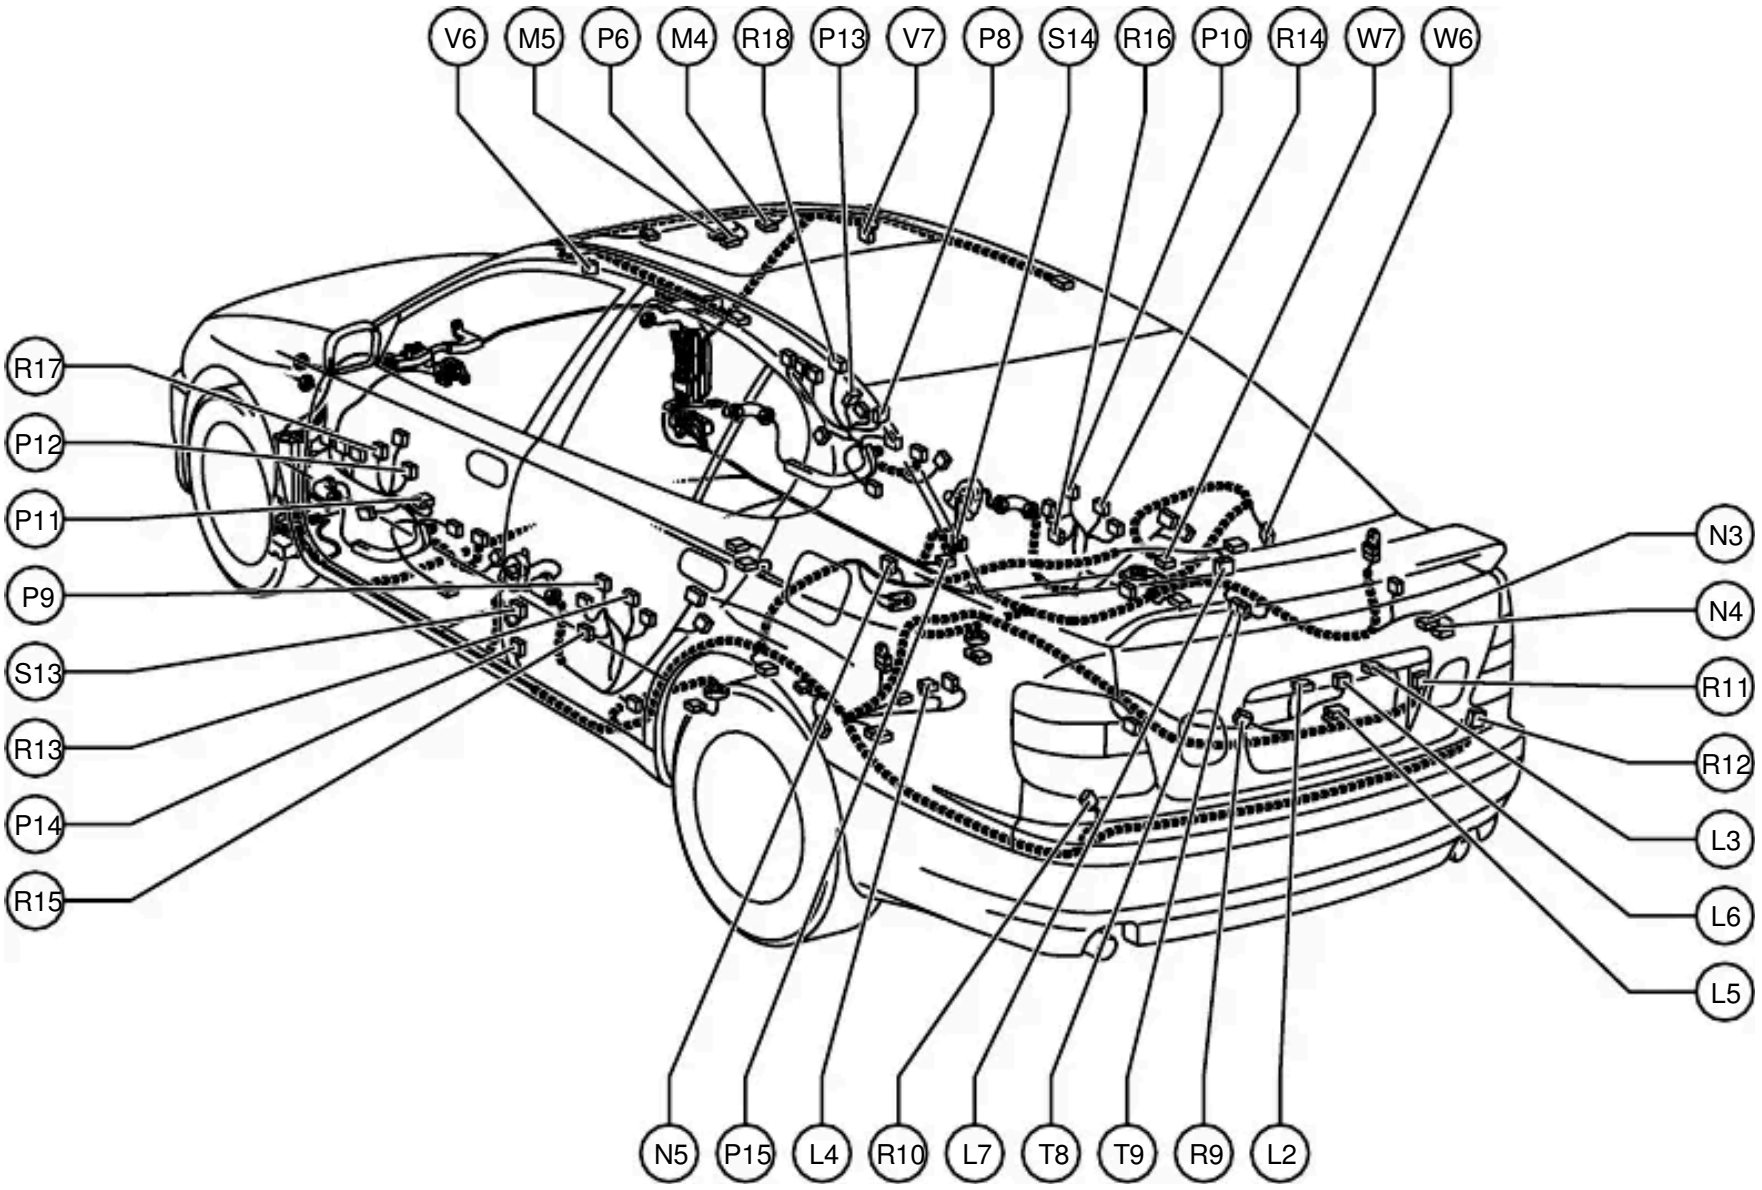

L 2 License Plate Light LH
L 3 License Plate Light RH
L 4 Light Failure Sensor
L 5 Luggage Compartment Door Courtesy SW and Opener Motor
L 6 Luggage Compartment Door Key Unlock SW
L 7 Luggage Compartment Light

M 4 Moon Roof Control ECU
M 5 Moon Roof Control SW

N 3 Navigation ECU
N 4 Navigation ECU
N 5 Noise Filter (Rear Window Defogger)

P 6 Personal Light
P 8 Power Window Control SW Front RH
P 9 Power Window Control SW Rear LH
P10 Power Window Control SW Rear RH
P11 Power Window Master SW
P12 Power Window Motor Front LH
P13 Power Window Motor Front RH
P14 Pretensioner LH
P15 Pretensioner RH

R 9 Rear Combination Light LH
R10 Rear Combination Light LH
R11 Rear Combination Light RH
R12 Rear Combination Light RH
R13 Rear Door LH ECU
R14 Rear Door RH ECU
R15 Rear Door Speaker LH
R16 Rear Door Speaker RH
R17 Remote Control Mirror LH
R18 Remote Control Mirror RH

S13 Side Airbag Sensor LH
S14 Side Airbag Sensor RH

T 8 Telephone Transceiver and Speaker Relay
T 9 Telephone Transceiver and Speaker Relay

V 6 Vanity Light LH
V 7 Vanity Light RH

W 6 Wireless Door Lock Control ECU
W 7 Woofer (Speaker)

Position of Parts in Seat

[LHD]

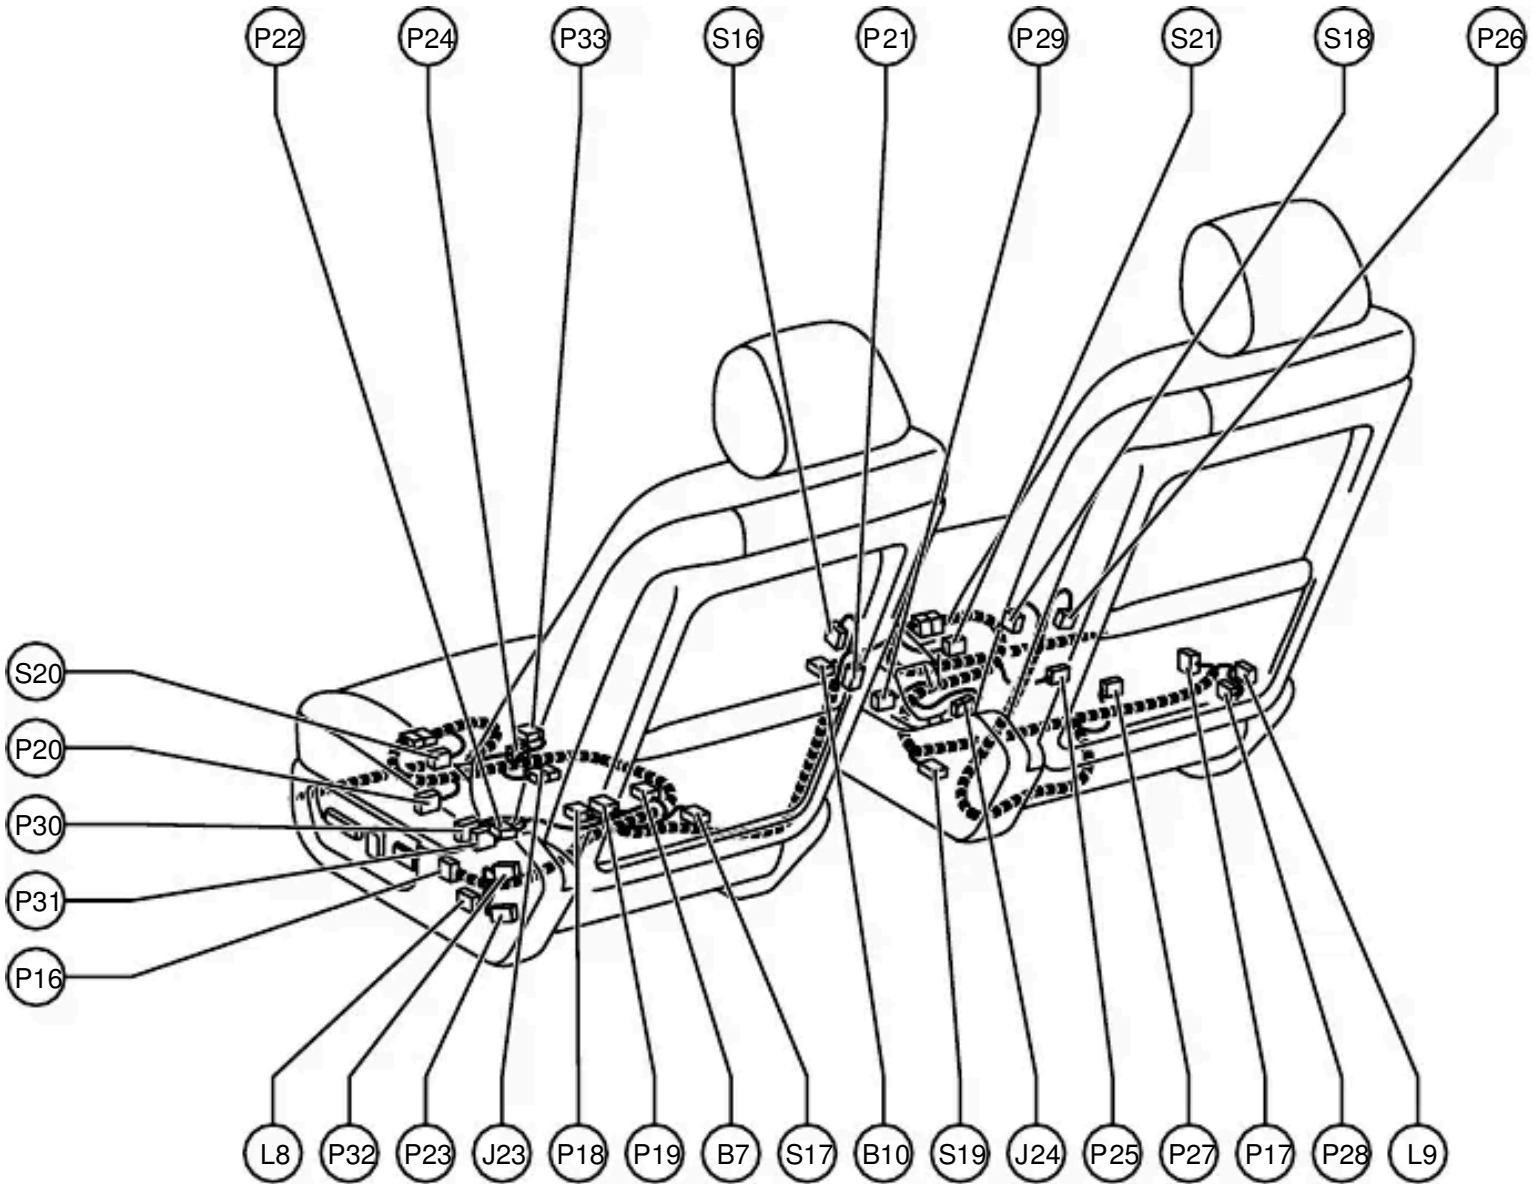

B 7 Buckle SW LH
B10 Buckle SW RH and
Seat Belt Warning Occupant Detection Sensor

J 23 Junction Connector
J 24 Junction Connector

L 8 Lumbar Support Control SW (Driver's Seat)
L 9 Lumbar Support Control SW (Front Passenger's Seat)

P16 Power Seat Control SW (Driver's Seat)
P17 Power Seat Control SW (Front Passenger's Seat)
P18 Power Seat ECU
P19 Power Seat ECU
P20 Power Seat Motor (Driver's Seat Front Vertical Control)
P21 Power Seat Motor
(Driver's Seat Lumbar Support Control)
P22 Power Seat Motor (Driver's Seat Rear Vertical Control)
P23 Power Seat Motor (Driver's Seat Reclining Control)
P24 Power Seat Motor (Driver's Seat Slide Control)
P25 Power Seat Motor
(Front Passenger's Seat Front Vertical Control)
P26 Power Seat Motor
(Front Passenger's Seat Lumbar Support Control)
P27 Power Seat Motor
(Front Passenger's Seat Rear Vertical Control)
P28 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P29 Power Seat Motor
(Front Passenger's Seat Slide Control)
P30 Power Seat Position Sensor
(Driver's Seat Front Vertical Control)
P31 Power Seat Position Sensor
(Driver's Seat Rear Vertical Control)
P32 Power Seat Position Sensor
(Driver's Seat Reclining Control)
P33 Power Seat Position Sensor
(Driver's Seat Slide Control)

S16 Seat Heater (Driver's Seat Back)
S17 Seat Heater (Driver's Seat Cushion)
S18 Seat Heater (Front Passenger's Seat Back)
S19 Seat Heater (Front Passenger's Seat Cushion)
S20 Side Airbag Squib LH
S21 Side Airbag Squib RH

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 3UZ–FE]

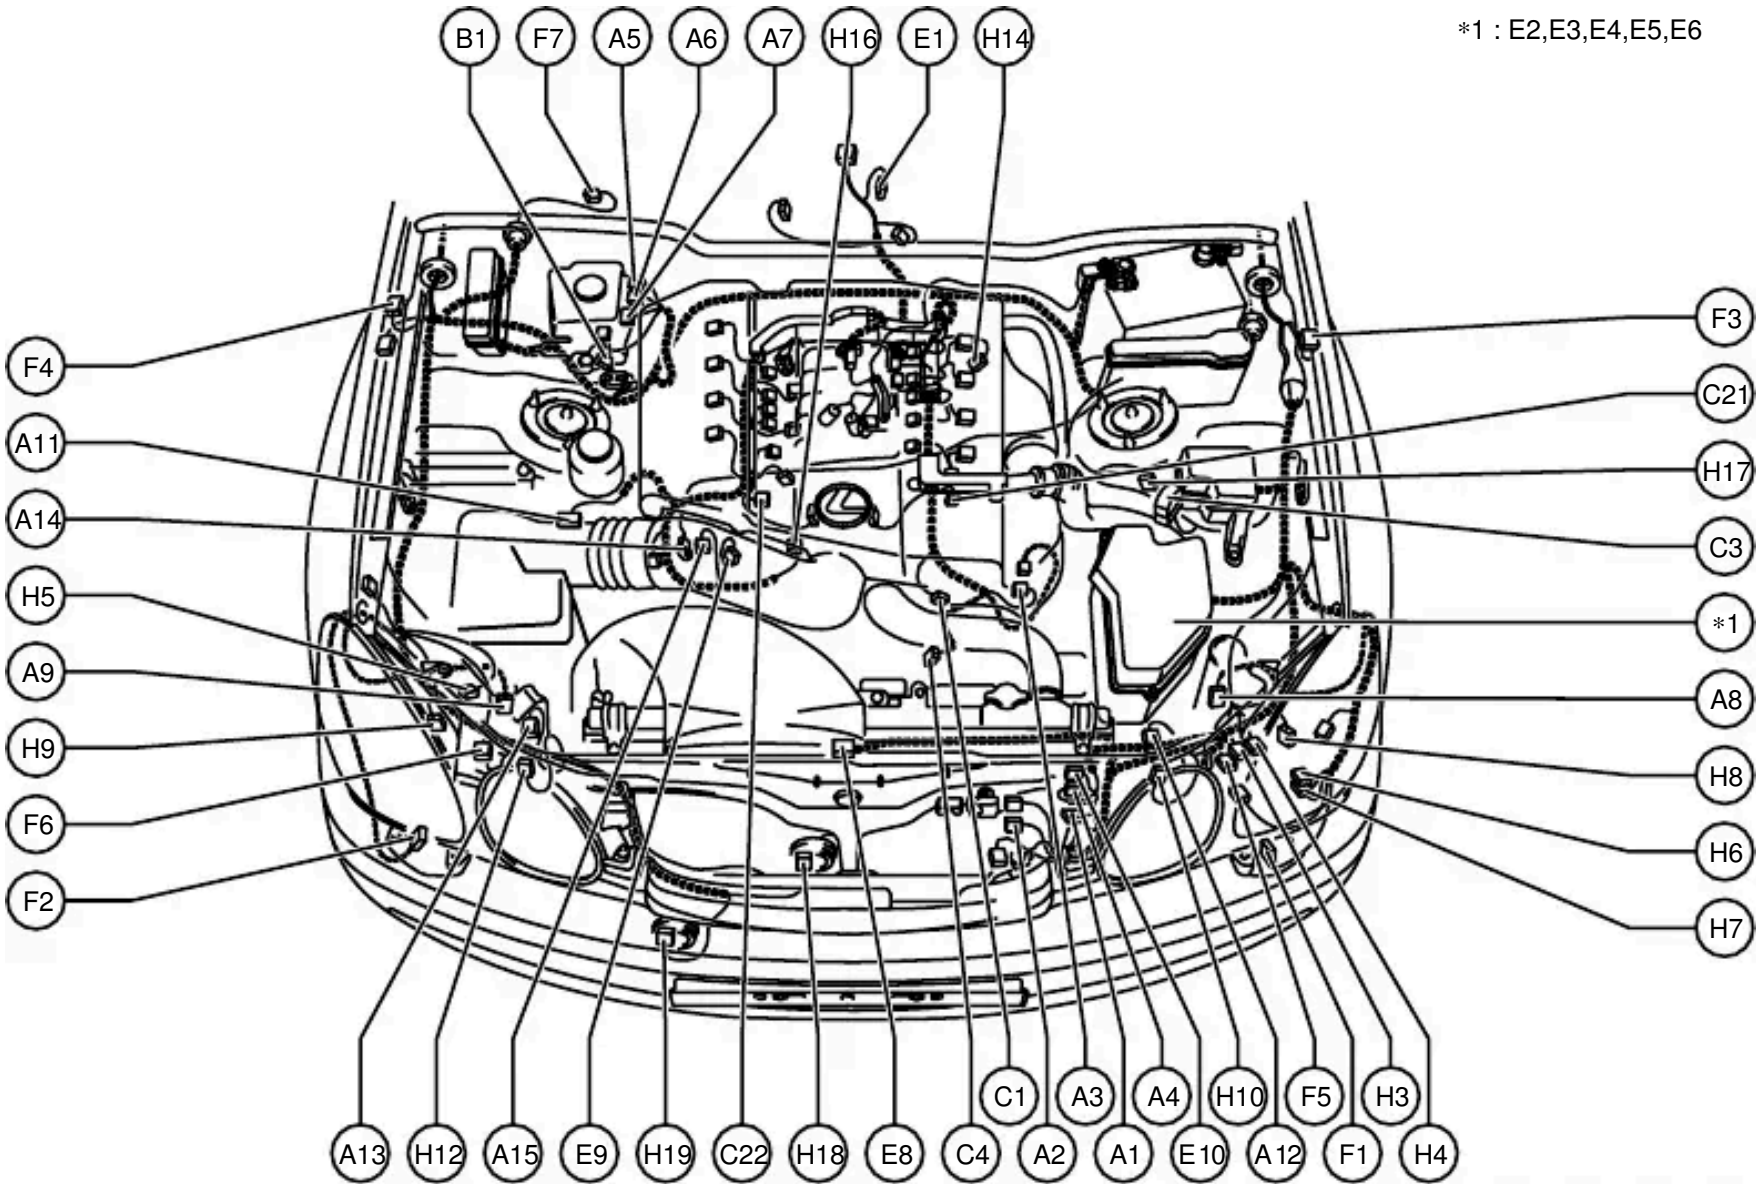

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Magnetic Clutch and Lock Sensor
A 4 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
A 5 ABS & TRC & VSC Actuator
A 6 ABS & TRC & VSC Actuator
A 7 ABS & TRC & VSC Actuator
A 8 ABS Speed Sensor Front LH
A 9 ABS Speed Sensor Front RH
A11 Air Flow Meter
A12 Airbag Sensor Front LH
A13 Airbag Sensor Front RH
A14 Alternator
A15 Alternator

B 1 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 3 Check Connector
C 4 Crankshaft Position Sensor
C21 Camshaft Timing Oil Control Valve LH
C22 Camshaft Timing Oil Control Valve RH

E 1 ECT Solenoid
E 2 Engine and ECT ECU
E 3 Engine and ECT ECU
E 4 Engine and ECT ECU
E 5 Engine and ECT ECU
E 6 Engine and ECT ECU
E 8 Engine Hood Courtesy SW
E 9 Engine Oil Level Sensor
E10 Exhaust Gas Sensor

F 1 Front Fog Light LH
F 2 Front Fog Light RH
F 3 Front Side Turn Signal Light LH
F 4 Front Side Turn Signal Light RH
F 5 Front Turn Signal and Clearance Light LH
F 6 Front Turn Signal and Clearance Light RH
F 7 Front Wiper Motor

H 3 Headlight Beam Level Control ECU
H 4 Headlight Beam Level Control ECU
H 5 Headlight Beam Level Control Motor
H 6 Headlight Cleaner Control Relay
H 7 Headlight Cleaner Motor
H 8 Headlight Control ECU LH
H 9 Headlight Control ECU RH
H10 Headlight LH (High)
H12 Headlight RH (High)
H14 Heated Oxygen Sensor (Bank 1 Sensor 1)
H16 Heated Oxygen Sensor (Bank 2 Sensor 1)
H17 Height Control Sensor (Front)
H18 Horn LH
H19 Horn RH

Position of Parts in Engine Compartment

[RHD : 3UZ–FE]

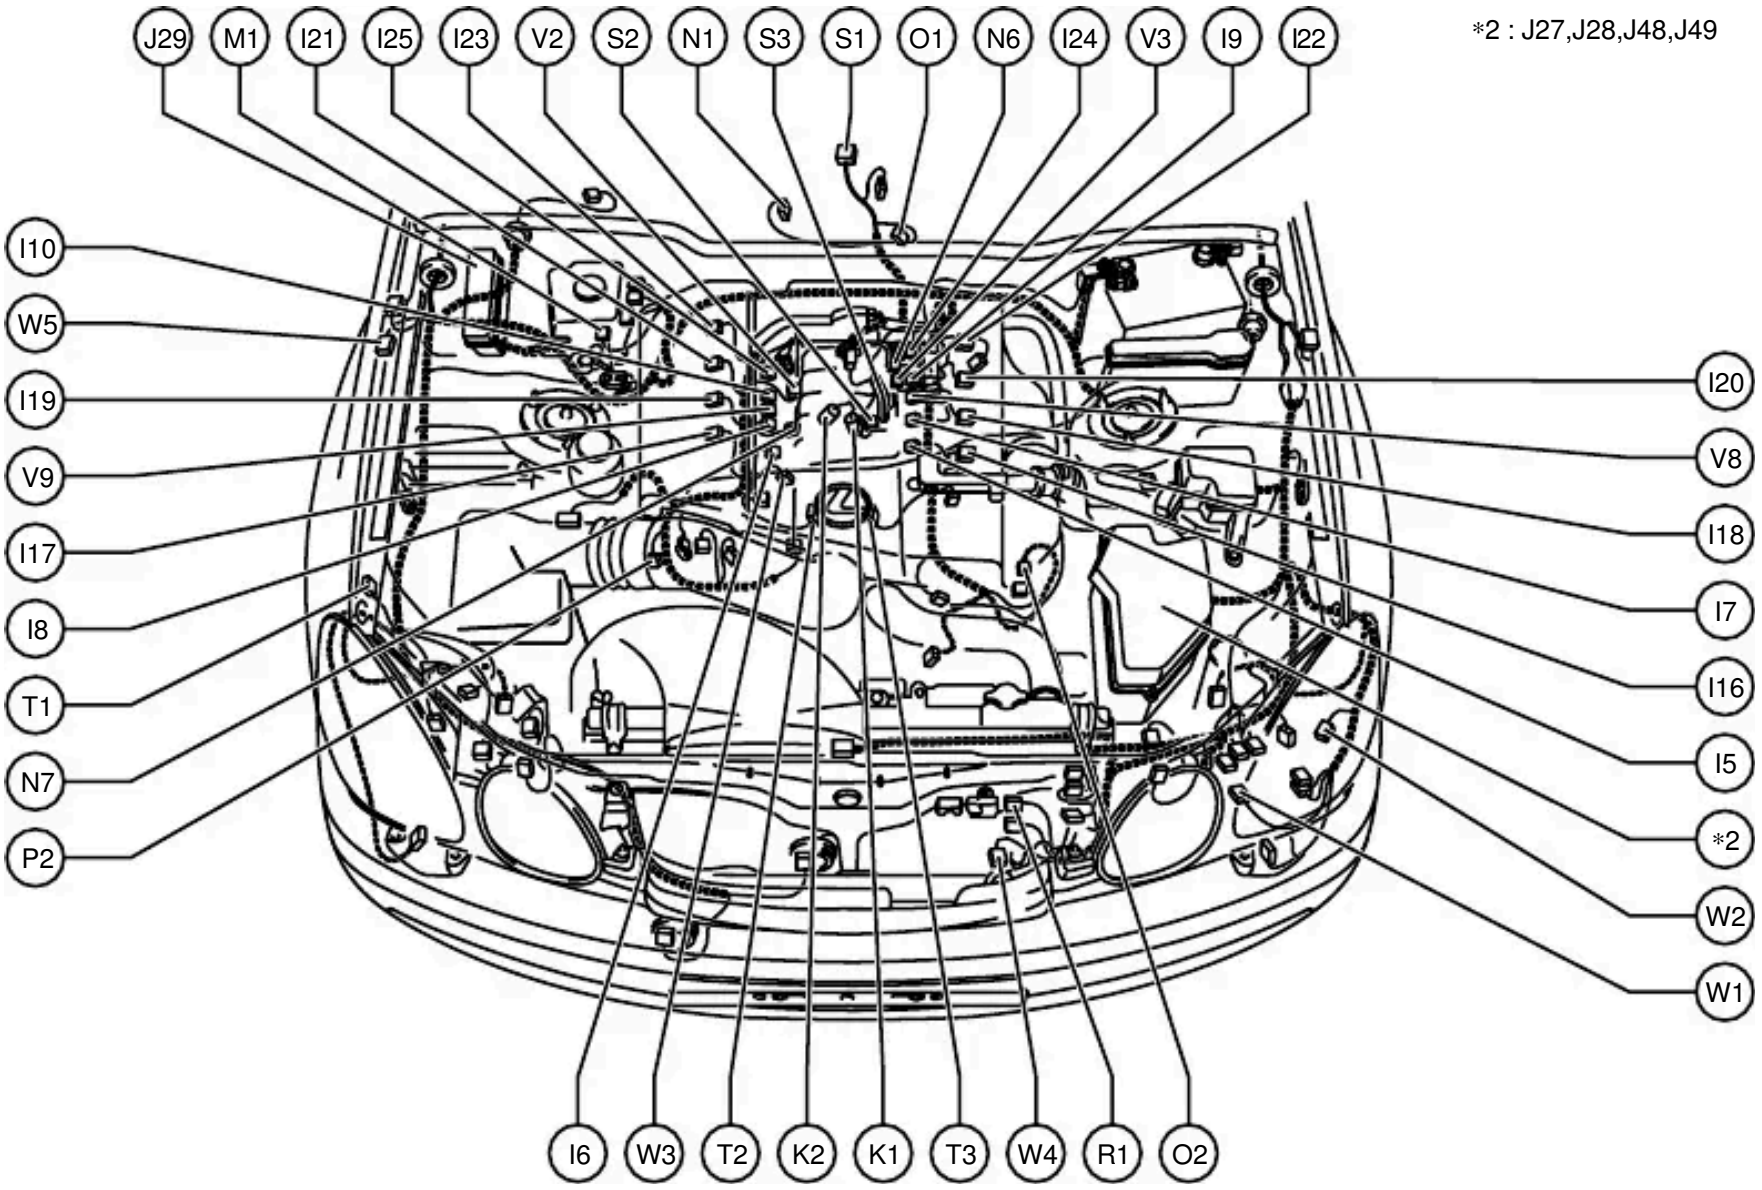

I 5 Injector No.1
I 6 Injector No.2
I 7 Injector No.3
I 8 Injector No.4
I 9 Injector No.5
I 10 Injector No.6
I 16 Ignition Coil and Igniter No.1
I 17 Ignition Coil and Igniter No.2
I 18 Ignition Coil and Igniter No.3
I 19 Ignition Coil and Igniter No.4
I 20 Ignition Coil and Igniter No.5
I 21 Ignition Coil and Igniter No.6
I 22 Ignition Coil and Igniter No.7
I 23 Ignition Coil and Igniter No.8
I 24 Injector No.7
I 25 Injector No.8

J 27 Junction Connector
J 28 Junction Connector
J 29 Junction Connector
J 48 Junction Connector
J 49 Junction Connector

K 1 Knock Sensor 1
K 2 Knock Sensor 2

M 1 Master Cylinder Pressure Sensor

N 1 Neutral Start SW
N 6 Noise Filter (Ignition No.1)
N 7 Noise Filter (Ignition No.2)

O 1 O/D Direct Clutch Speed Sensor
O 2 Oil Pressure SW

P 2 PPS Solenoid

R 1 Radiator Fan Motor

S 1 Speed Sensor (ECT)
S 2 Starter
S 3 Starter

T 1 Theft Deterrent Horn
T 2 Throttle Control Motor
T 3 Throttle Position Sensor

V 2 VSV (ACIS)
V 3 VSV (EVAP)
V 8 VVT Sensor LH
V 9 VVT Sensor RH

W 1 Washer Level Warning SW
W 2 Washer Motor
W 3 Water Temp. Sensor
W 4 Water Temp. SW
W 5 Wireless Door Lock Buzzer

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 2JZ–GE]

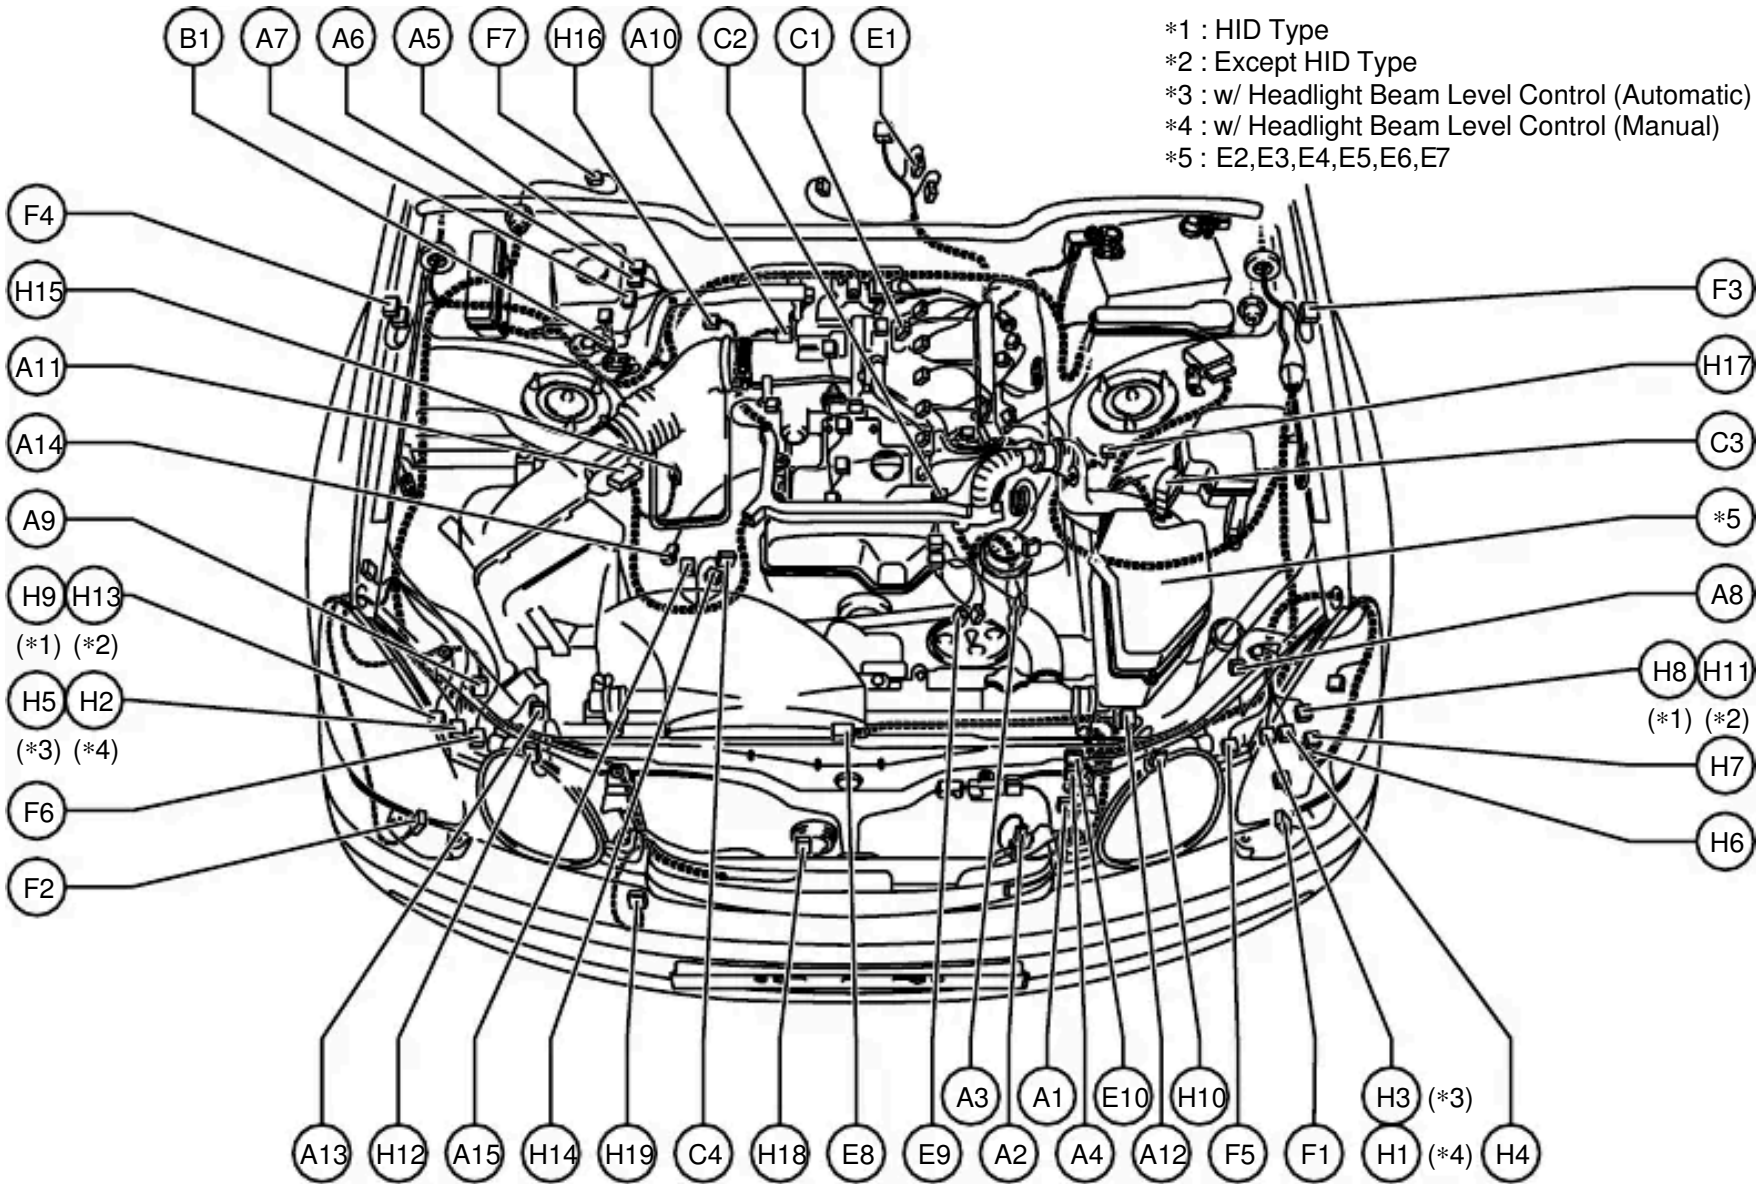

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Magnetic Clutch and Lock Sensor
A 4 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
A 5 ABS & TRC & VSC Actuator
A 6 ABS & TRC & VSC Actuator
A 7 ABS & TRC & VSC Actuator
A 8 ABS Speed Sensor Front LH
A 9 ABS Speed Sensor Front RH
A10 Accel Position Sensor
A11 Air Flow Meter
A12 Airbag Sensor Front LH
A13 Airbag Sensor Front RH
A14 Alternator
A15 Alternator

B 1 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 2 Camshaft Timing Oil Control Valve
C 3 Check Connector
C 4 Crankshaft Position Sensor

E 1 ECT Solenoid
E 2 Engine and ECT ECU
E 3 Engine and ECT ECU
E 4 Engine and ECT ECU
E 5 Engine and ECT ECU
E 6 Engine and ECT ECU
E 7 Engine and ECT ECU
E 8 Engine Hood Courtesy SW
E 9 Engine Oil Level Sensor
E10 Exhaust Gas Sensor

F 1 Front Fog Light LH
F 2 Front Fog Light RH
F 3 Front Side Turn Signal Light LH
F 4 Front Side Turn Signal Light RH
F 5 Front Turn Signal and Clearance Light LH
F 6 Front Turn Signal and Clearance Light RH
F 7 Front Wiper Motor

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight Beam Level Control ECU
H 4 Headlight Beam Level Control ECU
H 5 Headlight Beam Level Control Motor
H 6 Headlight Cleaner Control Relay
H 7 Headlight Cleaner Motor
H 8 Headlight Control ECU LH
H 9 Headlight Control ECU RH
H10 Headlight LH (High)
H11 Headlight LH (Low)
H12 Headlight RH (High)
H13 Headlight RH (Low)
H14 Heated Oxygen Sensor (Bank 1 Sensor 1)
H15 Heated Oxygen Sensor (Bank 1 Sensor 2)
H16 Heated Oxygen Sensor (Bank 2 Sensor 1)
H17 Height Control Sensor (Front)
H18 Horn LH
H19 Horn RH

Position of Parts in Engine Compartment

[RHD : 2JZ–GE]

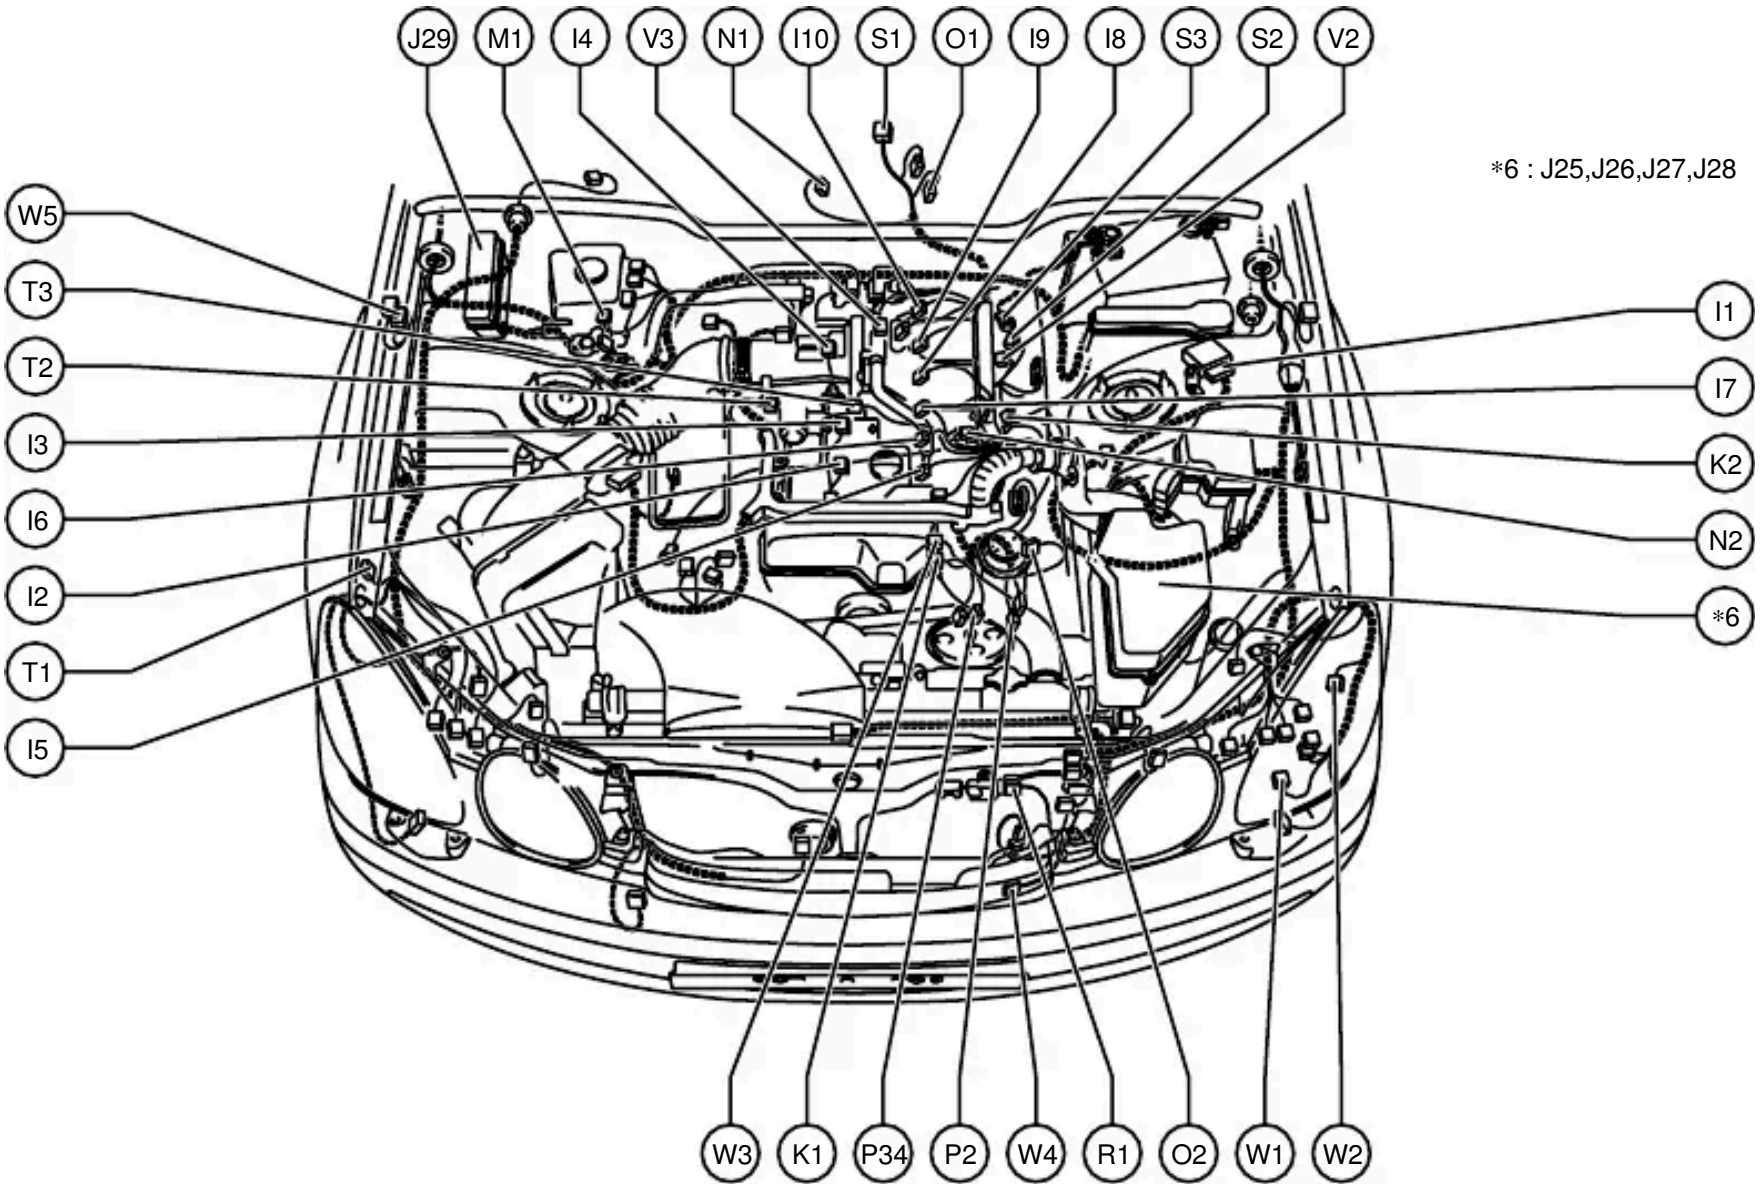

I 1 Igniter
I 2 Ignition Coil No.1
I 3 Ignition Coil No.2
I 4 Ignition Coil No.3
I 5 Injector No.1
I 6 Injector No.2
I 7 Injector No.3
I 8 Injector No.4
I 9 Injector No.5
I 10 Injector No.6

J 25 Junction Connector
J 26 Junction Connector
J 27 Junction Connector
J 28 Junction Connector
J 29 Junction Connector

K 1 Knock Sensor 1
K 2 Knock Sensor 2

M 1 Master Cylinder Pressure Sensor

N 1 Neutral Start SW
N 2 Noise Filter (Ignition)

O 1 O/D Direct Clutch Speed Sensor
O 2 Oil Pressure SW

P 2 PPS Solenoid
P34 Power Steering Oil Pressure Sensor

R 1 Radiator Fan Motor

S 1 Speed Sensor (ECT)
S 2 Starter
S 3 Starter

T 1 Theft Deterrent Horn
T 2 Throttle Control Motor
T 3 Throttle Position Sensor

V 2 VSV (ACIS)
V 3 VSV (EVAP)

W 1 Washer Level Warning SW
W 2 Washer Motor
W 3 Water Temp. Sensor
W 4 Water Temp. SW
W 5 Wireless Door Lock Buzzer

Position of Parts in Instrument Panel

[RHD]

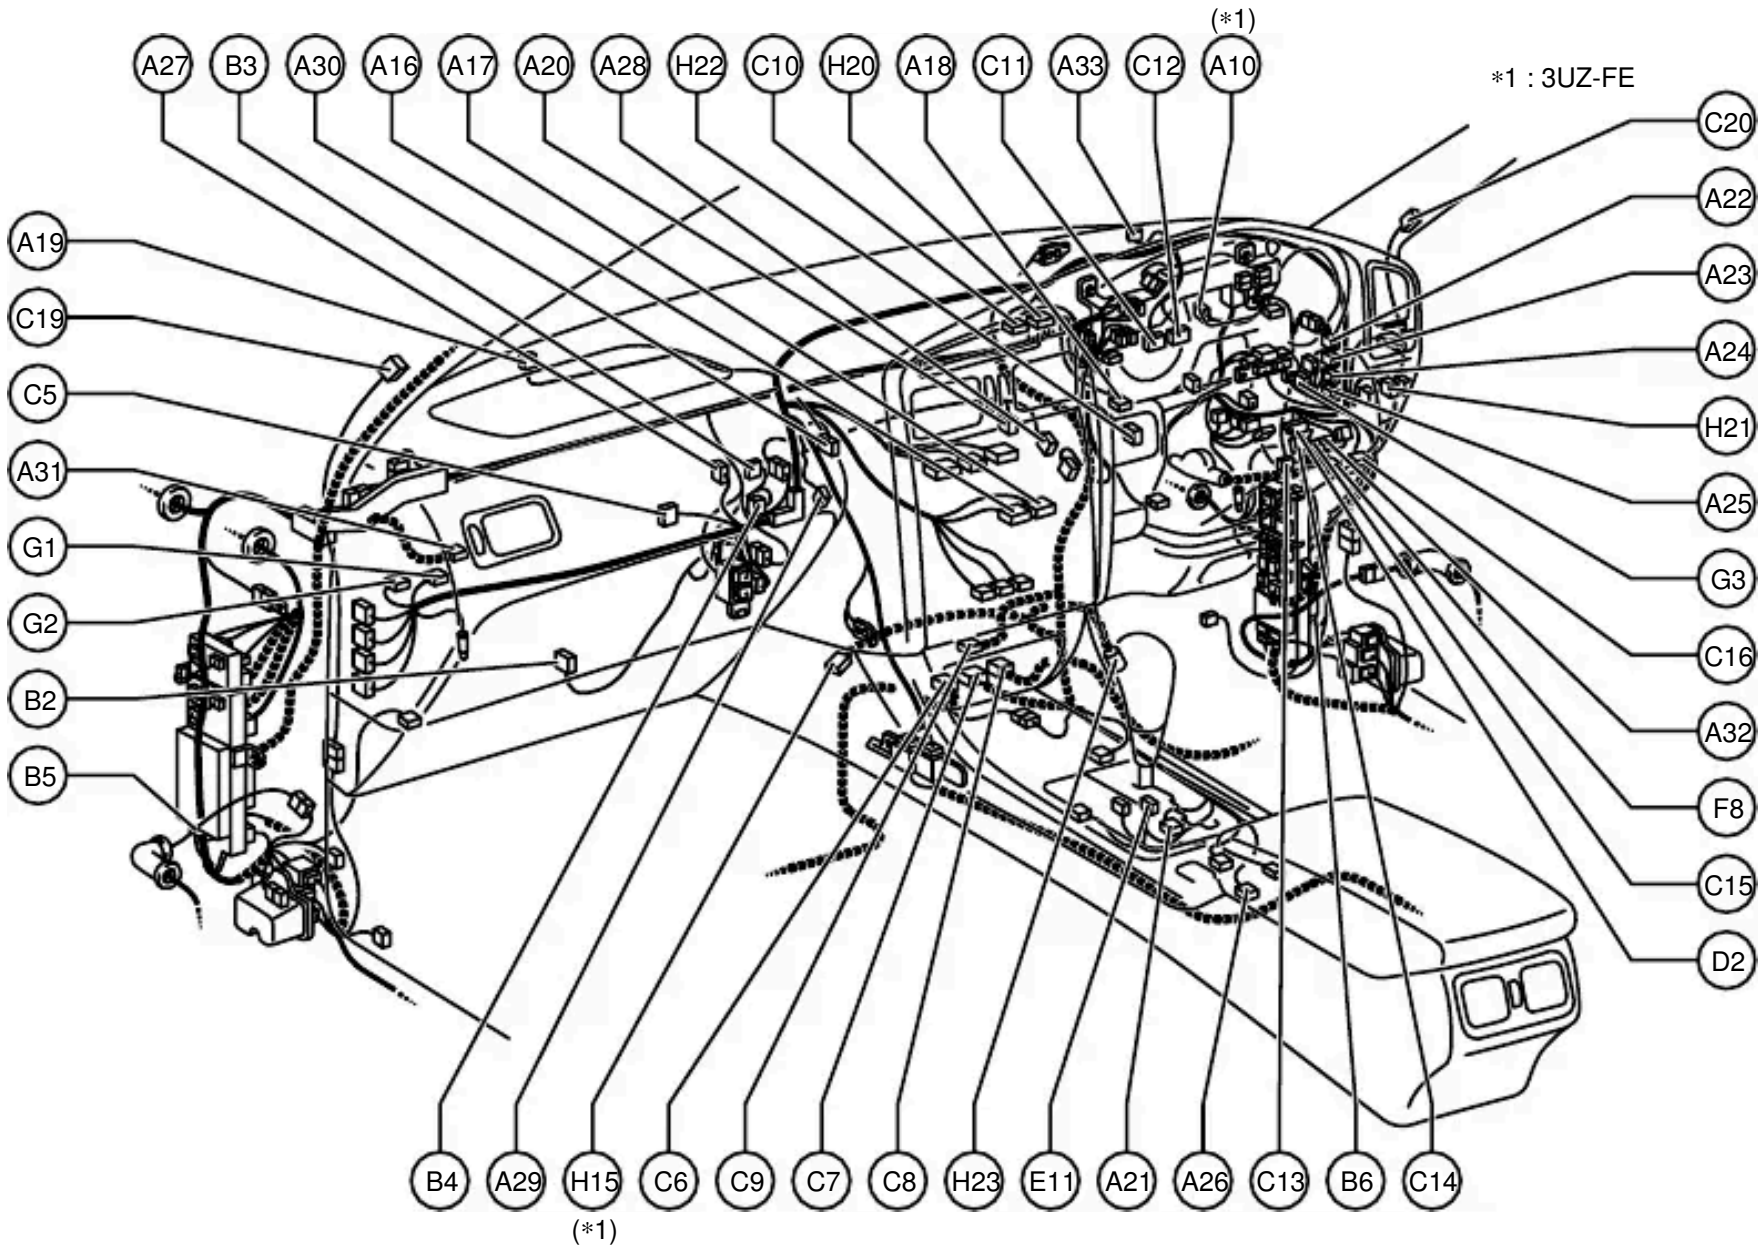

A10 Accel Position Sensor
A16 A/C Control Assembly
A17 A/C Control Assembly
A18 A/C Room Temp. Sensor
A19 A/C Solar Sensor
A20 A/C Thermistor
A21 A/T Shift Position Illumination
A22 ABS & TRC & VSC ECU
A23 ABS & TRC & VSC ECU
A24 ABS & TRC & VSC ECU
A25 ABS & TRC & VSC ECU
A26 ABS Deceleration Sensor
A27 Air Inlet Control Servo Motor
A28 Air Mix Control Servo Motor (Driver Side)
A29 Air Mix Control Servo Motor (Front Passenger Side)
A30 Air Vent Mode Control Servo Motor
A31 Airbag Squib (Front Passenger Airbag Assembly)
A32 Airbag Squib (Steering Wheel Pad)
A33 Automatic Light Control Sensor

B 2 Blower Motor
B 3 Blower Motor Controller
B 4 Blower Motor Controller
B 5 Body ECU No.1
B 6 Body ECU No.2

C 5 CD Automatic Changer
C 6 Center Airbag Sensor Assembly
C 7 Center Airbag Sensor Assembly
C 8 Center Airbag Sensor Assembly
C 9 Cigarette Lighter
C10 Clock
C11 Combination Meter
C12 Combination Meter
C13 Combination SW
C14 Combination SW
C15 Combination SW
C16 Combination SW
C19 Curtain Shield Airbag Squib LH
C20 Curtain Shield Airbag Squib RH

D 2 DLC3

E 11 ECT Pattern Select SW

F 8 Fuel Lid Opener SW

G 1 Glove Box Light
G 2 Glove Box Light SW
G 3 Gateway ECU

H15 Heated Oxygen Sensor (Bank 1 Sensor 2)
H20 Hazard SW
H21 Headlight Beam Level Control SW
H22 Headlight Cleaner SW
H23 Heated Oxygen Sensor (Bank 2 Sensor 2)

Position of Parts in Instrument Panel

[RHD]

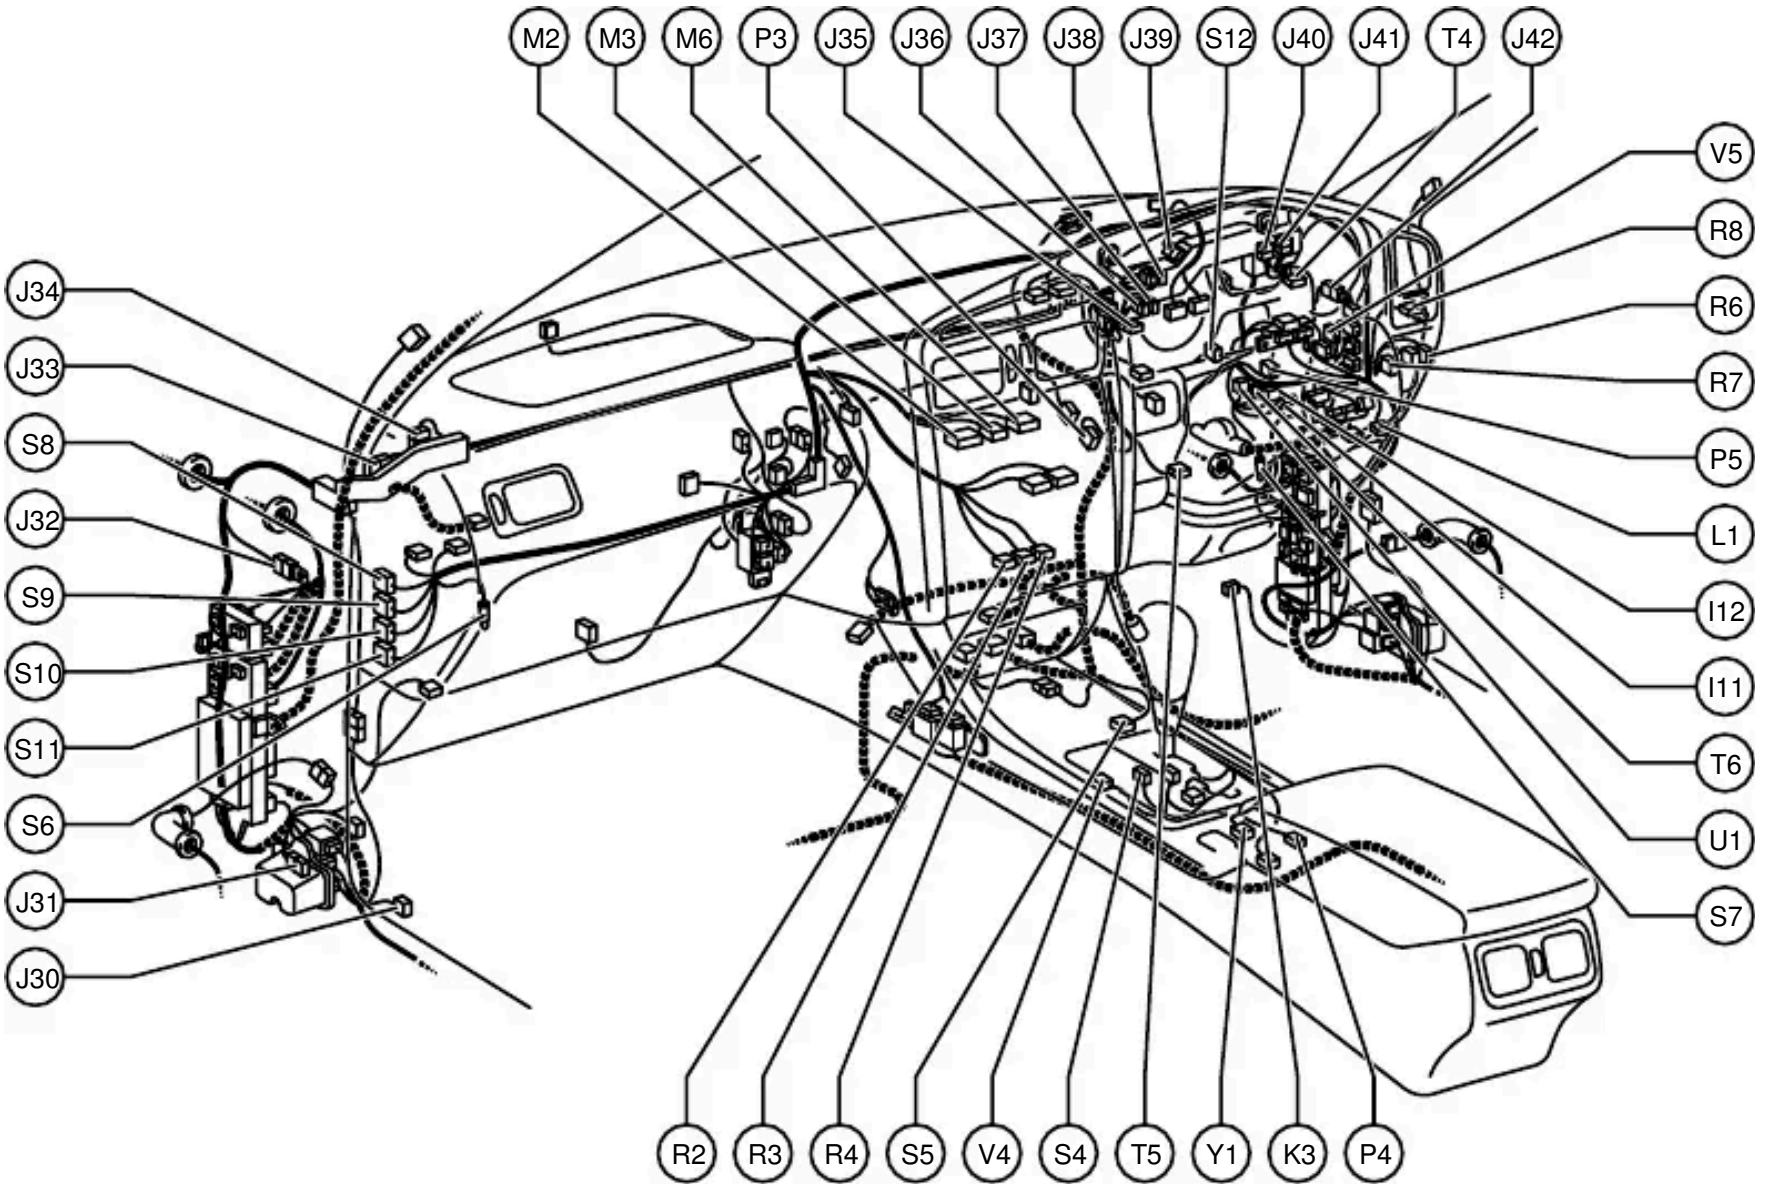

I 11 Ignition Key Cylinder Light
I 12 Ignition SW

J 30 Junction Connector
J 31 Junction Connector
J 32 Junction Connector
J 33 Junction Connector
J 34 Junction Connector
J 35 Junction Connector
J 36 Junction Connector
J 37 Junction Connector
J 38 Junction Connector
J 39 Junction Connector
J 40 Junction Connector
J 41 Junction Connector
J 42 Junction Connector

K 3 Kick Down SW

L 1 Luggage Compartment Door Opener SW

M 2 Multi–Display
M 3 Multi–Display
M 6 Multi–Display

P 3 Parking Brake SW
P 4 Power Outlet
P 5 PPS ECU

R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player
R 6 Rear Fog Light SW
R 7 Remote Control Mirror SW
R 8 Rheostat

S 4 Seat Heater SW
S 5 Shift Lock Control ECU
S 6 Step Light LH
S 7 Step Light RH
S 8 Stereo Component Amplifier
S 9 Stereo Component Amplifier
S10 Stereo Component Amplifier
S11 Stereo Component Amplifier
S12 Stop Light SW

T 4 Telephone Microphone
T 5 Tilt and Telescopic ECU
T 6 Transponder Key Amplifier

U 1 Unlock Warning SW and Key Interlock Solenoid

V 4 VSC Off SW
V 5 VSC Warning Buzzer

Y 1 Yaw Rate Sensor

Position of Parts in Body

[RHD]

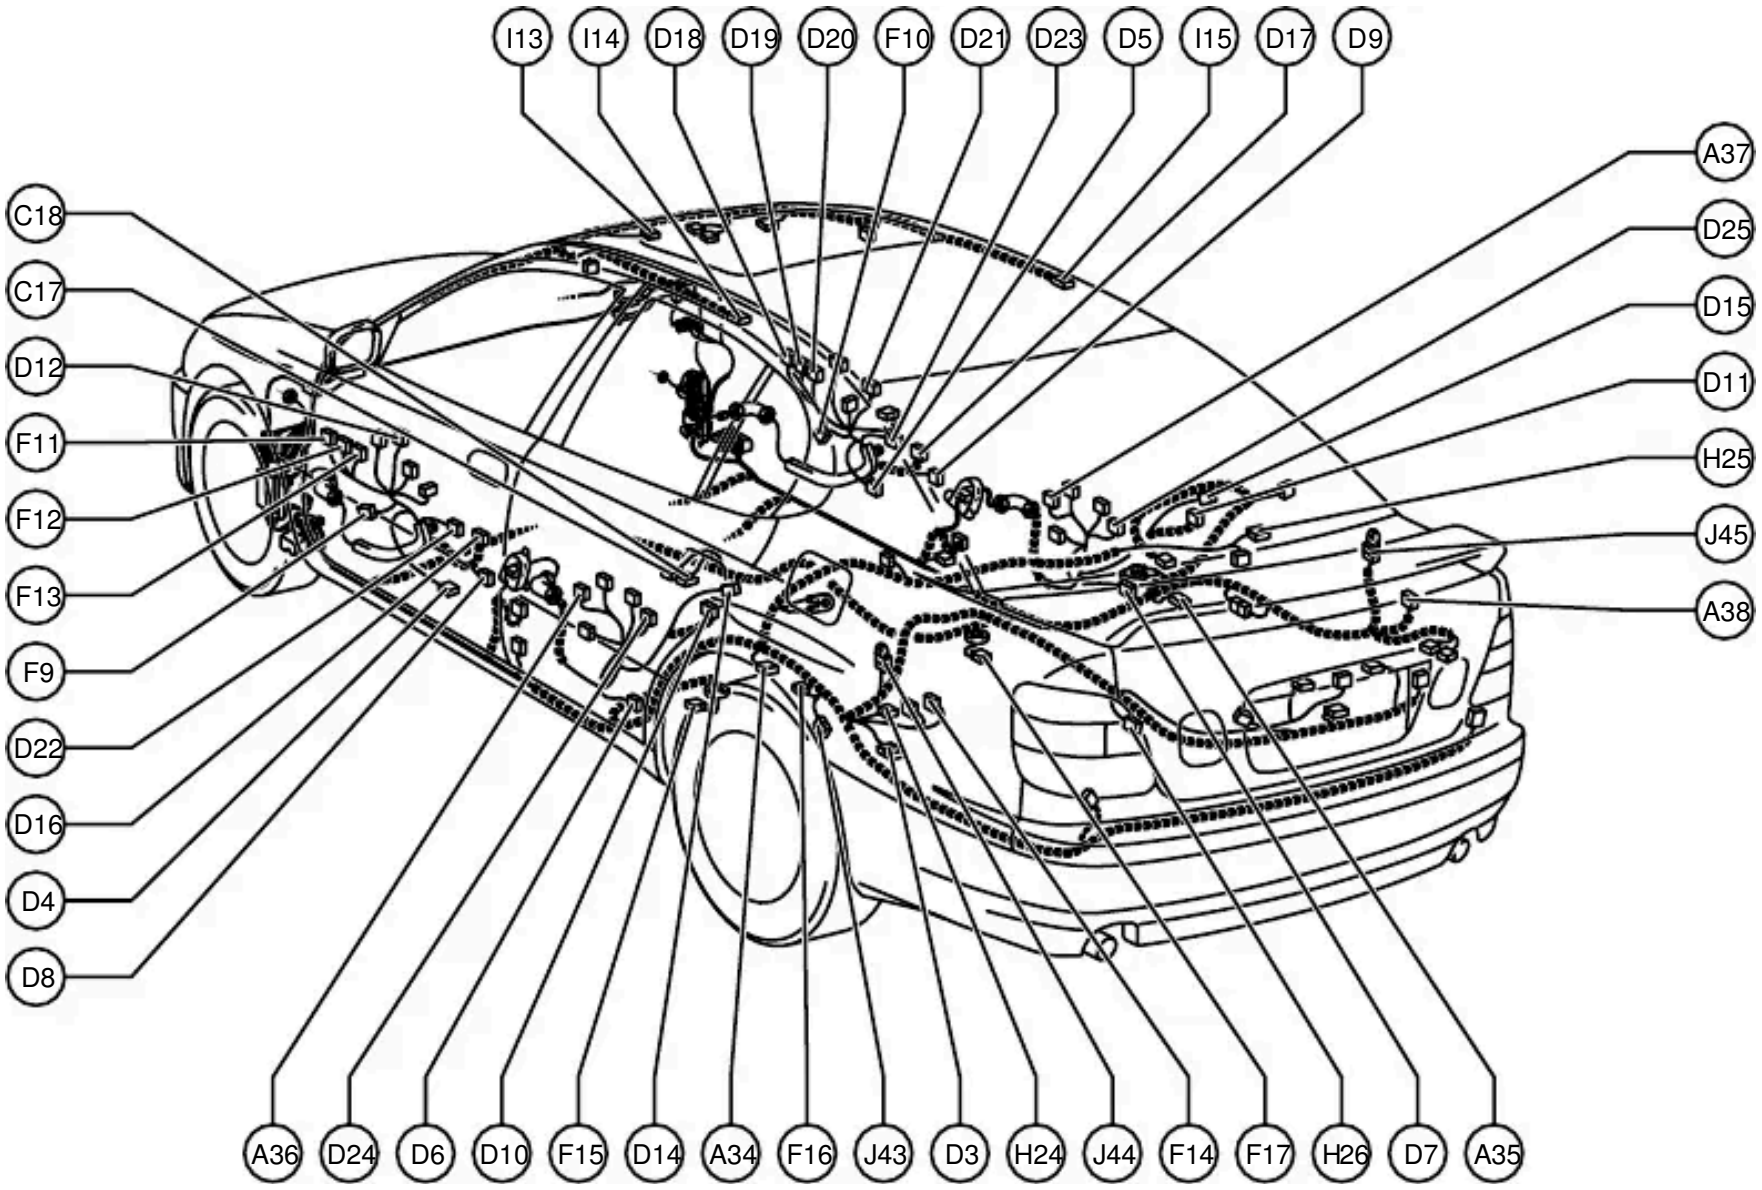

A34 ABS Speed Sensor Rear LH
A35 ABS Speed Sensor Rear RH
A36 Ashtray Illumination Rear LH
A37 Ashtray Illumination Rear RH
A38 Auto Antenna Control Relay and Motor

C17 Cellular Phone (Hand Set)
C18 Cellular Phone (Hand Set)

D 3 Diode (Luggage Door Open Detection)
D 4 Door Courtesy Light Front LH
D 5 Door Courtesy Light Front RH
D 6 Door Courtesy Light Rear LH
D 7 Door Courtesy Light Rear RH
D 8 Door Courtesy SW Front LH
D 9 Door Courtesy SW Front RH
D10 Door Courtesy SW Rear LH
D11 Door Courtesy SW Rear RH
D12 Door Lock Control SW LH
D14 Door Lock Motor and Door Lock Detection SW Rear LH
D15 Door Lock Motor and Door Lock Detection SW Rear RH
D16 Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front LH
D17 Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front RH
D18 Driver Door ECU
D19 Driver Door ECU
D20 Driver Door ECU
D21 Driving Position Memory SW
D22 Door Lock Motor and SW Front LH
D23 Door Lock Motor and SW Front RH
D24 Door Lock Motor and SW Rear LH
D25 Door Lock Motor and SW Rear RH

F 9 Front Door Speaker LH
F10 Front Door Speaker RH
F11 Front Passenger Door ECU
F12 Front Passenger Door ECU
F13 Front Passenger Door ECU
F14 Fuel Lid Opener Motor
F15 Fuel Pump and Sender
F16 Fuel Pump Control ECU
F17 Fuel Sender (Sub)

H24 Height Control Sensor (Rear)
H25 High Mounted Stop Light (Bulb Type)
H26 High Mounted Stop Light (LED Type)

I 13 Inner Mirror
I 14 Interior Light Rear LH
I 15 Interior Light Rear RH

J 43 Junction Connector
J 44 Junction Connector
J 45 Junction Connector

Position of Parts in Body

[RHD]

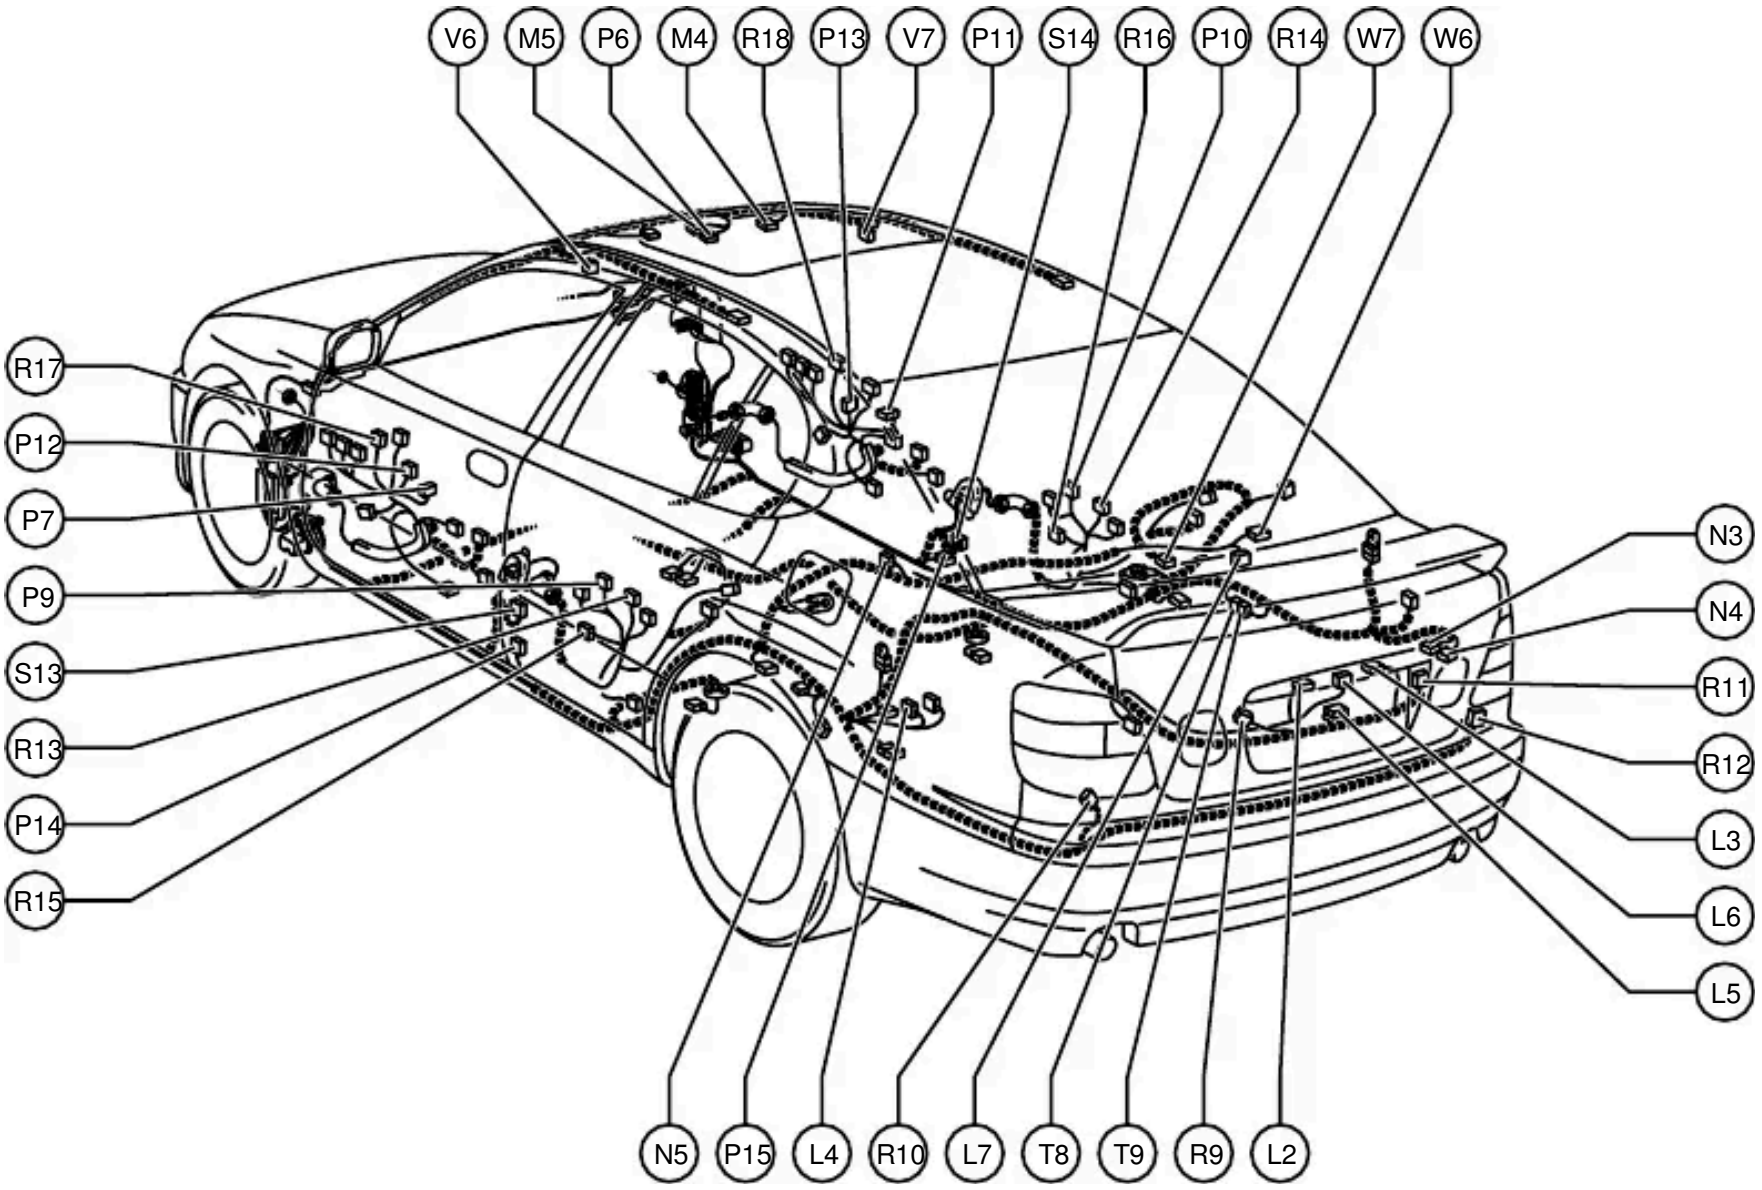

L 2 License Plate Light LH
L 3 License Plate Light RH
L 4 Light Failure Sensor
L 5 Luggage Compartment Door Courtesy SW and Opener Motor
L 6 Luggage Compartment Door Key Unlock SW
L 7 Luggage Compartment Light

M 4 Moon Roof Control ECU
M 5 Moon Roof Control SW

N 3 Navigation ECU
N 4 Navigation ECU
N 5 Noise Filter (Rear Window Defogger)

P 6 Personal Light
P 7 Power Window Control SW Front LH
P 9 Power Window Control SW Rear LH
P10 Power Window Control SW Rear RH
P11 Power Window Master SW
P12 Power Window Motor Front LH
P13 Power Window Motor Front RH
P14 Pretensioner LH
P15 Pretensioner RH

R 9 Rear Combination Light LH
R10 Rear Combination Light LH
R11 Rear Combination Light RH
R12 Rear Combination Light RH
R13 Rear Door LH ECU
R14 Rear Door RH ECU
R15 Rear Door Speaker LH
R16 Rear Door Speaker RH
R17 Remote Control Mirror LH
R18 Remote Control Mirror RH

S13 Side Airbag Sensor LH
S14 Side Airbag Sensor RH

T 8 Telephone Transceiver and Speaker Relay
T 9 Telephone Transceiver and Speaker Relay

V 6 Vanity Light LH
V 7 Vanity Light RH

W 6 Wireless Door Lock Control ECU
W 7 Woofer (Speaker)

Position of Parts in Seat

[RHD]

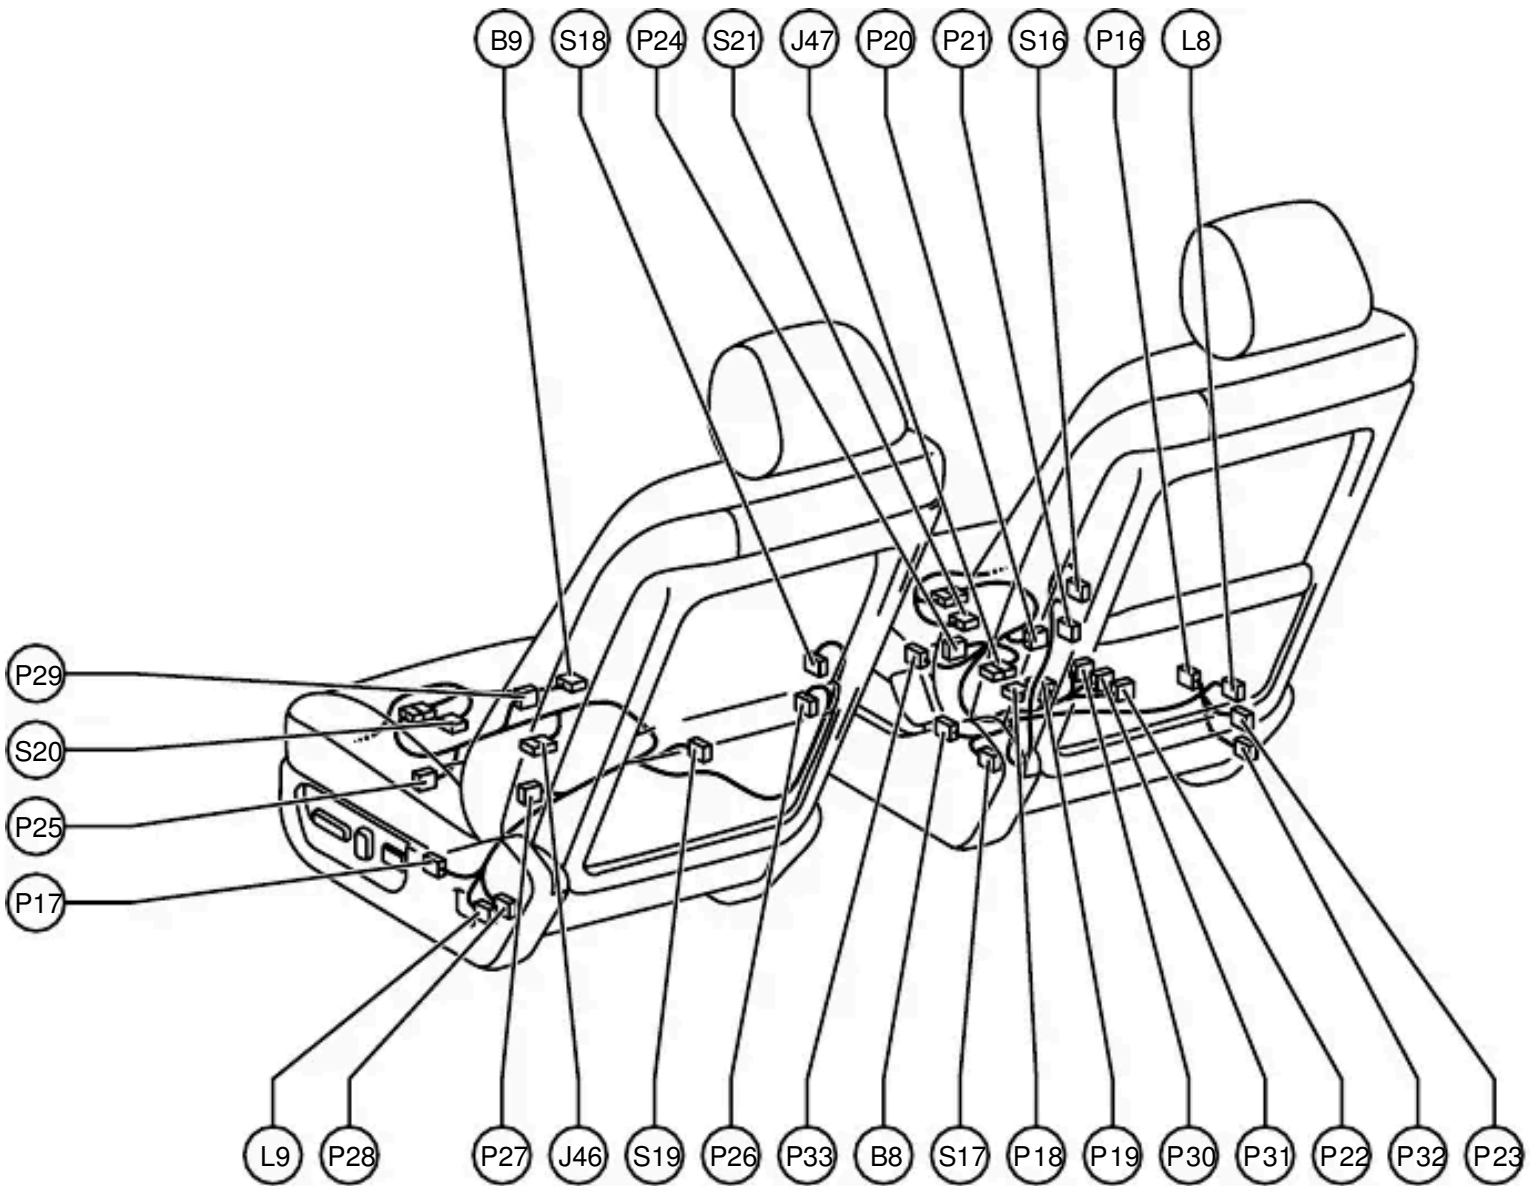

B 8 Buckle SW RH
B 9 Buckle SW LH and
Seat Belt Warning Occupant Detection Sensor

J 46 Junction Connector
J 47 Junction Connector

L 8 Lumbar Support Control SW (Driver's Seat)
L 9 Lumbar Support Control SW (Front Passenger's Seat)

P16 Power Seat Control SW (Driver's Seat)
P17 Power Seat Control SW (Front Passenger's Seat)
P18 Power Seat ECU
P19 Power Seat ECU
P20 Power Seat Motor (Driver's Seat Front Vertical Control)
P21 Power Seat Motor
(Driver's Seat Lumbar Support Control)
P22 Power Seat Motor (Driver's Seat Rear Vertical Control)
P23 Power Seat Motor (Driver's Seat Reclining Control)
P24 Power Seat Motor (Driver's Seat Slide Control)
P25 Power Seat Motor
(Front Passenger's Seat Front Vertical Control)
P26 Power Seat Motor
(Front Passenger's Seat Lumbar Support Control)
P27 Power Seat Motor
(Front Passenger's Seat Rear Vertical Control)
P28 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P29 Power Seat Motor
(Front Passenger's Seat Slide Control)
P30 Power Seat Position Sensor
(Driver's Seat Front Vertical Control)
P31 Power Seat Position Sensor
(Driver's Seat Rear Vertical Control)
P32 Power Seat Position Sensor
(Driver's Seat Reclining Control)
P33 Power Seat Position Sensor (Driver's Seat Slide Control)

S16 Seat Heater (Driver's Seat Back)
S17 Seat Heater (Driver's Seat Cushion)
S18 Seat Heater (Front Passenger's Seat Back)
S19 Seat Heater (Front Passenger's Seat Cushion)
S20 Side Airbag Squib LH
S21 Side Airbag Squib RH

E ELECTRICAL WIRING ROUTING

▭ : Location of Connector Joining Wire Harness and Wire Harness
▽ : Location of Ground Points

[LHD : 3UZ–FE]

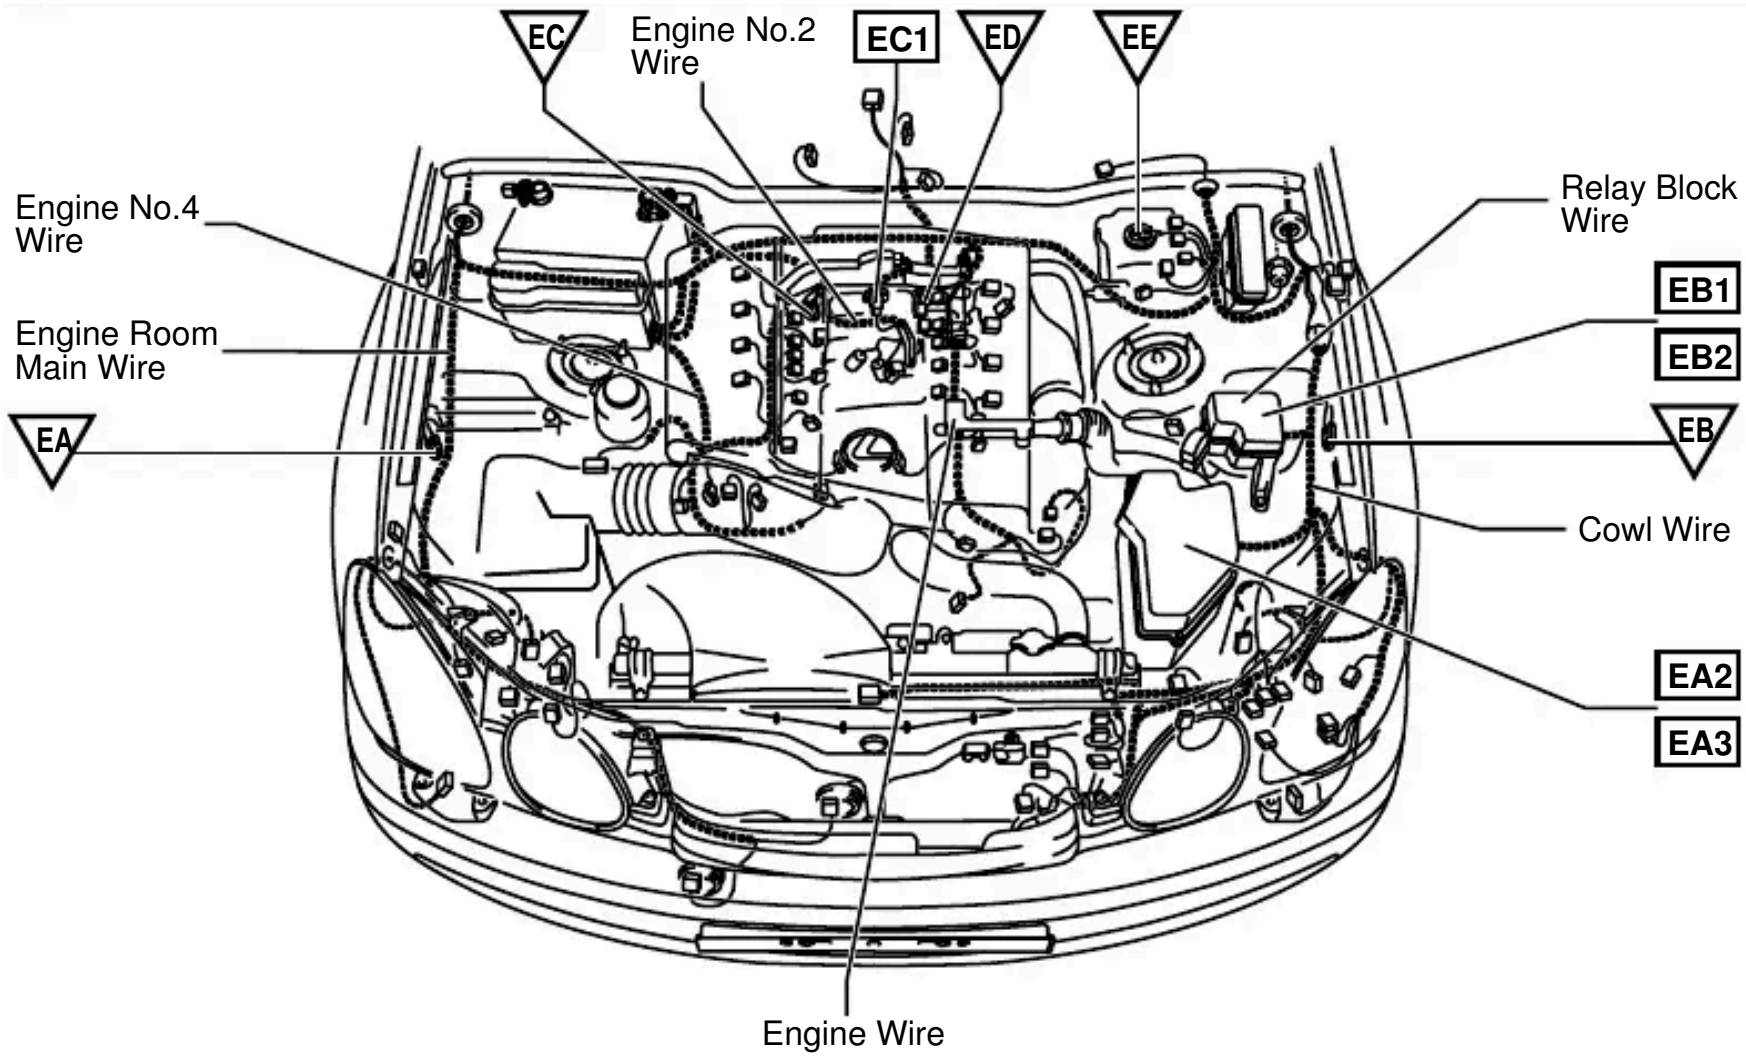

Connector Joining Wire Harness and Wire Harness

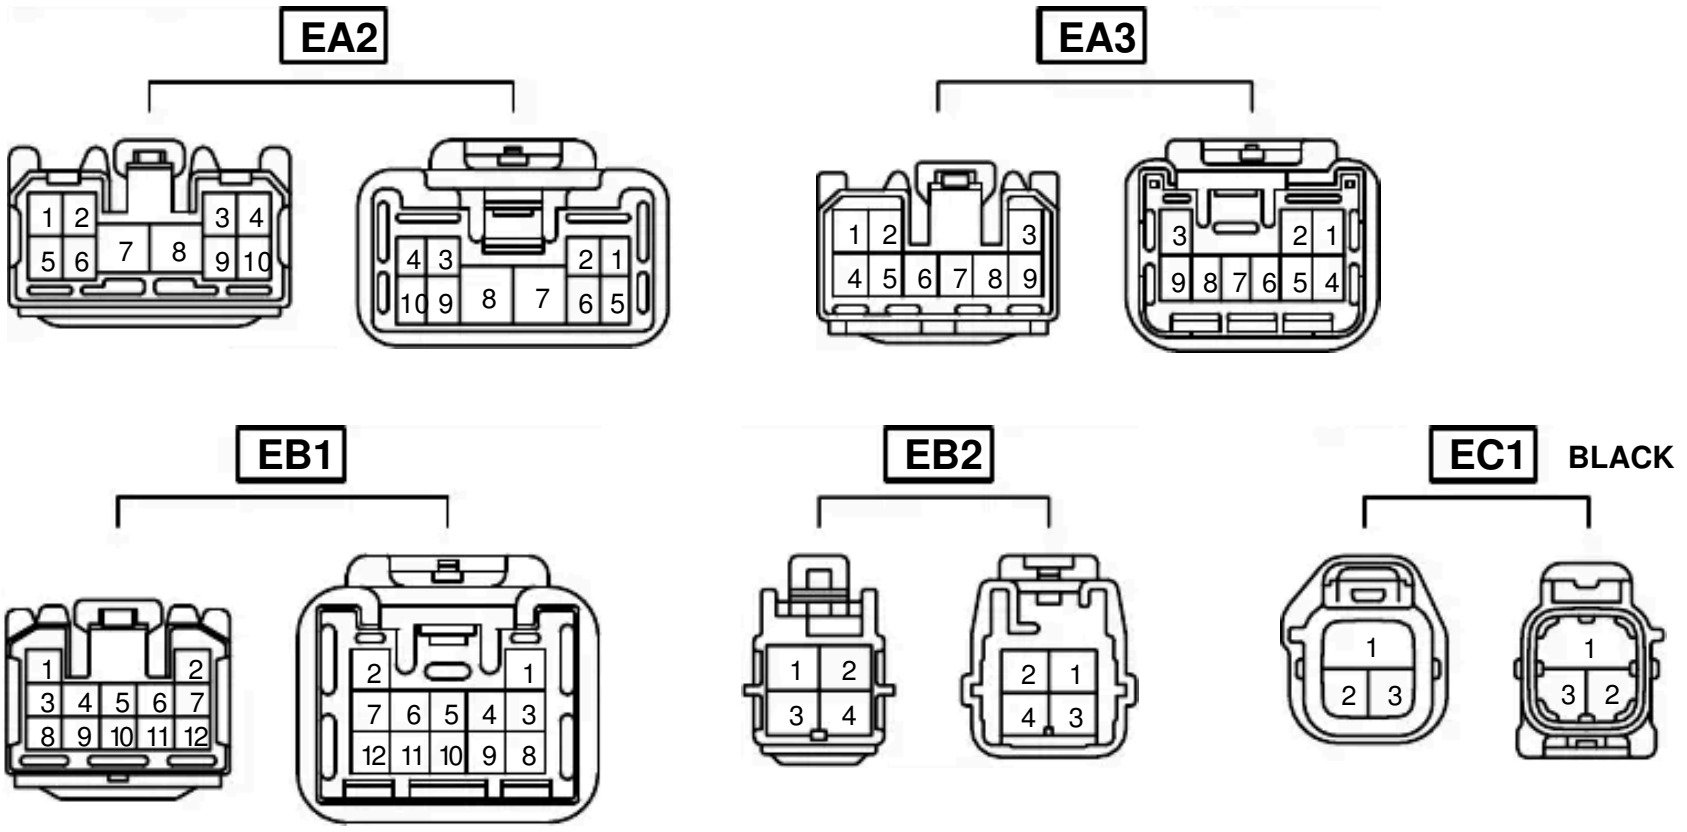

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA2	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA3	
EB1	Cowl Wire and Relay Block Wire (Inside of the Engine Room No.3 R/B)
EB2	
EC1	Engine No.2 Wire and Engine Wire (Near the Starter)

E ELECTRICAL WIRING ROUTING

▭ : Location of Connector Joining Wire Harness and Wire Harness
▽ : Location of Ground Points

[LHD : 2JZ–GE]

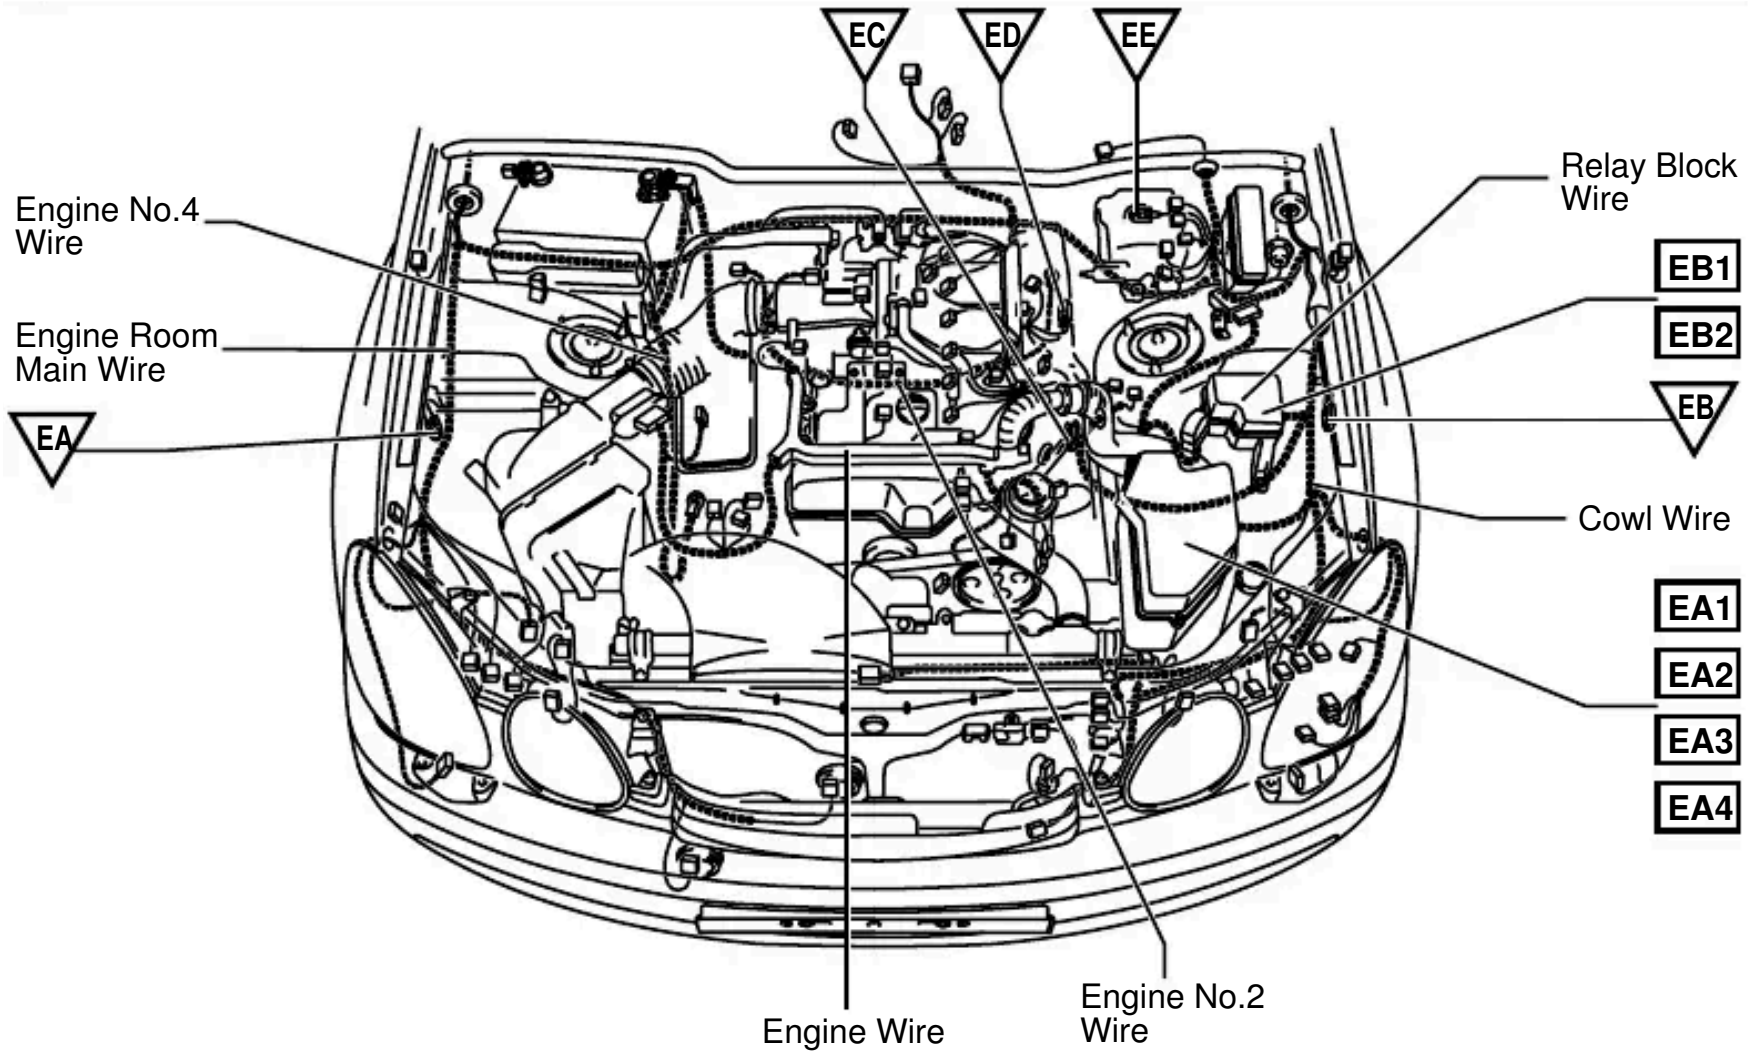

Connector Joining Wire Harness and Wire Harness

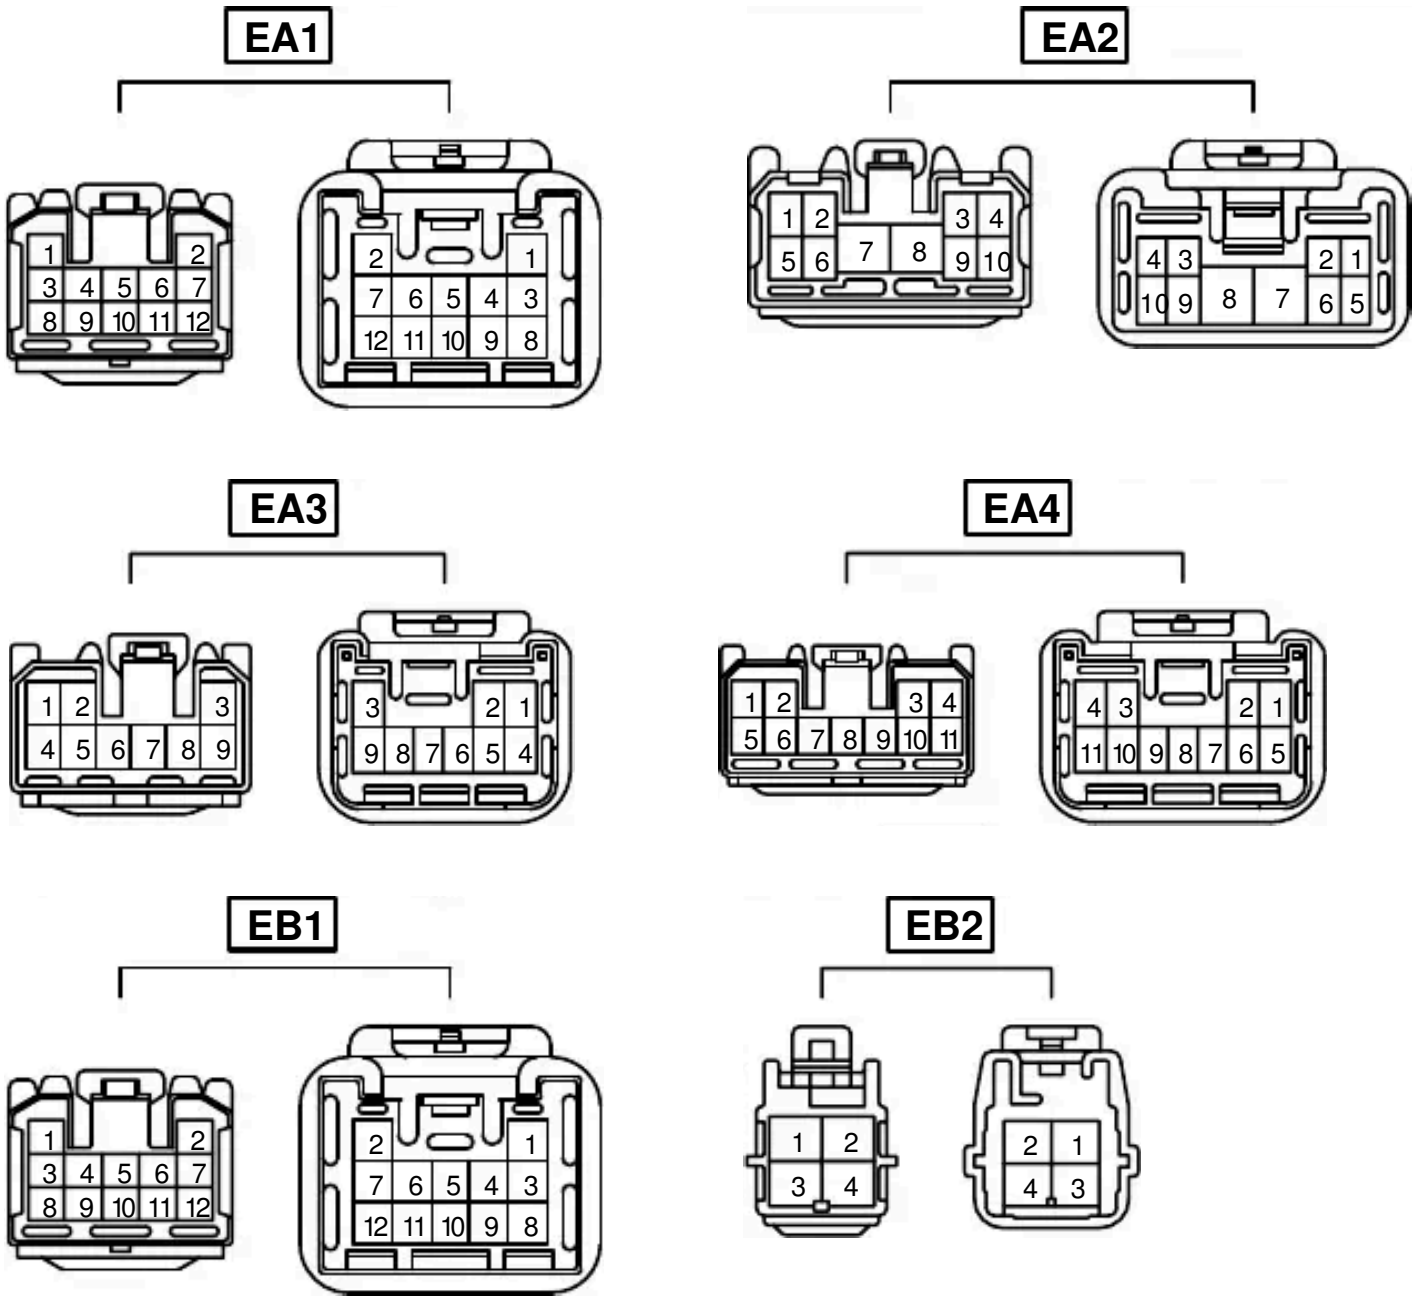

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA2	
EA3	
EA4	
EB1	Cowl Wire and Relay Block Wire (Inside of the Engine Room No.3 R/B)
EB2	

E ELECTRICAL WIRING ROUTING

▭ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD]

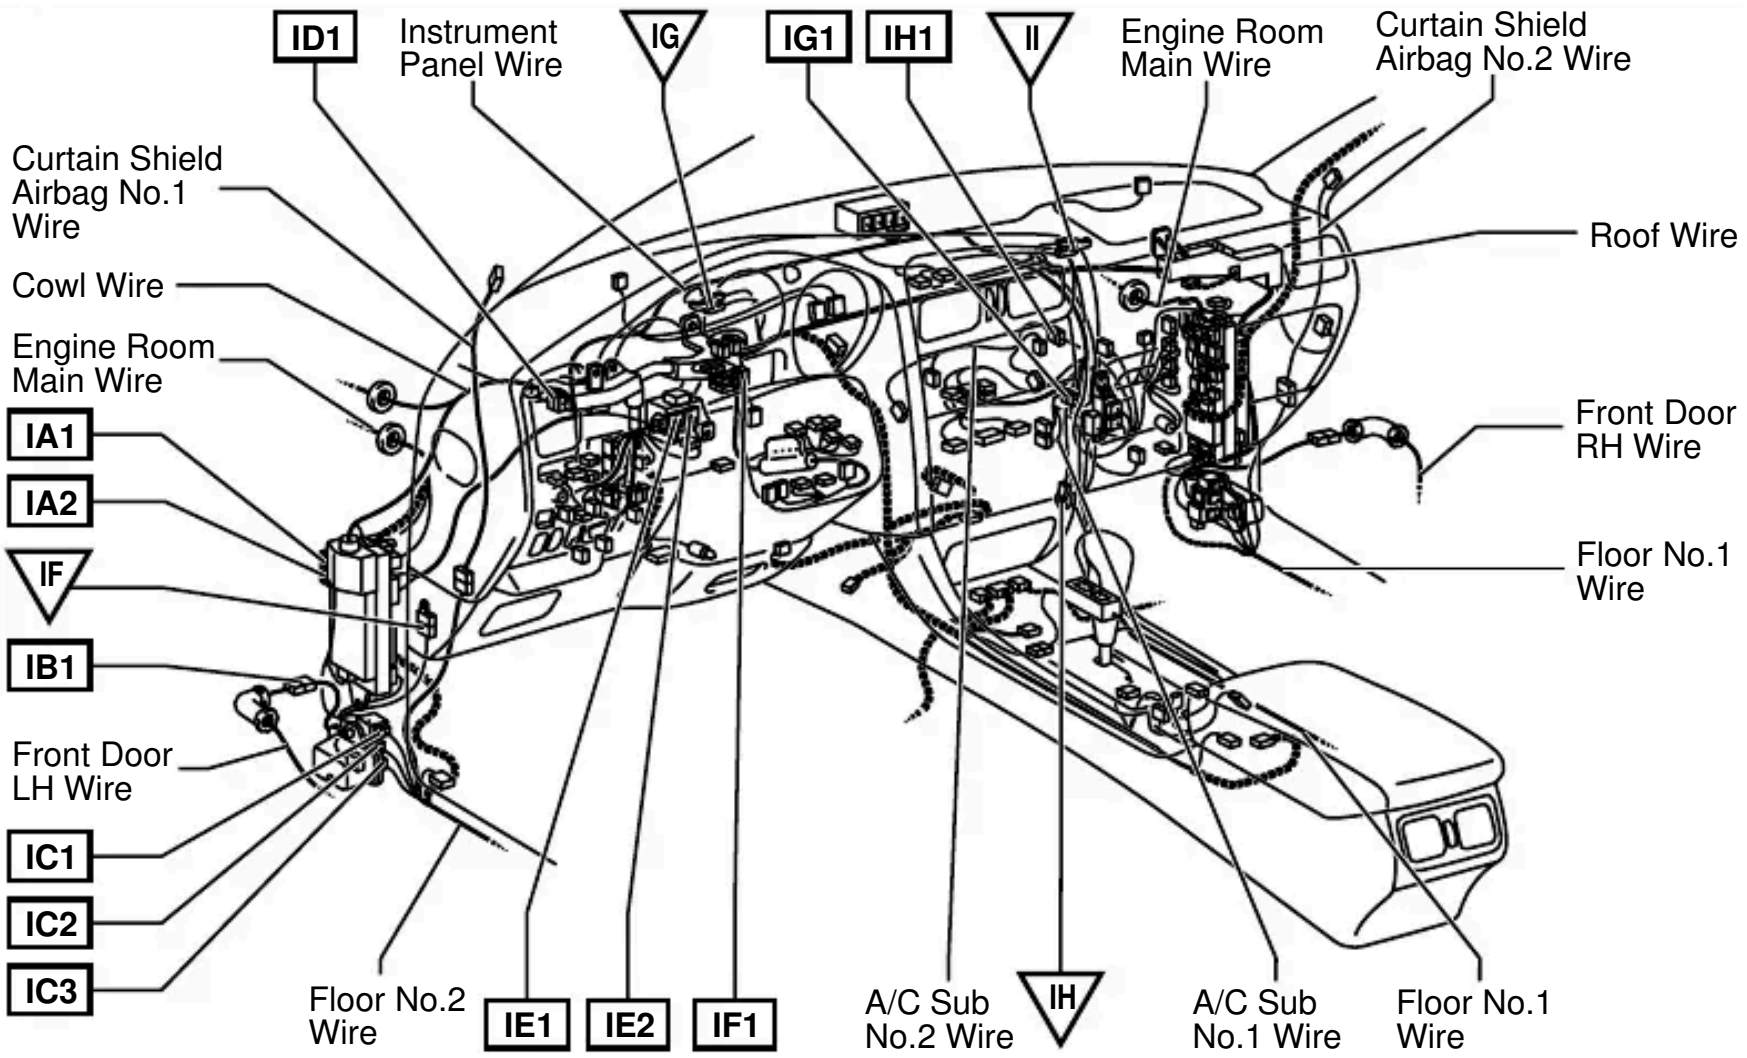

Connector Joining Wire Harness and Wire Harness

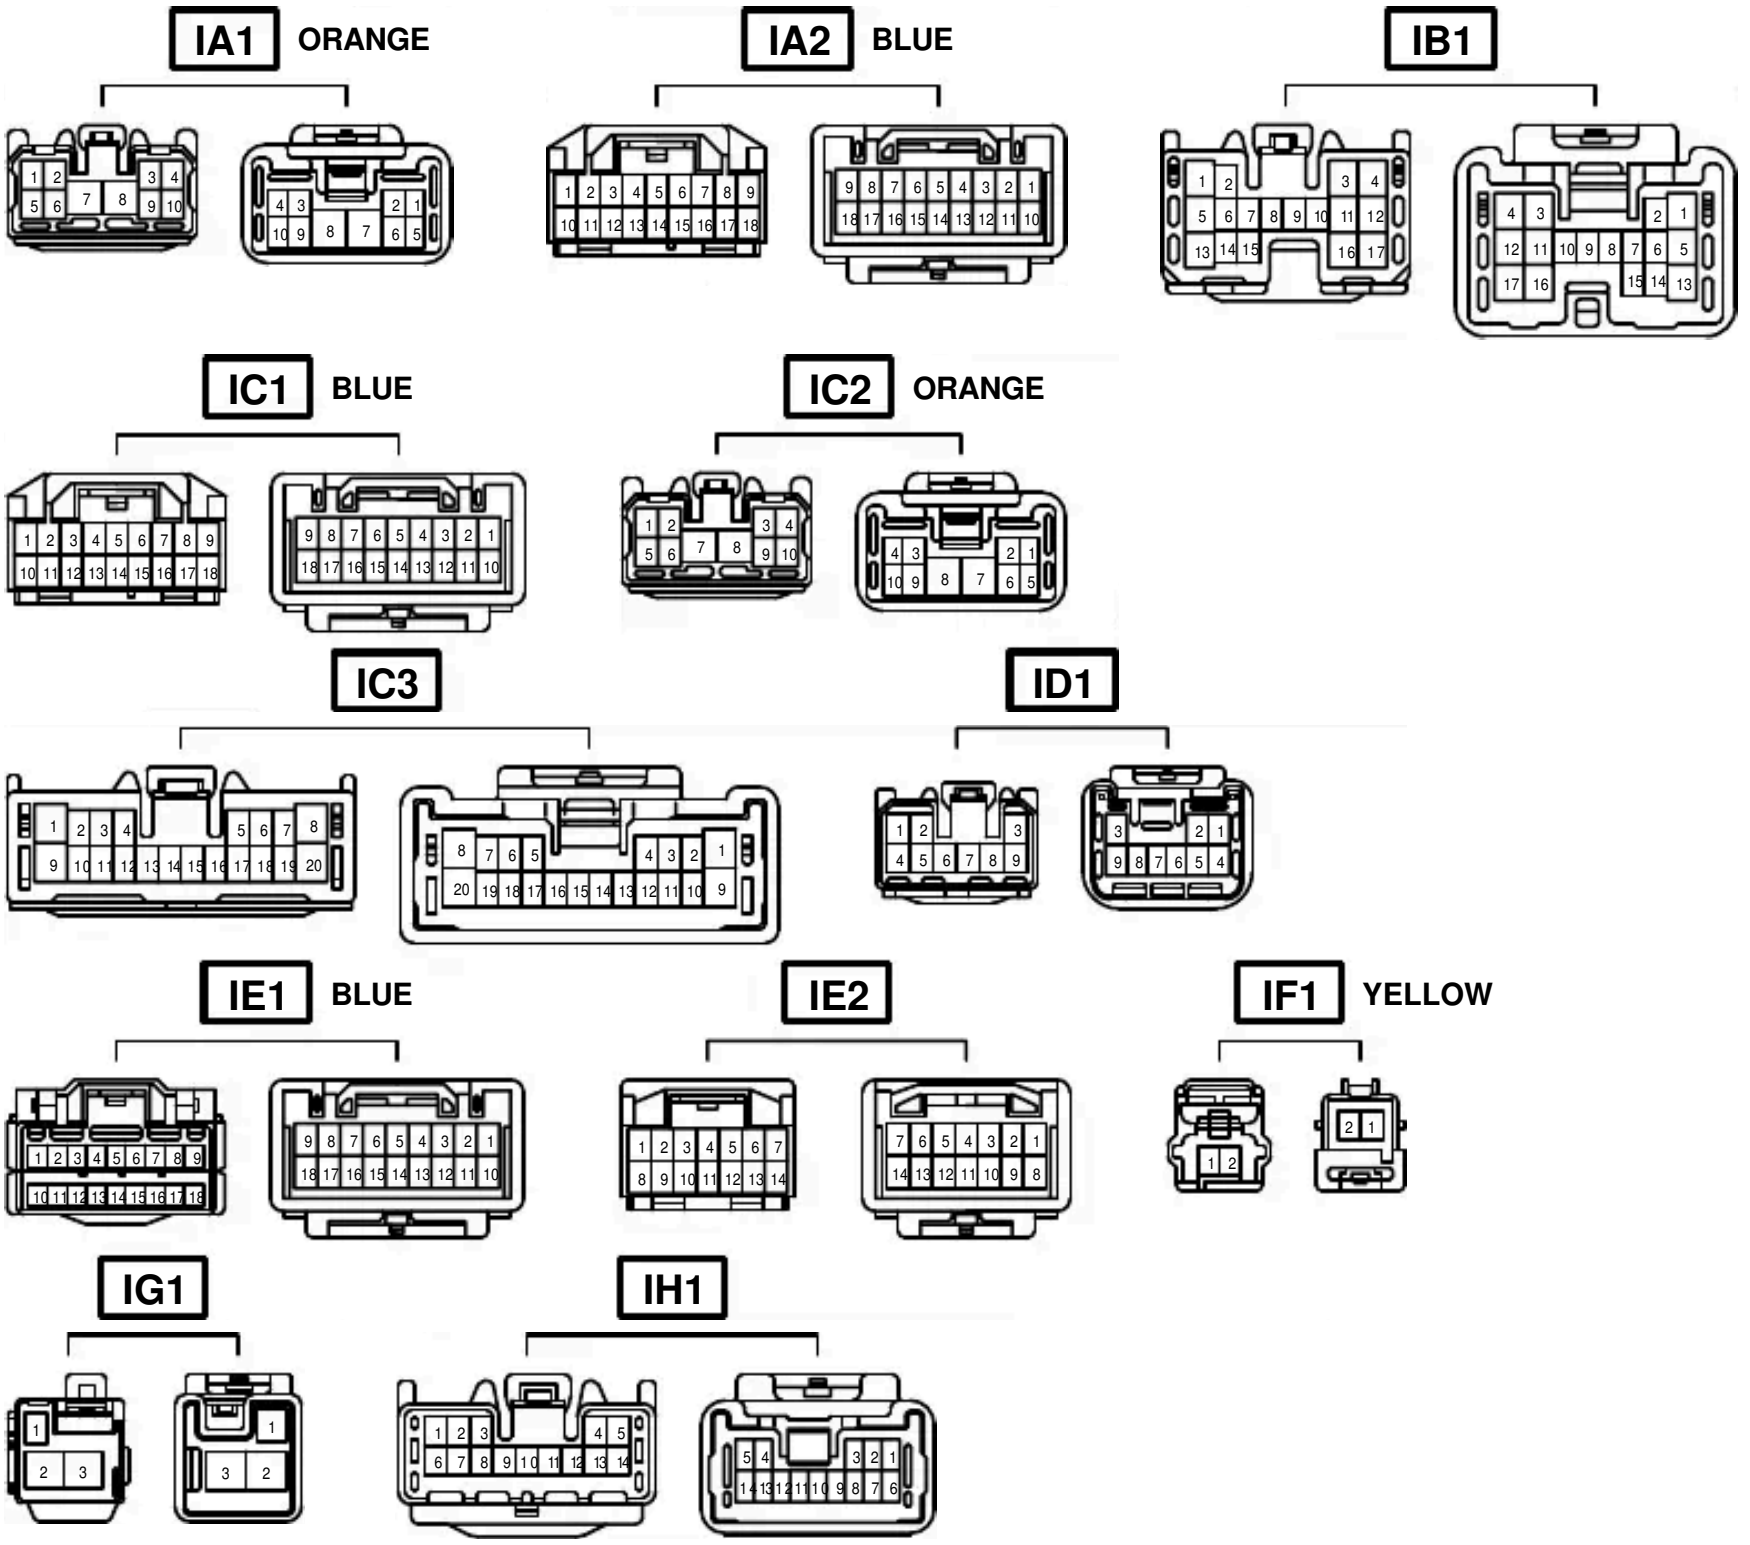

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Engine Room Main Wire and Cowl Wire (Near the Driver Side R/B)
IA2	
IB1	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC1	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IC2	
IC3	
ID1	Cowl Wire and Cowl Wire (Left Side of the Instrument Panel Reinforcement)
IE1	Instrument Panel Wire and Cowl Wire (Left Side of the Steering Column)
IE2	
IF1	Cowl Wire and Cowl Wire (Right Side of the Steering Column)
IG1	Cowl Wire and A/C Sub No.1 Wire (Left Side of the Blower Unit)
IH1	Instrument Panel Wire and A/C Sub No.2 Wire (Left Side of the Blower Unit)

▭ : Location of Connector Joining Wire Harness and Wire Harness

[LHD]

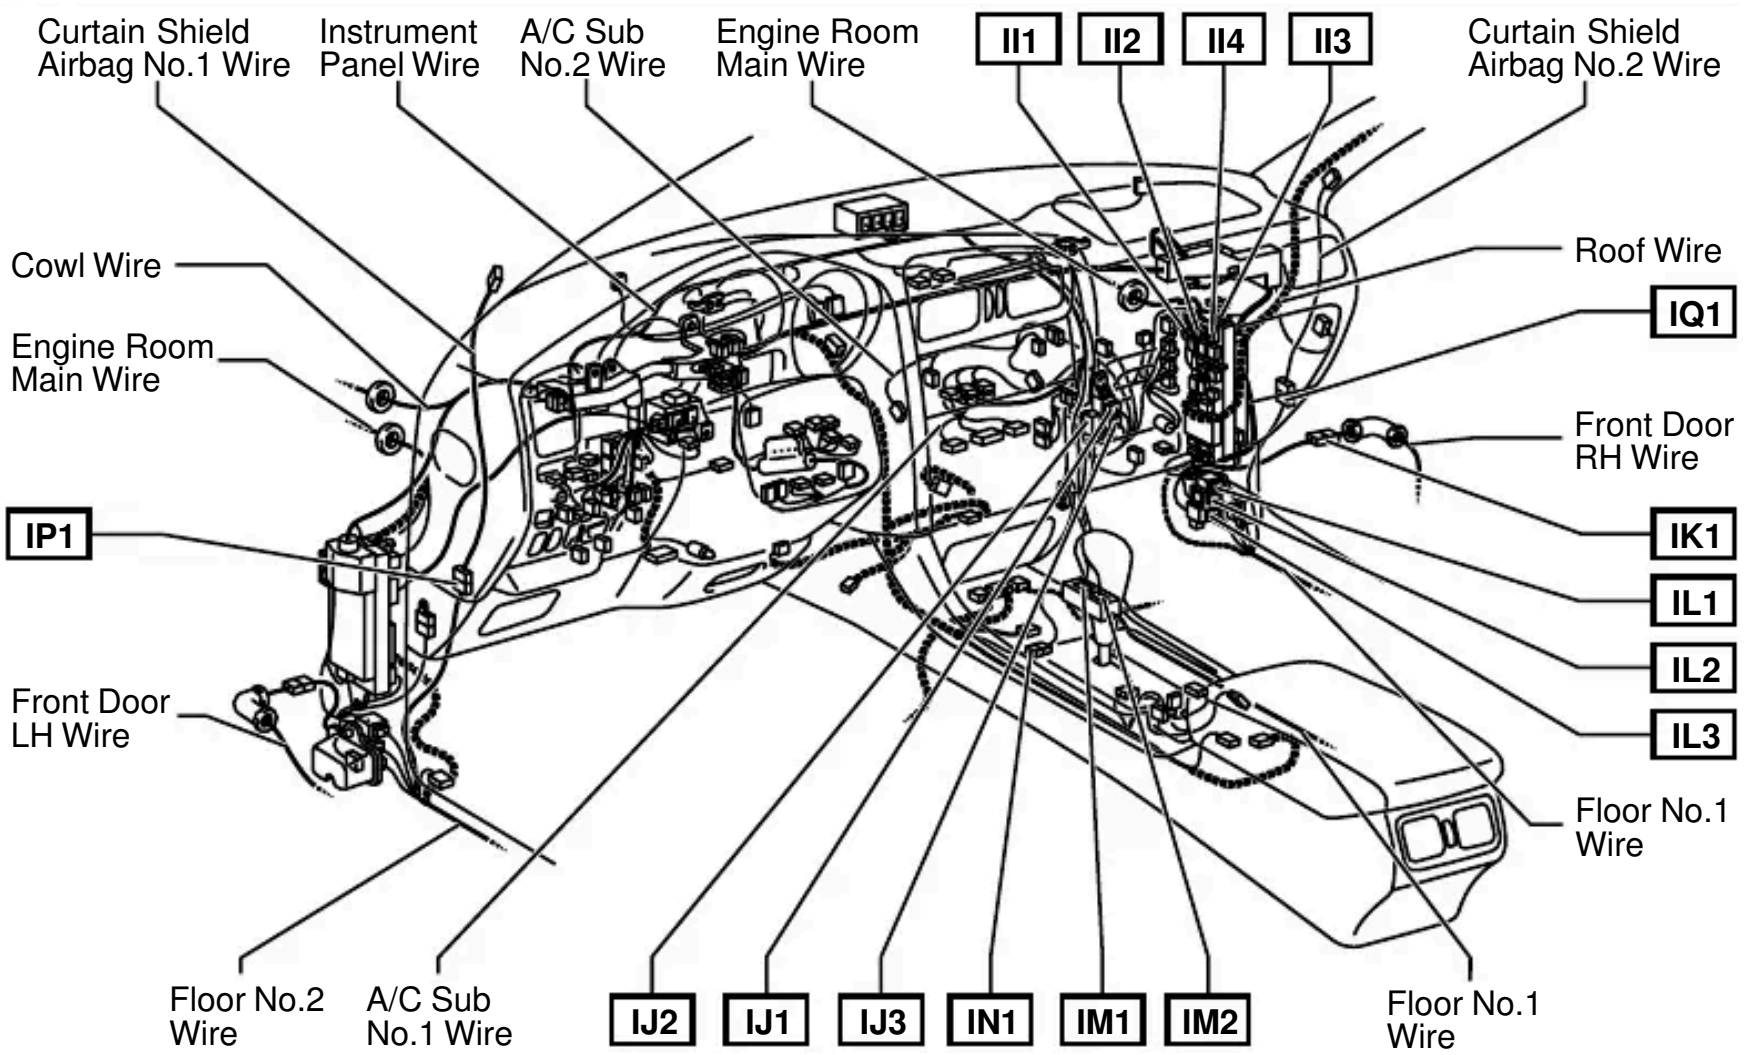

Connector Joining Wire Harness and Wire Harness

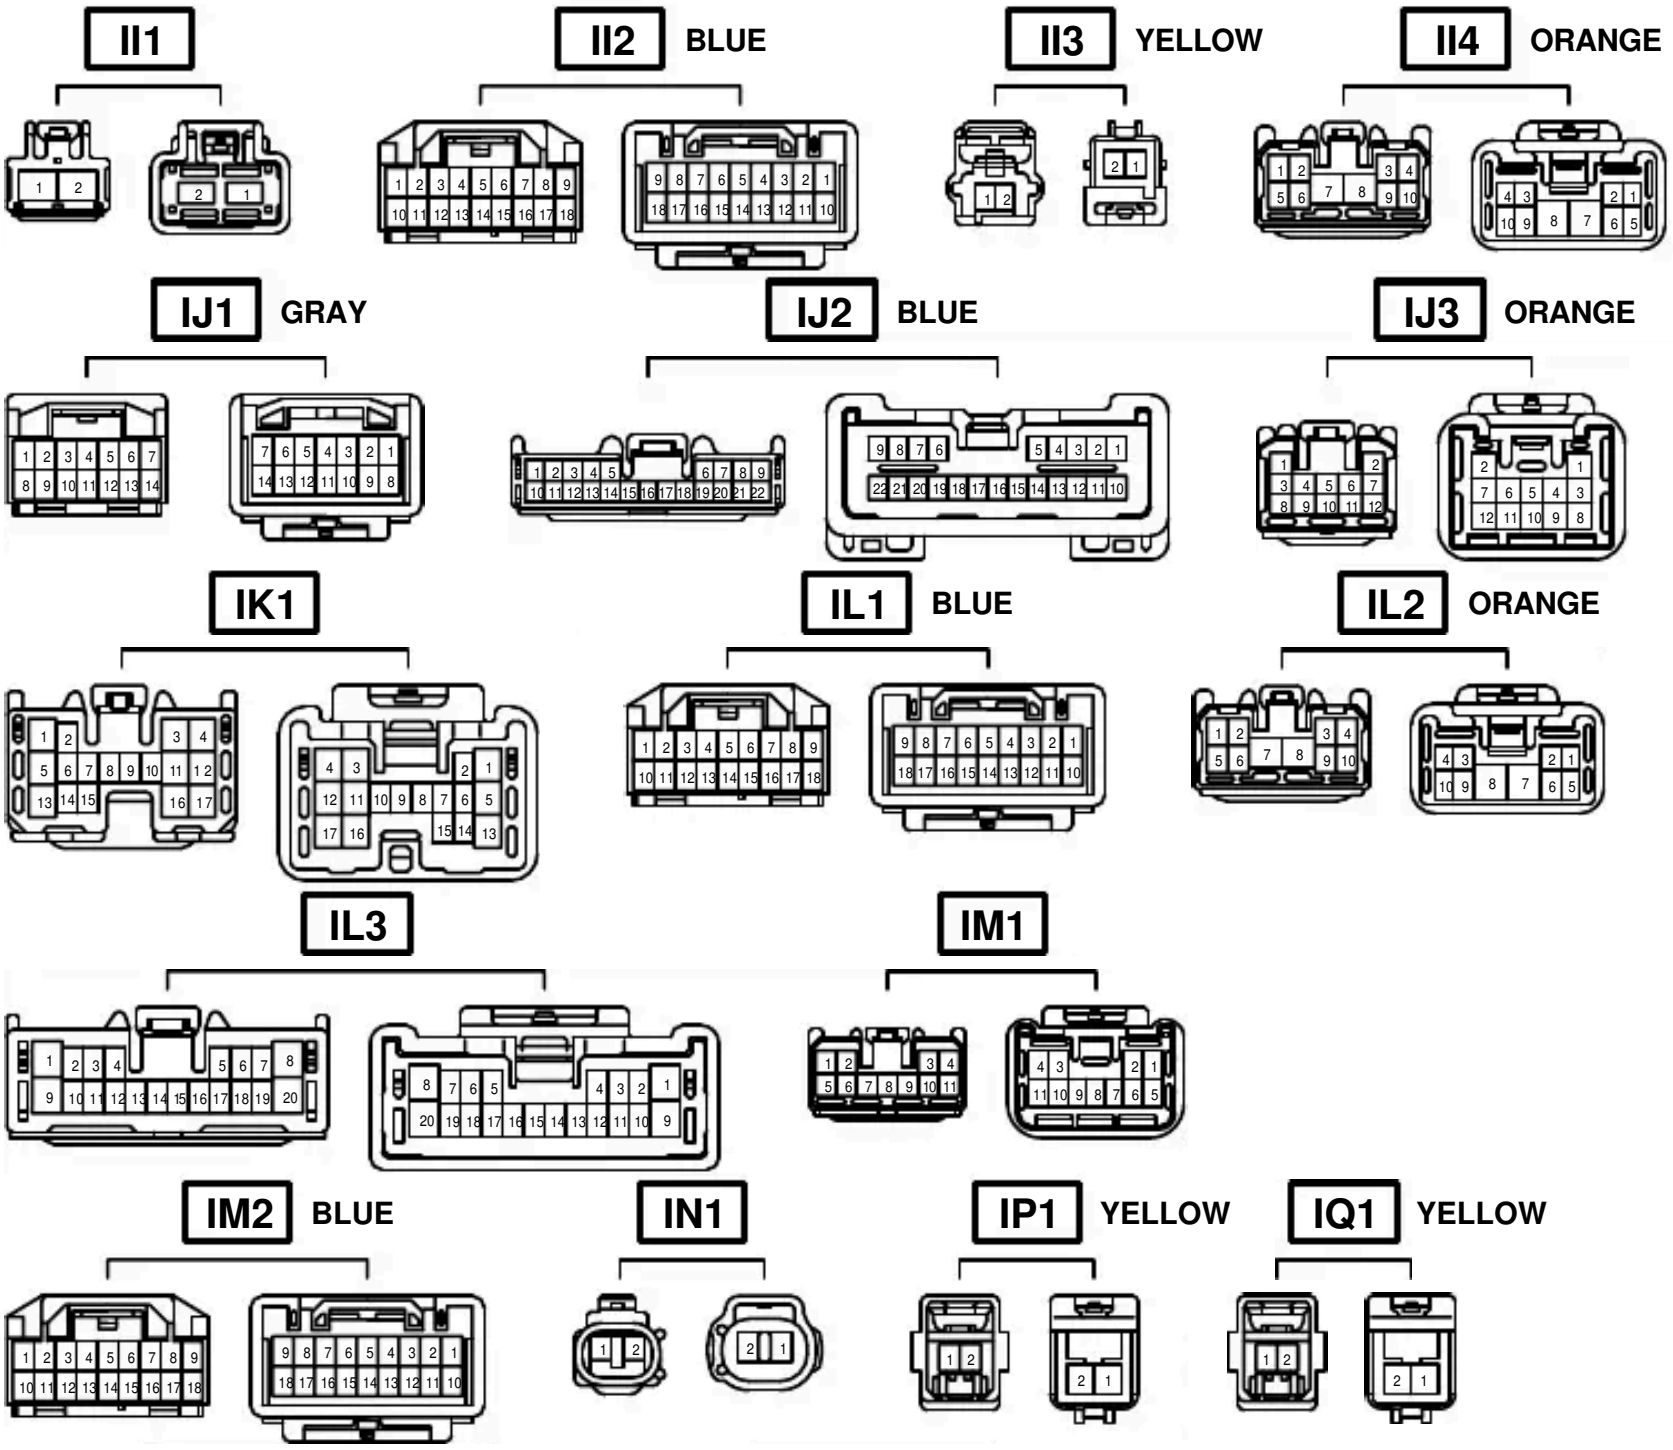

Code	Joining Wire Harness and Wire Harness (Connector Location)
II1	Engine Room Main Wire and Cowl Wire (Near the Passenger Side J/B)
II2	
II3	
II4	
IJ1	Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit)
IJ2	
IJ3	
IK1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IL1	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IL2	
IL3	
IM1	Instrument Panel Wire and Floor No.1 Wire (Front RH Side of the Shift Lever)
IM2	
IN1	Floor No.1 Wire and Cowl Wire (Front LH Side of the Shift Lever)
IP1	Floor No.2 Wire and Curtain Shield Airbag No.1 Wire (Left Side of Instrument Panel)
IQ1	Floor No.1 Wire and Curtain Shield Airbag No.2 Wire (Right Side of Instrument Panel)

E ELECTRICAL WIRING ROUTING

▭ : Location of Connector Joining Wire Harness and Wire Harness
▽ : Location of Ground Points

[LHD]

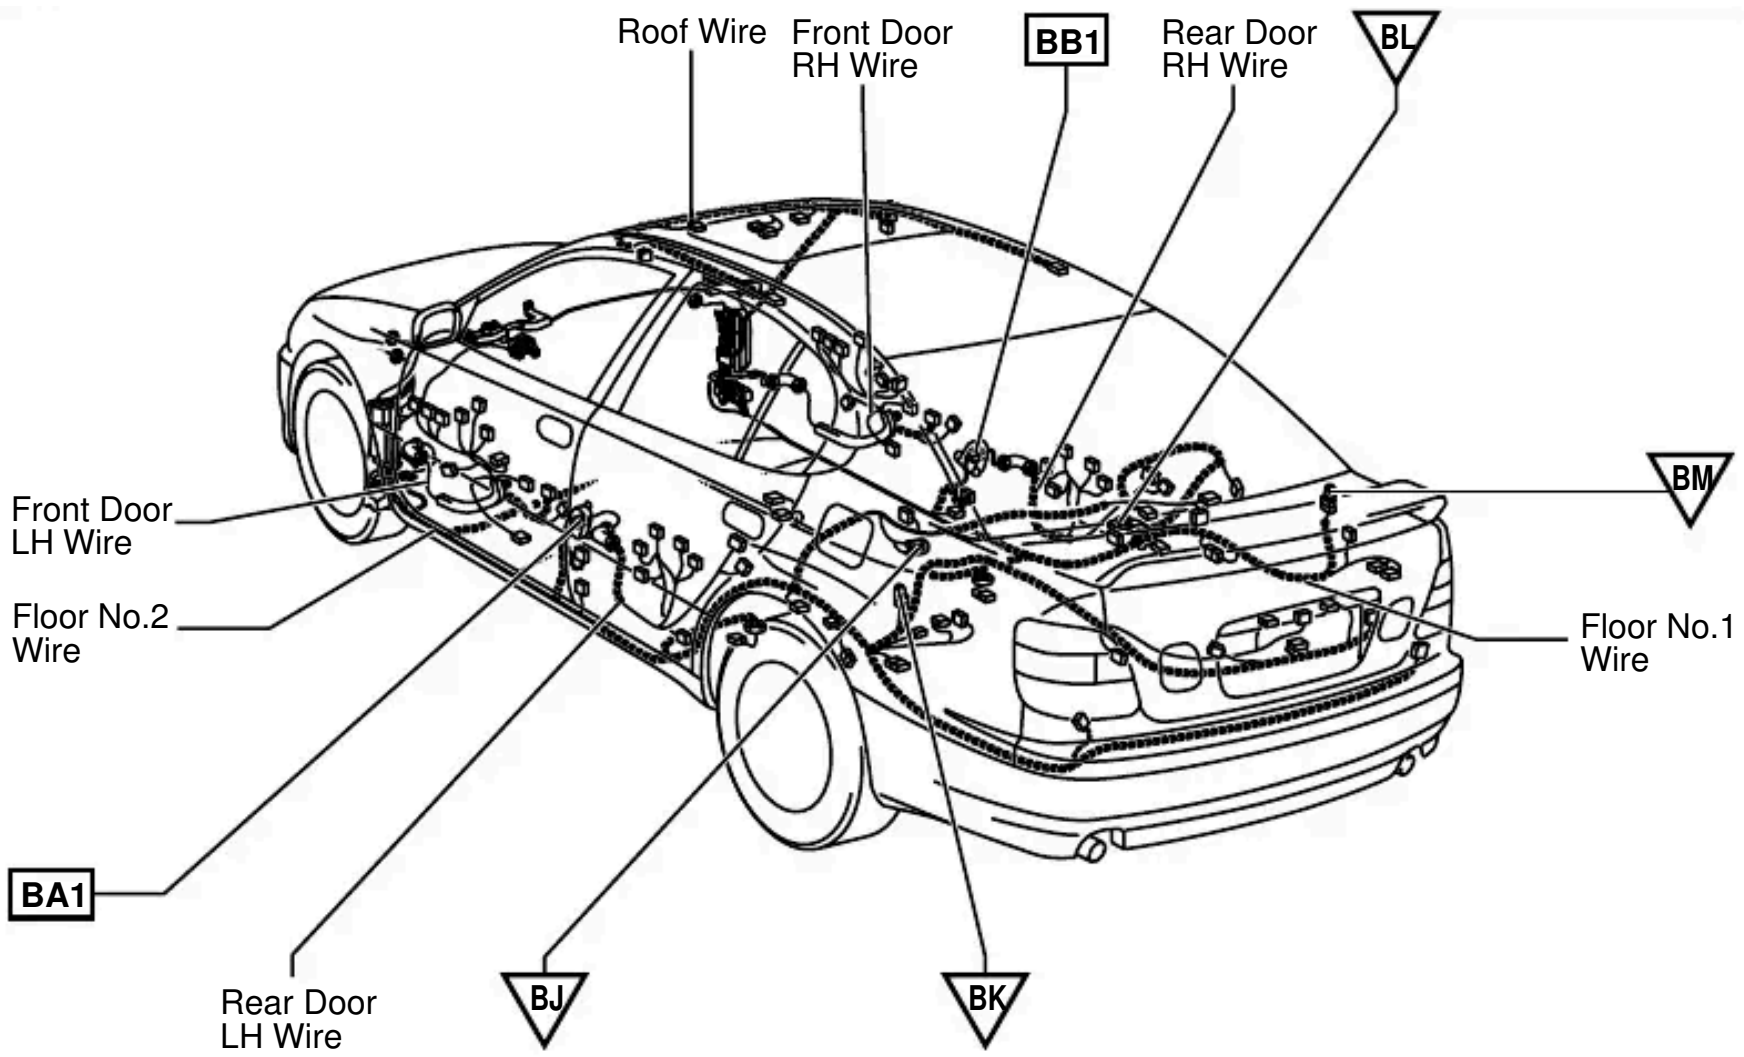

Connector Joining Wire Harness and Wire Harness

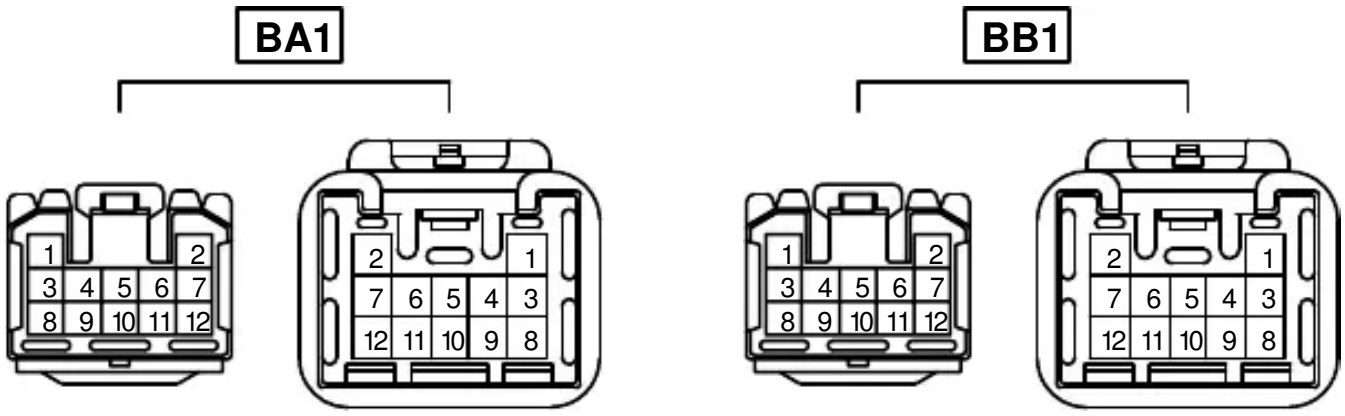

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Floor No.2 Wire (Under the Center Pillar LH)
BB1	Rear Door RH Wire and Floor No.1 Wire (Under the Center Pillar RH)

▭ : Location of Connector Joining Wire Harness and Wire Harness

[LHD]

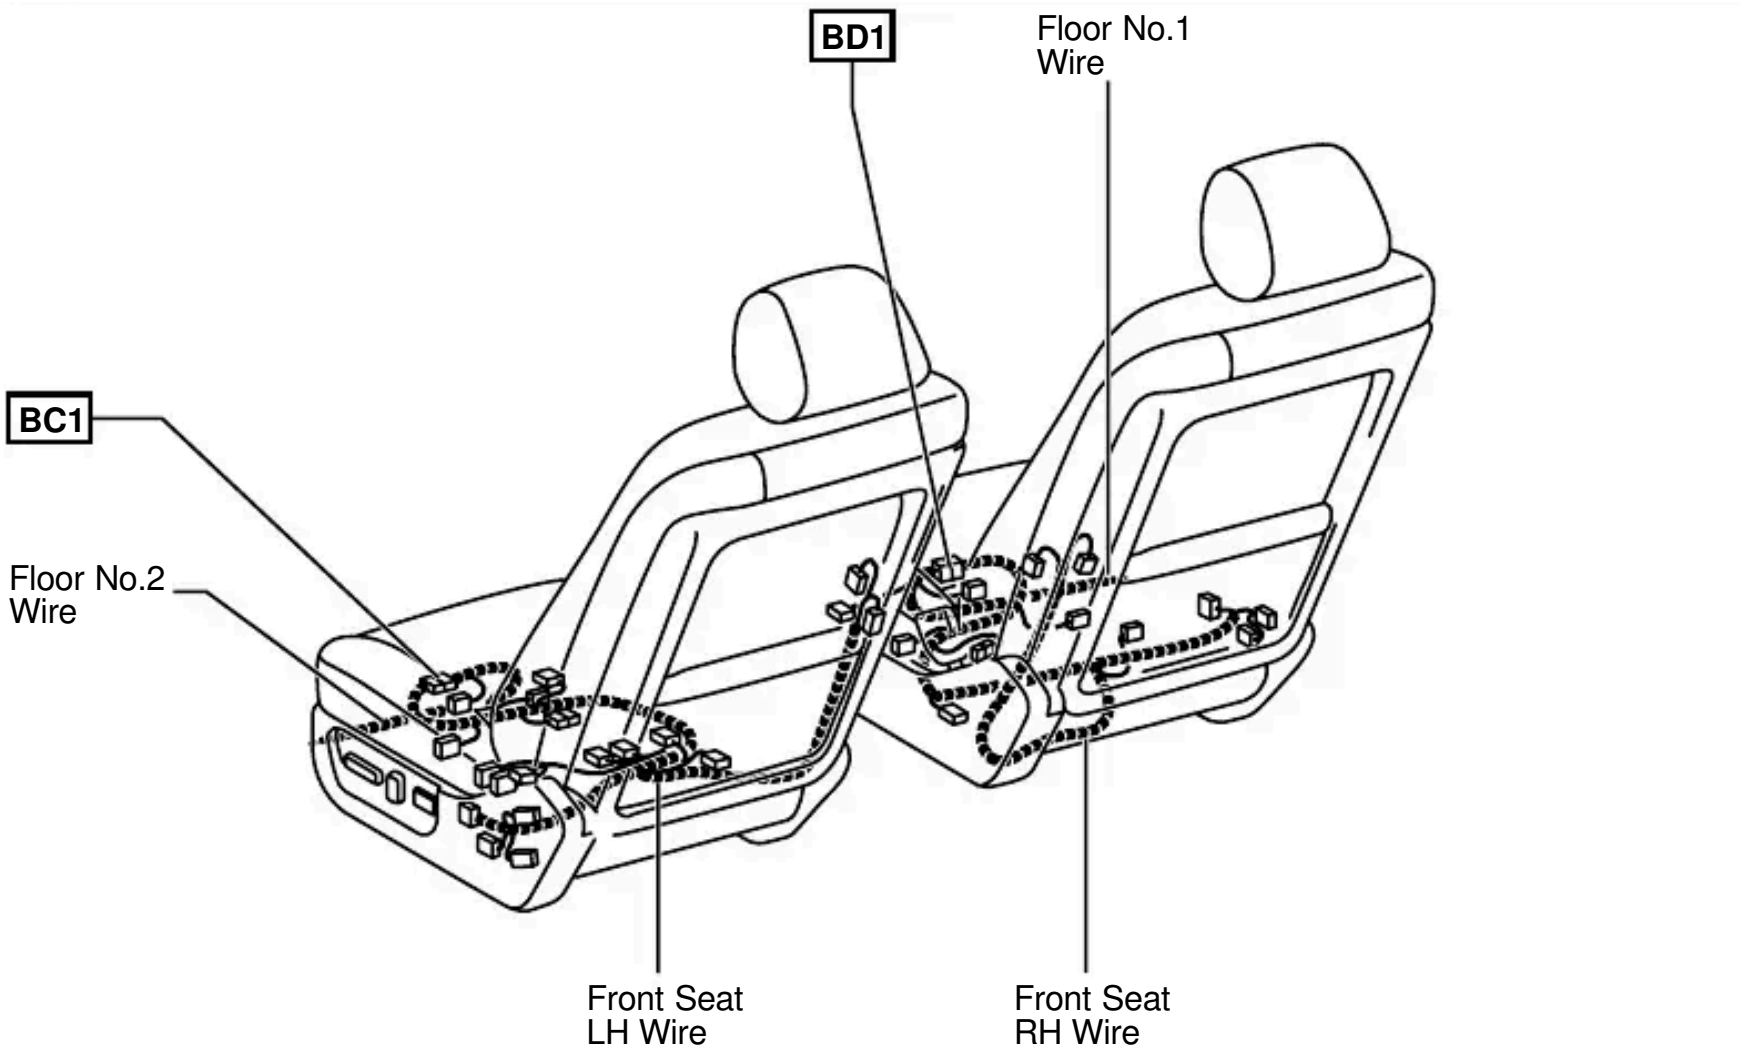

Connector Joining Wire Harness and Wire Harness

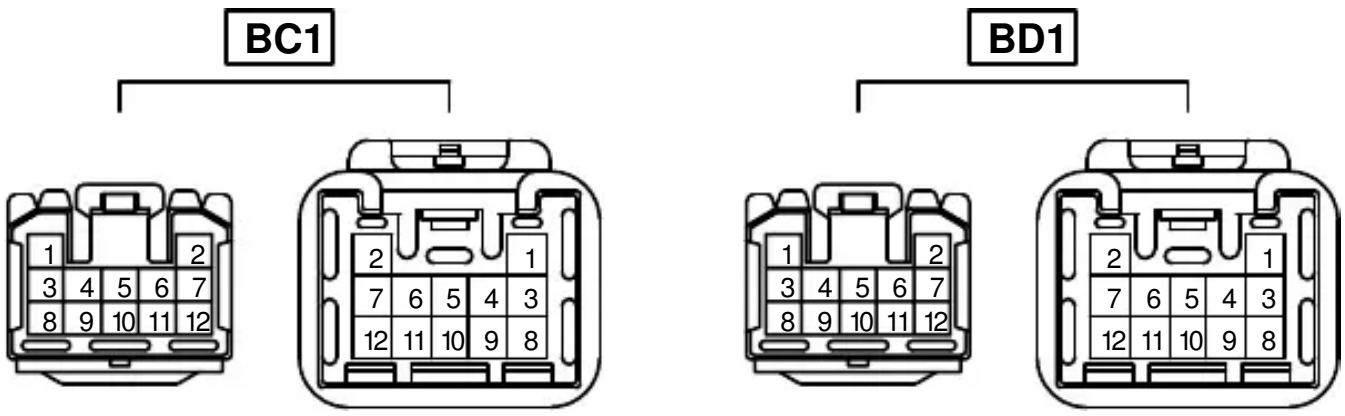

Code	Joining Wire Harness and Wire Harness (Connector Location)
BC1	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BD1	Floor No.1 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

E ELECTRICAL WIRING ROUTING

▭ : Location of Connector Joining Wire Harness and Wire Harness
▽ : Location of Ground Points

[RHD : 3UZ–FE]

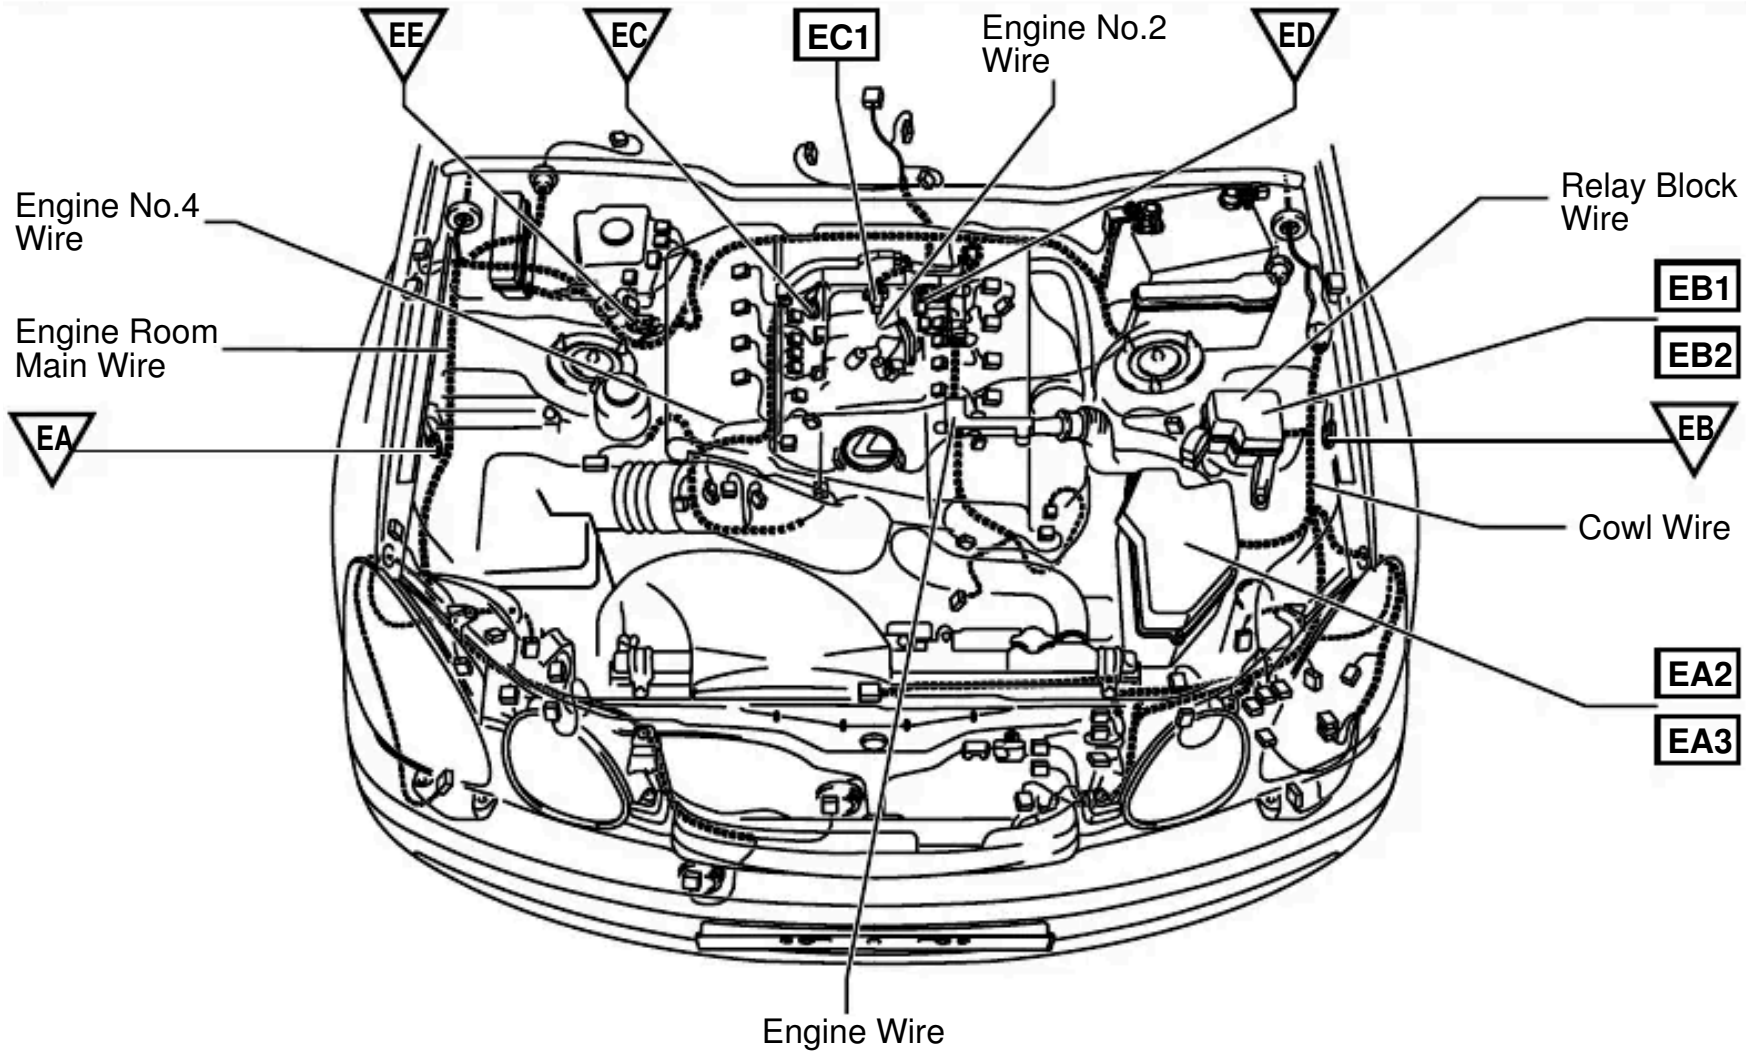

Connector Joining Wire Harness and Wire Harness

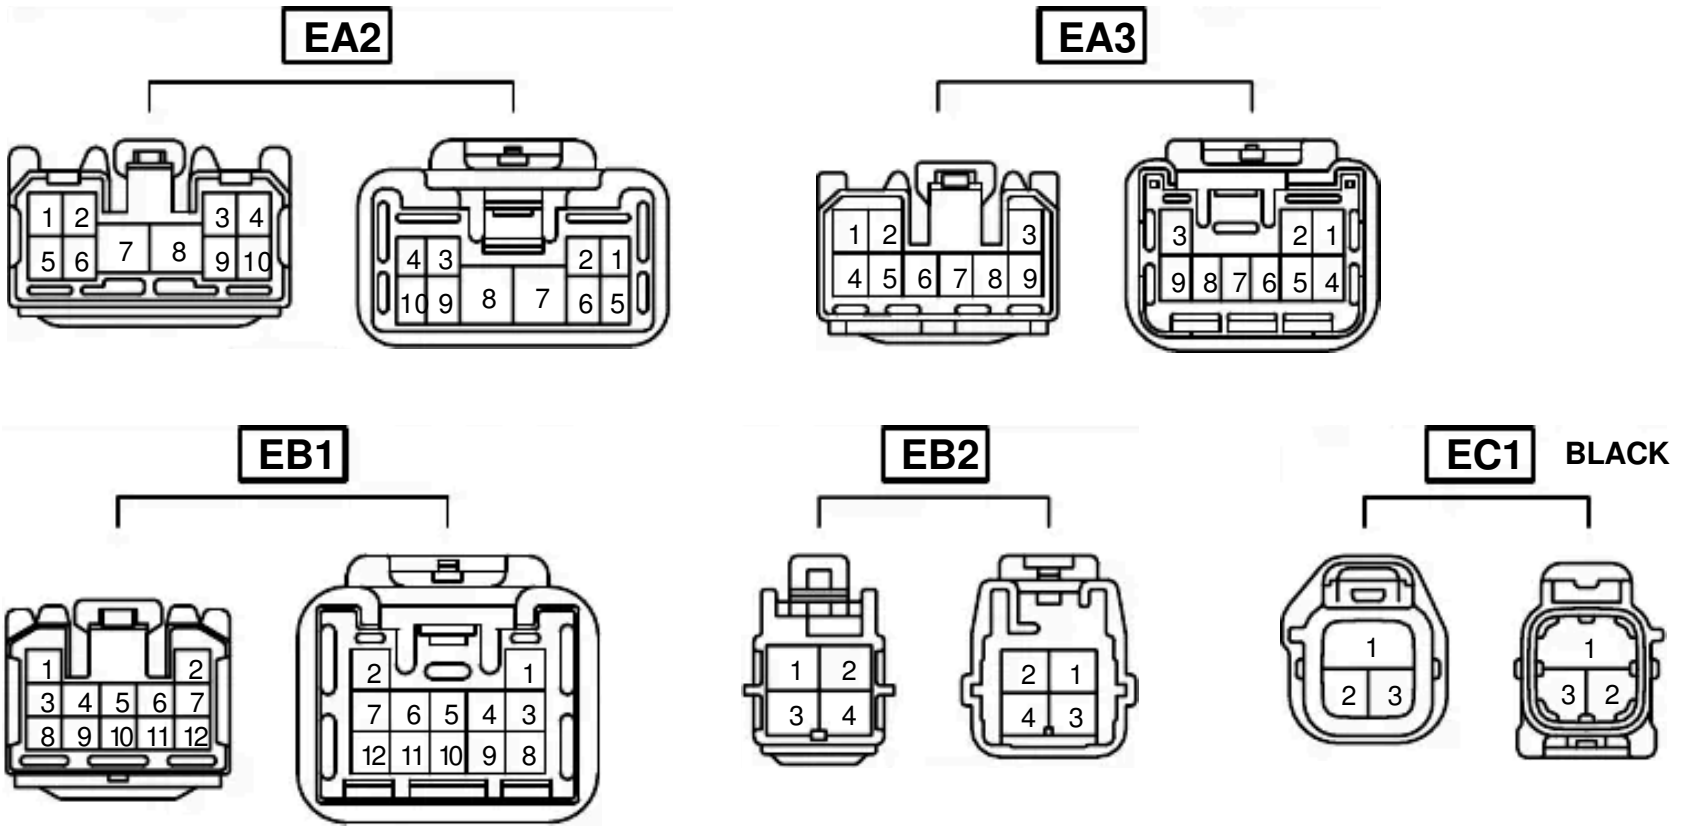

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA2	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA3	
EB1	Cowl Wire and Relay Block Wire (Inside of the Engine Room No.3 R/B)
EB2	
EC1	Engine No.2 Wire and Engine Wire (Near the Starter)

E ELECTRICAL WIRING ROUTING

▭ : Location of Connector Joining Wire Harness and Wire Harness
▽ : Location of Ground Points

[RHD : 2JZ–GE]

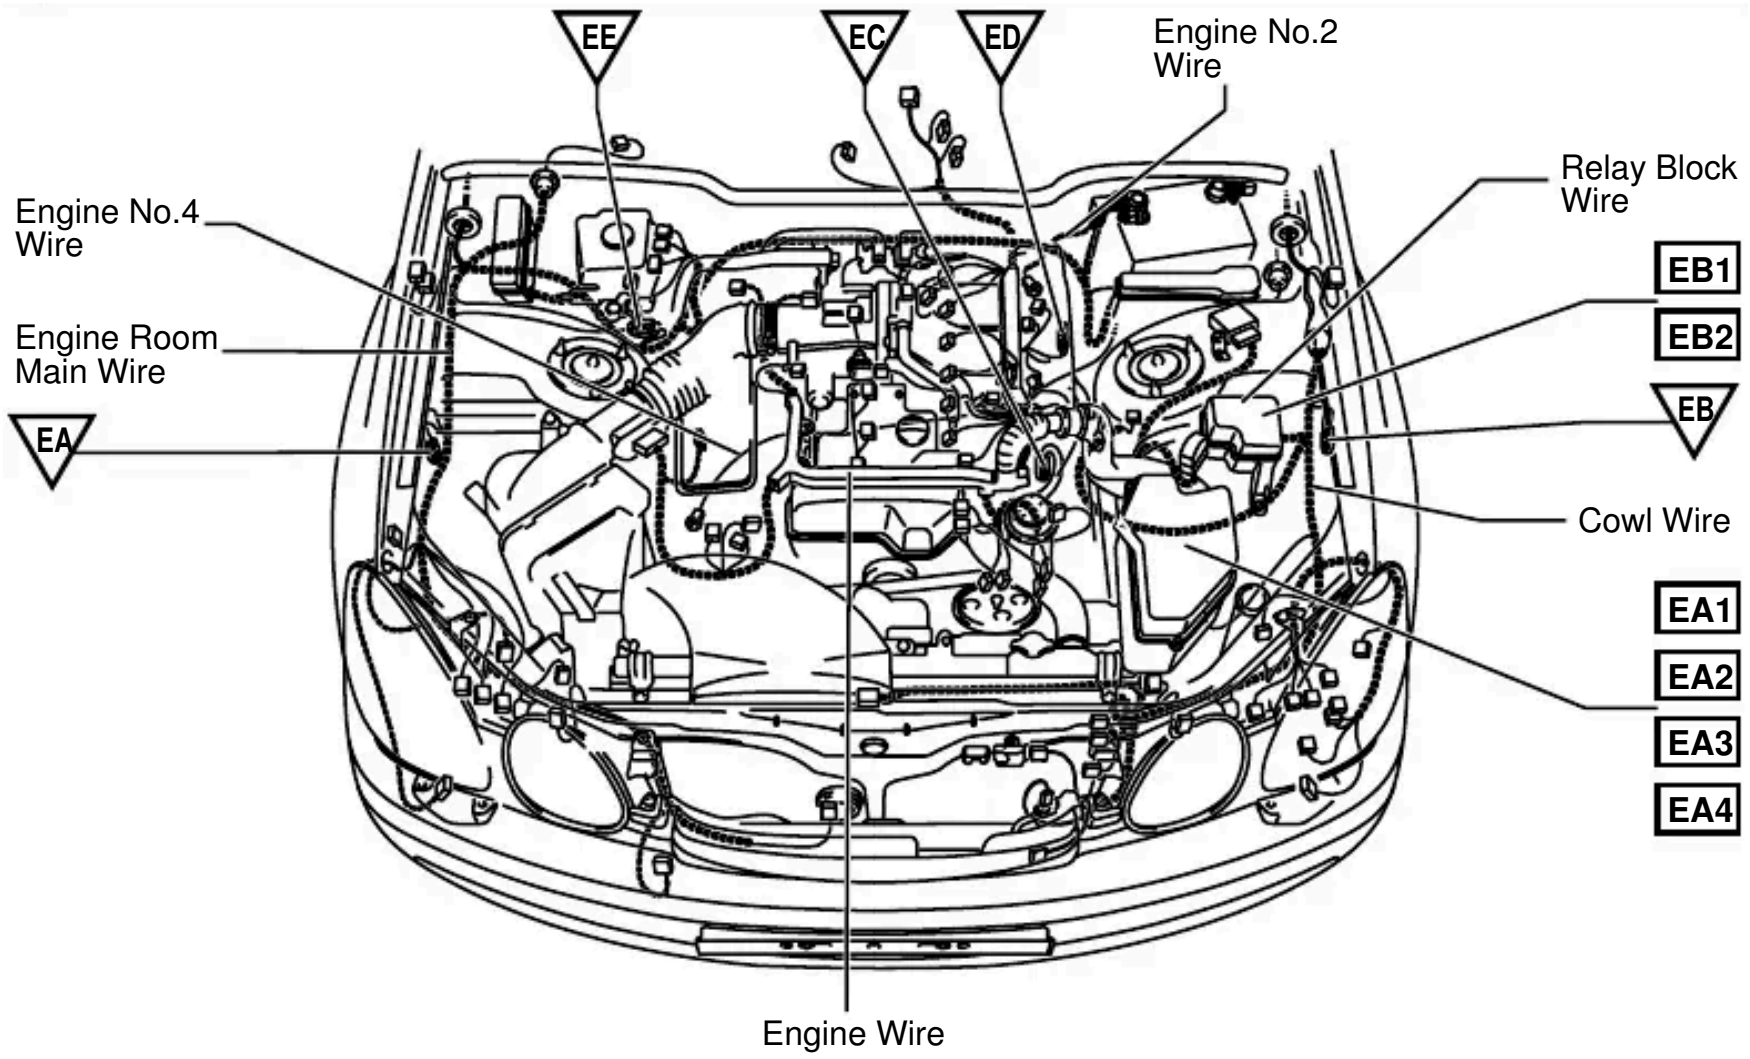

Connector Joining Wire Harness and Wire Harness

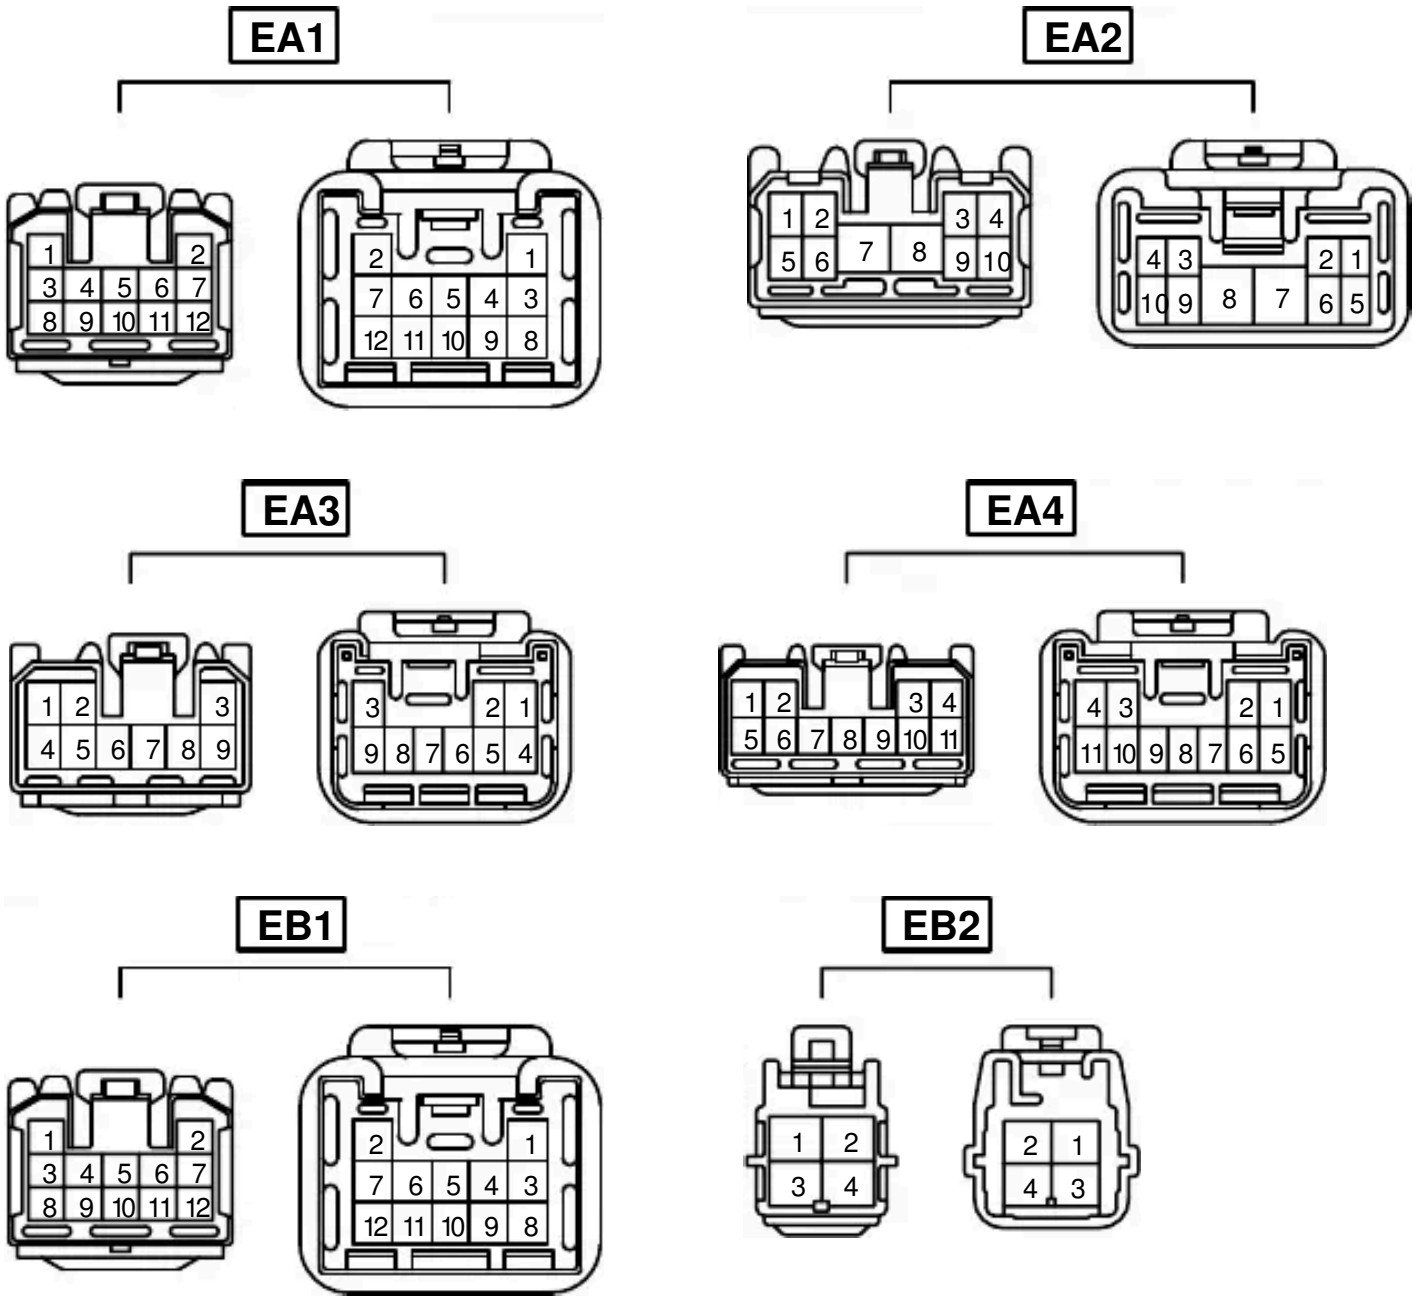

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA2	
EA3	
EA4	
EB1	Cowl Wire and Relay Block Wire (Inside of the Engine Room No.3 R/B)
EB2	

E ELECTRICAL WIRING ROUTING

▭ : Location of Connector Joining Wire Harness and Wire Harness
▽ : Location of Ground Points

[RHD]

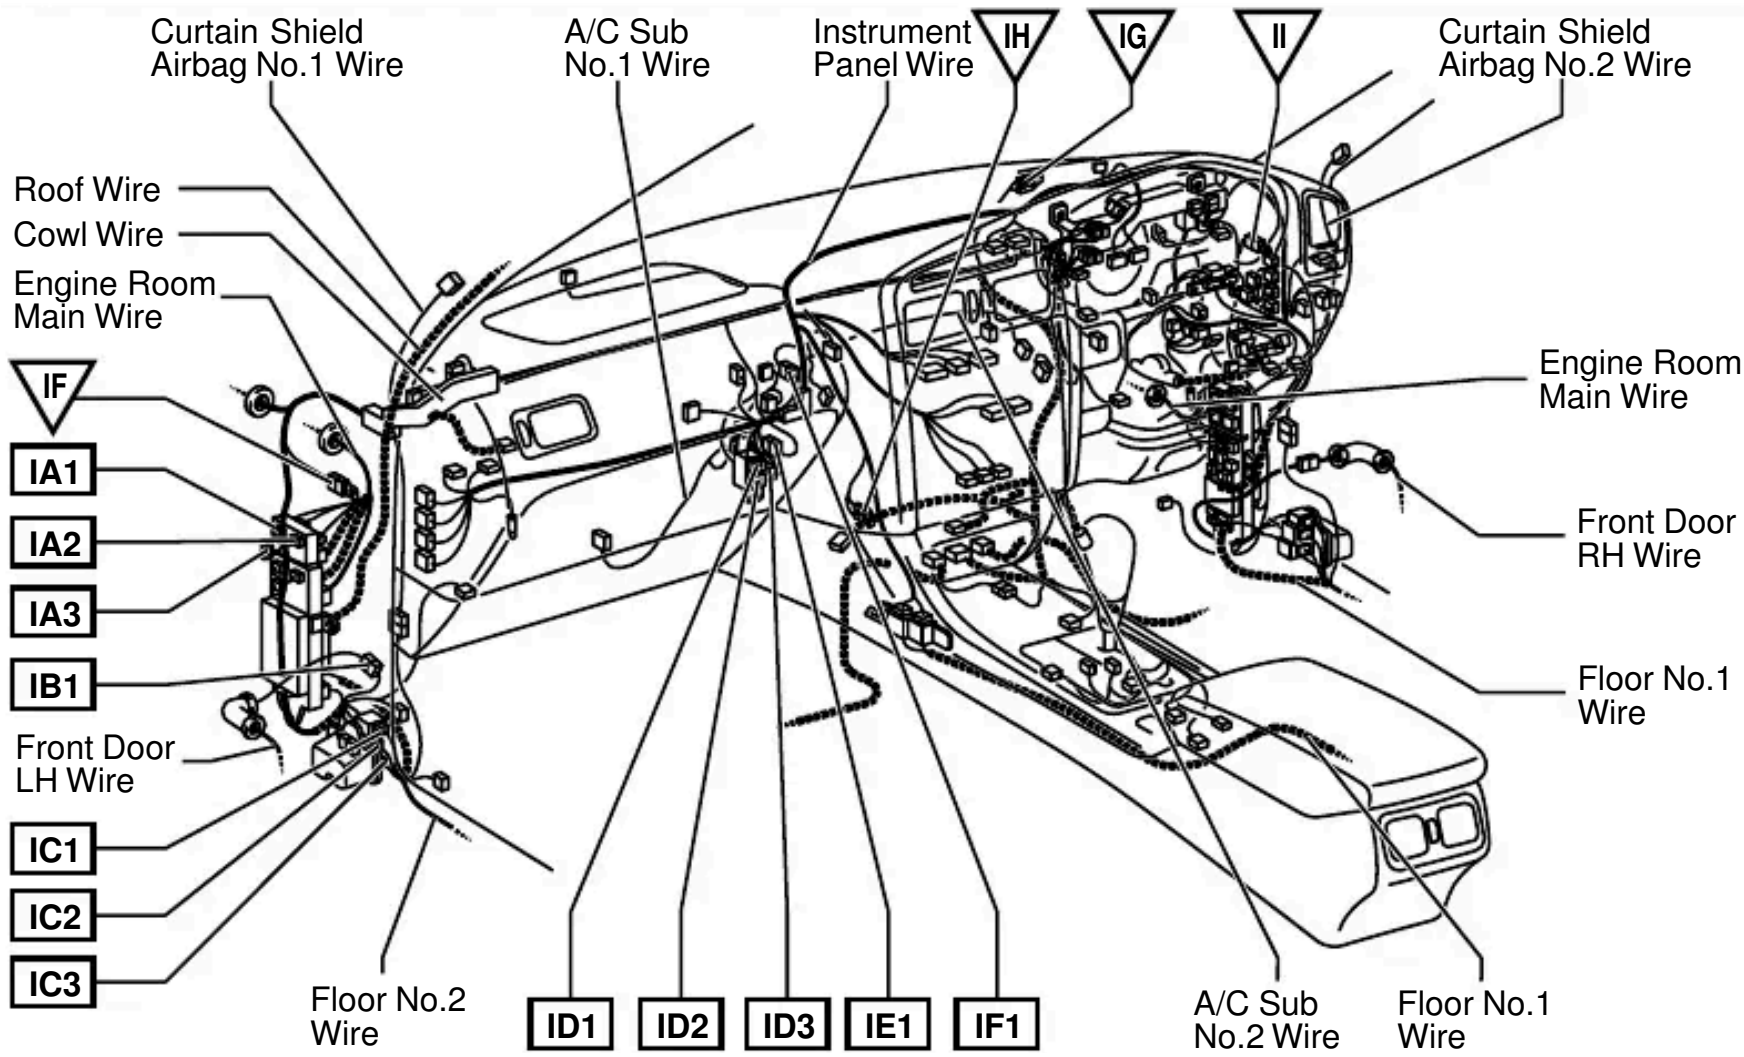

Connector Joining Wire Harness and Wire Harness

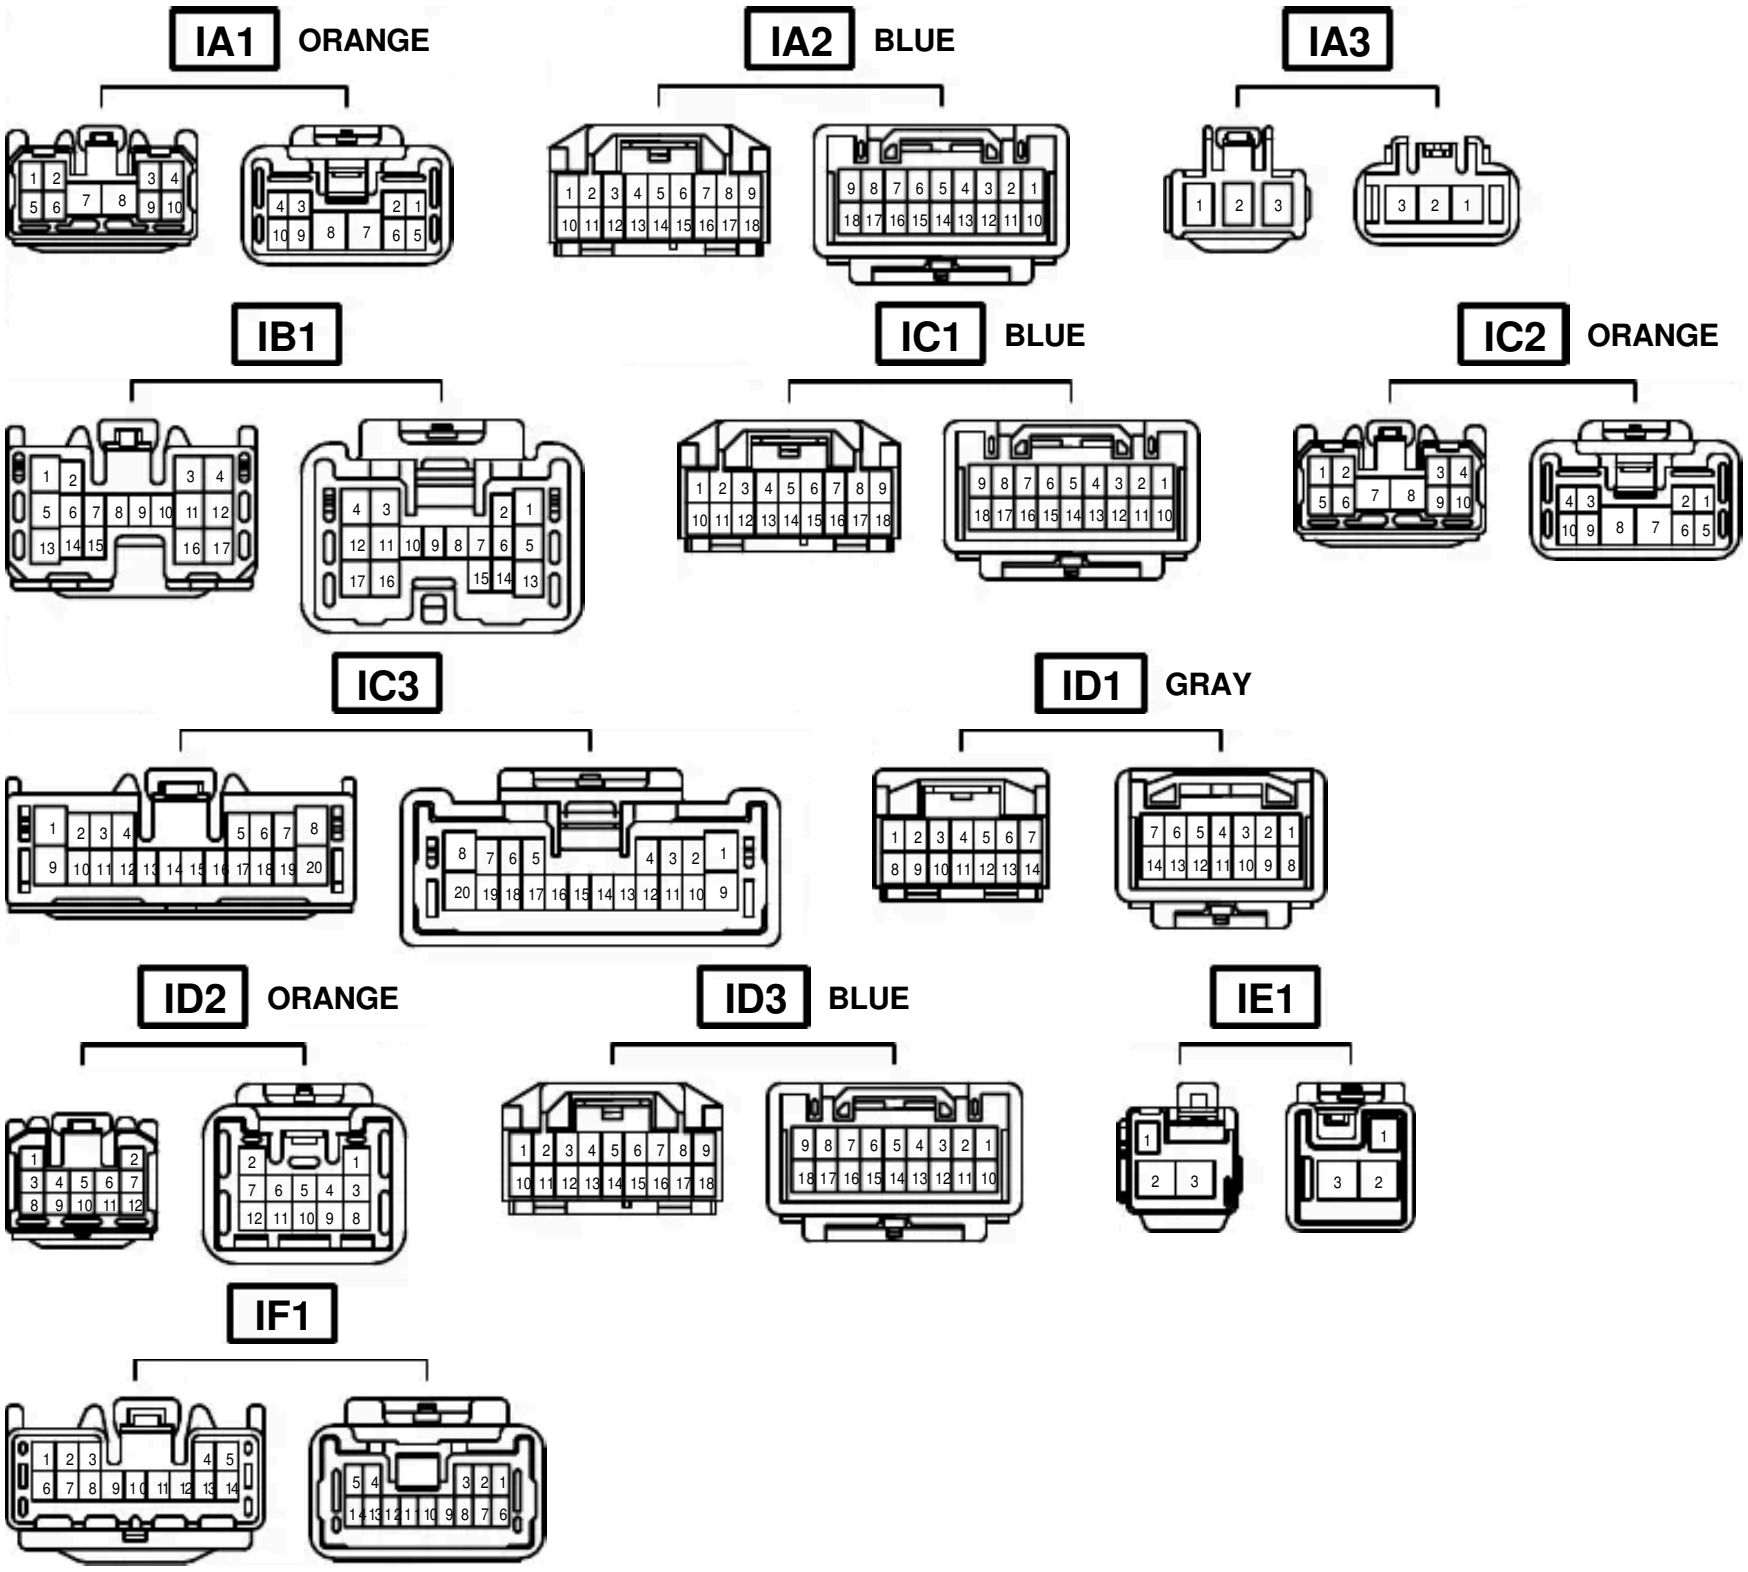

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IA2	
IA3	
IB1	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC1	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IC2	
IC3	
ID1	Instrument Panel Wire and Cowl Wire (Right Side of the Blower Unit)
ID2	
ID3	
IE1	Cowl Wire and A/C Sub No.1 Wire (Right Side of the Blower Unit)
IF1	Instrument Panel Wire and A/C Sub No.2 Wire (Right Side of the Blower Unit)

▭ : Location of Connector Joining Wire Harness and Wire Harness

[RHD]

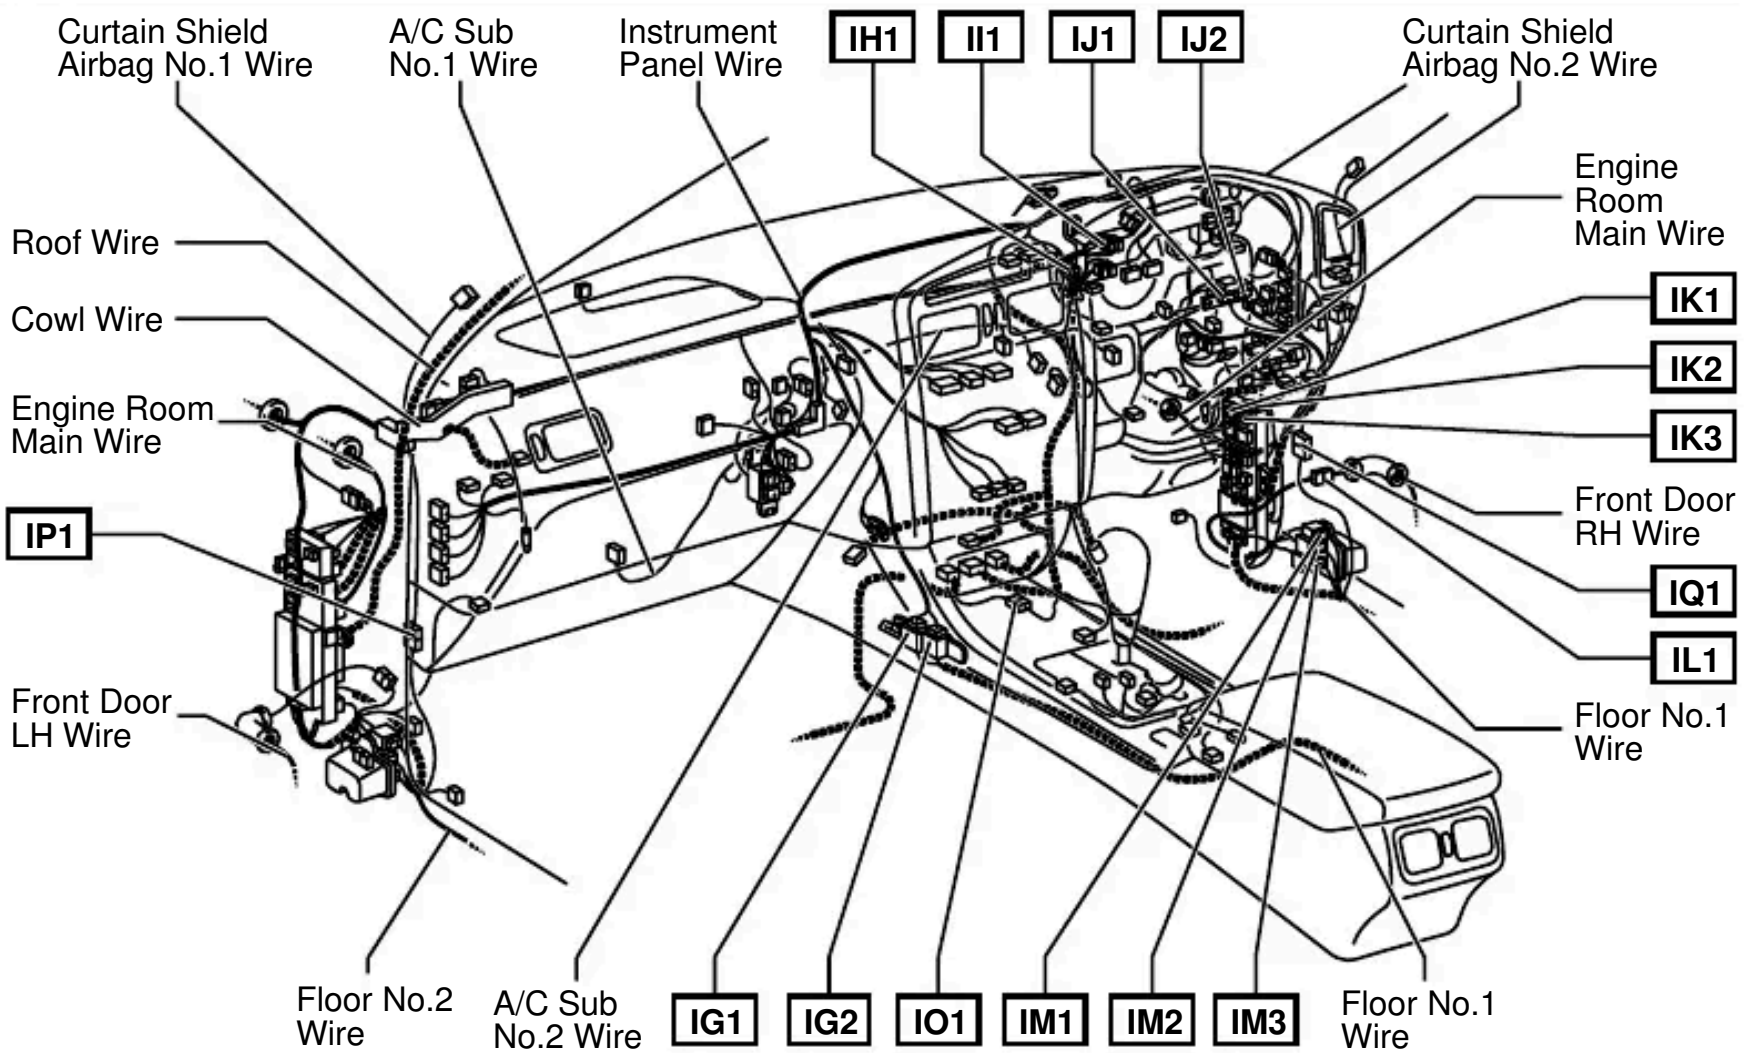

Connector Joining Wire Harness and Wire Harness

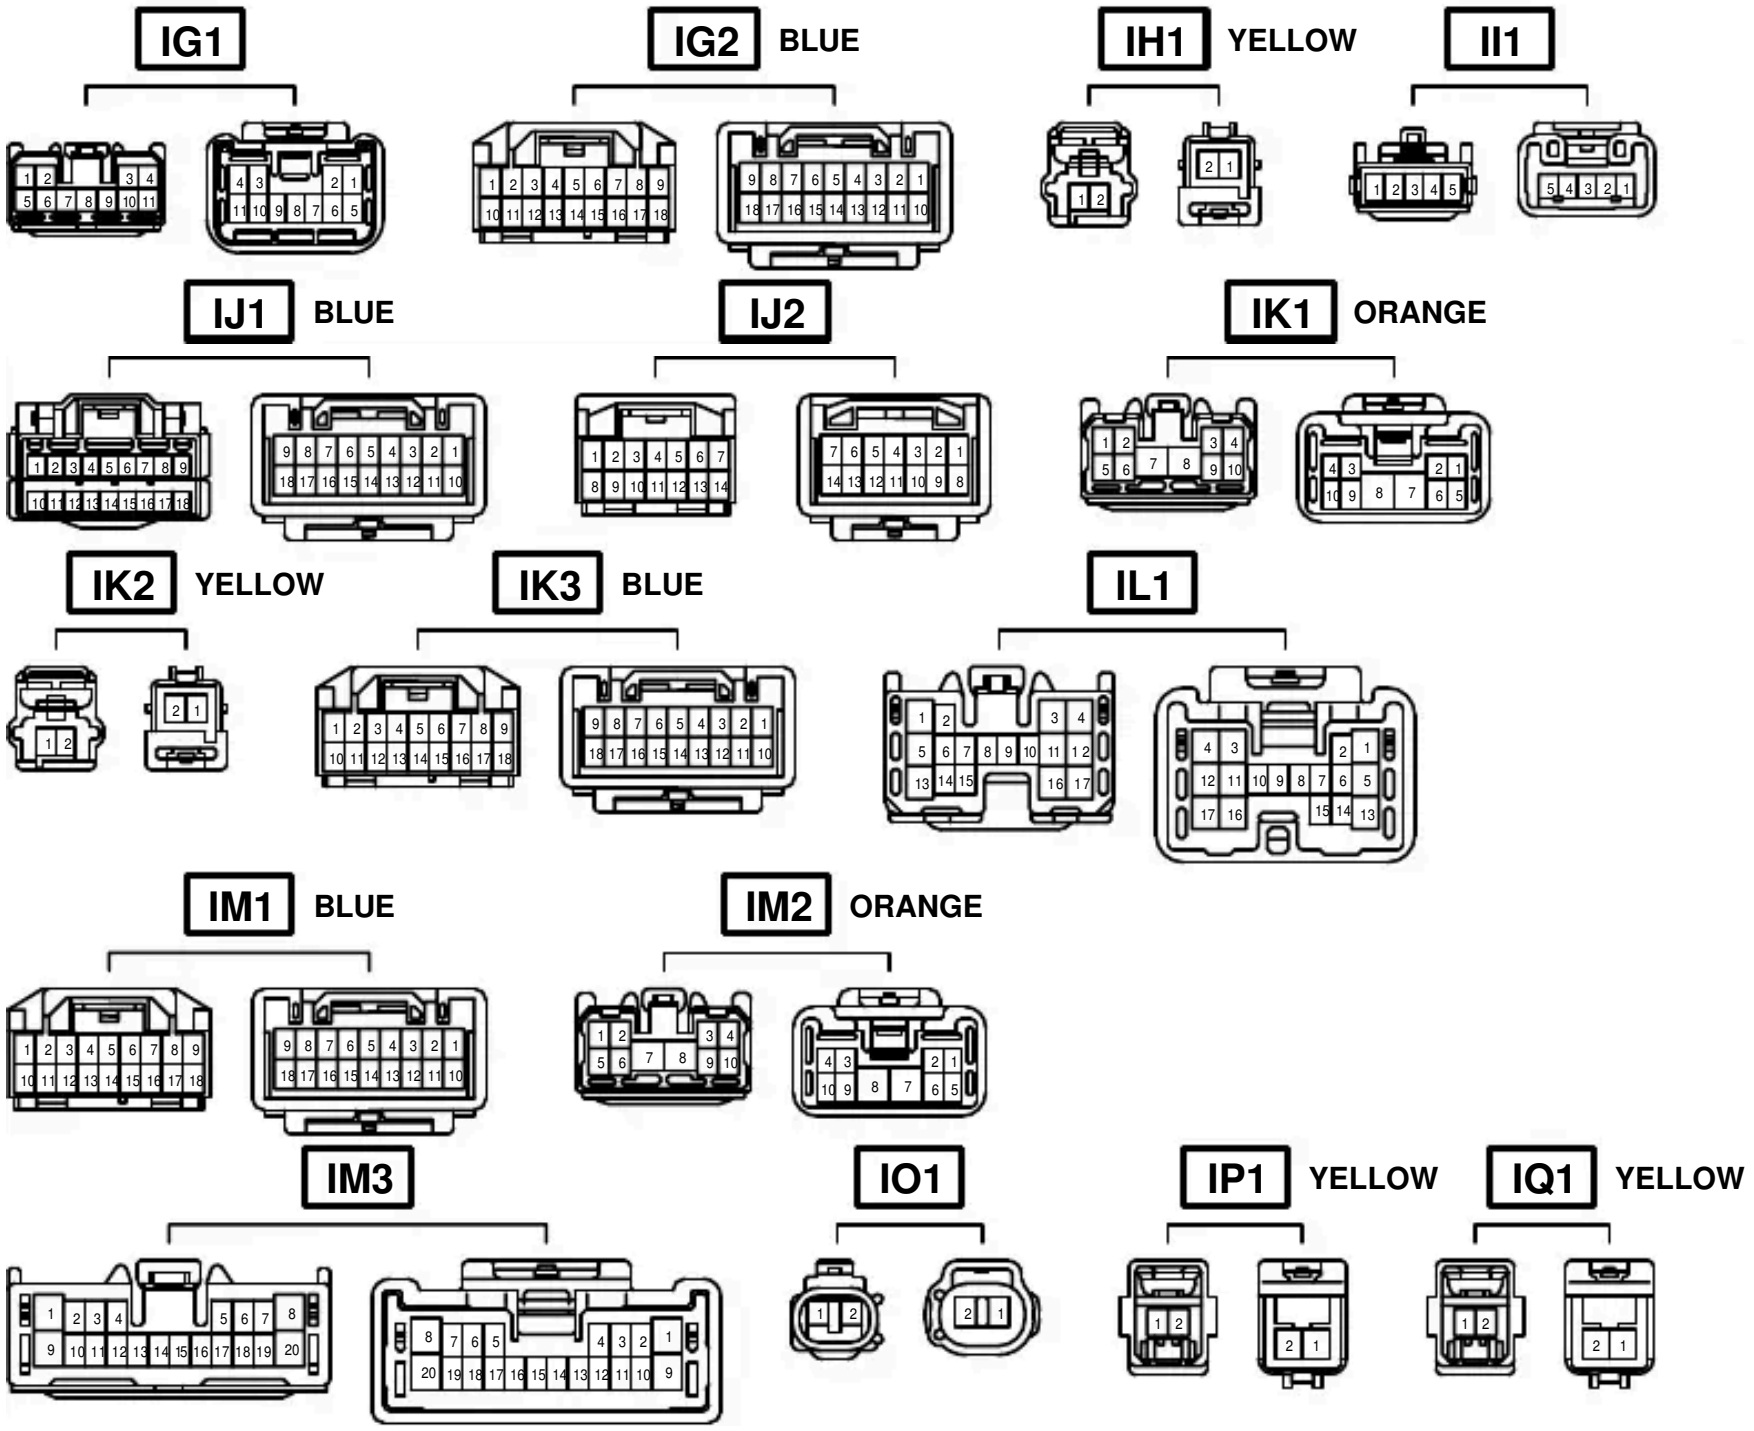

Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Instrument Panel Wire and Floor No.1 Wire (Front LH Side of the Shift Lever)
IG2	
IH1	Cowl Wire and Cowl Wire (Left Side of the Steering Column)
II1	
IJ1	Instrument Panel Wire and Cowl Wire (Right Side of the Steering Column)
IJ2	
IK1	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)
IK2	
IK3	
IL1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IM1	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IM2	
IM3	
IO1	Floor No.2 Wire and Cowl Wire (Front RH Side of the Shift Lever)
IP1	Floor No.2 Wire and Curtain Shield Airbag No.1 Wire (Left Side of Instrument Panel)
IQ1	Floor No.1 Wire and Curtain Shield Airbag No.2 Wire (Right Side of Instrument Panel)

E ELECTRICAL WIRING ROUTING

▭ : Location of Connector Joining Wire Harness and Wire Harness
▽ : Location of Ground Points

[RHD]

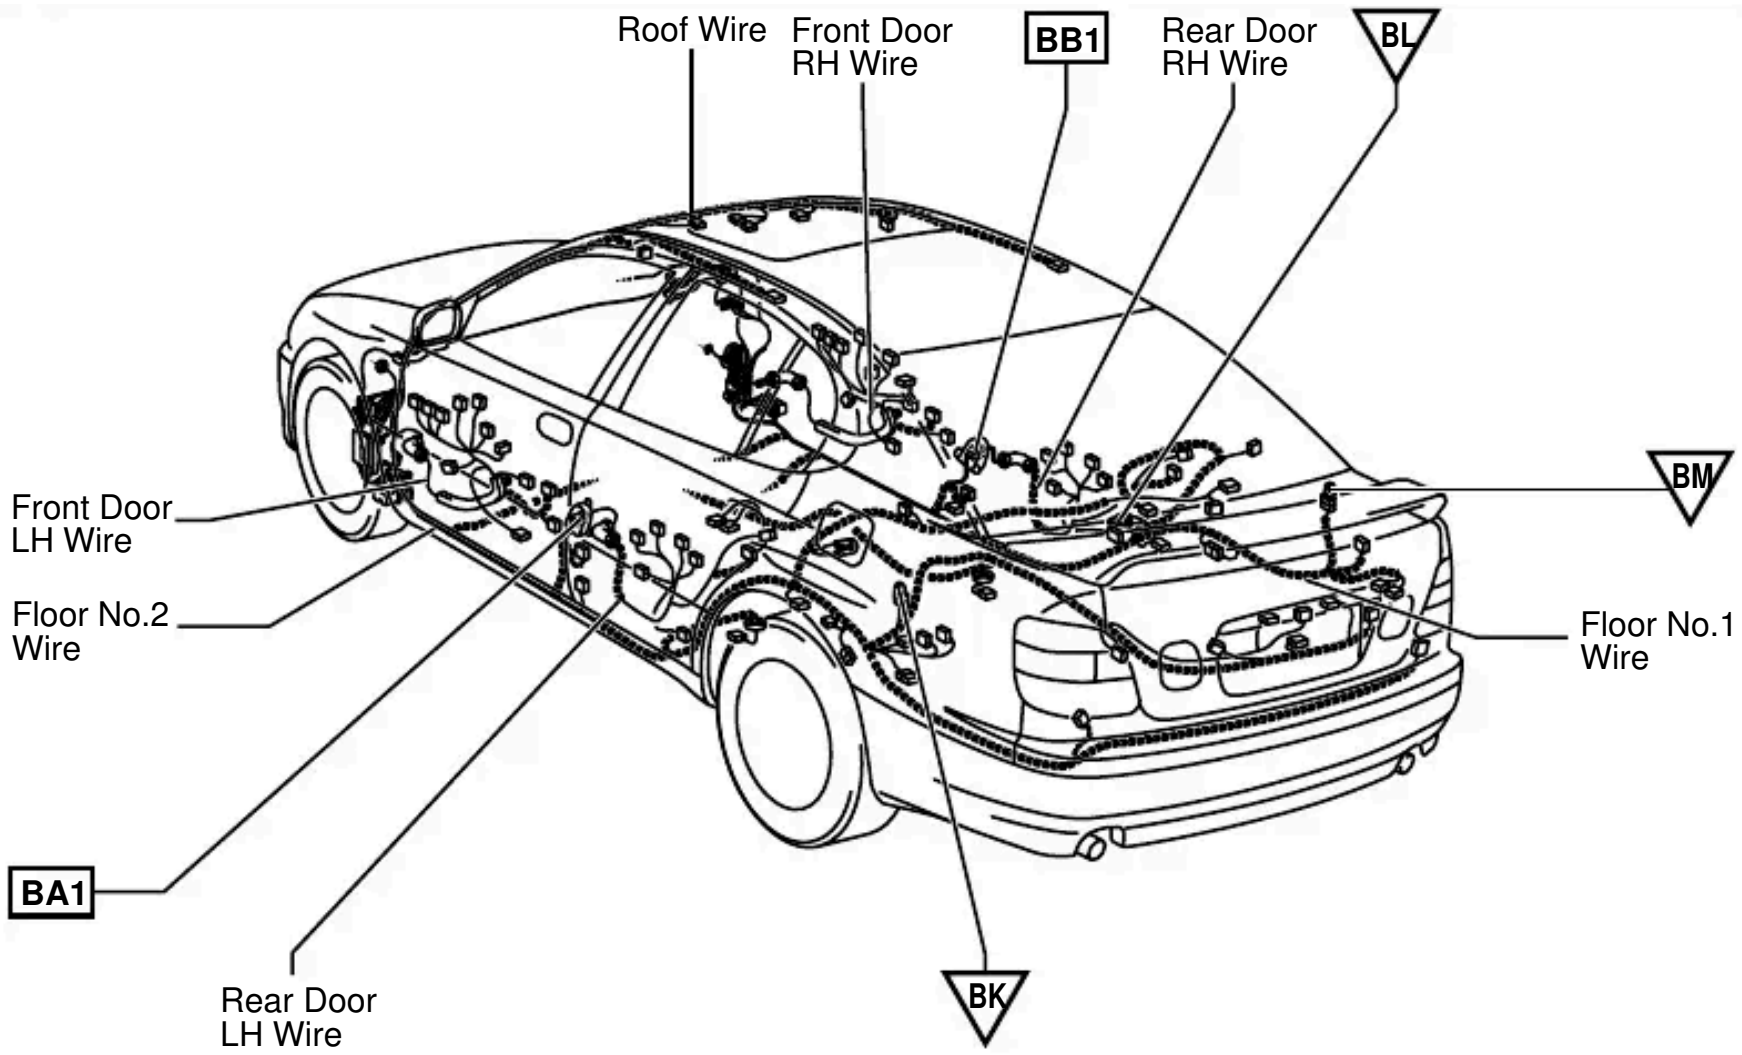

Connector Joining Wire Harness and Wire Harness

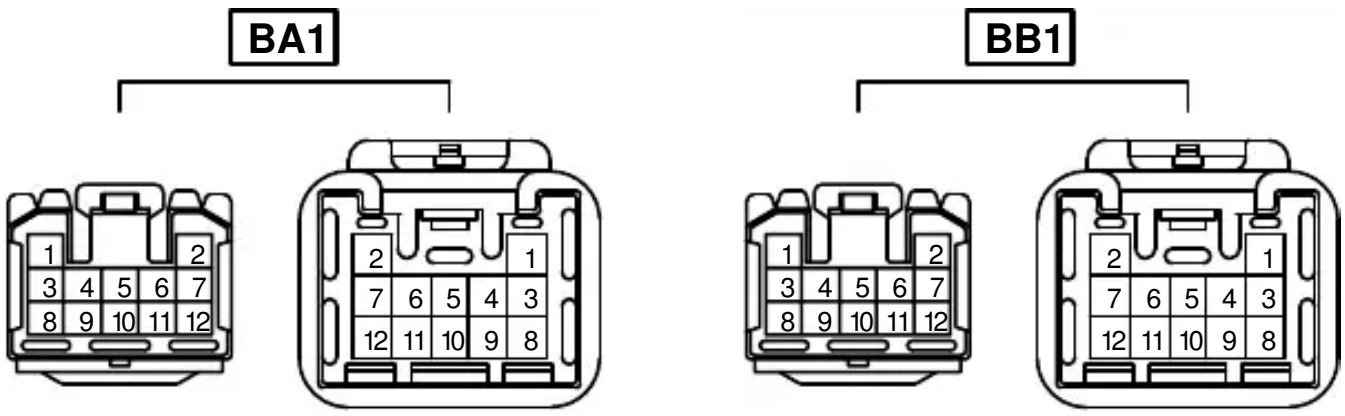

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Floor No.2 Wire (Under the Center Pillar LH)
BB1	Rear Door RH Wire and Floor No.1 Wire (Under the Center Pillar RH)

E ELECTRICAL WIRING ROUTING

▭ : Location of Connector Joining Wire Harness and Wire Harness

[RHD]

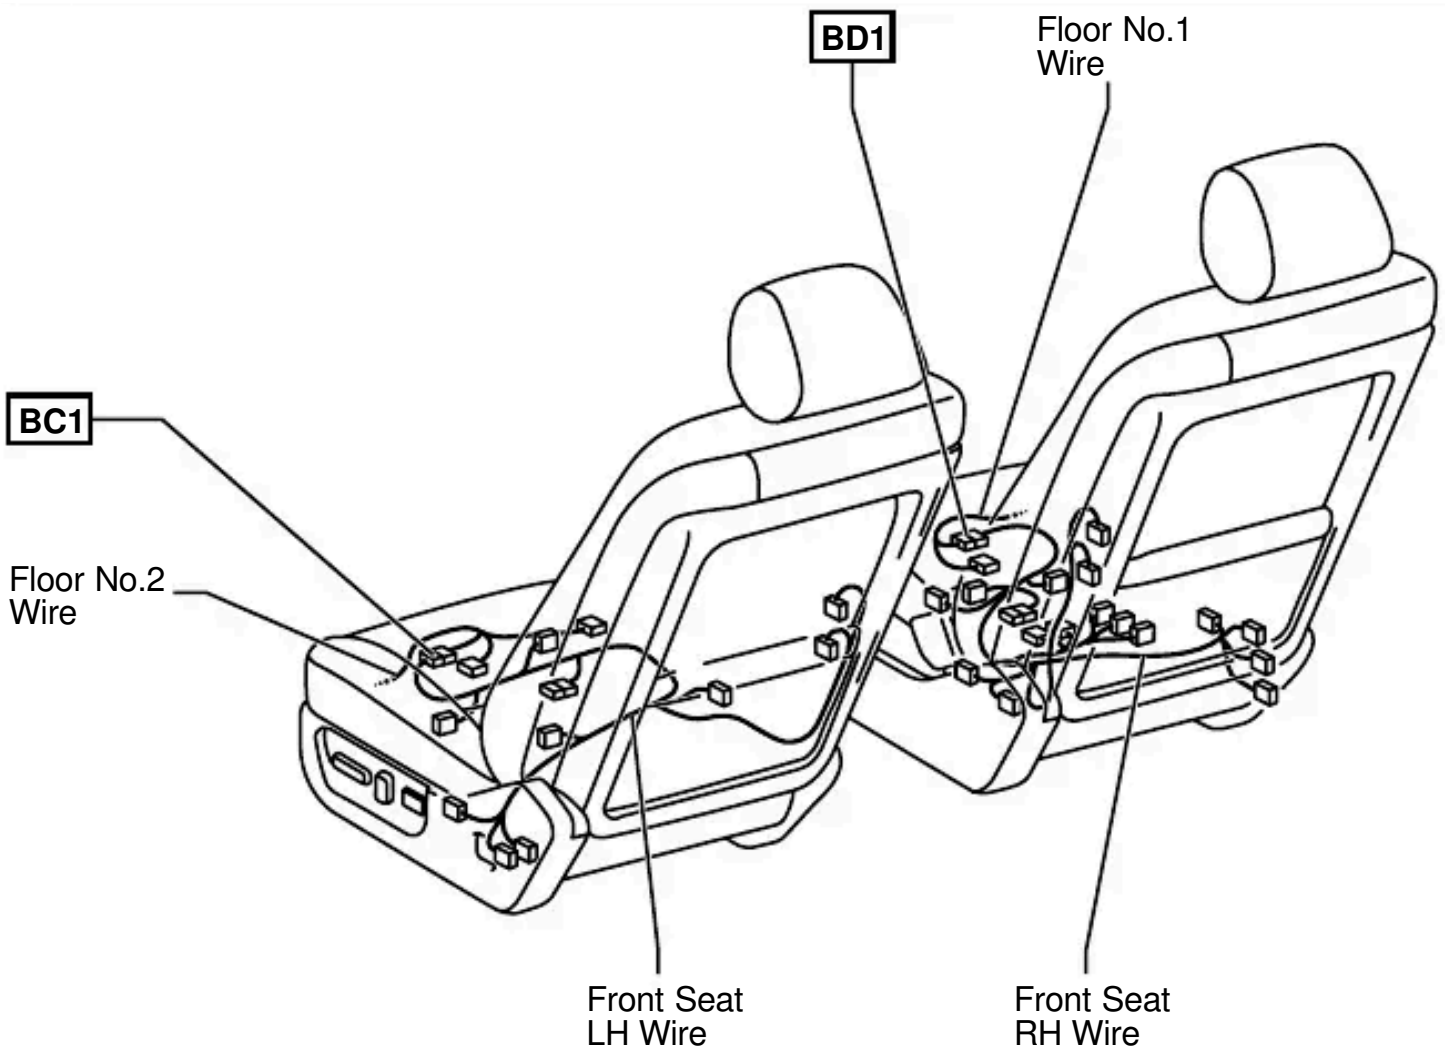

Connector Joining Wire Harness and Wire Harness

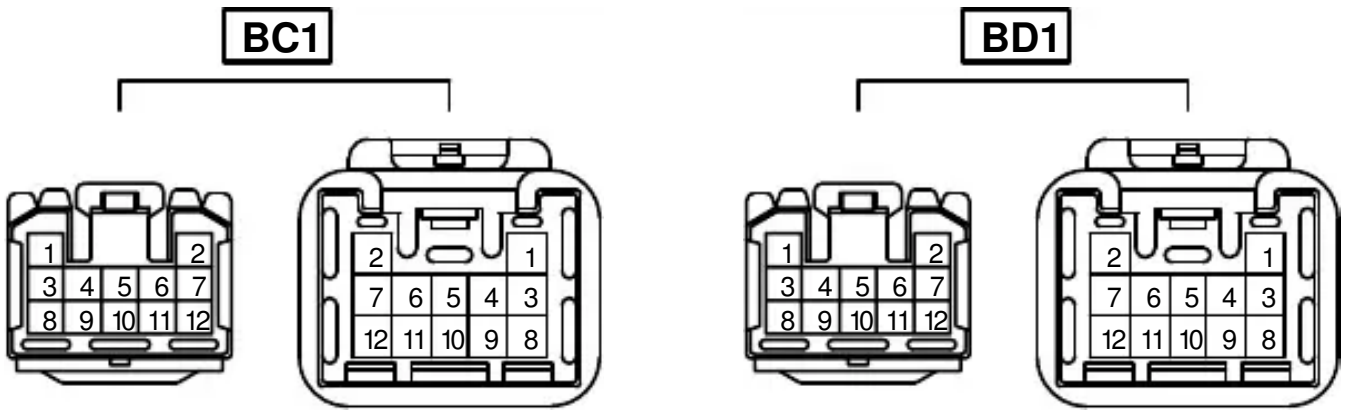

Code	Joining Wire Harness and Wire Harness (Connector Location)
BC1	Floor No.2 Wire and Front Seat LH Wire (Under the Front Passenger's Seat)
BD1	Floor No.1 Wire and Front Seat RH Wire (Under the Driver's Seat)

H PART NUMBER OF CONNECTORS

Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980–11070
A 2	A/C Condenser Fan Motor	90980–10928
A 3	A/C Magnetic Clutch and Lock Sensor	90980–11016
A 4	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	90980–10943
A 5	ABS & TRC & VSC Actuator	90980–11151
A 6	ABS & TRC & VSC Actuator	90980–10895
A 7	ABS & TRC & VSC Actuator	90980–11413
A 8	ABS Speed Sensor Front LH	90980–11074
A 9	ABS Speed Sensor Front RH	
A10	Accel Position Sensor (2JZ–GE)	90980–11150
	Accel Position Sensor (3UZ–FE)	90980–11144
A11	Air Flow Meter	90980–11317
A12	Airbag Sensor Front LH	90980–11856
A13	Airbag Sensor Front RH	
A14	Alternator	90980–09218
A15	Alternator	90980–11349
A16	A/C Control Assembly	90980–11392
A17	A/C Control Assembly	90980–11391
A18	A/C Room Temp. Sensor (LHD)	90980–10825
	A/C Room Temp. Sensor (RHD)	90980–11918
A19	A/C Solar Sensor	90980–11053
A20	A/C Thermistor	90980–10825
A21	A/T Shift Position Illumination	90980–11212
A22	ABS & TRC & VSC ECU	90980–11935
A23	ABS & TRC & VSC ECU	90980–11476
A24	ABS & TRC & VSC ECU	90980–11637
A25	ABS & TRC & VSC ECU	90980–11638
A26	ABS Deceleration Sensor	90980–11182
A27	Air Inlet Control Servo Motor	90980–11165
A28	Air Mix Control Servo Motor (Driver Side)	
A29	Air Mix Control Servo Motor (Front Passenger Side)	
A30	Air Vent Mode Control Servo Motor	
A31	Airbag Squib (Front Passenger Airbag Assembly)	90980–11884
A32	Airbag Squib (Steering Wheel Pad)	90980–10850
A33	Automatic Light Control Sensor	90980–11107
A34	ABS Speed Sensor Rear LH	90980–11060
A35	ABS Speed Sensor Rear RH	90980–11300
A36	Ashtray Illumination Rear LH	90981–11041
A37	Ashtray Illumination Rear RH	
A38	Auto Antenna Control Relay and Motor	90980–10799
B 1	Brake Fluid Level Warning SW	90980–11009
B 2	Blower Motor	90980–10385
B 3	Blower Motor Controller	90980–11579
B 4	Blower Motor Controller	90980–11667
B 5	Body ECU No.1	90980–11877
B 6	Body ECU No.2	
B 7	Buckle SW LH	90980–11399
B 8	Buckle SW RH	
B 9	Buckle SW LH and Seat Belt Warning Occupant Detection Sensor	90980–11599
B10	Buckle SW RH and Seat Belt Warning Occupant Detection Sensor	
C 1	Camshaft Position Sensor	90980–10947
C 2	Camshaft Timing Oil Control Valve	90980–11162
C 3	Check Connector	90980–11195
C 4	Crankshaft Position Sensor (2JZ–GE)	90980–10947
	Crankshaft Position Sensor (3UZ–FE)	90980–11162
C 5	CD Automatic Changer	90980–11923
C 6	Center Airbag Sensor Assembly	90980–11873
C 7	Center Airbag Sensor Assembly	90980–11872
C 8	Center Airbag Sensor Assembly	90980–11871
C 9	Cigarette Lighter	90980–11606
C10	Clock	90980–10799
C11	Combination Meter	90980–11195
C12	Combination Meter	90980–11194
C13	Combination SW (Europe, G.G.G.)	90980–11595
	Combination SW (Australia)	90980–11671
C14	Combination SW	90980–11614
C15	Combination SW	90980–11616
C16	Combination SW	90980–11594
C17	Cellular Phone (Hand Set)	90980–10998
C18	Cellular Phone (Hand Set)	90980–10798
C19	Curtain Shield Airbag Squib LH	90980–12109
C20	Curtain Shield Airbag Squib RH	
C21	Camshaft Timing Oil Control Valve LH	90980–11162
C22	Camshaft Timing Oil Control Valve RH	
D 1	Daytime Running Light Relay	90980–10807
D 2	DLC3	90980–11665
D 3	Diode (Luggage Door Open Detection)	90980–11071
D 4	Door Courtesy Light Front LH	90980–11148
D 5	Door Courtesy Light Front RH	
D 6	Door Courtesy Light Rear LH	
D 7	Door Courtesy Light Rear RH	
D 8	Door Courtesy SW Front LH	90980–11156
D 9	Door Courtesy SW Front RH	
D10	Door Courtesy SW Rear LH	
D11	Door Courtesy SW Rear RH	
D12	Door Lock Control SW LH	90980–11013
D13	Door Lock Control SW RH	

Note: Not all of the above part numbers of the connector are established for the supply.

Nota: Toutes les références du connecteur ne sont pas définies pour la fourniture.

Code	Part Name	Part Number
D14	Door Lock Motor and Door Lock Detection SW Rear LH	90980–11150
D15	Door Lock Motor and Door Lock Detection SW Rear RH	
D16	Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front LH	90980–11858
D17	Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front RH	
D18	Driver Door ECU	90980–11595
D19	Driver Door ECU	90980–11648
D20	Driver Door ECU	90980–11594
D21	Driving Position Memory SW	90980–11165
D22	Door Lock Motor and SW Front LH	90980–11539
D23	Door Lock Motor and SW Front RH	
D24	Door Lock Motor and SW Rear LH	90980–11535
D25	Door Lock Motor and SW Rear RH	
E 1	ECT Solenoid	90980–11151
E 2	Engine and ECT ECU (2JZ–GE)	90980–11421
	Engine and ECT ECU (3UZ–FE)	90980–12144
E 3	Engine and ECT ECU (2JZ–GE)	90980–11476
	Engine and ECT ECU (3UZ–FE)	90980–12145
E 4	Engine and ECT ECU (2JZ–GE)	90980–11586
	Engine and ECT ECU (3UZ–FE)	90980–12143
E 5	Engine and ECT ECU (2JZ–GE)	90980–11637
	Engine and ECT ECU (3UZ–FE)	90980–12146
E 6	Engine and ECT ECU (2JZ–GE)	90980–11638
	Engine and ECT ECU (3UZ–FE)	90980–12142
E 7	Engine and ECT ECU (2JZ–GE)	90980–11423
E 8	Engine Hood Courtesy SW	90980–11189
E 9	Engine Oil Level Sensor	90980–11235
E10	Exhaust Gas Sensor	90980–10831
E11	ECT Pattern Select SW	90980–11165
F 1	Front Fog Light LH	90980–11096
F 2	Front Fog Light RH	
F 3	Front Side Turn Signal Light LH	90980–11162
F 4	Front Side Turn Signal Light RH	
F 5	Front Turn Signal and Clearance Light LH	90980–10942
F 6	Front Turn Signal and Clearance Light RH	
F 7	Front Wiper Motor	90980–11599
F 8	Fuel Lid Opener SW	90980–10825
F 9	Front Door Speaker LH	90980–10935
F10	Front Door Speaker RH	
F11	Front Passenger Door ECU	90980–11594
F12	Front Passenger Door ECU	90980–11648
F13	Front Passenger Door ECU	90980–11595

Code	Part Name	Part Number
F14	Fuel Lid Opener Motor	90980–11150
F15	Fuel Pump and Sender	90980–11077
F16	Fuel Pump Control ECU	90980–10862
F17	Fuel Sender (Sub)	90980–11140
G 1	Glove Box Light	90980–11148
G 2	Glove Box Light SW	90980–11098
G 3	Gateway ECU	90980–11911
H 1	Headlight Beam Level Control Actuator LH	90980–11016
H 2	Headlight Beam Level Control Actuator RH	
H 3	Headlight Beam Level Control ECU	90980–10897
H 4	Headlight Beam Level Control ECU	90980–10891
H 5	Headlight Beam Level Control Motor	90980–11144
H 6	Headlight Cleaner Control Relay	90980–10939
H 7	Headlight Cleaner Motor	90980–11410
H 8	Headlight Control ECU LH	90980–11255
H 9	Headlight Control ECU RH	
H10	Headlight LH (High)	90980–11095
H11	Headlight LH (Low)	90980–11096
H12	Headlight RH (High)	90980–11095
H13	Headlight RH (Low)	90980–11096
H14	Heated Oxygen Sensor (Bank 1 Sensor 1) (2JZ–GE)	90980–11028
	Heated Oxygen Sensor (Bank 1 Sensor 1) (3UZ–FE)	90980–10869
H15	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980–11028
H16	Heated Oxygen Sensor (Bank 2 Sensor 1)	90980–10869
H17	Height Control Sensor (Front)	90980–11929
H18	Horn LH	90980–10619
H19	Horn RH	
H20	Hazard SW	90980–10801
H21	Headlight Beam Level Control SW	90980–10996
H22	Headlight Cleaner SW (LHD)	90980–10797
	Headlight Cleaner SW (RHD)	90980–10601
H23	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980–11028
H24	Height Control Sensor (Rear)	90980–11298
H25	High Mounted Stop Light (Bulb Type)	90980–10908
H26	High Mounted Stop Light (LED Type)	90980–11368
I 1	Igniter	90980–11653
I 2	Ignition Coil No.1	90980–11246
I 3	Ignition Coil No.2	
I 4	Ignition Coil No.3	
I 5	Injector No.1	90980–11153
I 6	Injector No.2	
I 7	Injector No.3	
I 8	Injector No.4	

Nota : No todos los números de las partes del conector indicados arriba están dispuestos para el suministro.

Anmerkung: Nicht alle der obenerwähnten Teile–Nummern der Stecker werden für die Lieferung etabliert.

H PART NUMBER OF CONNECTORS

Code	Part Name	Part Number
I 9	Injector No.5	90980–11153
I10	Injector No.6	
I11	Ignition Key Cylinder Light	90980–10906
I12	Ignition SW	90980–11615
I13	Inner Mirror	90980–11186
I14	Interior Light Rear LH	90980–11187
I15	Interior Light Rear RH	
I16	Ignition Coil and Igniter No.1	90980–11885
I17	Ignition Coil and Igniter No.2	
I18	Ignition Coil and Igniter No.3	
I19	Ignition Coil and Igniter No.4	
I20	Ignition Coil and Igniter No.5	
I21	Ignition Coil and Igniter No.6	
I22	Ignition Coil and Igniter No.7	
I23	Ignition Coil and Igniter No.8	
I24	Injector No.7	90980–11153
I25	Injector No.8	
J 1	Junction Connector	90980–10803
J 2	Junction Connector	90980–11542
J 3	Junction Connector	90980–11661
J 4	Junction Connector	
J 5	Junction Connector	90980–10803
J 6	Junction Connector	90980–11398
J 7	Junction Connector	90980–11542
J 8	Junction Connector	90980–10976
J 9	Junction Connector	90980–11915
J10	Junction Connector	90980–11542
J11	Junction Connector	90980–11398
J12	Junction Connector	90980–10802
J13	Junction Connector	90980–11915
J14	Junction Connector	90980–11542
J15	Junction Connector	90980–11915
J16	Junction Connector	90980–11542
J17	Junction Connector	90980–11539
J18	Junction Connector	90980–10803
J19	Junction Connector	90980–11542
J20	Junction Connector	
J21	Junction Connector	90980–10976
J22	Junction Connector	
J23	Junction Connector	90980–10803
J24	Junction Connector	
J25	Junction Connector	90980–10803
J26	Junction Connector	90980–11542
J27	Junction Connector	90980–11661
J28	Junction Connector	

Code	Part Name	Part Number
J29	Junction Connector	90980–10803
J30	Junction Connector	90980–11396
J31	Junction Connector	90980–11915
J32	Junction Connector	90980–10976
J33	Junction Connector	90980–11398
J34	Junction Connector	90980–10803
J35	Junction Connector	90980–11542
J36	Junction Connector	90980–11915
J37	Junction Connector	90980–10803
J38	Junction Connector	90980–11915
J39	Junction Connector	90980–11542
J40	Junction Connector	90980–10803
J41	Junction Connector	90980–11915
J42	Junction Connector	90980–10976
J43	Junction Connector	90980–11542
J44	Junction Connector	90980–10976
J45	Junction Connector	
J46	Junction Connector	90980–10803
J47	Junction Connector	
J48	Junction Connector	
J49	Junction Connector	90980–11542
K 1	Knock Sensor 1	90980–11166
K 2	Knock Sensor 2	
K 3	Kick Down SW	90980–11156
L 1	Luggage Compartment Door Opener SW	90980–10860
L 2	License Plate Light LH	90980–11148
L 3	License Plate Light RH	
L 4	Light Failure Sensor	90980–10803
L 5	Luggage Compartment Door Courtesy SW and Opener Motor	90980–10825
L 6	Luggage Compartment Door Key Unlock SW	90980–11212
L 7	Luggage Compartment Light	90980–11148
L 8	Lumbar Support Control SW (Driver's Seat)	90980–10601
L 9	Lumbar Support Control SW (Front Passenger's Seat)	
M 1	Master Cylinder Pressure Sensor	90980–11451
M 2	Multi–Display	90980–10799
M 3	Multi–Display	90980–11911
M 4	Moon Roof Control ECU	90980–10997
M 5	Moon Roof Control SW	90980–11488
M 6	Multi–Display	90980–11923
M 7	Mirror Retractor SW	90980–11090
N 1	Neutral Start SW	90980–11784
N 2	Noise Filter (Ignition)	90980–10843

Note: Not all of the above part numbers of the connector are established for the supply.

Nota: Toutes les références du connecteur ne sont pas définies pour la fourniture.

Code	Part Name	Part Number
N 3	Navigation ECU	90980–11923
N 4	Navigation ECU	90980–11973
N 5	Noise Filter (Rear Window Defogger)	90980–11259
N 6	Noise Filter (Ignition No.1)	90980–10843
N 7	Noise Filter (Ignition No.2)	
O 1	O/D Direct Clutch Speed Sensor	90980–11156
O 2	Oil Pressure SW	90980–11363
P 2	PPS Solenoid	90980–11003
P 3	Parking Brake SW	90980–10871
P 4	Power Outlet	90980–10760
P 5	PPS ECU	90980–10797
P 6	Personal Light	90980–11187
P 7	Power Window Control SW Front LH	90980–10797
P 8	Power Window Control SW Front RH	
P 9	Power Window Control SW Rear LH	
P10	Power Window Control SW Rear RH	
P11	Power Window Master SW	90980–11469
P12	Power Window Motor Front LH	90980–11011
P13	Power Window Motor Front RH	
P14	Pretensioner LH	90980–11862
P15	Pretensioner RH	
P16	Power Seat Control SW (Driver's Seat)	90980–10997
P17	Power Seat Control SW (Front Passenger's Seat)	
P18	Power Seat ECU	90980–11527
P19	Power Seat ECU	90980–11502
P20	Power Seat Motor (Driver's Seat Front Vertical Control)	90980–10825
P21	Power Seat Motor (Driver's Seat Lumbar Support Control)	
P22	Power Seat Motor (Driver's Seat Rear Vertical Control)	
P23	Power Seat Motor (Driver's Seat Reclining Control)	
P24	Power Seat Motor (Driver's Seat Slide Control)	
P25	Power Seat Motor (Front Passenger's Seat Front Vertical Control)	
P26	Power Seat Motor (Front Passenger's Seat Lumbar Support Control)	
P27	Power Seat Motor (Front Passenger's Seat Rear Vertical Control)	
P28	Power Seat Motor (Front Passenger's Seat Reclining Control)	
P29	Power Seat Motor (Front Passenger's Seat Slide Control)	90980–10825
P30	Power Seat Position Sensor (Driver's Seat Front Vertical Control)	90980–11296
P31	Power Seat Position Sensor (Driver's Seat Rear Vertical Control)	90980–10908
P32	Power Seat Position Sensor (Driver's Seat Reclining Control)	
P33	Power Seat Position Sensor (Driver's Seat Slide Control)	
P34	Power Steering Oil Pressure Sensor	90980–10845
R 1	Radiator Fan Motor	90980–10928
R 2	Radio and Player (Europe)	90980–12038
	Radio and Player (Except Europe)	90980–10996
R 3	Radio and Player (Europe)	90980–10803
	Radio and Player (Except Europe)	90980–10997
R 4	Radio and Player (Except Europe)	90980–11165
R 5	Rear Fog Light Relay	82660–20340
R 6	Rear Fog Light SW	90980–11090
R 7	Remote Control Mirror SW	90980–11657
R 8	Rheostat	90980–11165
R 9	Rear Combination Light LH	90980–11399
R10	Rear Combination Light LH	90980–11587
R11	Rear Combination Light RH	90980–11399
R12	Rear Combination Light RH	90980–11587
R13	Rear Door LH ECU	90980–11877
R14	Rear Door RH ECU	
R15	Rear Door Speaker LH	90980–10935
R16	Rear Door Speaker RH	
R17	Remote Control Mirror LH	90980–11590
R18	Remote Control Mirror RH	90980–11690
S 1	Speed Sensor (ECT)	90980–11156
S 2	Starter	90980–11400
S 3	Starter	–
S 4	Seat Heater SW	90980–10797
S 5	Shift Lock Control ECU	90980–11450
S 6	Step Light LH	90980–12110
S 7	Step Light RH	
S 8	Stereo Component Amplifier	90980–10803
S 9	Stereo Component Amplifier	90980–10799
S10	Stereo Component Amplifier	90980–10997
S11	Stereo Component Amplifier	90980–10998
S12	Stop Light SW	90980–11118
S13	Side Airbag Sensor LH	90980–11857
S14	Side Airbag Sensor RH	
S16	Seat Heater (Driver's Seat Back)	90980–10825
S17	Seat Heater (Driver's Seat Cushion)	
S18	Seat Heater (Front Passenger's Seat Back)	

Nota : No todos los números de las partes del conector indicados arriba están dispuestos para el suministro.

Anmerkung: Nicht alle der obenerwähnten Teile–Nummern der Stecker werden für die Lieferung etabliert.

H PART NUMBER OF CONNECTORS

Code	Part Name	Part Number
S19	Seat Heater (Front Passenger's Seat Cushion)	90980–10825
S21	Side Airbag Squib RH	90980–11864
T 1	Theft Deterrent Horn	90980–10619
T 2	Throttle Control Motor (2JZ–GE)	90980–10942
	Throttle Control Motor (3UZ–FE)	90980–11156
T 3	Throttle Position Sensor	90980–10711
T 4	Telephone Microphone	90980–11369
T 5	Tilt and Telescopic ECU	90980–10801
T 6	Transponder Key Amplifier	90980–10789
T 7	Turn Signal Flasher	90980–10799
T 8	Telephone Transceiver and Speaker Relay	90980–10802
T 9	Telephone Transceiver and Speaker Relay	90980–10803
U 1	Unlock Warning SW and Key Interlock Solenoid	90980–10795
V 1	Variable Resistor	90980–10902
V 2	VSV (ACIS) (LHD)	90980–11149
	VSV (ACIS) (RHD)	90980–11156
V 3	VSV (EVAP)	
V 4	VSC Off SW	90980–11494
V 5	VSC Warning Buzzer	90980–10906
V 6	Vanity Light LH	90980–11369
V 7	Vanity Light RH	
V 8	VVT Sensor LH	90980–10947
V 9	VVT Sensor RH	
W 1	Washer Level Warning SW	90980–11068
W 2	Washer Motor	90980–10981
W 3	Water Temp. Sensor	90980–10736
W 4	Water Temp. SW	90980–11235
W 5	Wireless Door Lock Buzzer	90980–11156
W 6	Wireless Door Lock Control ECU	90980–11165
W 7	Woofer (Speaker)	90980–10825
Y 1	Yaw Rate Sensor	90980–10904

Code	Part Name	Part Number

Note: Not all of the above part numbers of the connector are established for the supply.

Nota: Toutes les références du connecteur ne sont pas définies pour la fourniture.

Code	Part Name	Part Number	Code	Part Name	Part Number

F CONNECTOR LIST

A1
BLACK

A2
GRAY

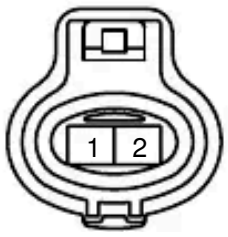

A3
GRAY

A4
BLACK

A5
BLACK

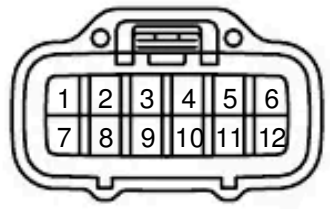

A6
BLACK

A7
BLACK

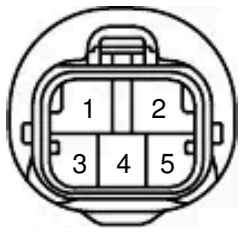

A8
GRAY

A9
GRAY

A10
(2JZ–GE) BLACK

A10
(3UZ–FE) BLACK

A11
BLACK

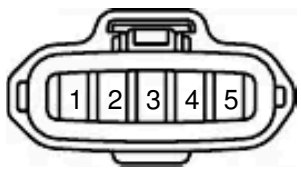

A12
YELLOW

A13
YELLOW

A14



A15
BLACK

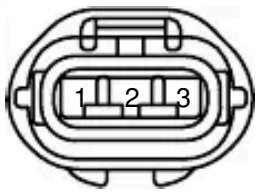

A16

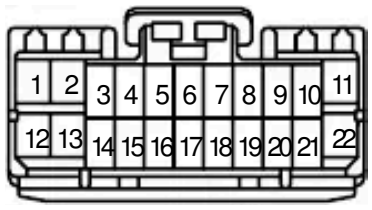

A17

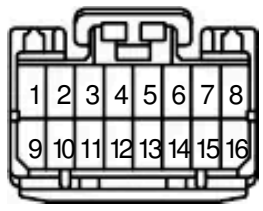

A18
(LHD) BLACK

A18
(RHD) BLACK

A19
BLACK

A20

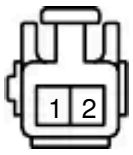

A21

A22

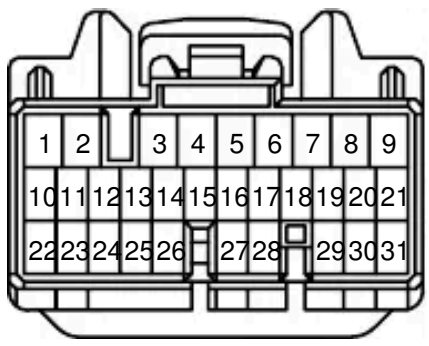

A23

A24

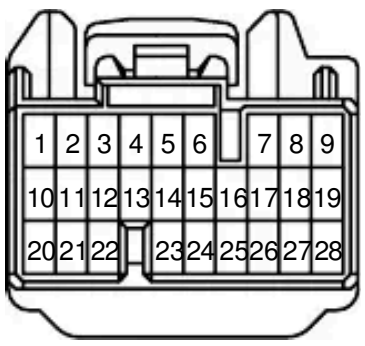

A25

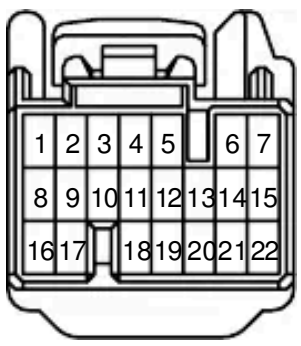

A26
BLACK

A27
BLACK

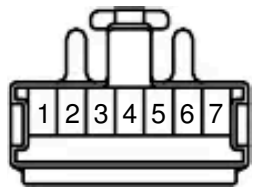

∗ 1 : w/ Driving Position Memory
∗ 2 : w/o Driving Position Memory

A28
BLACK

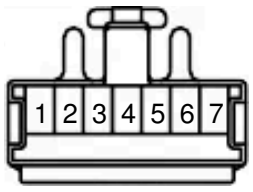

A29
BLACK

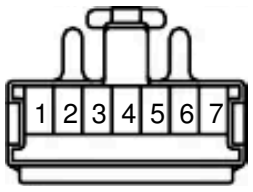

A30

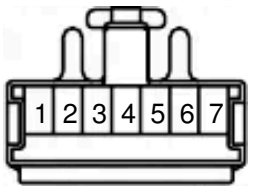

A31
YELLOW

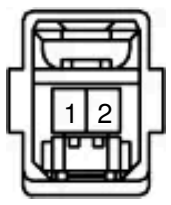

A32
YELLOW

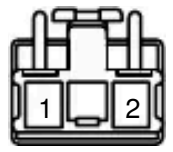

A33
BLACK

A34
GRAY

A35

A36
BLACK

A37
BLACK

A38
GRAY

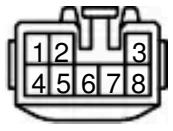

B1
GRAY

B2
BLACK

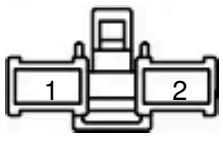

B3
BLACK

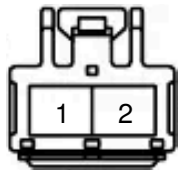

B4
BLACK

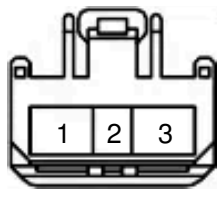

B5

B6

B7

B8
(∗ 1) BLUE

B8
(∗ 2)

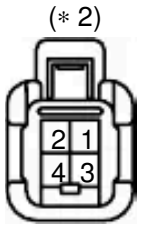

B9
GRAY

B10
GRAY

C1
(2JZ–GE) BLACK

C1
(3UZ–FE) DARK GRAY

C2
BLACK

C3
BLACK

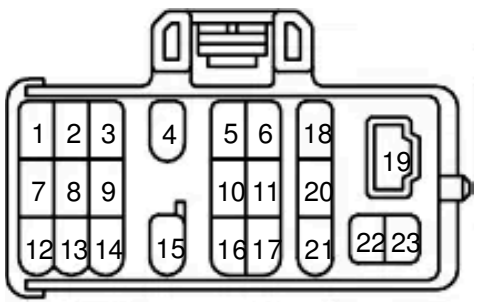

C4
(2JZ–GE) DARK GRAY

C4
(3UZ–FE) DARK GRAY

C5

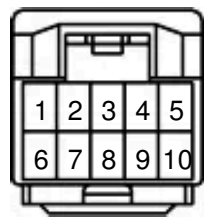

F CONNECTOR LIST

C6
YELLOW

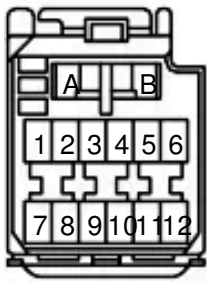

C7
YELLOW

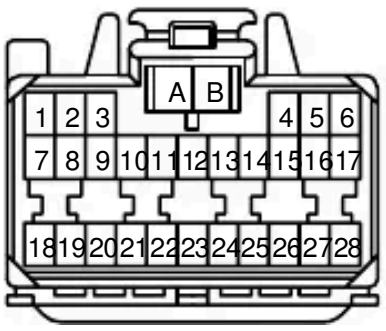

C8
YELLOW

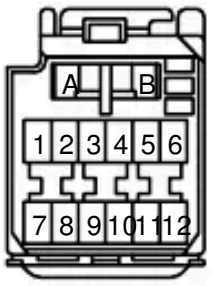

C9
BLACK

C10

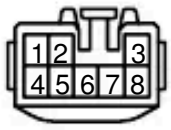

C11

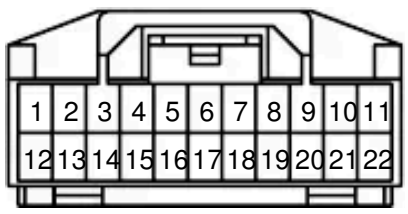

C12

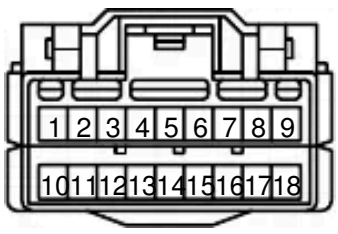

C13
(Europe, G.C.C.)

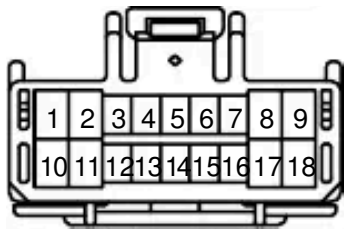

C13
(Australia)

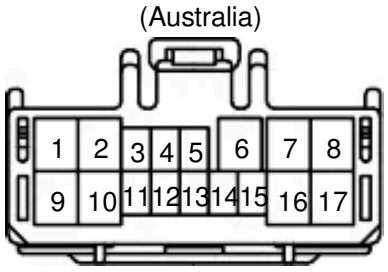

C14

C15

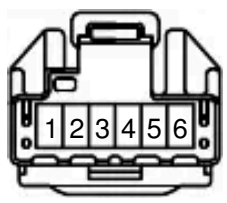

C16
BLACK

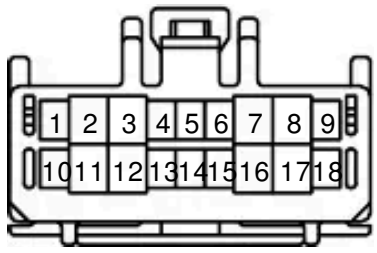

C17

C18

C19
YELLOW

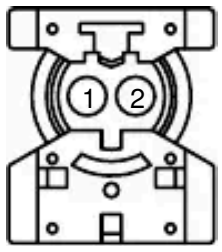

C20
YELLOW

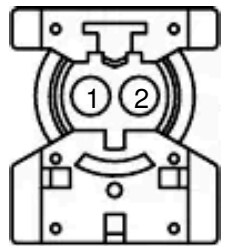

C21
BLACK

C22
BLACK

D1
BLUE

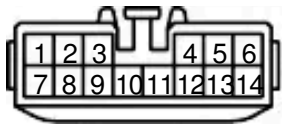

D2

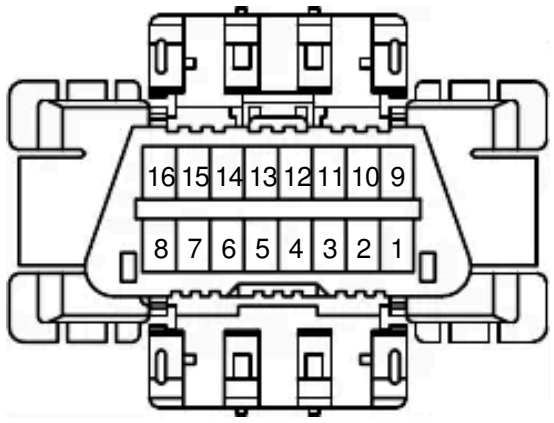

D3
GRAY

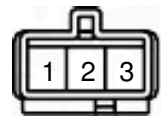

D4

D5

D6

D7

D8
GRAY

D9
GRAY

D10
GRAY

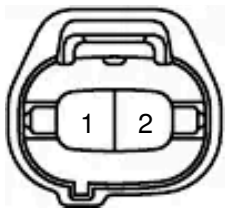

D11
GRAY

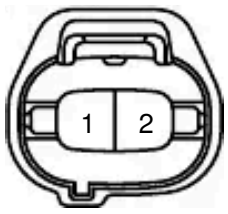

D12

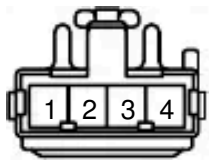

D13

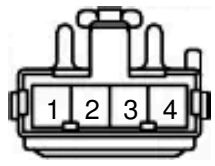

D14
BLACK

D15
BLACK

D16
BLACK

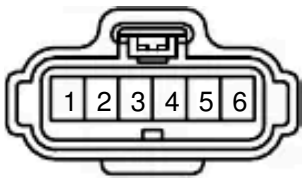

D17
BLACK

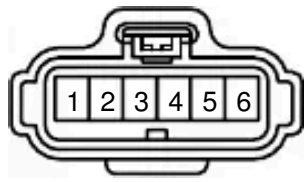

D18
GRAY

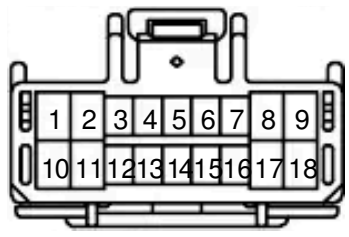

D19
GRAY

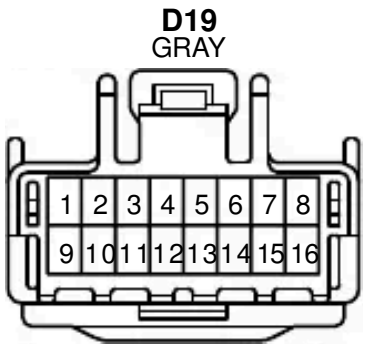

D20
GRAY

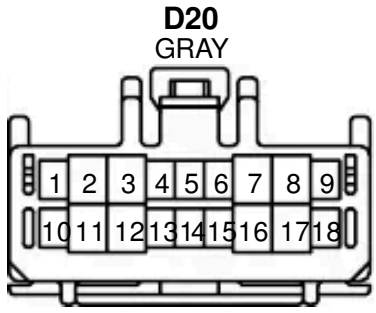

D21
BLUE

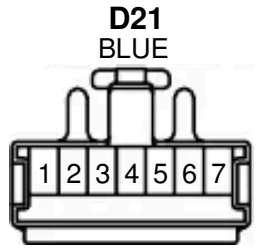

D22

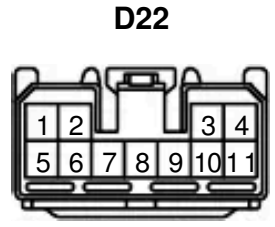

D23

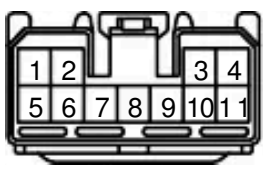

D24

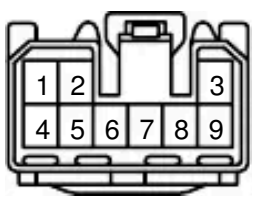

D25

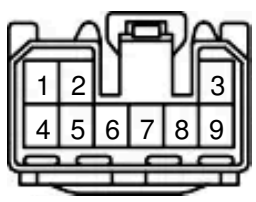

E1
GRAY

E2
(2JZ–GE)

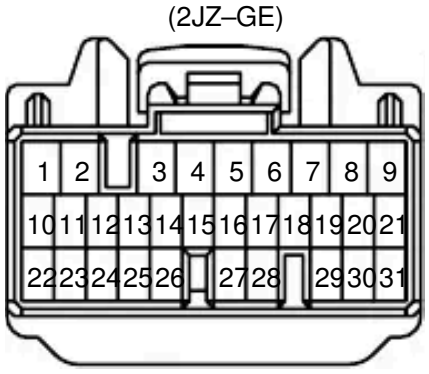

E2
(3UZ–FE)

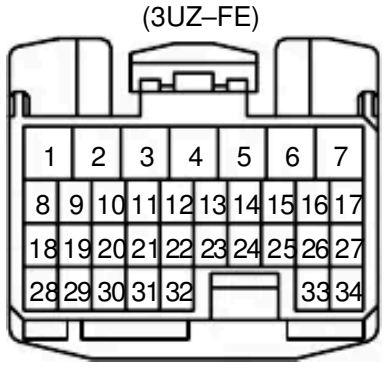

E3
(2JZ–GE)

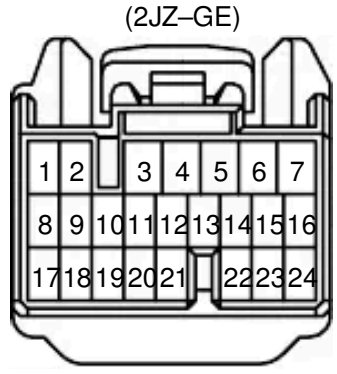

F CONNECTOR LIST

E3
(3UZ–FE)

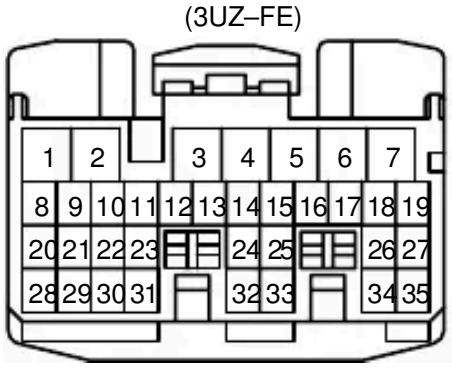

E4
(2JZ–GE)

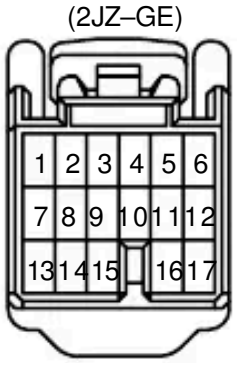

E4
(3UZ–FE)

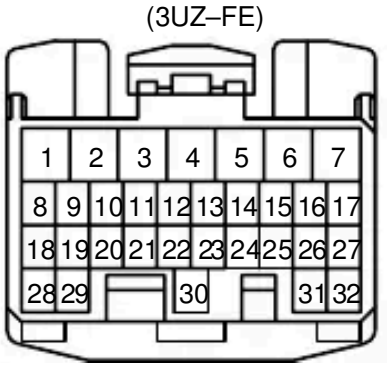

E5
(2JZ–GE)

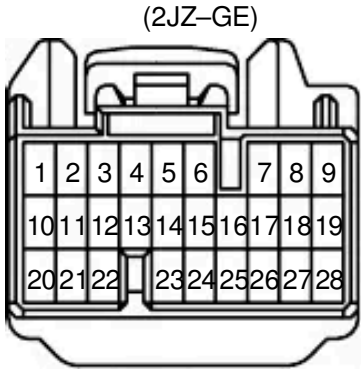

E5
(3UZ–FE)

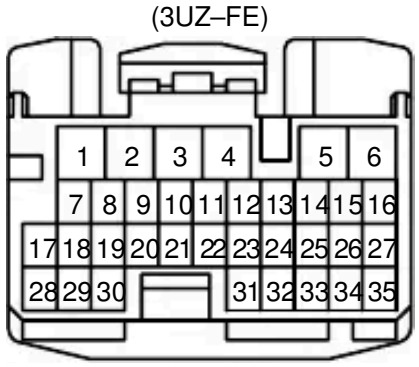

E6
(2JZ–GE)

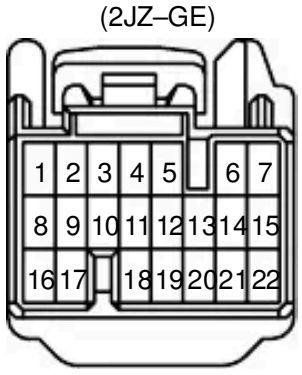

E6
(3UZ–FE)

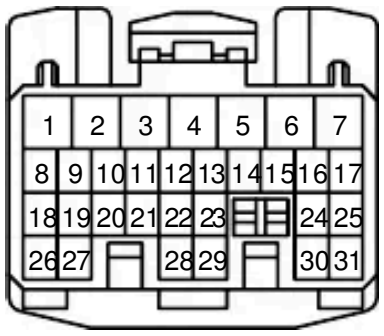

E7
(2JZ–GE) DARK GRAY

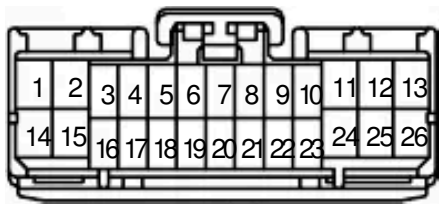

E8
BLACK

E9
GRAY

E10
BLACK

E11
(Except G.C.C.) BLACK

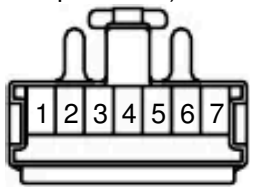

E11
(G.C.C.)

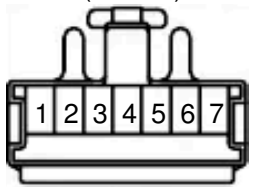

F1
BROWN

F2
BROWN

F3
GRAY

F4
GRAY

F5
GRAY

F6
GRAY

F7
GRAY

F8
GREEN

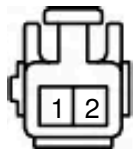

F9

F10



F11
GRAY

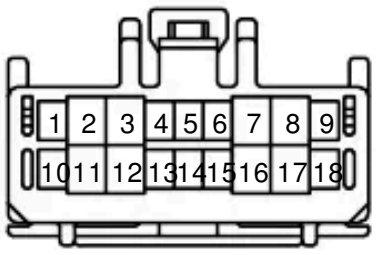

F12
GRAY

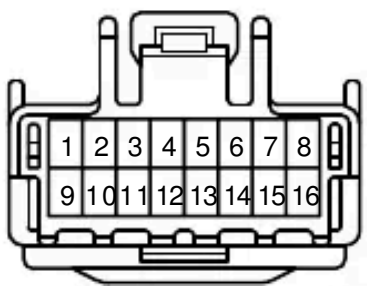

F13
GRAY

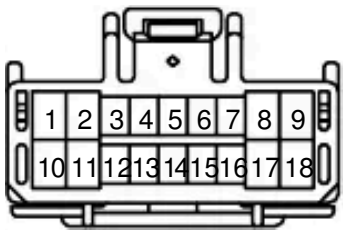

F14
BLACK

F15

F16
BLACK

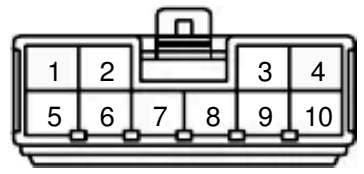

F17

G1

G2
BLACK

G3

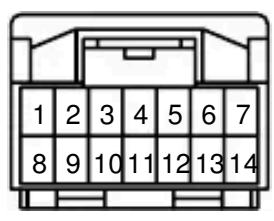

H1
GRAY

H2
GRAY

H3
GRAY

H4
BLACK

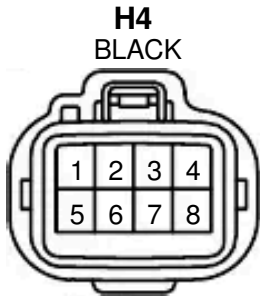

H5
BLACK

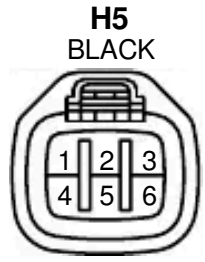

H6
BLACK

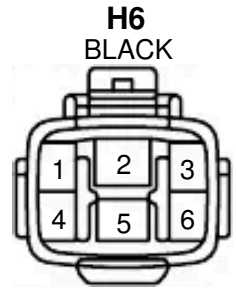

H7
BLACK

H8

H9

H10
BLACK

H11
BROWN

H12
BLACK

H13
BROWN

H14
(2JZ–GE) DARK GRAY

H14
(3UZ–FE) DARK GRAY

H15
DARK GRAY

H16
DARK GRAY

H17
DARK GRAY

F CONNECTOR LIST

H18
BLACK

H19
BLACK

H20
BLACK

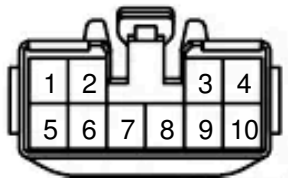

H21
GRAY

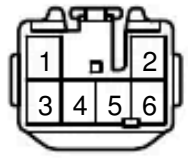

H22
(LHD)

H22
(RHD) BLACK

H23
DARK GRAY

H24

H25

H26

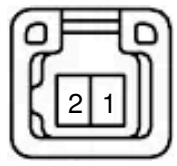

I1
BLACK

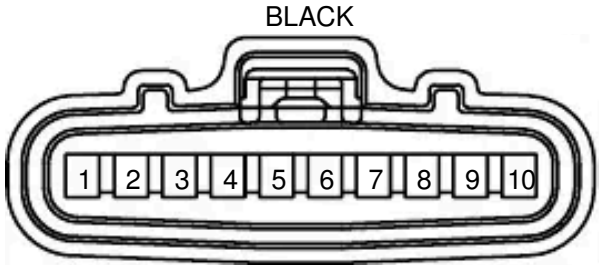

I2
BLACK

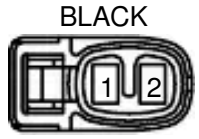

I3
BLACK

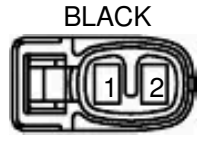

I4
BLACK

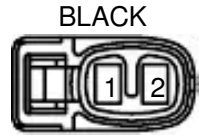

I5
(2JZ–GE) DARK GRAY

I5
(3UZ–FE) BLUE

I6
(2JZ–GE) BROWN

I6
(3UZ–FE) BLUE

I7
(2JZ–GE) DARK GRAY

I7
(3UZ–FE) BLUE

I8
(2JZ–GE) BROWN

I8
(3UZ–FE) BLUE

I9
(2JZ–GE) DARK GRAY

I9
(3UZ–FE) BLUE

I10
(2JZ–GE) BROWN

I10
(3UZ–FE) BLUE

I11

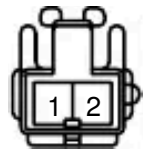

I12

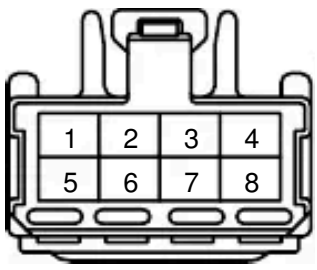

I13
ORANGE

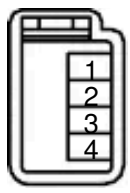

I14



I15



I16
BLACK

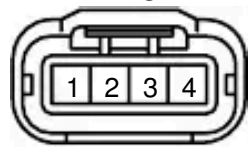

I17
BLACK

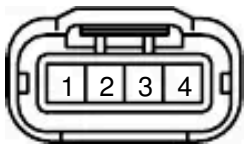

I18
BLACK

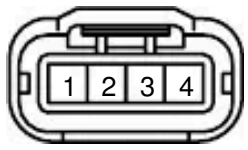

I19
BLACK

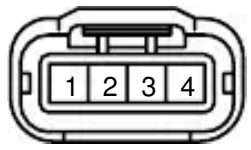

I20
BLACK

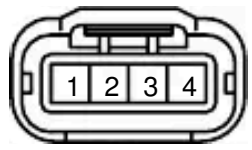

I21
BLACK

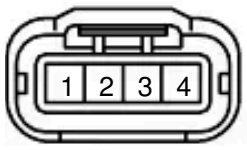

I22
BLACK

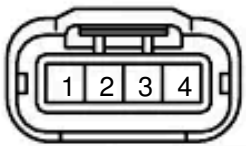

I23
BLACK

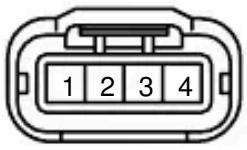

I24
BLUE

I25
BLUE

J1
BLACK

J2
ORANGE

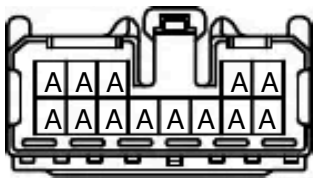

J3

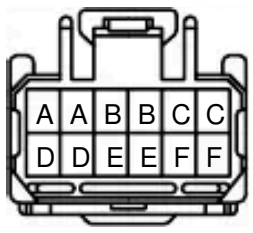

J4

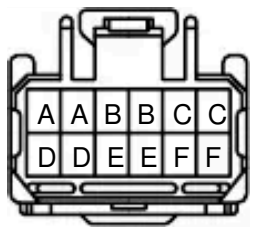

J5
BLUE

J6
BLACK



J7
GRAY

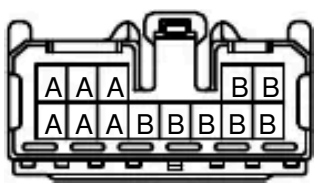

J8

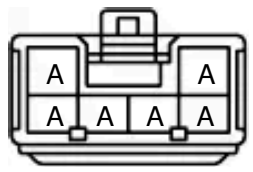

J9

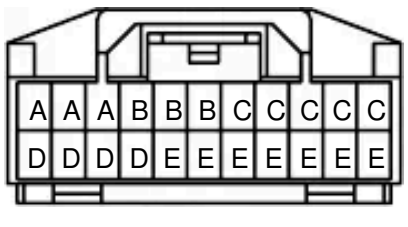

J10
ORANGE

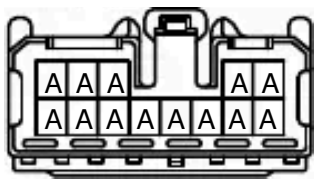

J11
BLACK

J12
GRAY

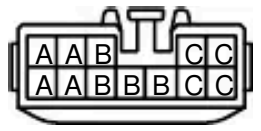

J13

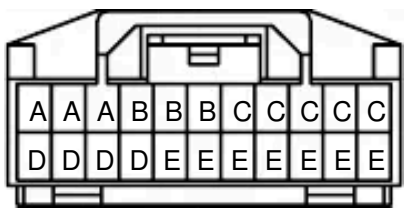

J14
GRAY

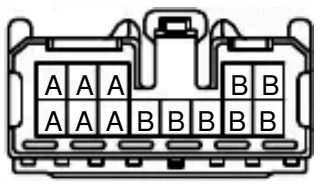

J15

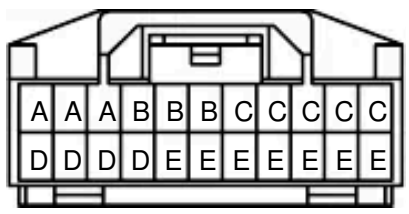

J16

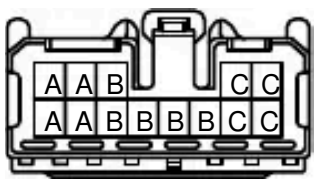

J17

J18

J19
BLUE

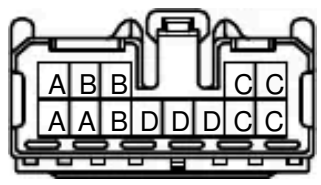

J20
BLUE

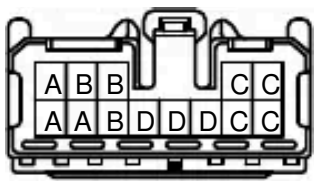

J21

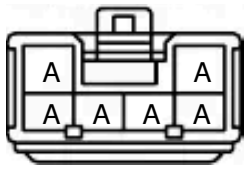

J22

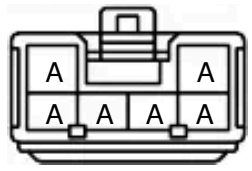

J23

F CONNECTOR LIST

J24

J25

J26
ORANGE

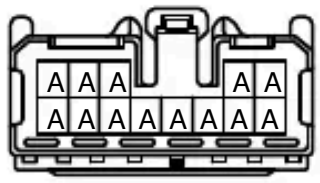

J27

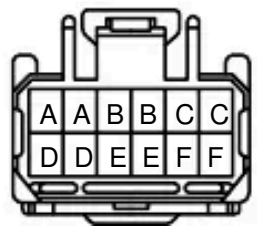

J28

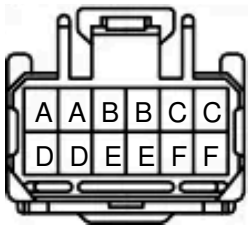

J29
BLUE

J30
BLACK

J31

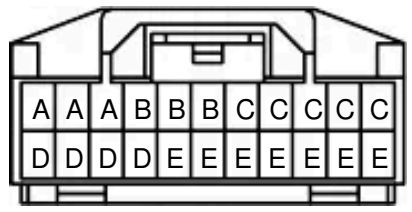

J32

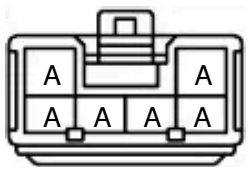

J33
BLACK



J34

J35

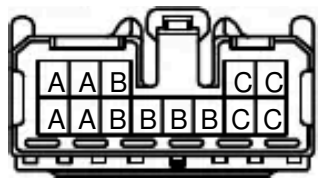

J36

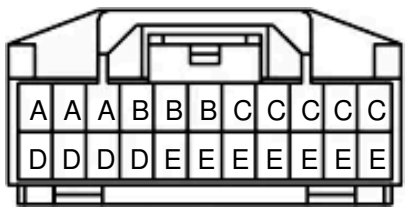

J37

J38

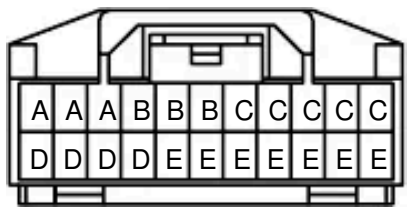

J39

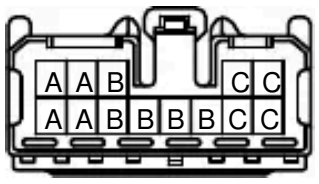

J40
GRAY

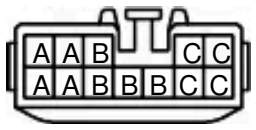

J41

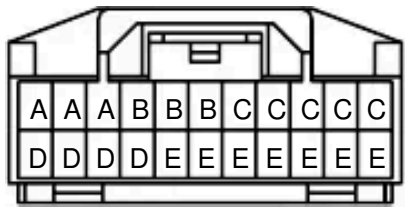

J42

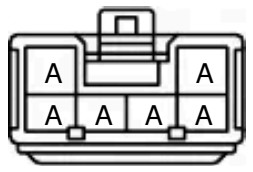

J43
BLUE

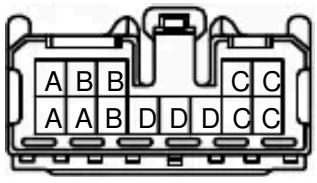

J44

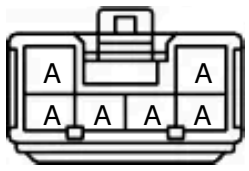

J45

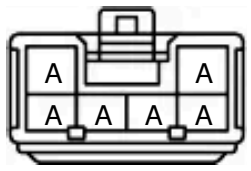

J46

J47

J48

J49
BLACK

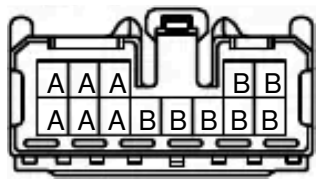

K1
DARK GRAY

K2
DARK GRAY

K3
BLACK

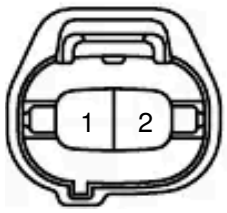

L1

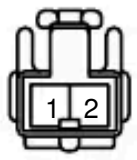

L2

L3

L4

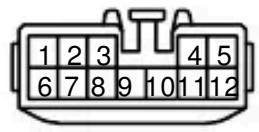

L5
BLACK

L6



L7
GRAY

L8

L9

M1
GRAY

M2

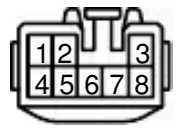

M3

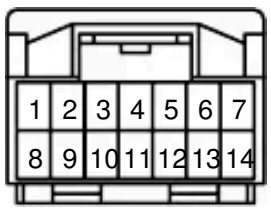

M4

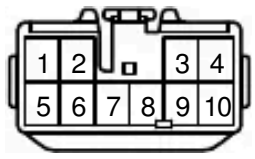

M5

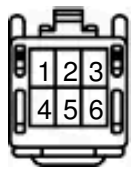

M6

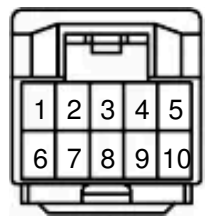

M7
BLUE

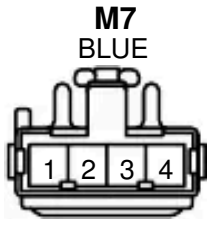

N1
BLACK

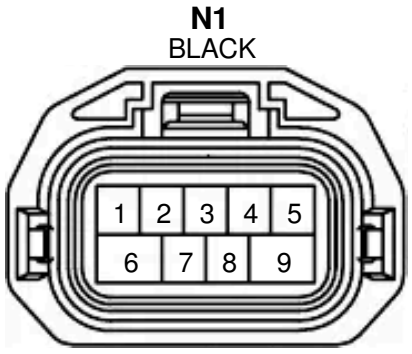

N2
GRAY

N3

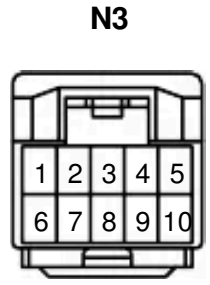

N4

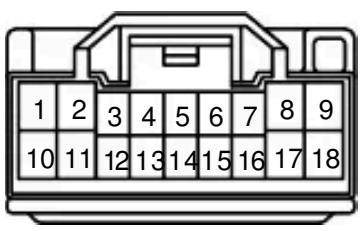

N5

N6
GRAY

N7
GRAY

O1
BLACK

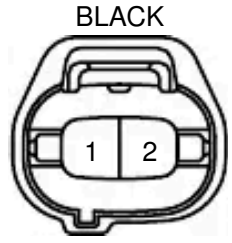

O2
GRAY

P2
GRAY

P3

P4

P5
BLUE

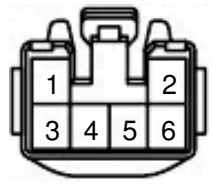

P6



F CONNECTOR LIST

∗ 1 : Europe
∗ 2 : Except Europe

P7

P8

P9

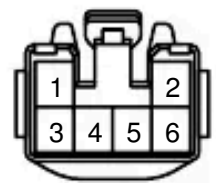

P10

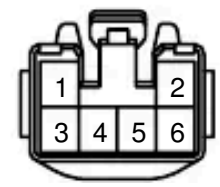

P11

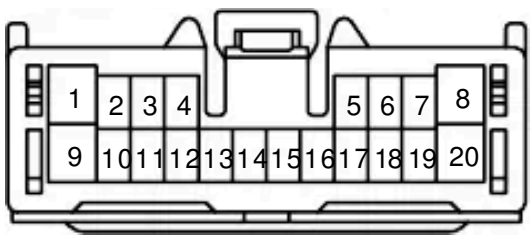

P12

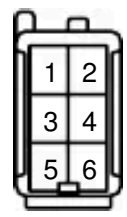

P13

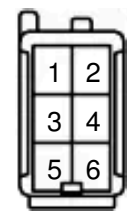

P14
YELLOW



P15
YELLOW



P16
BLACK

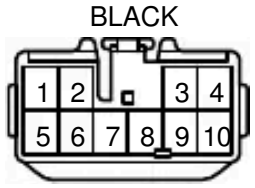

P17
BLACK

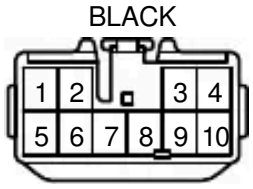

P18

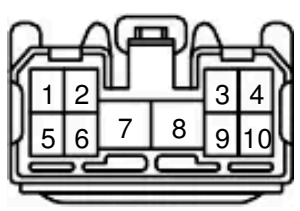

P19

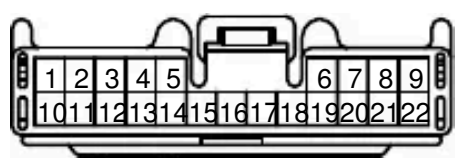

P20
(LHD) ORANGE

P20
(RHD) BLUE

P21

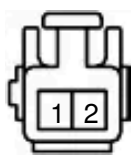

P22

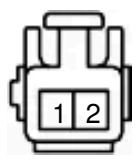

P23

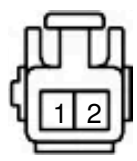

P24

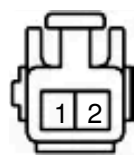

P25
(LHD) BLUE

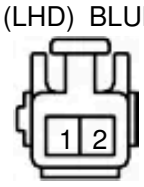

P25
(RHD) ORANGE

P26

P27

P28

P29

P30
BLUE

P31

P32

P33

P34
BLACK

R1
GRAY

R2
(∗ 1)

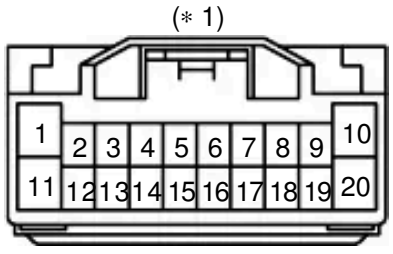

R2
(∗ 2)

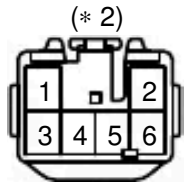

R3
(∗ 1)

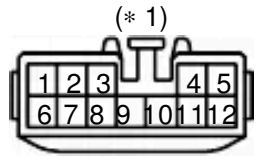

R3
(∗ 2)

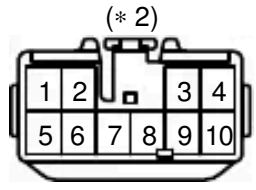

∗ 2 : Except Europe

R4
(∗ 2)

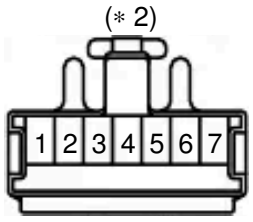

R5

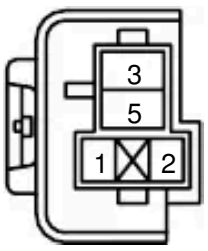

R6
(LHD) DARK GRAY

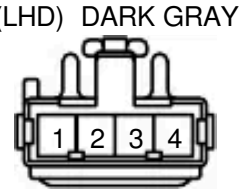

R6
(RHD) BLUE

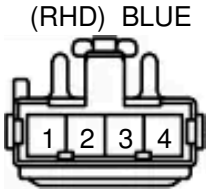

R7
BLACK

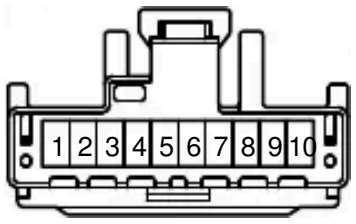

R8
(LHD)

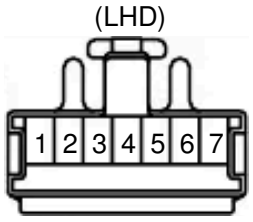

R8
(RHD) ORANGE

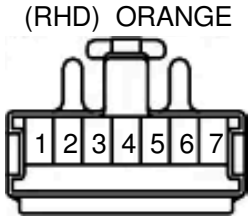

R9

R10

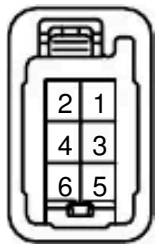

R11

R12

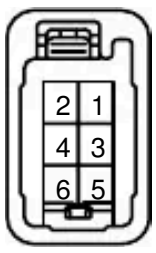

R13

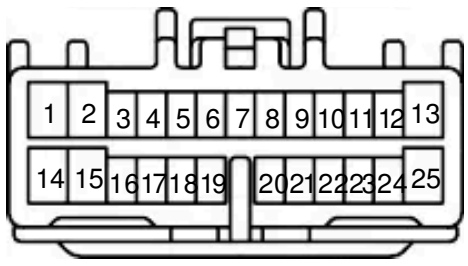

R14

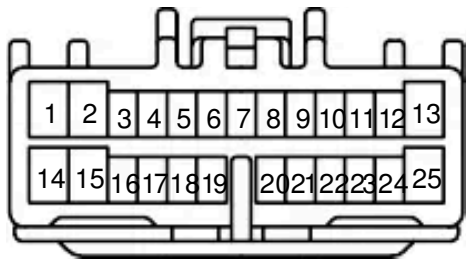

R15



R16

R17

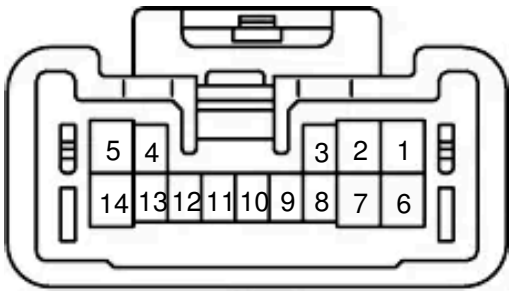

R18

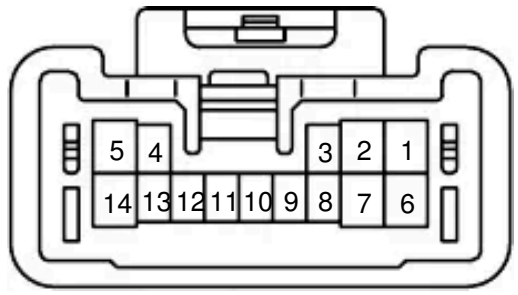

S1
BLACK

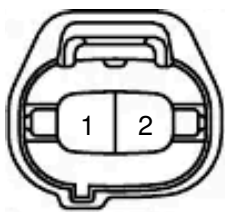

S2
BLACK

S3



S4

S5

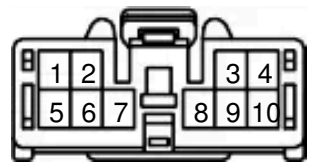

S6
BLACK

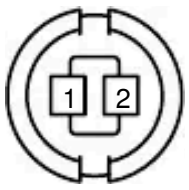

S7
BLACK

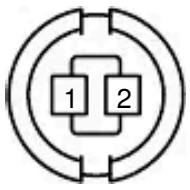

S8
BLACK

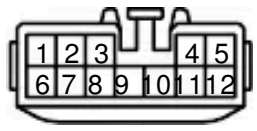

S9
ORANGE

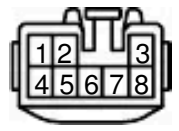

S10

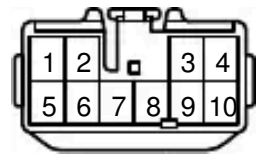

F CONNECTOR LIST

S11

S12
BLUE

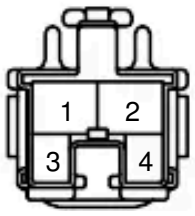

S13
YELLOW

S14
YELLOW

S16
GRAY

S17
GRAY

S18
GRAY

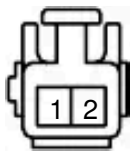

S19
GRAY

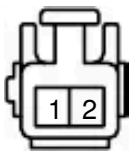

S20
YELLOW

S21
YELLOW

T1
BLACK

T2
(2JZ–GE) GRAY

T2
(3UZ–FE) BLACK

T3
BLACK

T4

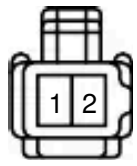

T5
GRAY

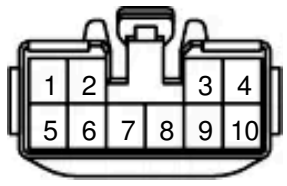

T6

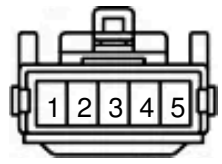

T7
BLACK

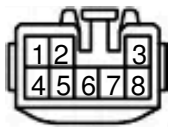

T8

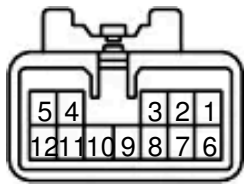

T9

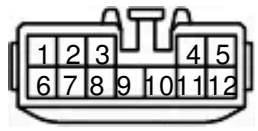

U1



V1
BLACK

V2
(2JZ–GE) BROWN

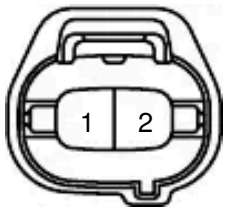

V2
(3UZ–FE) BLACK

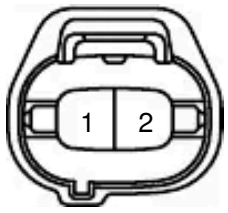

V3
(2JZ–GE) BLUE

V3
(3UZ–FE) BLACK

V4

V5
BLACK

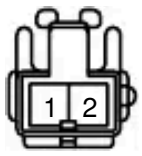

V6

V7

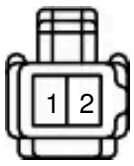

V8
DARK GRAY

V9
DARK GRAY

W1
BLACK

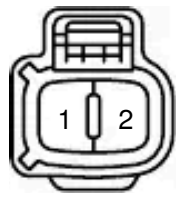

W2
BLACK

W3
BLACK

W4

W5
BLACK

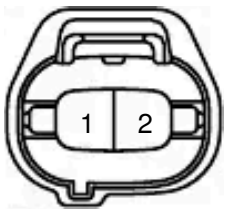

W6

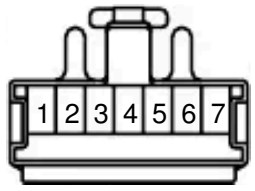

W7

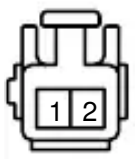

Y1
BLACK

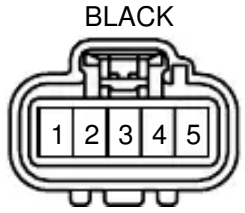

I OVERALL ELECTRICAL WIRING DIAGRAM

(Cont. next page)

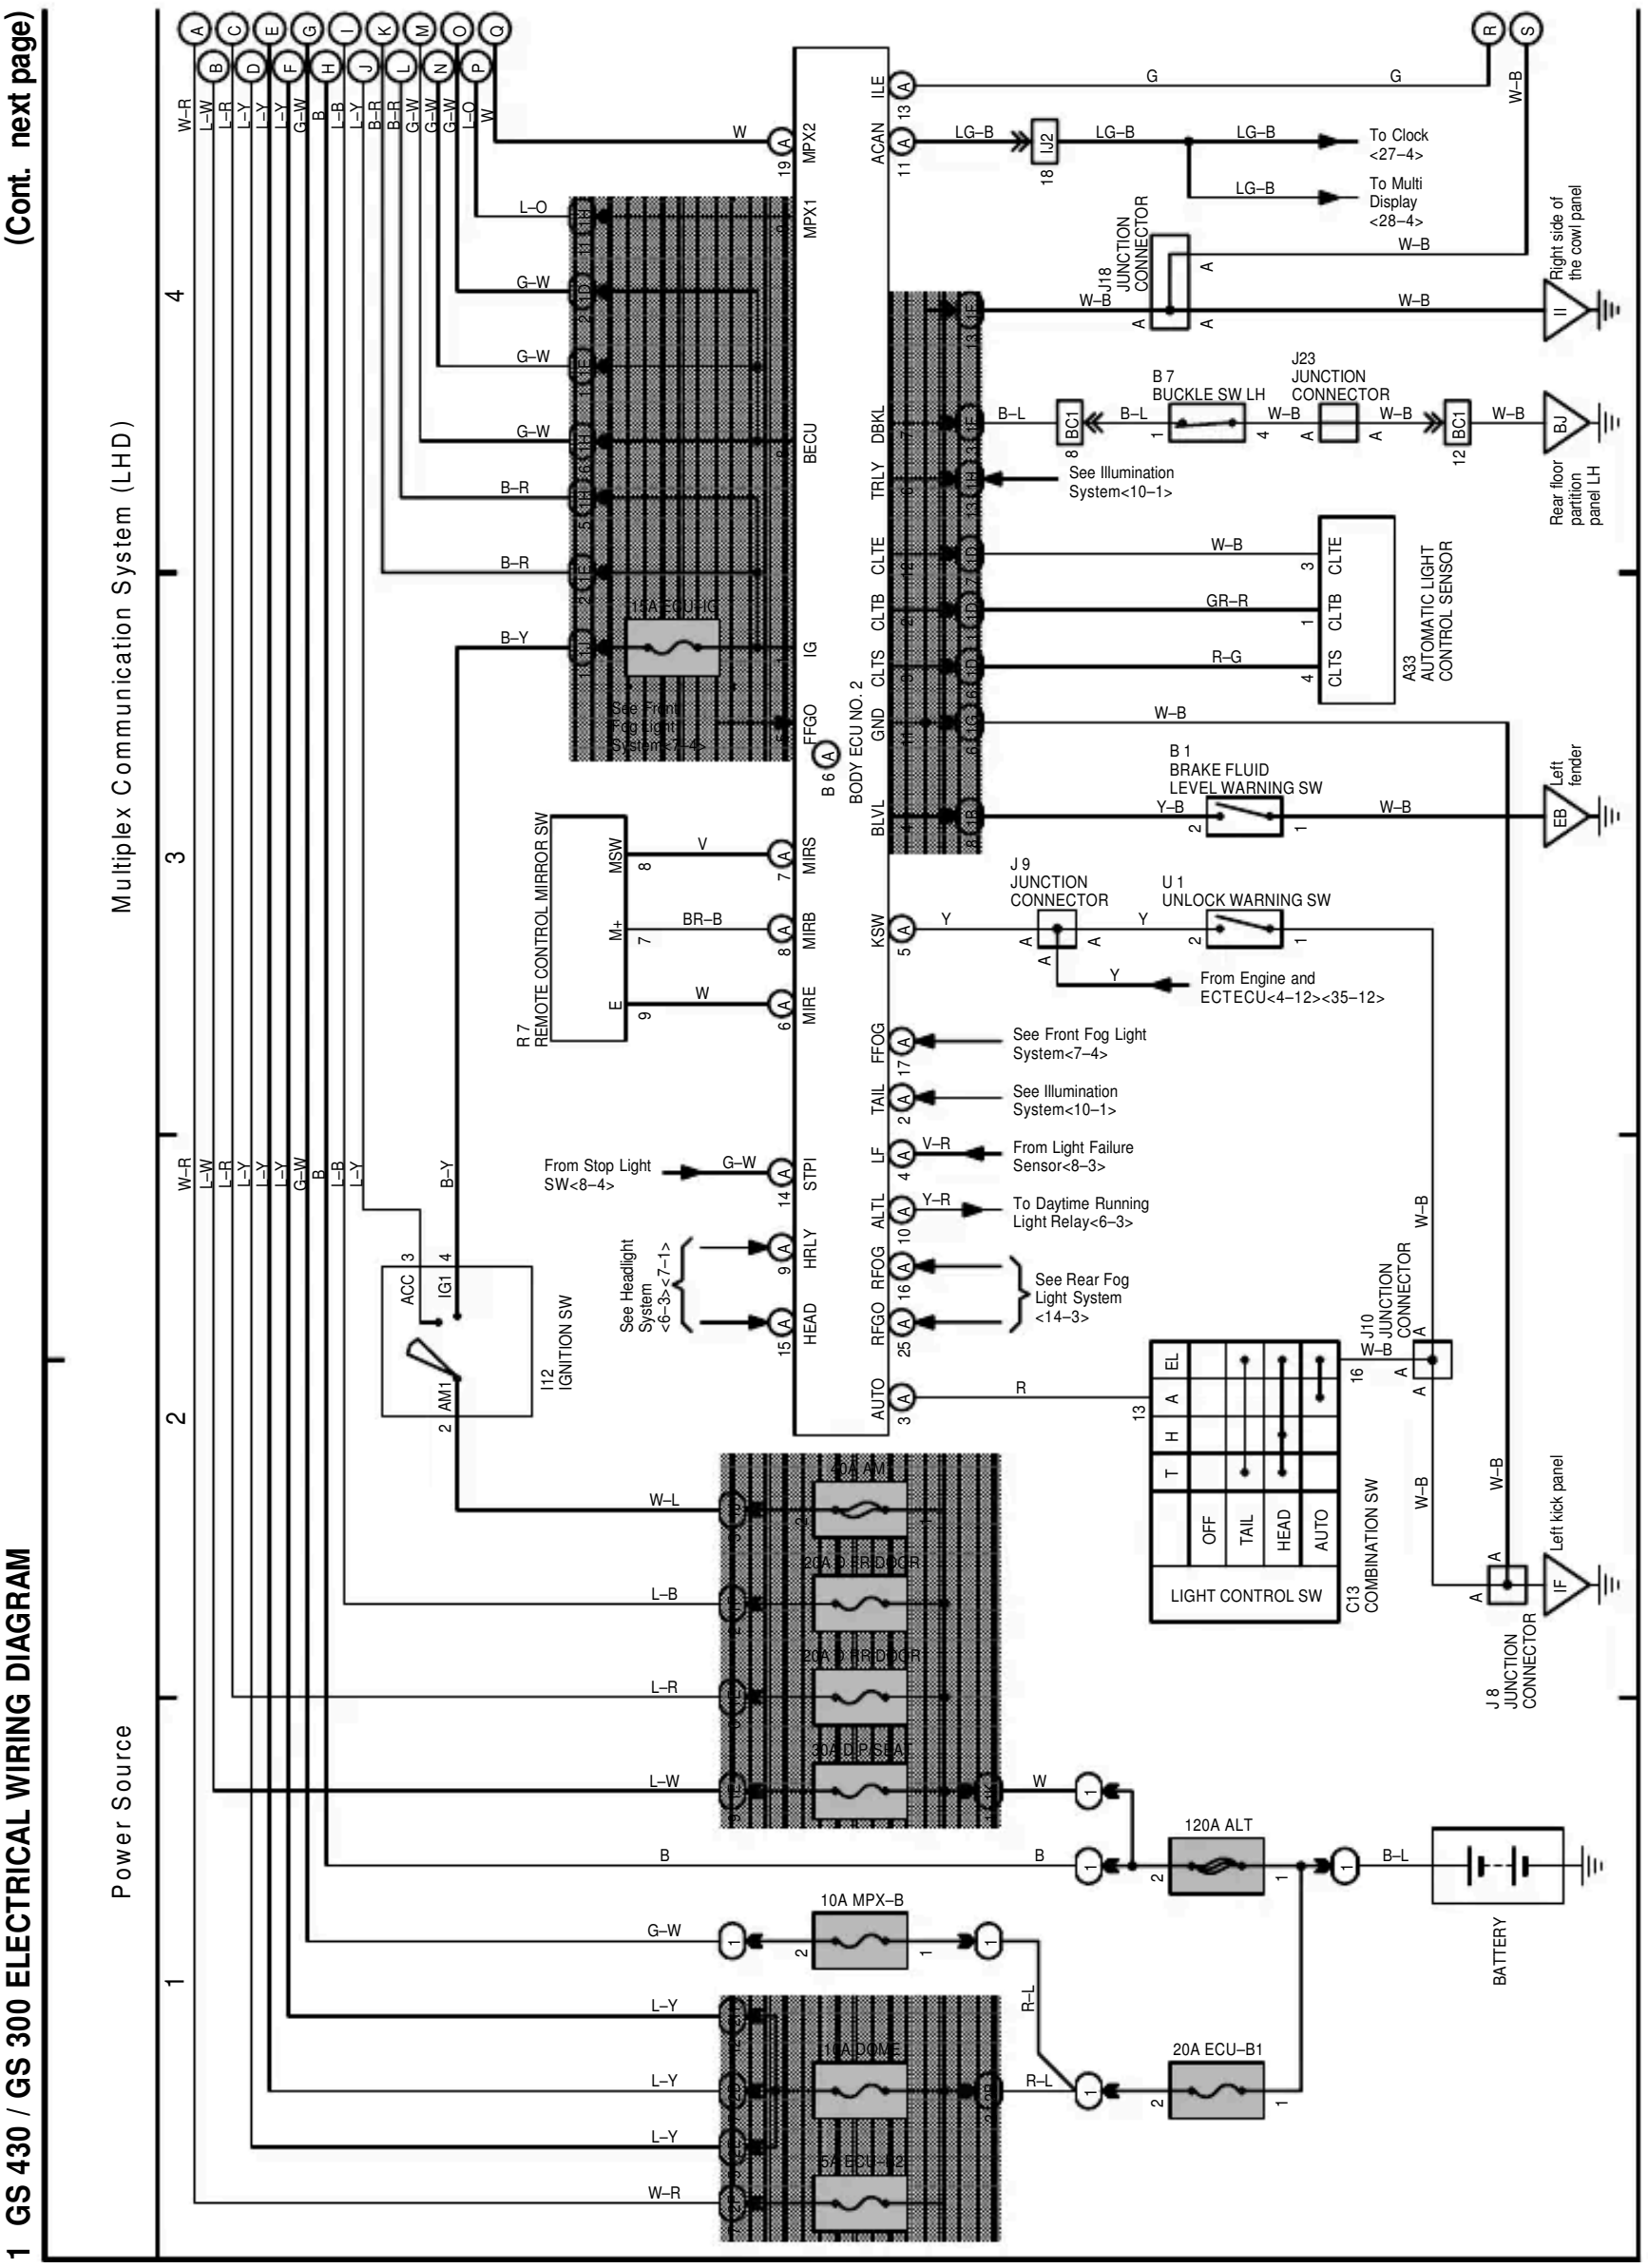

(Cont. next page)

1 GS 430 / GS 300 (Cont' d)

Multiplex Communication System (LHD)

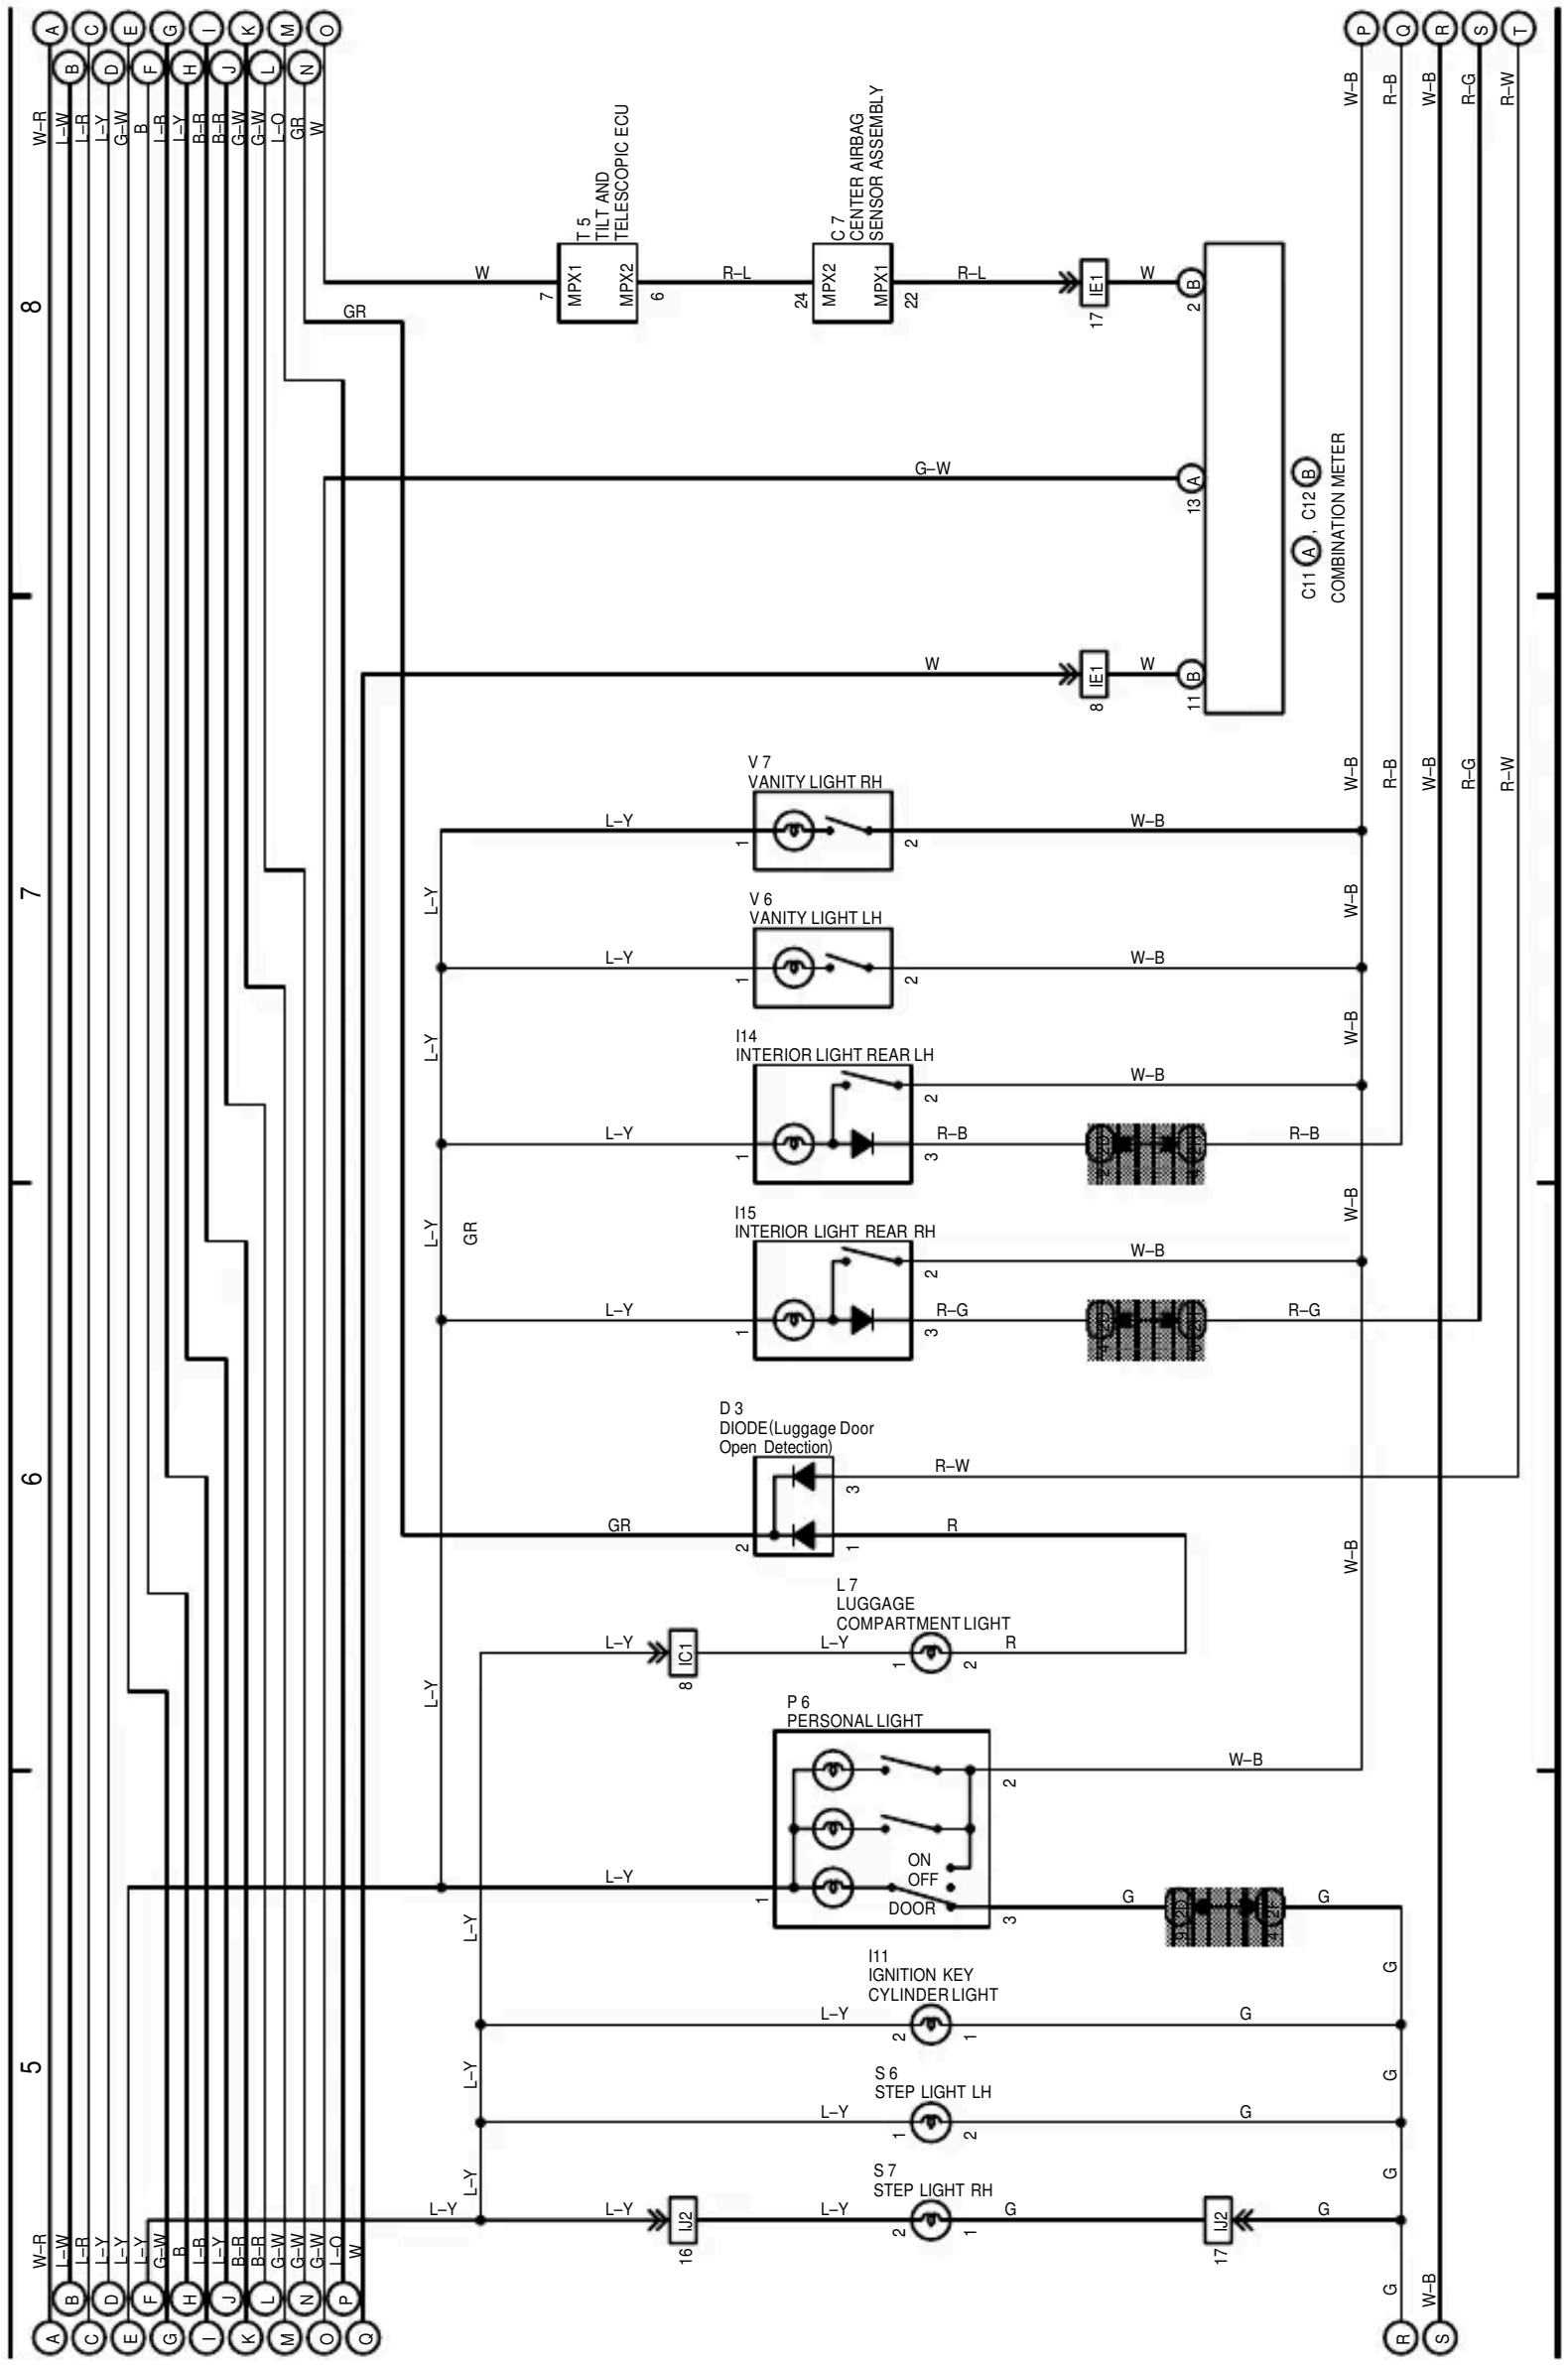

I OVERALL ELECTRICAL WIRING DIAGRAM

(Cont. next page)

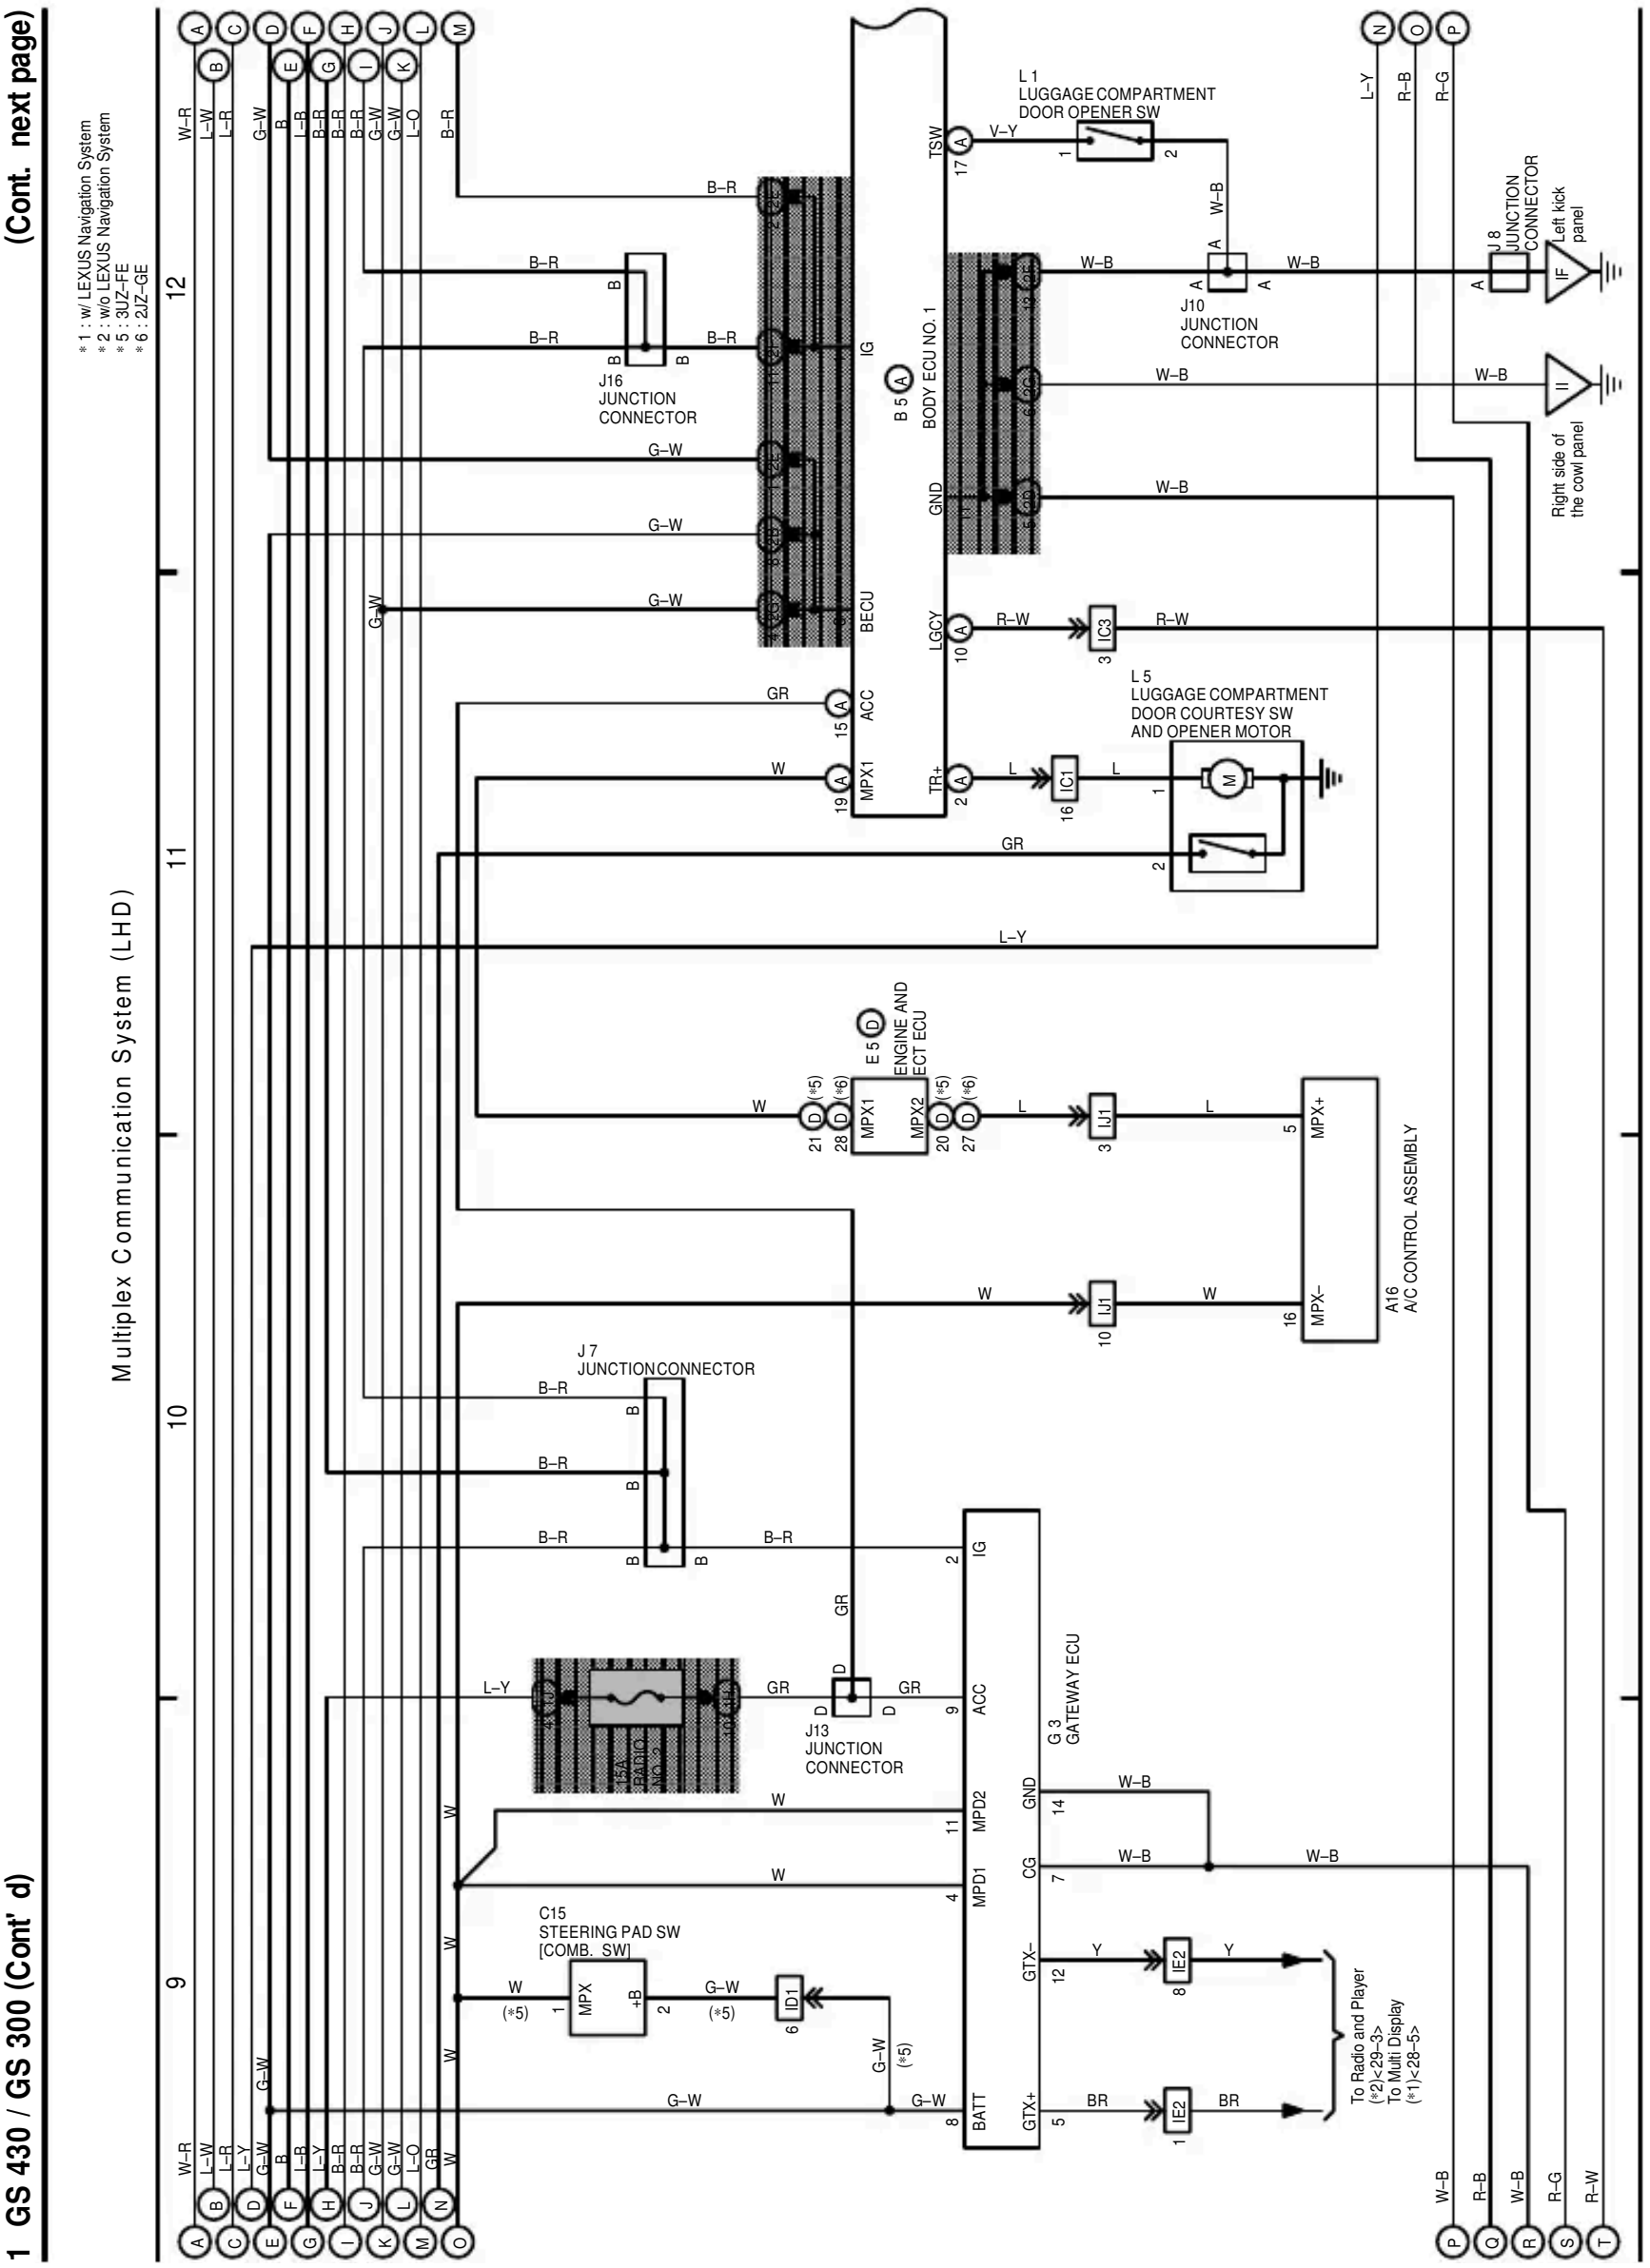

1 GS 430 / GS 300 (Cont' d)

(Cont. next page)

Multiplex Communication System (LHD)

* 5 : 3UZ–FE
* 6 : 2JZ–FE
* 9 : G. C. C.

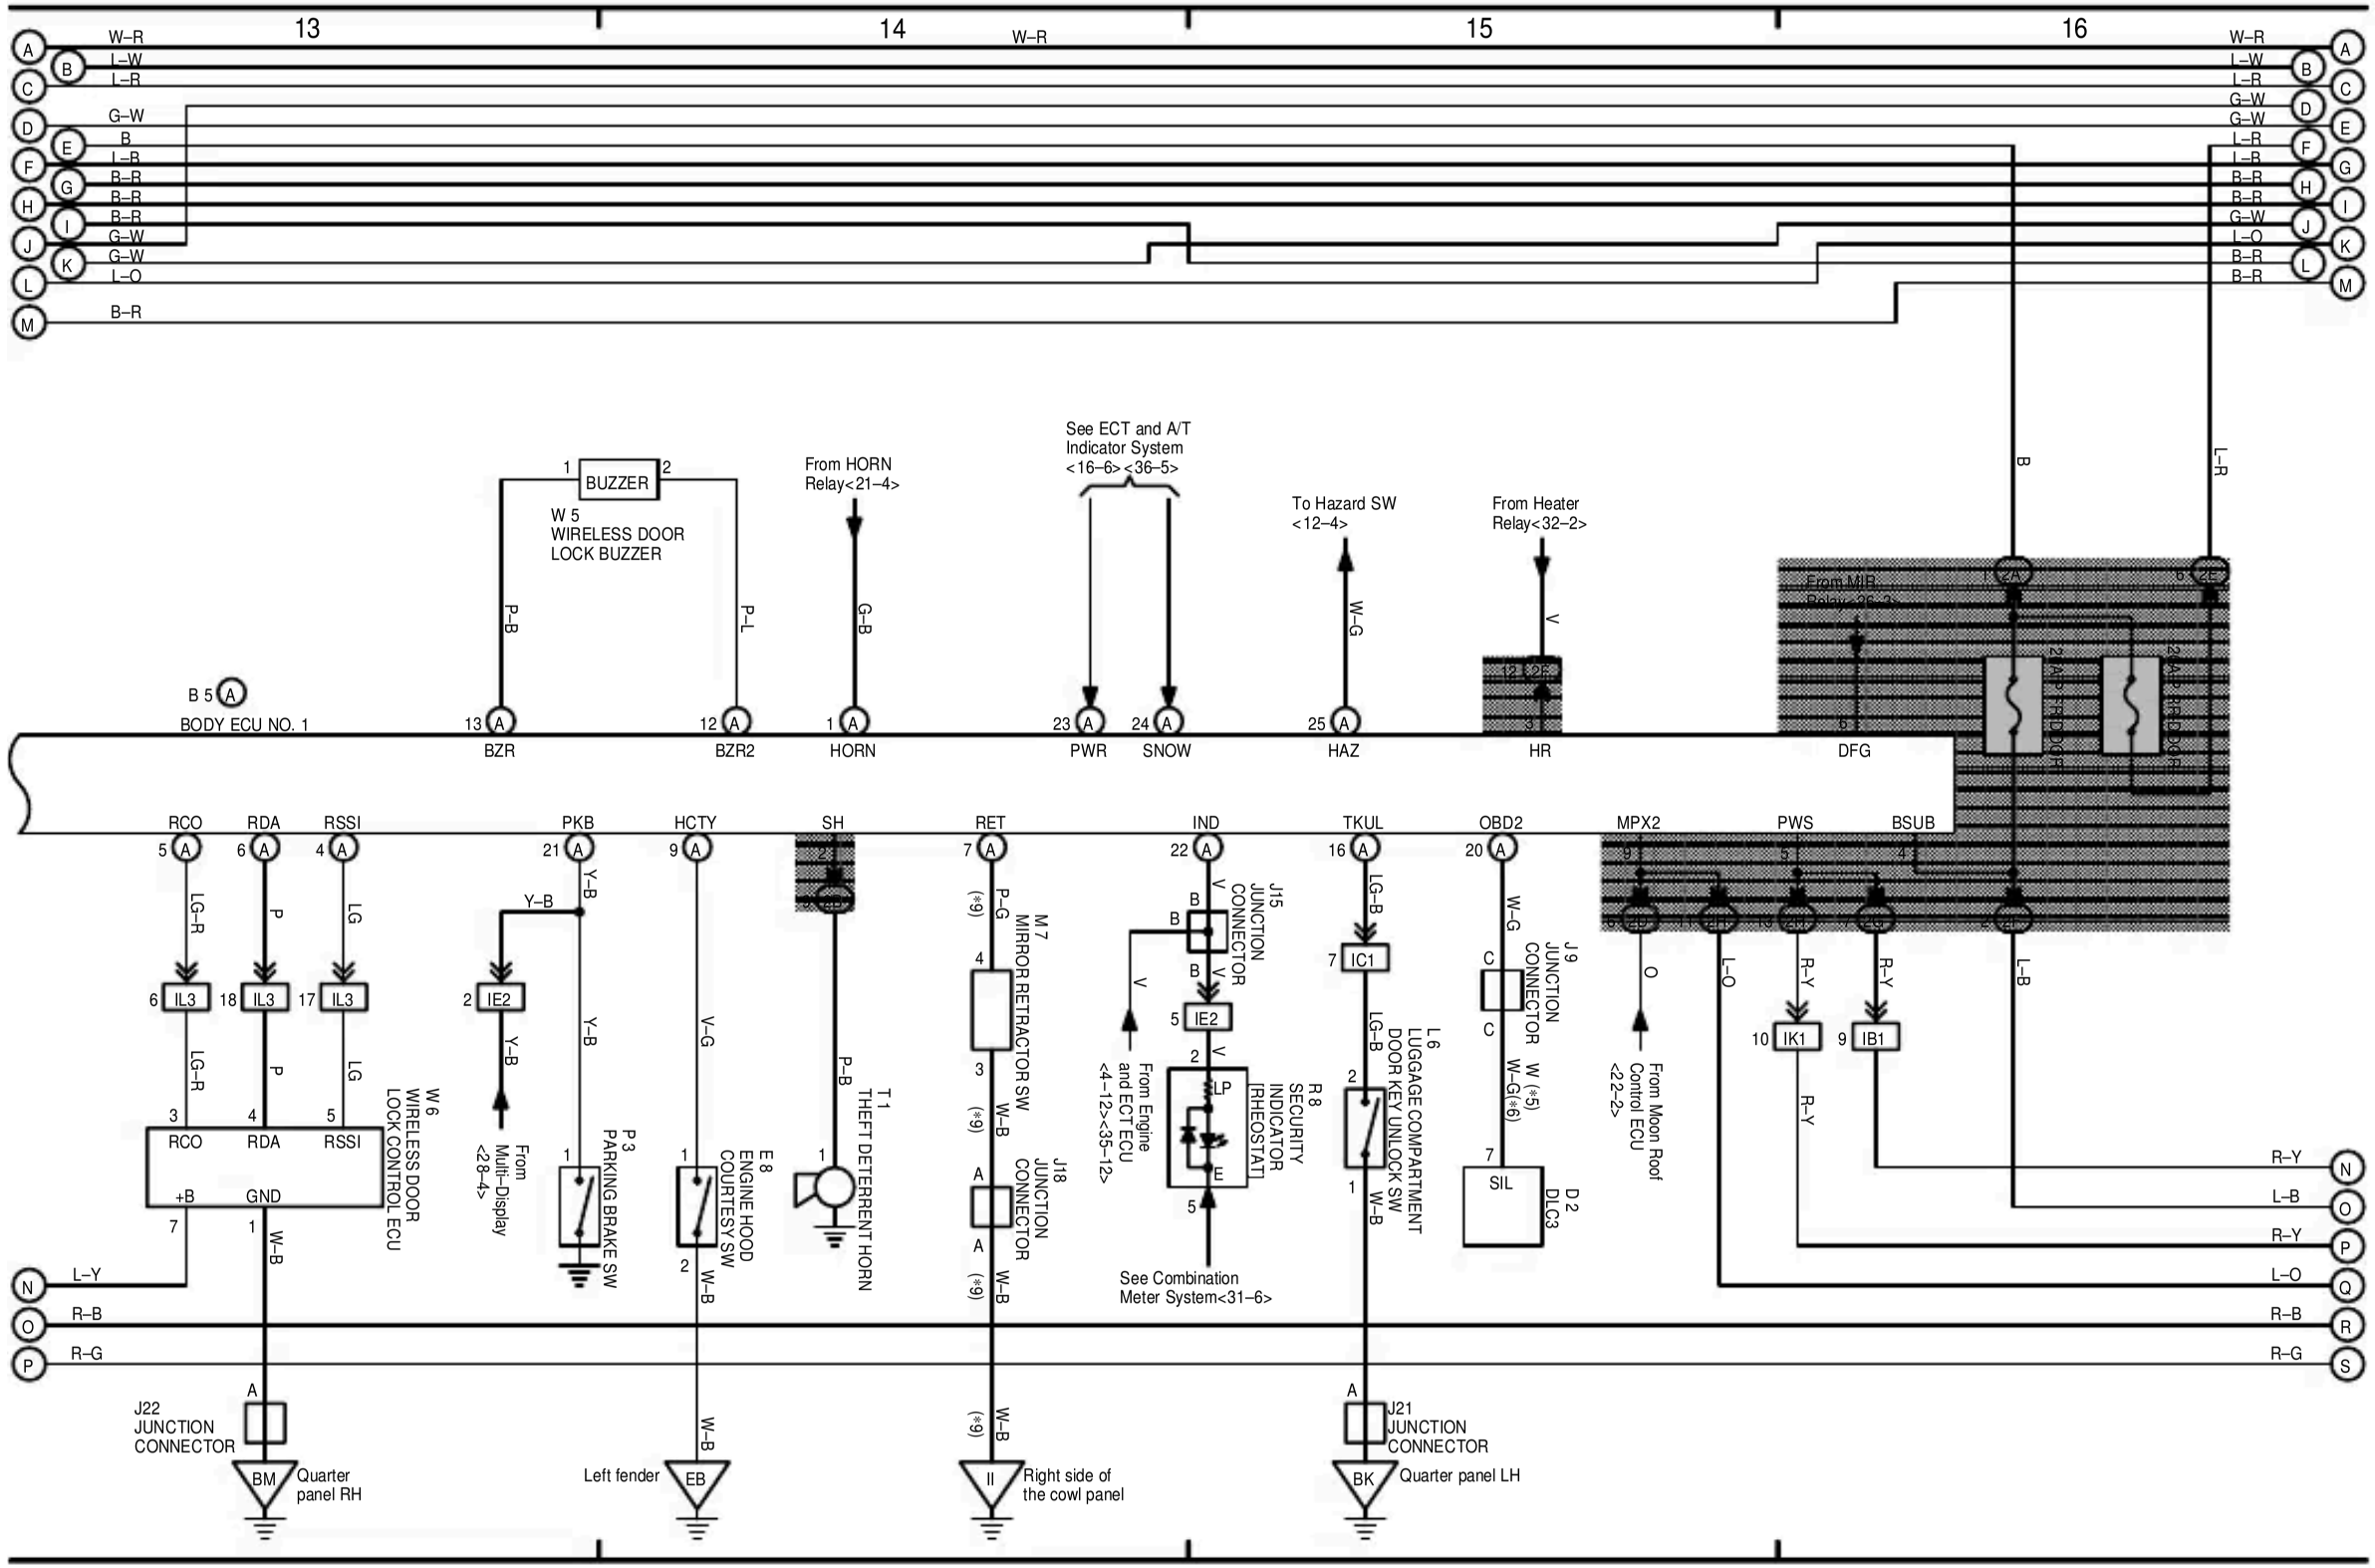

(Cont. next page)

1 GS 430 / GS 300 (Cont' d)

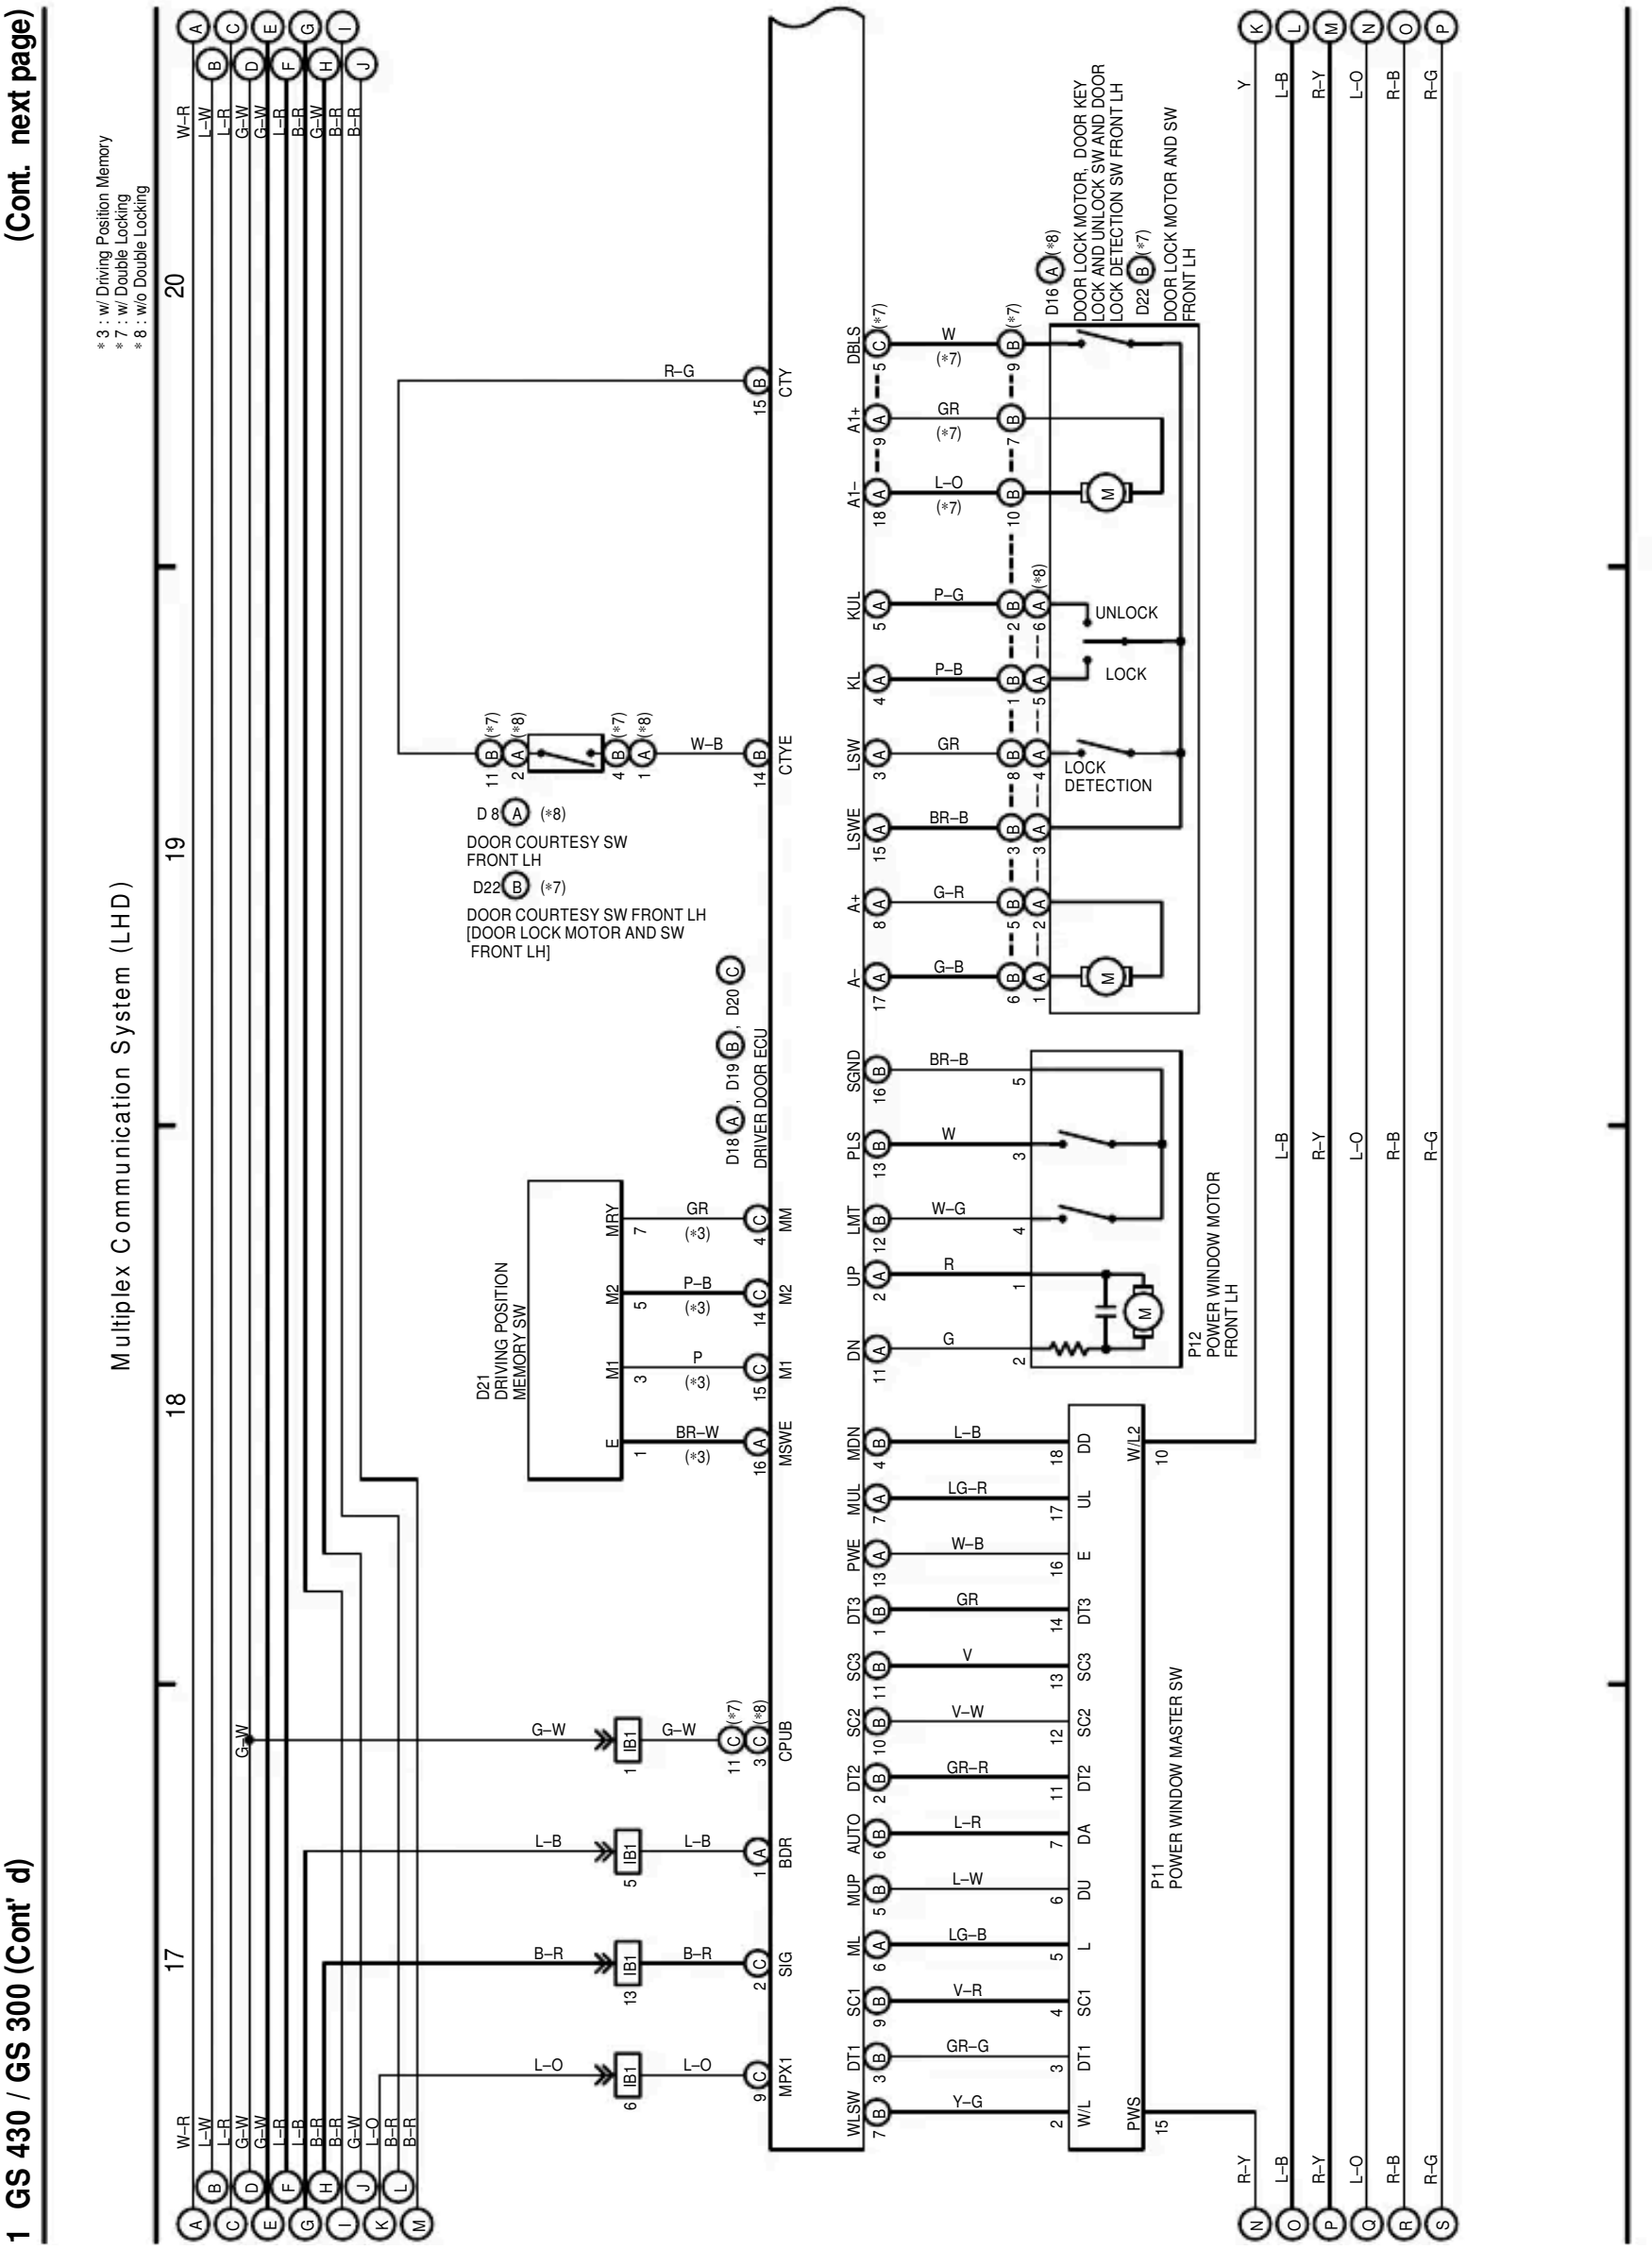

(Cont. next page)

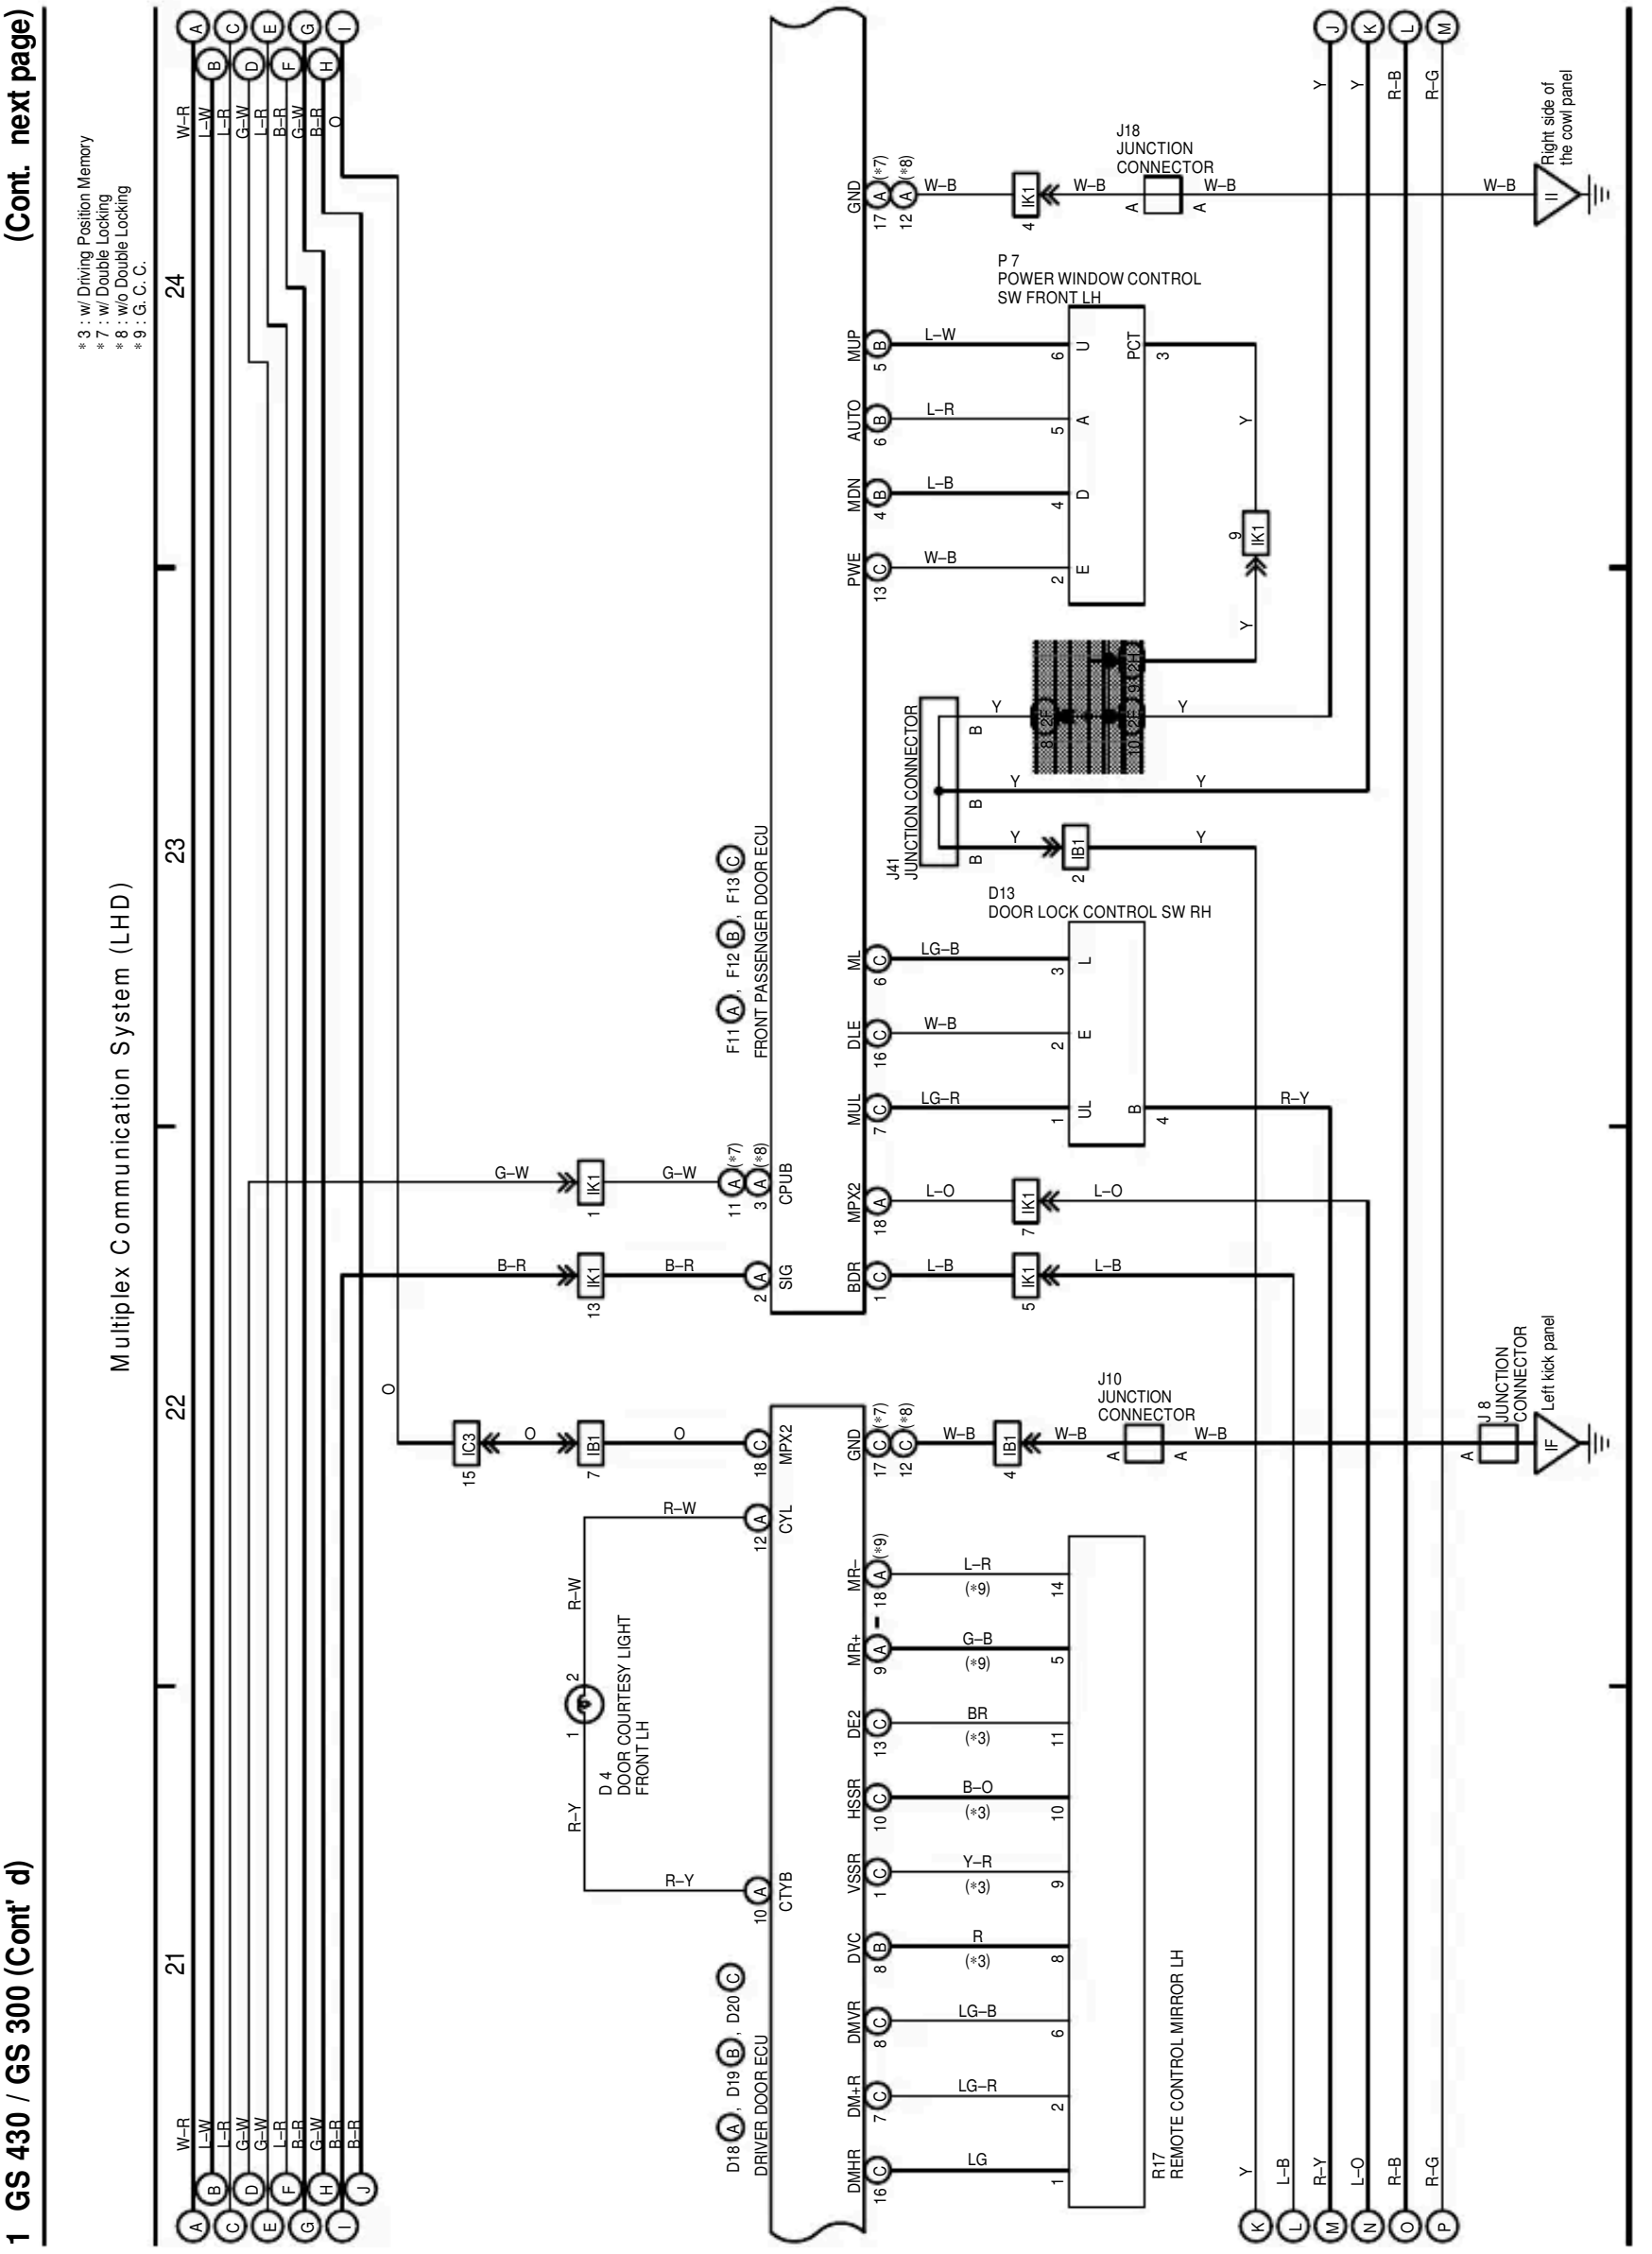

(Cont. next page)

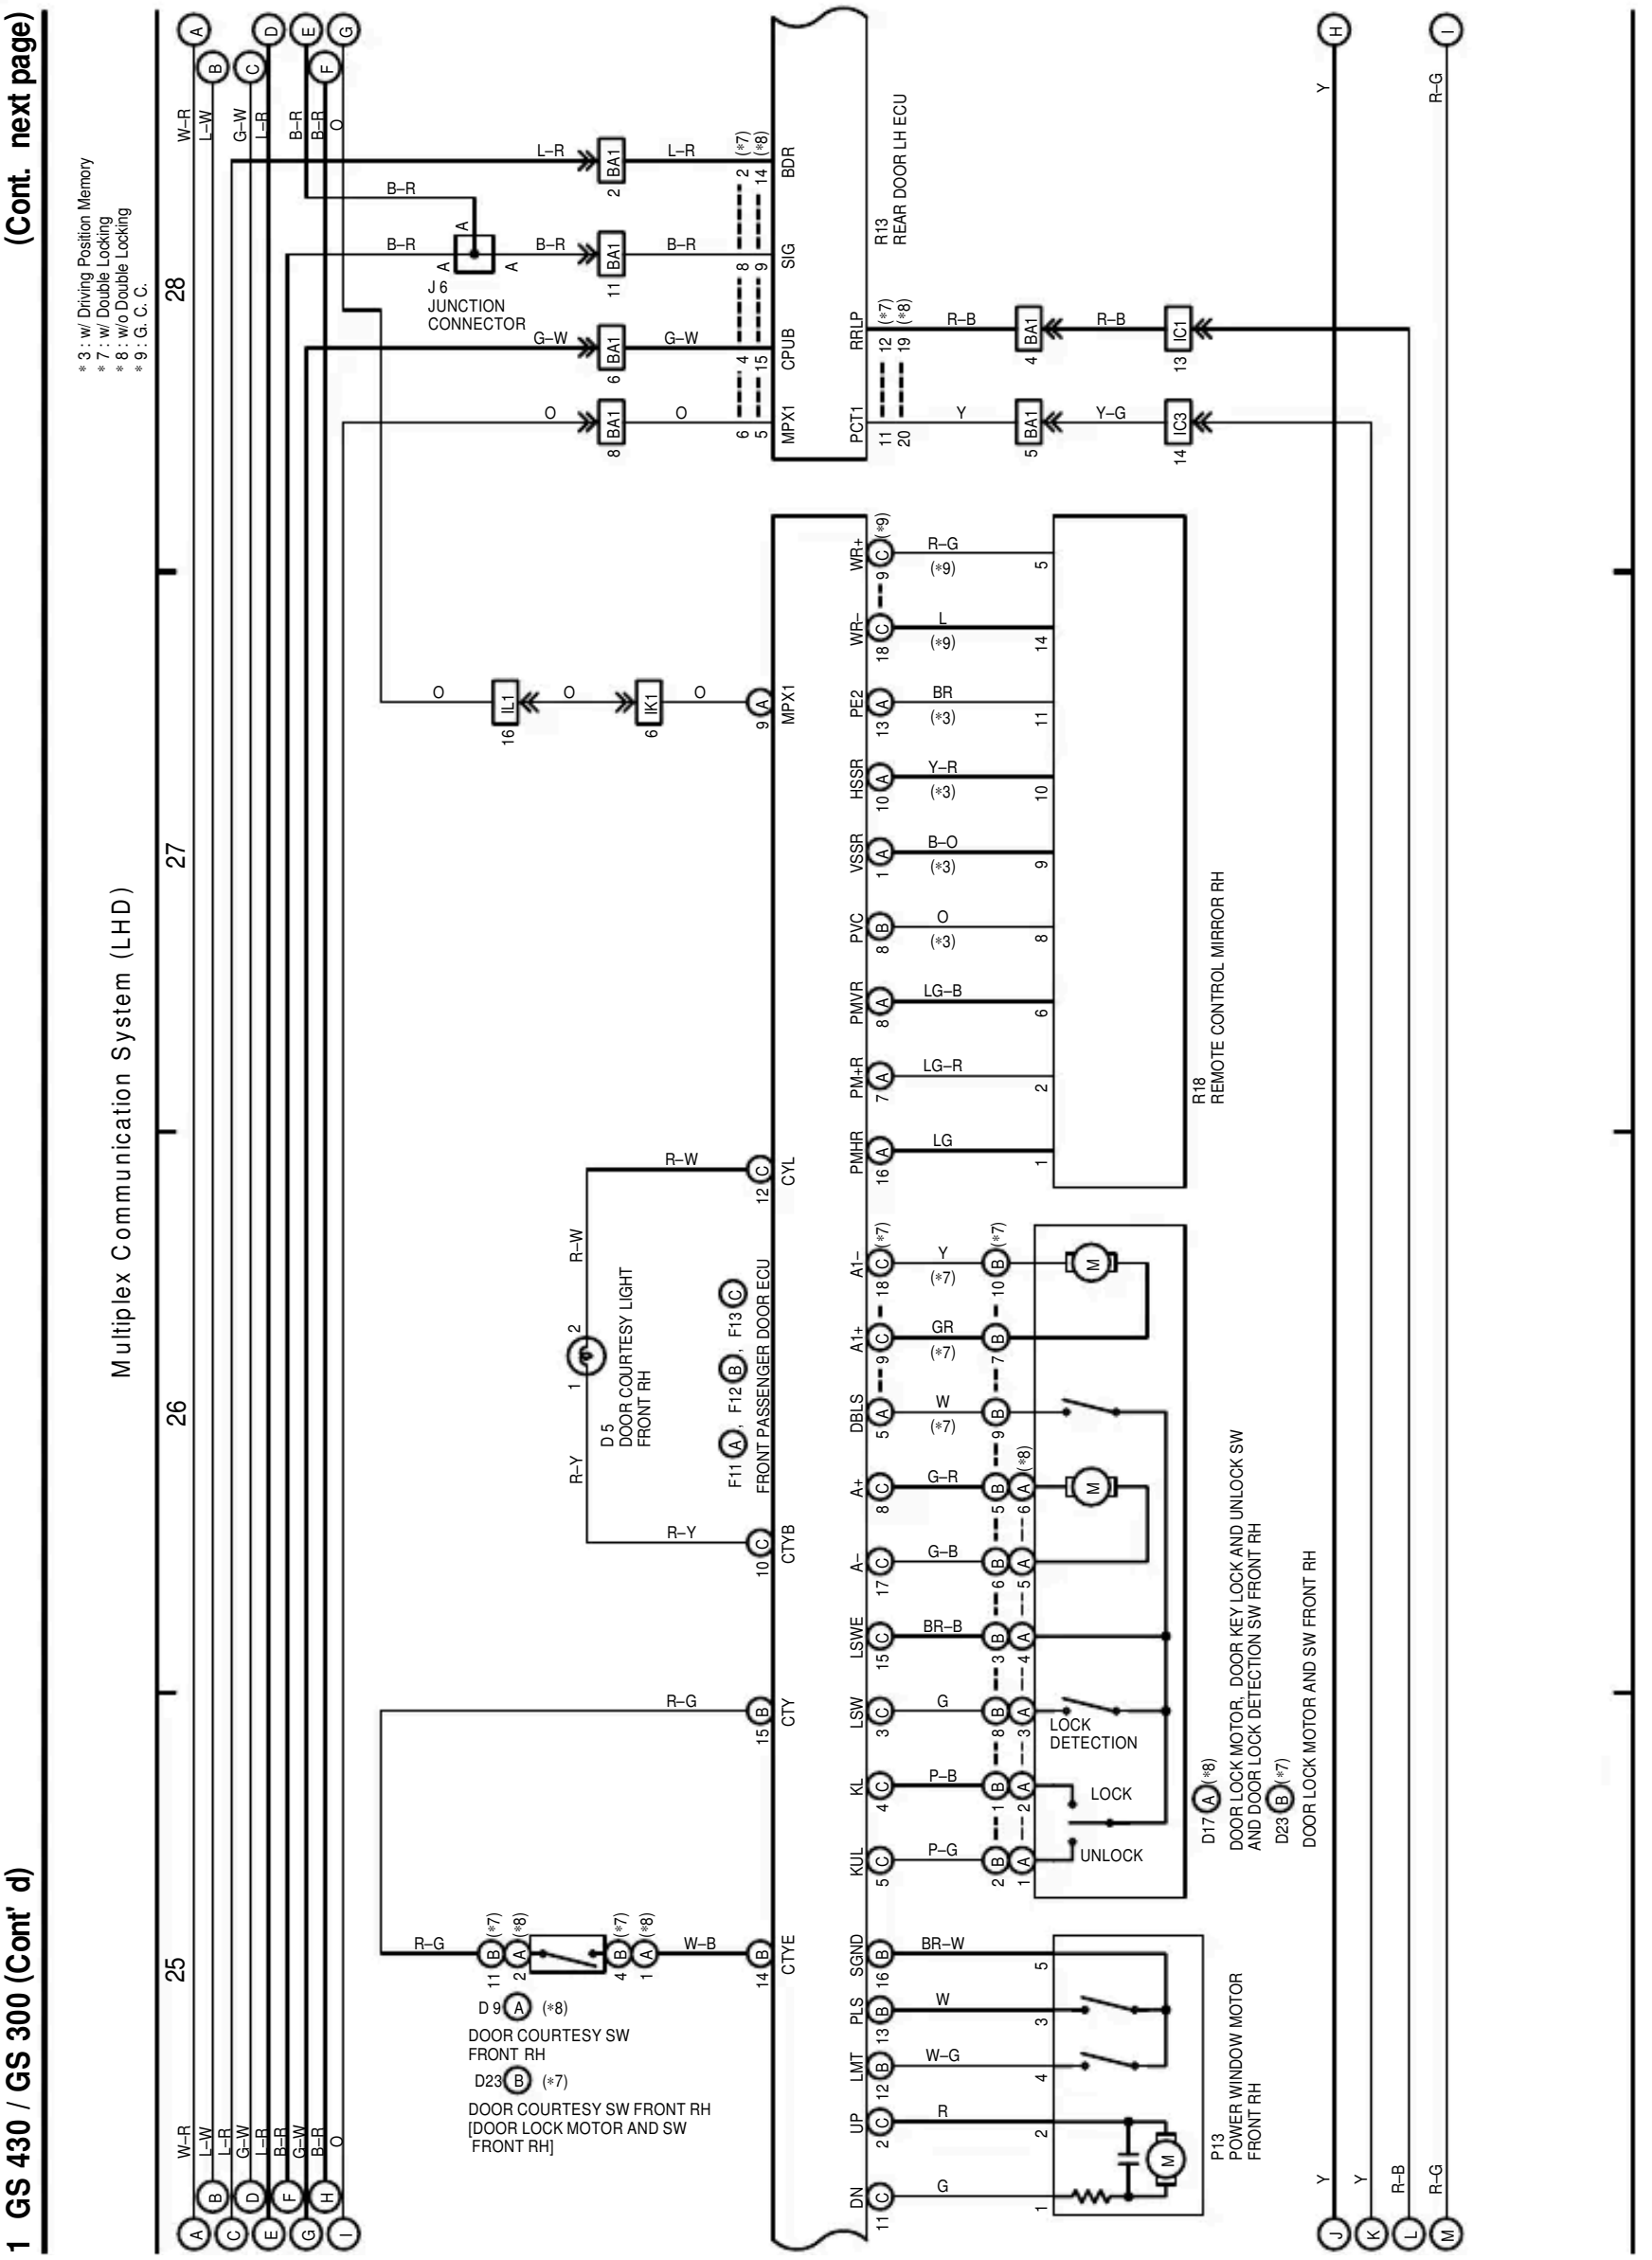

(Cont. next page)

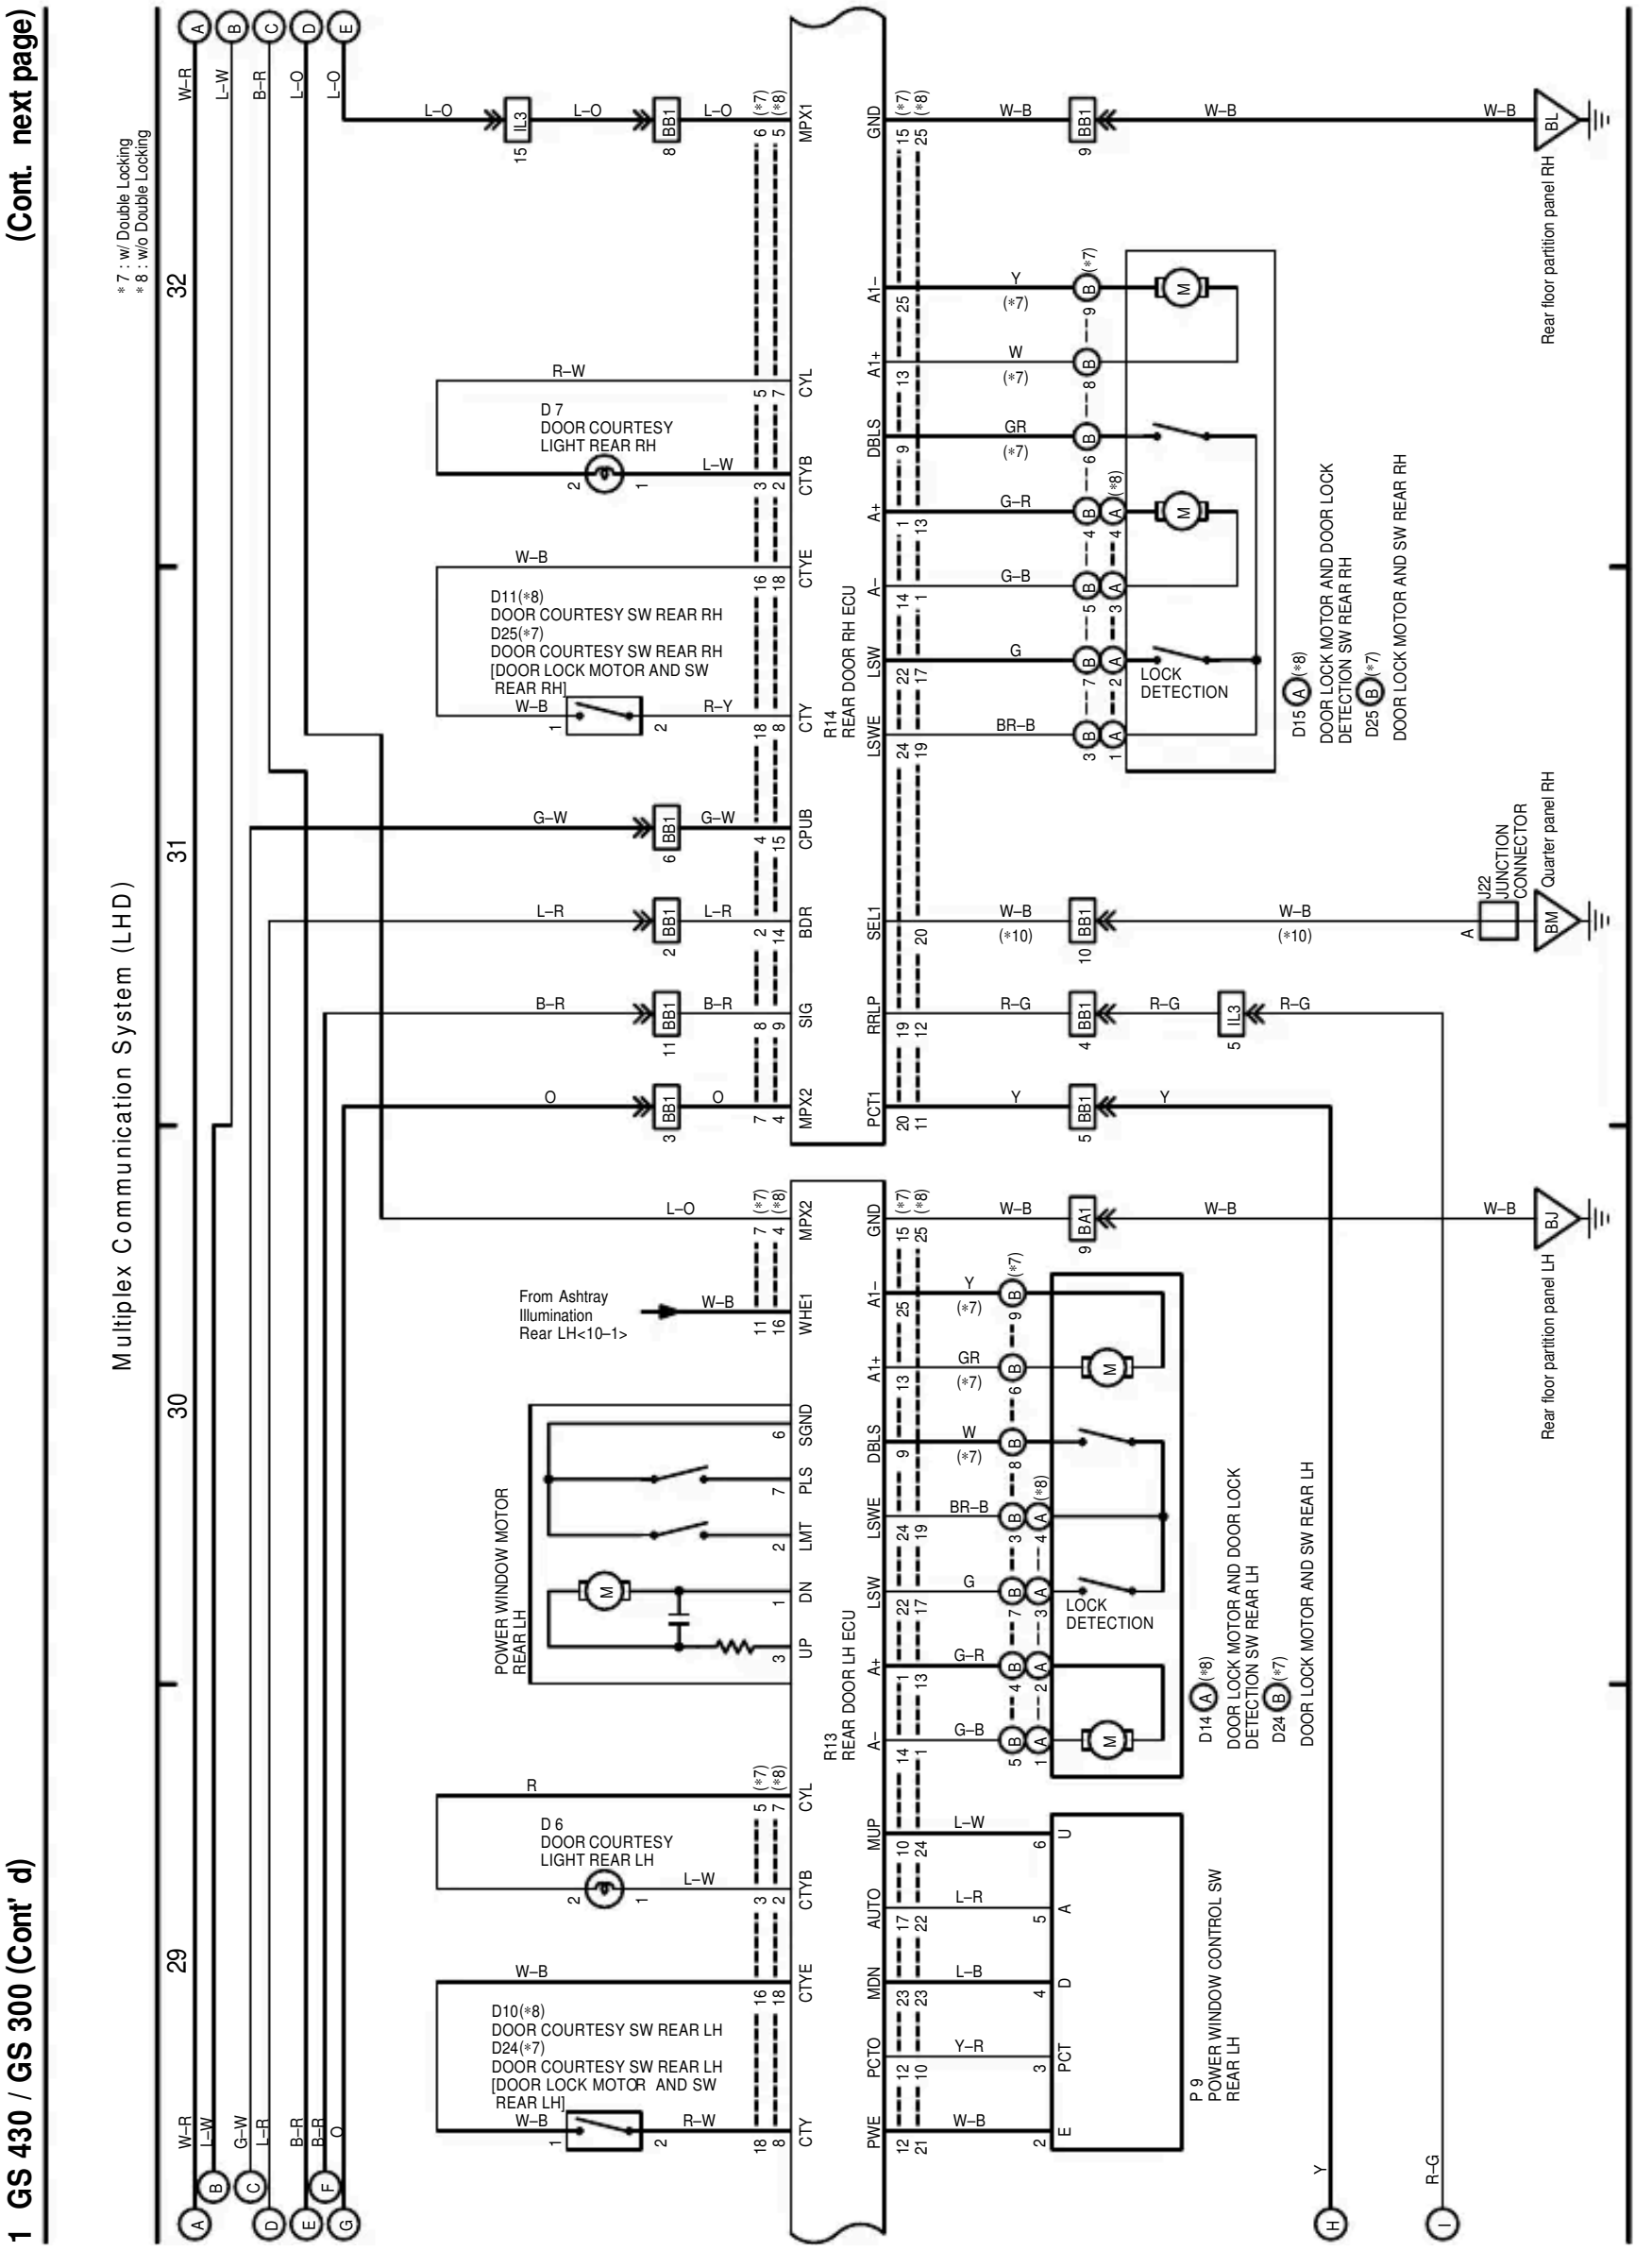

I OVERALL ELECTRICAL WIRING DIAGRAM

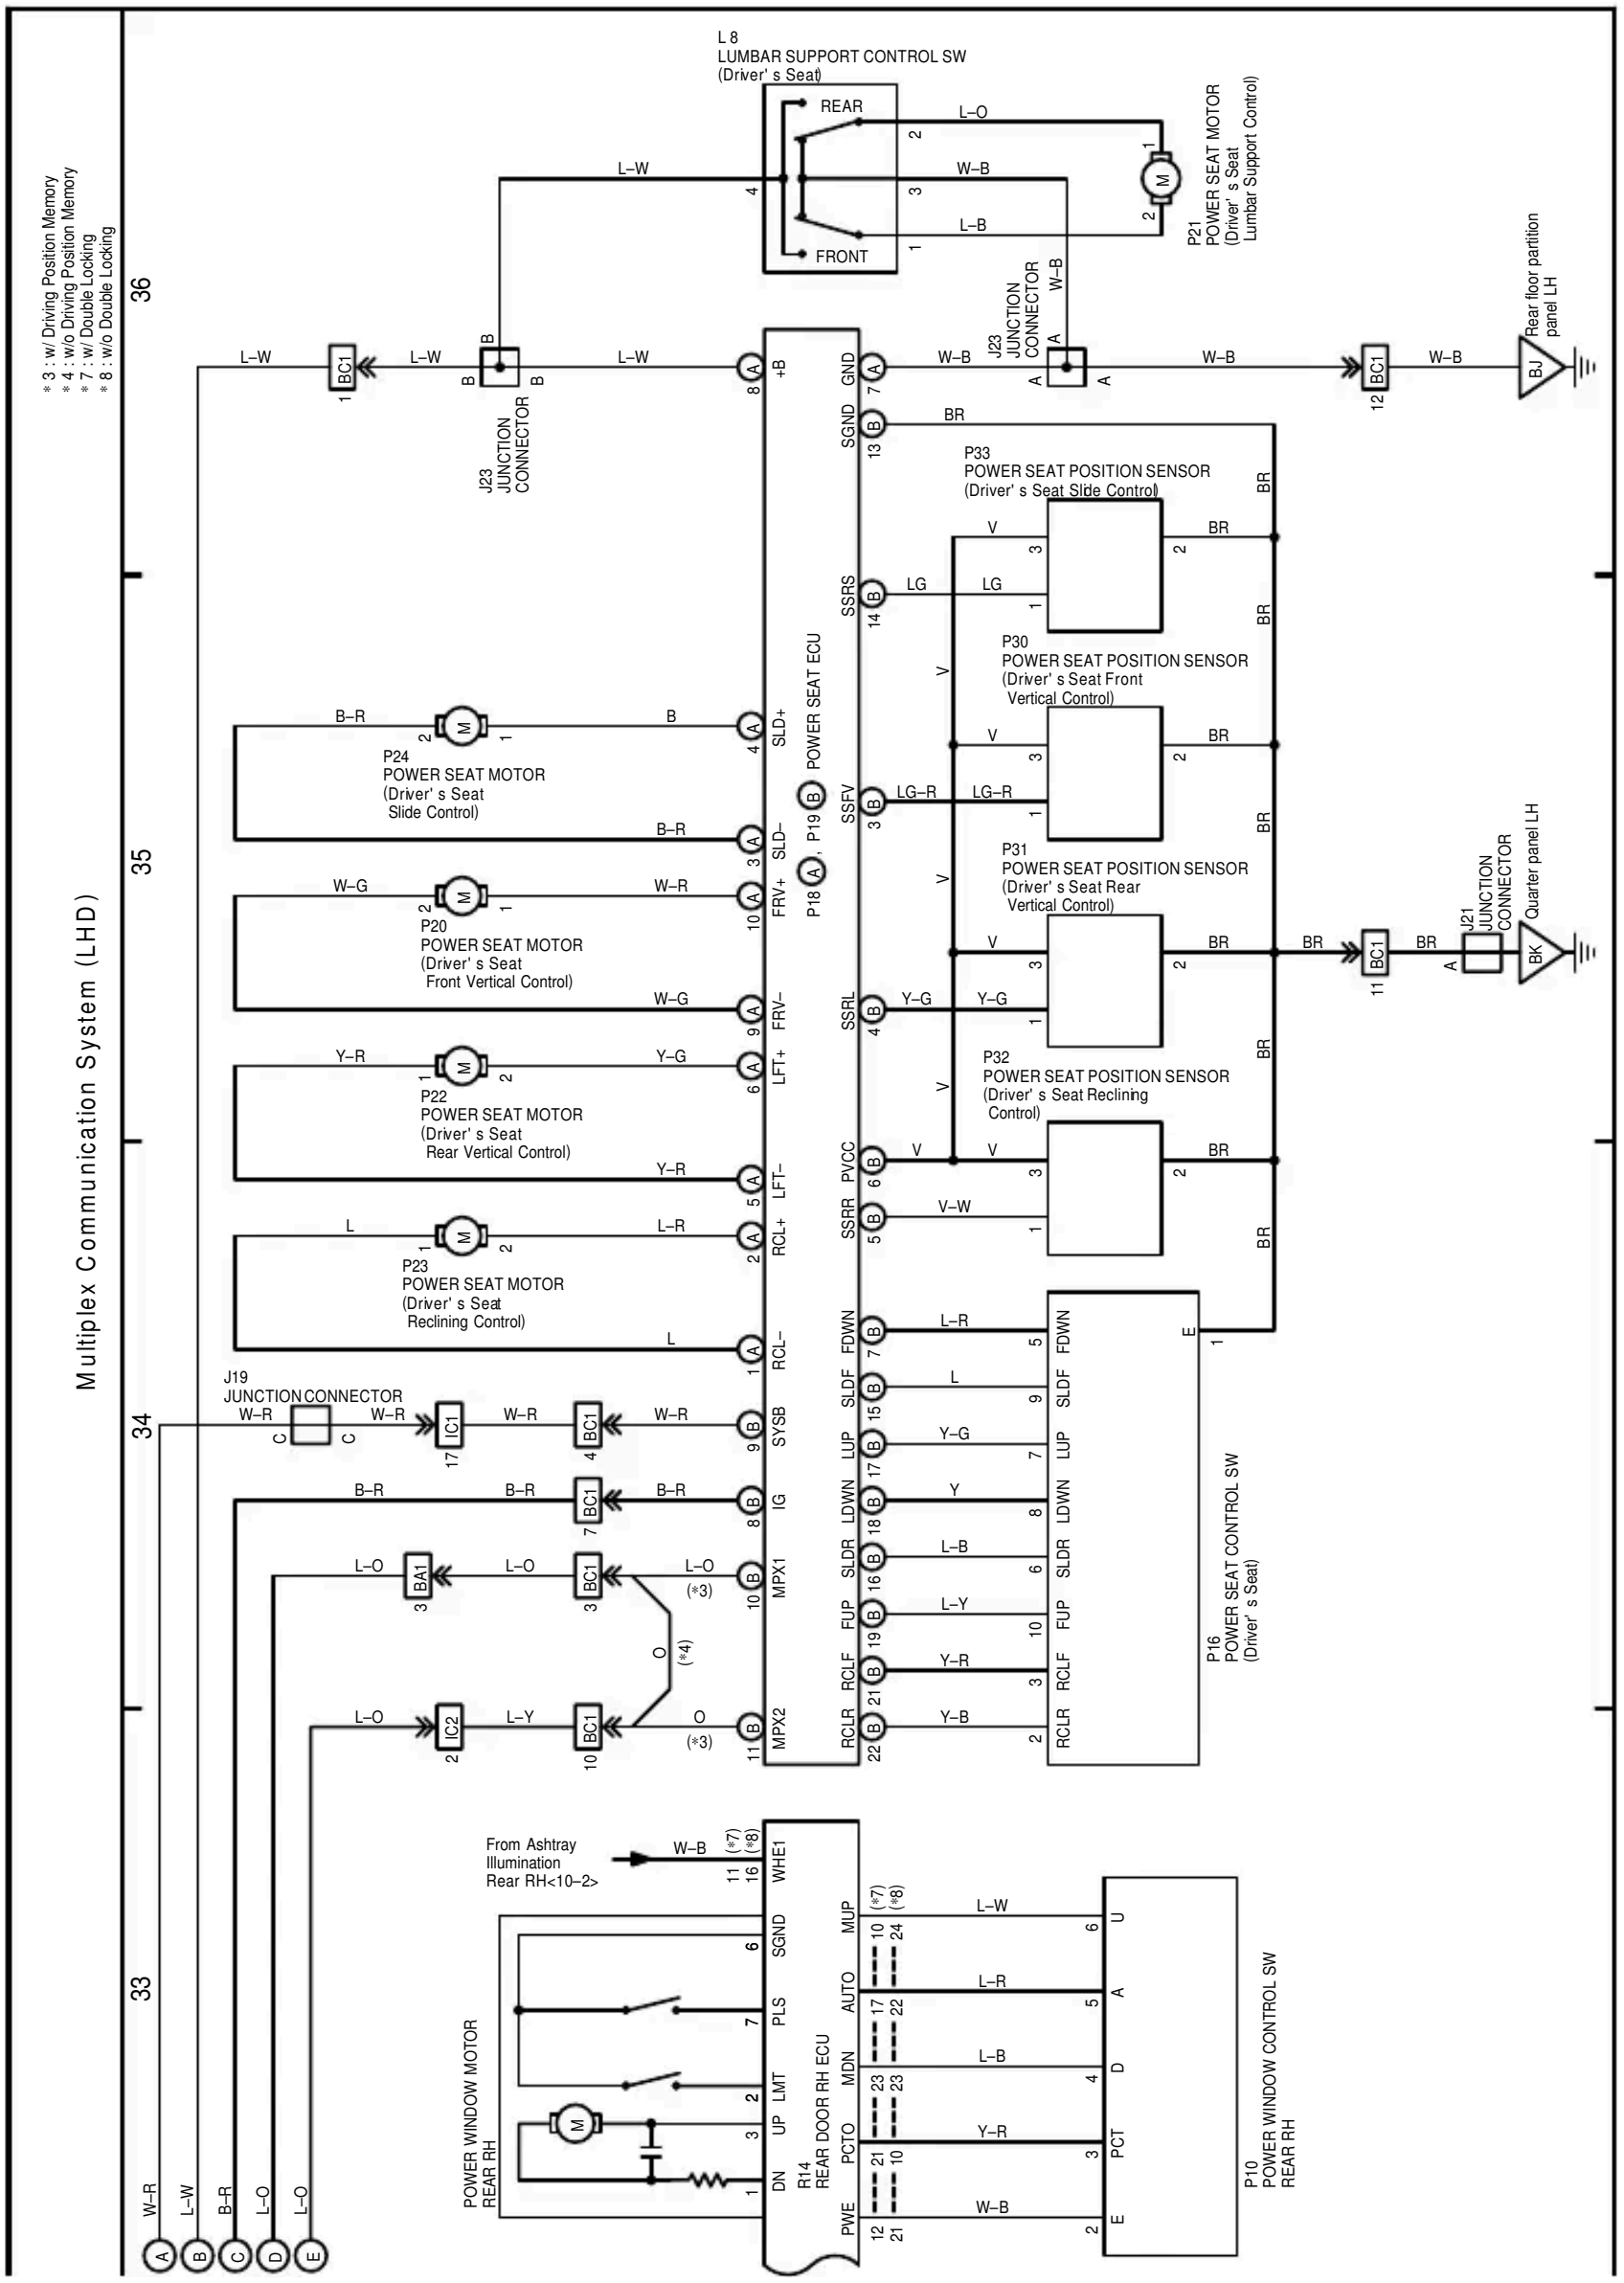

I OVERALL ELECTRICAL WIRING DIAGRAM

(Cont. next page)

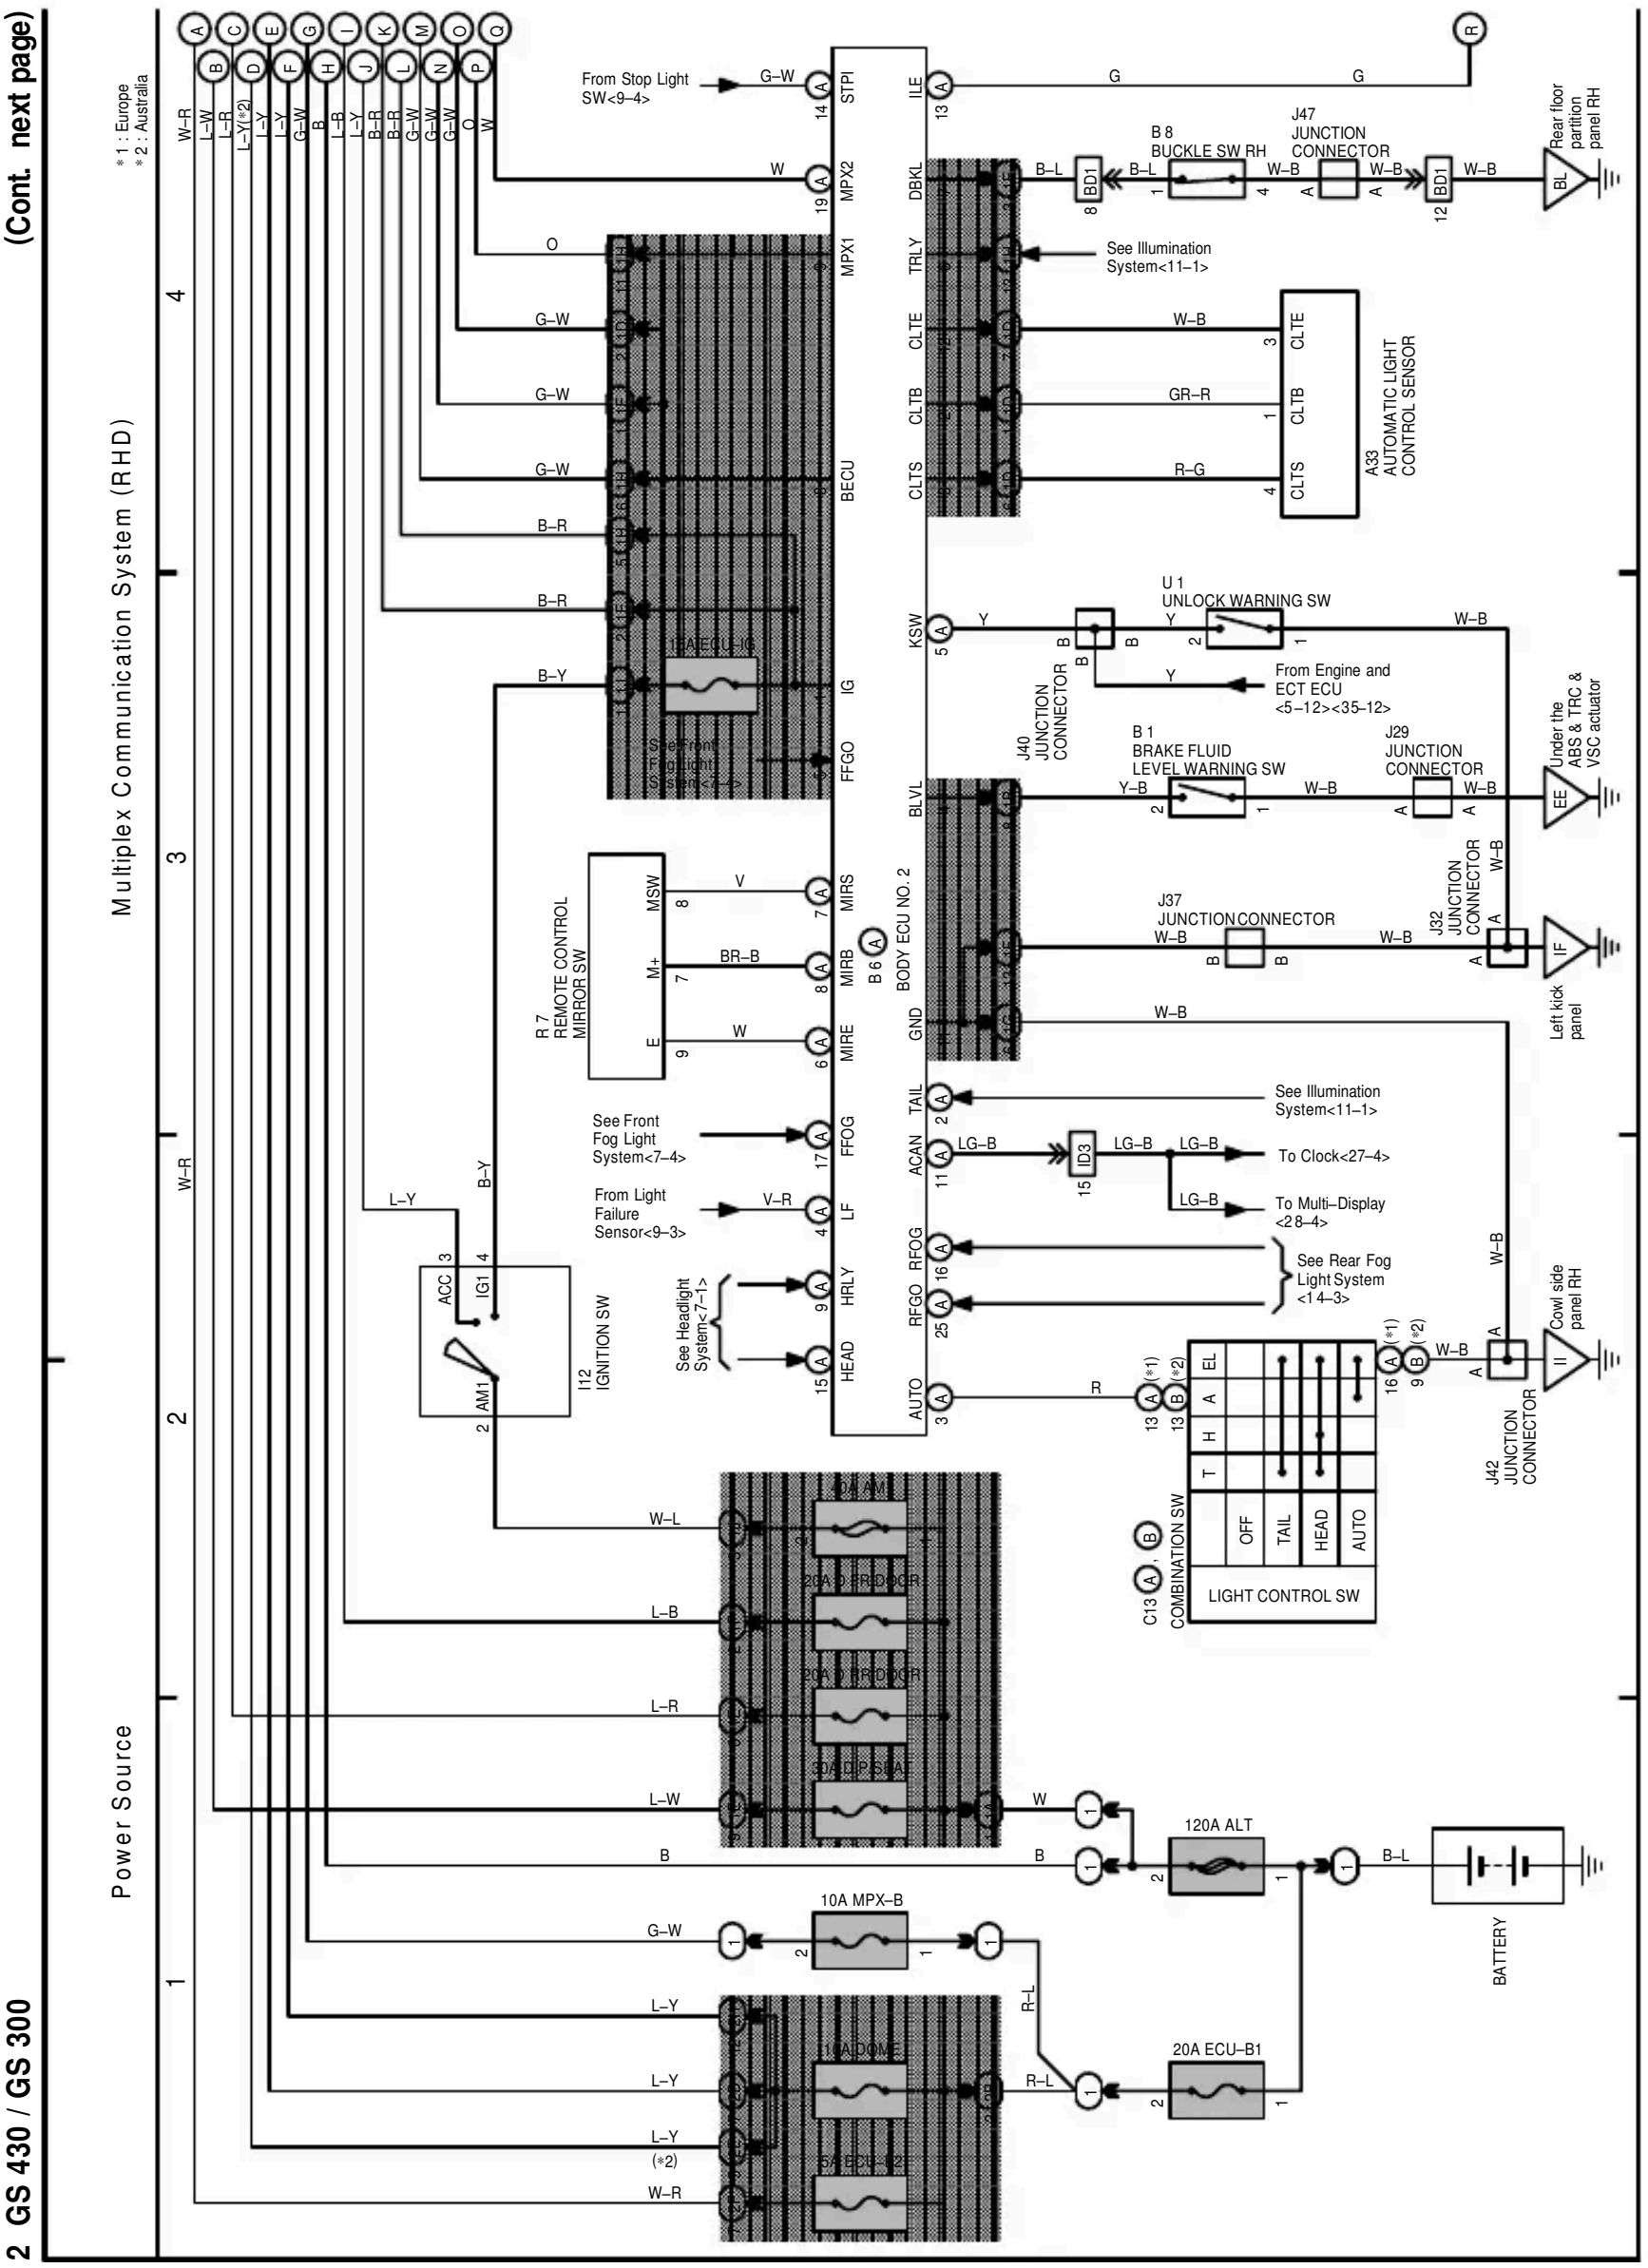

(Cont. next page)

2 GS 430 / GS 300 (Cont' d)

Multiplex Communication System (RHD)

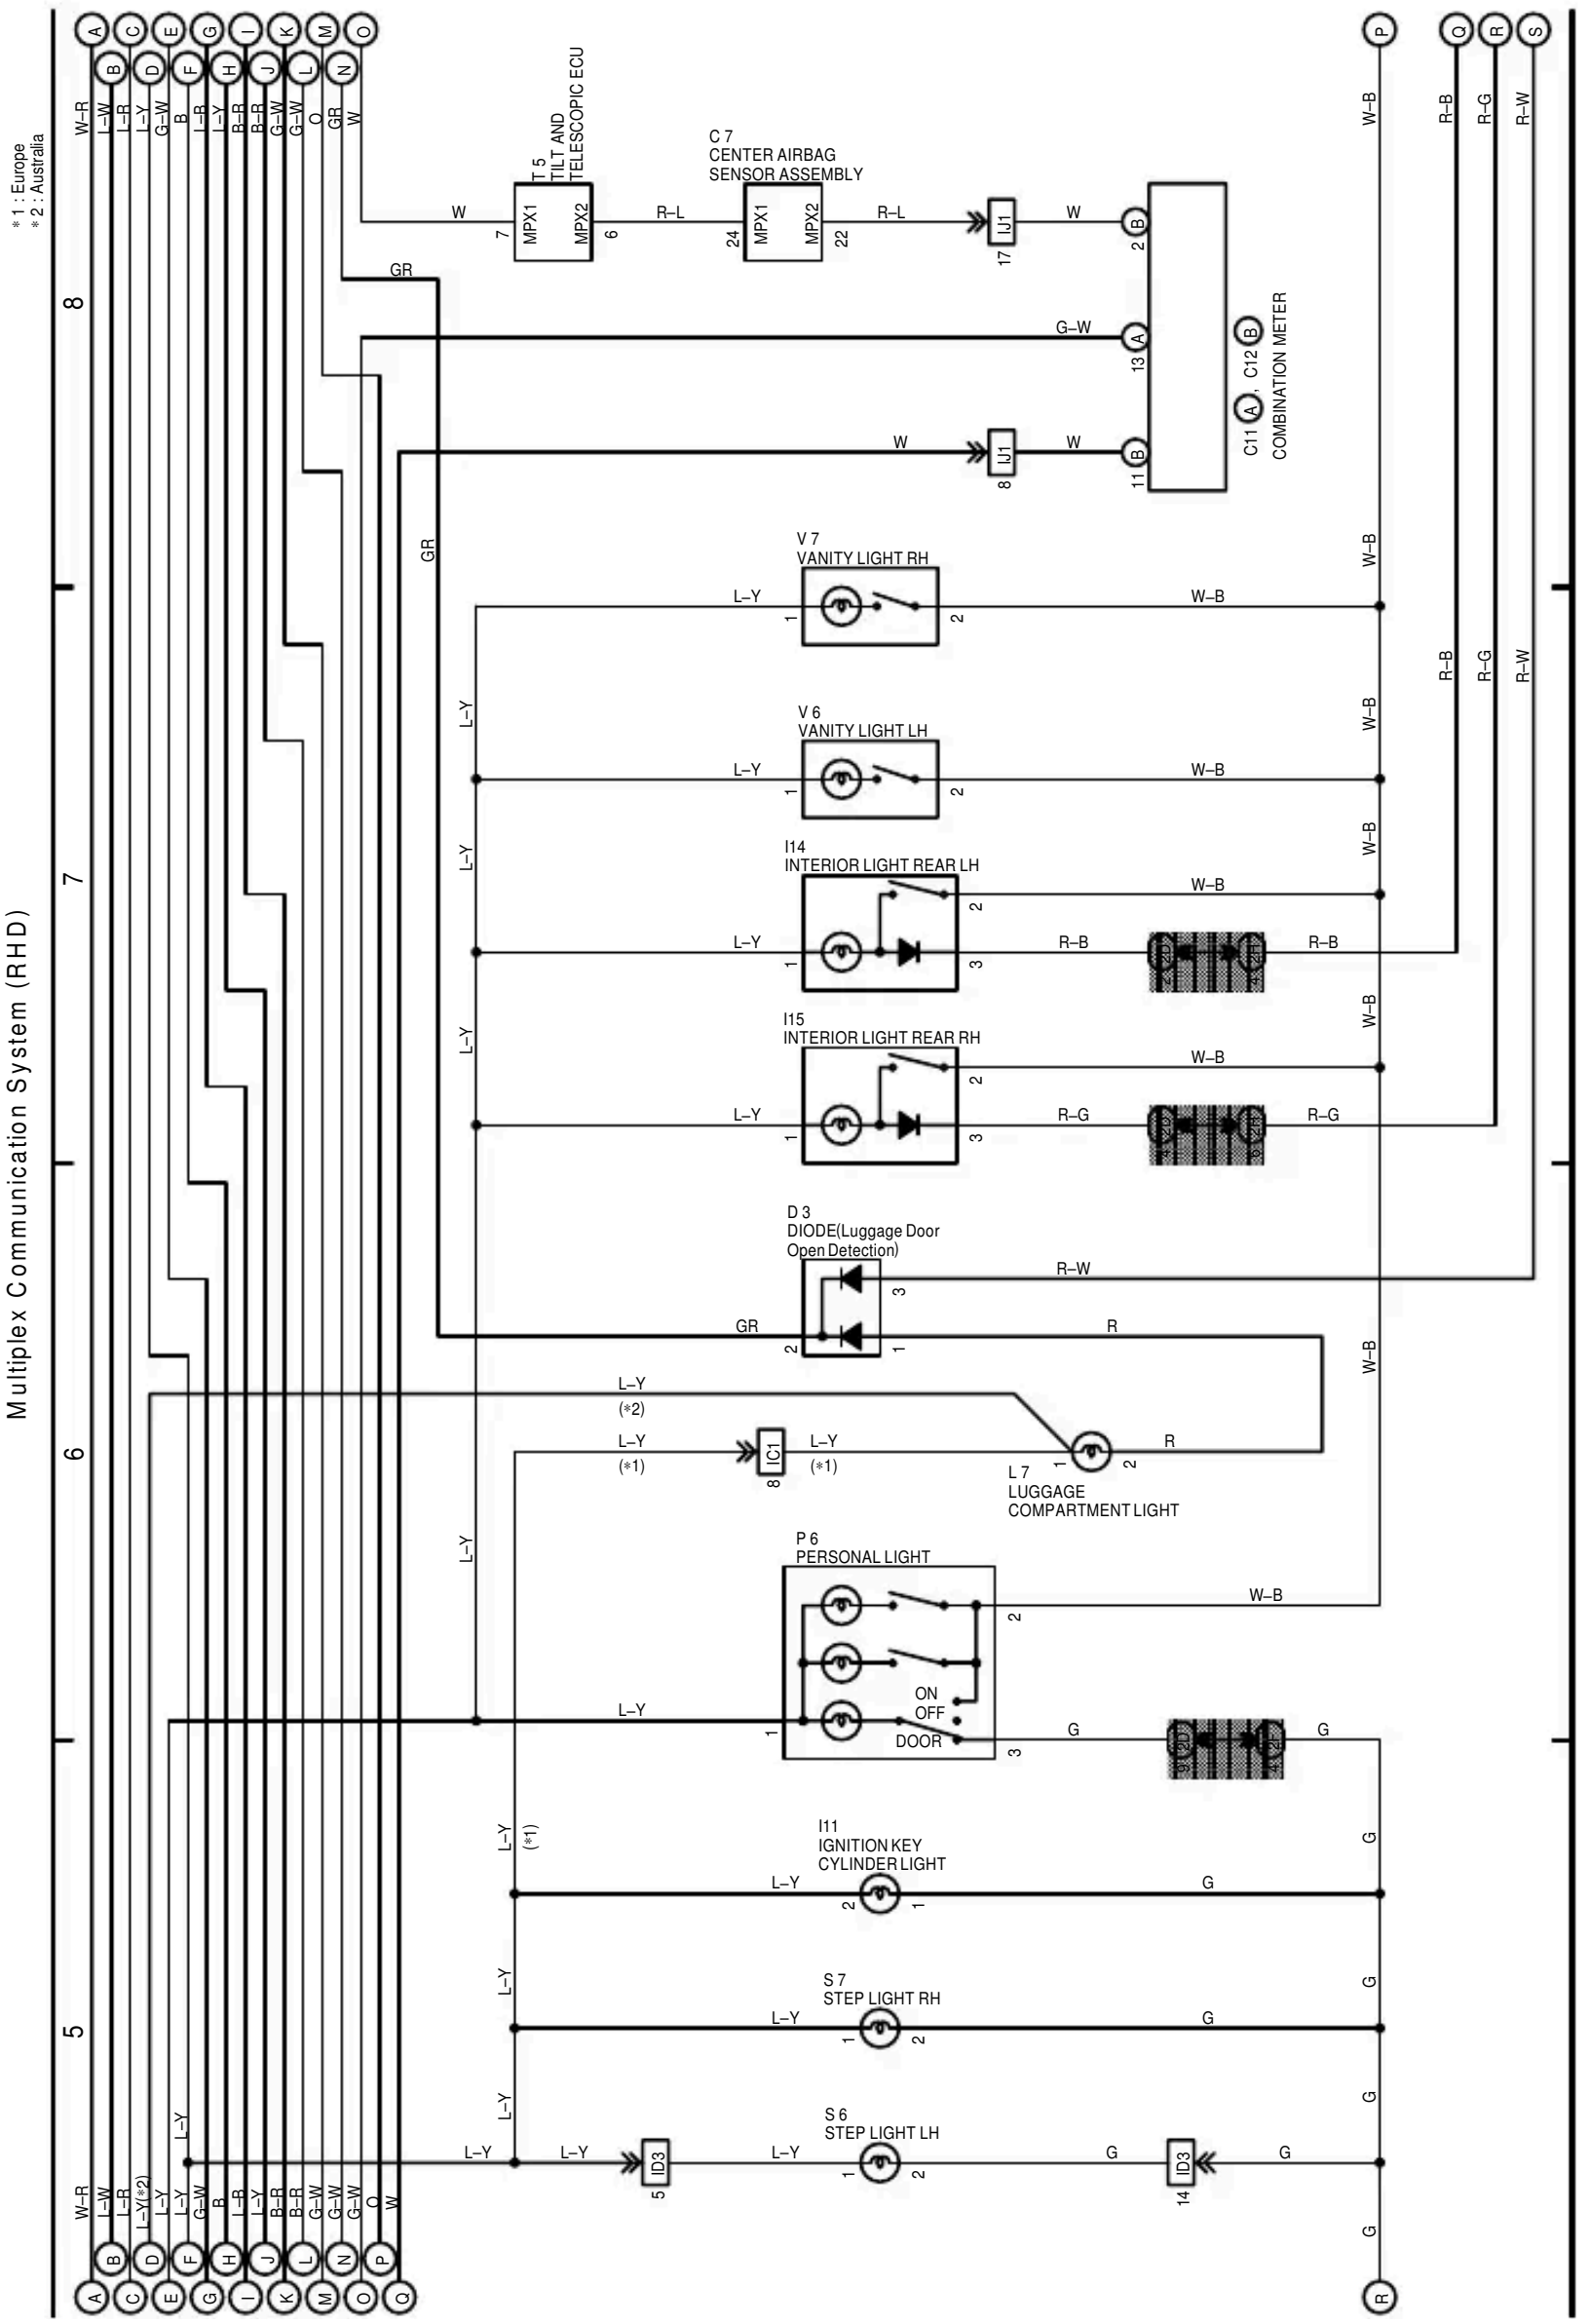

(Cont. next page)

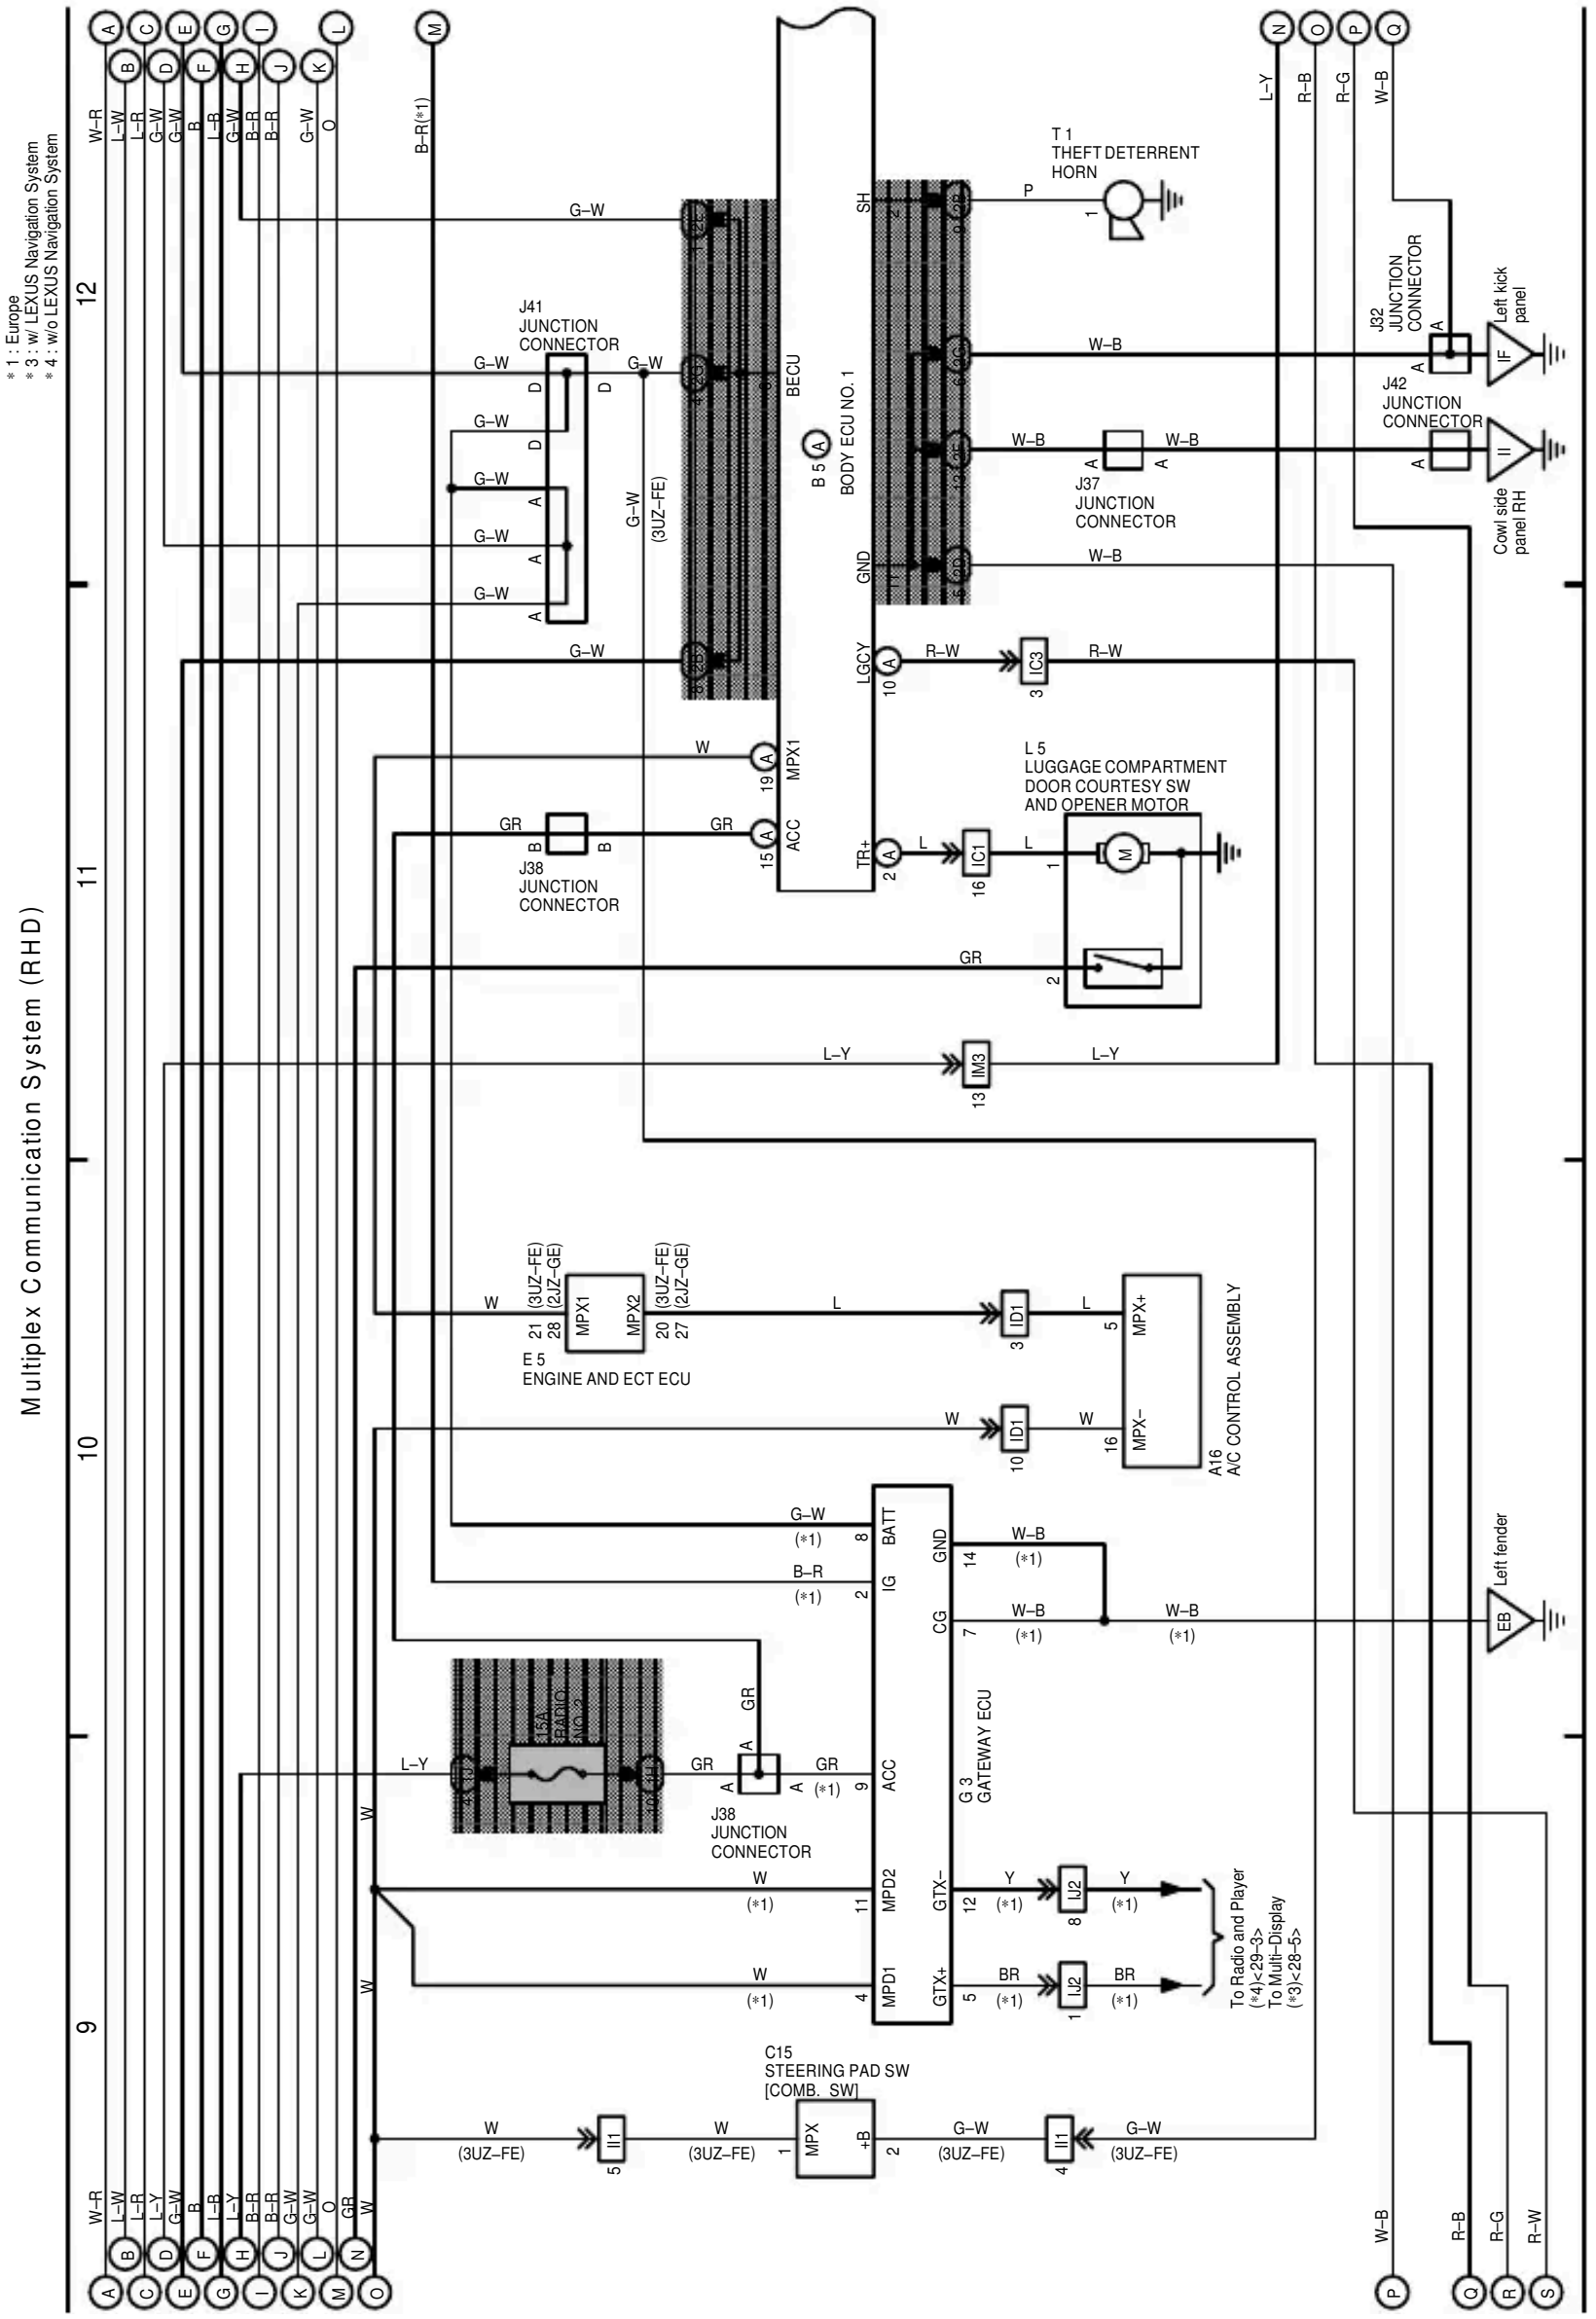

(Cont. next page)

2 GS 430 / GS 300 (Cont' d)

Multiplex Communication System (RHD)

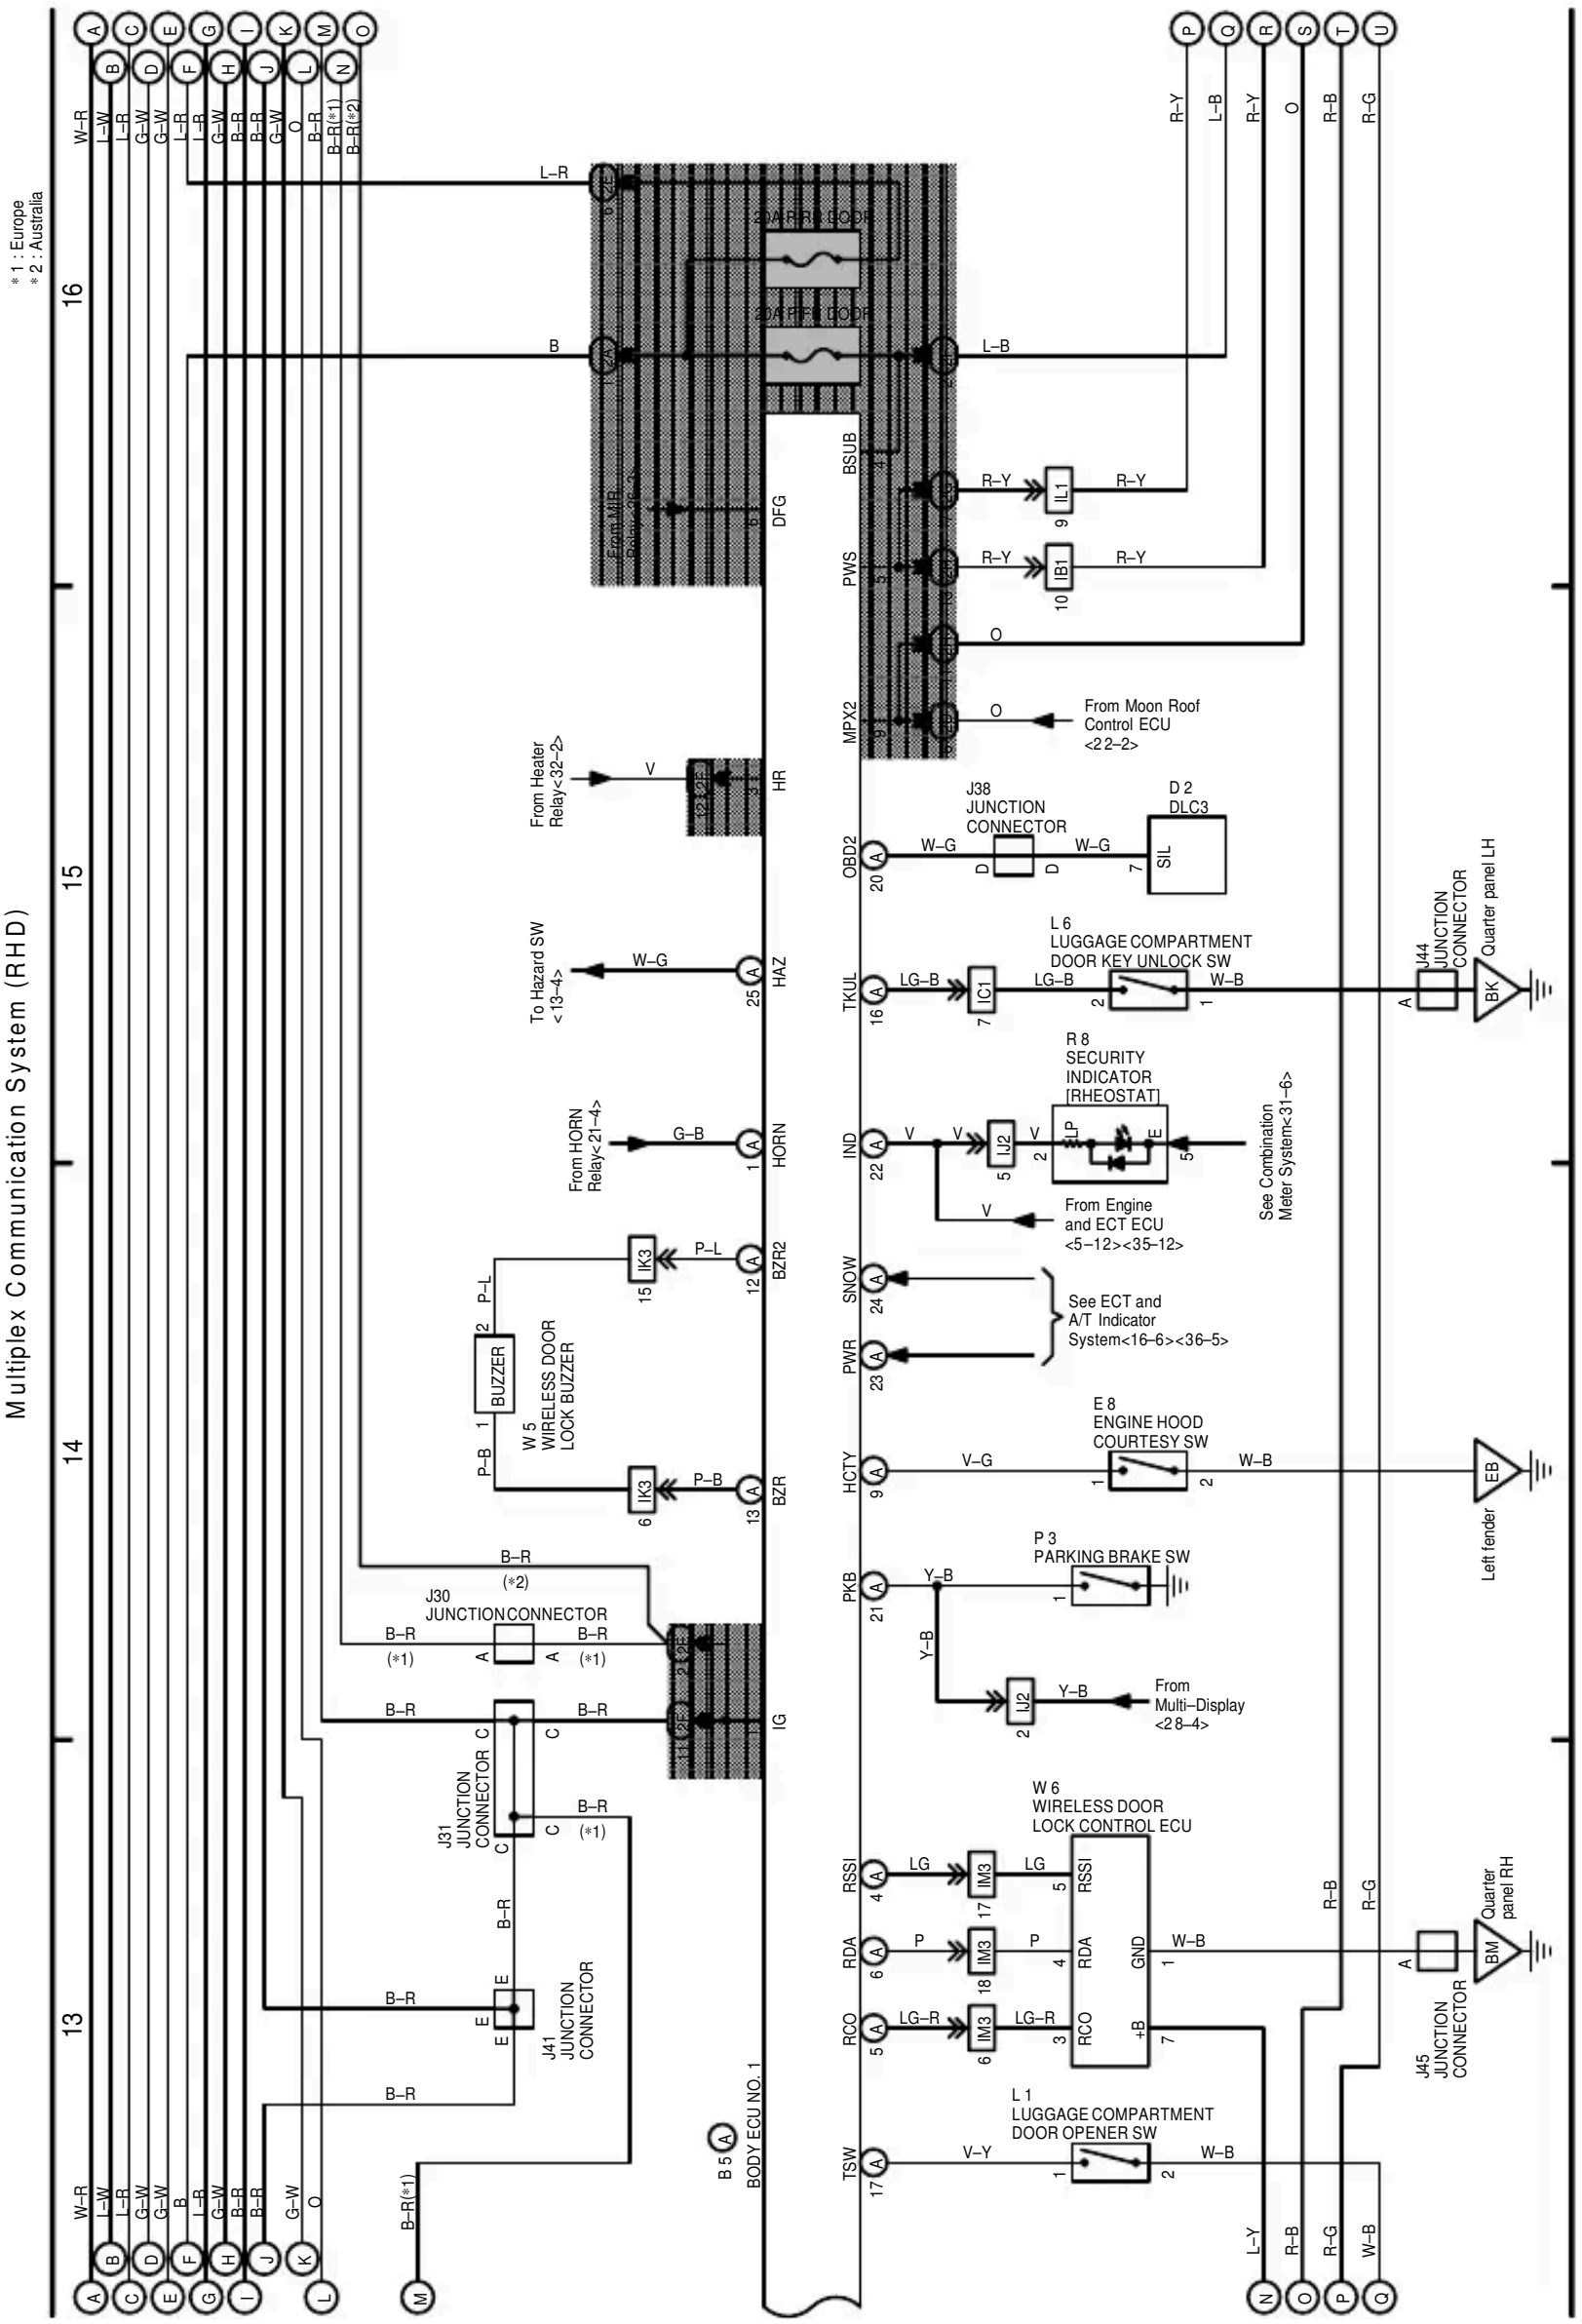

(Cont. next page)

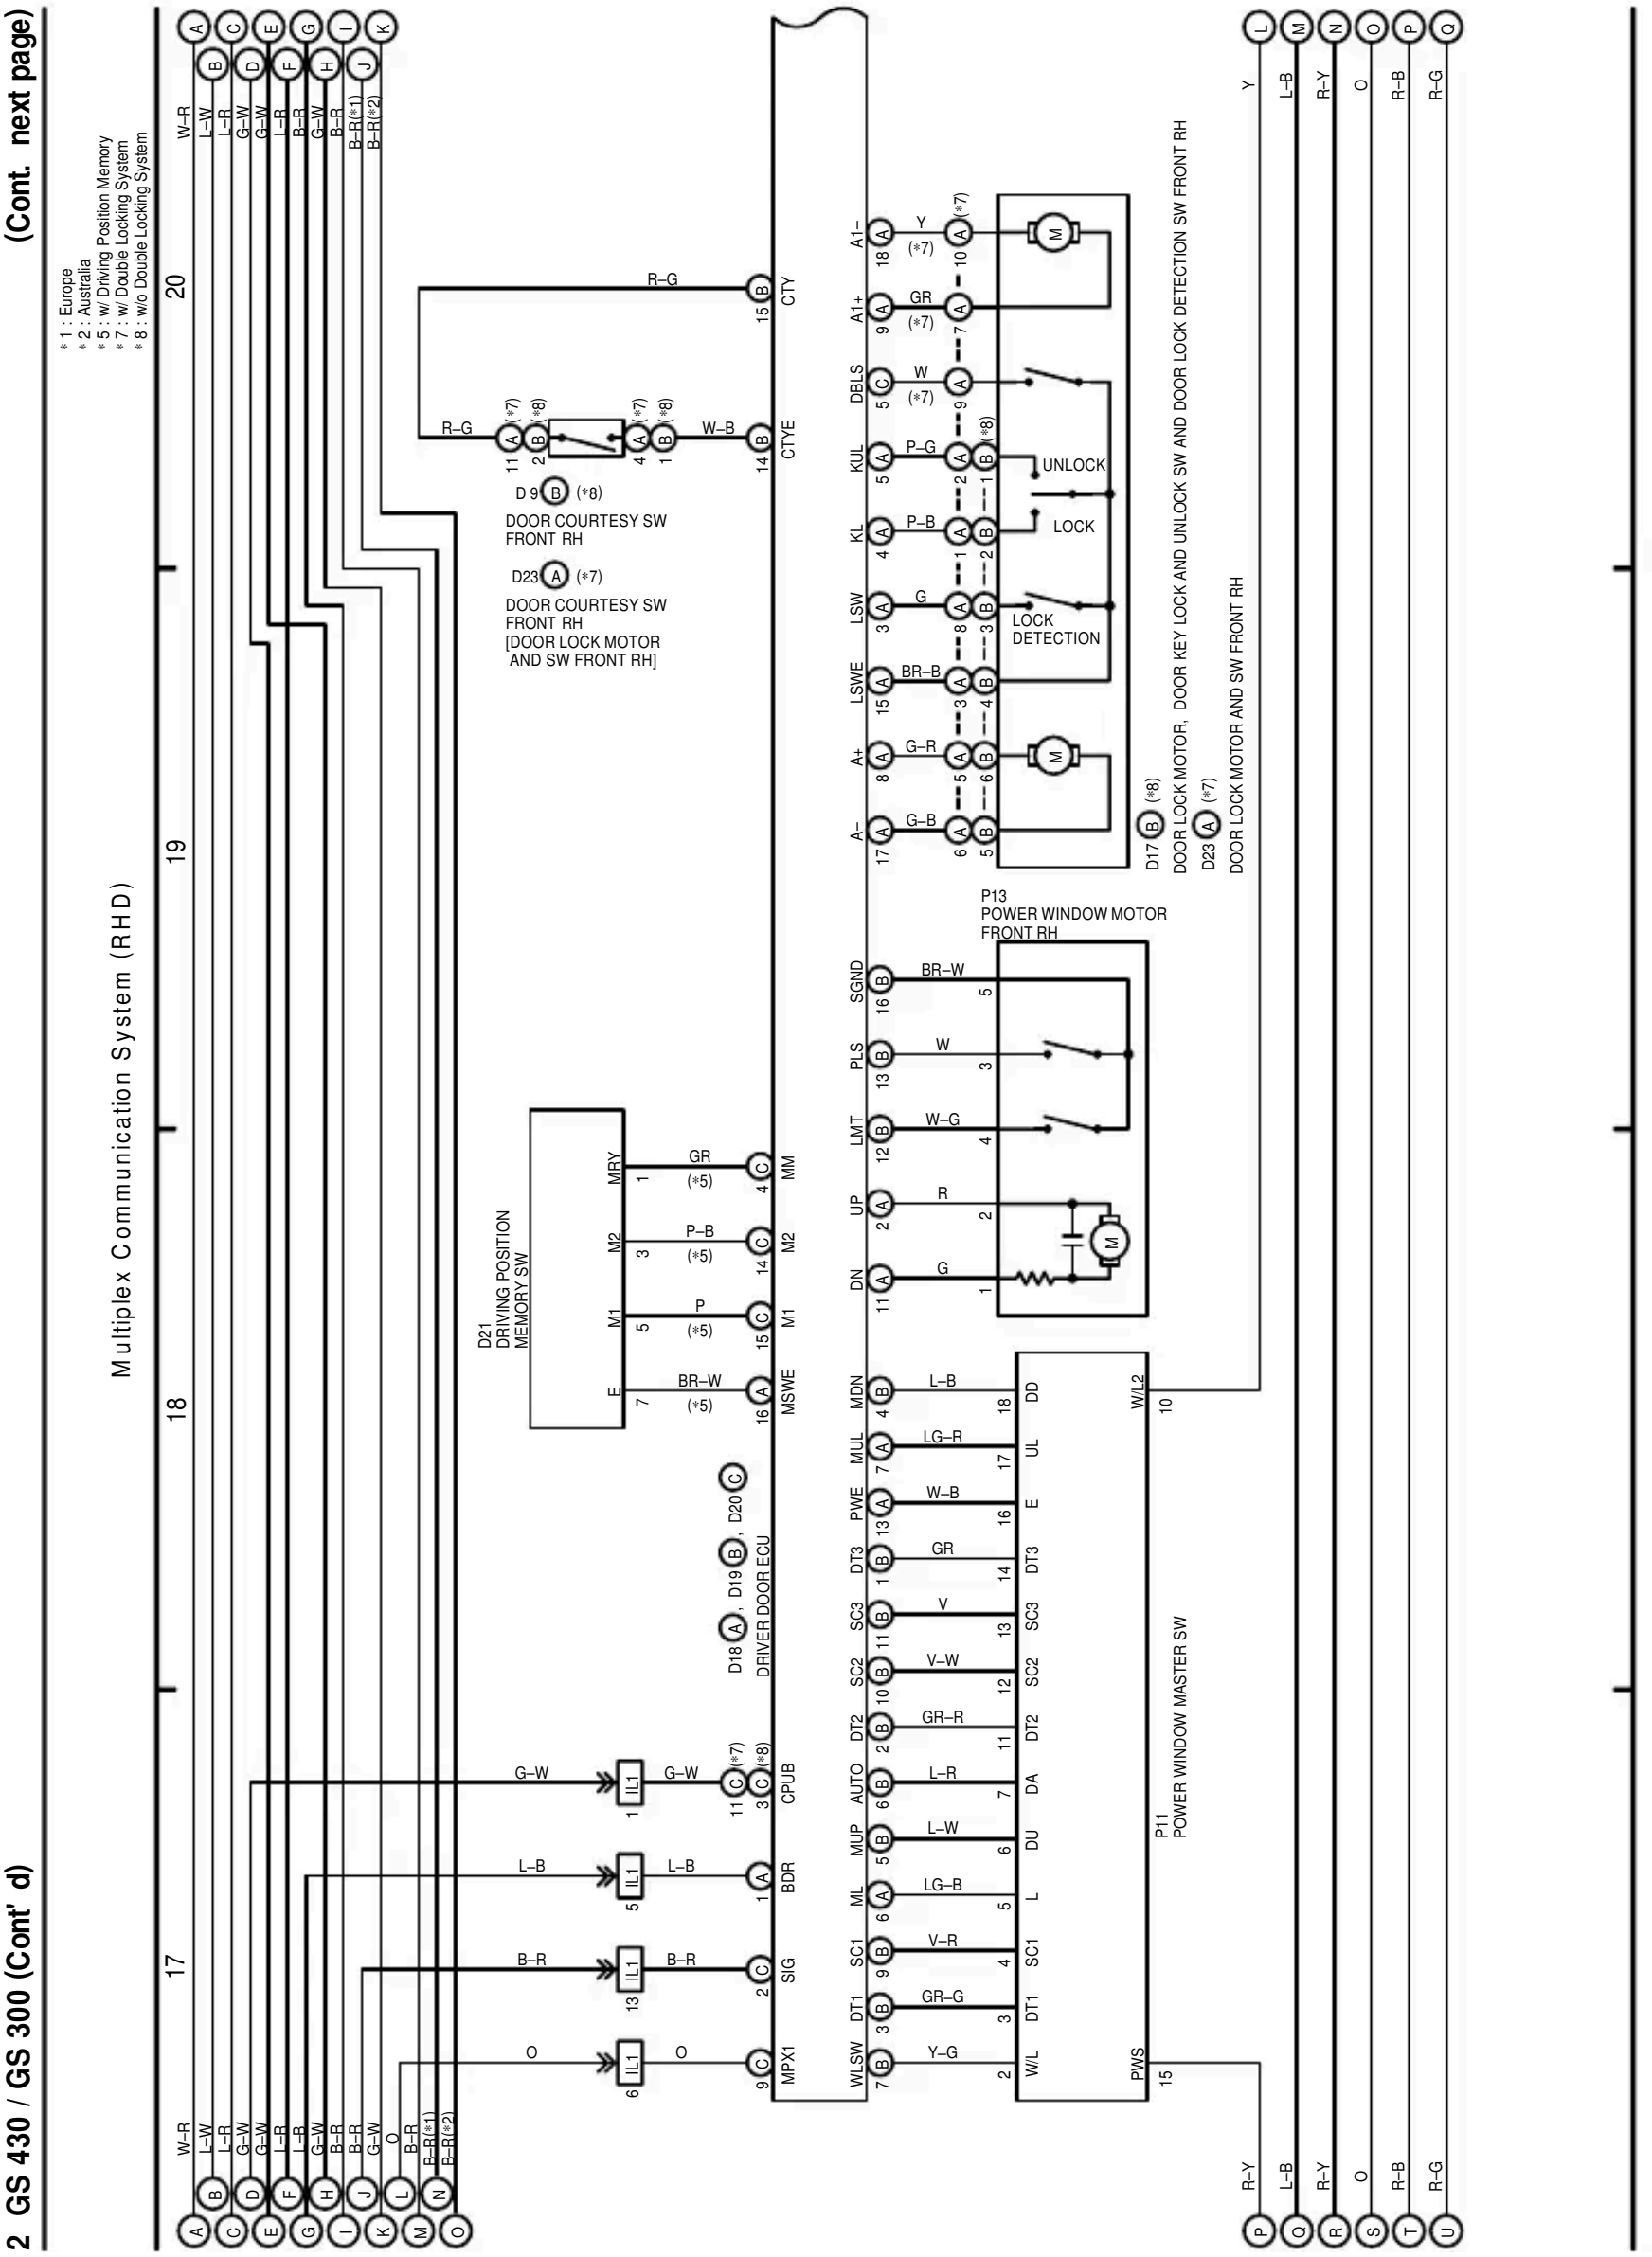

(Cont. next page)

Multiplex Communication System (RHD)

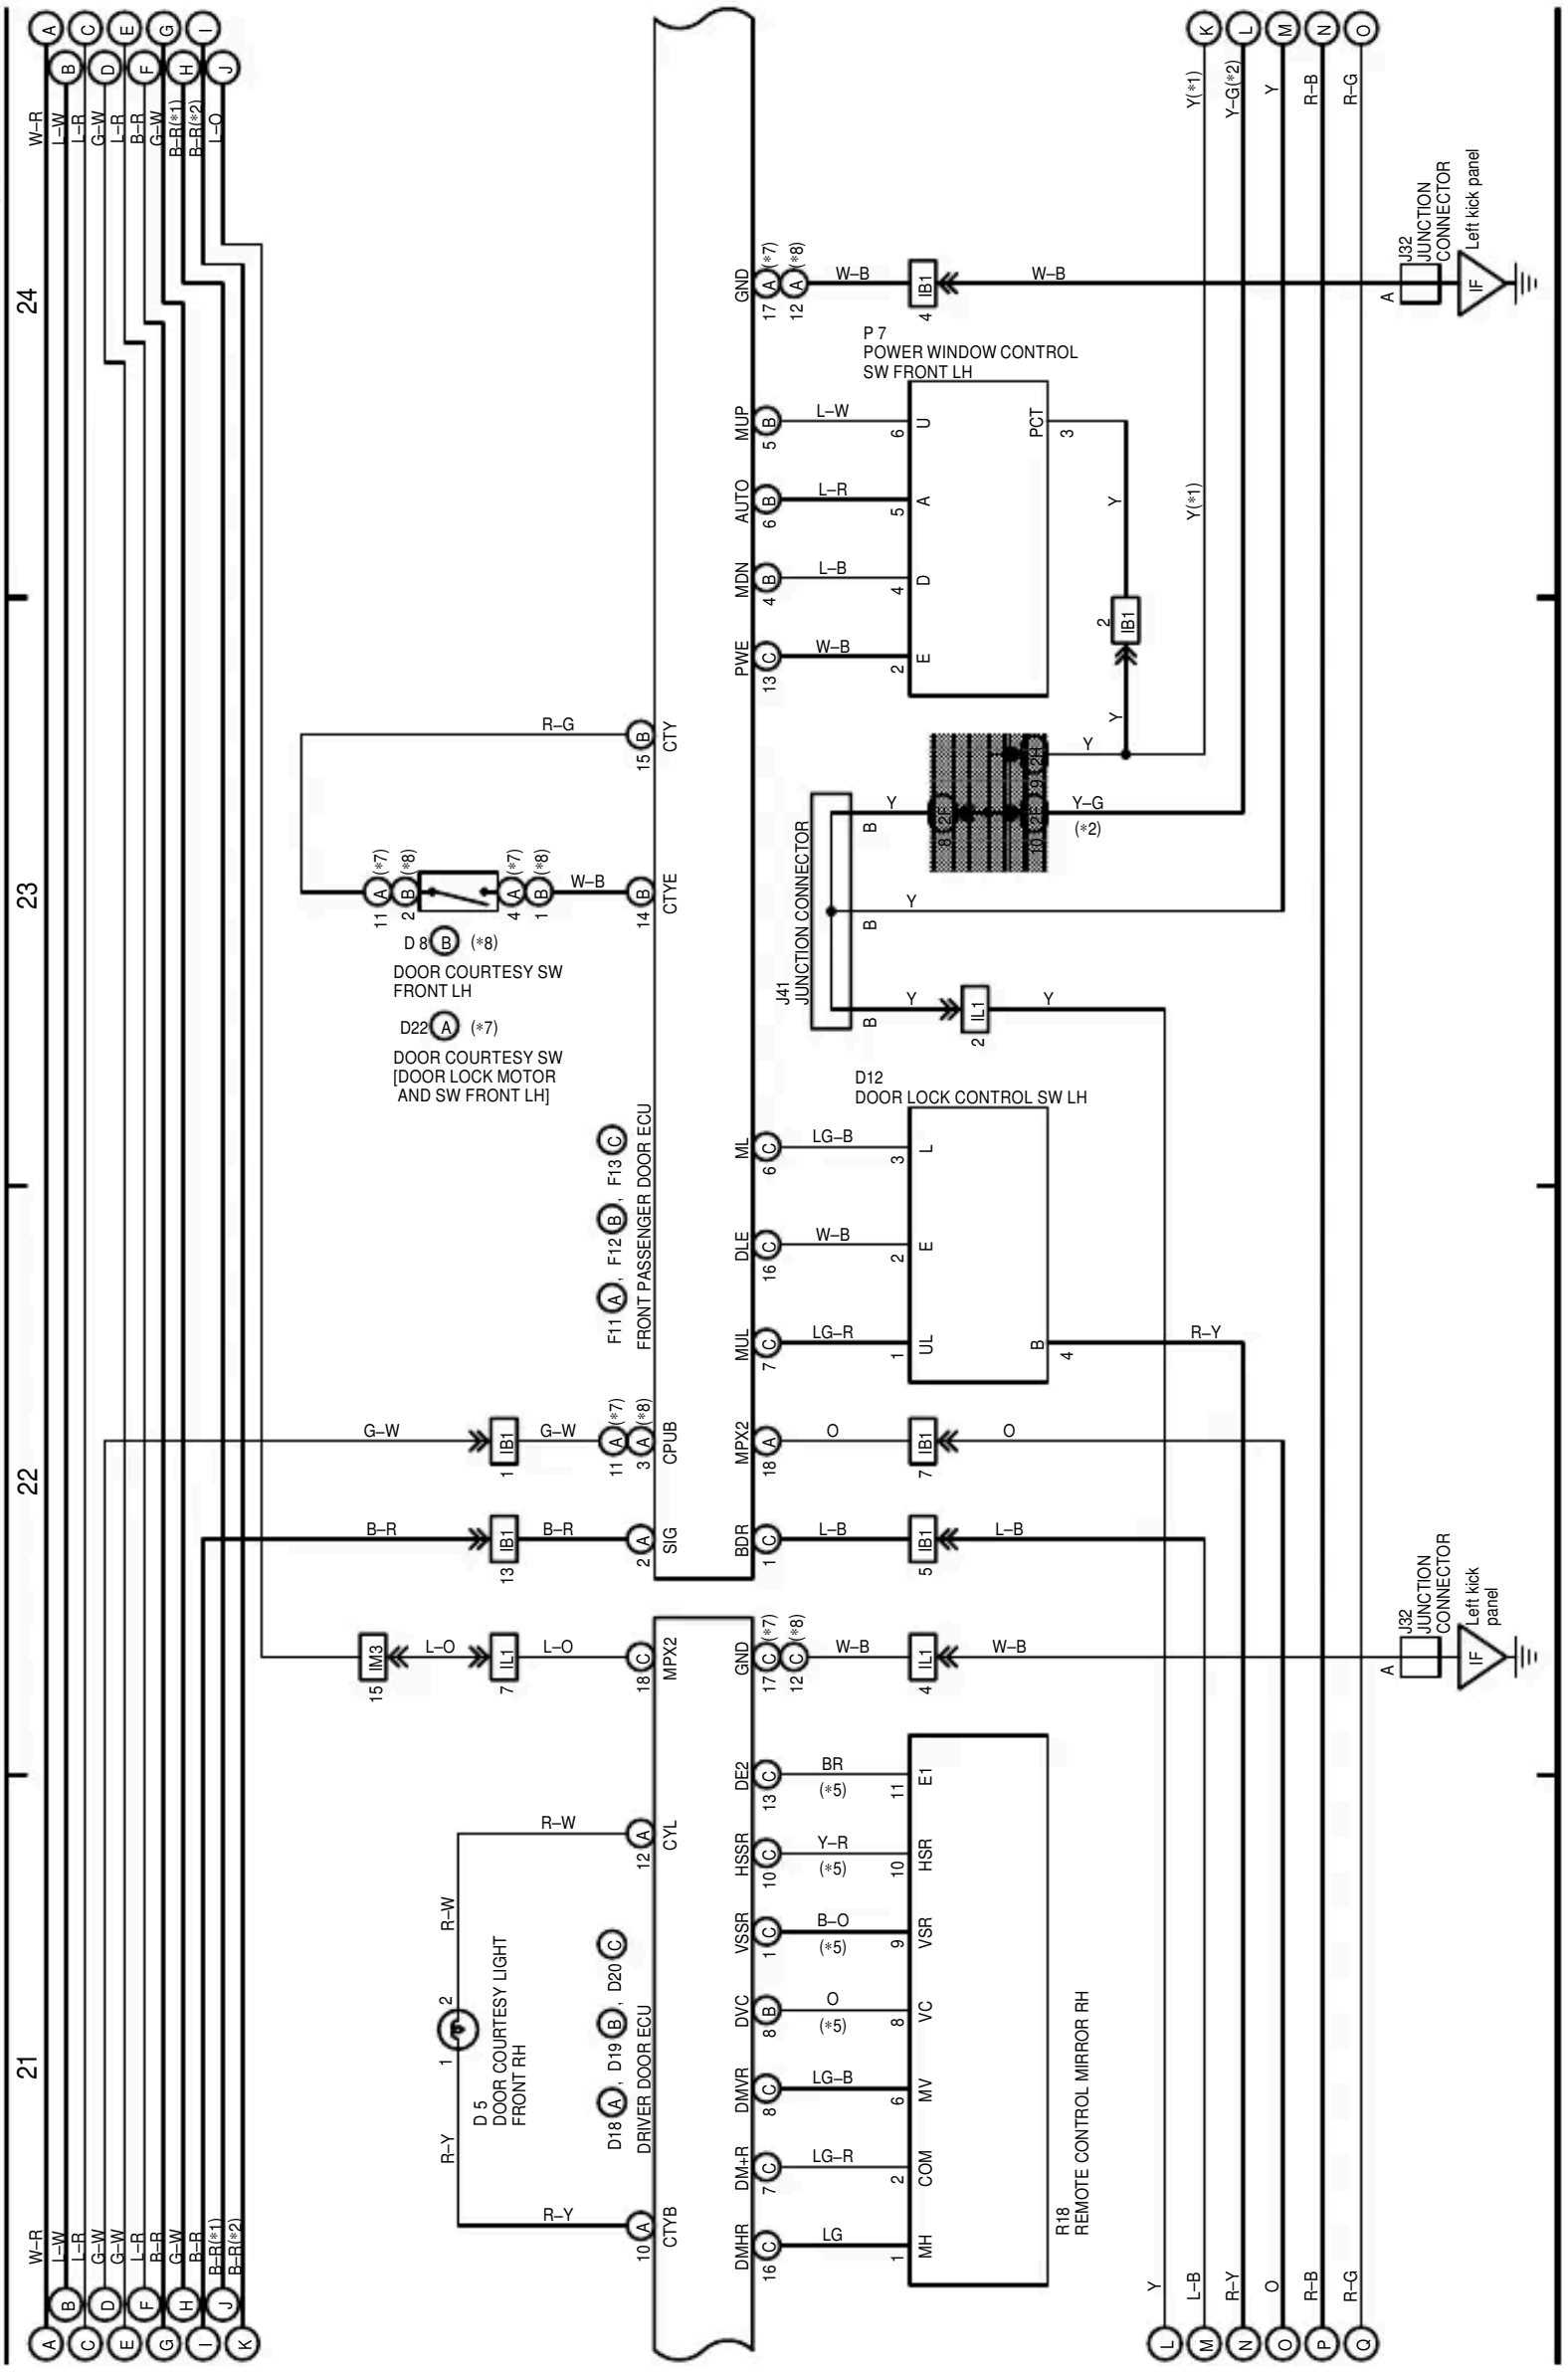

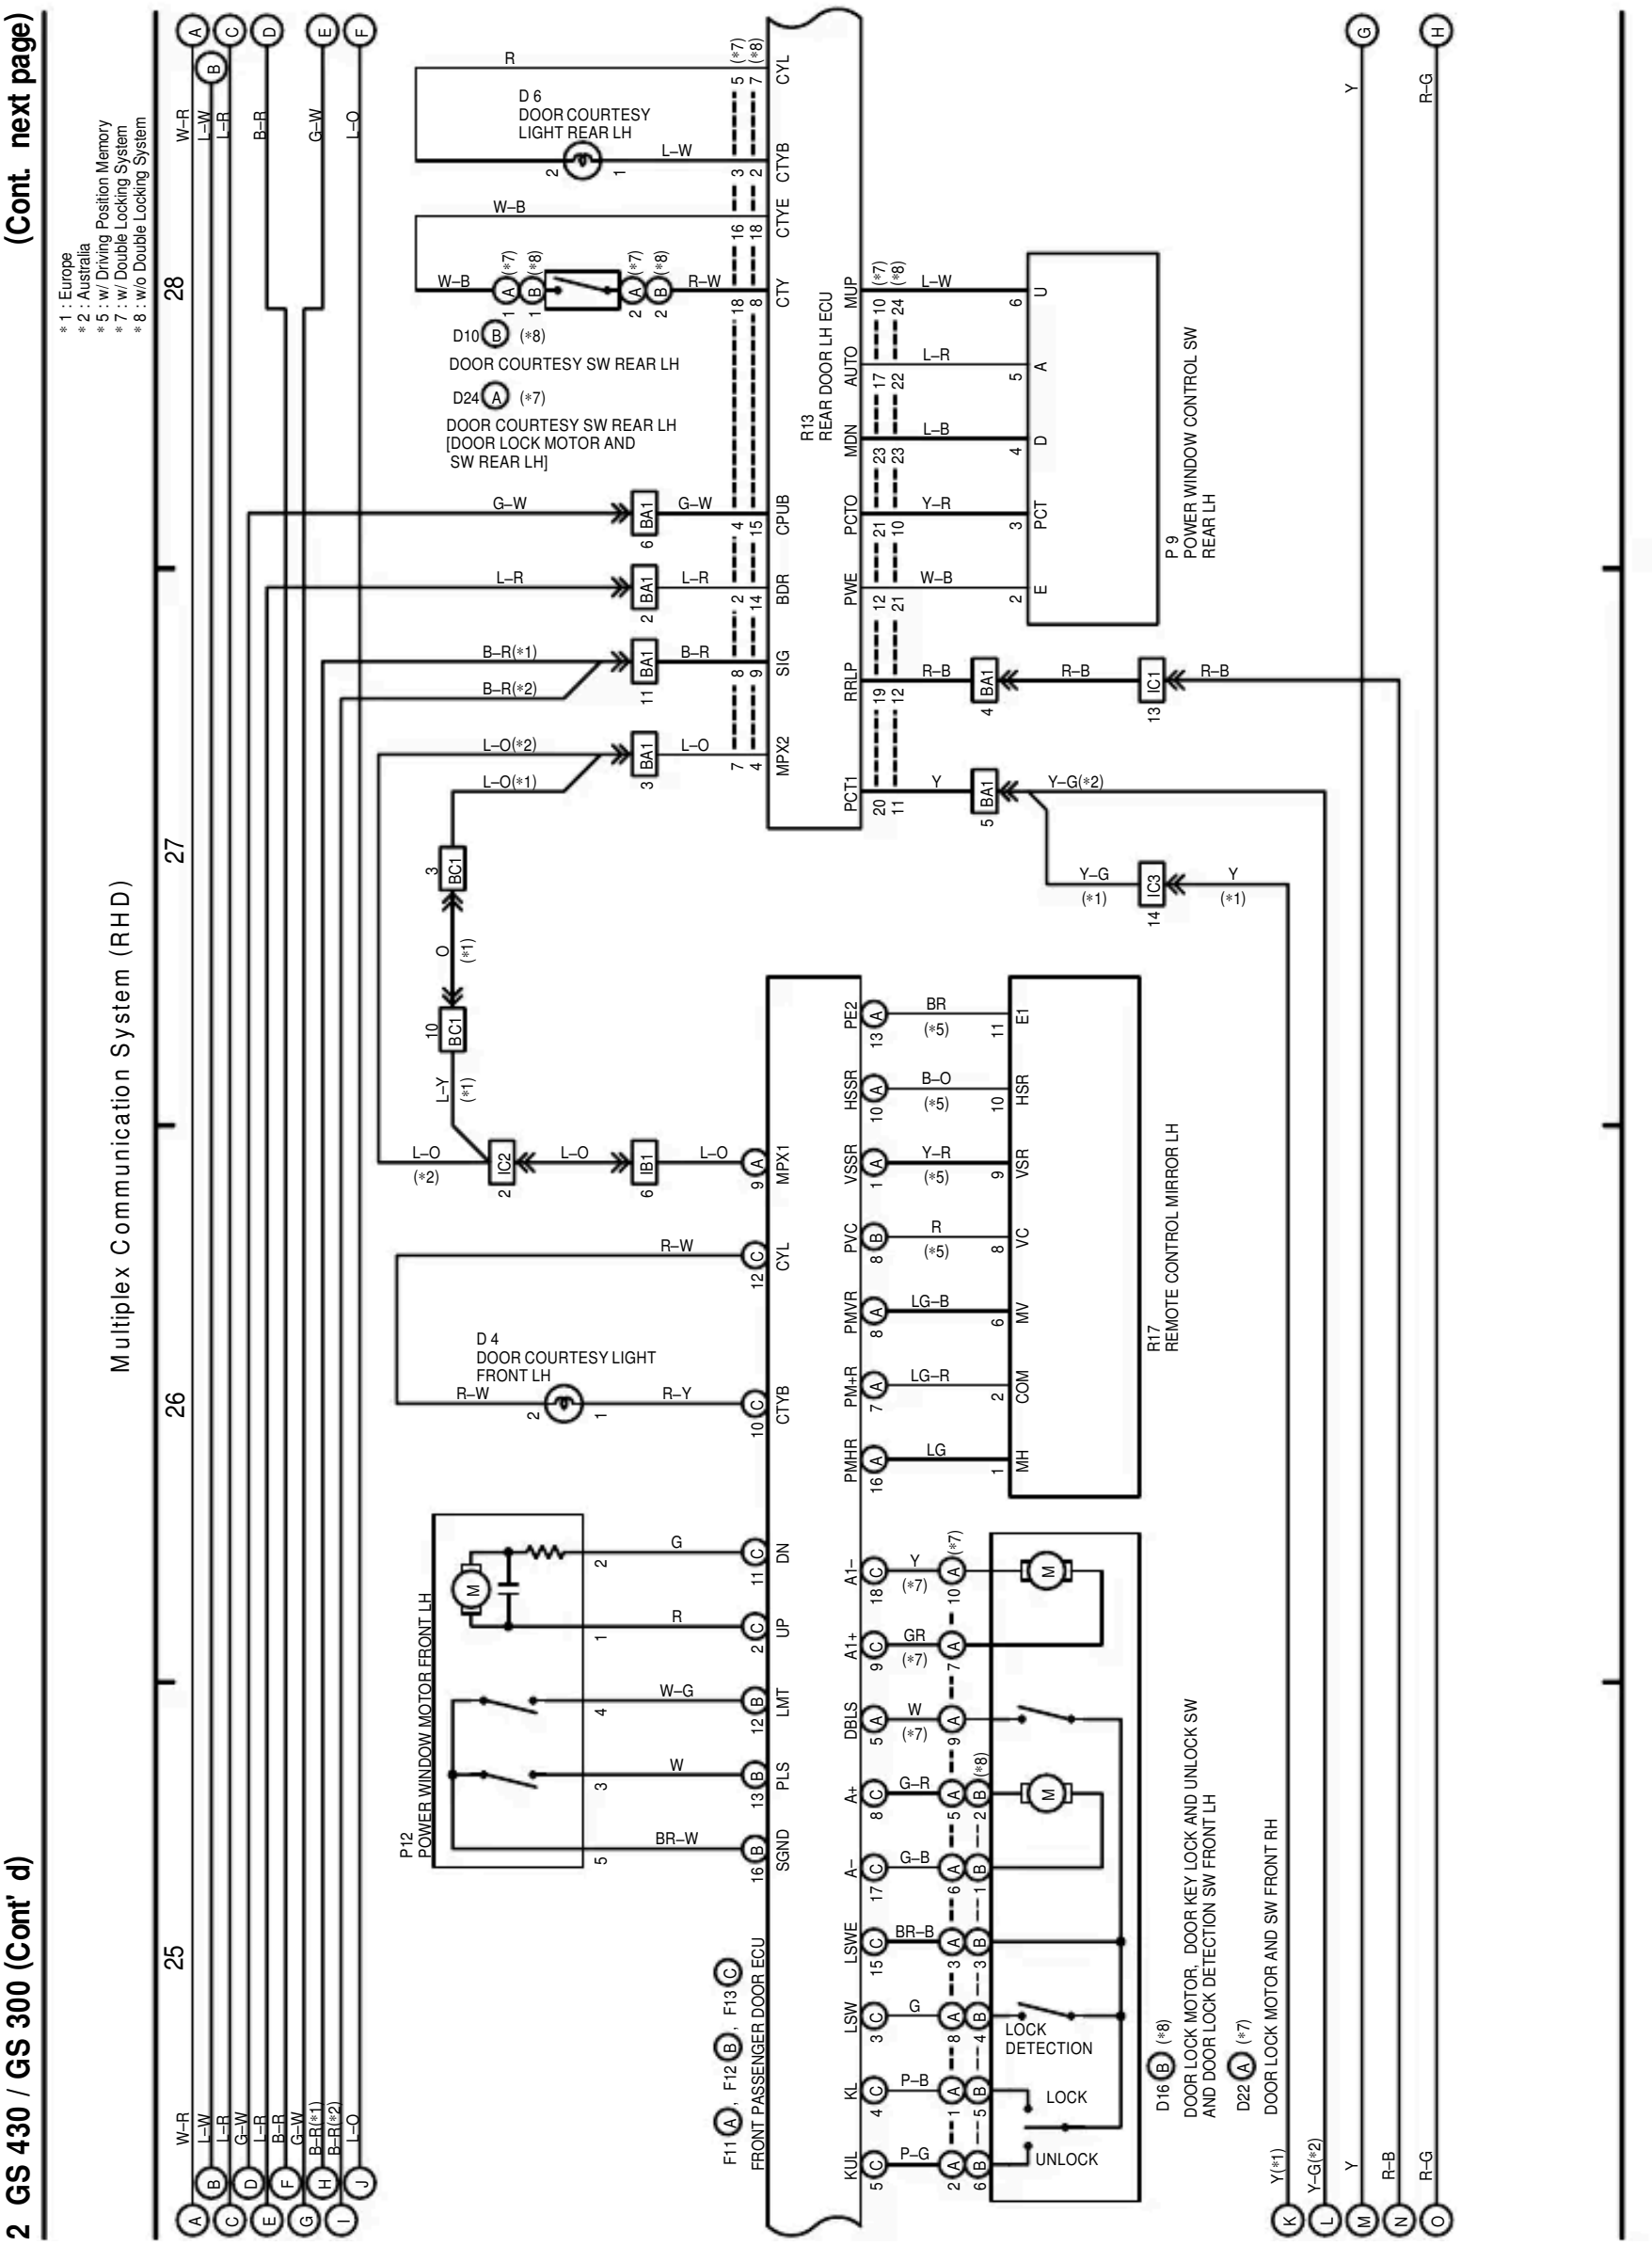
(Cont. next page)
2 GS 430 / GS 300 (Cont' d)
Multiplex Communication System (RHD)
* 1 : Europe
* 2 : Australia
* 5 : w/ Driving Position Memory
* 7 : w/ Double Locking System
* 8 : w/o Double Locking System
D 6
DOOR COURTESY
LIGHT REAR LH
D 4
DOOR COURTESY LIGHT
FRONT LH
D10 (*8)
DOOR COURTESY SW REAR LH
D24 (*7)
DOOR COURTESY SW REAR LH
[DOOR LOCK MOTOR AND
SW REAR LH]
R13
REAR DOOR LH ECU
P 9
POWER WINDOW CONTROL SW
REAR LH
P12
POWER WINDOW MOTOR FRONT LH
F11, F12, F13
FRONT PASSENGER DOOR ECU
D16 (*8)
DOOR LOCK MOTOR, DOOR KEY LOCK AND UNLOCK SW
AND DOOR LOCK DETECTION SW FRONT LH
D22 (*7)
DOOR LOCK MOTOR AND SW FRONT RH
R17
REMOTE CONTROL MIRROR LH
LOCK DETECTION
LOCK
UNLOCK

(Cont. next page)

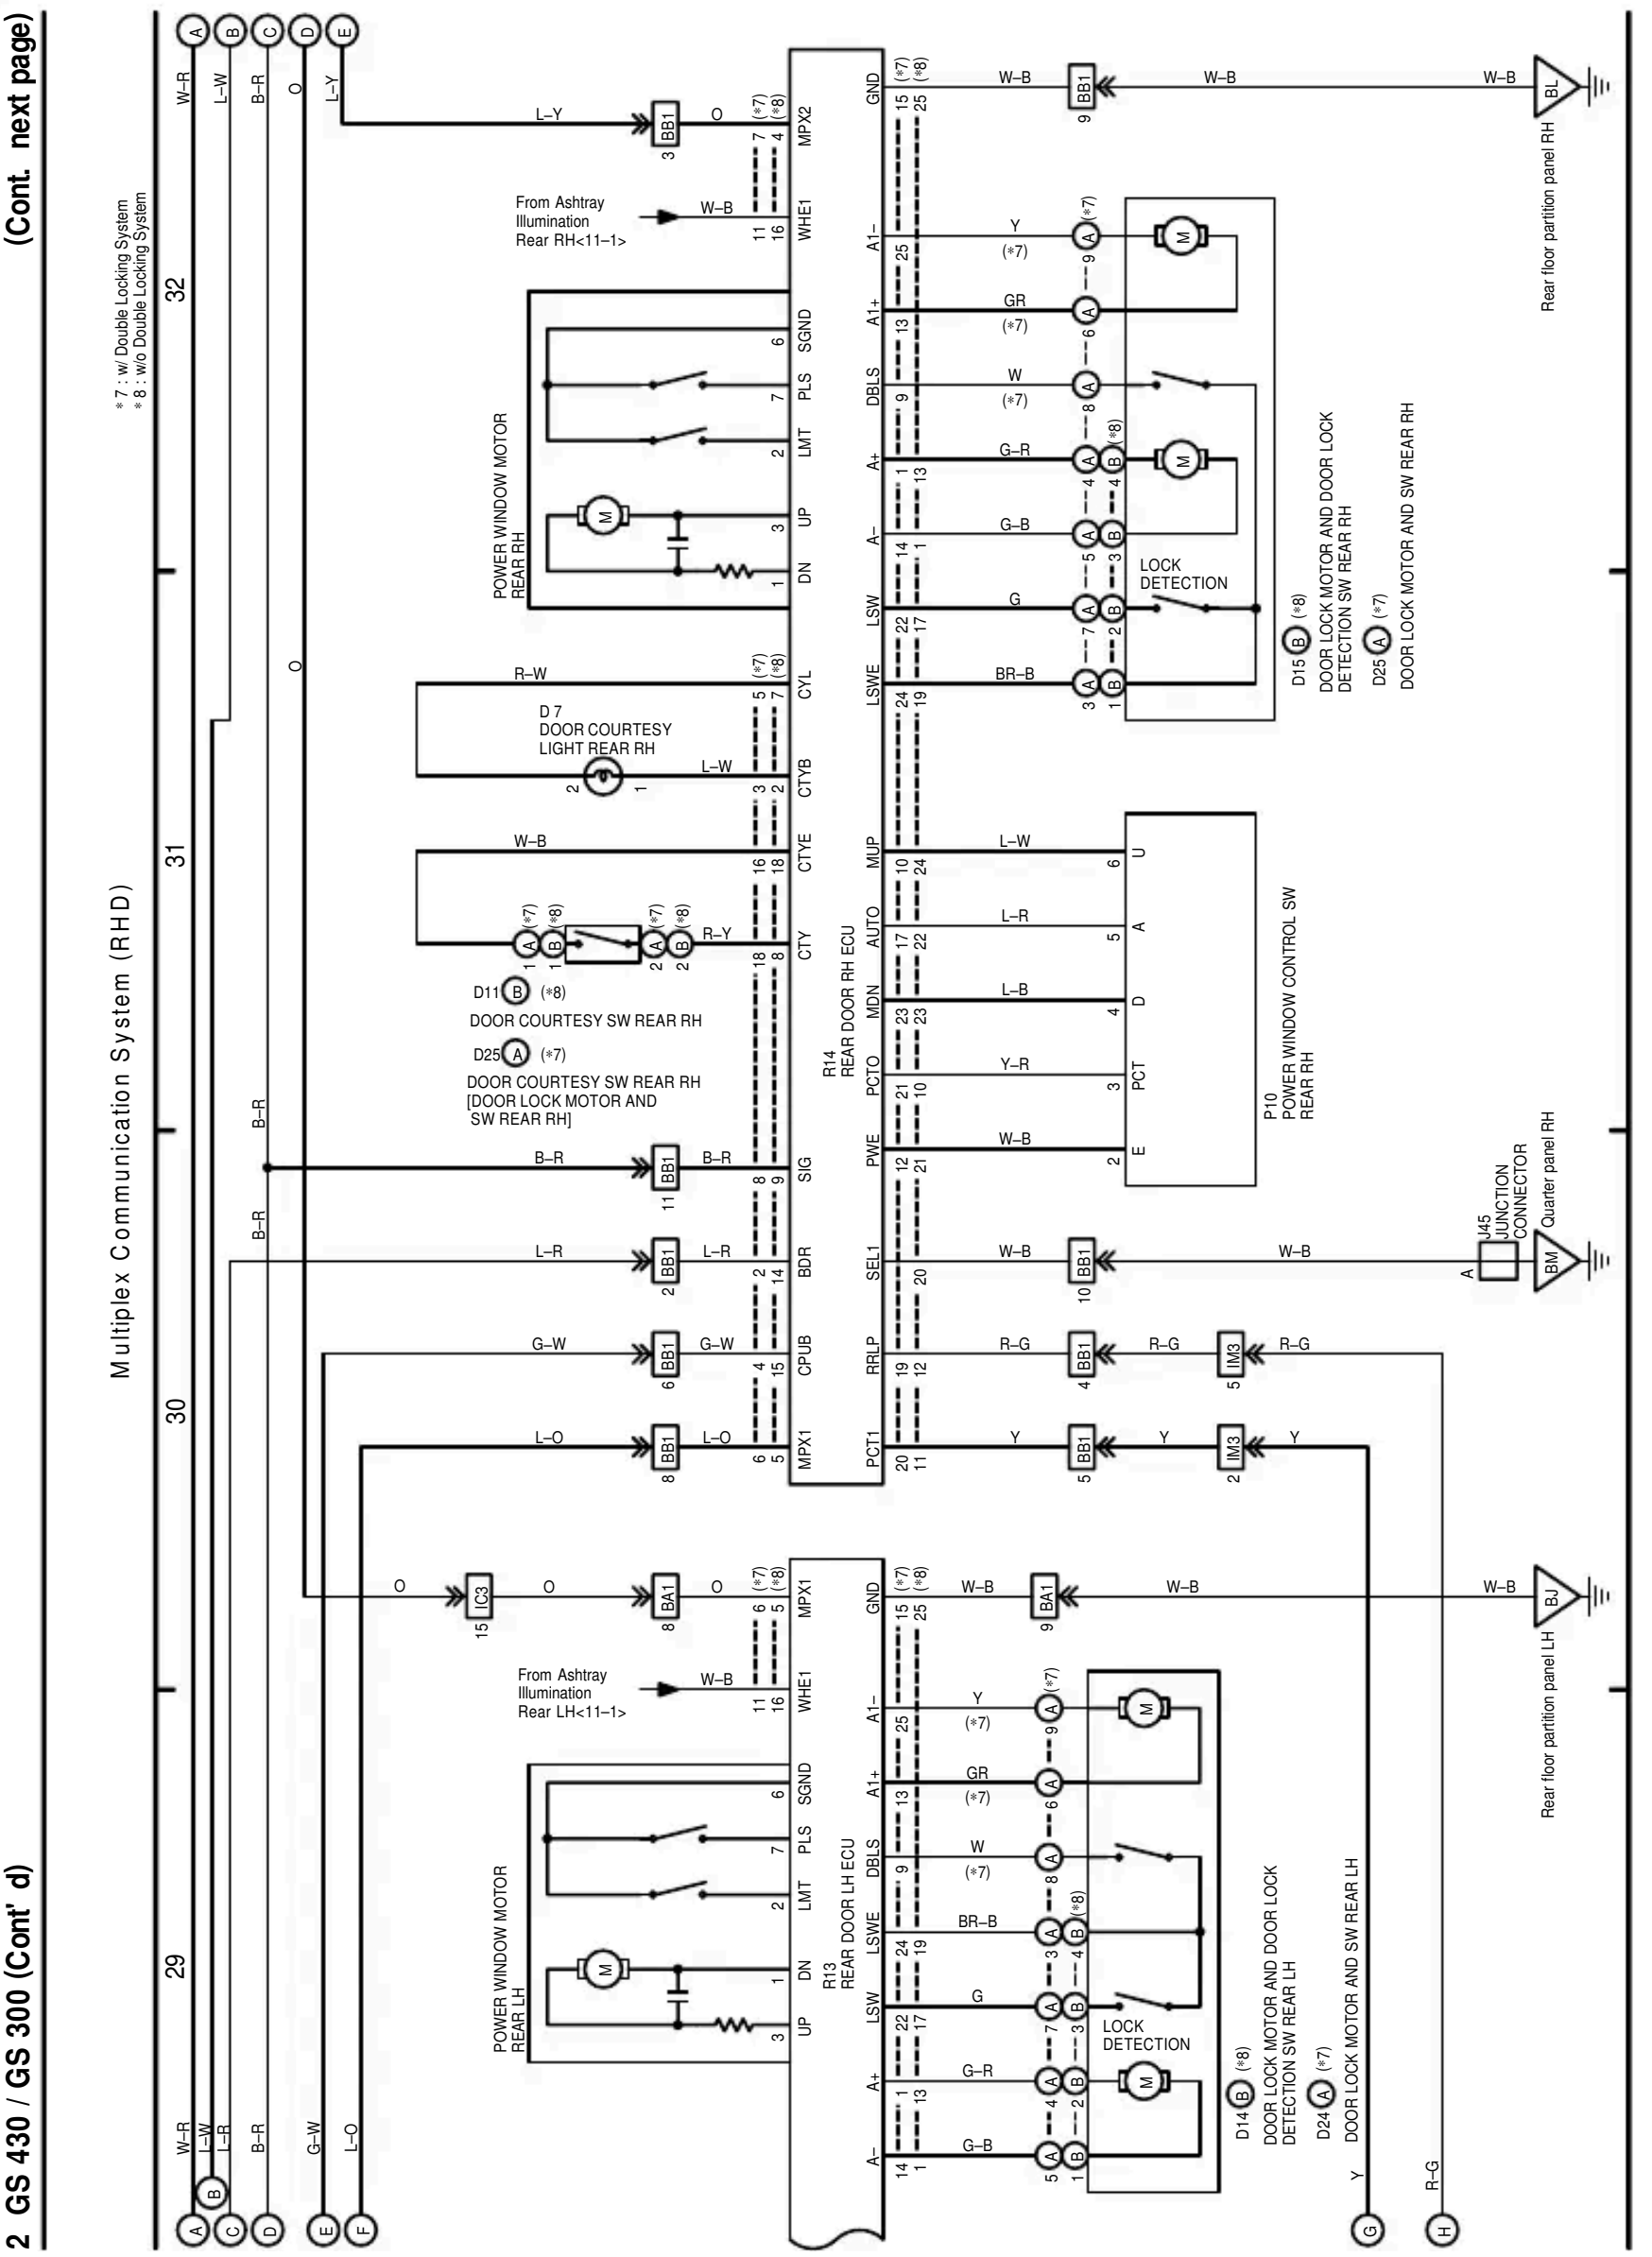

I OVERALL ELECTRICAL WIRING DIAGRAM

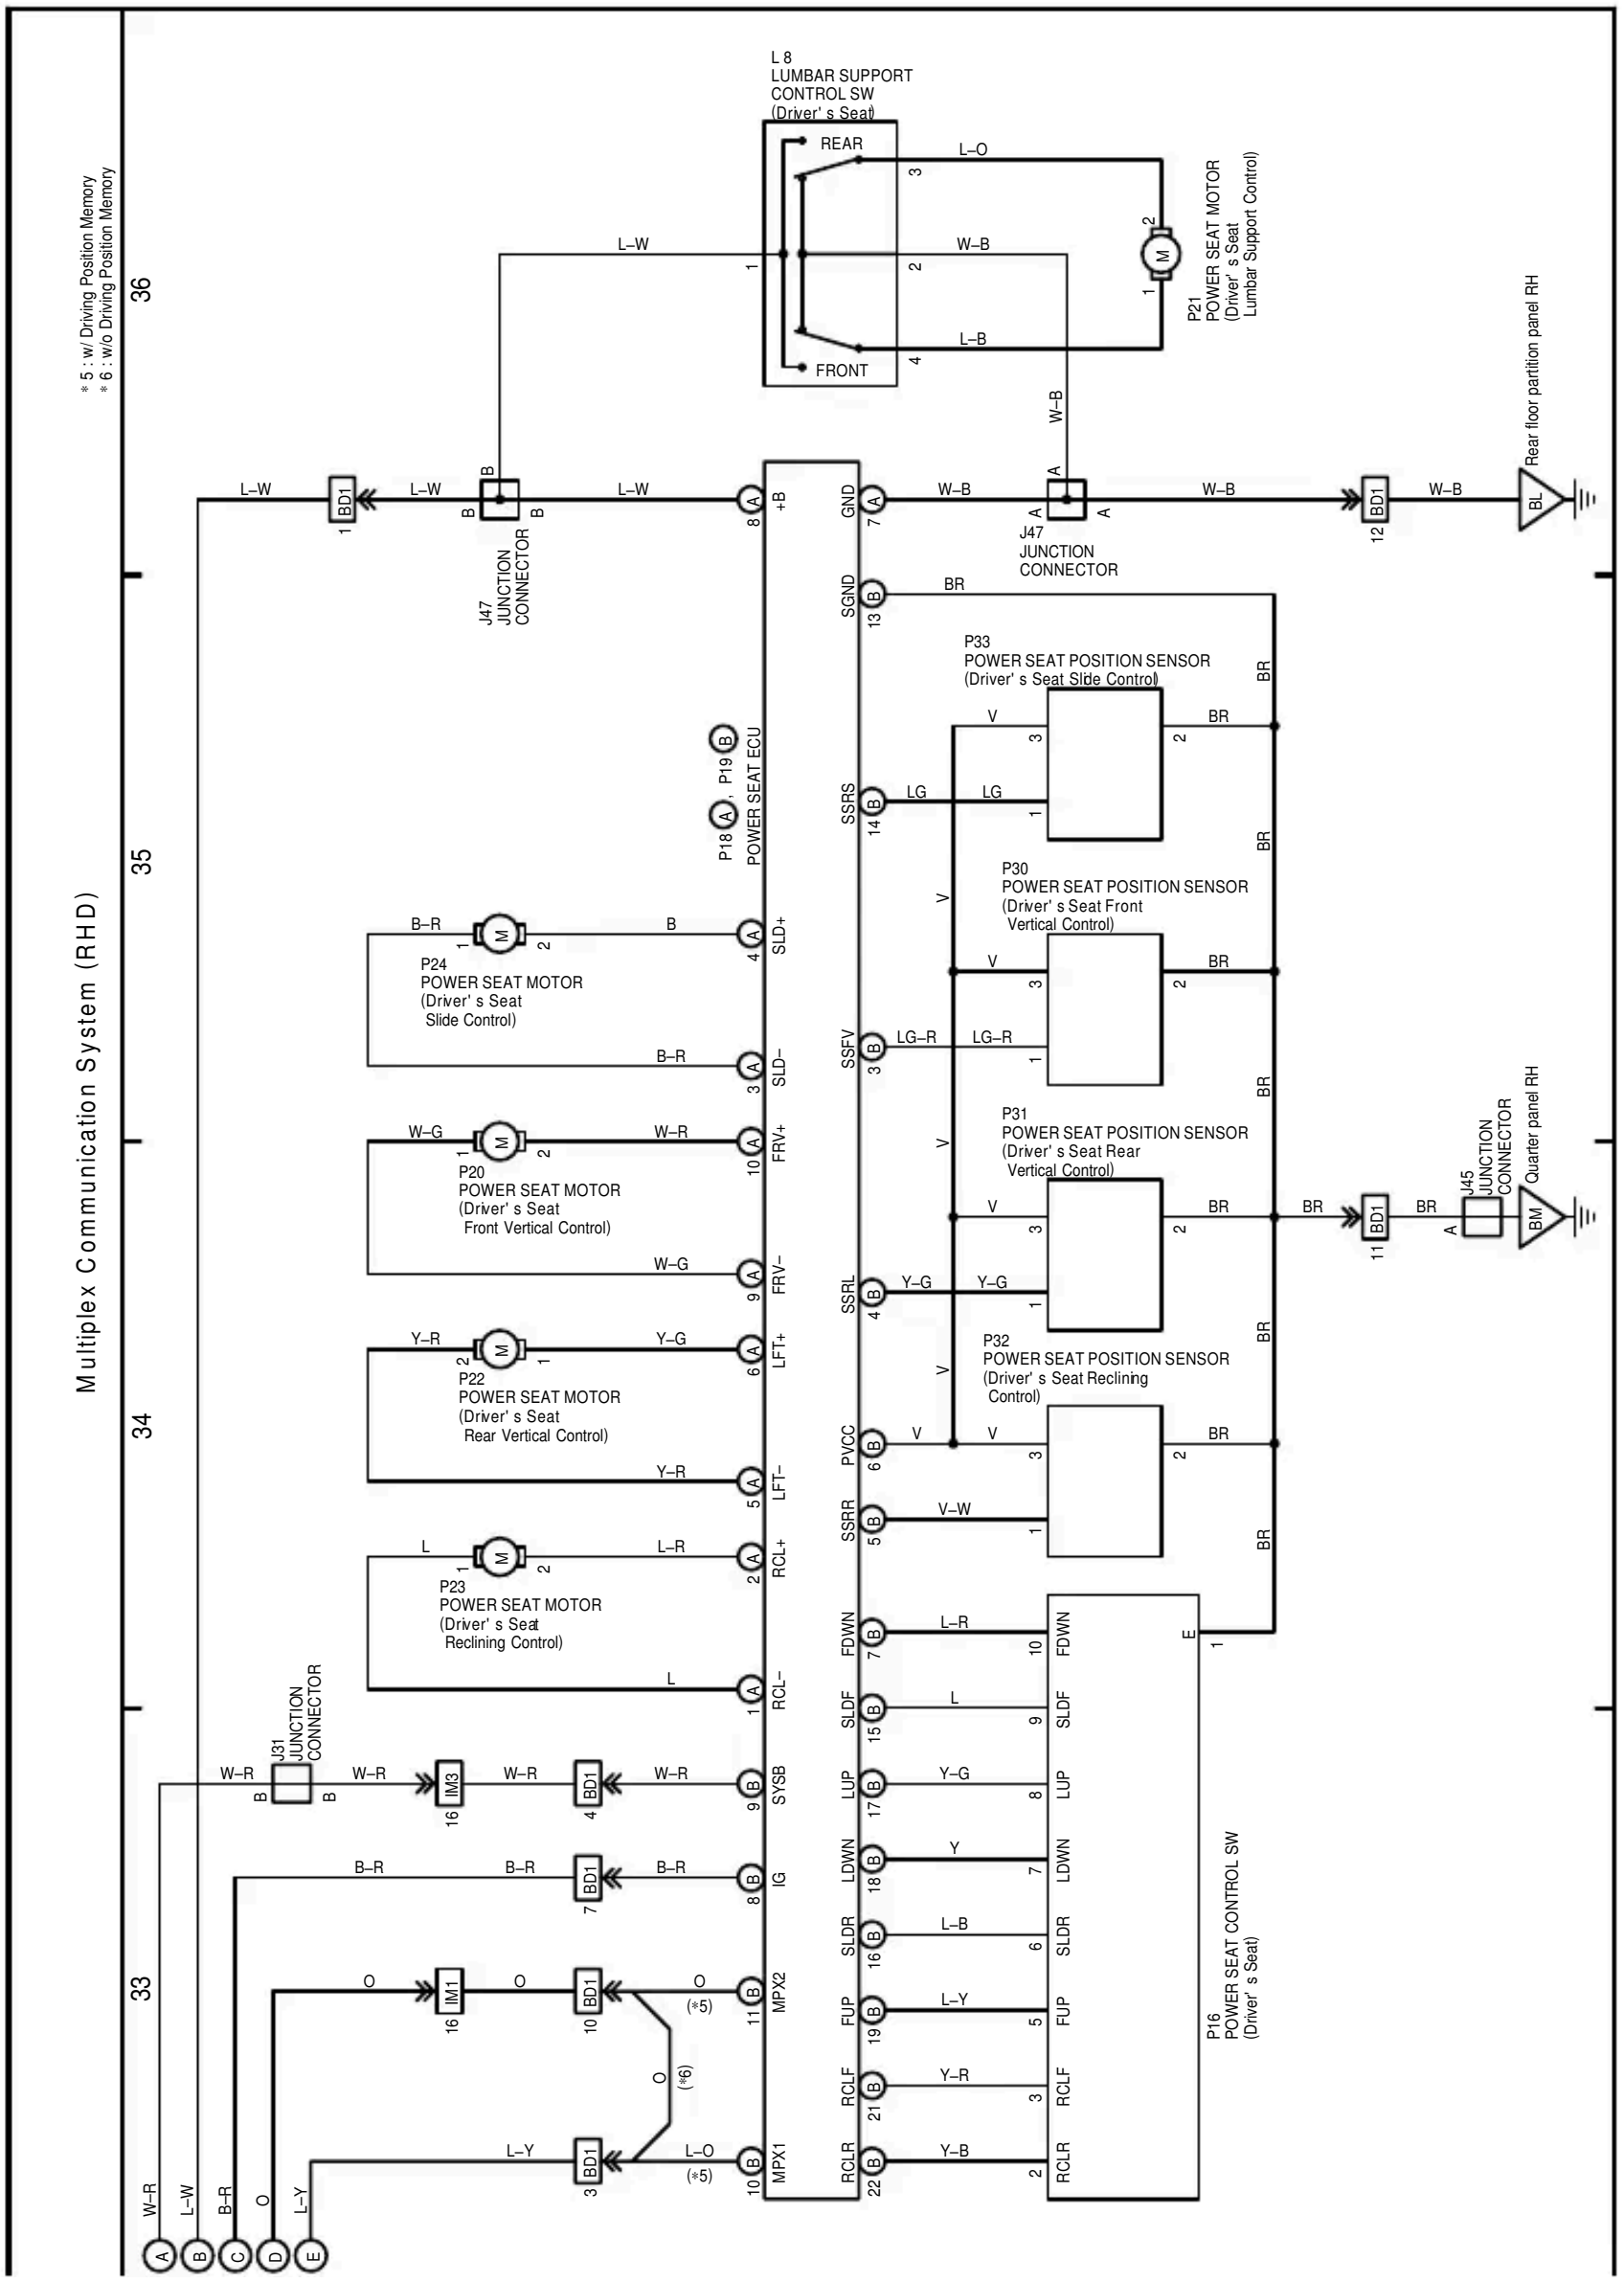

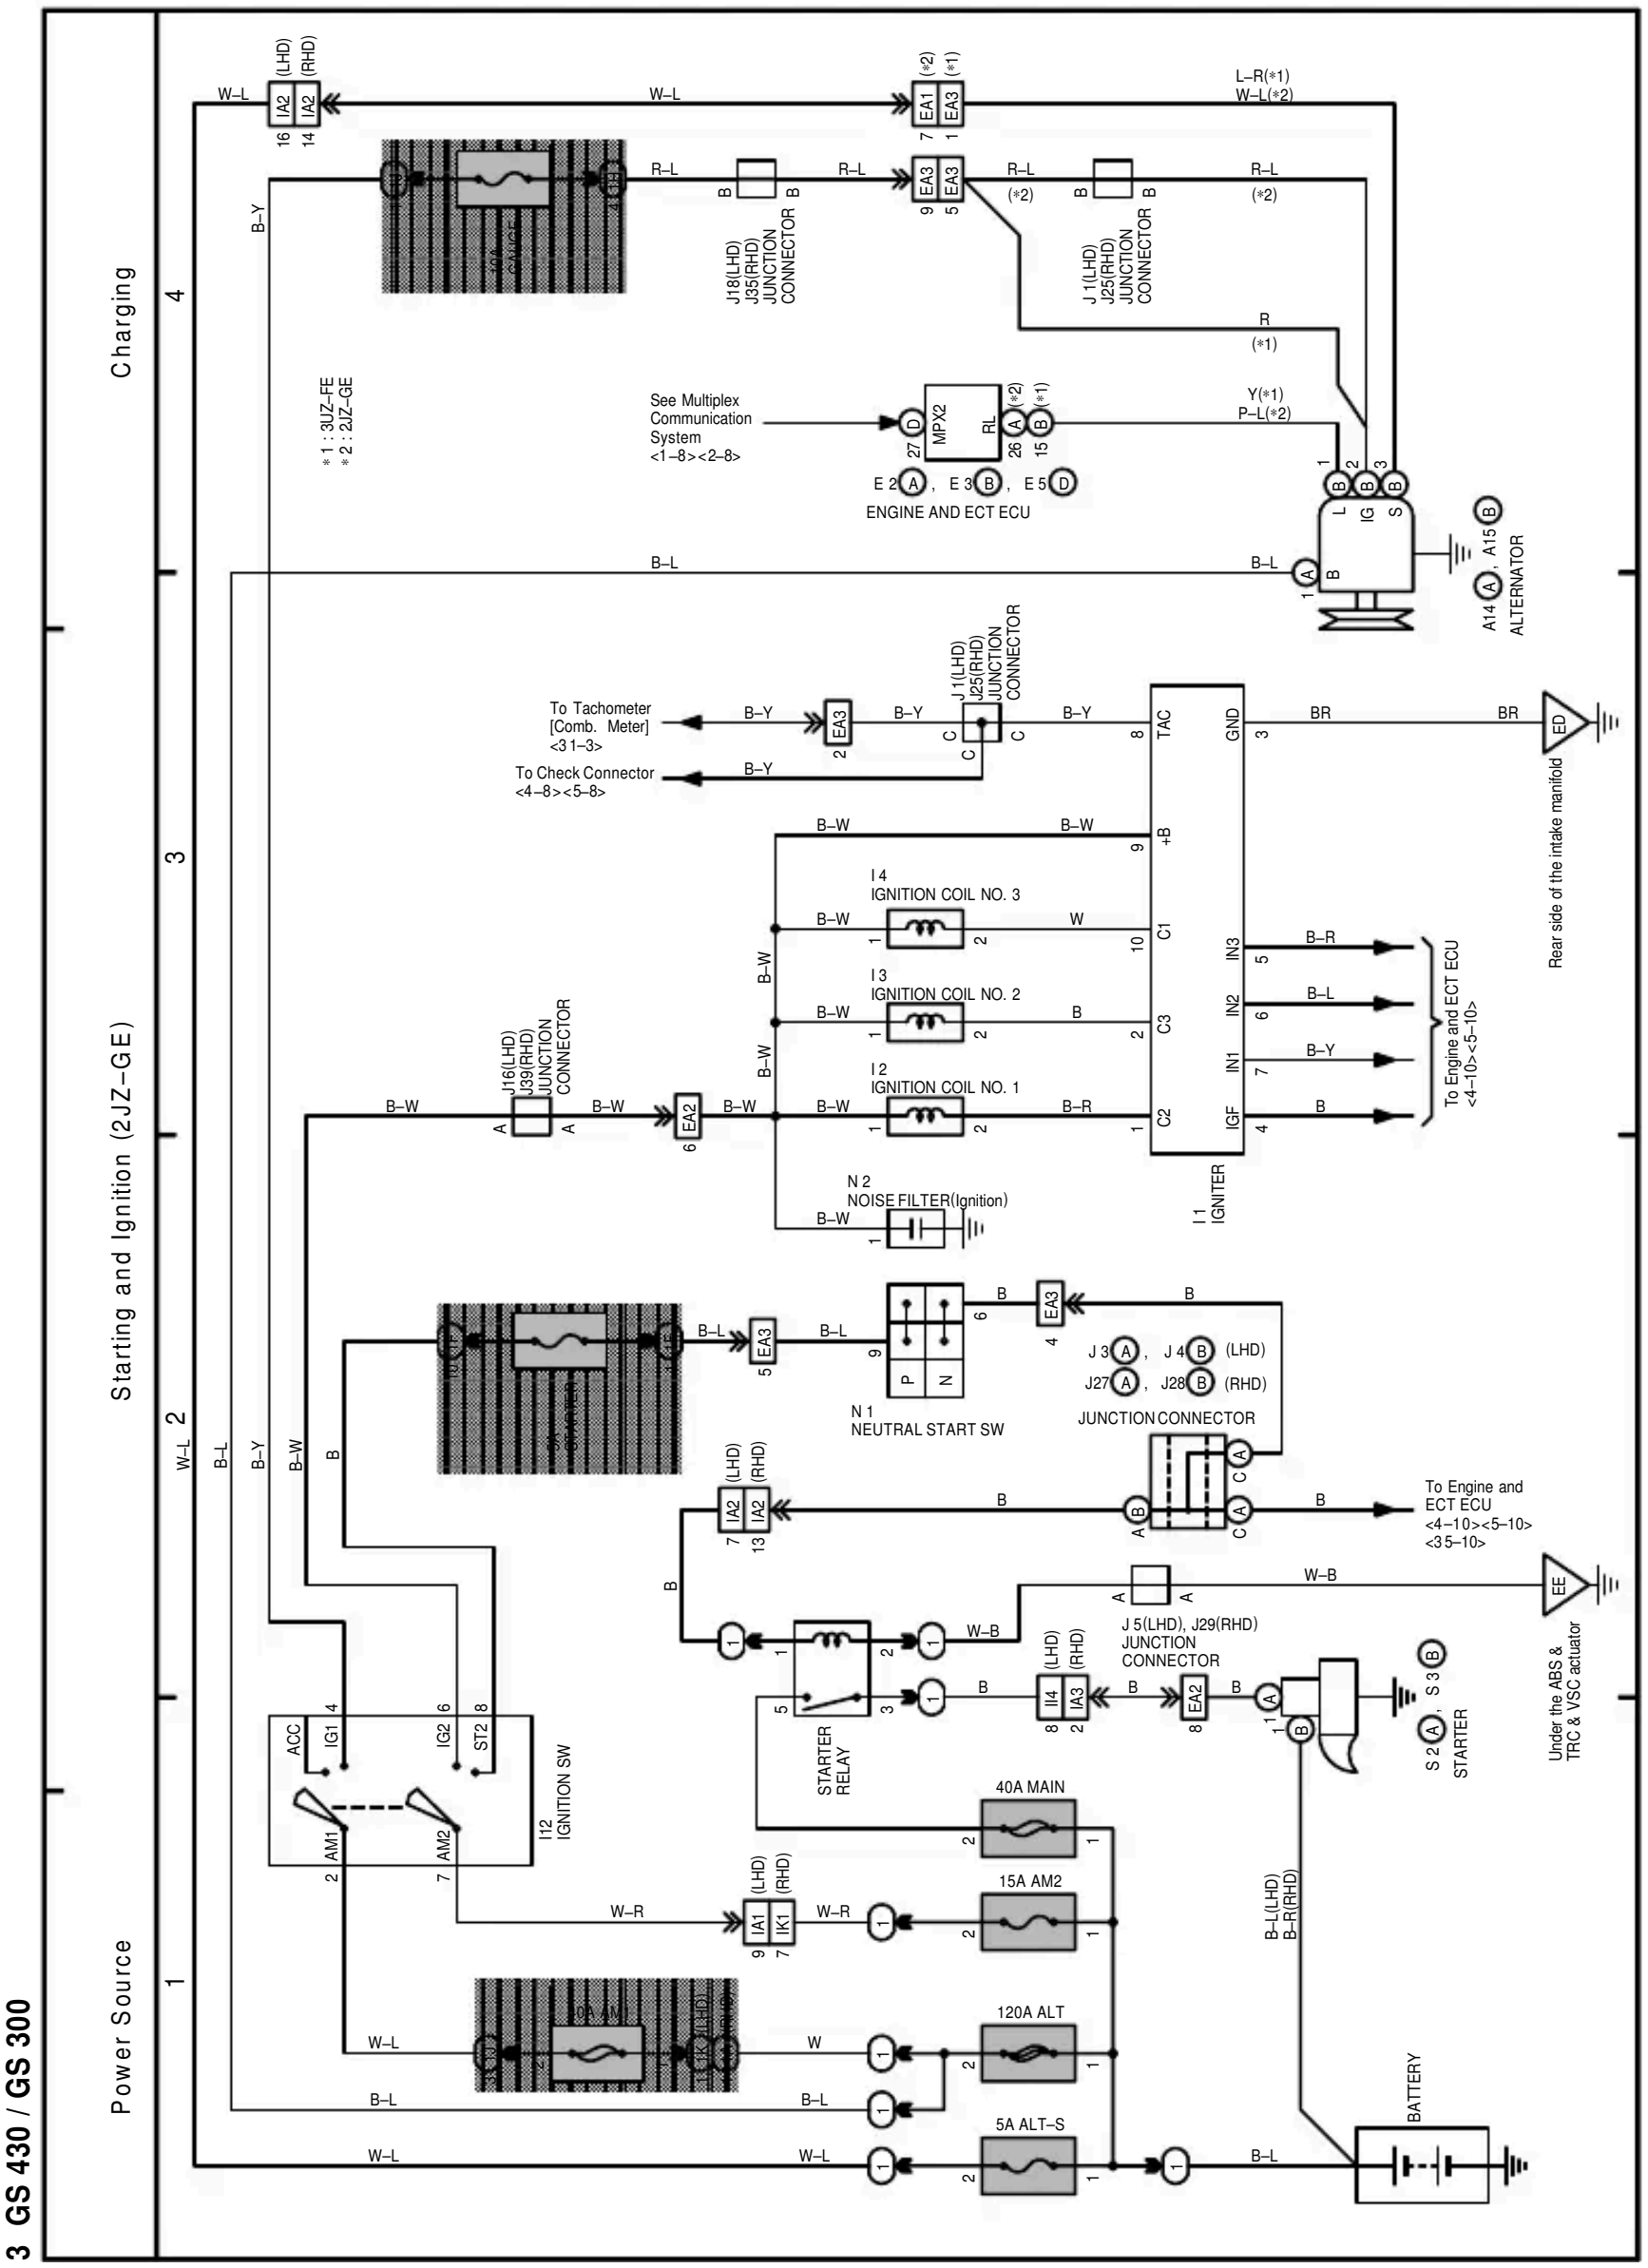
Power Source
Starting and Ignition (2JZ–GE)
Charging
1
2
3
4
*1 : 3UZ–FE
*2 : 2JZ–GE
W–L
B–Y
B–L
B–W
R–L
L–R(*1)
W–L(*2)
Y(*1)
P–L(*2)
R
(*1)
(*2)
(LHD)
(RHD)
IA2
EA1
EA3
EA2
IA1
IK1
II4
IA3
J18(LHD)
J35(RHD)
JUNCTION
CONNECTOR
J 1(LHD)
J25(RHD)
JUNCTION
CONNECTOR
J16(LHD)
J39(RHD)
JUNCTION
CONNECTOR
J 5(LHD), J29(RHD)
JUNCTION
CONNECTOR
See Multiplex
Communication
System
<1–8><2–8>
MPX2
RL
E 2 A , E 3 B , E 5 D
ENGINE AND ECT ECU
L
IG
S
A14 A , A15 B
ALTERNATOR
To Tachometer
[Comb. Meter]
<3 1–3>
To Check Connector
<4–8><5–8>
TAC
GND
BR
ED
Rear side of the intake manifold
+B
I 4
IGNITION COIL NO. 3
I 3
IGNITION COIL NO. 2
I 2
IGNITION COIL NO. 1
C1
C3
C2
IGF
IN3
IN2
IN1
B–R
B–L
B–Y
B
To Engine and ECT ECU
<4–10><5–10>
I 1
IGNITER
N 2
NOISE FILTER(Ignition)
N 1
NEUTRAL START SW
P
N
J 3 A , J 4 B (LHD)
J27 A , J28 B (RHD)
JUNCTION CONNECTOR
To Engine and
ECT ECU
<4–10><5–10>
<3 5–10>
W–B
EE
Under the ABS &
TRC & VSC actuator
S 2 A , S 3 B
STARTER
STARTER
RELAY
I12
IGNITION SW
ACC
IG1
IG2
ST2
AM1
AM2
40A MAIN
15A AM2
120A ALT
5A ALT–S
B–L(LHD)
B–R(RHD)
BATTERY
W–R

I OVERALL ELECTRICAL WIRING DIAGRAM

(Cont. next page)

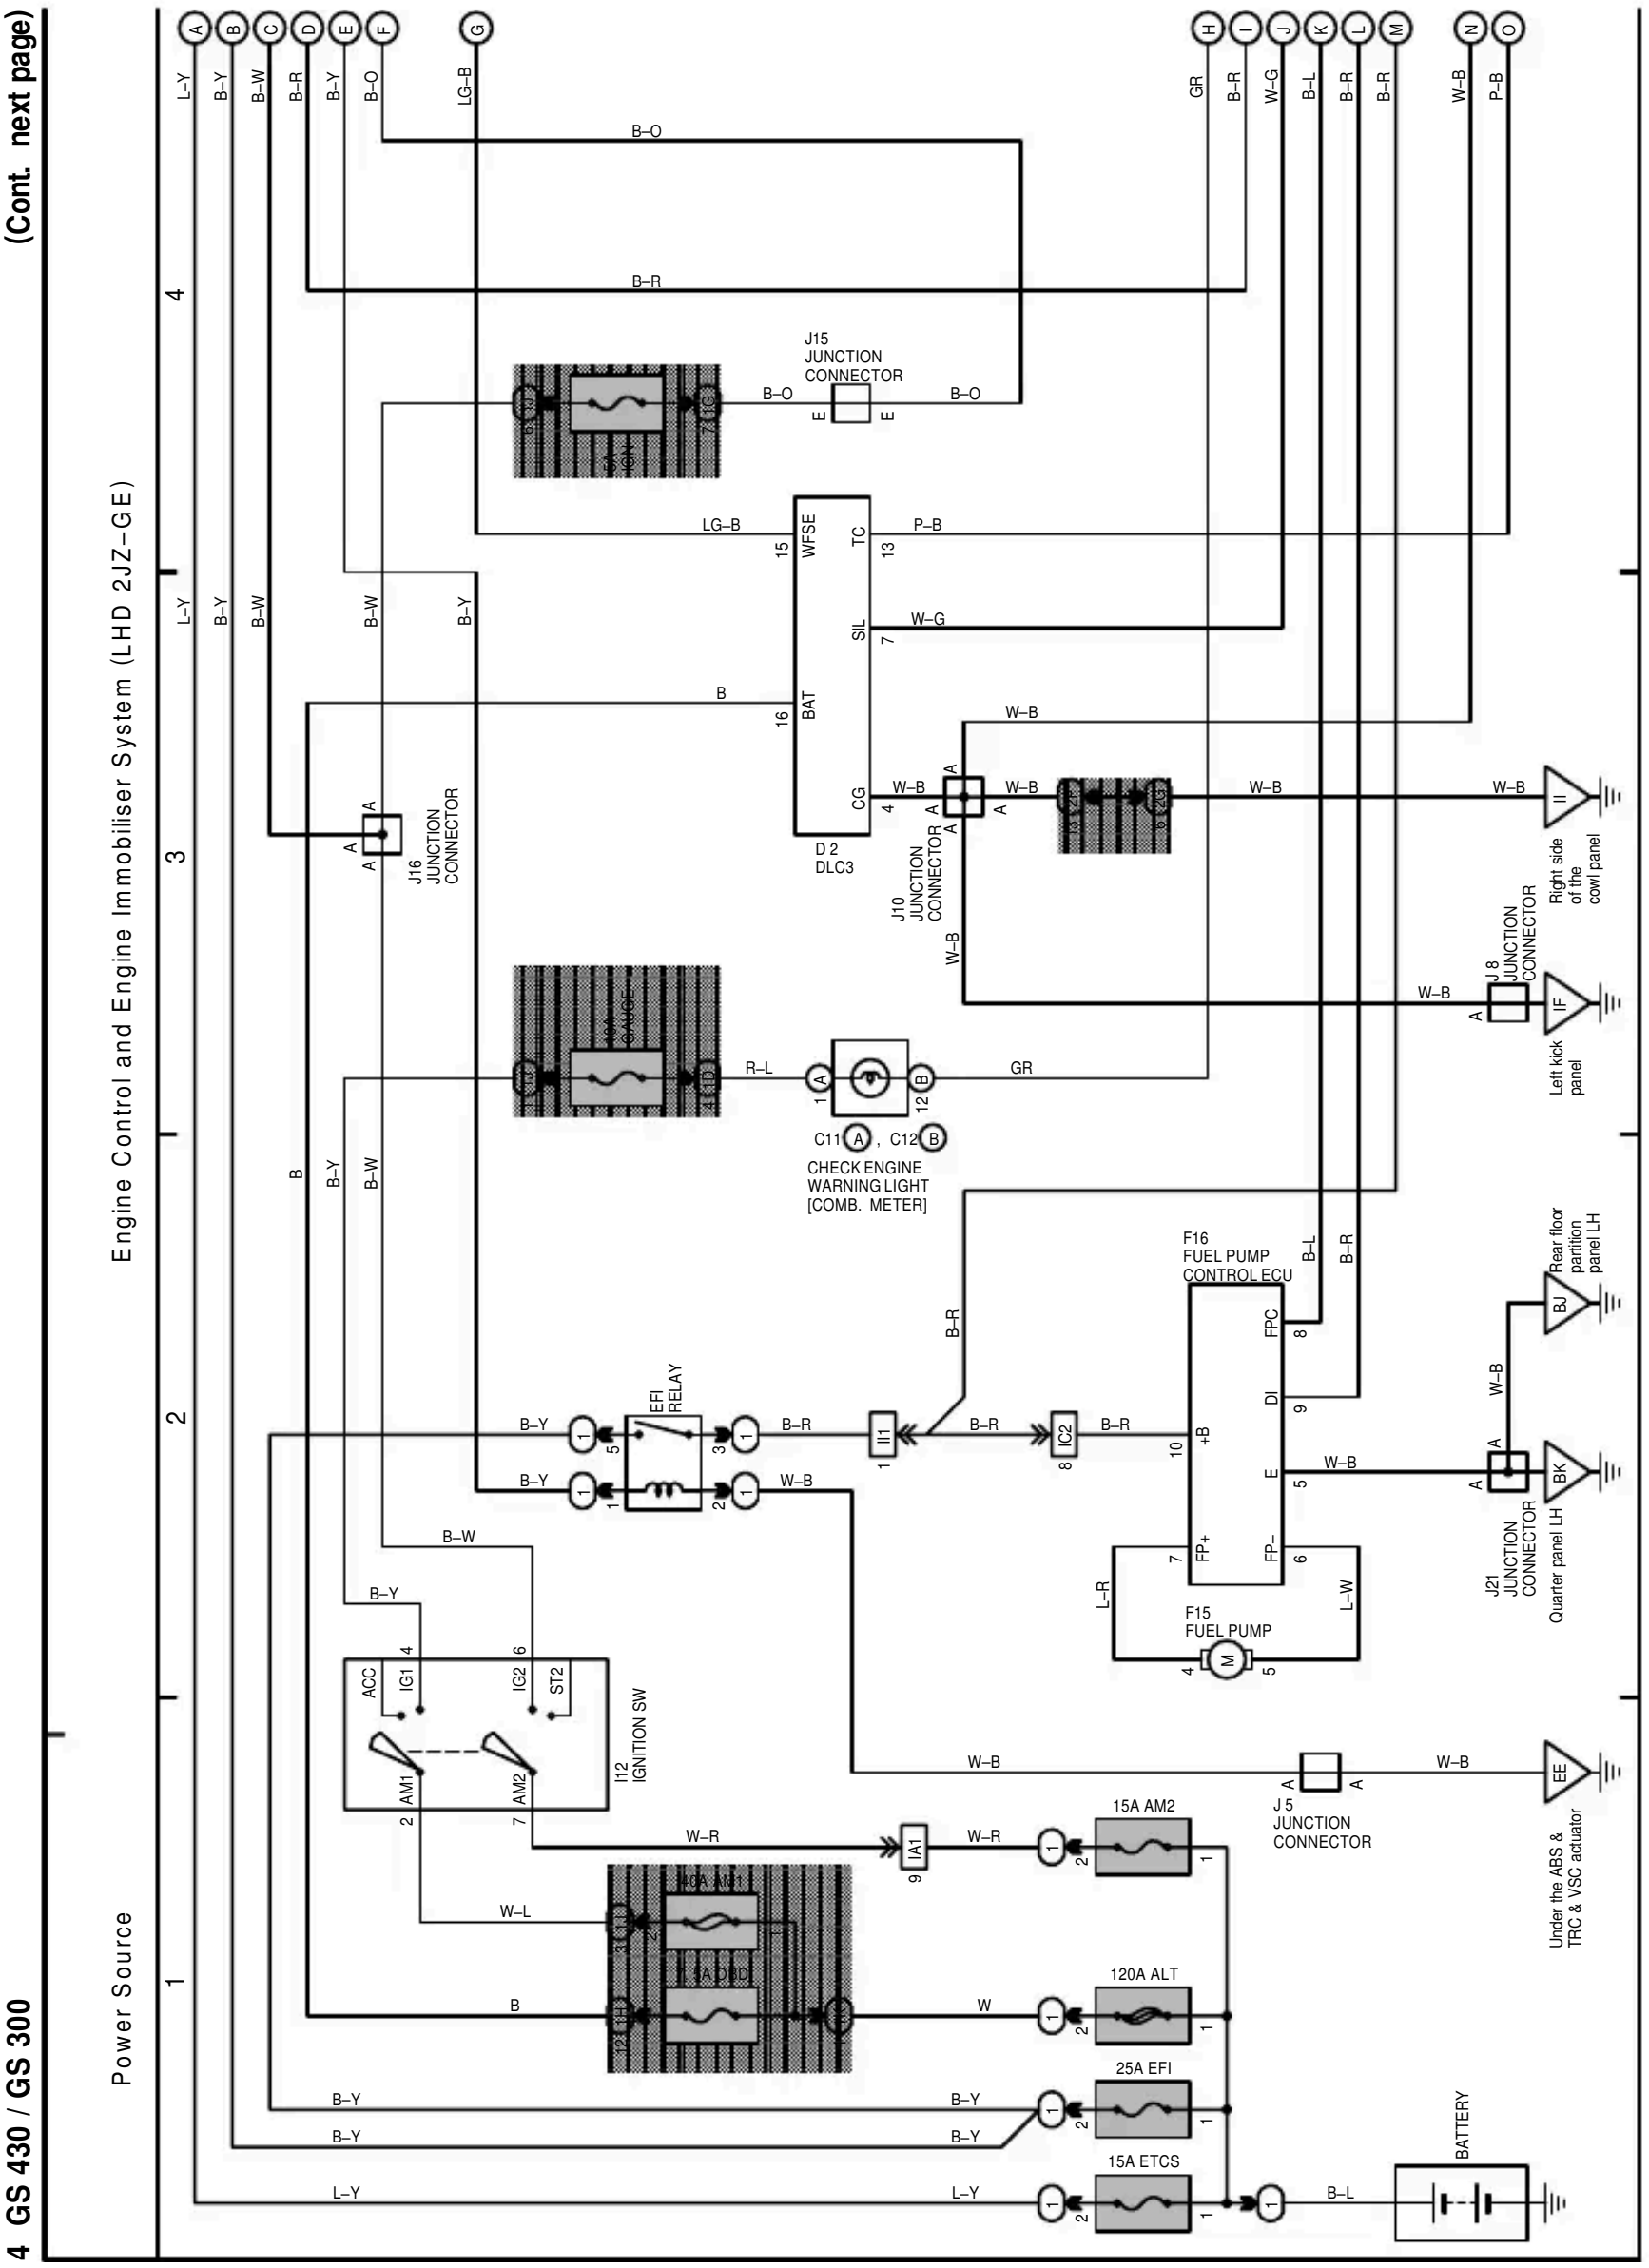

(Cont. next page)

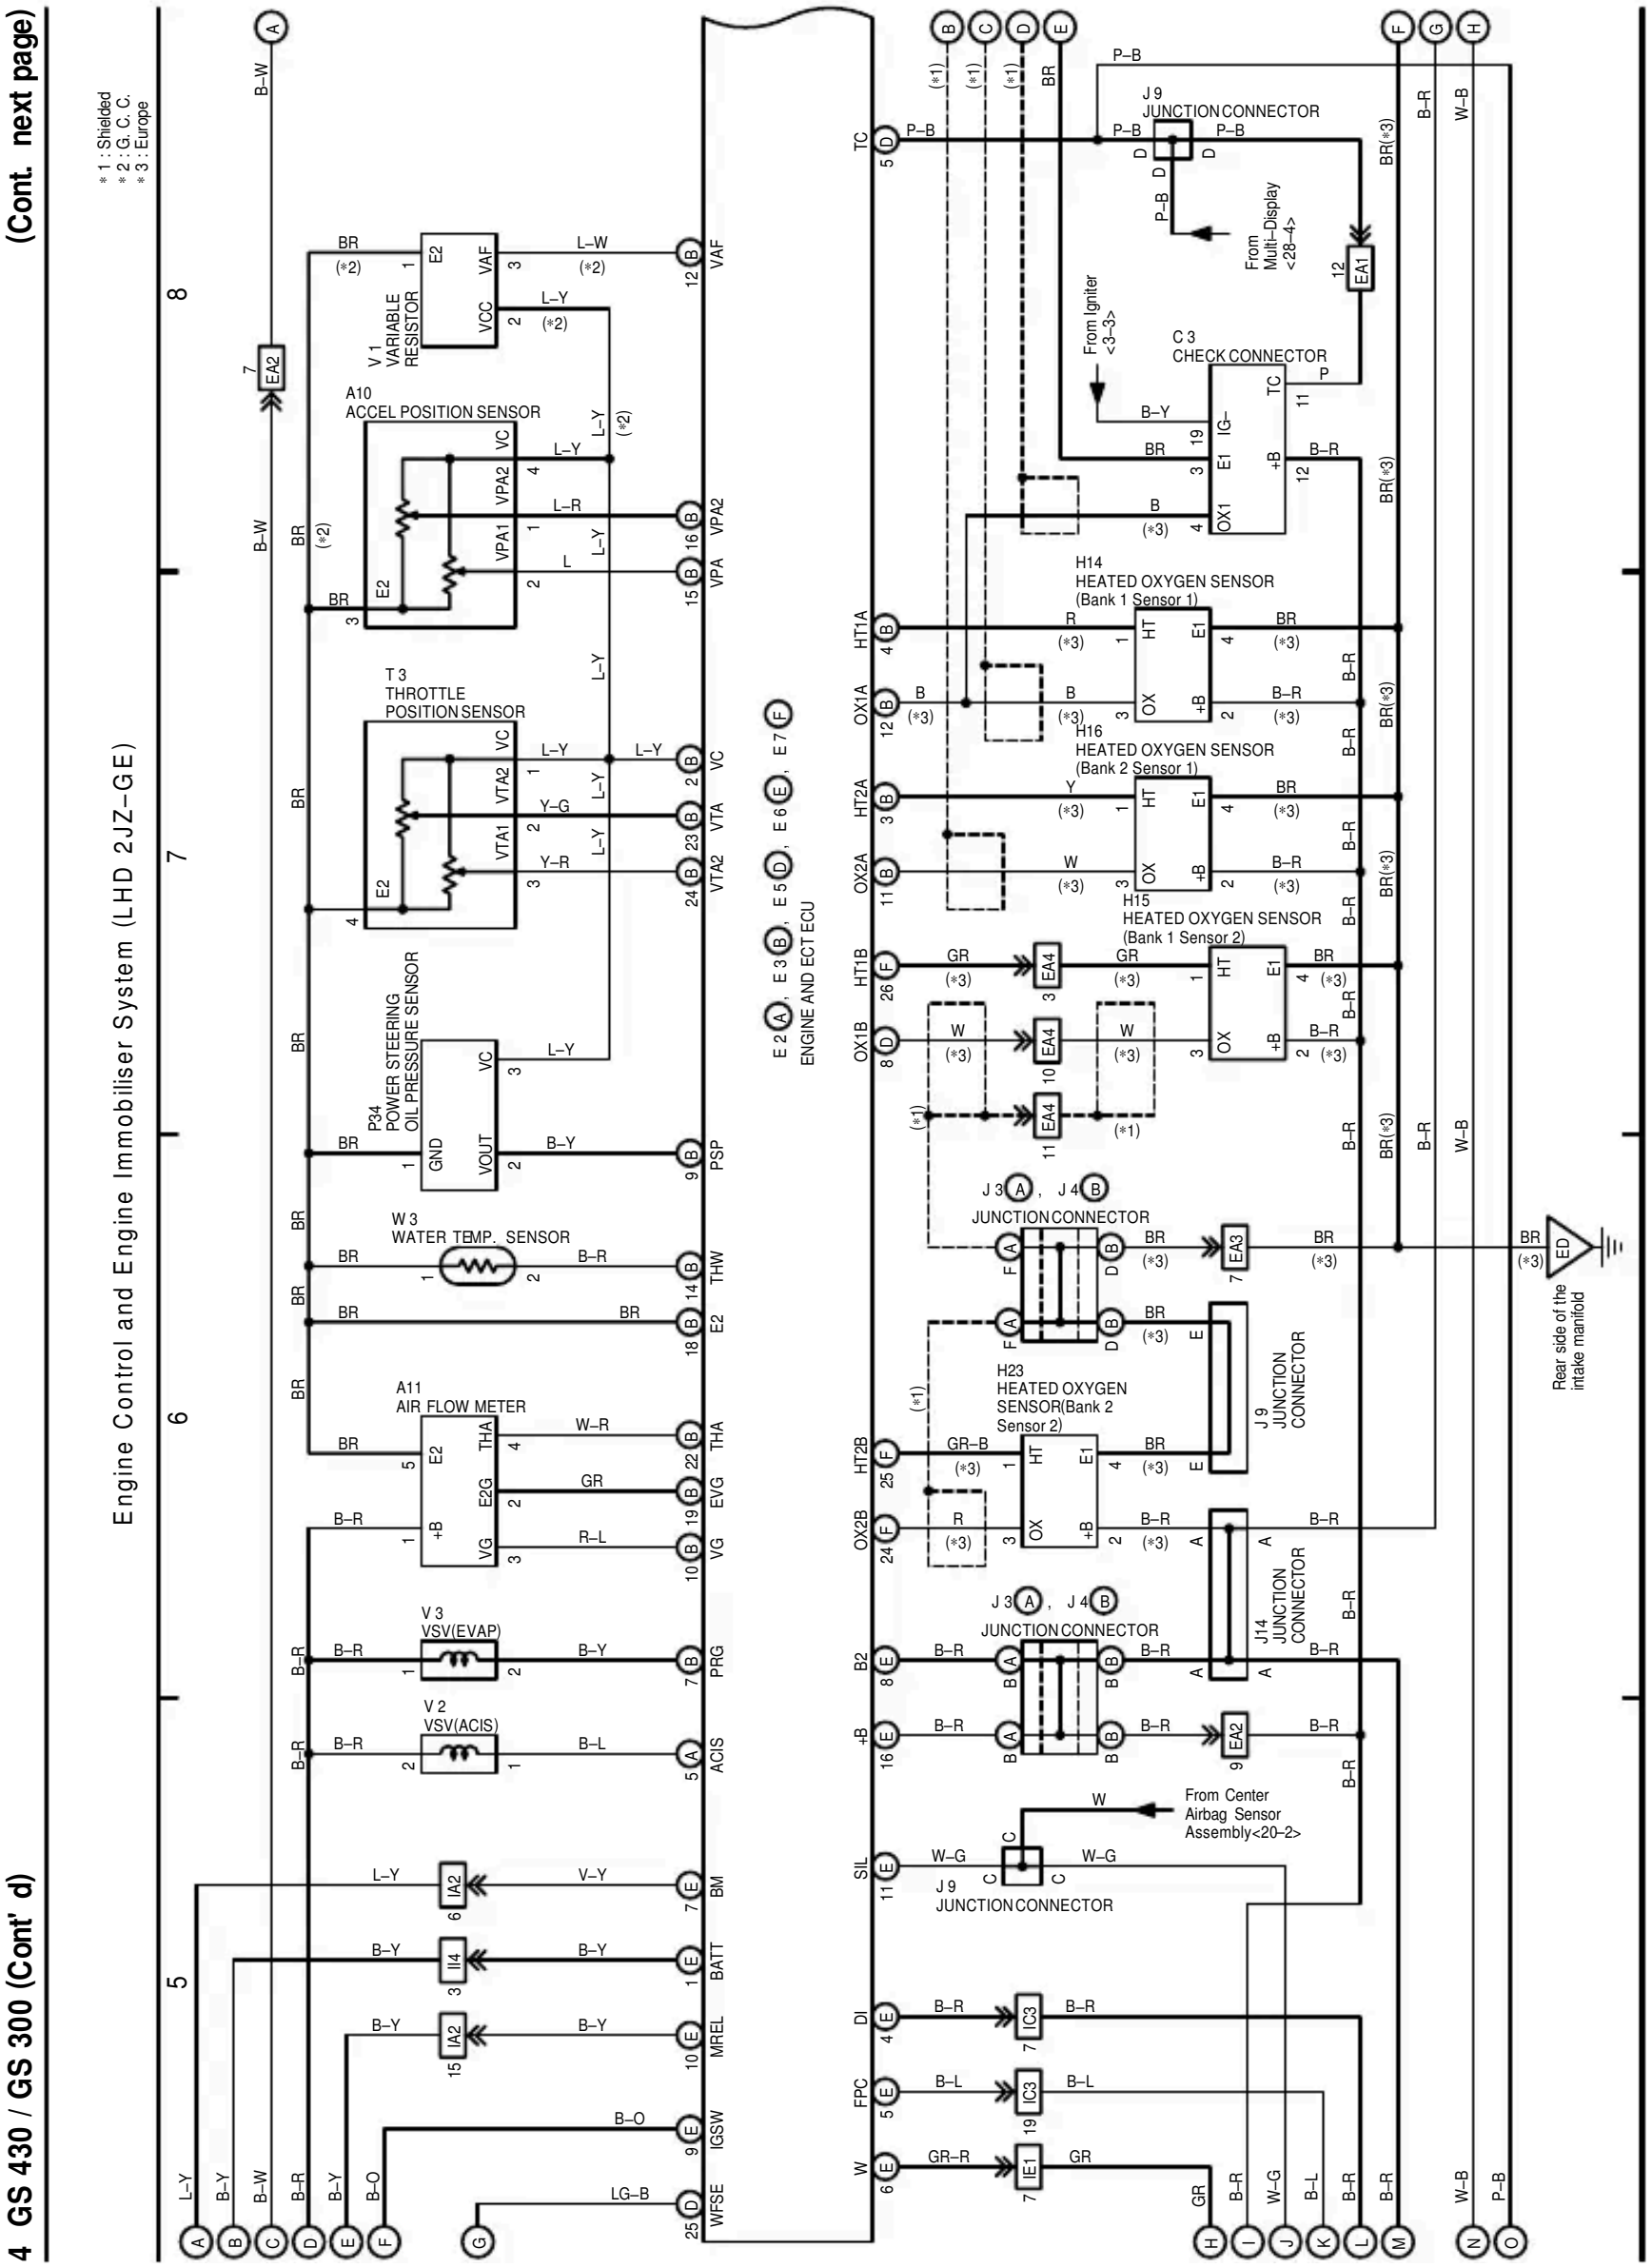

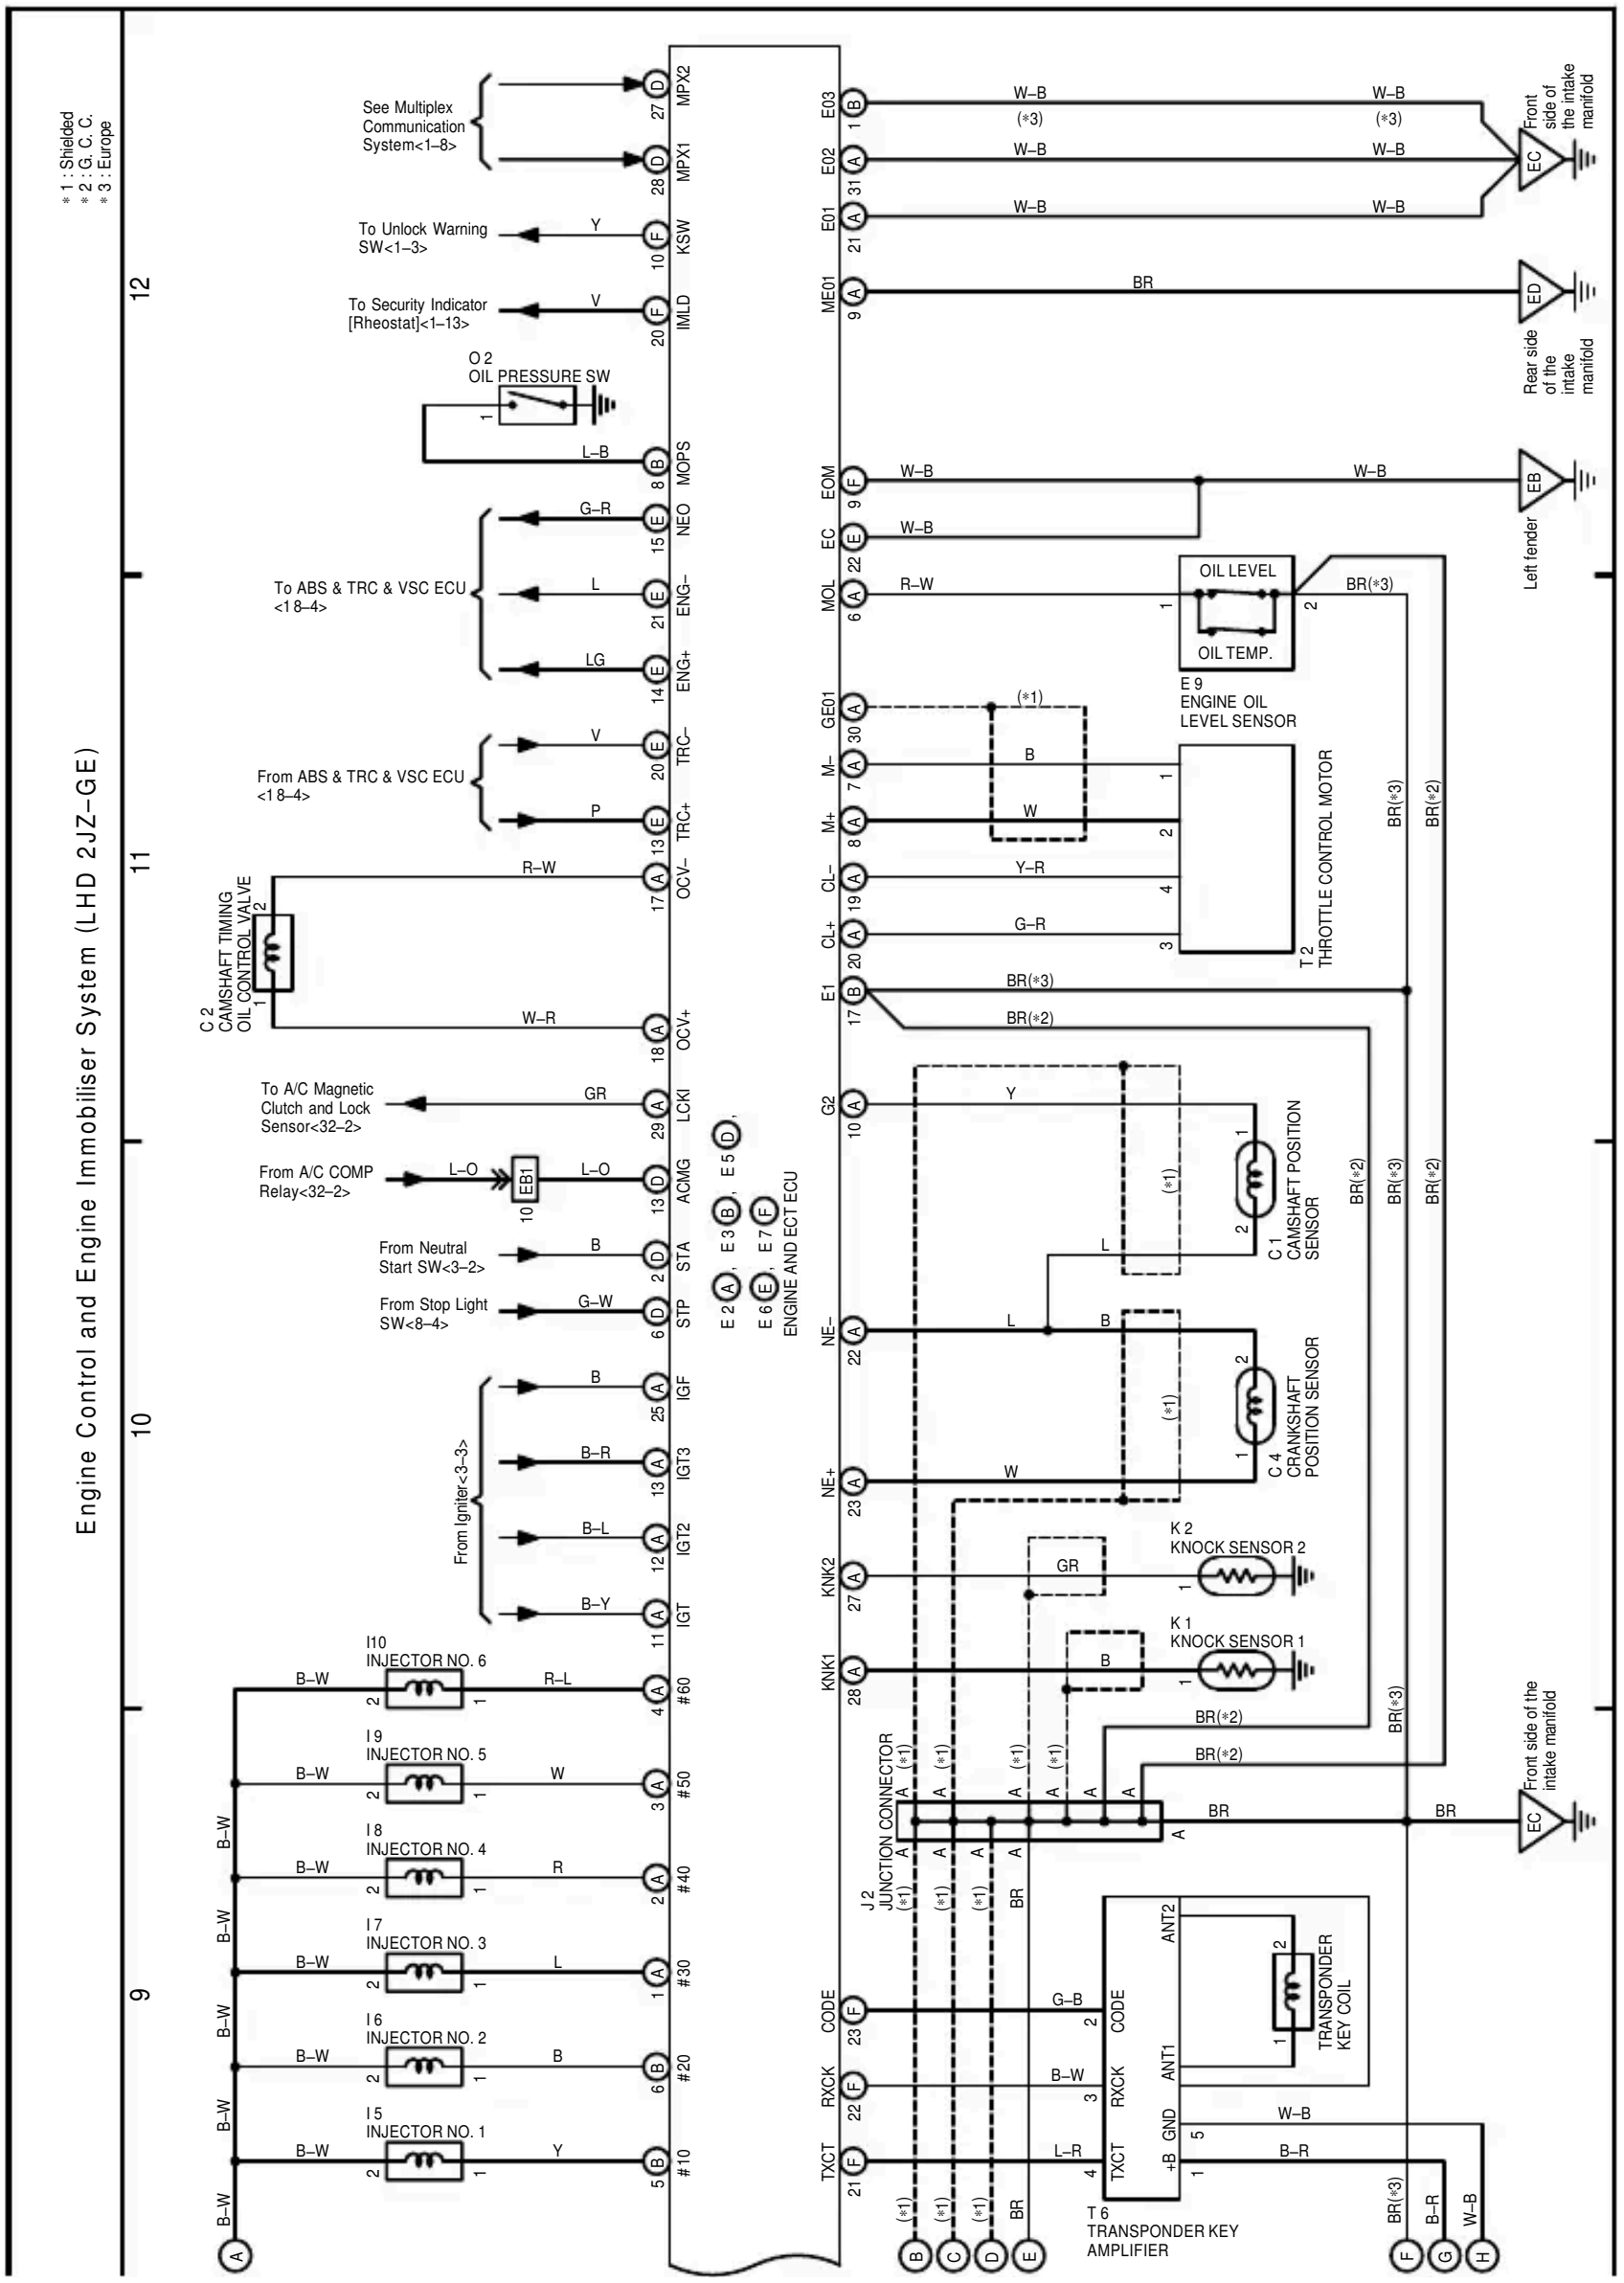
4 GS 430 / GS 300 (Cont' d)
Engine Control and Engine Immobiliser System (LHD 2JZ–GE)
* 1 : Shielded
* 2 : G. C. C.
* 3 : Europe
See Multiplex Communication System<1–8>
To Unlock Warning SW<1–3>
To Security Indicator [Rheostat]<1–13>
O 2 OIL PRESSURE SW
To ABS & TRC & VSC ECU <18–4>
From ABS & TRC & VSC ECU <18–4>
C 2 CAMSHAFT TIMING OIL CONTROL VALVE
To A/C Magnetic Clutch and Lock Sensor<32–2>
From A/C COMP Relay<32–2>
From Neutral Start SW<3–2>
From Stop Light SW<8–4>
From Igniter<3–3>
I10 INJECTOR NO. 6
I9 INJECTOR NO. 5
I8 INJECTOR NO. 4
I7 INJECTOR NO. 3
I6 INJECTOR NO. 2
I5 INJECTOR NO. 1
E 2, E 3, E 5, E 6, E 7 ENGINE AND ECT ECU
Front side of the intake manifold
Rear side of the intake manifold
Left fender
OIL LEVEL
OIL TEMP.
E 9 ENGINE OIL LEVEL SENSOR
T 2 THROTTLE CONTROL MOTOR
C 1 CAMSHAFT POSITION SENSOR
C 4 CRANKSHAFT POSITION SENSOR
K 2 KNOCK SENSOR 2
K 1 KNOCK SENSOR 1
J 2 JUNCTION CONNECTOR
TRANSPONDER KEY COIL
T 6 TRANSPONDER KEY AMPLIFIER

(Cont. next page)

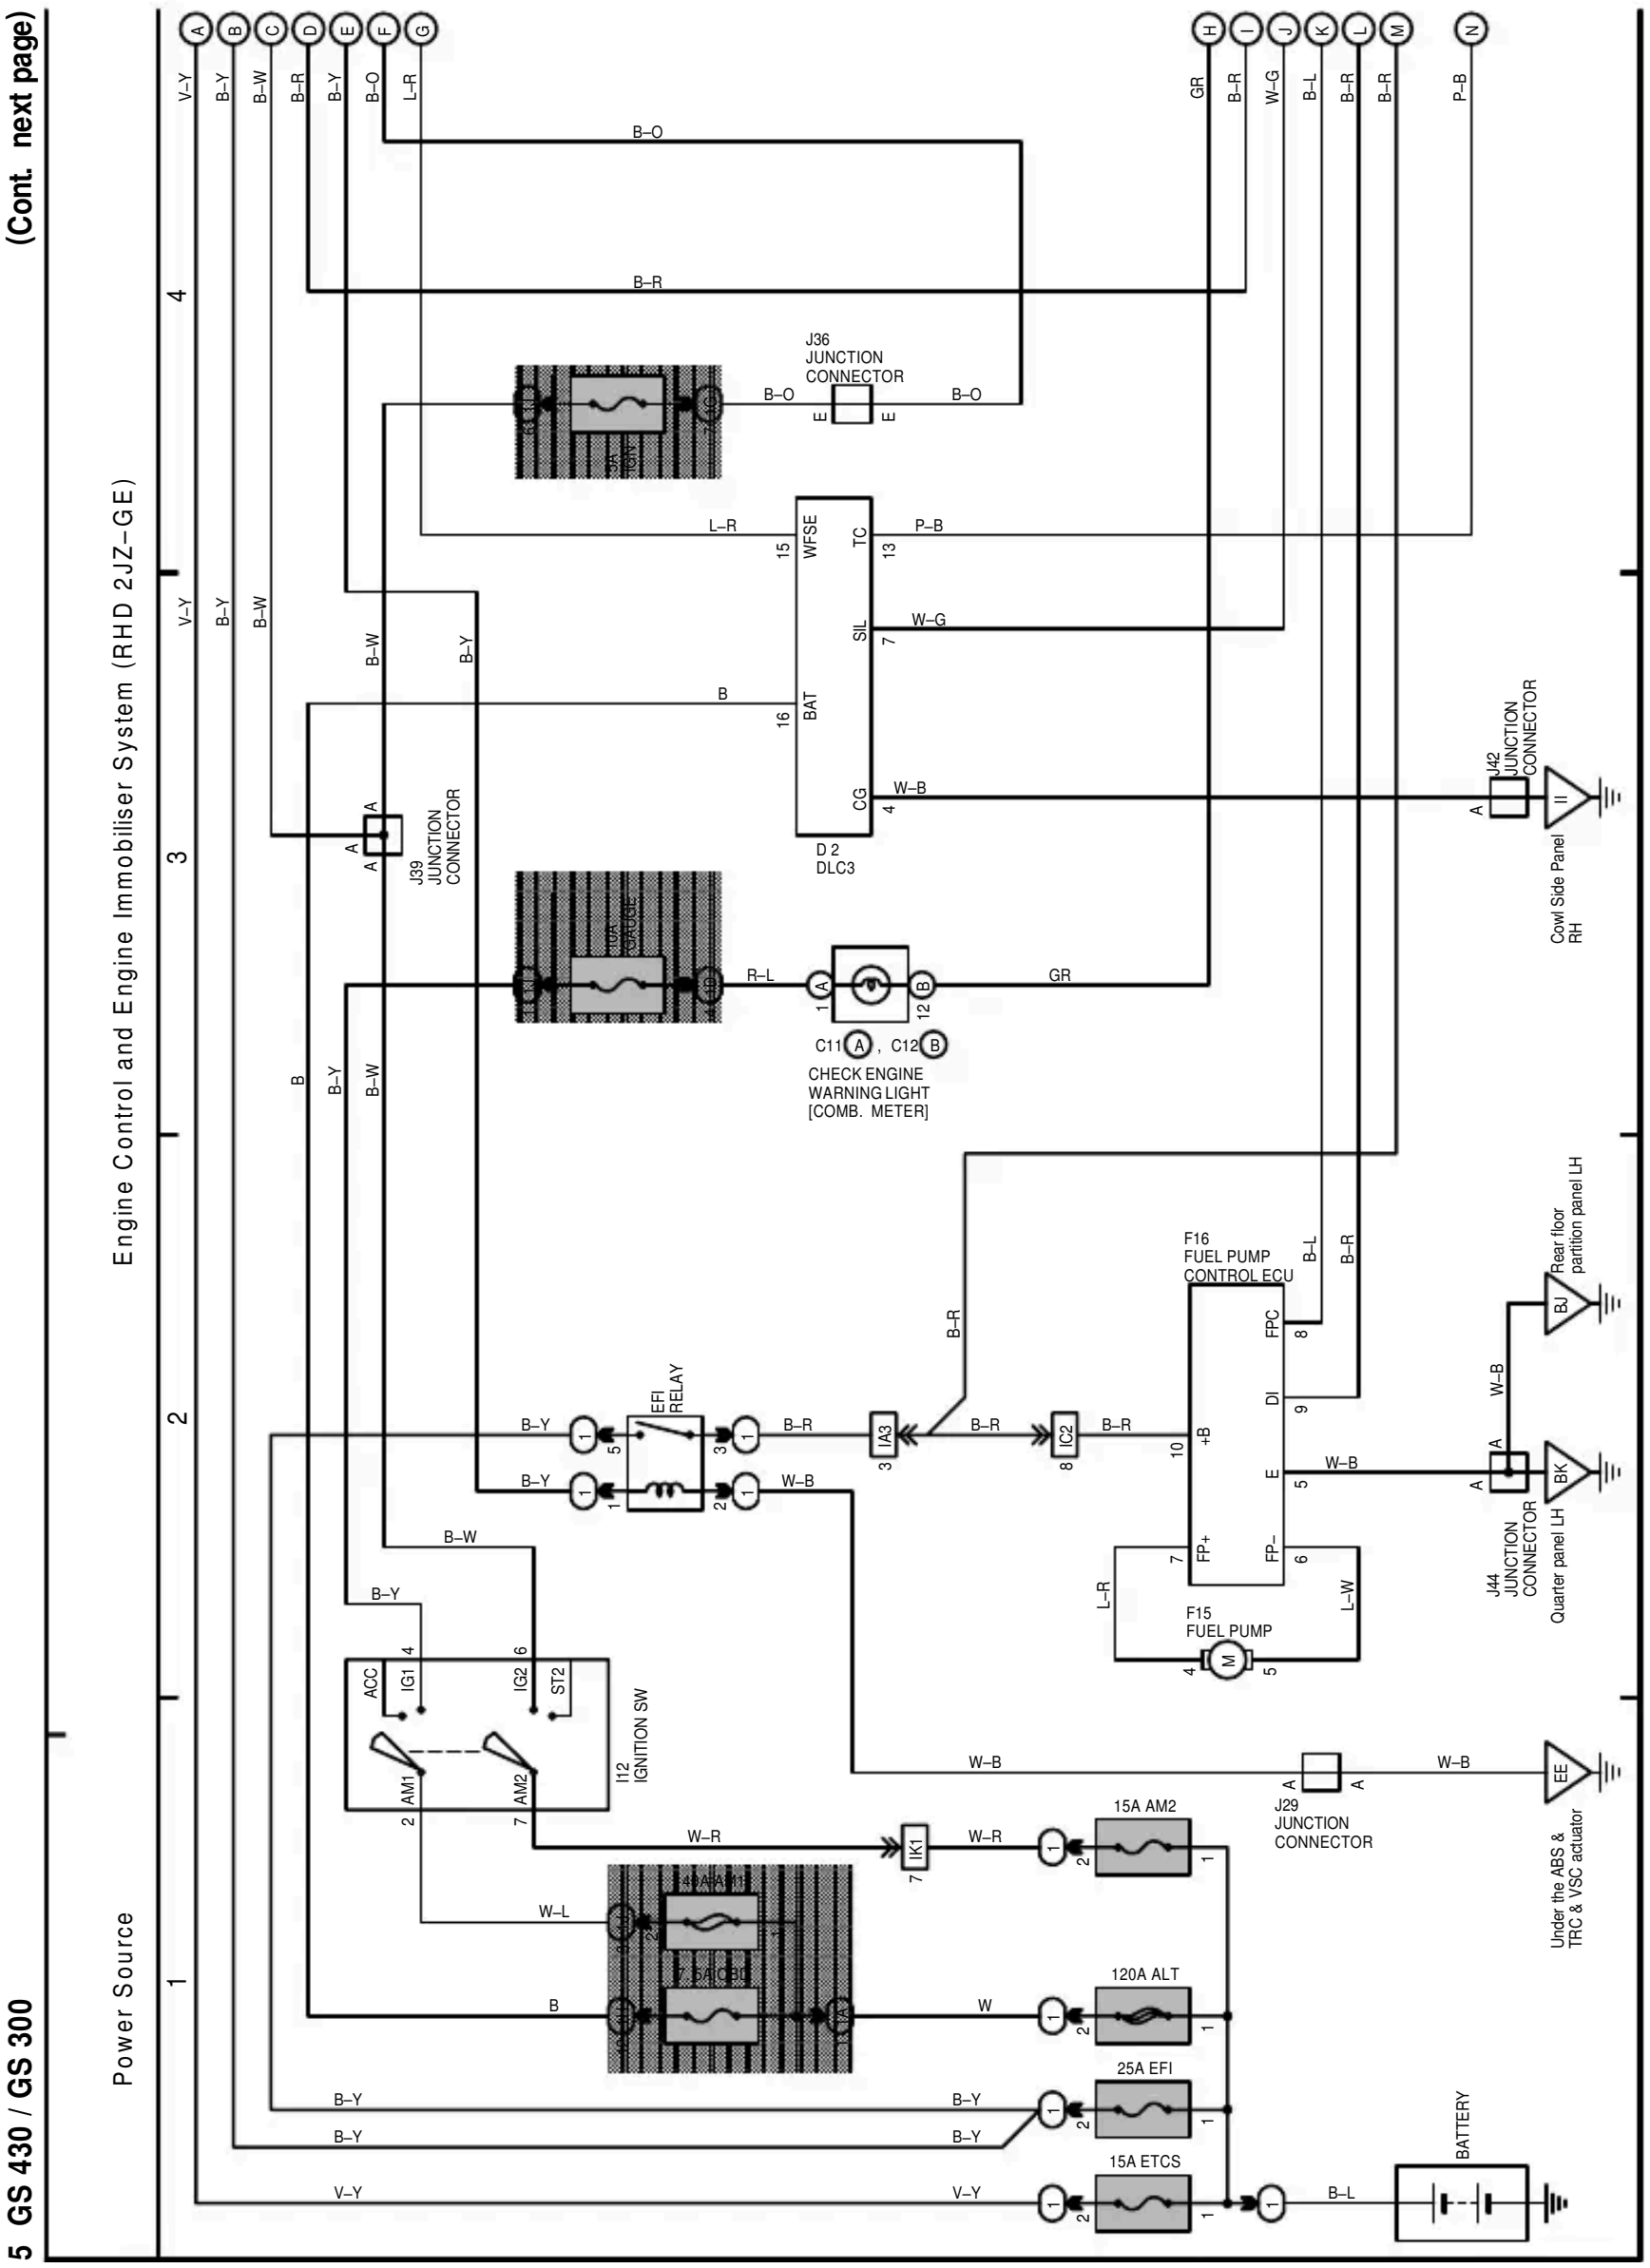

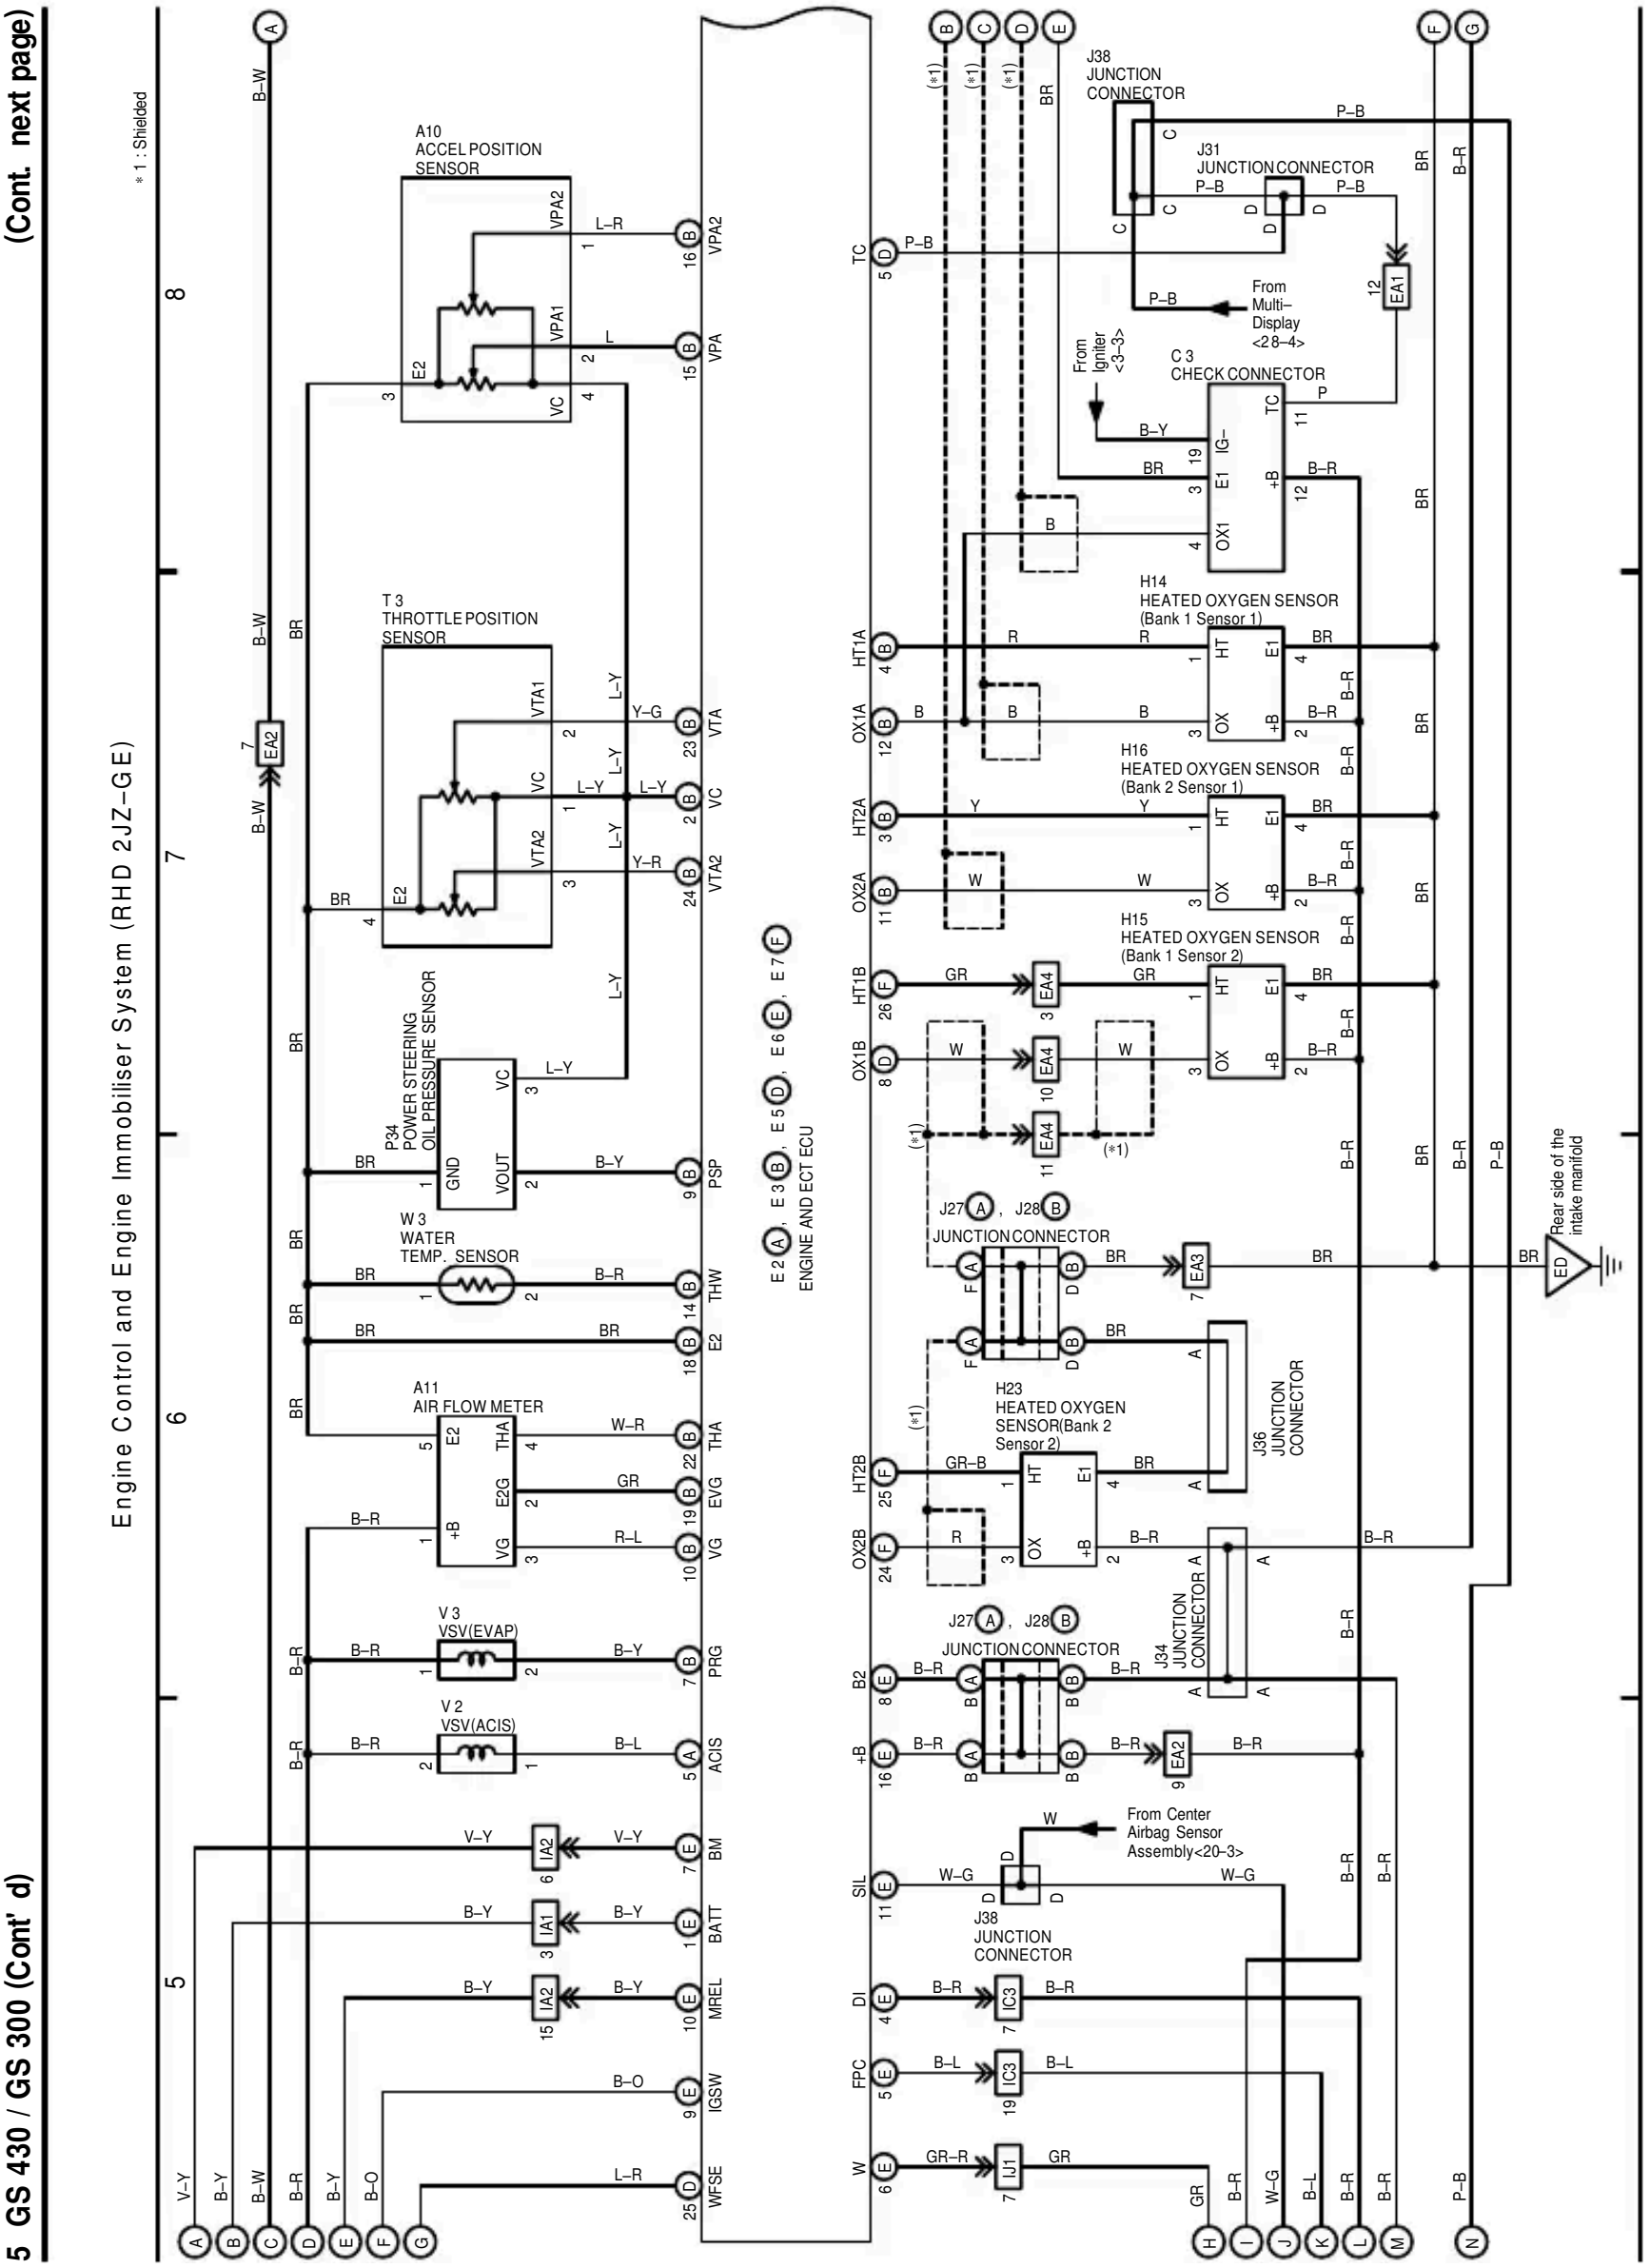
(Cont. next page)
Engine Control and Engine Immobiliser System (RHD 2JZ–GE)
5 GS 430 / GS 300 (Cont' d)
* 1 : Shielded
A10
ACCEL POSITION SENSOR
T 3
THROTTLE POSITION SENSOR
P34
POWER STEERING OIL PRESSURE SENSOR
W 3
WATER TEMP. SENSOR
A11
AIR FLOW METER
V 3
VSV(EVAP)
V 2
VSV(ACIS)
J38
JUNCTION CONNECTOR
J31
JUNCTION CONNECTOR
From Multi–Display <28–4>
From Igniter <3–3>
C 3
CHECK CONNECTOR
H14
HEATED OXYGEN SENSOR (Bank 1 Sensor 1)
H16
HEATED OXYGEN SENSOR (Bank 2 Sensor 1)
H15
HEATED OXYGEN SENSOR (Bank 1 Sensor 2)
H23
HEATED OXYGEN SENSOR(Bank 2 Sensor 2)
J27 , J28
JUNCTION CONNECTOR
J36 JUNCTION CONNECTOR
J34 JUNCTION CONNECTOR
From Center Airbag Sensor Assembly<20–3>
E 2 , E 3 , E 5 , E 6 , E 7
ENGINE AND ECT ECU
Rear side of the intake manifold

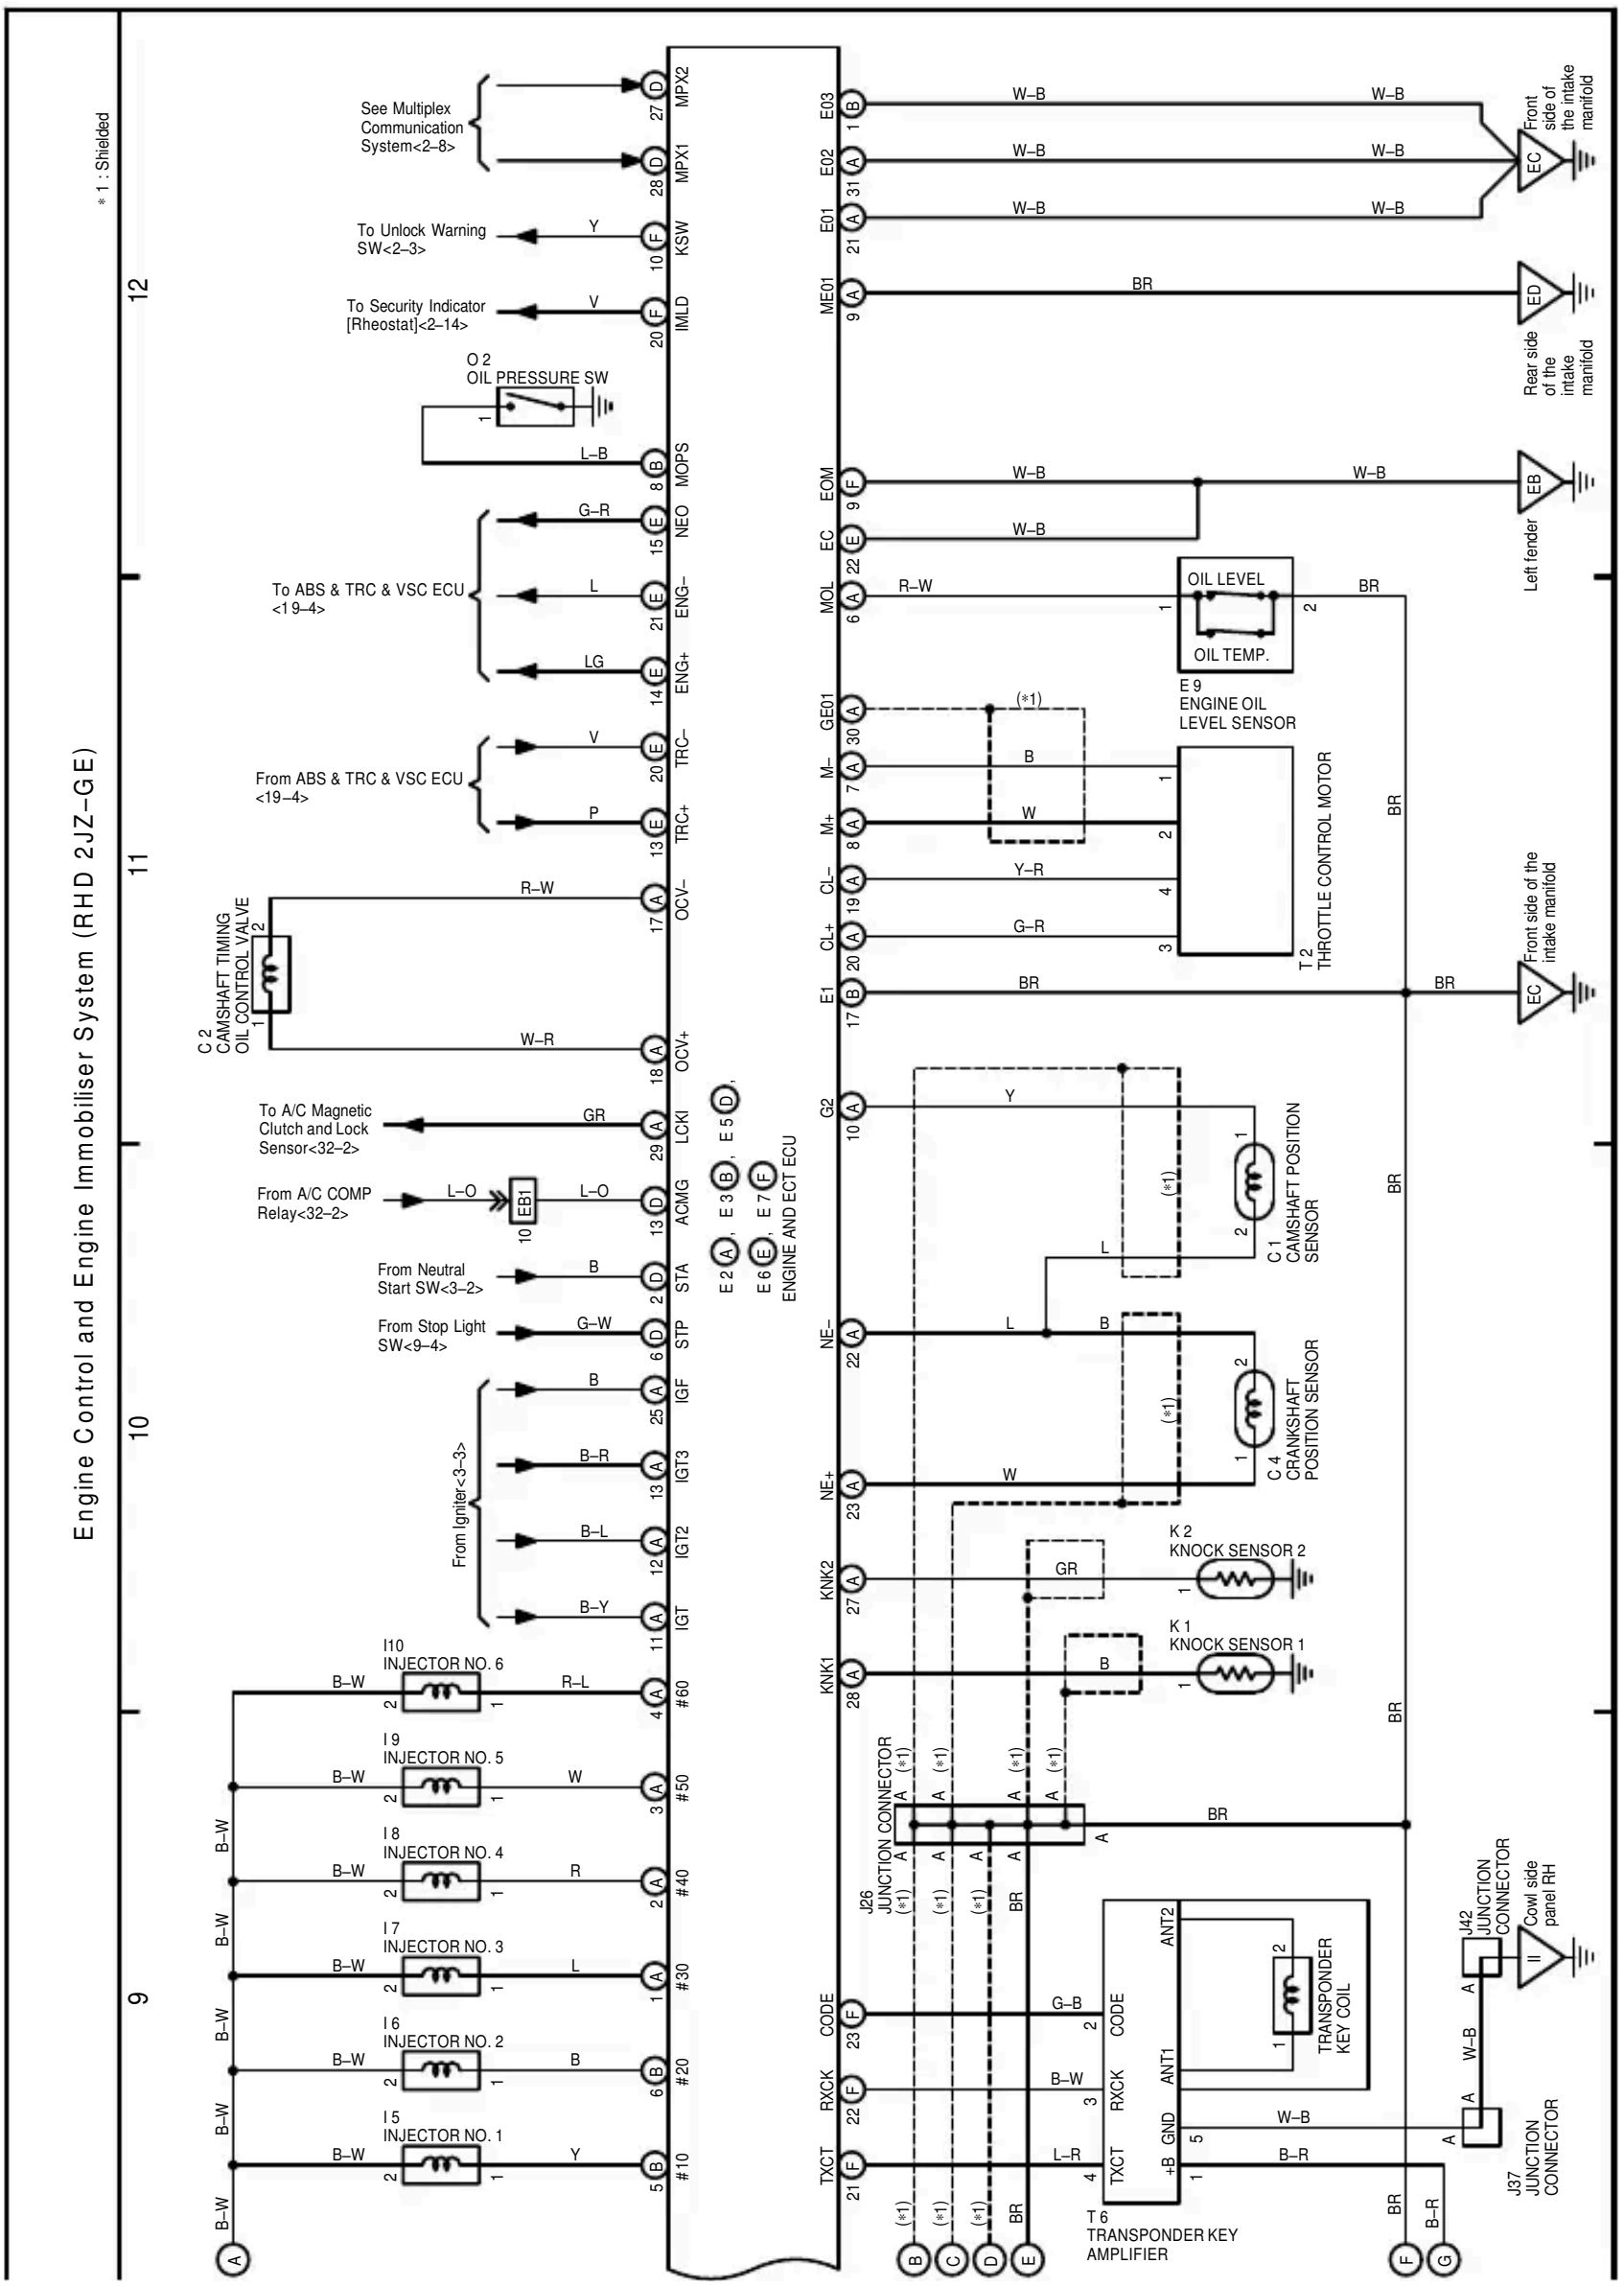
Engine Control and Engine Immobiliser System (RHD 2JZ–GE)
*1 : Shielded
See Multiplex Communication System<2–8>
To Unlock Warning SW<2–3>
To Security Indicator [Rheostat]<2–14>
O 2 OIL PRESSURE SW
To ABS & TRC & VSC ECU <19–4>
From ABS & TRC & VSC ECU <19–4>
C 2 CAMSHAFT TIMING OIL CONTROL VALVE
To A/C Magnetic Clutch and Lock Sensor<32–2>
From A/C COMP Relay<32–2>
From Neutral Start SW<3–2>
From Stop Light SW<9–4>
From Igniter<3–3>
I10 INJECTOR NO. 6
I 9 INJECTOR NO. 5
I 8 INJECTOR NO. 4
I 7 INJECTOR NO. 3
I 6 INJECTOR NO. 2
I 5 INJECTOR NO. 1
E 2, E 3, E 5, E 6, E 7 ENGINE AND ECT ECU
Front side of the intake manifold
Rear side of the intake manifold
Left fender
OIL LEVEL
OIL TEMP.
E 9 ENGINE OIL LEVEL SENSOR
T 2 THROTTLE CONTROL MOTOR
C 1 CAMSHAFT POSITION SENSOR
C 4 CRANKSHAFT POSITION SENSOR
K 2 KNOCK SENSOR 2
K 1 KNOCK SENSOR 1
J26 JUNCTION CONNECTOR
TRANSPONDER KEY COIL
T 6 TRANSPONDER KEY AMPLIFIER
J42 JUNCTION CONNECTOR
Cowl side panel RH
J37 JUNCTION CONNECTOR

I OVERALL ELECTRICAL WIRING DIAGRAM

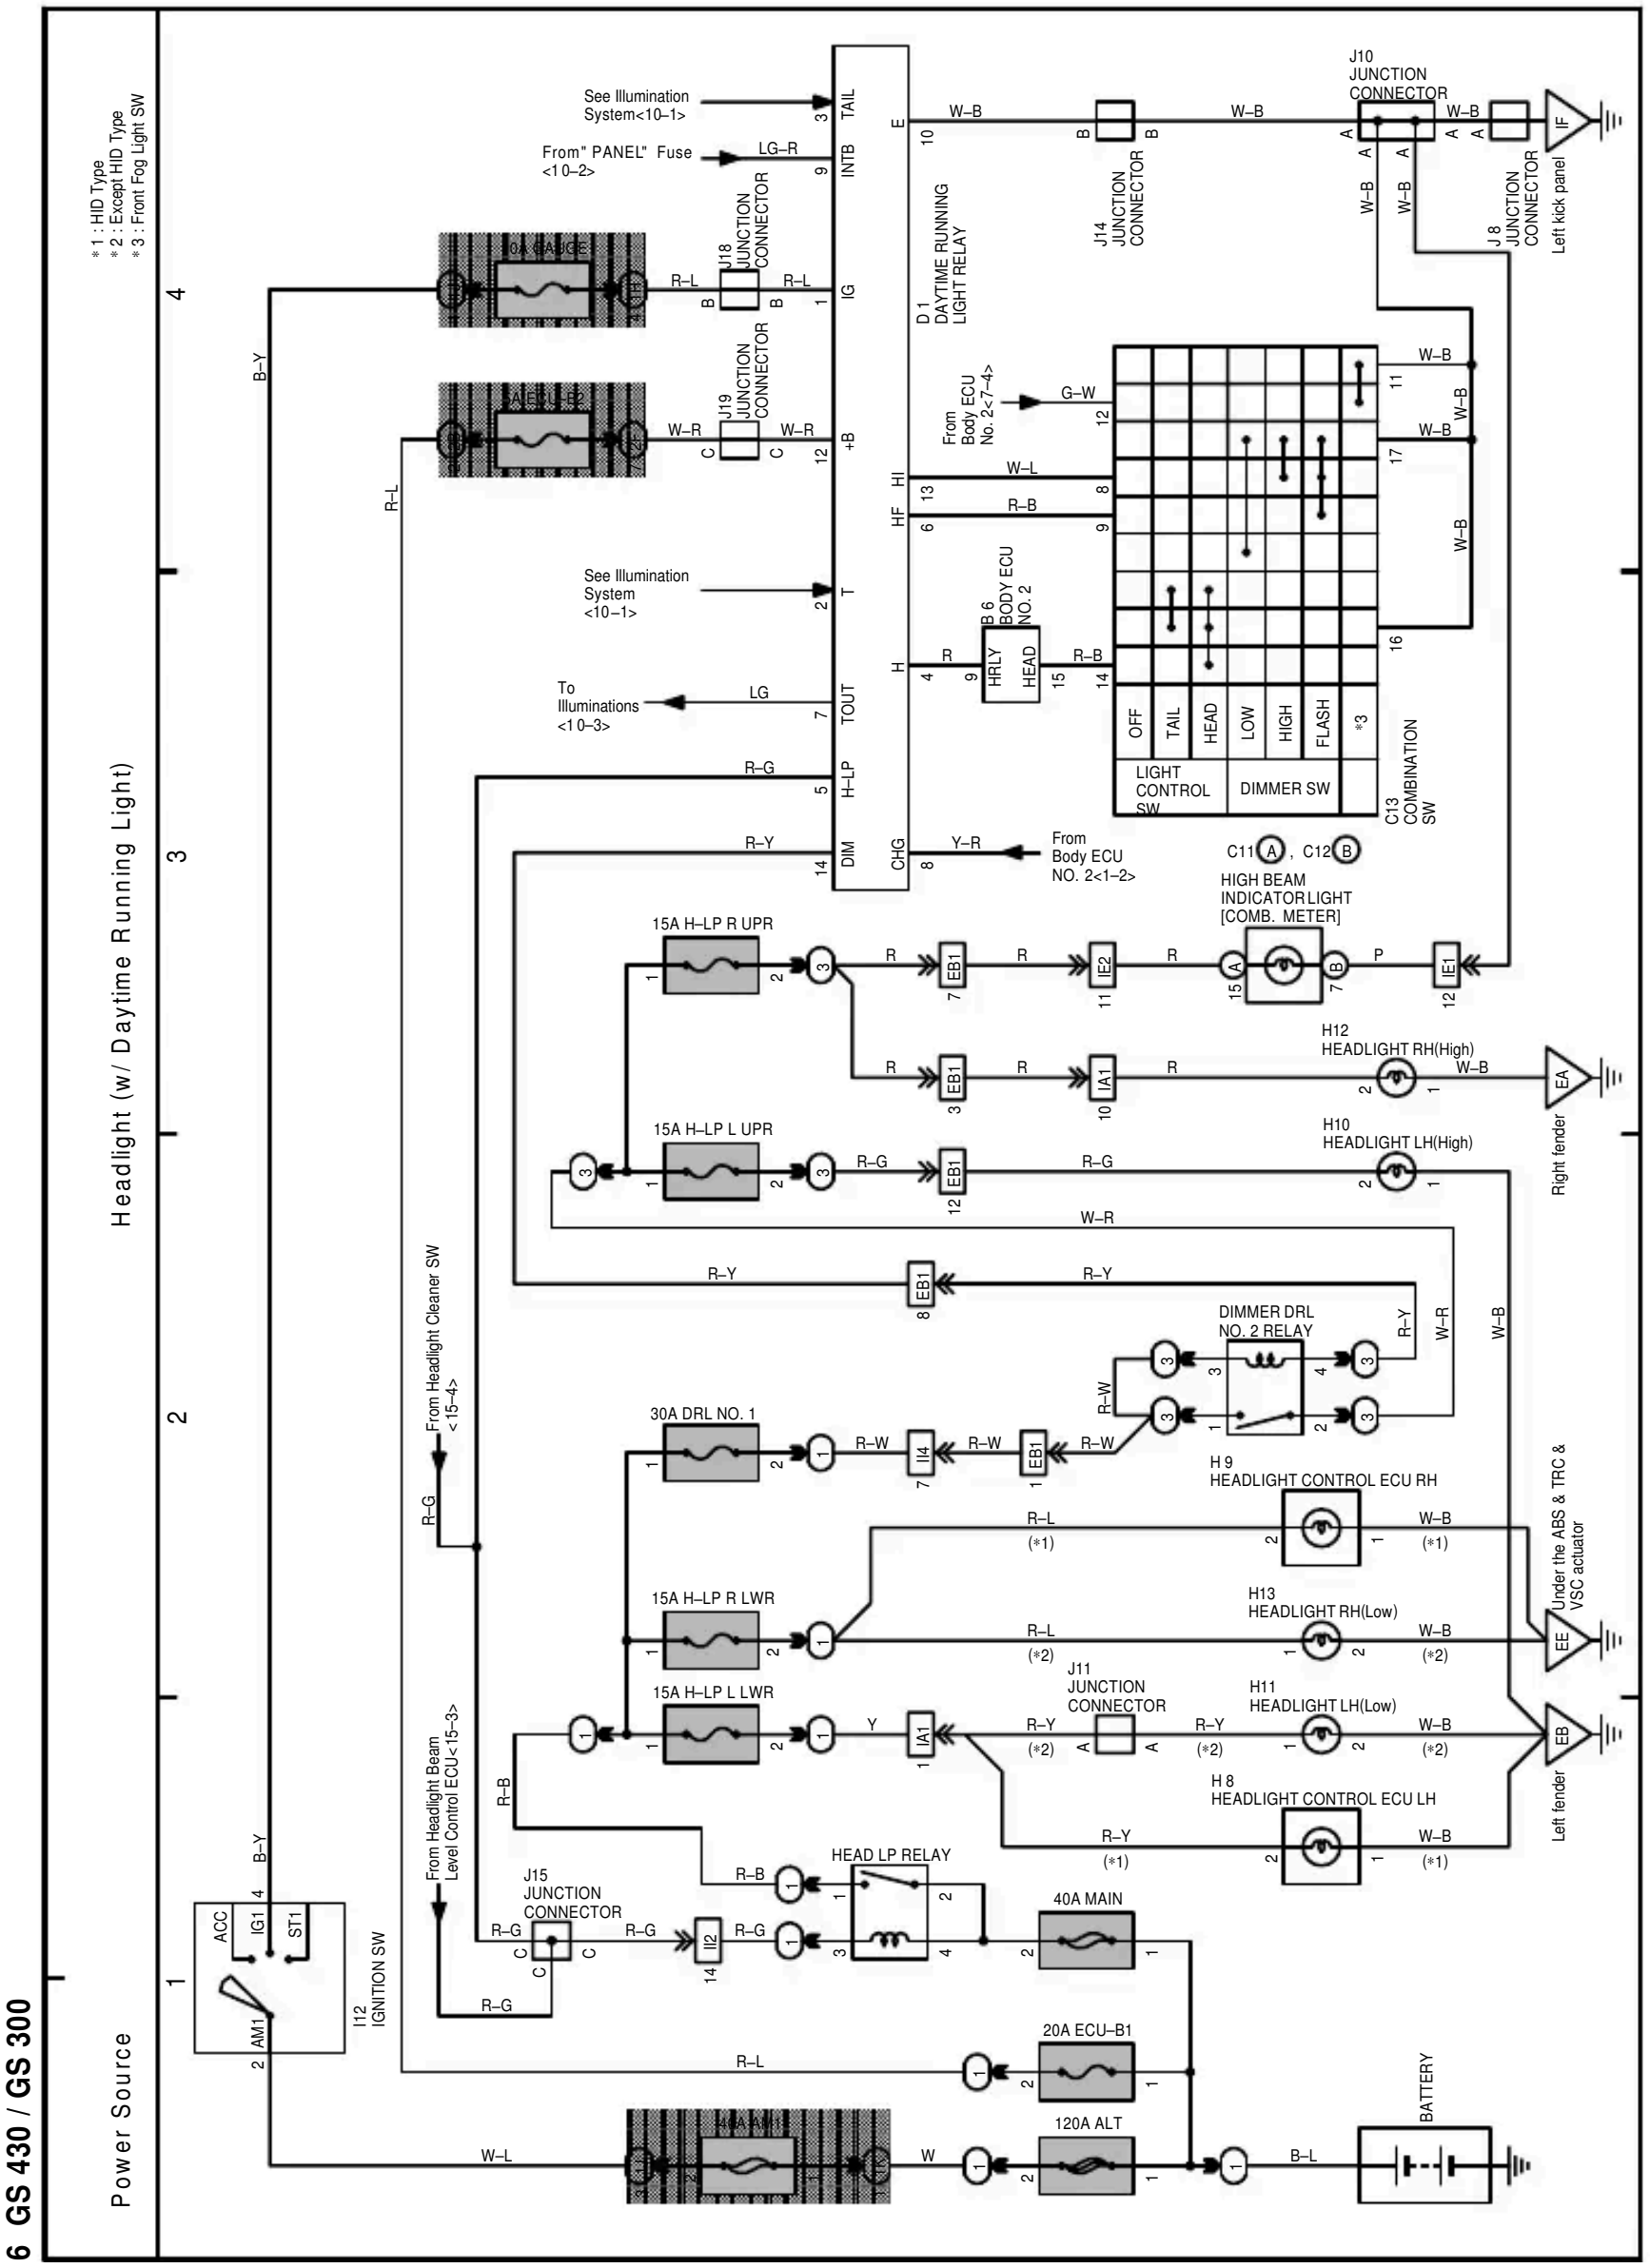

Front Fog Light

Headlight (w/o Daytime Running Light)

Power Source

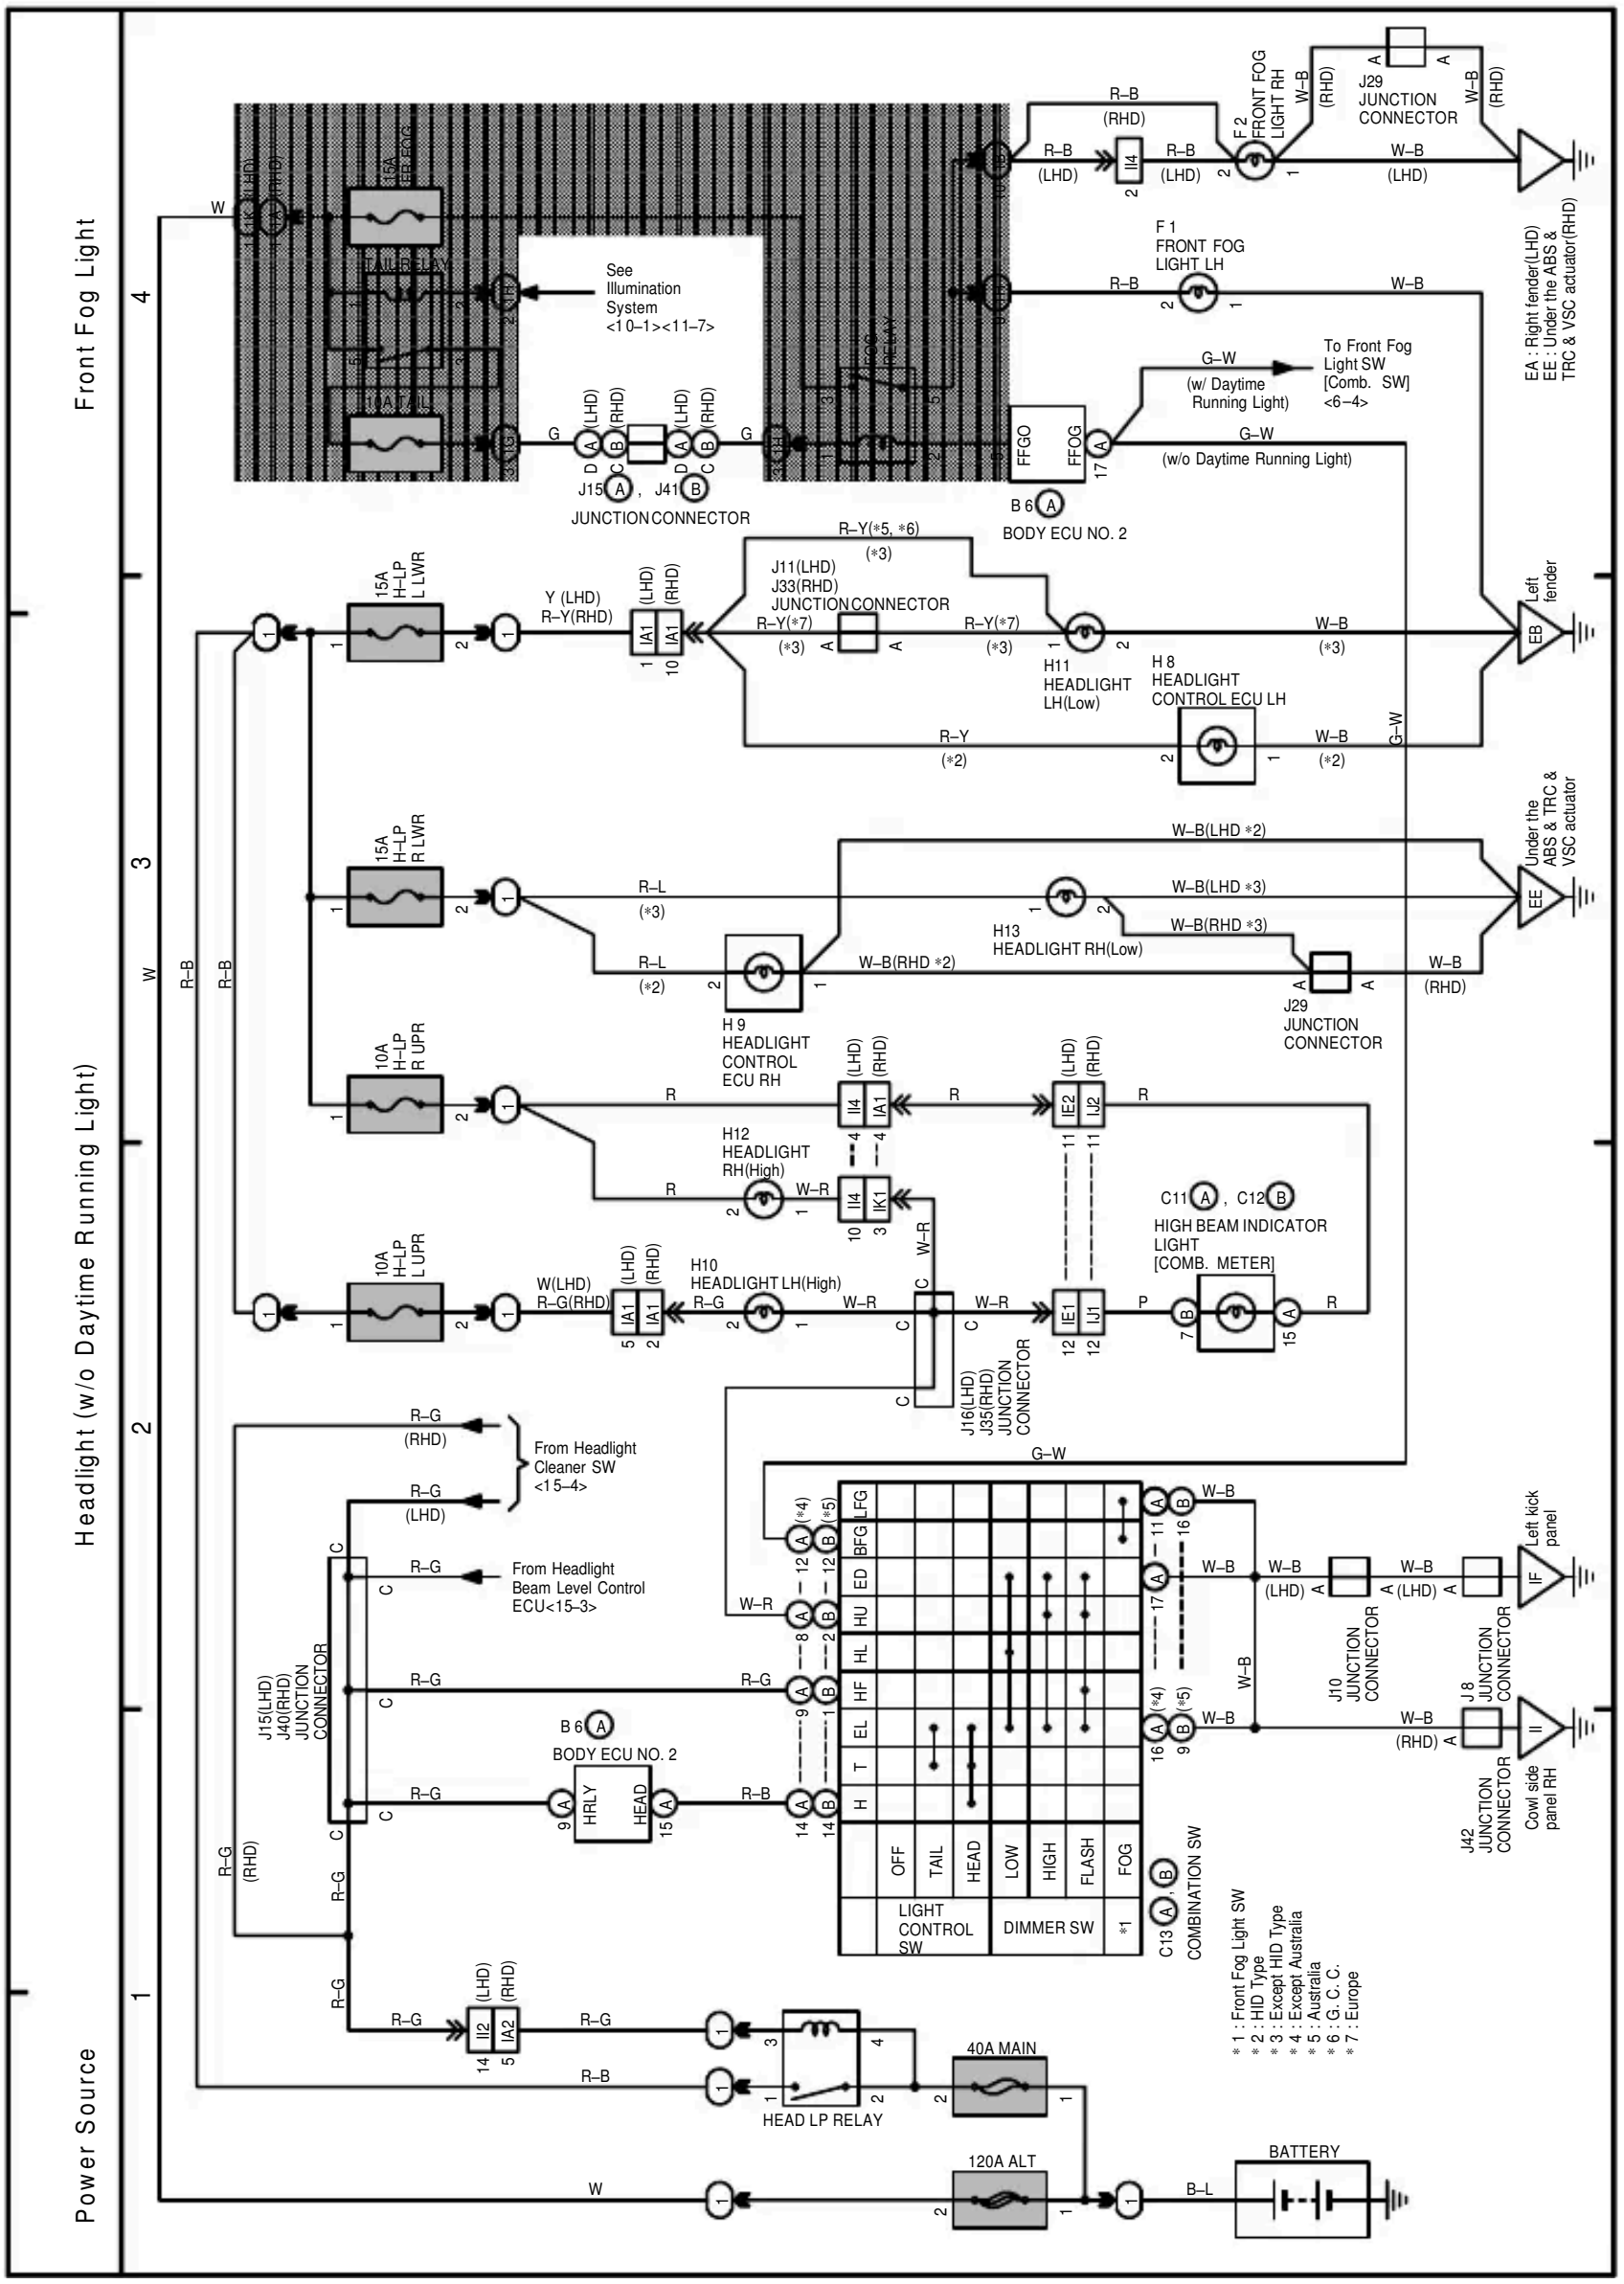

I OVERALL ELECTRICAL WIRING DIAGRAM

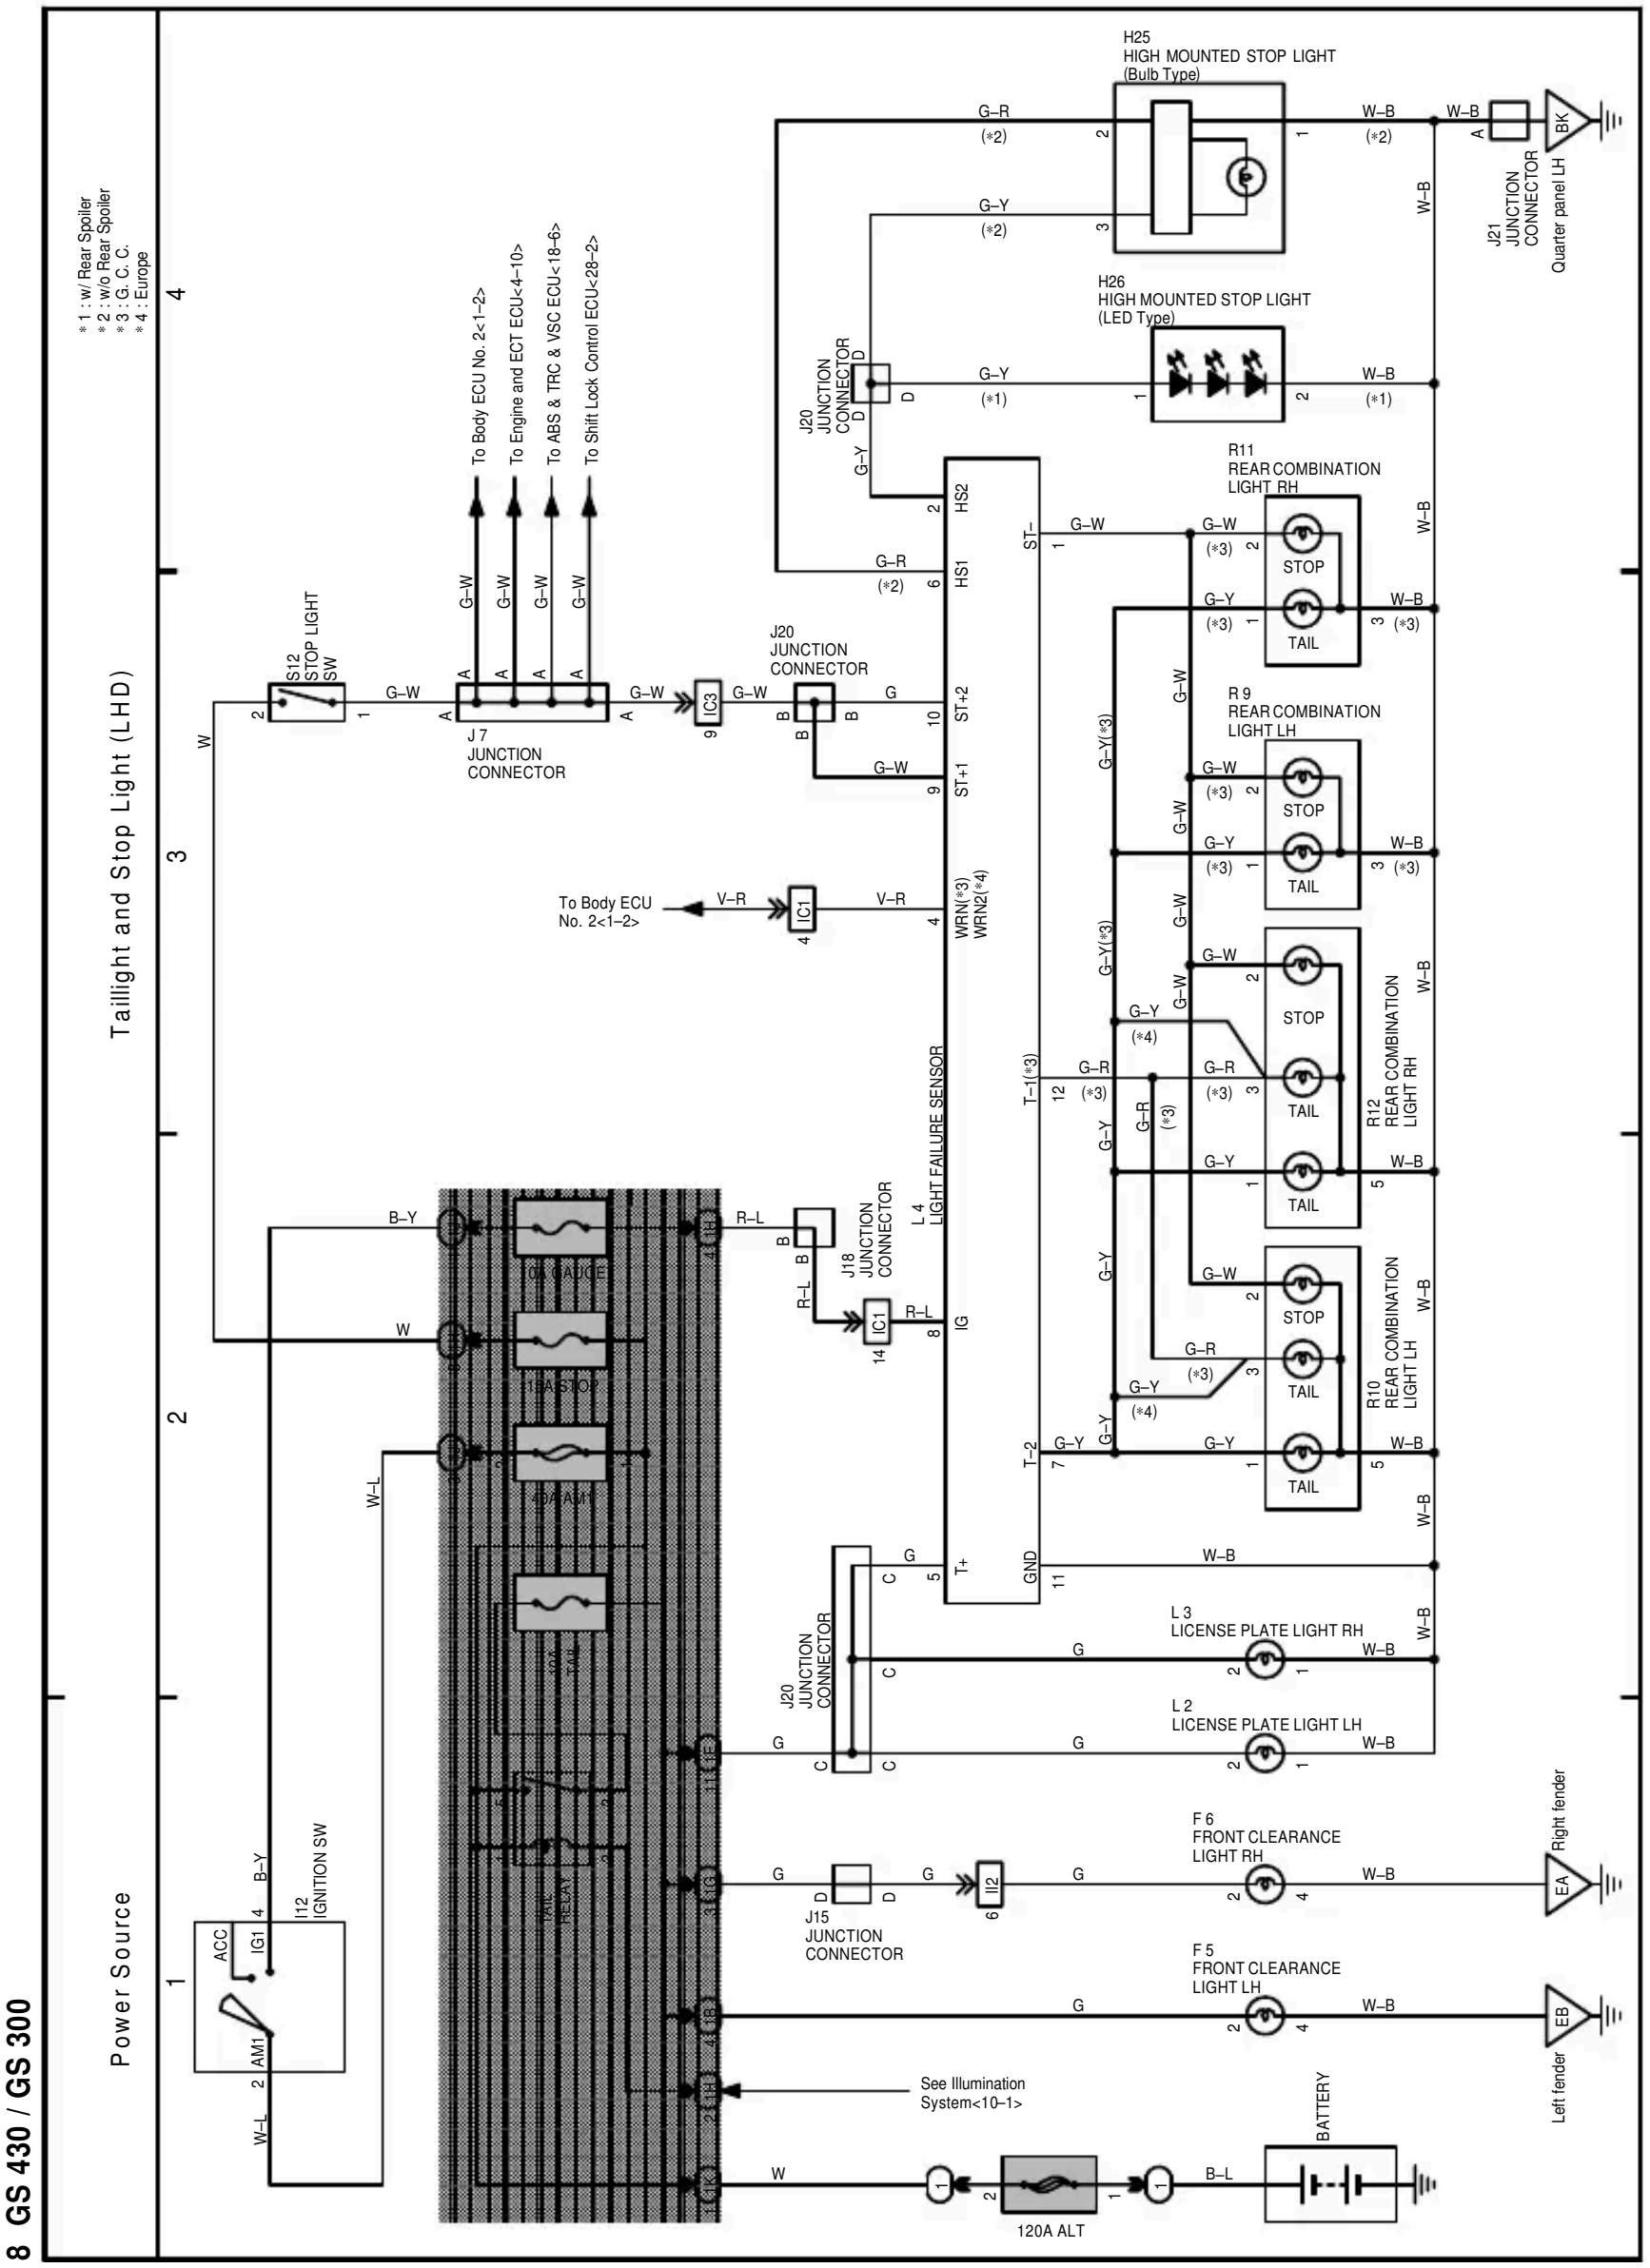

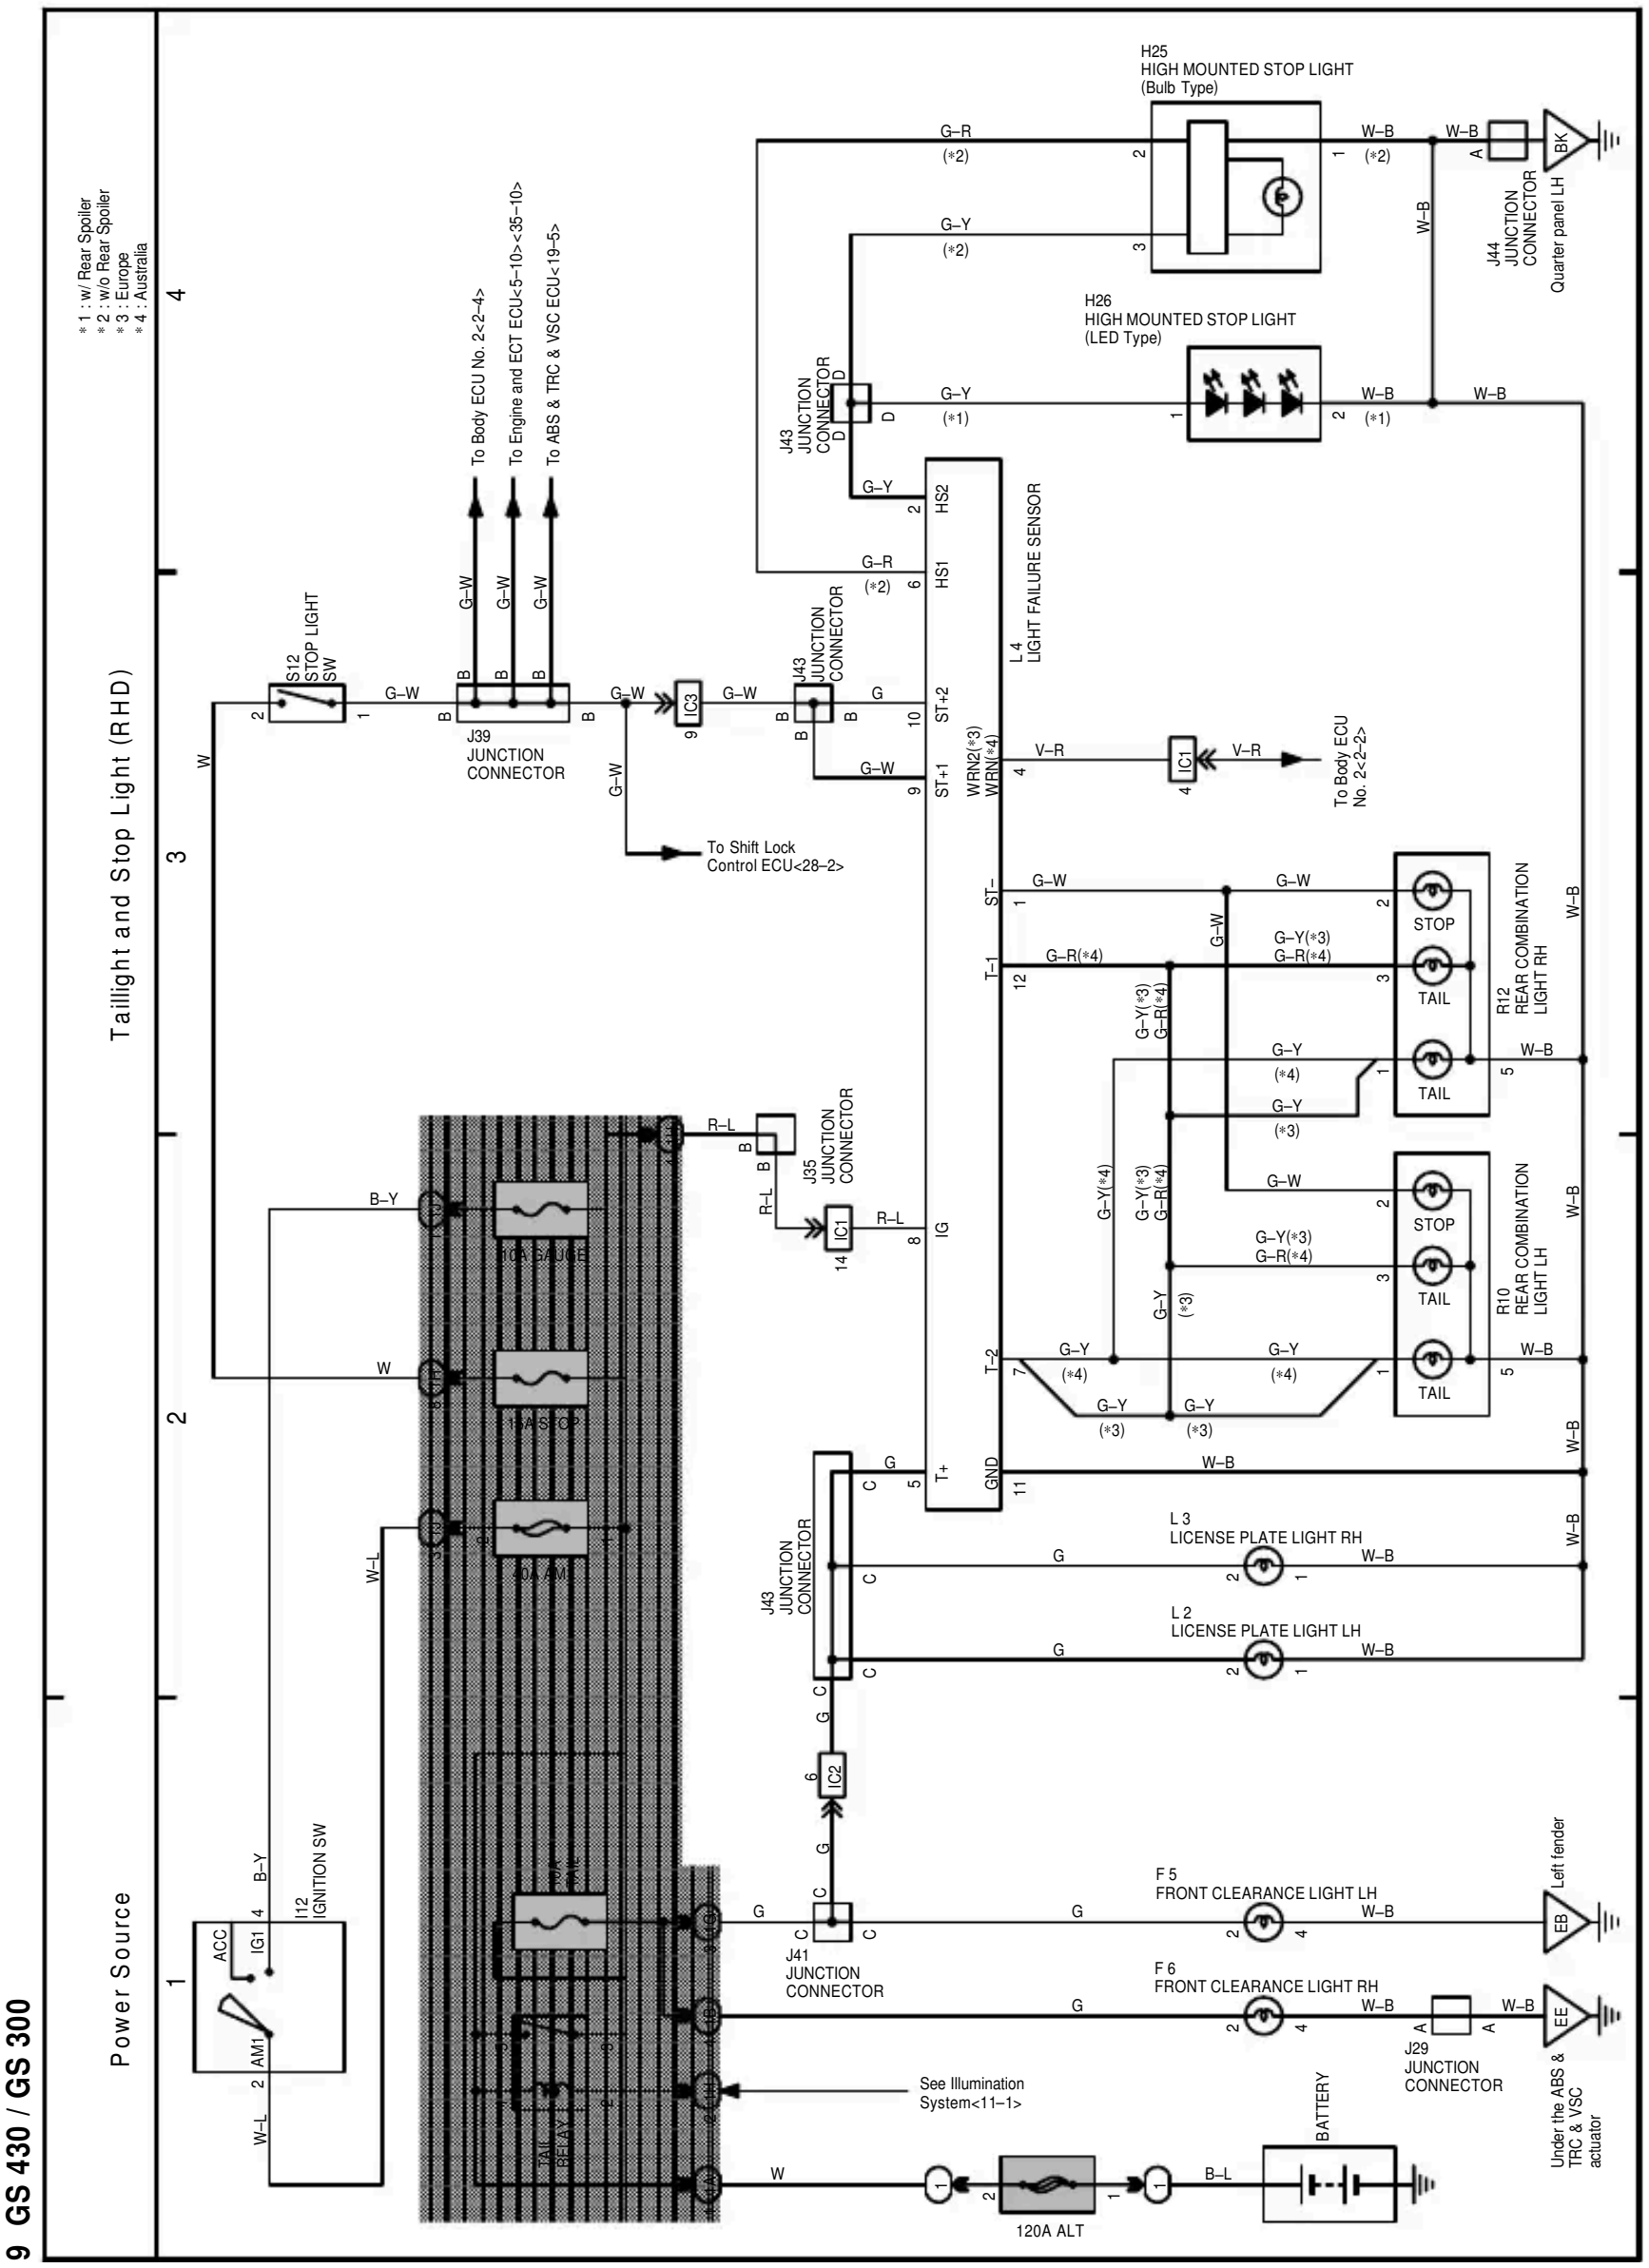
Taillight and Stop Light (RHD)
Power Source
9 GS 430 / GS 300
* 1 : w/ Rear Spoiler
* 2 : w/o Rear Spoiler
* 3 : Europe
* 4 : Australia
H25
HIGH MOUNTED STOP LIGHT
(Bulb Type)
H26
HIGH MOUNTED STOP LIGHT
(LED Type)
J44
JUNCTION
CONNECTOR
Quarter panel LH
J43
JUNCTION
CONNECTOR
S12
STOP LIGHT
SW
J39
JUNCTION
CONNECTOR
To Body ECU No. 2<2-4>
To Engine and ECT ECU<5-10><35-10>
To ABS & TRC & VSC ECU<19-5>
IC3
IC1
IC2
To Body ECU
No. 2<2-2>
To Shift Lock
Control ECU<28-2>
L 4
LIGHT FAILURE SENSOR
HS2
HS1
ST+2
ST+1
WRN2(*3)
WRN(*4)
ST-
T-1
T-2
T+
GND
IG
R12
REAR COMBINATION
LIGHT RH
R10
REAR COMBINATION
LIGHT LH
STOP
TAIL
J35
JUNCTION
CONNECTOR
L 3
LICENSE PLATE LIGHT RH
L 2
LICENSE PLATE LIGHT LH
F 5
FRONT CLEARANCE LIGHT LH
F 6
FRONT CLEARANCE LIGHT RH
Left fender
J41
JUNCTION
CONNECTOR
J29
JUNCTION
CONNECTOR
Under the ABS &
TRC & VSC
actuator
I12
IGNITION SW
ACC
IG1
AM1
See Illumination
System<11-1>
BATTERY
120A ALT
TAIL
RELAY
10A ECU-B
15A STOP
10A AM1
TAIL
RELAY

I OVERALL ELECTRICAL WIRING DIAGRAM

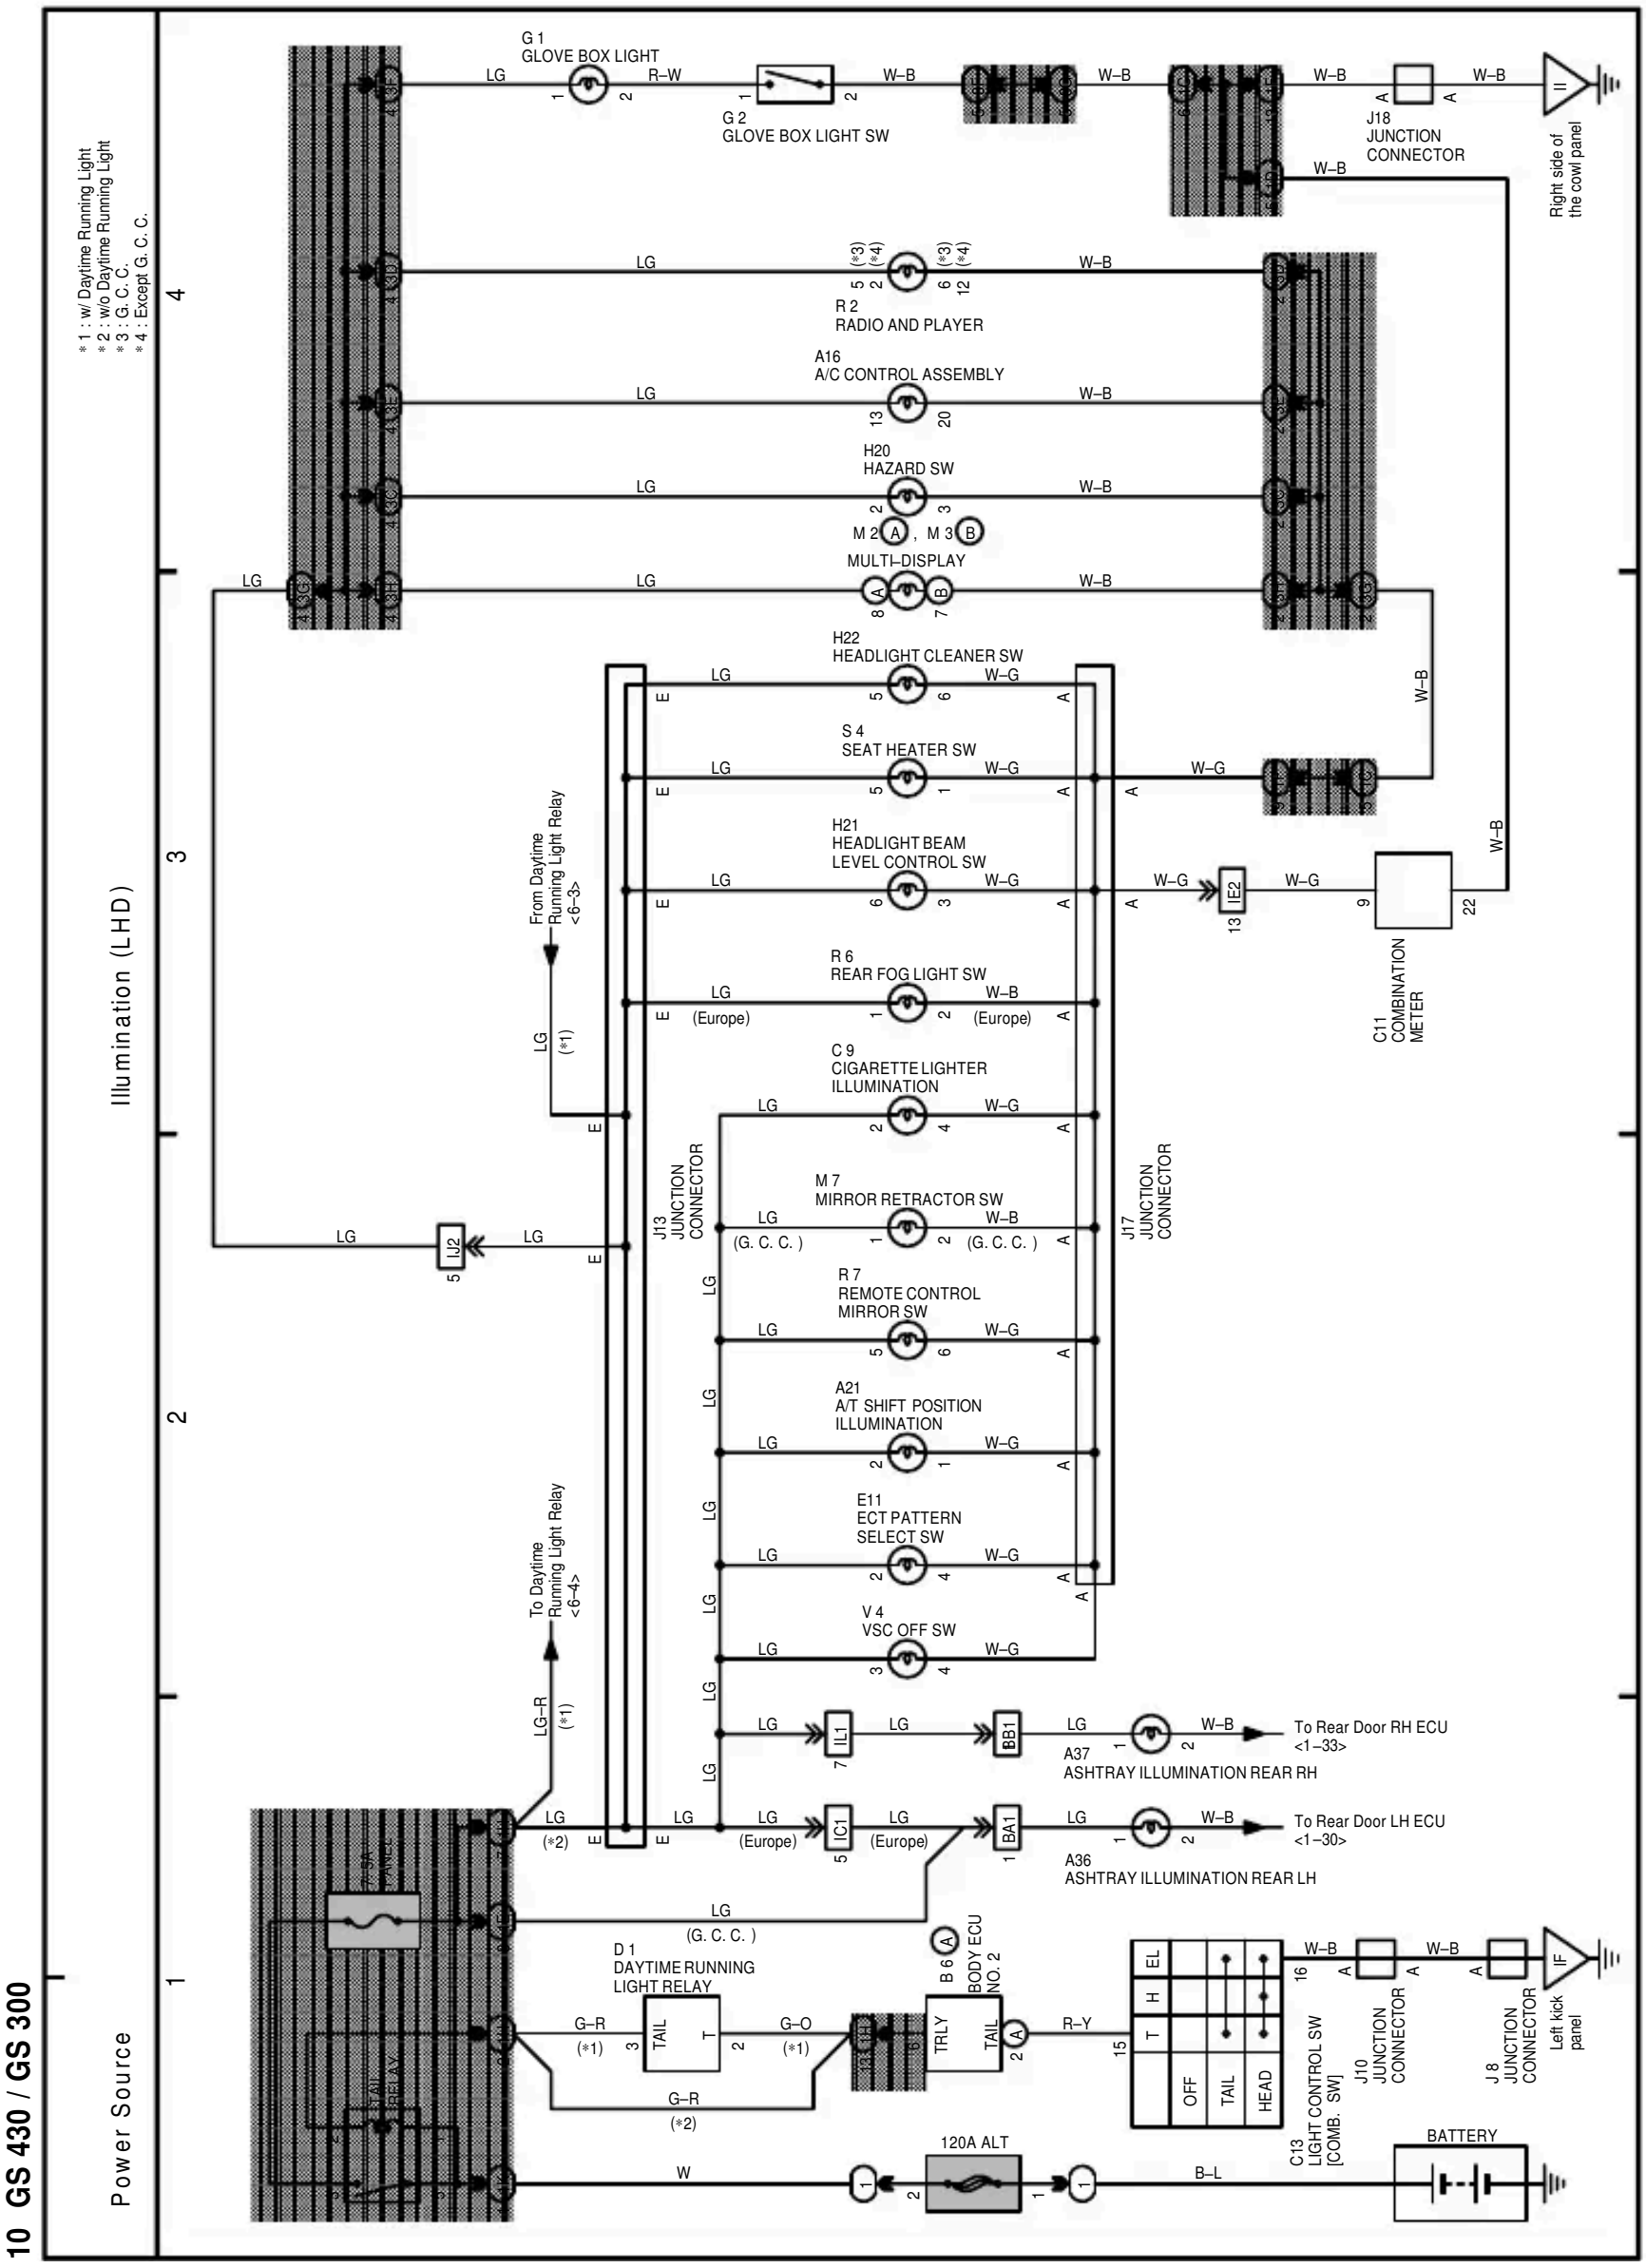

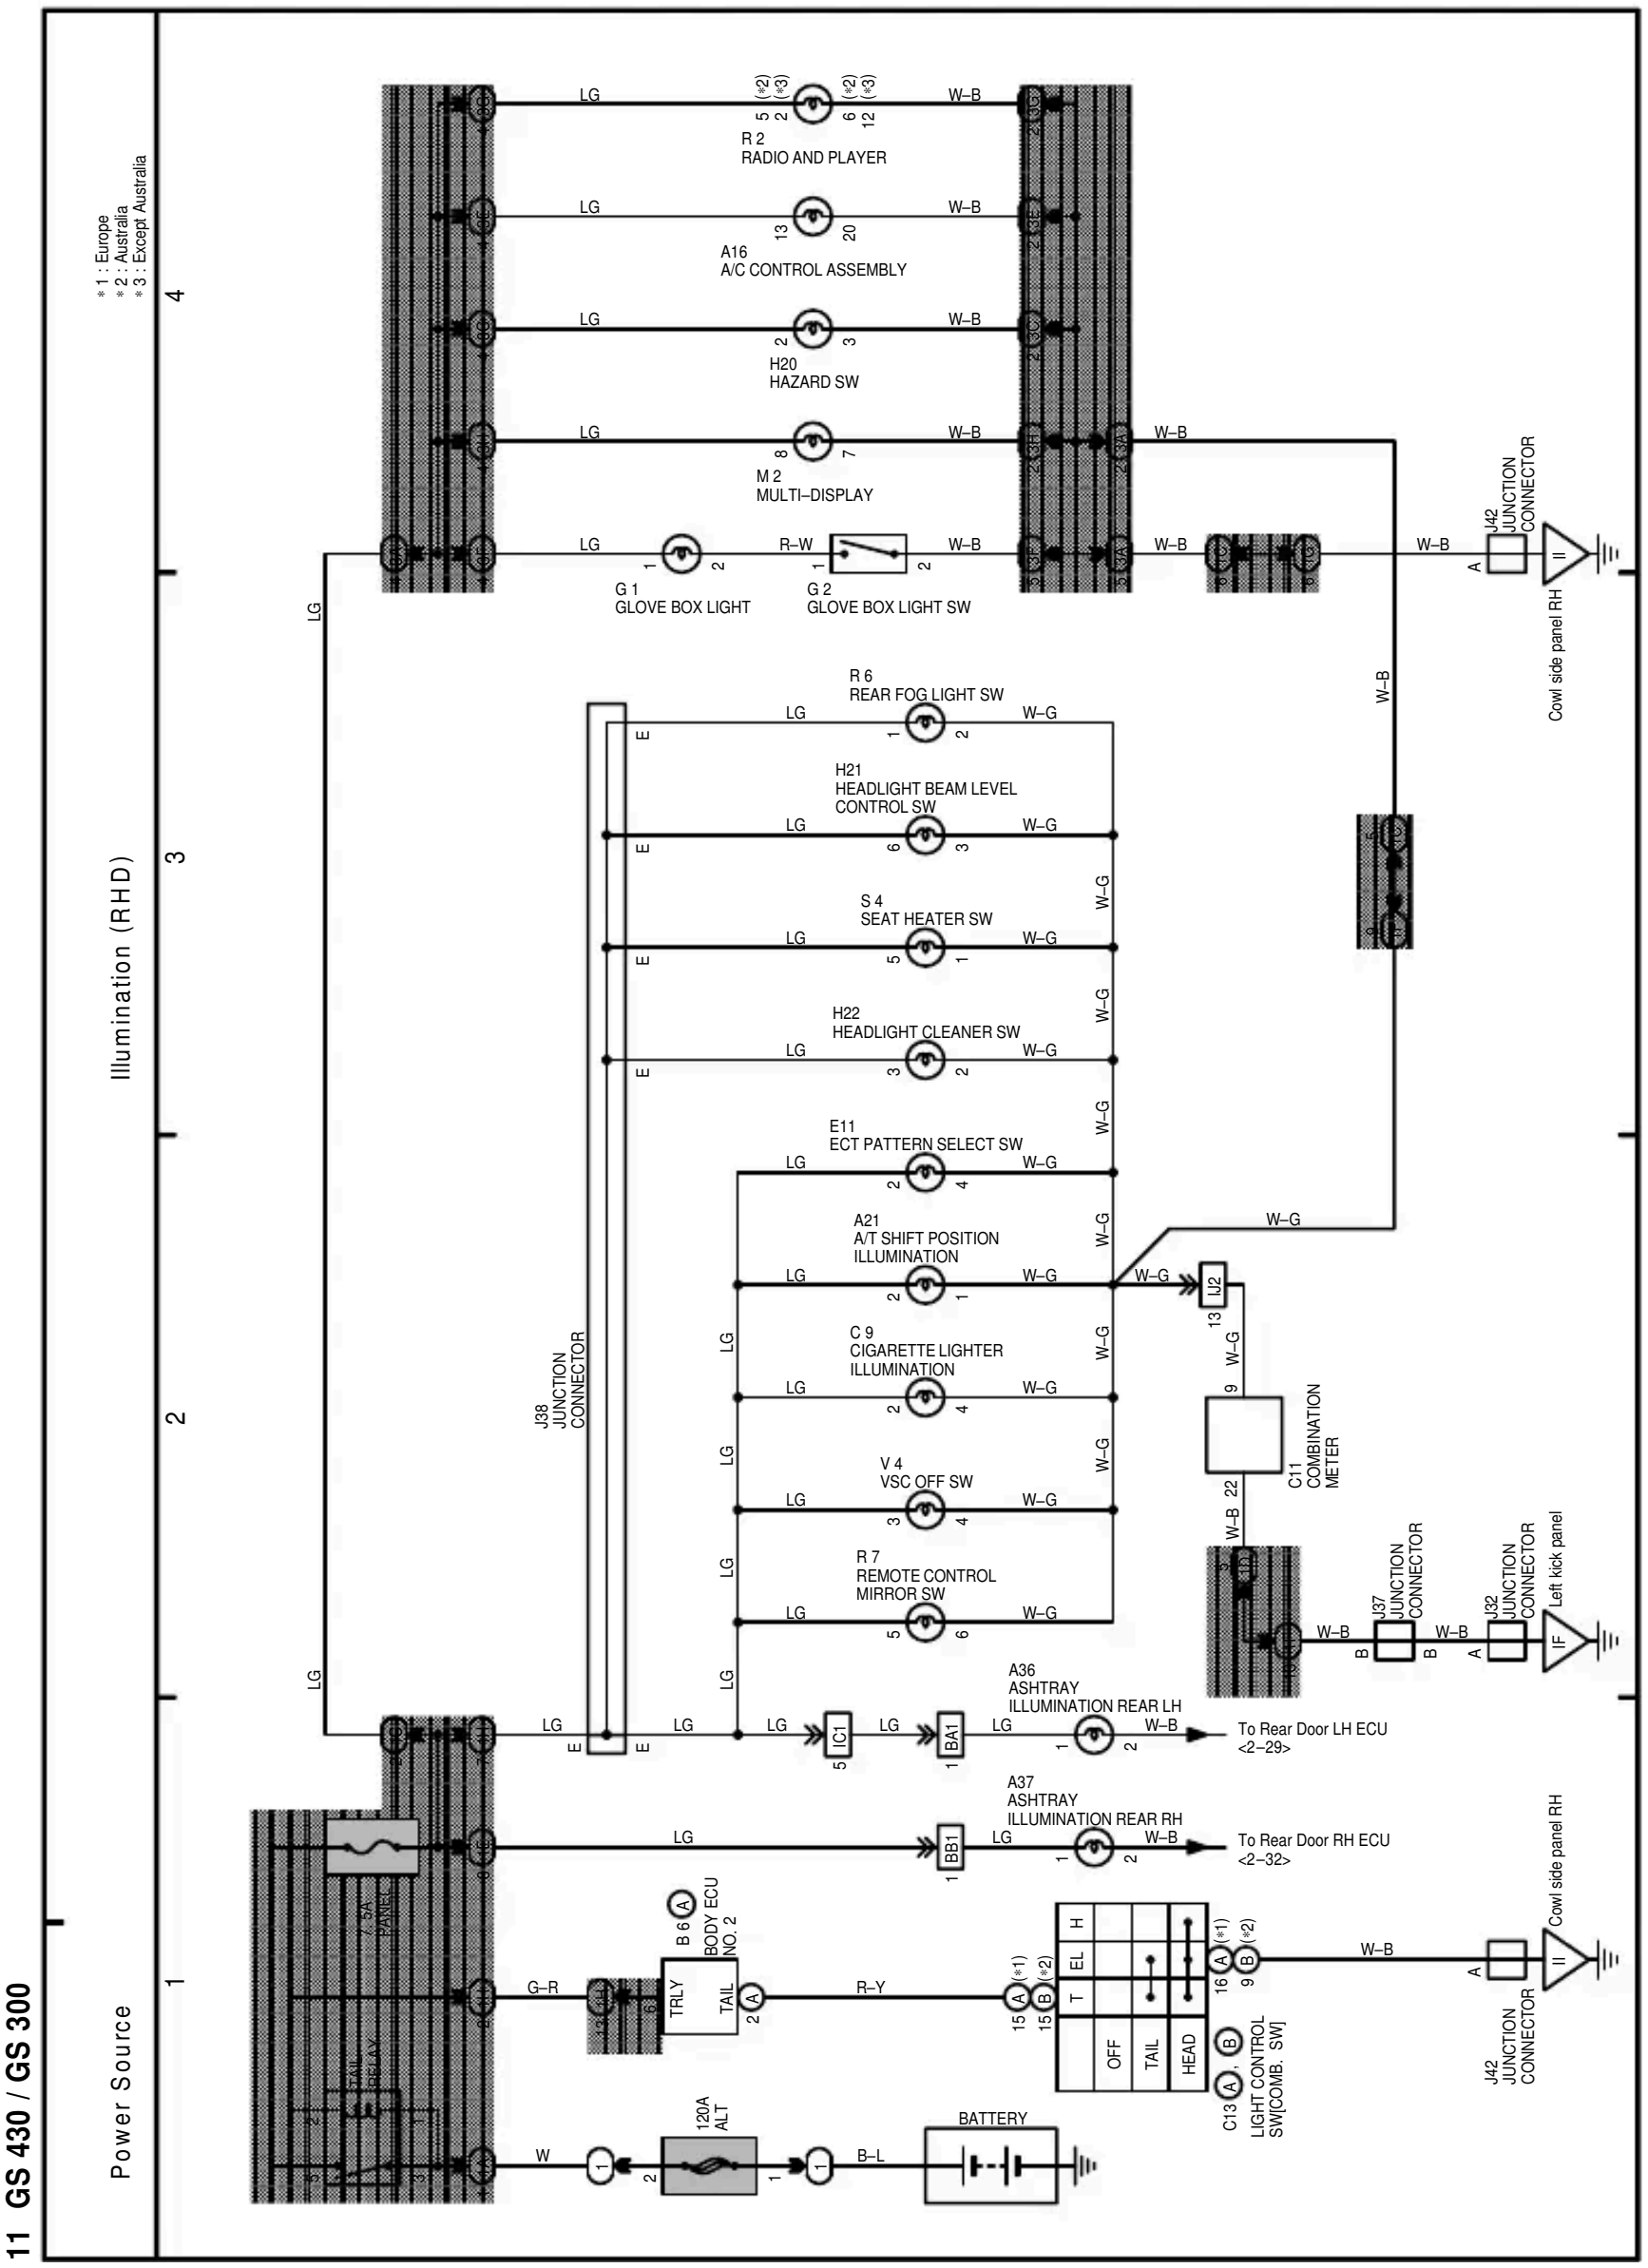
11 GS 430 / GS 300
Illumination (RHD)
Power Source
* 1 : Europe
* 2 : Australia
* 3 : Except Australia
R 2
RADIO AND PLAYER
A16
A/C CONTROL ASSEMBLY
H20
HAZARD SW
M 2
MULTI–DISPLAY
G 1
GLOVE BOX LIGHT
G 2
GLOVE BOX LIGHT SW
J42
JUNCTION
CONNECTOR
Cowl side panel RH
R 6
REAR FOG LIGHT SW
H21
HEADLIGHT BEAM LEVEL
CONTROL SW
S 4
SEAT HEATER SW
H22
HEADLIGHT CLEANER SW
E11
ECT PATTERN SELECT SW
A21
A/T SHIFT POSITION
ILLUMINATION
C 9
CIGARETTE LIGHTER
ILLUMINATION
V 4
VSC OFF SW
R 7
REMOTE CONTROL
MIRROR SW
J38
JUNCTION
CONNECTOR
C11
COMBINATION
METER
J37
JUNCTION
CONNECTOR
J32
JUNCTION
CONNECTOR
Left kick panel
A36
ASHTRAY
ILLUMINATION REAR LH
To Rear Door LH ECU
<2–29>
A37
ASHTRAY
ILLUMINATION REAR RH
To Rear Door RH ECU
<2–32>
7.5A
PANEL
TAIL
RELAY
B 6
BODY ECU
NO. 2
TRLY
TAIL
120A
ALT
BATTERY
OFF
TAIL
HEAD
EL
H
T
LIGHT CONTROL
SW[COMB. SW]
C13
LG
W–B
W–G
G–R
R–Y
B–L
W
R–W

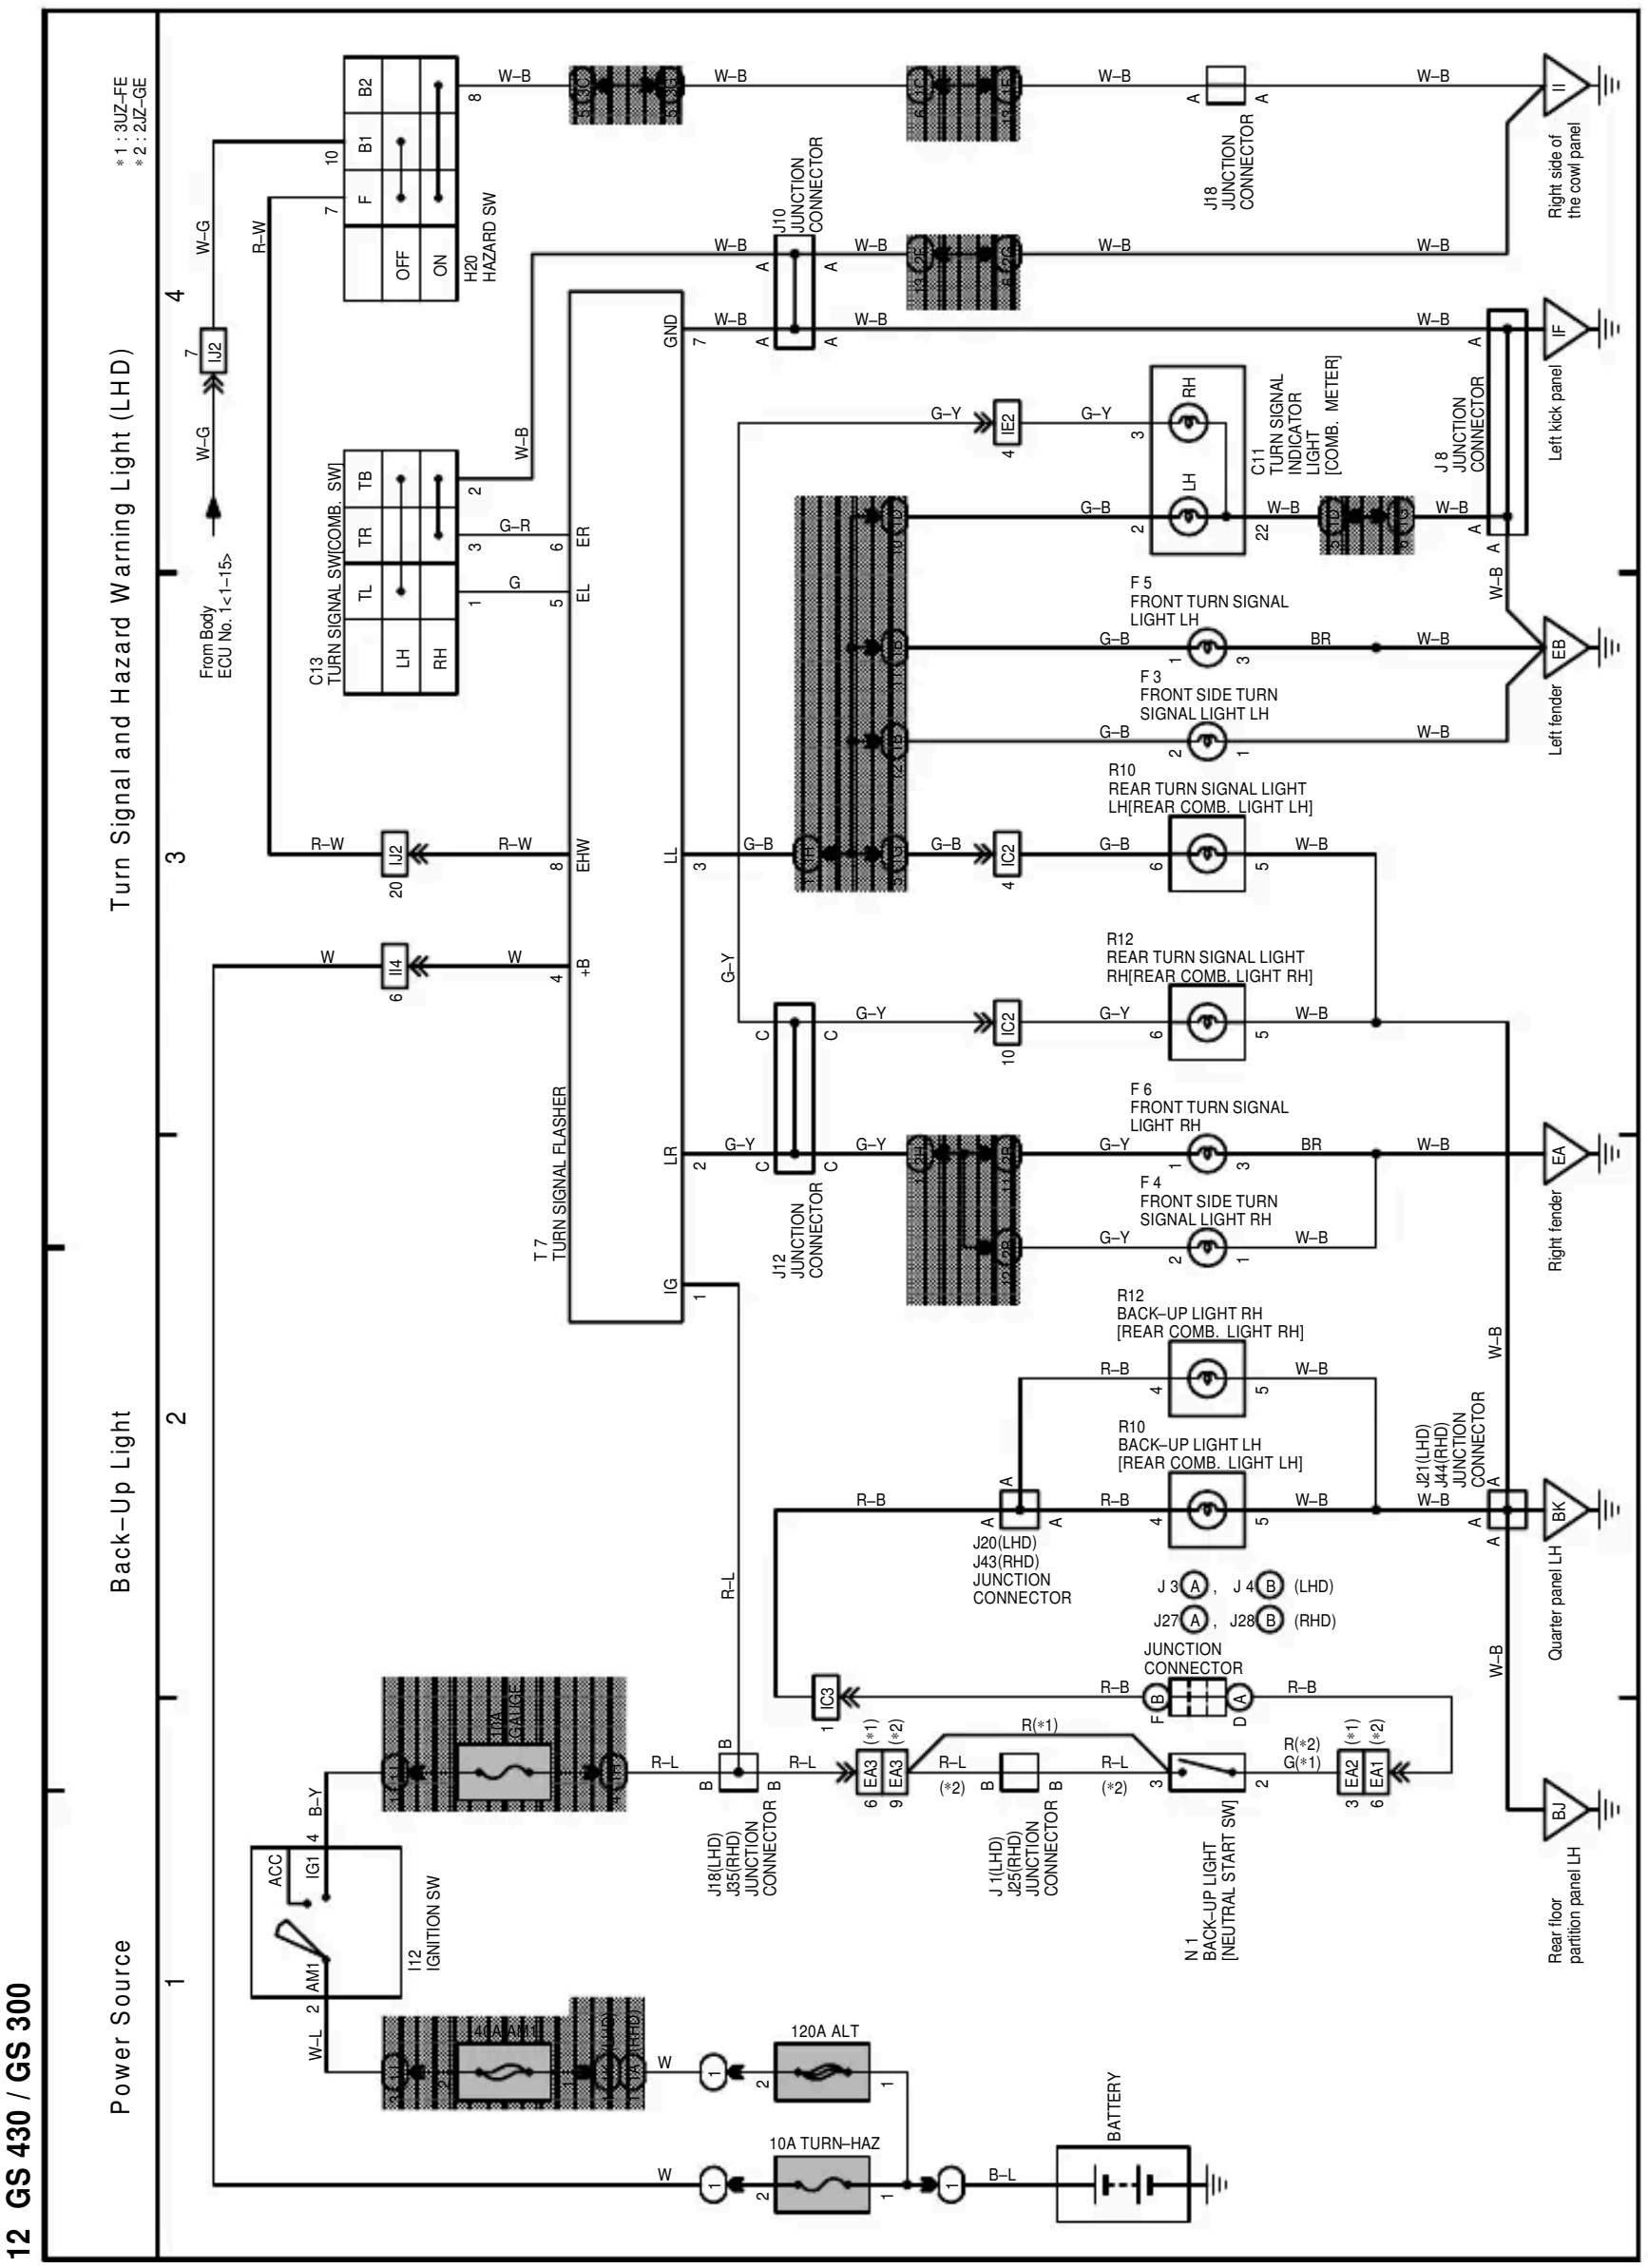
Turn Signal and Hazard Warning Light (LHD)
Back–Up Light
Power Source
12 GS 430 / GS 300
*1 : 3UZ–FE
*2 : 2JZ–GE
H20 HAZARD SW
B2
B1
F
OFF
ON
C13 TURN SIGNAL SW(COMB. SW)
TB
TR
TL
LH
RH
From Body ECU No.1<1–15>
IJ2
W–G
R–W
W–B
G–R
G
ER
EL
EHW
+B
J10 JUNCTION CONNECTOR
J18 JUNCTION CONNECTOR
Right side of the cowl panel
Left kick panel
J8 JUNCTION CONNECTOR
C11 TURN SIGNAL INDICATOR LIGHT [COMB. METER]
IE2
G–Y
G–B
W–B
F 5 FRONT TURN SIGNAL LIGHT LH
F 3 FRONT SIDE TURN SIGNAL LIGHT LH
Left fender
R10 REAR TURN SIGNAL LIGHT LH[REAR COMB. LIGHT LH]
IC2
R12 REAR TURN SIGNAL LIGHT RH[REAR COMB. LIGHT RH]
F 6 FRONT TURN SIGNAL LIGHT RH
F 4 FRONT SIDE TURN SIGNAL LIGHT RH
Right fender
T 7 TURN SIGNAL FLASHER
J12 JUNCTION CONNECTOR
R12 BACK–UP LIGHT RH [REAR COMB. LIGHT RH]
R10 BACK–UP LIGHT LH [REAR COMB. LIGHT LH]
J21(LHD) J44(RHD) JUNCTION CONNECTOR
J20(LHD) J43(RHD) JUNCTION CONNECTOR
J 3 , J 4 (LHD)
J27 , J28 (RHD)
JUNCTION CONNECTOR
IC3
Quarter panel LH
R–L
B–Y
B–L
W–L
I12 IGNITION SW
ACC
IG1
AM1
40A CTA/CE
10A ECU–B2 (EFI)
120A ALT
10A TURN–HAZ
BATTERY
J18(LHD) J35(RHD) JUNCTION CONNECTOR
J 1(LHD) J25(RHD) JUNCTION CONNECTOR
N 1 BACK–UP LIGHT [NEUTRAL START SW]
Rear floor partition panel LH

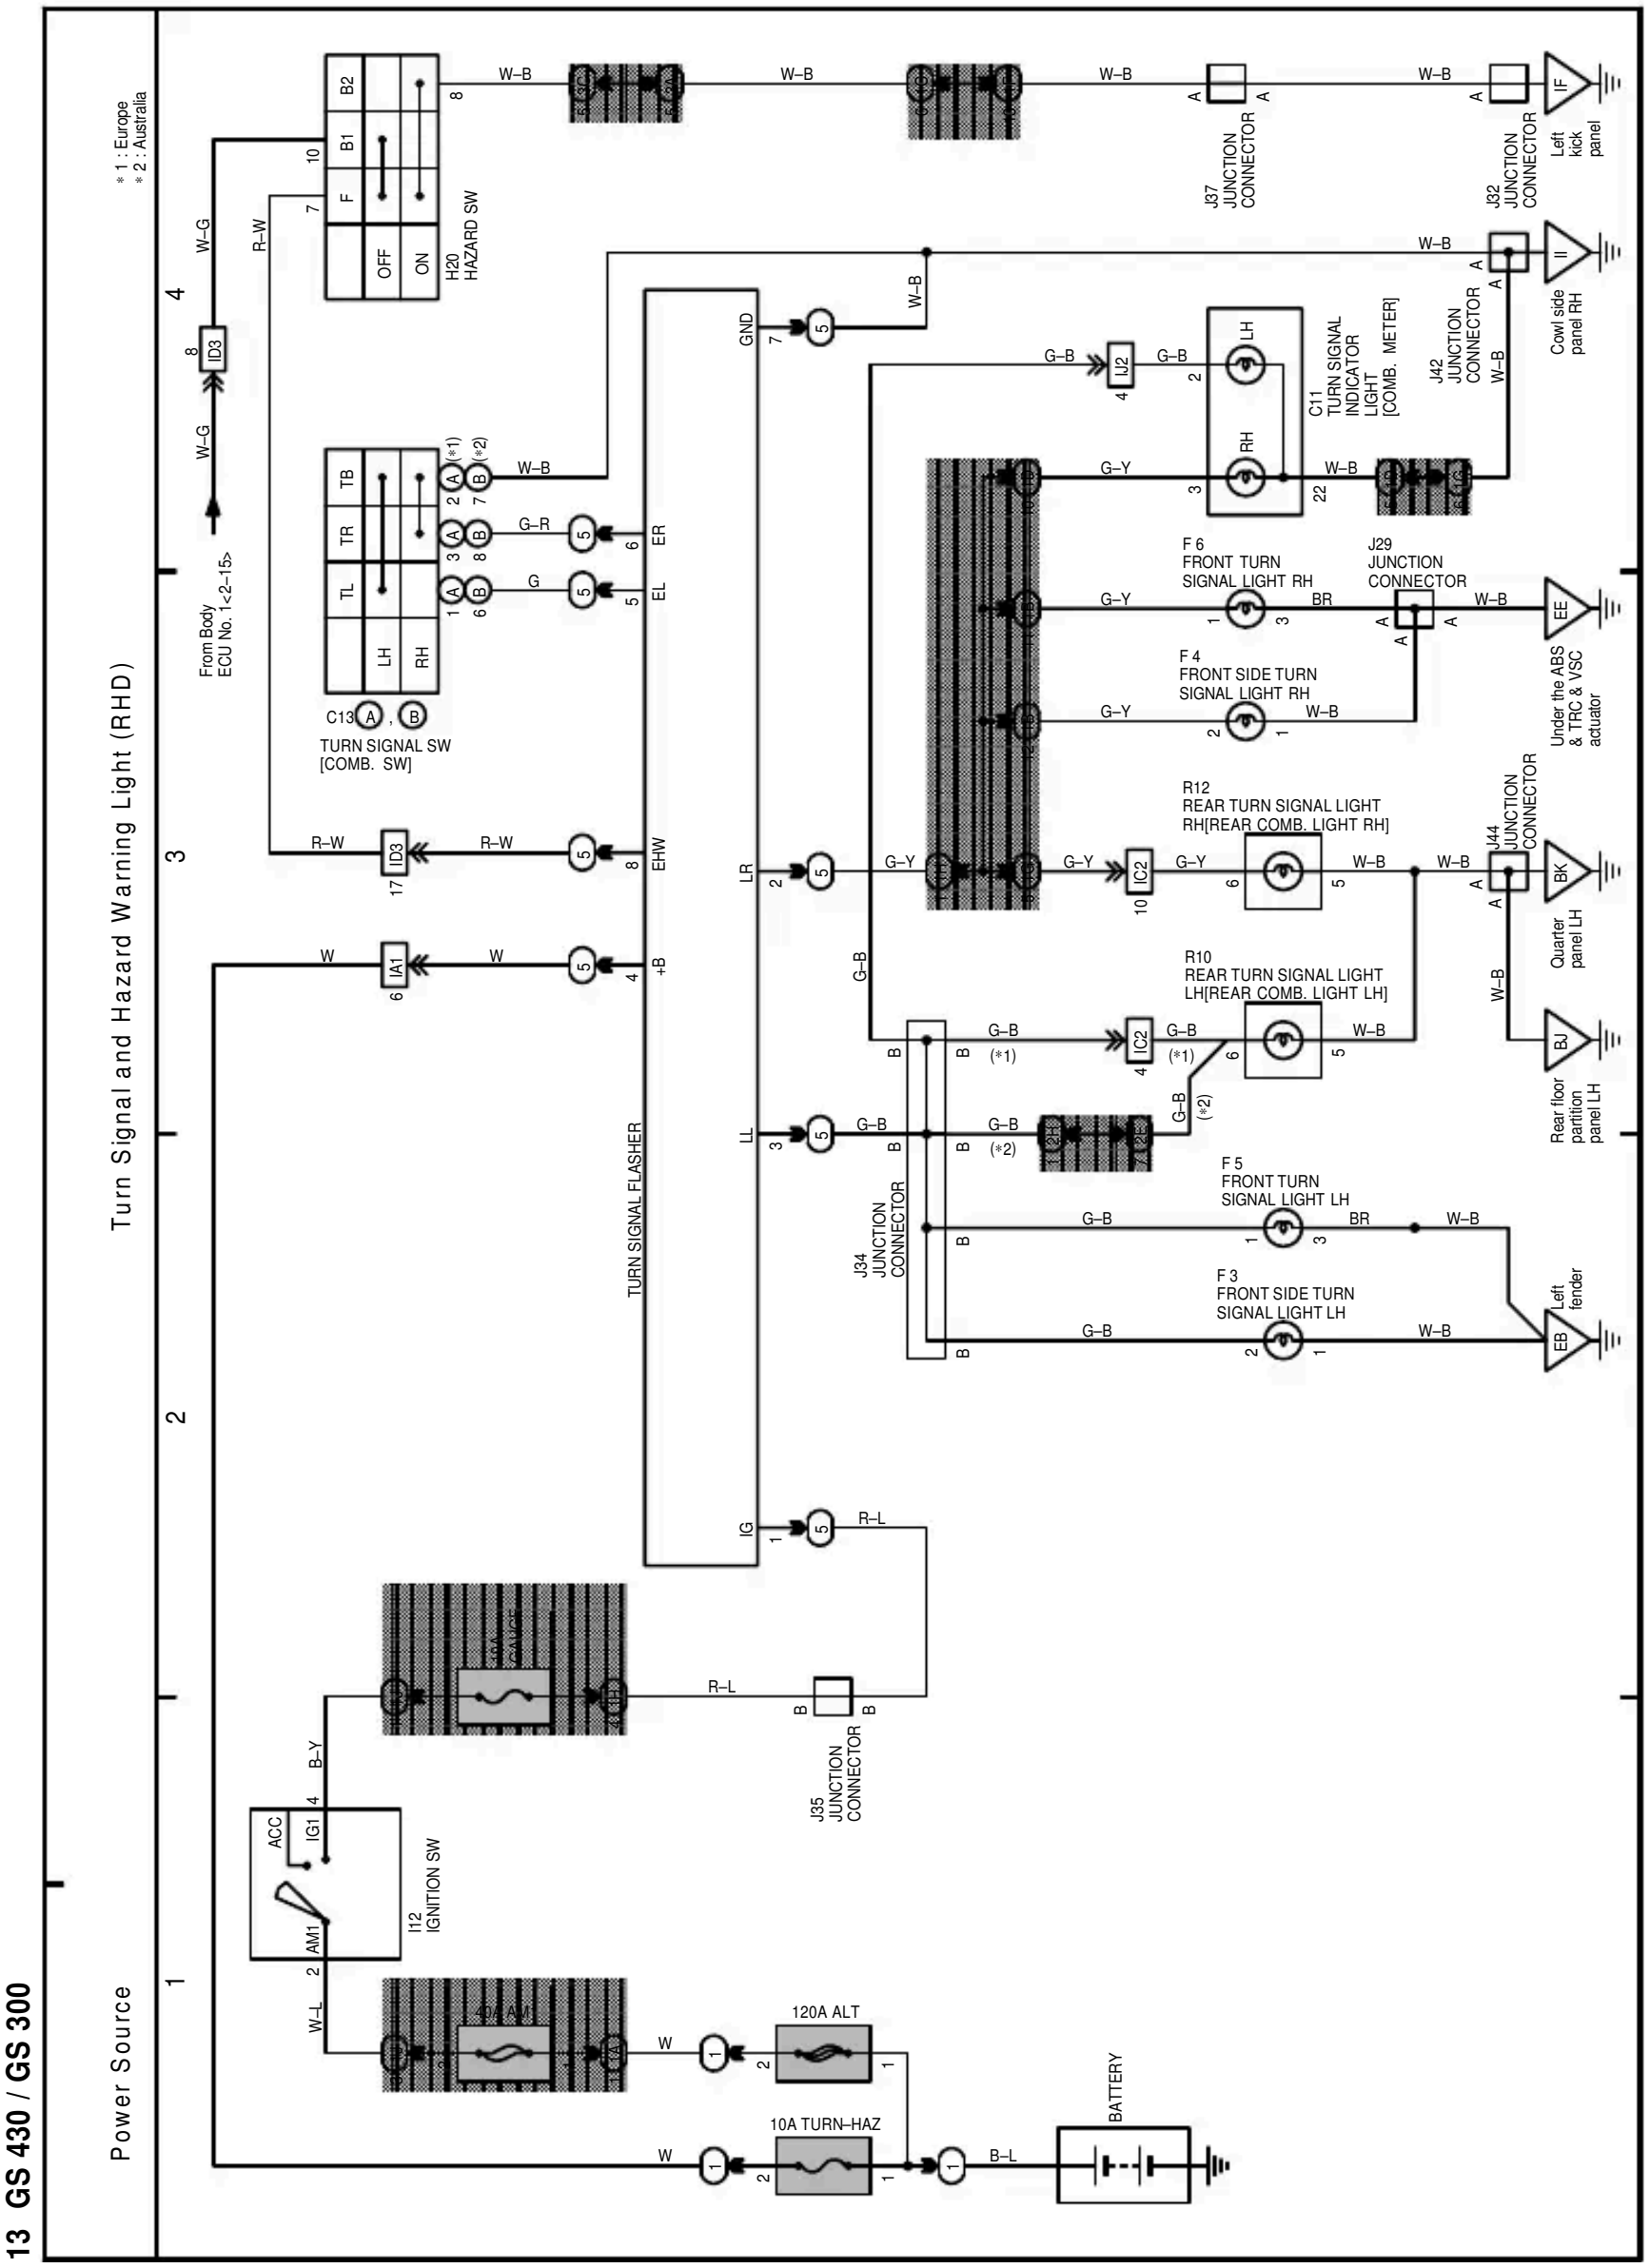
13 GS 430 / GS 300
Turn Signal and Hazard Warning Light (RHD)
Power Source
* 1 : Europe
* 2 : Australia
From Body ECU No. 1<2-15>
H20 HAZARD SW
TURN SIGNAL SW [COMB. SW]
C13
TURN SIGNAL FLASHER
J37 JUNCTION CONNECTOR
J32 JUNCTION CONNECTOR
Left kick panel
Cowl side panel RH
J42 JUNCTION CONNECTOR
C11 TURN SIGNAL INDICATOR LIGHT [COMB. METER]
F 6 FRONT TURN SIGNAL LIGHT RH
J29 JUNCTION CONNECTOR
F 4 FRONT SIDE TURN SIGNAL LIGHT RH
Under the ABS & TRC & VSC actuator
R12 REAR TURN SIGNAL LIGHT RH[REAR COMB. LIGHT RH]
J44 JUNCTION CONNECTOR
Quarter panel LH
R10 REAR TURN SIGNAL LIGHT LH[REAR COMB. LIGHT LH]
Rear floor partition panel LH
F 5 FRONT TURN SIGNAL LIGHT LH
J34 JUNCTION CONNECTOR
F 3 FRONT SIDE TURN SIGNAL LIGHT LH
Left fender
J35 JUNCTION CONNECTOR
I12 IGNITION SW
120A ALT
10A TURN–HAZ
BATTERY

I OVERALL ELECTRICAL WIRING DIAGRAM

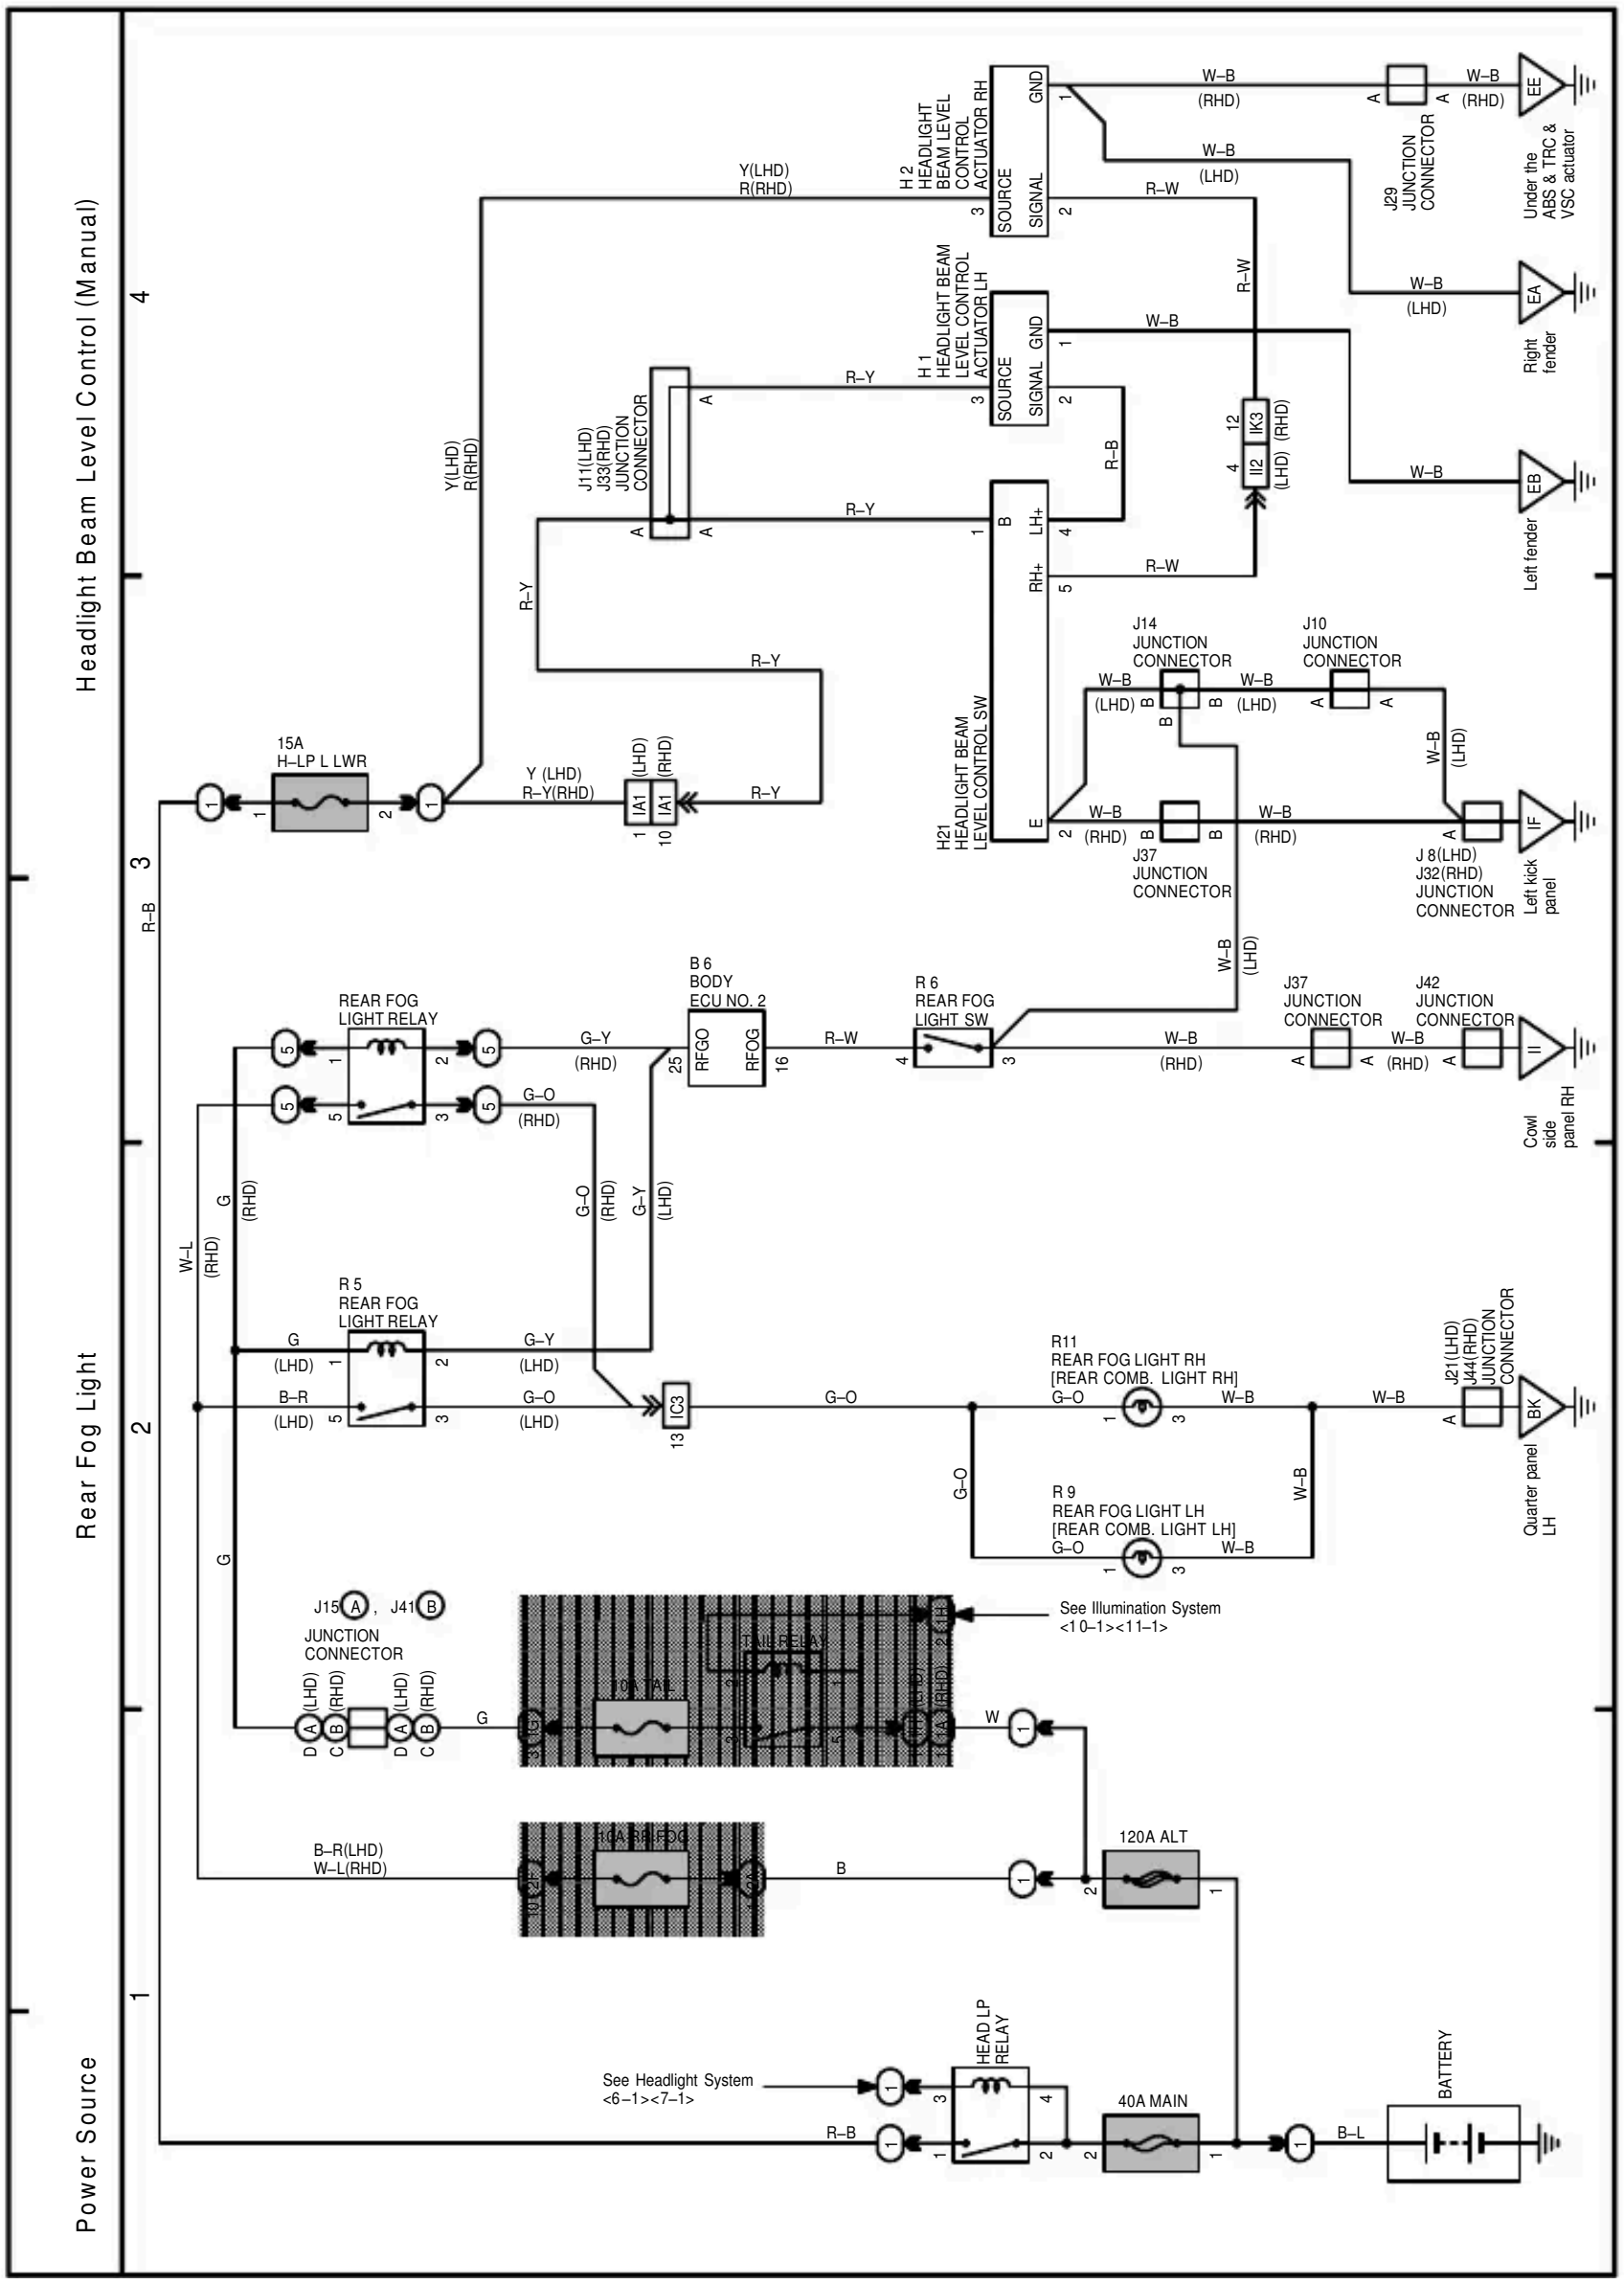

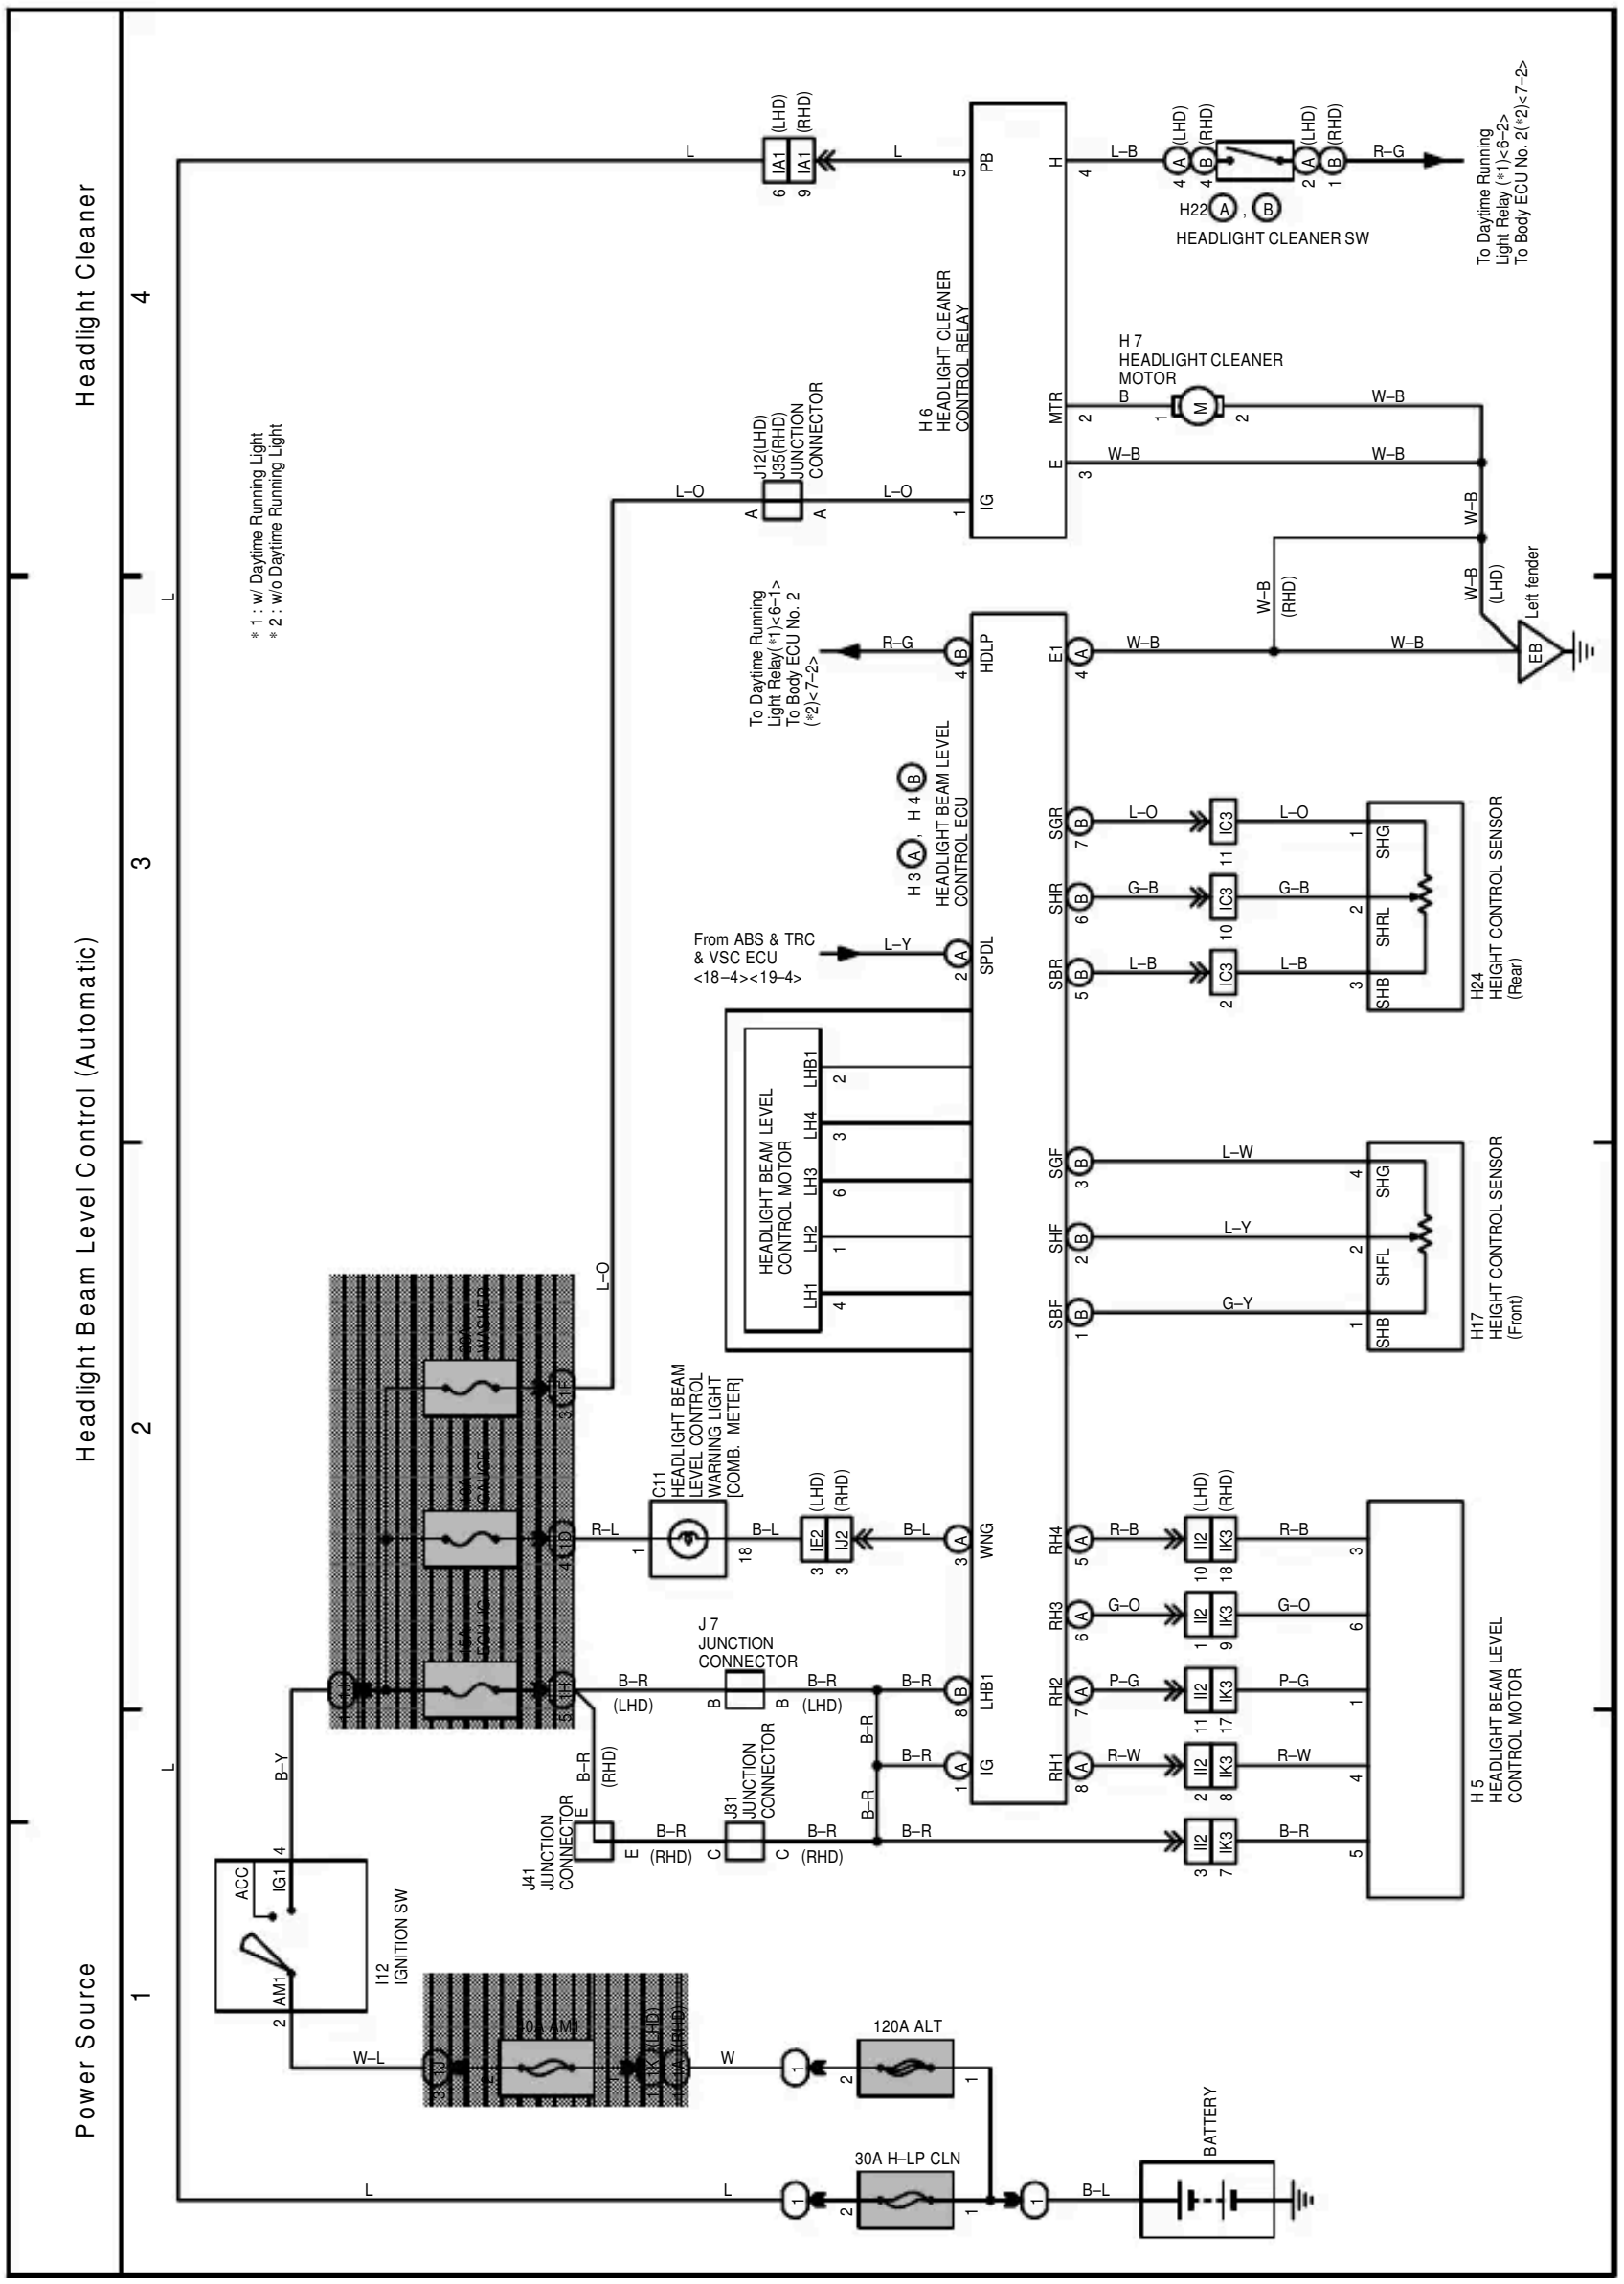
Power Source
Headlight Beam Level Control (Automatic)
Headlight Cleaner
1
2
3
4
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
I12 IGNITION SW
ACC
IG1
AM1
120A ALT
30A H–LP CLN
BATTERY
J41 JUNCTION CONNECTOR
J31 JUNCTION CONNECTOR
J7 JUNCTION CONNECTOR
J12(LHD) J35(RHD) JUNCTION CONNECTOR
C11 HEADLIGHT BEAM LEVEL CONTROL WARNING LIGHT [COMB. METER]
HEADLIGHT BEAM LEVEL CONTROL MOTOR
H5 HEADLIGHT BEAM LEVEL CONTROL MOTOR
H17 HEIGHT CONTROL SENSOR (Front)
H24 HEIGHT CONTROL SENSOR (Rear)
H 3 , H 4
HEADLIGHT BEAM LEVEL CONTROL ECU
From ABS & TRC & VSC ECU <18–4><19–4>
To Daytime Running Light Relay(*1)<6–1> To Body ECU No. 2 (*2)<7–2>
H 6 HEADLIGHT CLEANER CONTROL RELAY
H 7 HEADLIGHT CLEANER MOTOR
H22 A , B
HEADLIGHT CLEANER SW
To Daytime Running Light Relay (*1)<6–2> To Body ECU No. 2(*2)<7–2>
Left fender
EB
(LHD)
(RHD)

I OVERALL ELECTRICAL WIRING DIAGRAM

(Cont. next page)

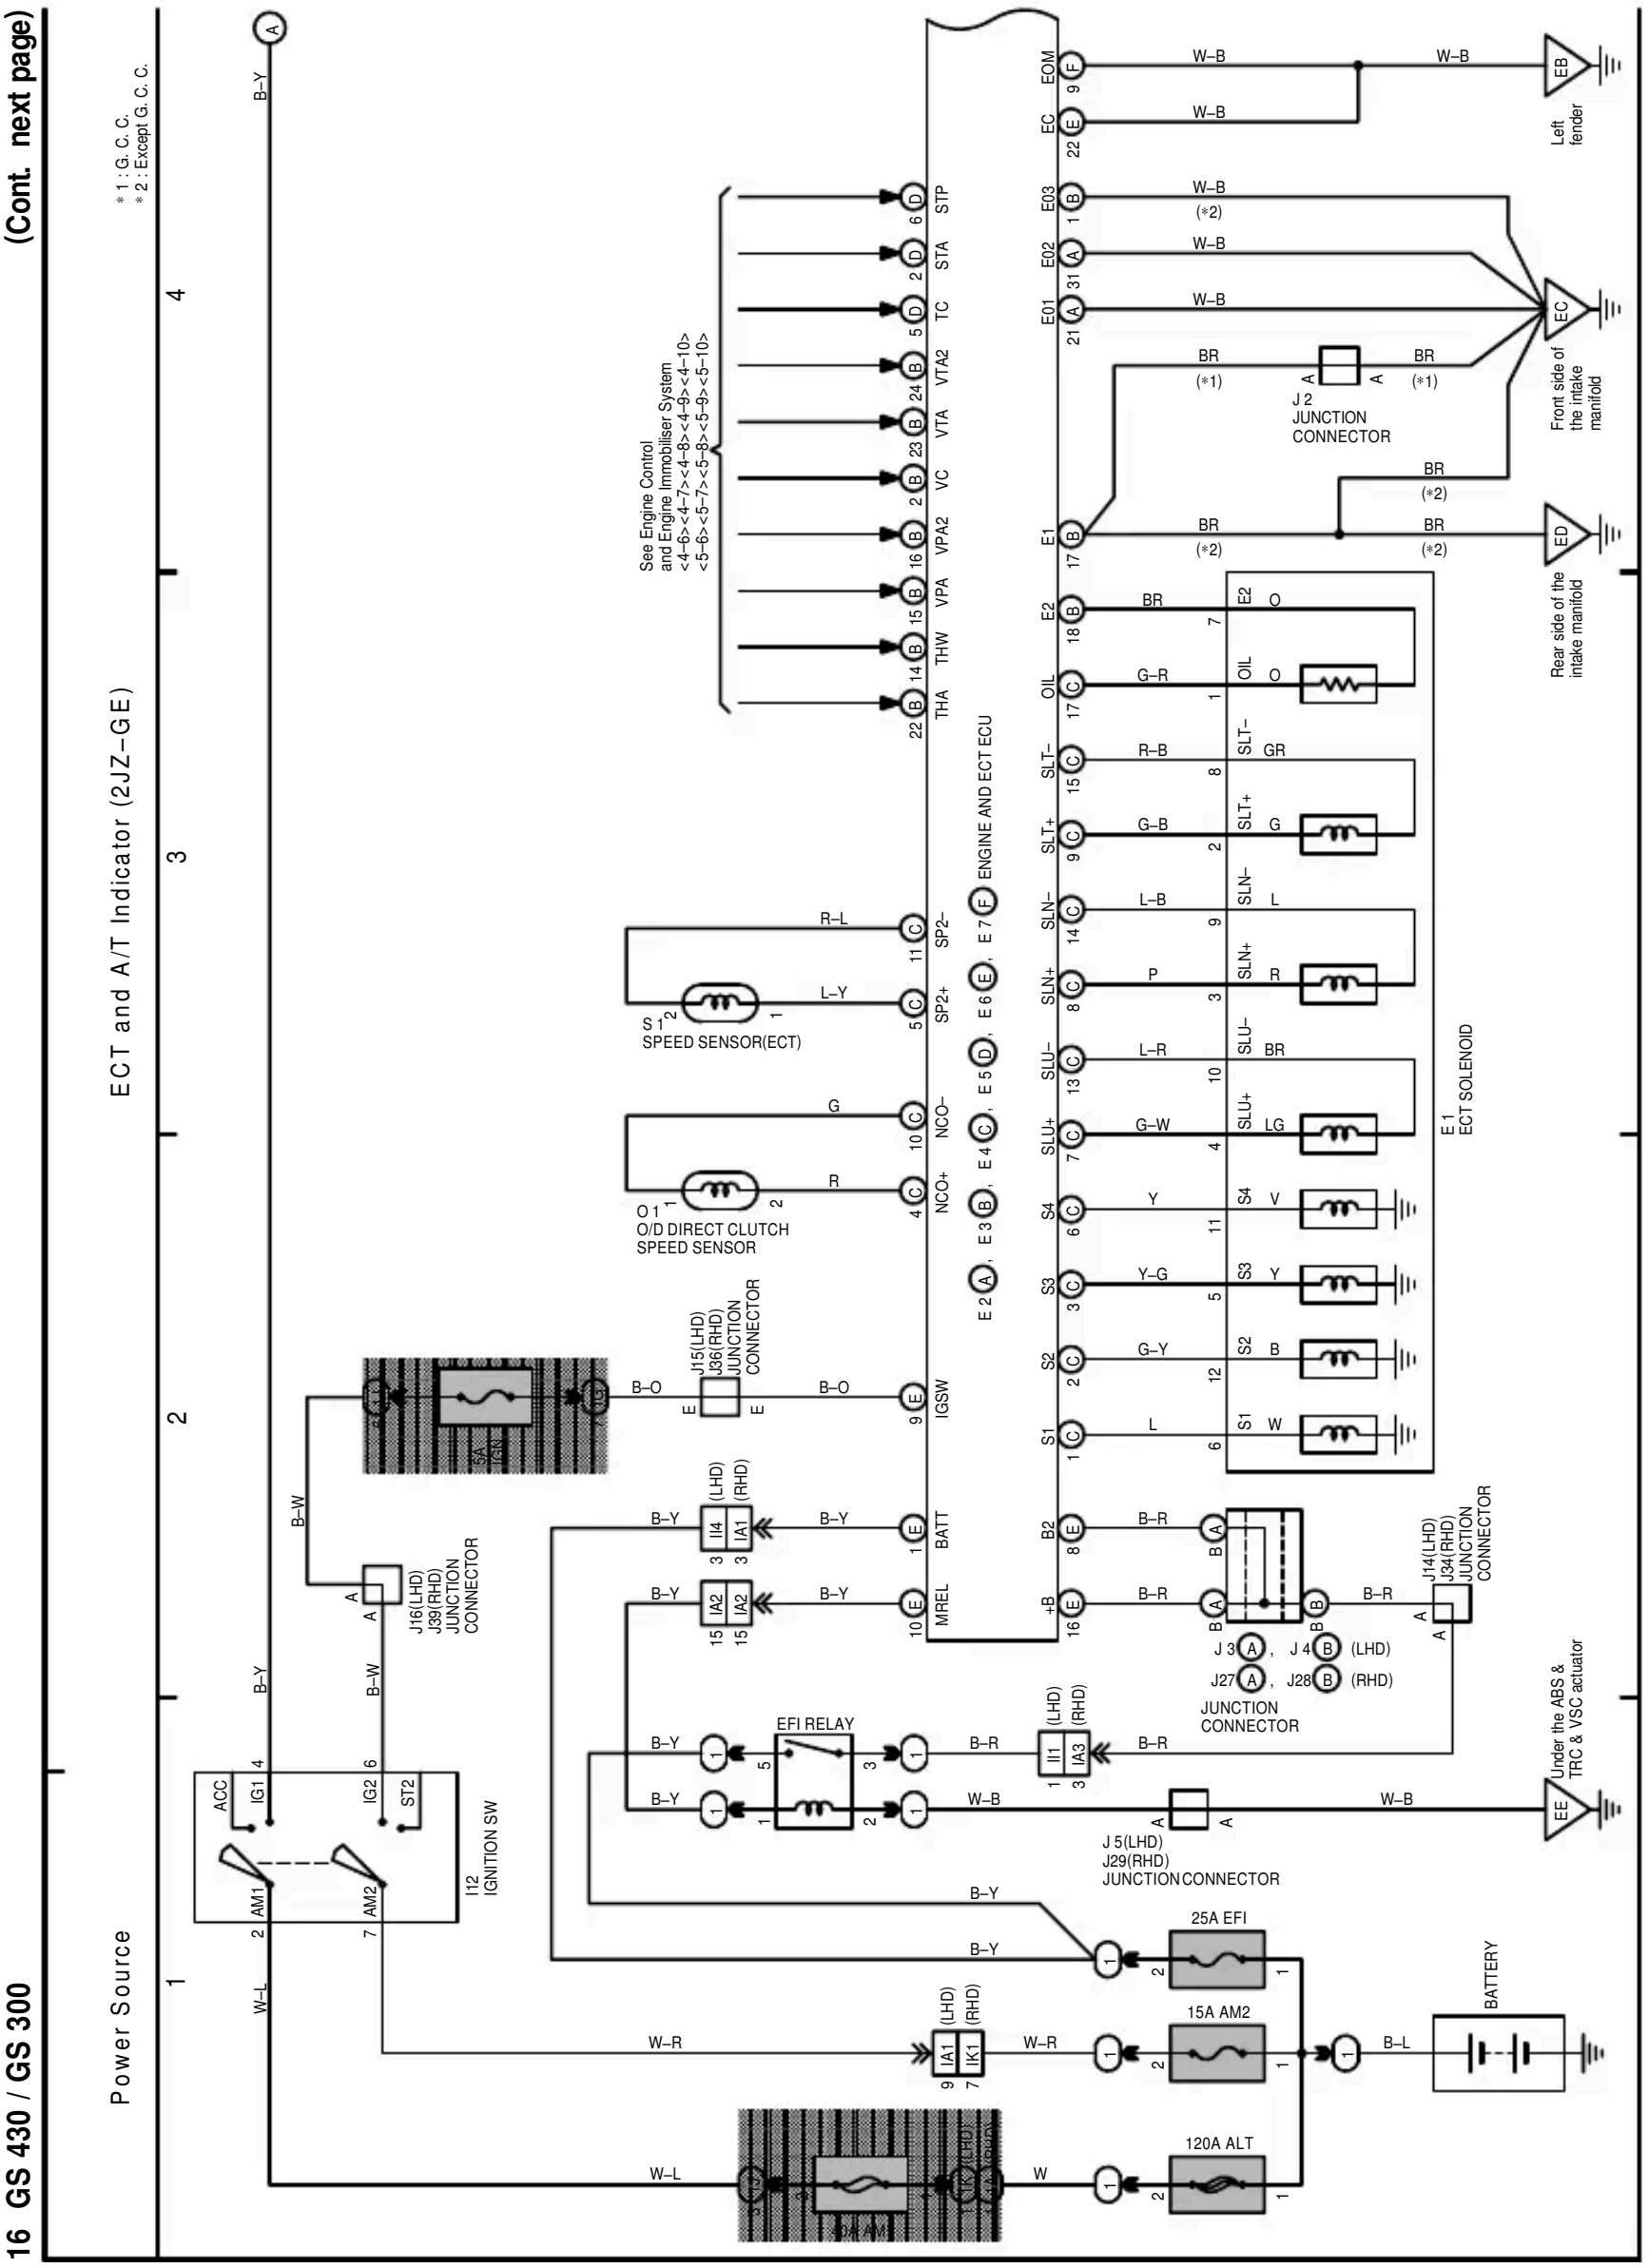

ECT and A/T Indicator (2JZ–GE)

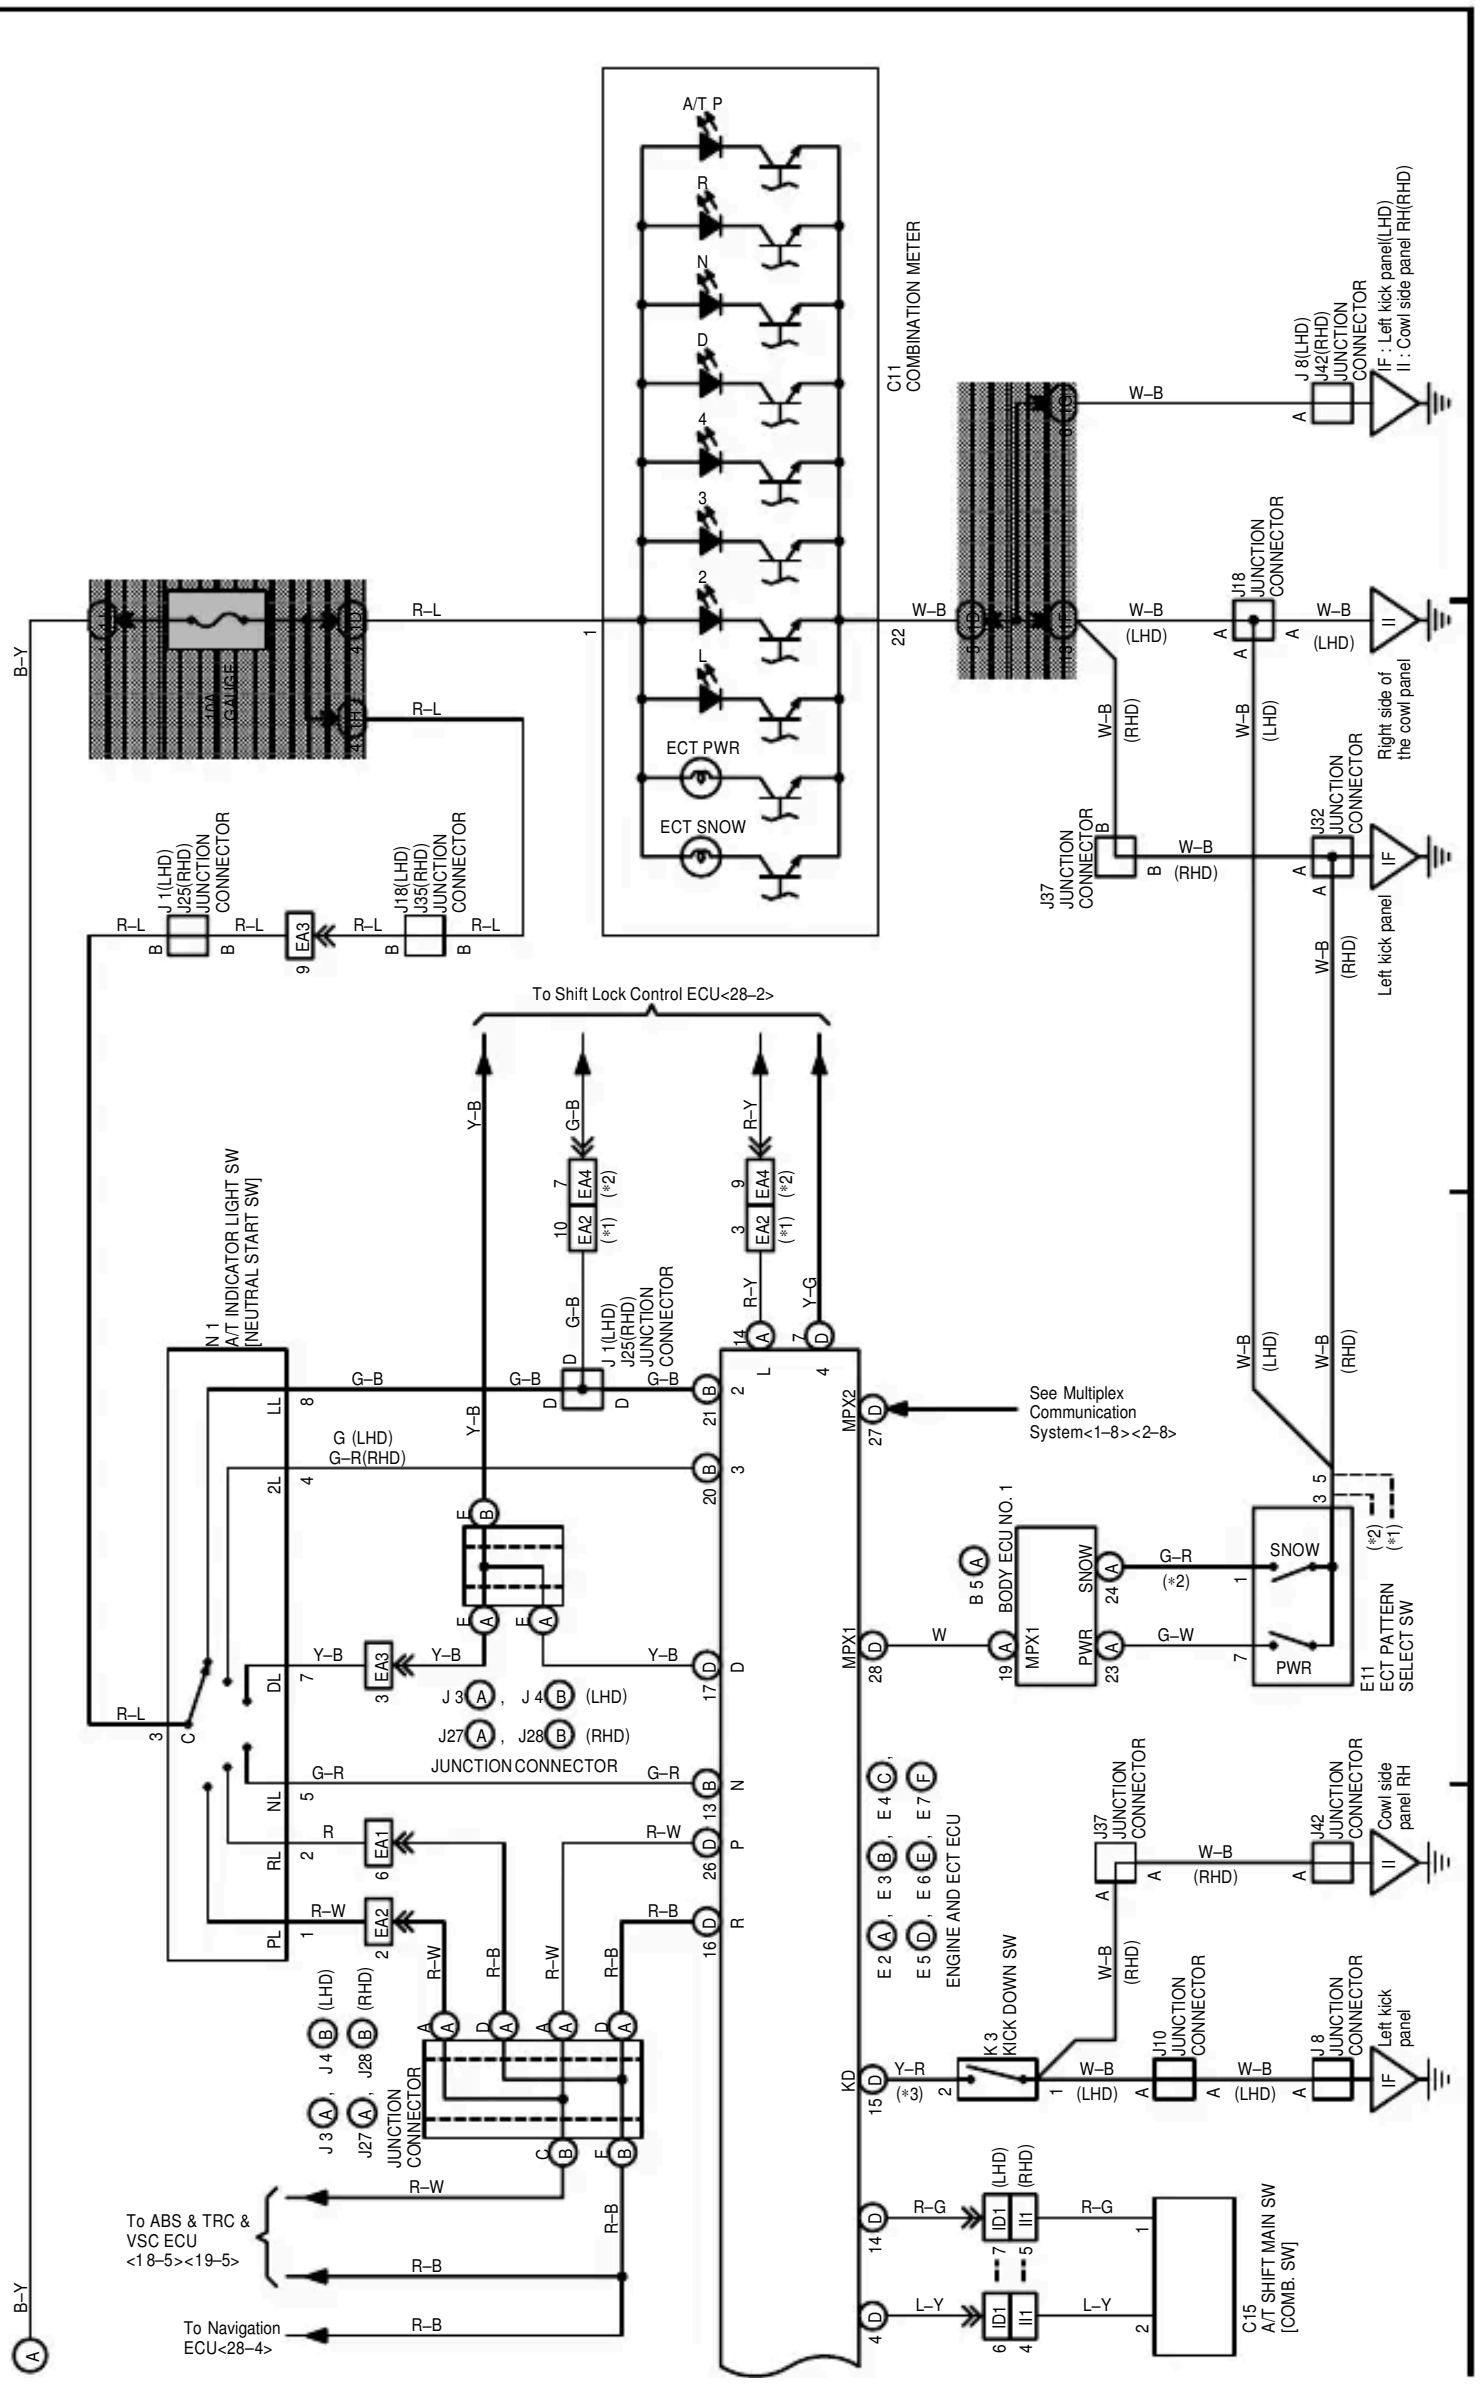

I OVERALL ELECTRICAL WIRING DIAGRAM

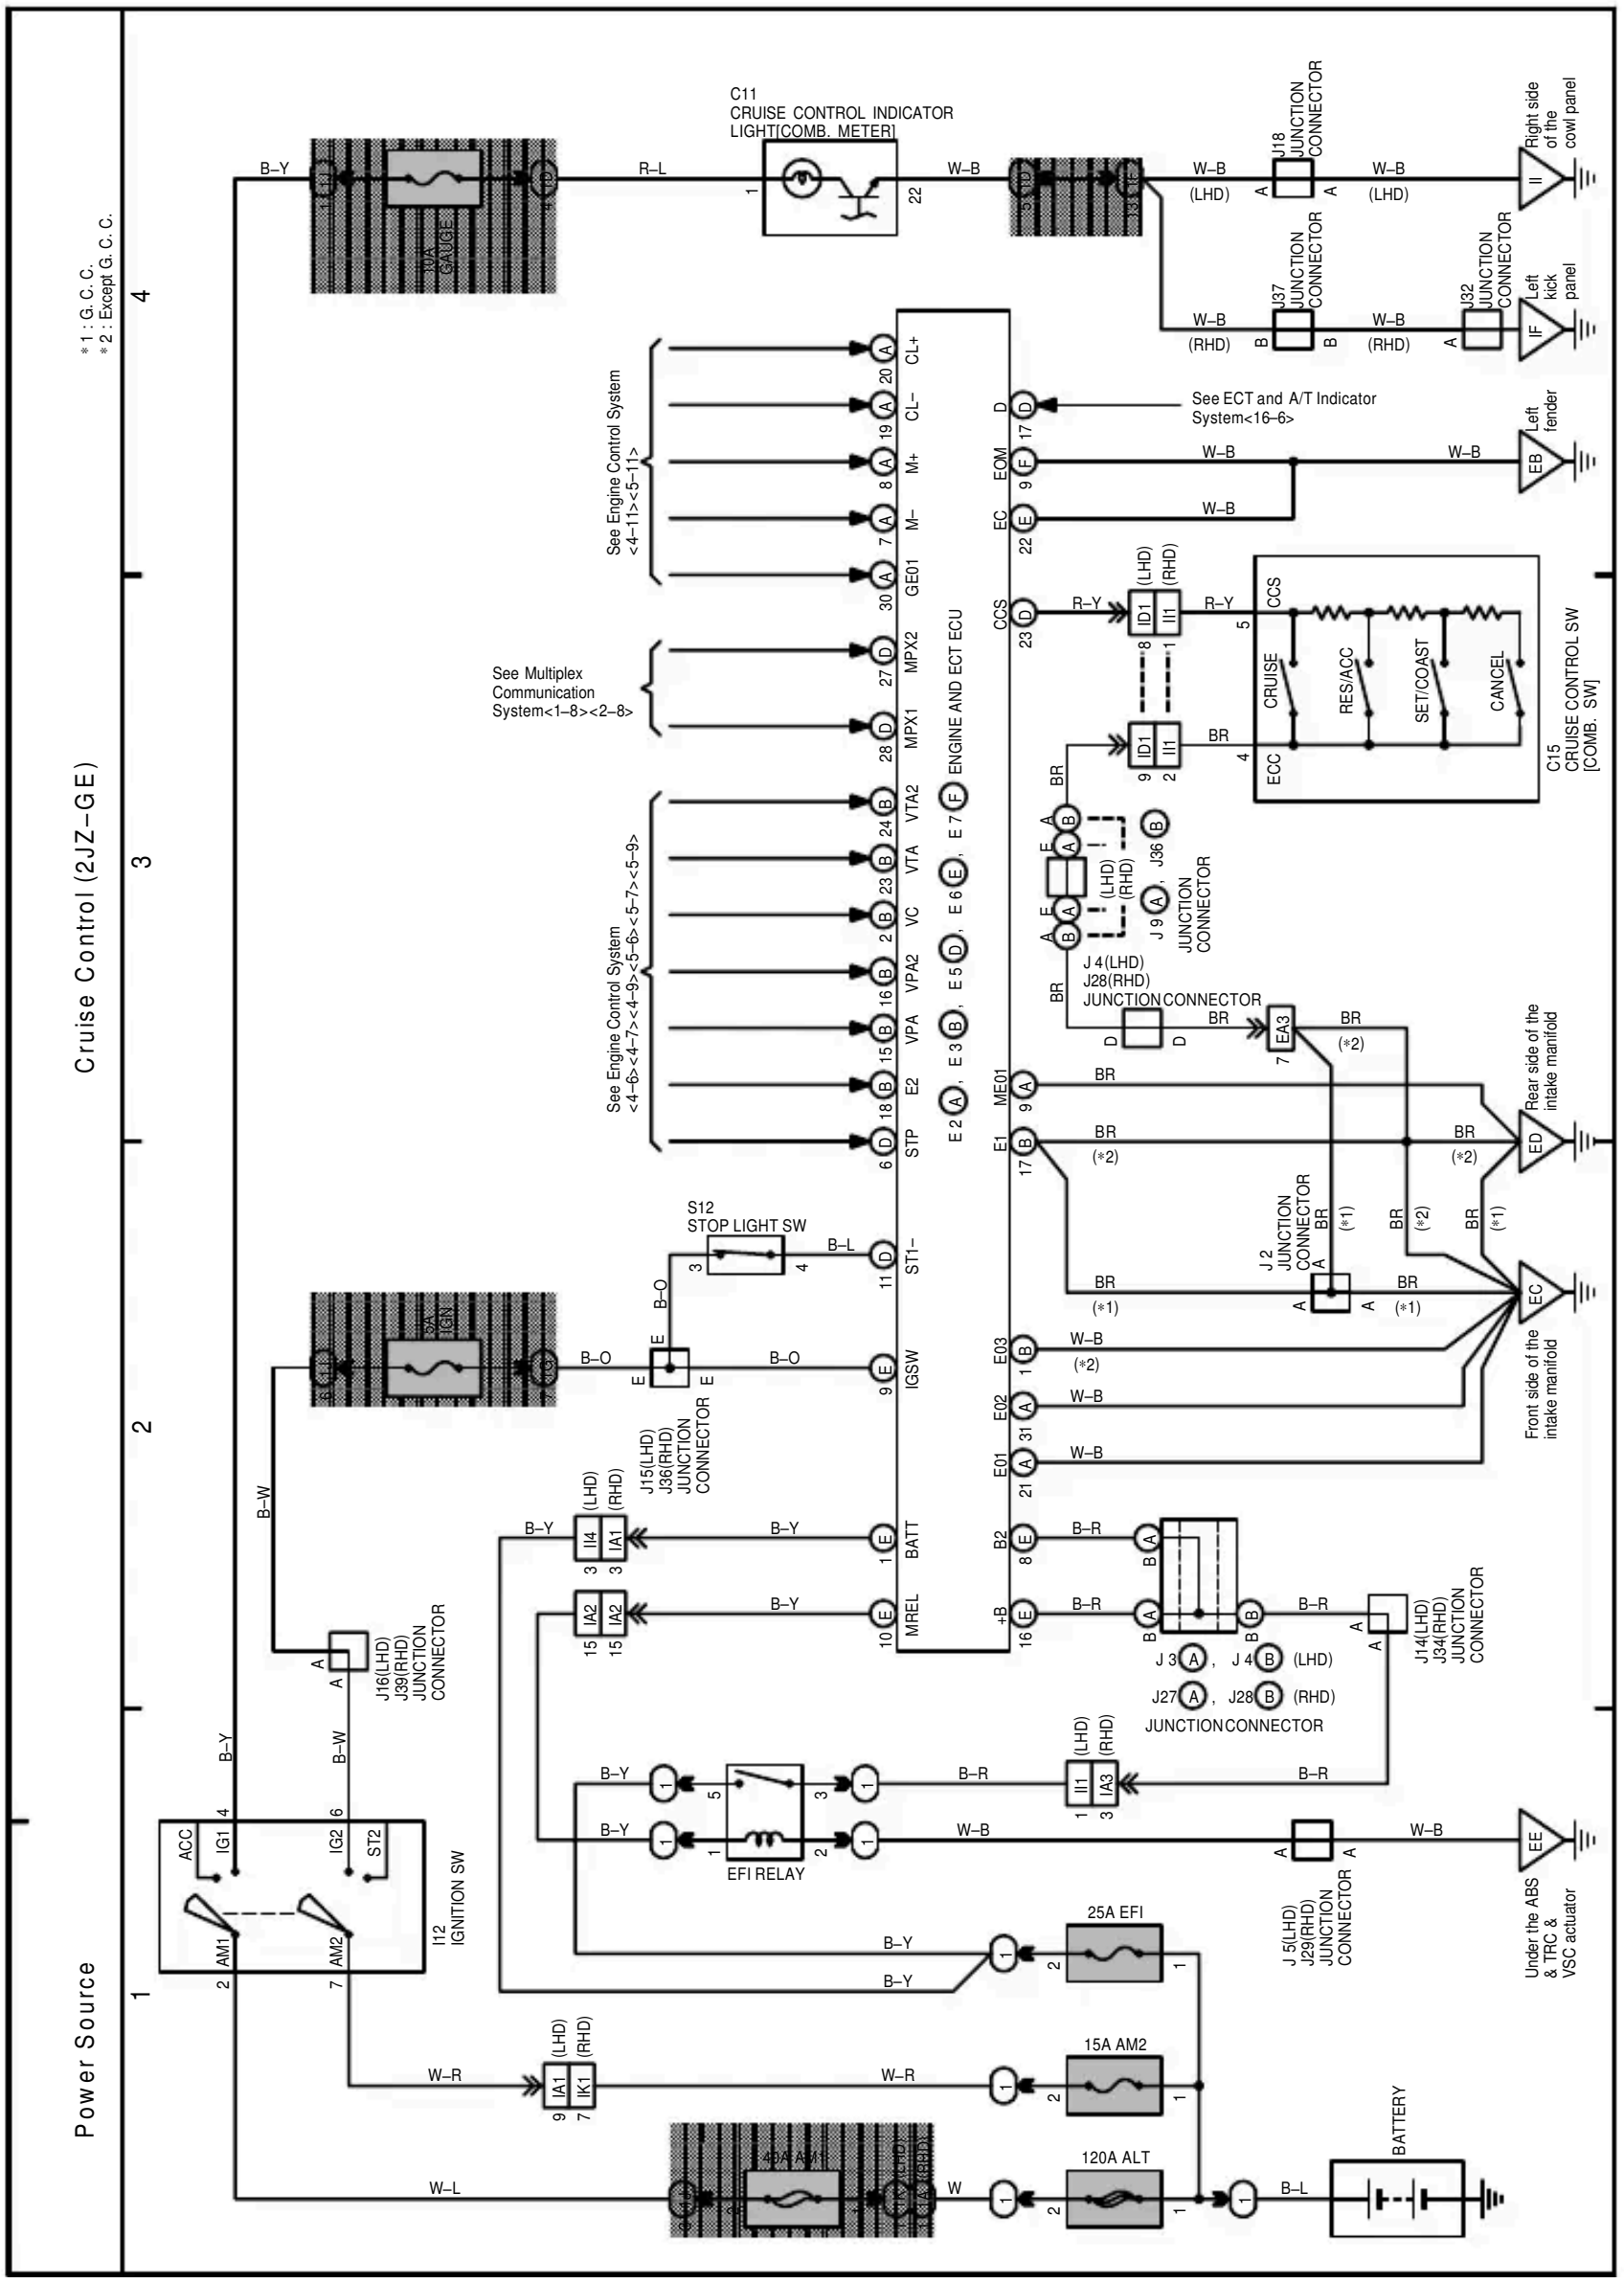

(Cont. next page)

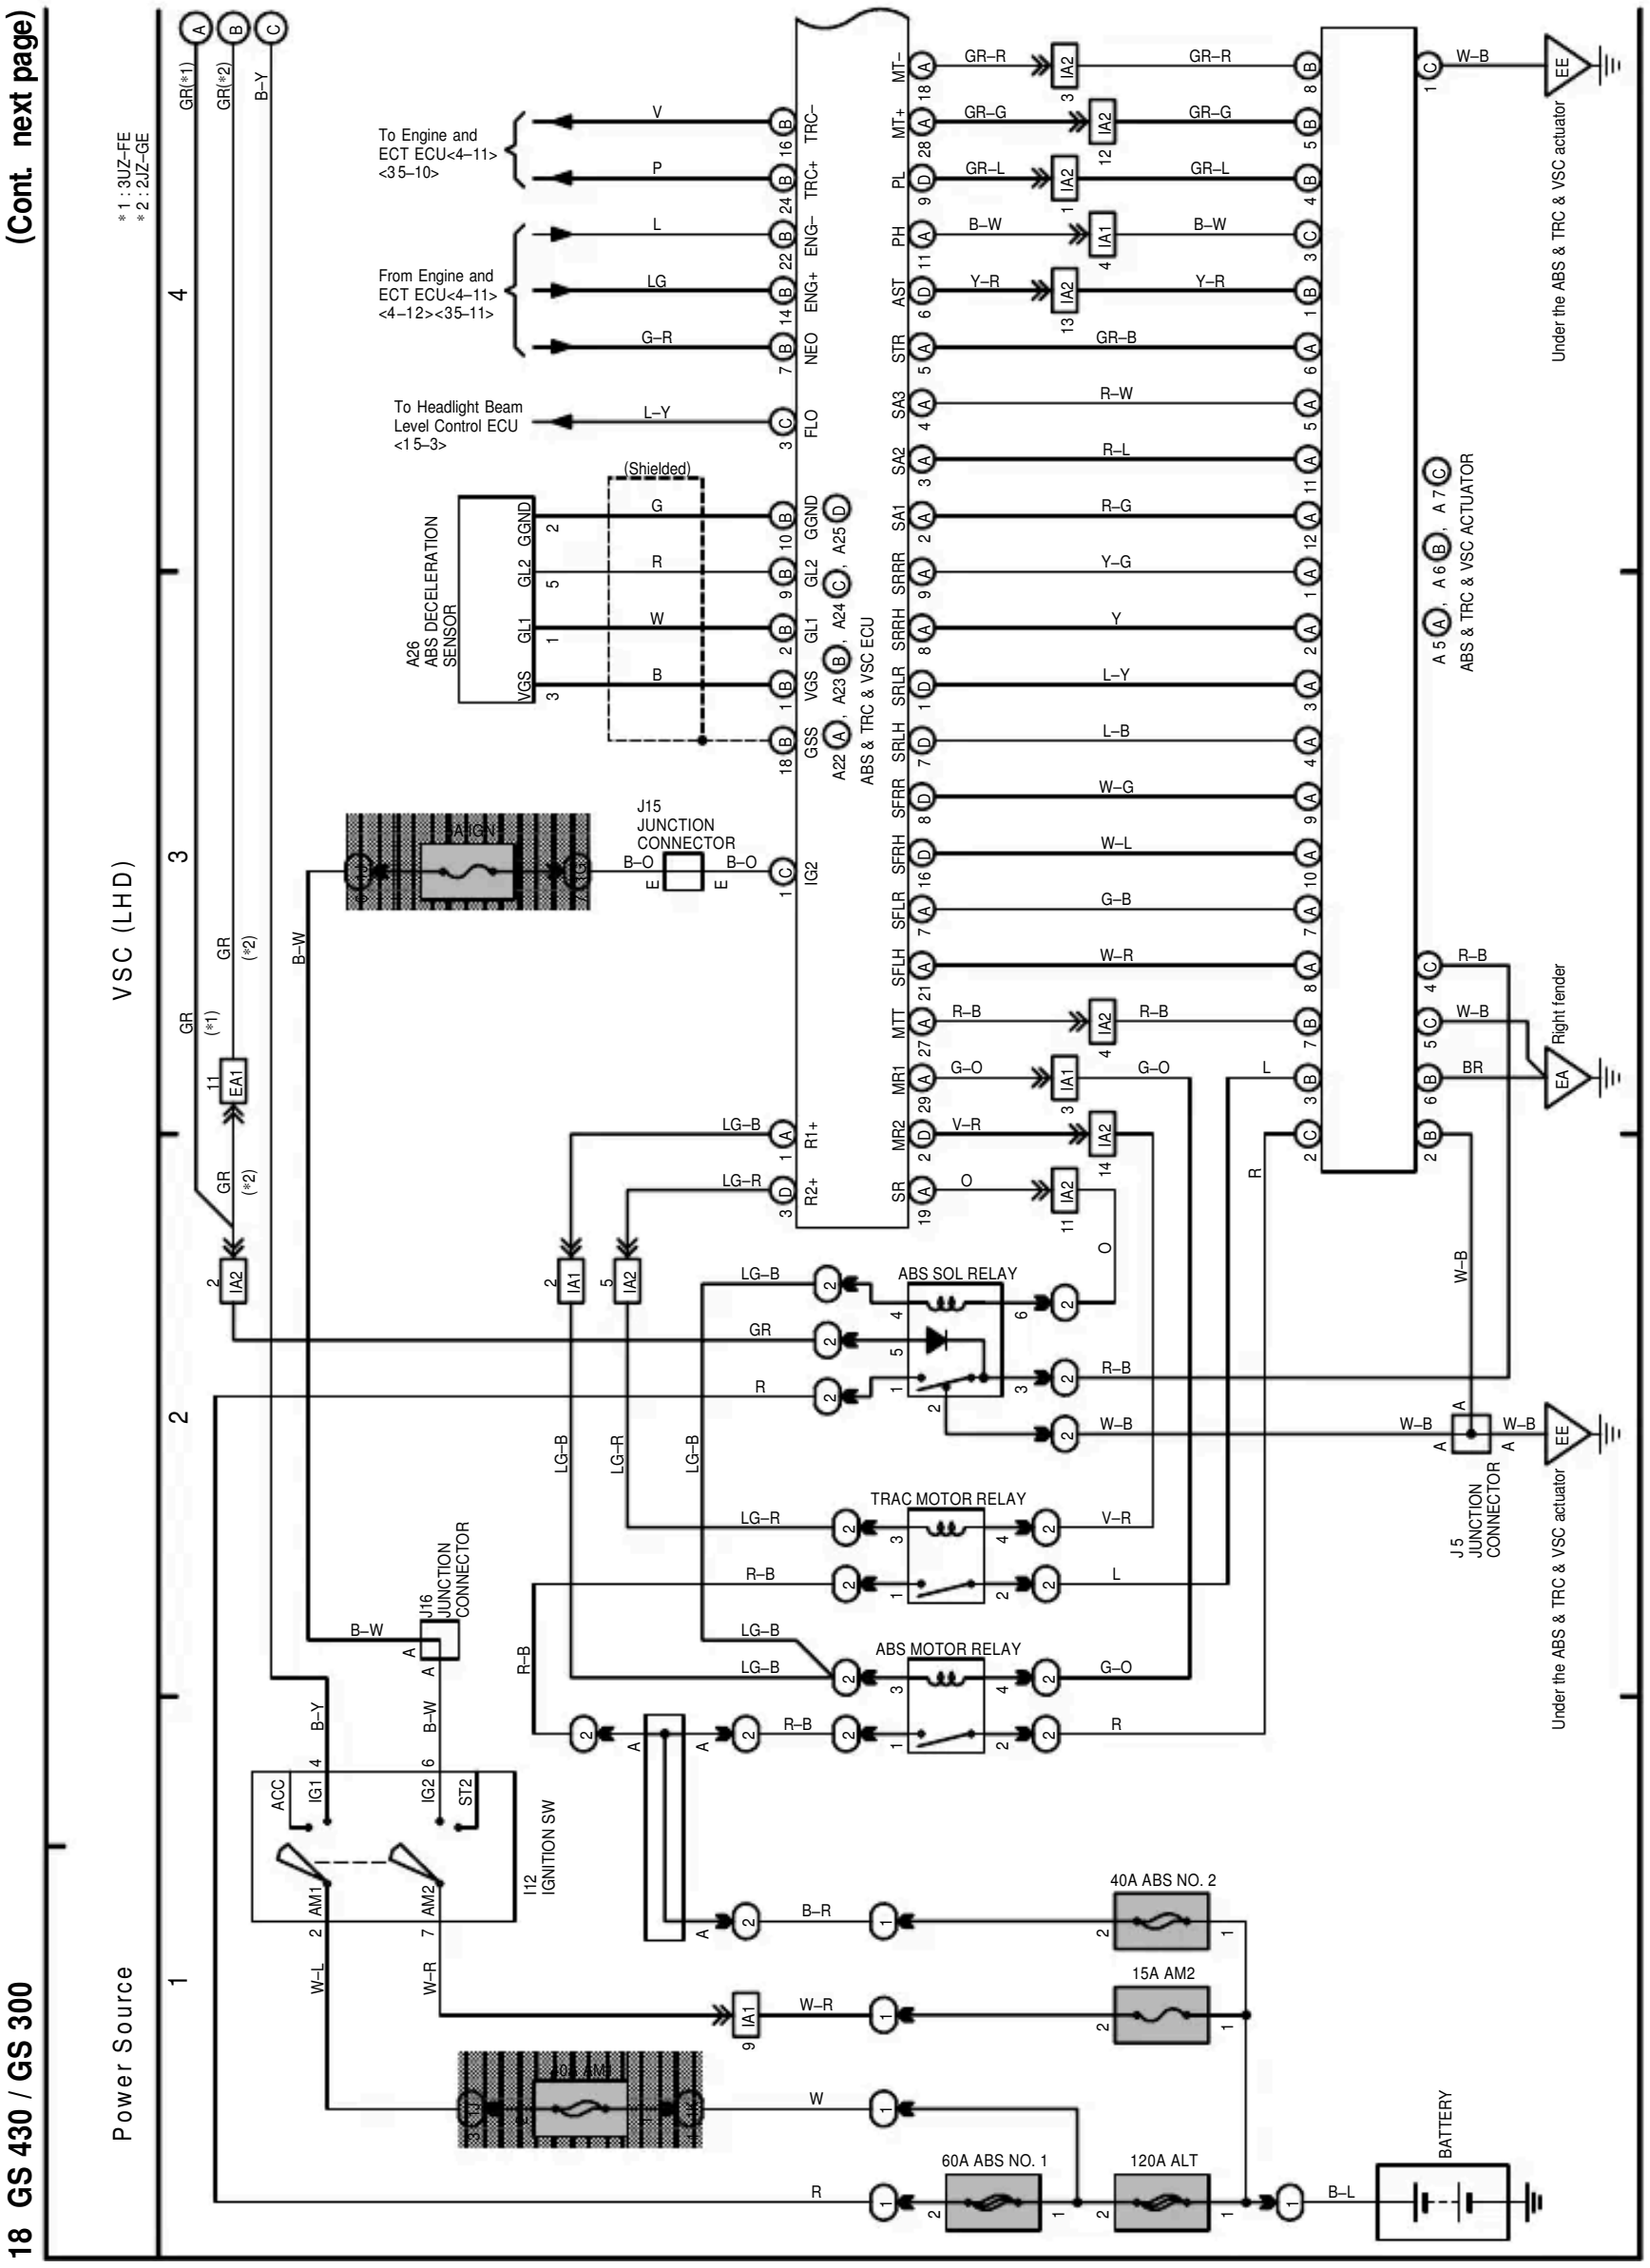

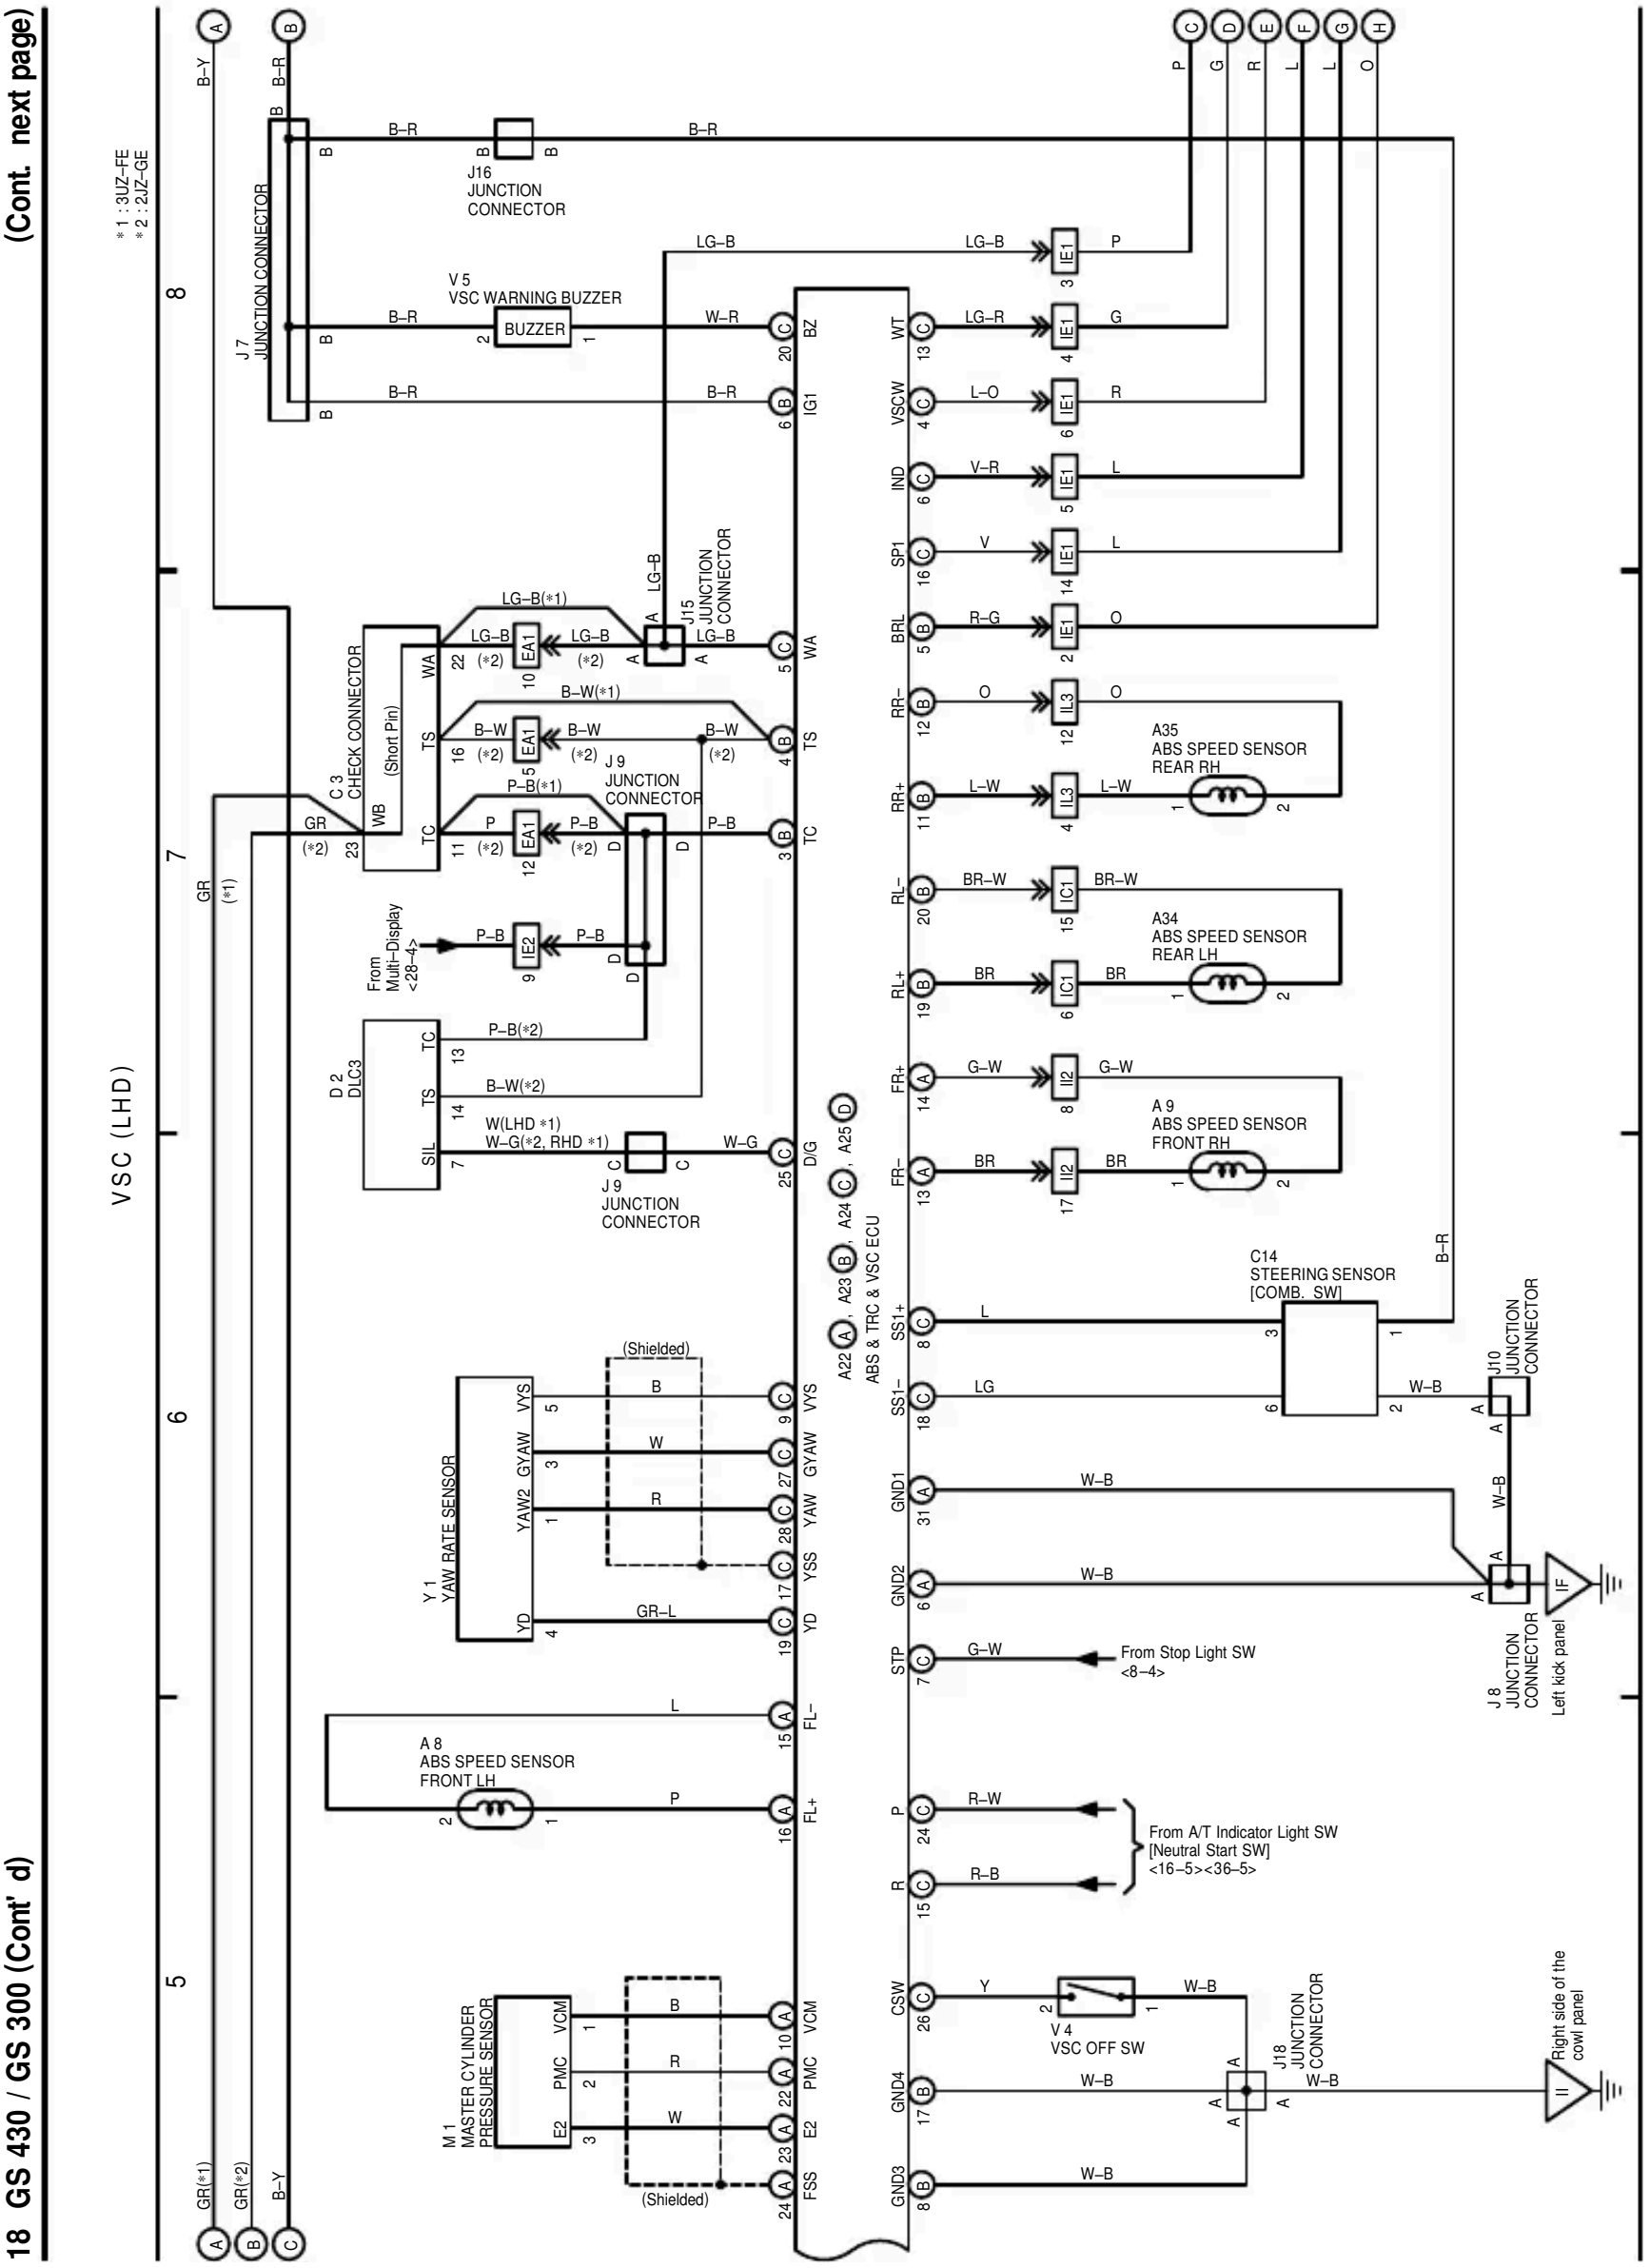
(Cont. next page)
18 GS 430 / GS 300 (Cont' d)
VSC (LHD)
* 1 : 3UZ–FE
* 2 : 2JZ–GE
J 7 JUNCTION CONNECTOR
J16 JUNCTION CONNECTOR
V 5 VSC WARNING BUZZER
BUZZER
J15 JUNCTION CONNECTOR
C 3 CHECK CONNECTOR
(Short Pin)
J 9 JUNCTION CONNECTOR
From Multi–Display <28–4>
D 2 DLC3
W(LHD *1) W–G(*2, RHD *1)
A22, A23, A24, A25 ABS & TRC & VSC ECU
Y 1 YAW RATE SENSOR
(Shielded)
A 8 ABS SPEED SENSOR FRONT LH
M 1 MASTER CYLINDER PRESSURE SENSOR
A35 ABS SPEED SENSOR REAR RH
A34 ABS SPEED SENSOR REAR LH
A 9 ABS SPEED SENSOR FRONT RH
C14 STEERING SENSOR [COMB. SW]
J10 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
Left kick panel
From Stop Light SW <8–4>
From A/T Indicator Light SW [Neutral Start SW] <16–5><36–5>
V 4 VSC OFF SW
J18 JUNCTION CONNECTOR
Right side of the cowl panel

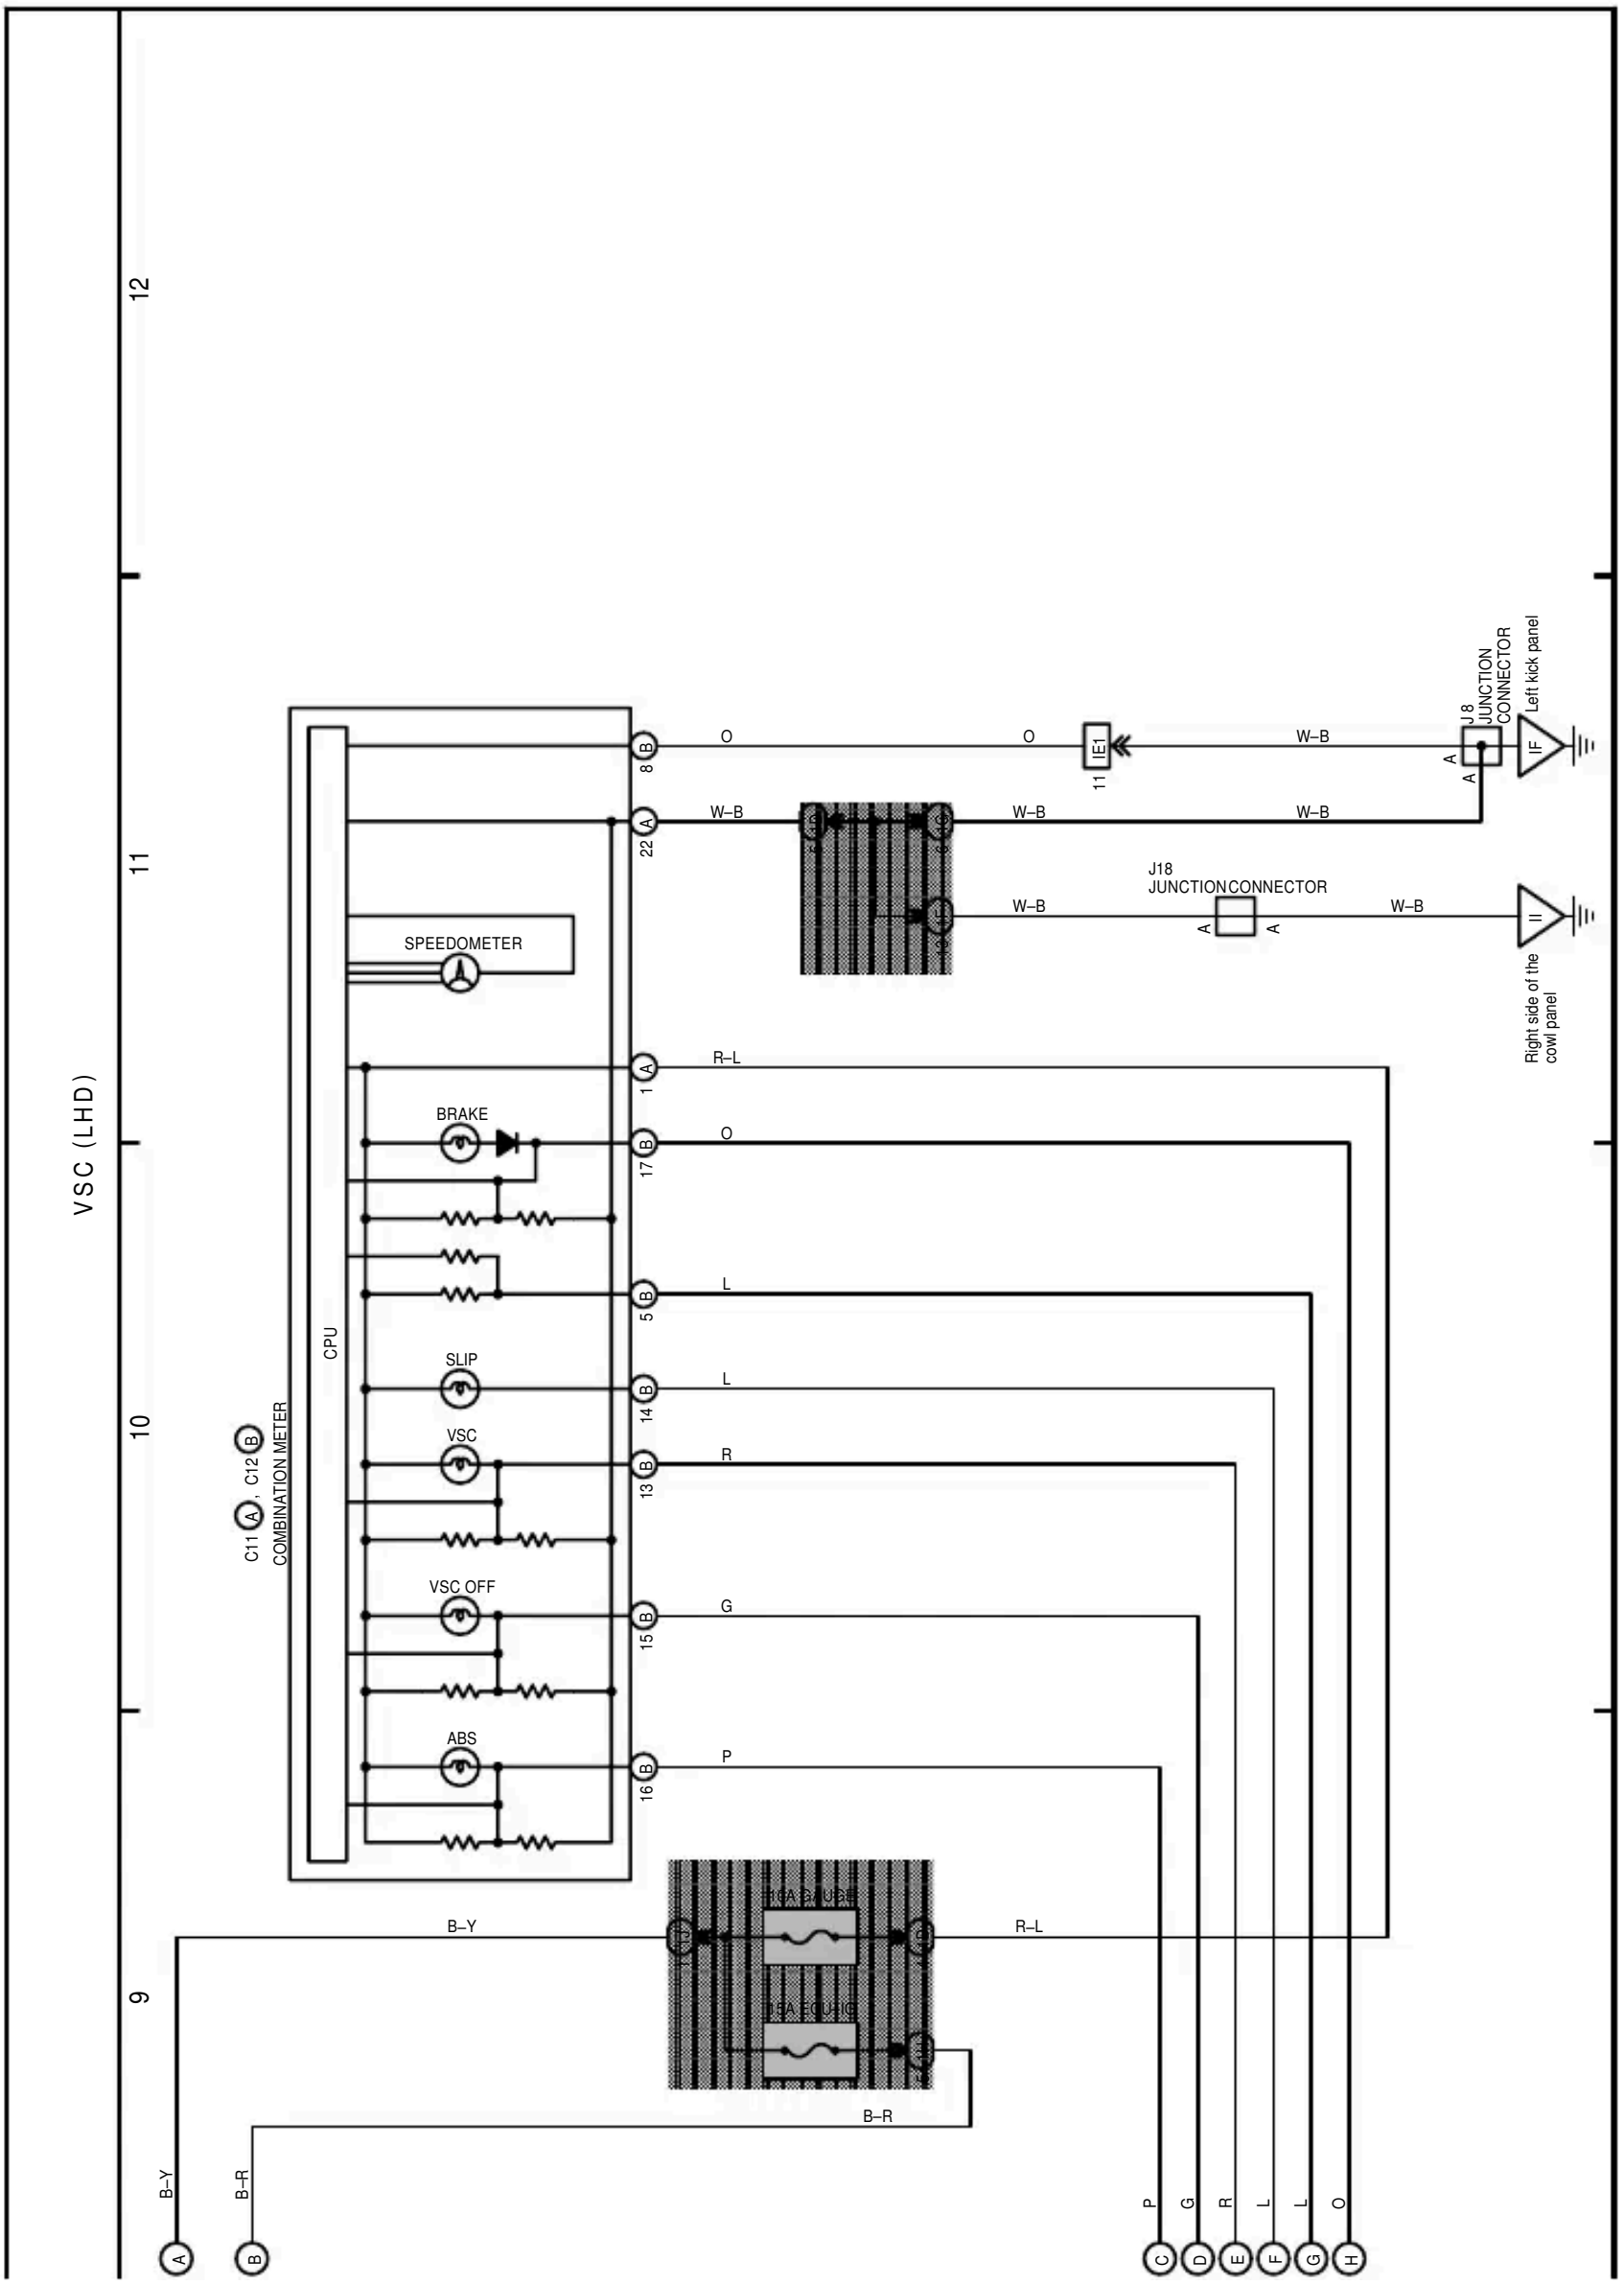
VSC (LHD)
12
11
10
9
SPEEDOMETER
BRAKE
SLIP
VSC
VSC OFF
ABS
CPU
C11 A , C12 B
COMBINATION METER
8 B
22 A
1 A
17 B
5 B
14 B
13 B
15 B
16 B
O
W–B
R–L
L
G
P
B–Y
B–R
IE1
11
J8
JUNCTION
CONNECTOR
A
A
IF
Left kick panel
J18
JUNCTION CONNECTOR
A
A
II
Right side of the
cowl panel
7.5A RADIO
7.5A ECU-IG
A
B
C
D
E
F
G
H

I OVERALL ELECTRICAL WIRING DIAGRAM

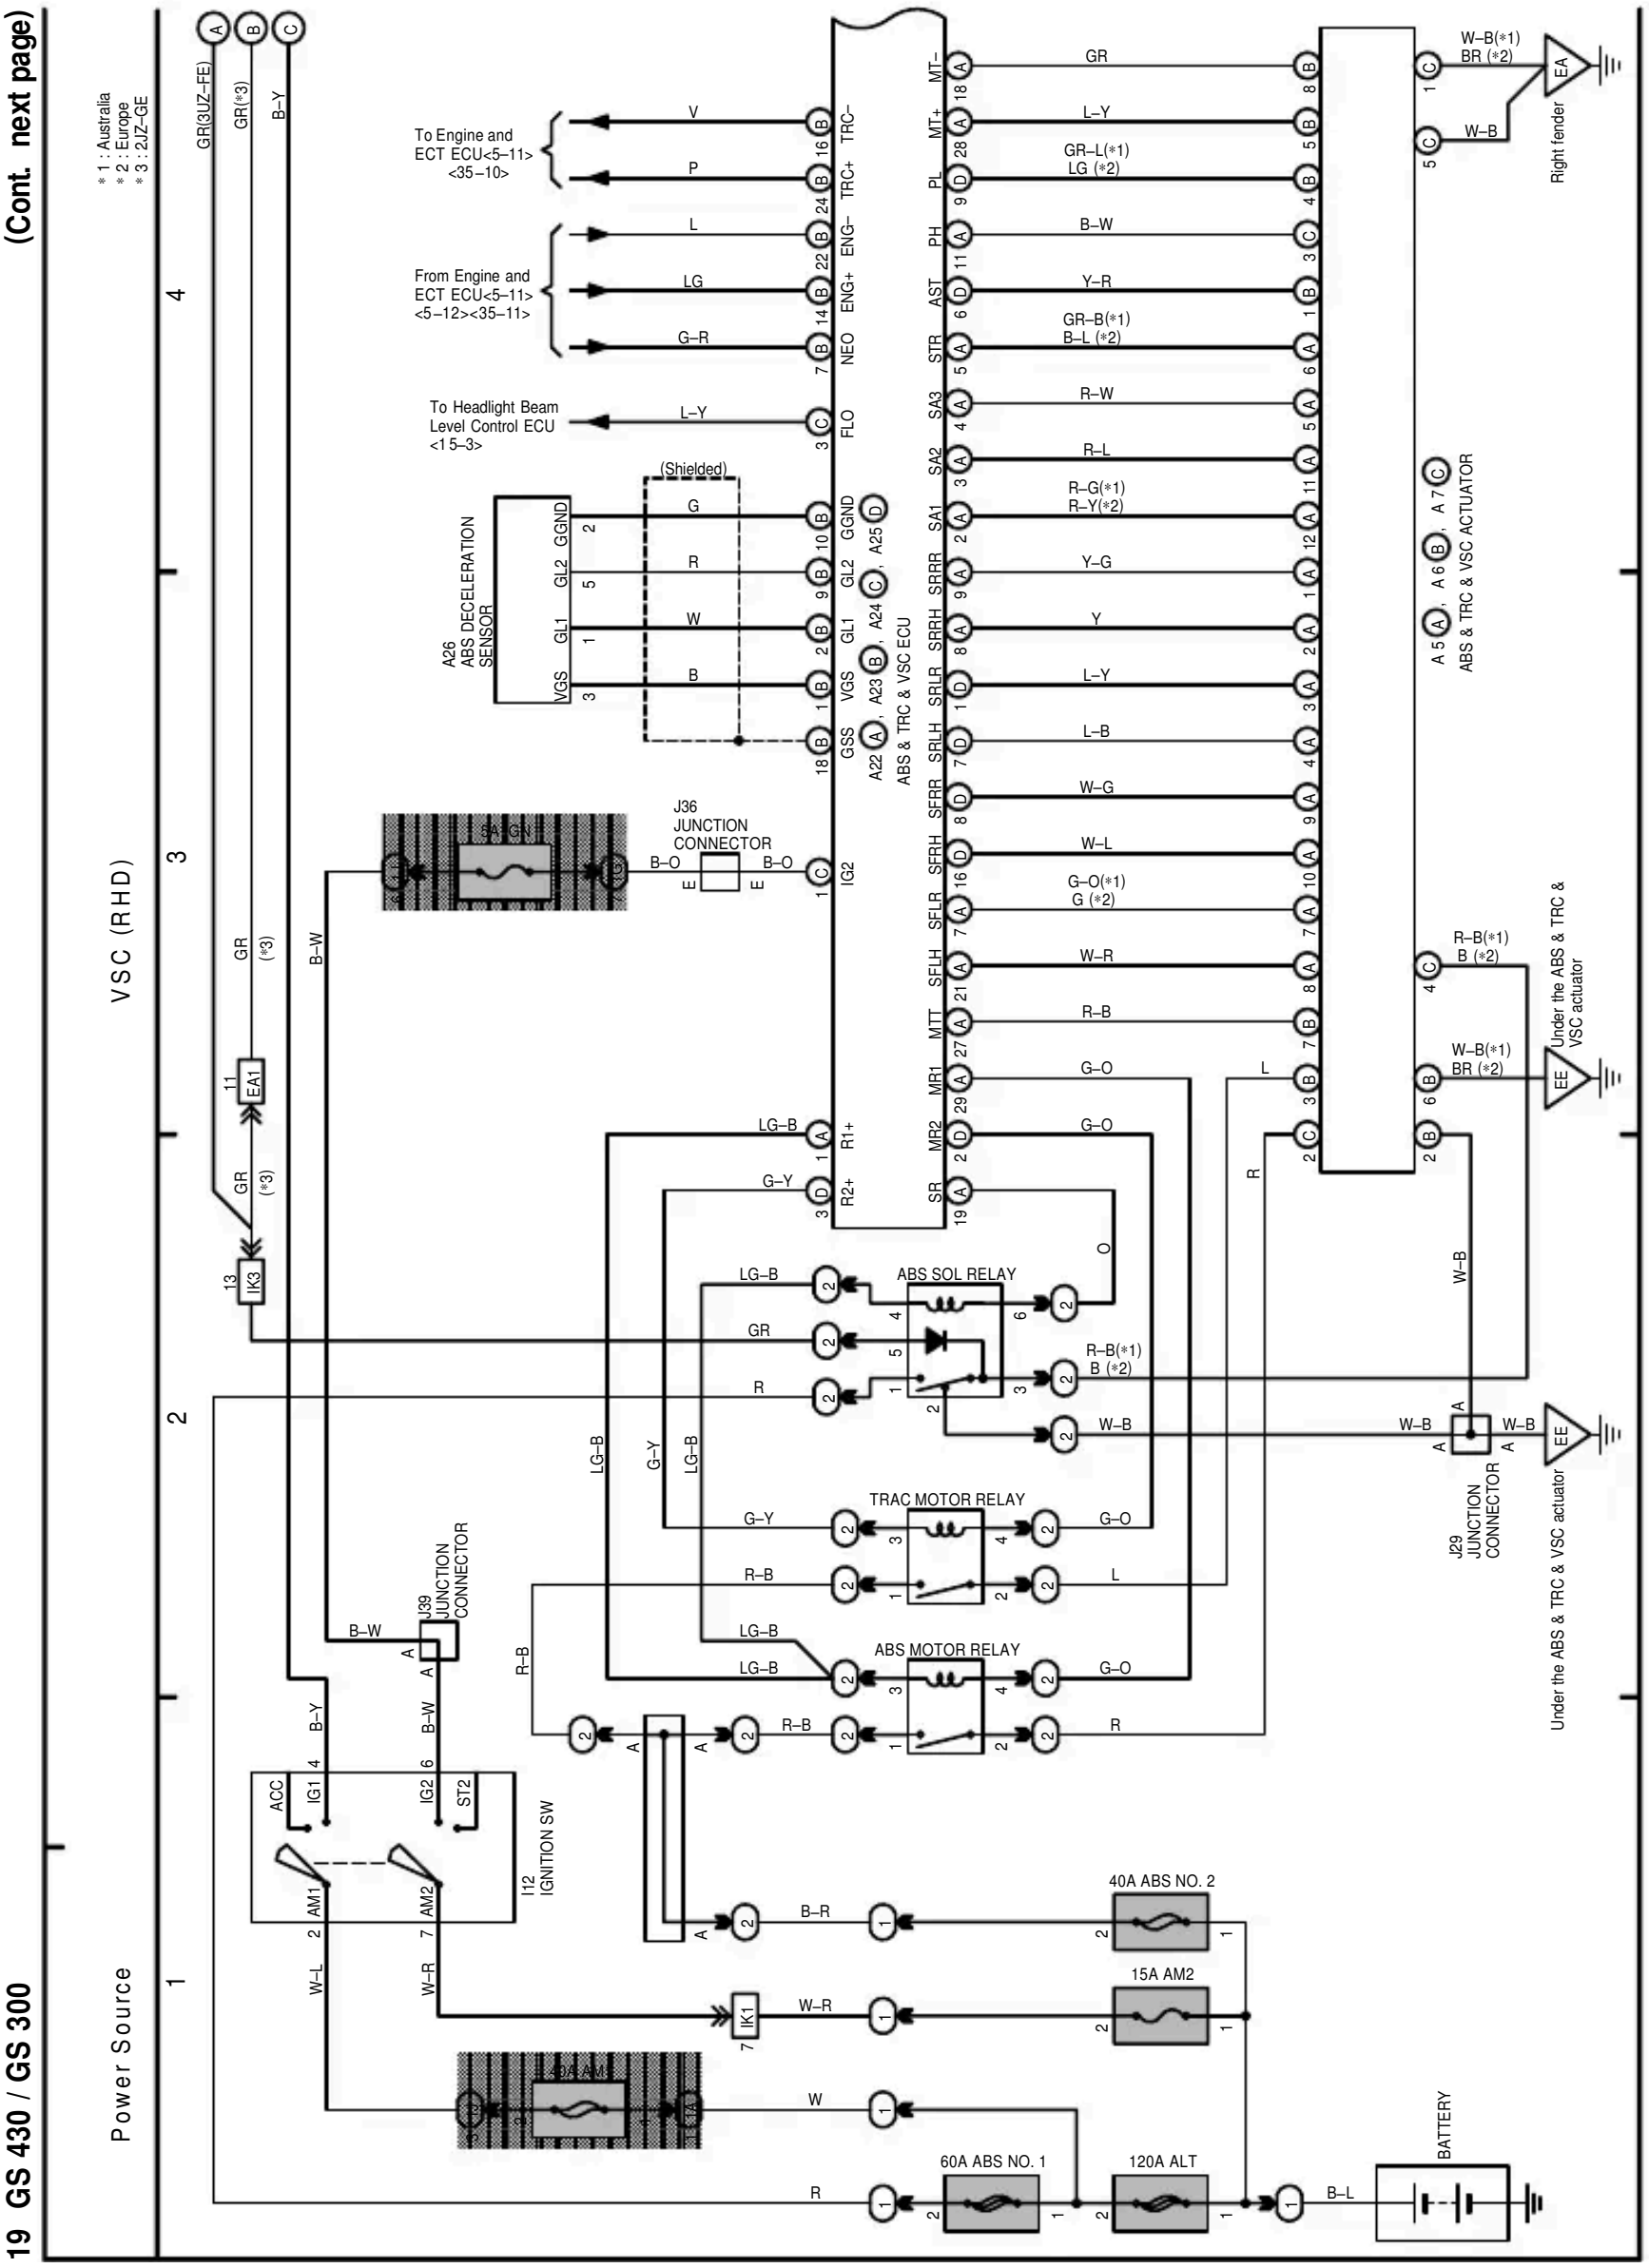

(Cont. next page)

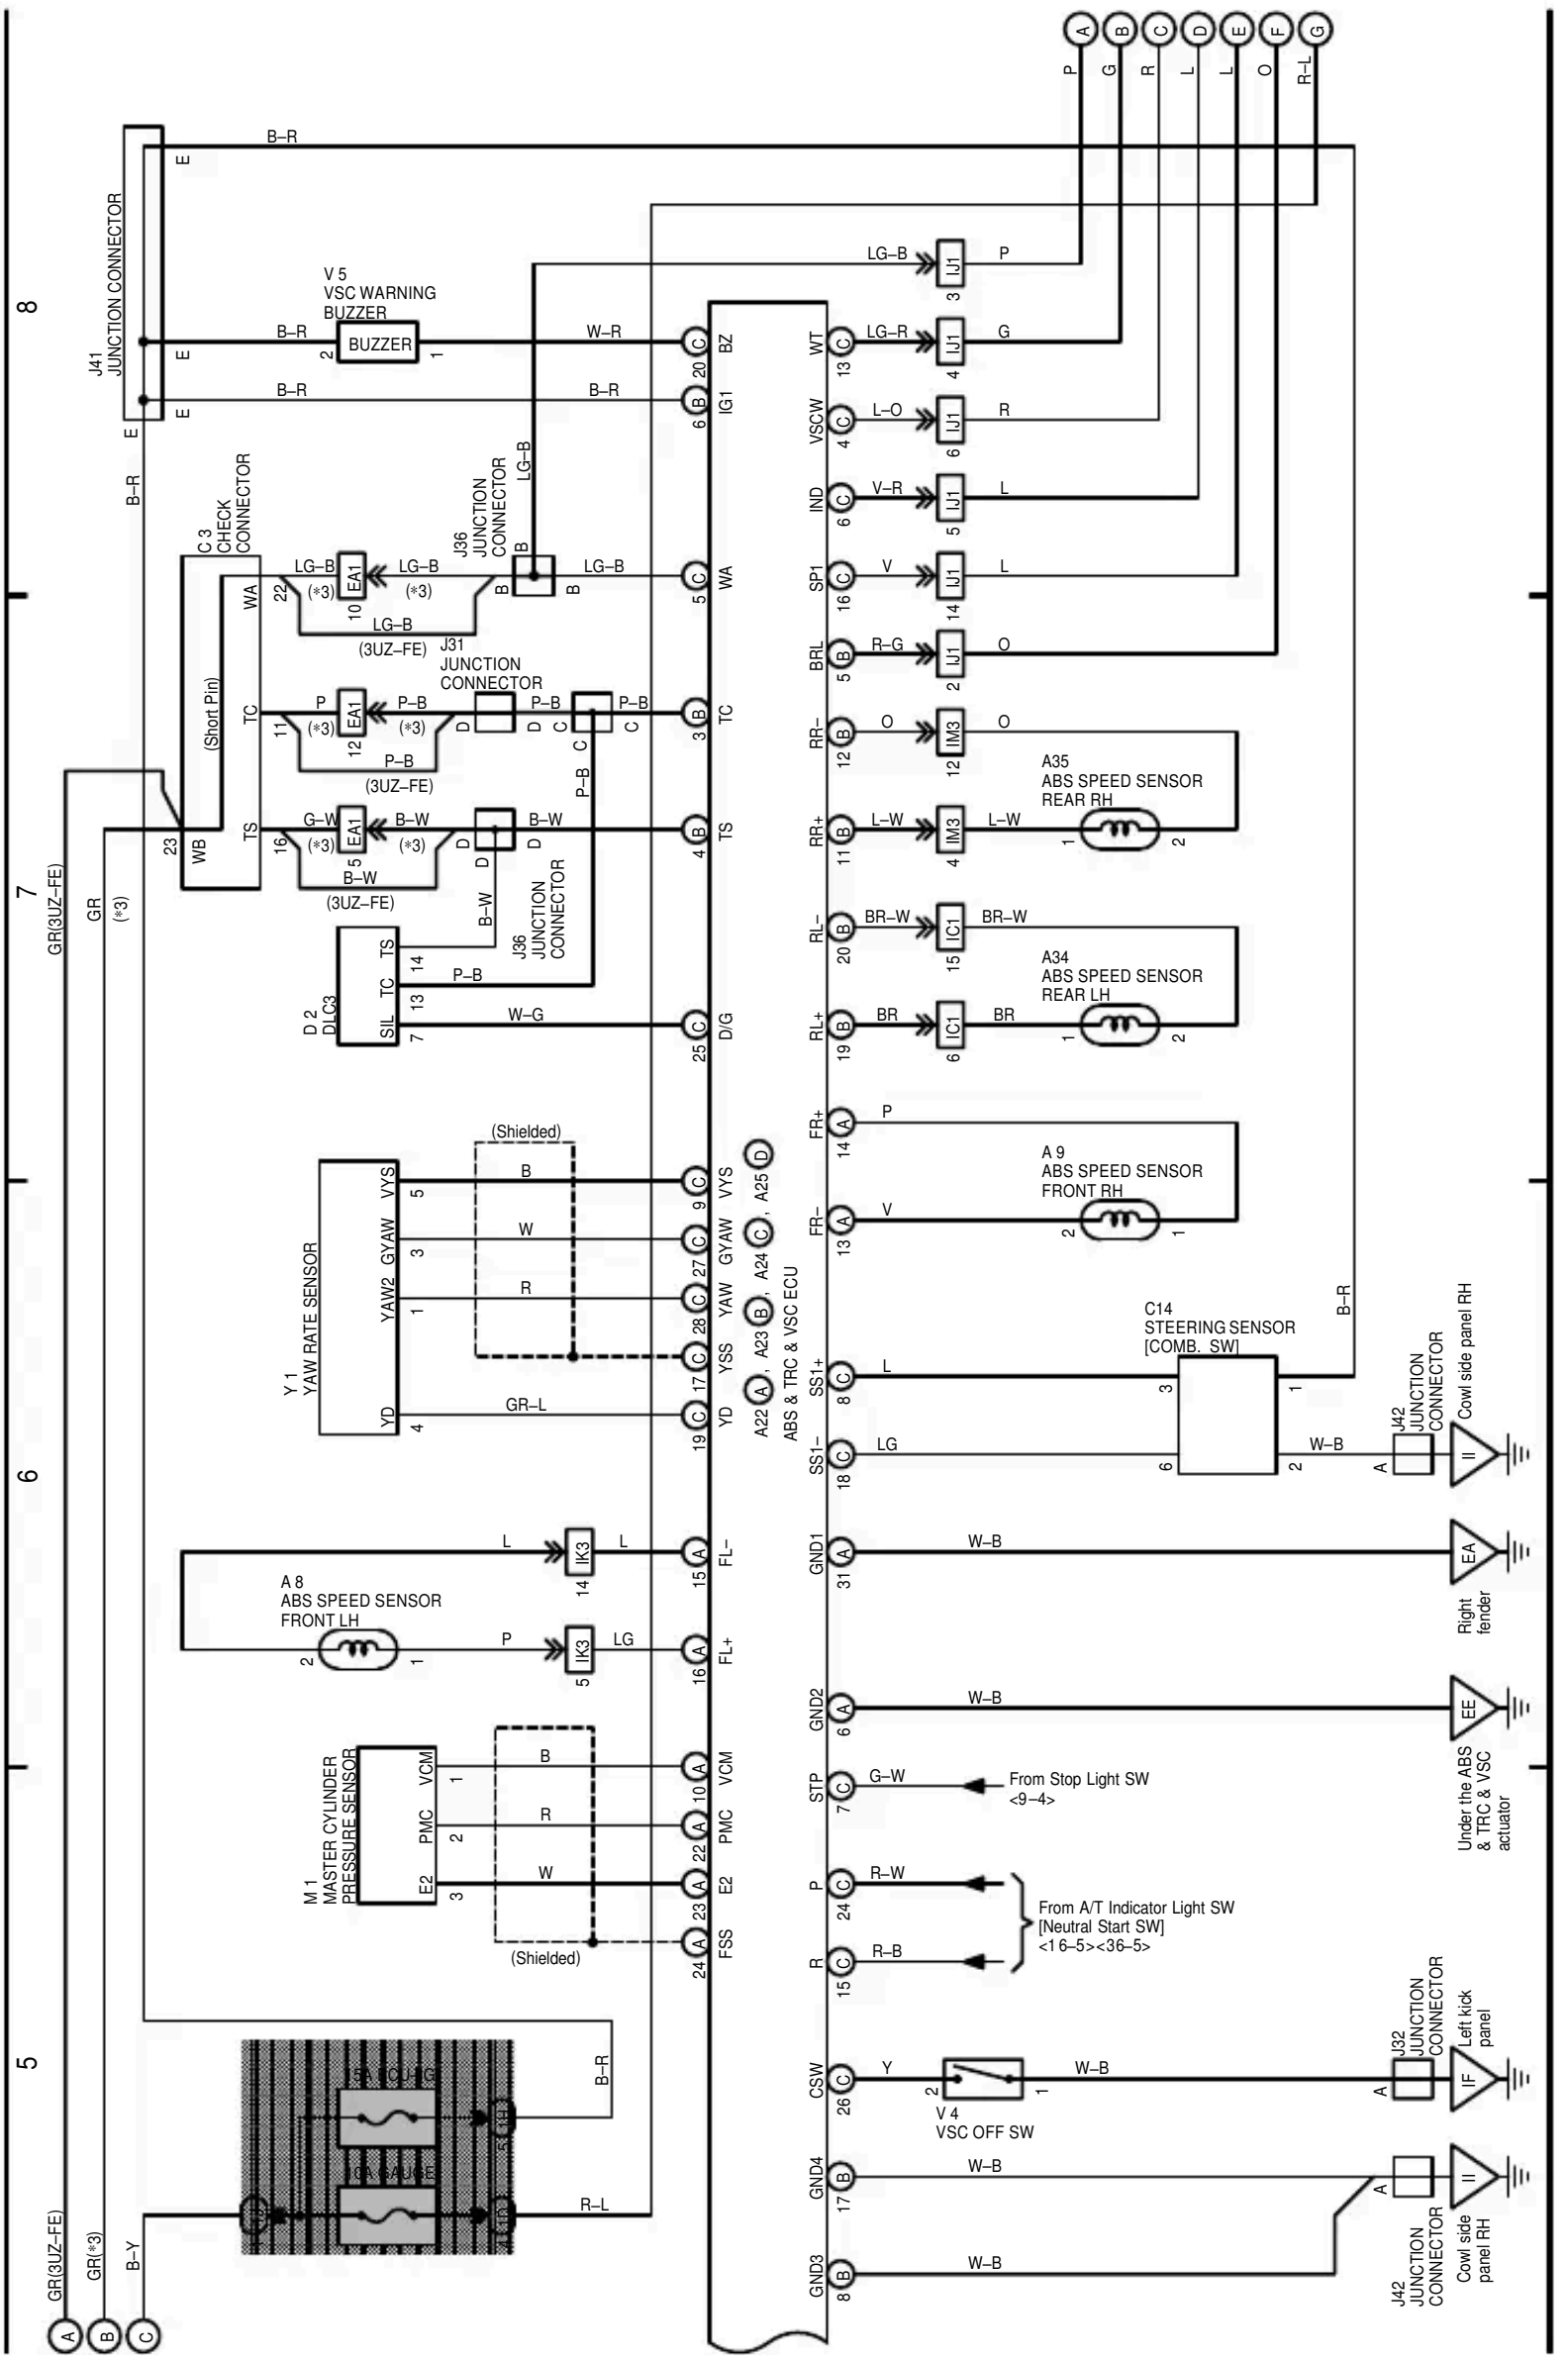

I OVERALL ELECTRICAL WIRING DIAGRAM

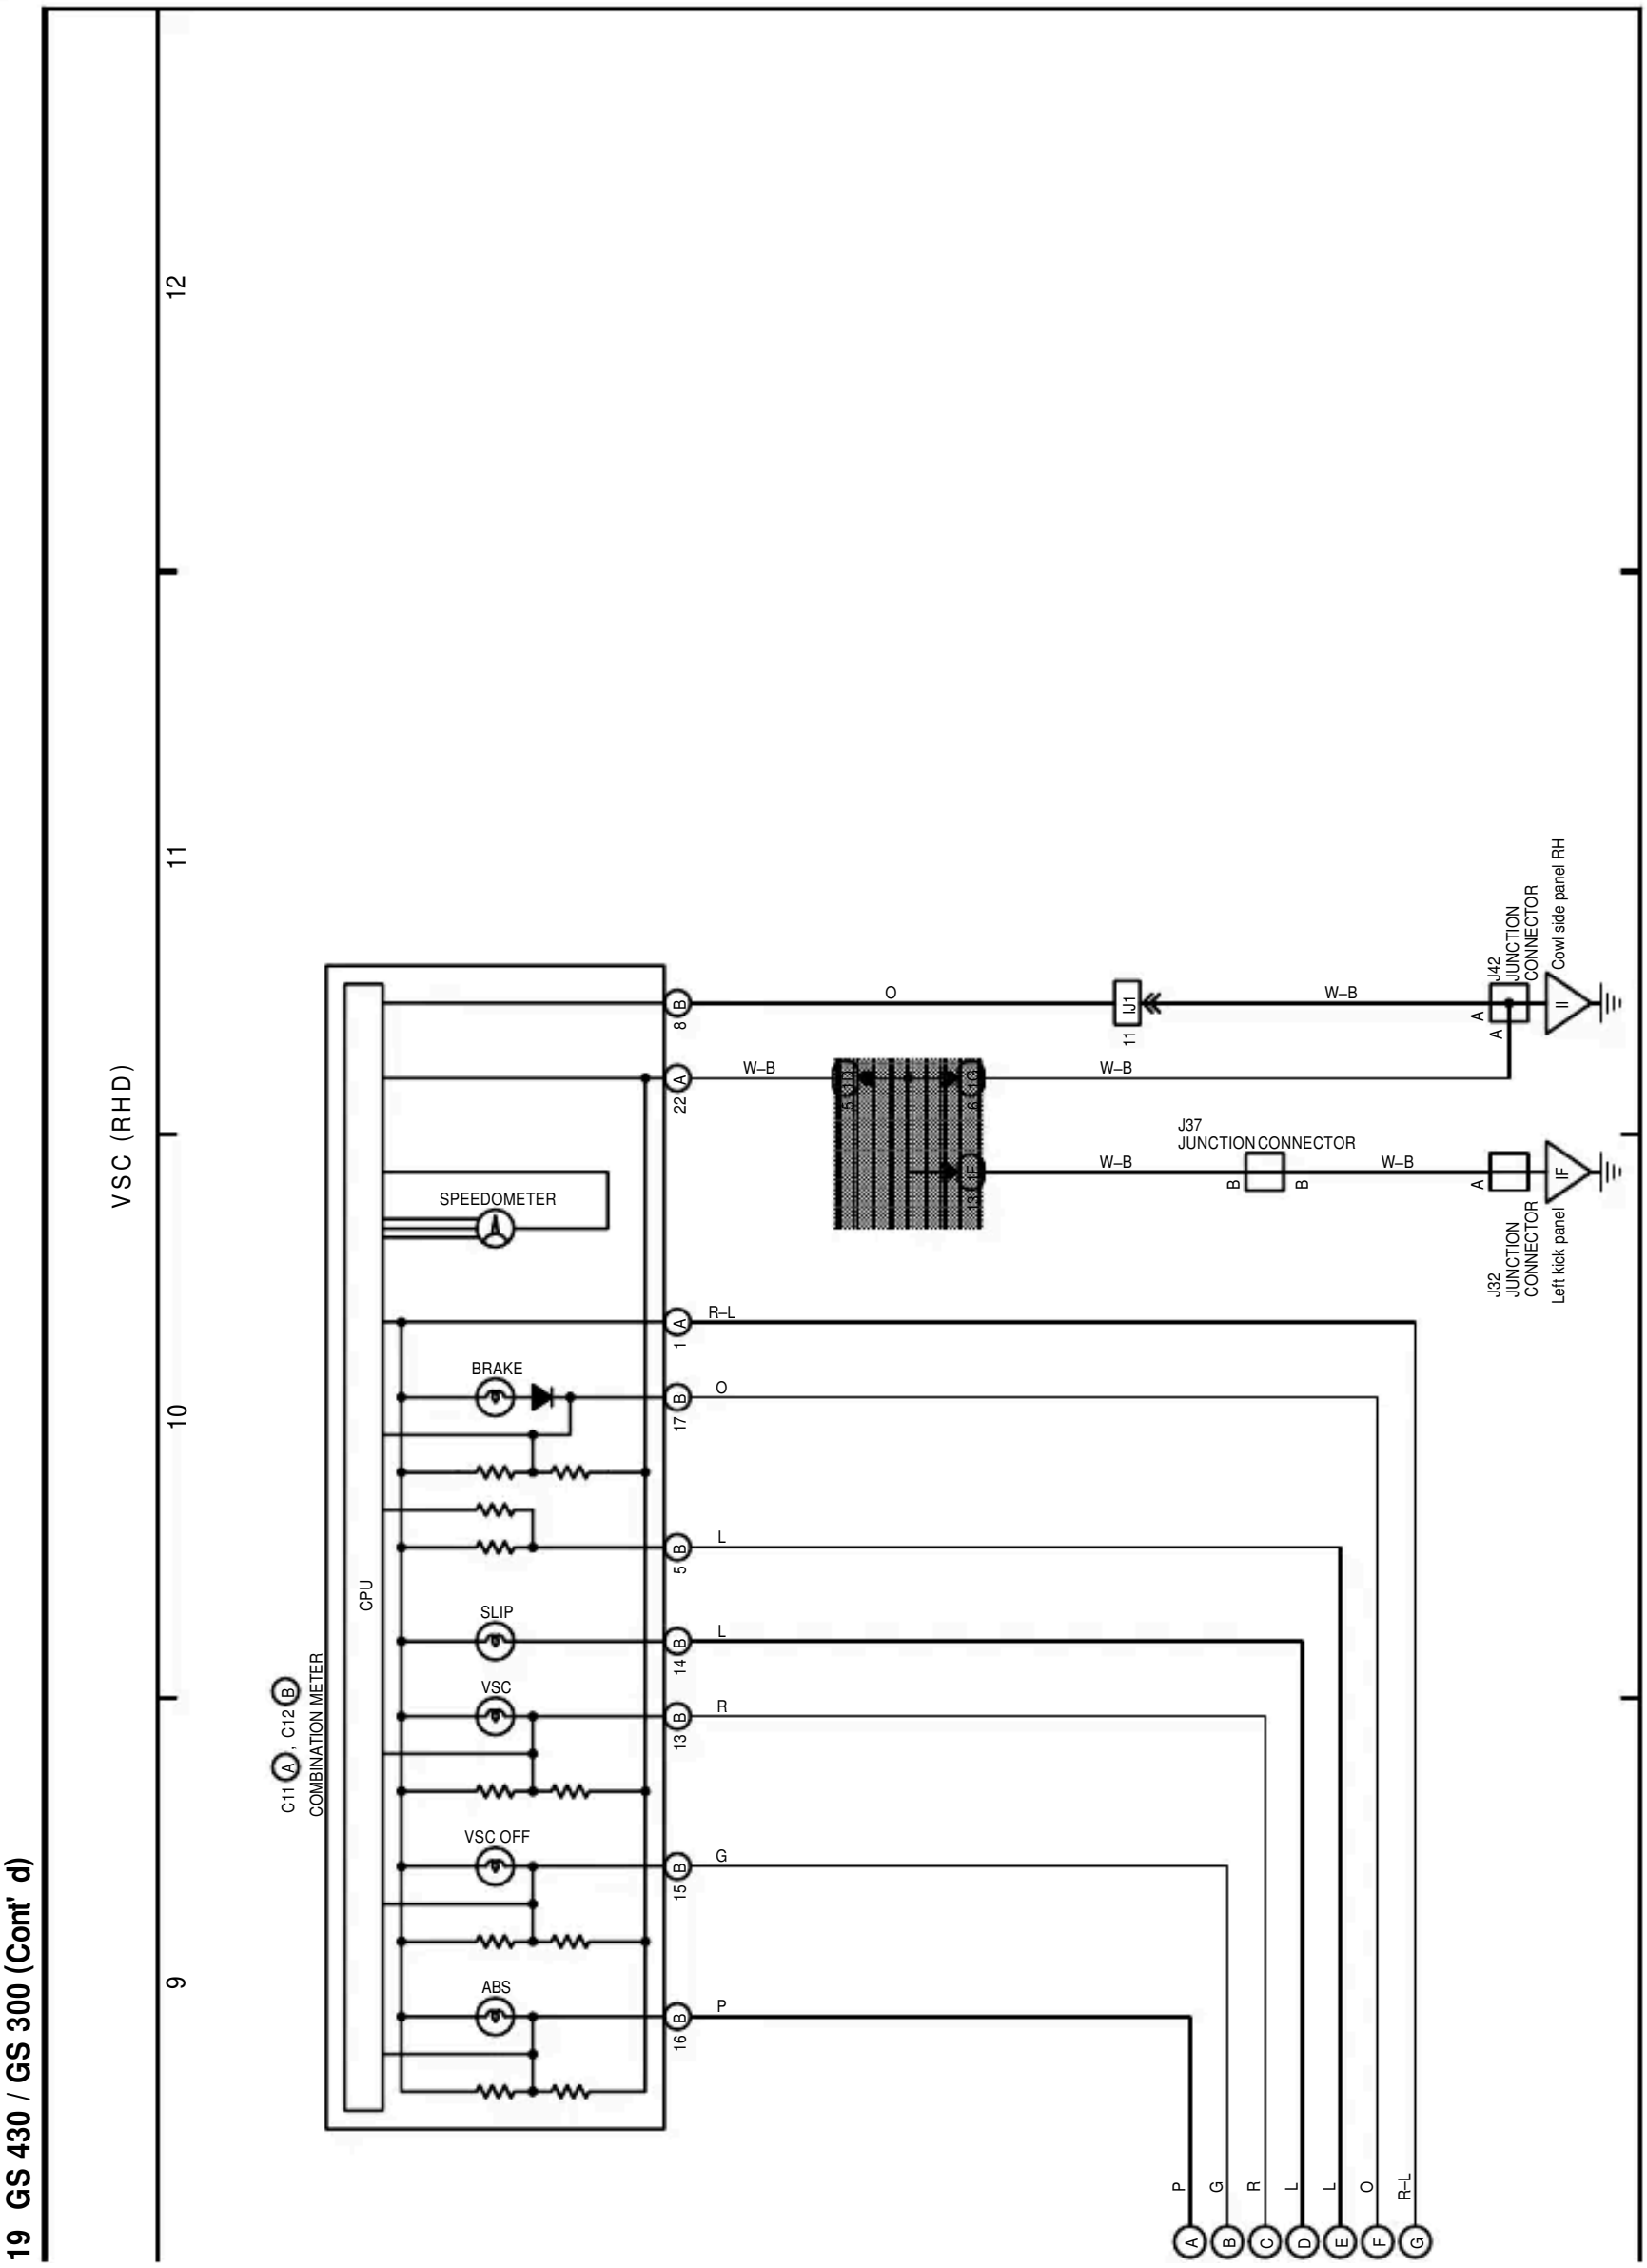

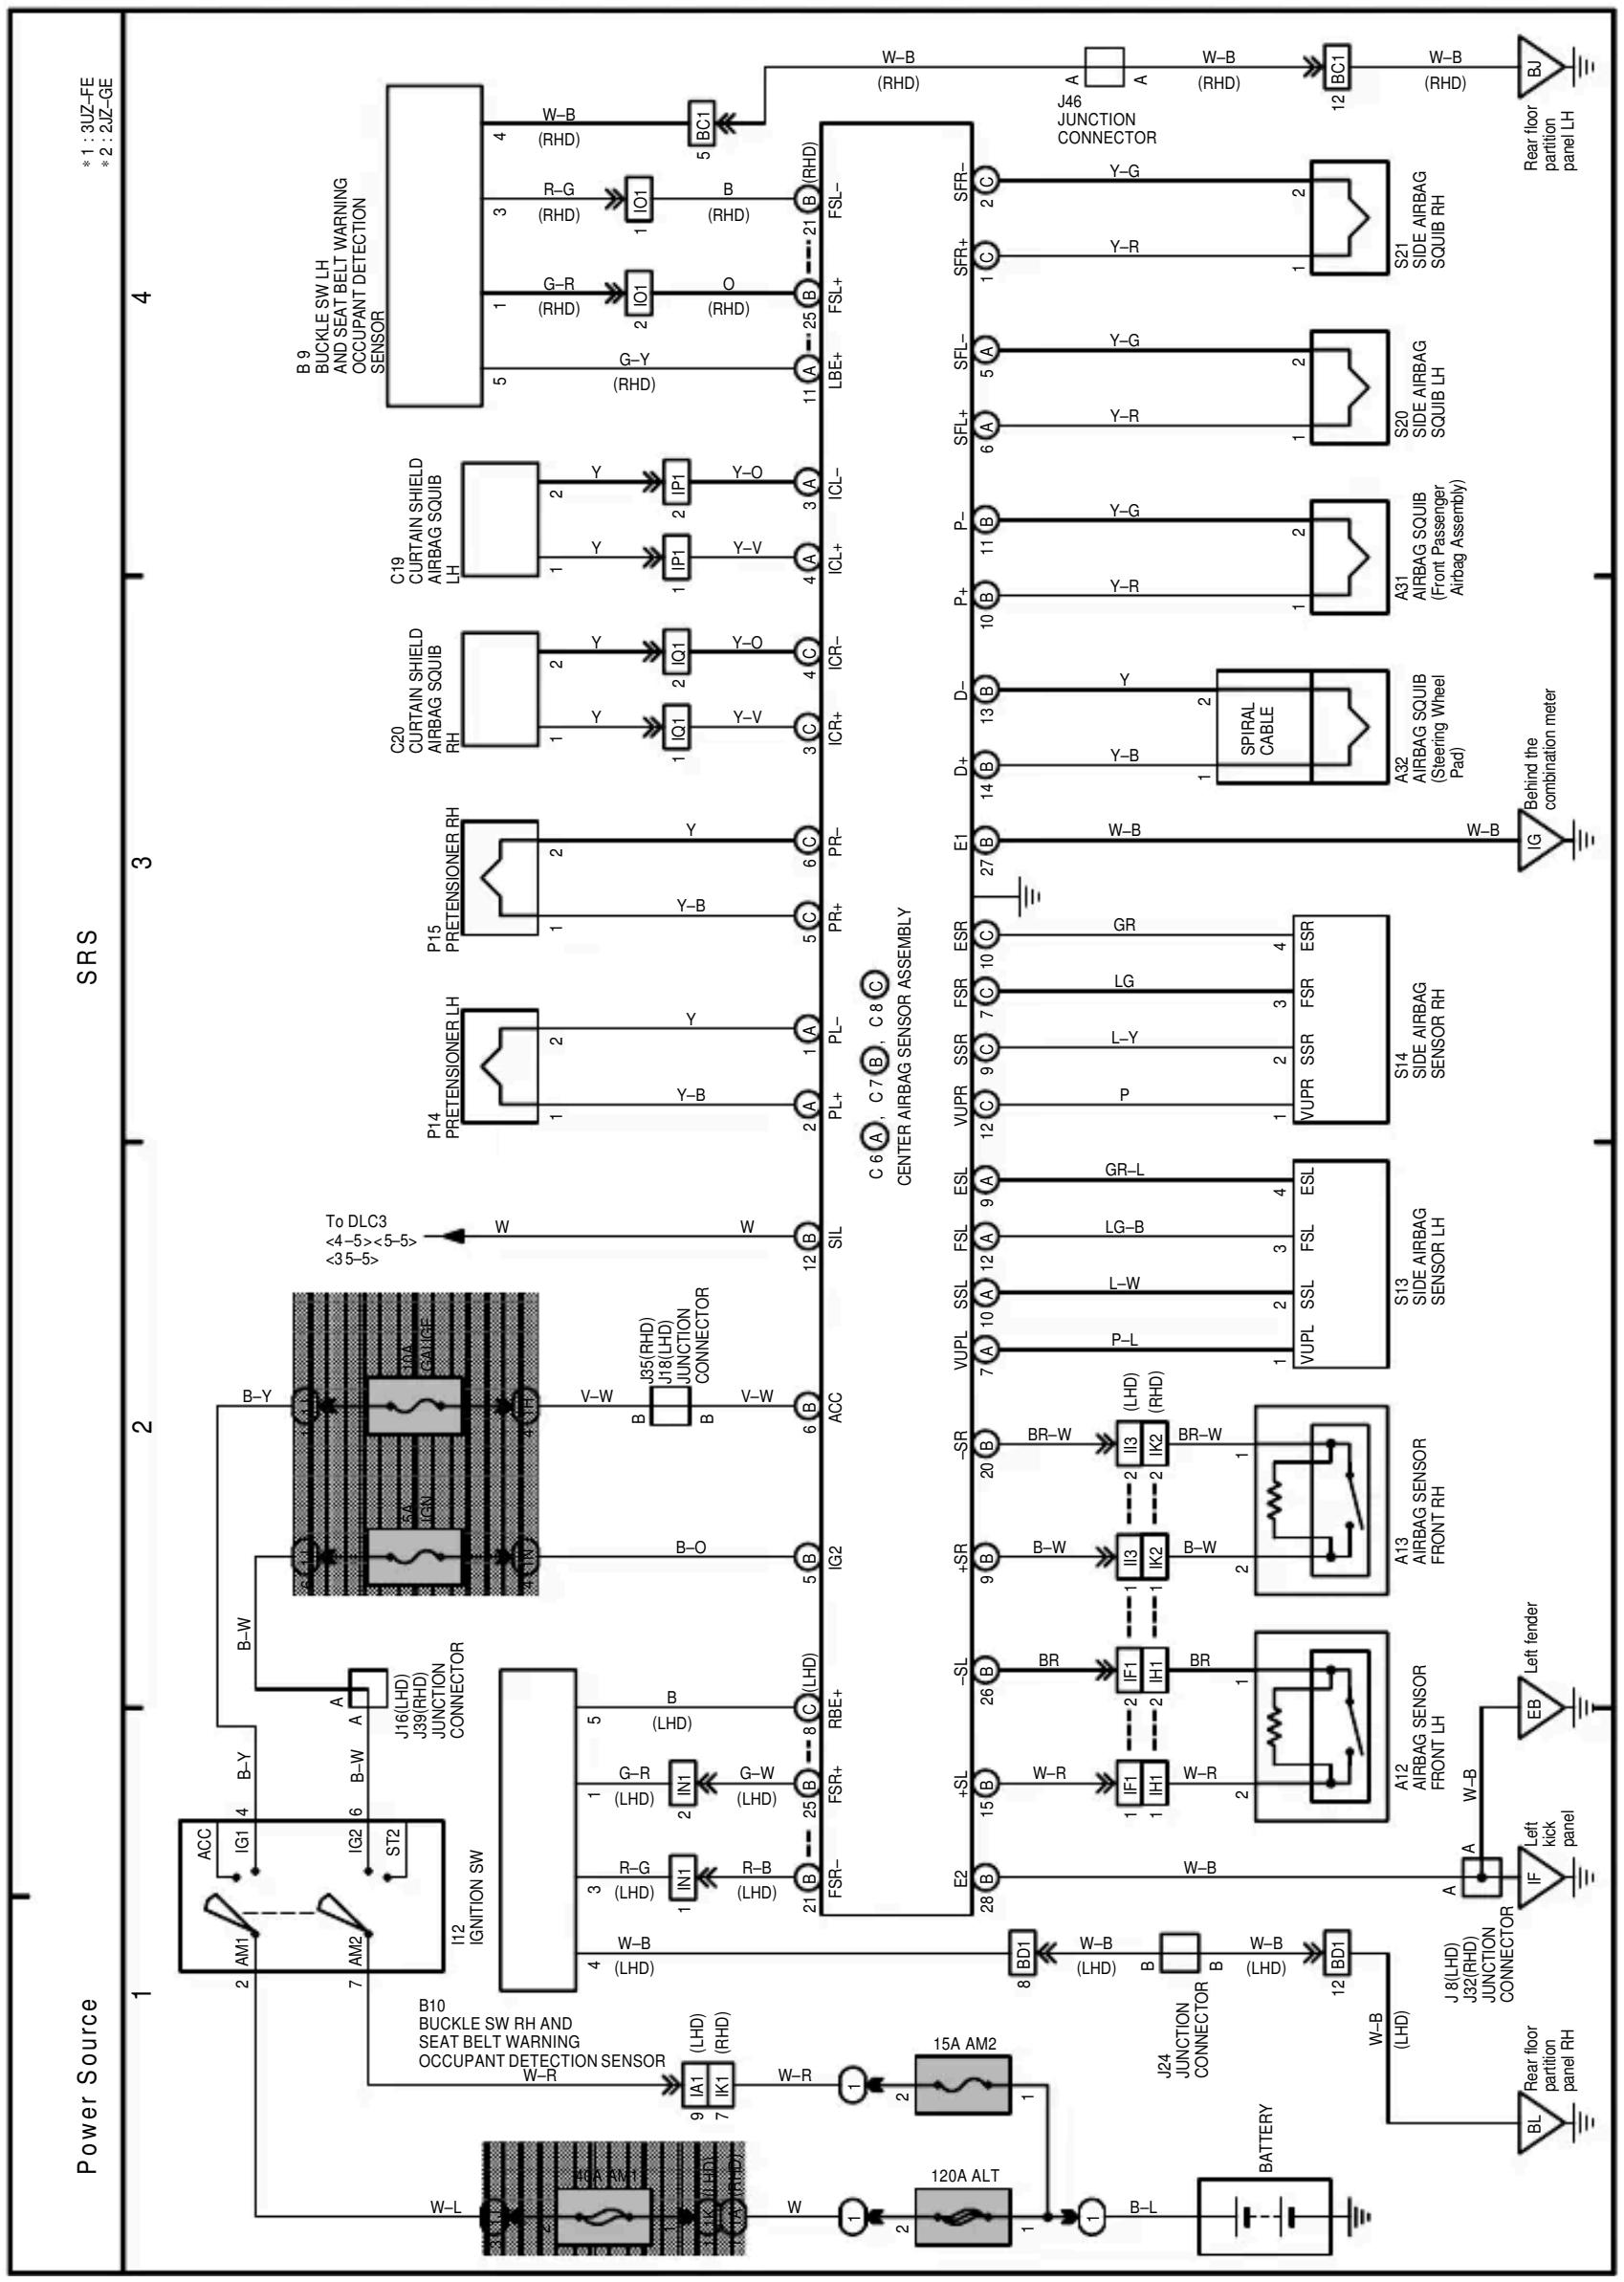
SRS
Power Source
*1 : 3UZ–FE
*2 : 2JZ–GE
B 9
BUCKLE SW LH
AND SEAT BELT WARNING
OCCUPANT DETECTION
SENSOR
C19
CURTAIN SHIELD
AIRBAG SQUIB
LH
C20
CURTAIN SHIELD
AIRBAG SQUIB
RH
P15
PRETENSIONER RH
P14
PRETENSIONER LH
C 6 , C 7 , C 8
CENTER AIRBAG SENSOR ASSEMBLY
To DLC3
<4–5><5–5>
<3 5–5>
J35(RHD)
J18(LHD)
JUNCTION
CONNECTOR
J16(LHD)
J39(RHD)
JUNCTION
CONNECTOR
I12
IGNITION SW
ACC
IG1
ST2
IG2
AM1
AM2
B10
BUCKLE SW RH AND
SEAT BELT WARNING
OCCUPANT DETECTION SENSOR
J46
JUNCTION
CONNECTOR
J24
JUNCTION
CONNECTOR
J 8(LHD)
J32(RHD)
JUNCTION
CONNECTOR
S21
SIDE AIRBAG
SQUIB RH
S20
SIDE AIRBAG
SQUIB LH
A31
AIRBAG SQUIB
(Front Passenger
Airbag Assembly)
A32
AIRBAG SQUIB
(Steering Wheel
Pad)
SPIRAL
CABLE
S14
SIDE AIRBAG
SENSOR RH
S13
SIDE AIRBAG
SENSOR LH
A13
AIRBAG SENSOR
FRONT RH
A12
AIRBAG SENSOR
FRONT LH
Rear floor
partition
panel LH
Behind the
combination meter
Left fender
Left
kick
panel
Rear floor
partition
panel RH
15A AM2
120A ALT
BATTERY
W–B
(RHD)
W–B
(LHD)
W–B
R–G
G–R
G–Y
B
O
Y
Y–O
Y–V
Y–B
Y–R
Y–G
GR
LG
L–Y
P
GR–L
LG–B
L–W
P–L
BR–W
B–W
BR
W–R
B–Y
B–O
V–W
W
W–L
B–L
R–B
G–W
SFR–
SFR+
SFL–
SFL+
P–
P+
D–
D+
E1
ESR
FSR
SSR
VUPR
ESL
FSL
SSL
VUPL
–SR
+SR
–SL
+SL
E2
FSL–
FSL+
LBE+
ICL–
ICL+
ICR–
ICR+
PR–
PR+
PL–
PL+
SIL
ACC
IG2
RBE+
FSR+
FSR–

I OVERALL ELECTRICAL WIRING DIAGRAM

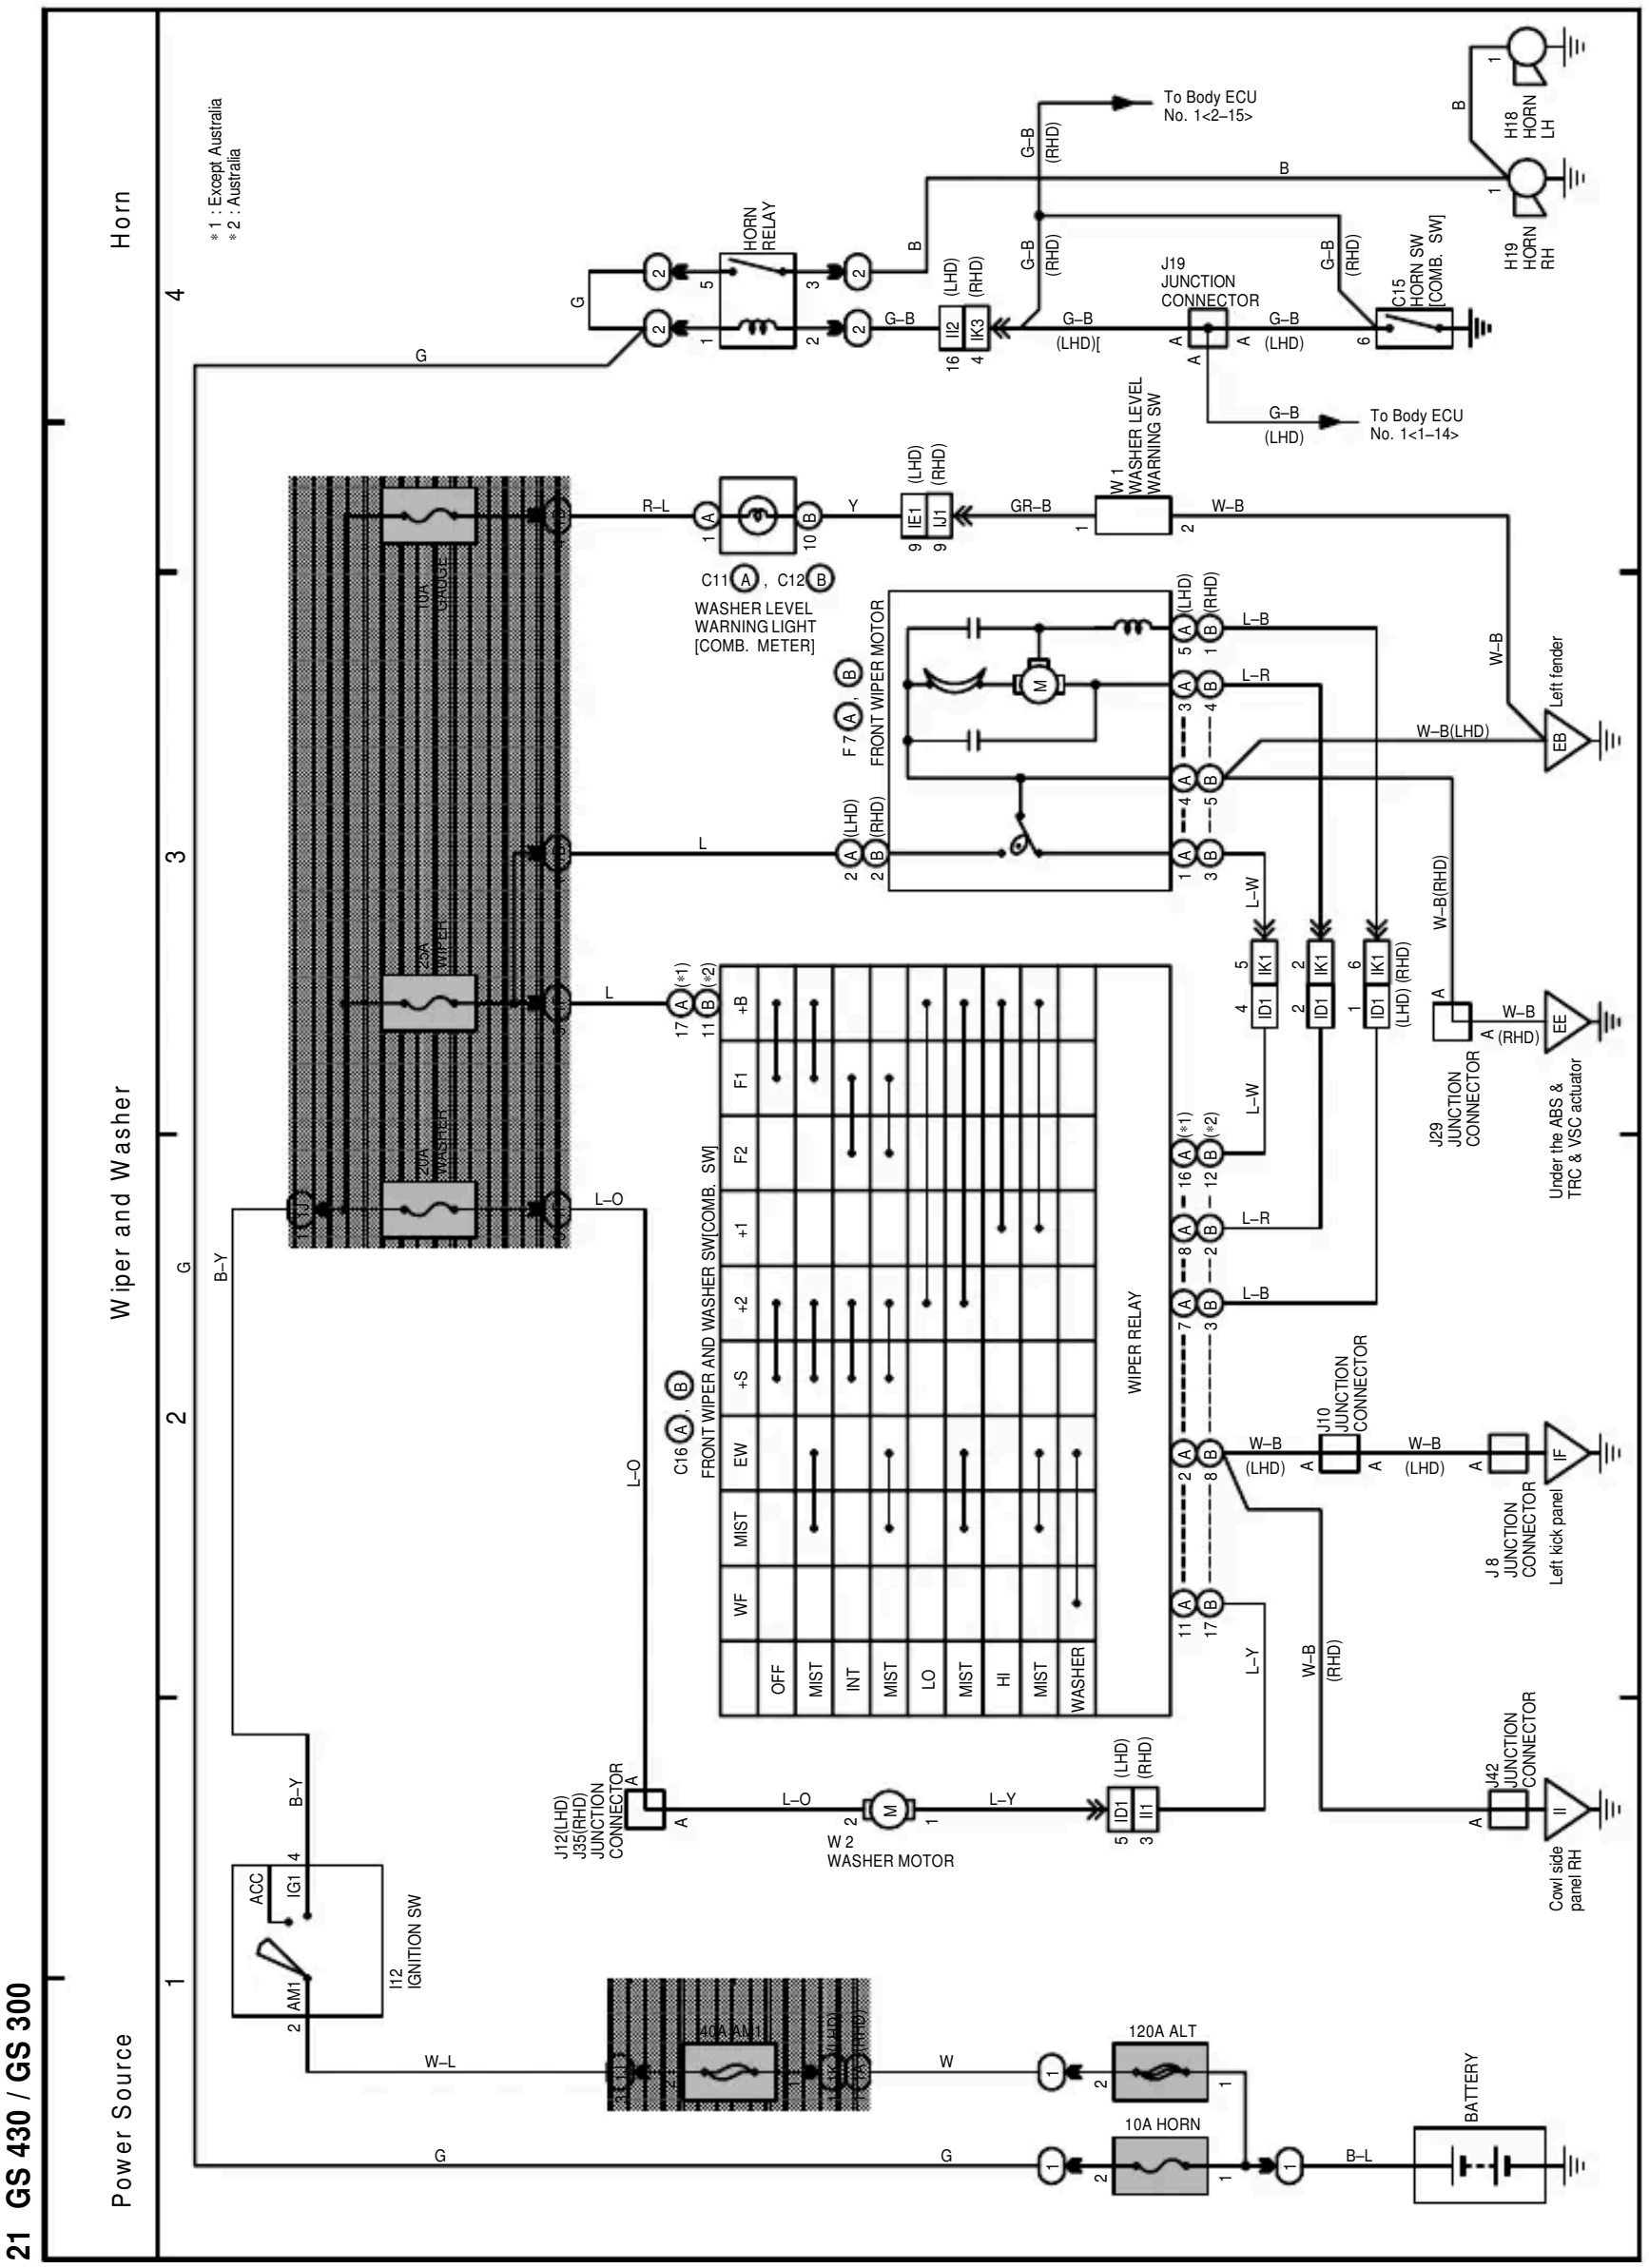

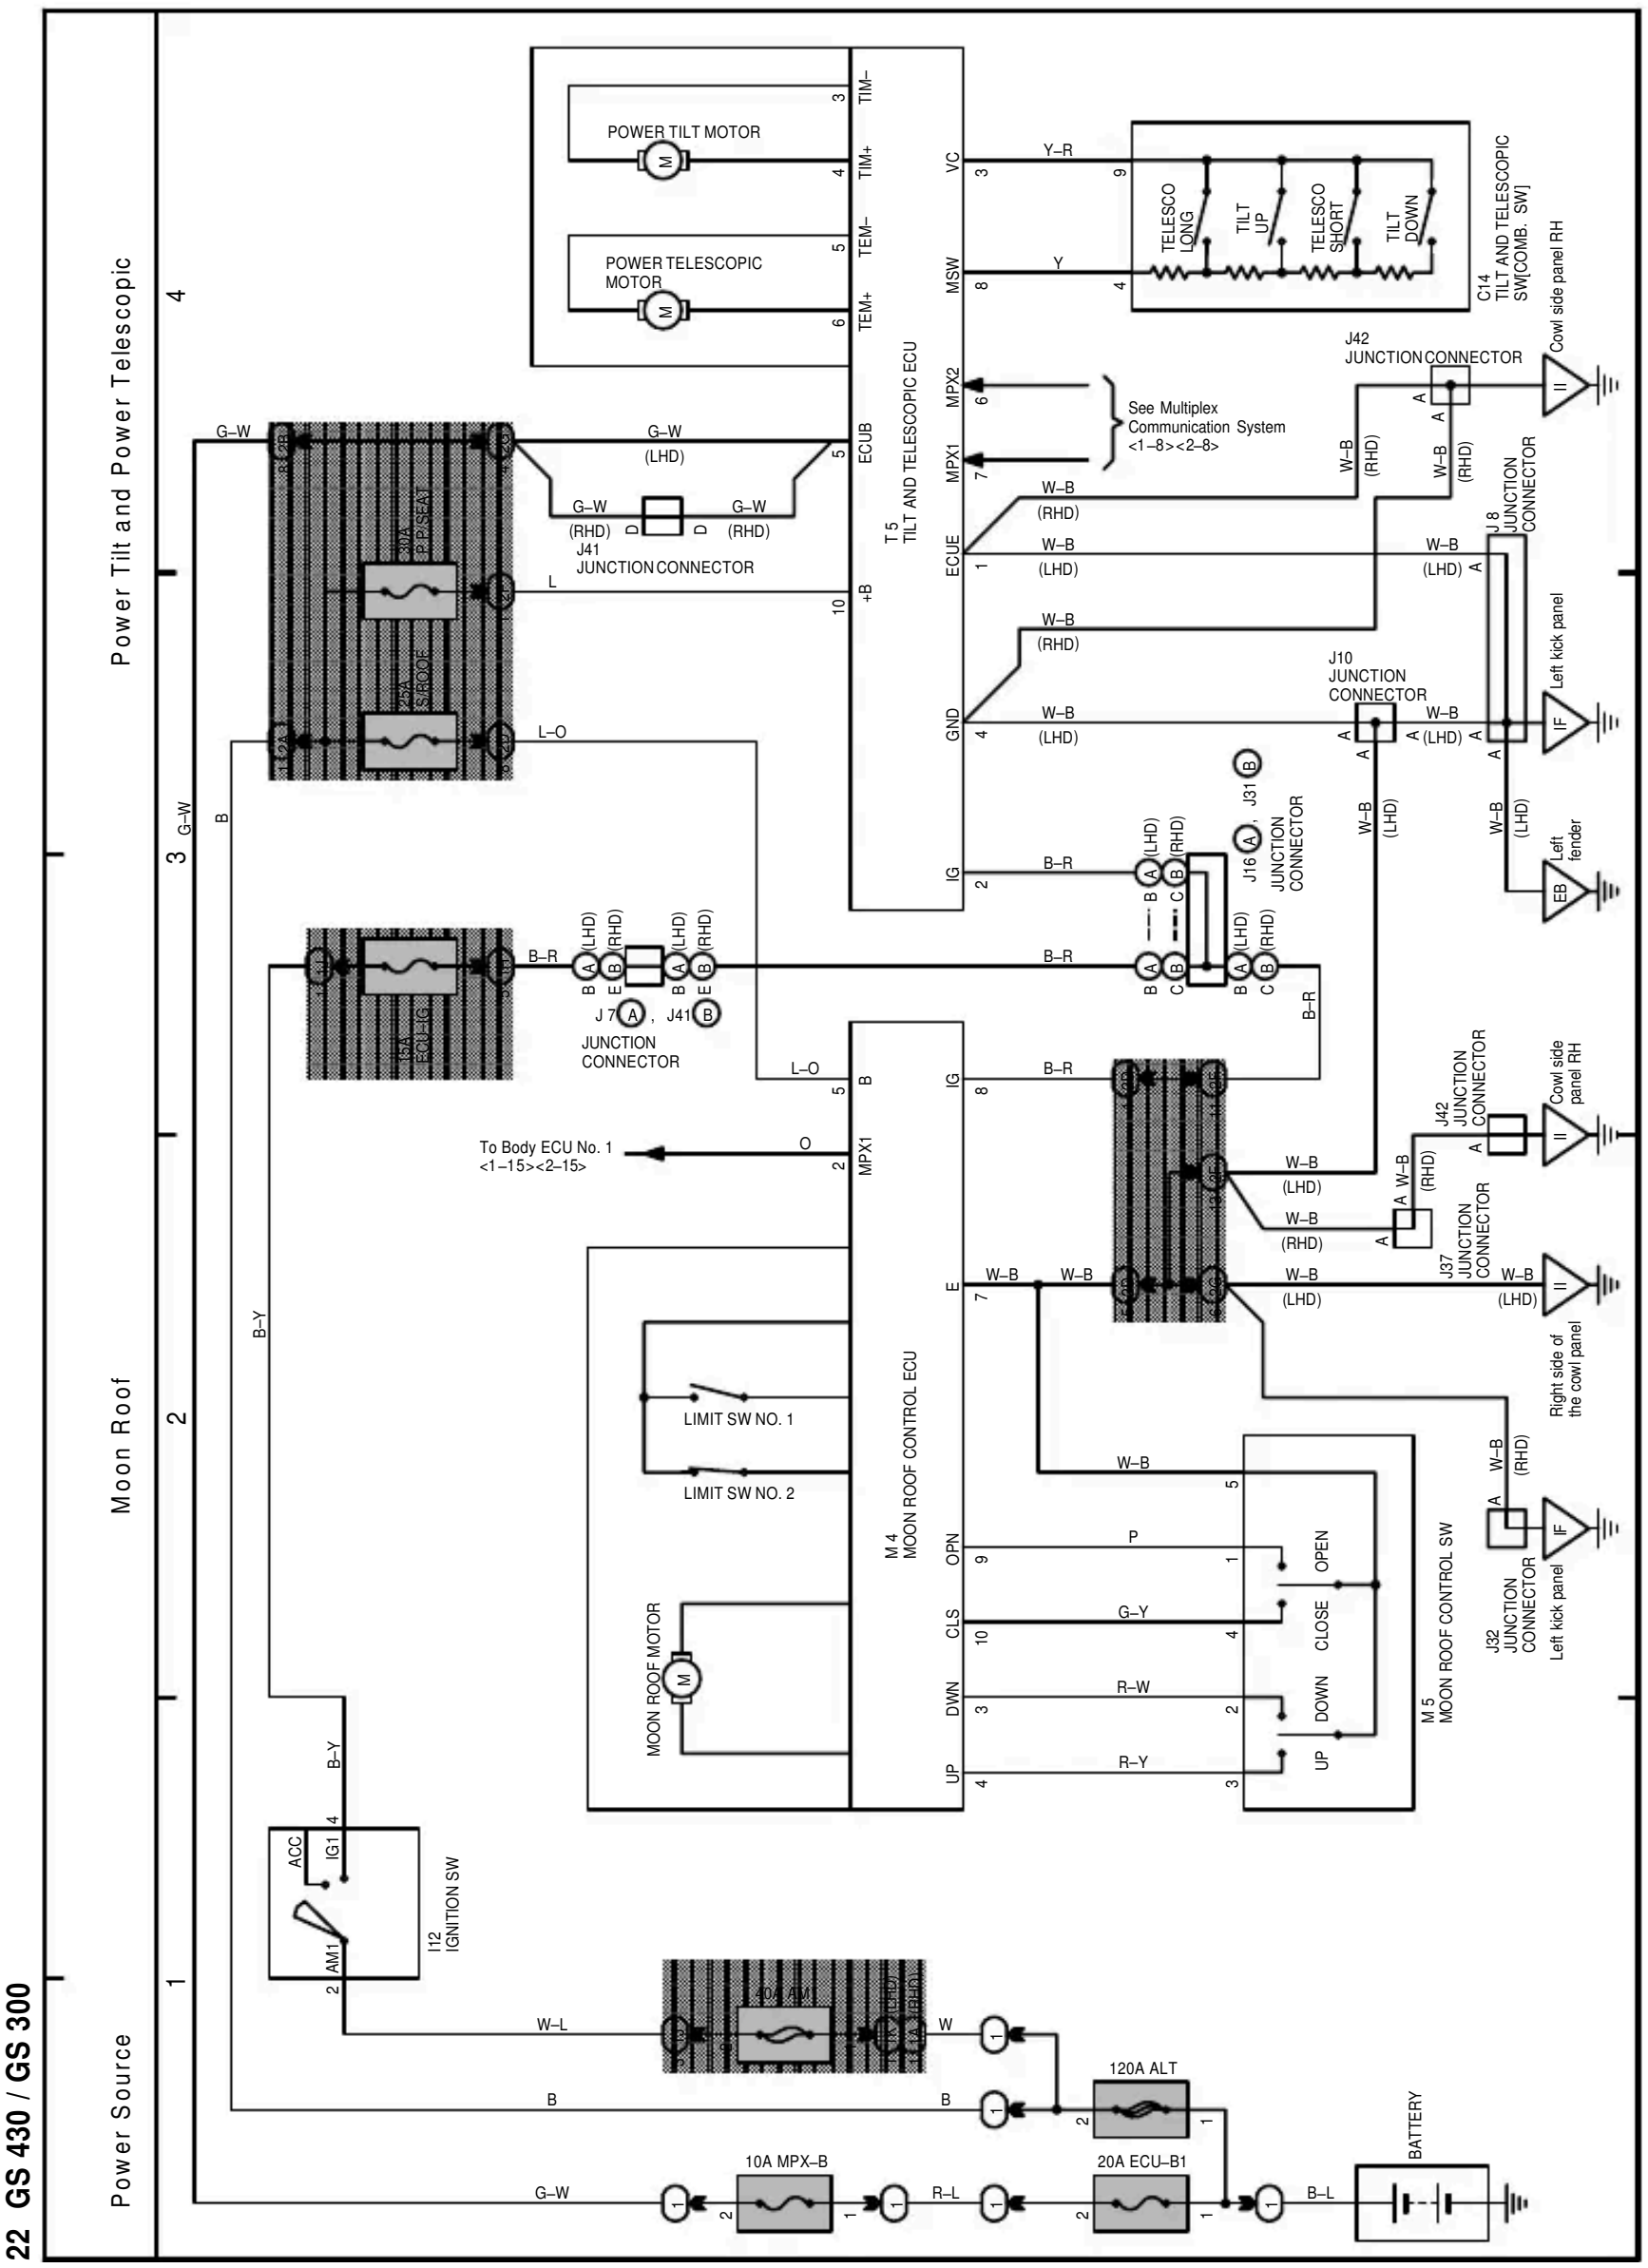
Power Source
Moon Roof
Power Tilt and Power Telescopic
POWER TILT MOTOR
POWER TELESCOPIC MOTOR
TIM–
TIM+
TEM–
TEM+
VC
MSW
MPX2
MPX1
ECUB
+B
ECUE
GND
IG
T 5
TILT AND TELESCOPIC ECU
Y–R
Y
TELESCO LONG
TILT UP
TELESCO SHORT
TILT DOWN
C14
TILT AND TELESCOPIC SW[COMB. SW]
Cowl side panel RH
J42
JUNCTION CONNECTOR
See Multiplex Communication System <1–8><2–8>
G–W
(LHD)
(RHD)
J41
JUNCTION CONNECTOR
L
L–O
W–B
J8
JUNCTION CONNECTOR
J10
JUNCTION CONNECTOR
Left kick panel
Left fender
B–R
J16
J31
J7
ECU–IG
L–O
To Body ECU No. 1 <1–15><2–15>
O
B–Y
LIMIT SW NO. 1
LIMIT SW NO. 2
MOON ROOF MOTOR
M 4
MOON ROOF CONTROL ECU
OPN
CLS
DWN
UP
P
G–Y
R–W
R–Y
M 5
MOON ROOF CONTROL SW
OPEN
CLOSE
DOWN
UP
J37
JUNCTION CONNECTOR
Right side of the cowl panel
J32
JUNCTION CONNECTOR
Left kick panel
I12
IGNITION SW
ACC
IG1
AM1
W–L
W
B
120A ALT
BATTERY
10A MPX–B
20A ECU–B1
R–L
B–L
G–W

I OVERALL ELECTRICAL WIRING DIAGRAM

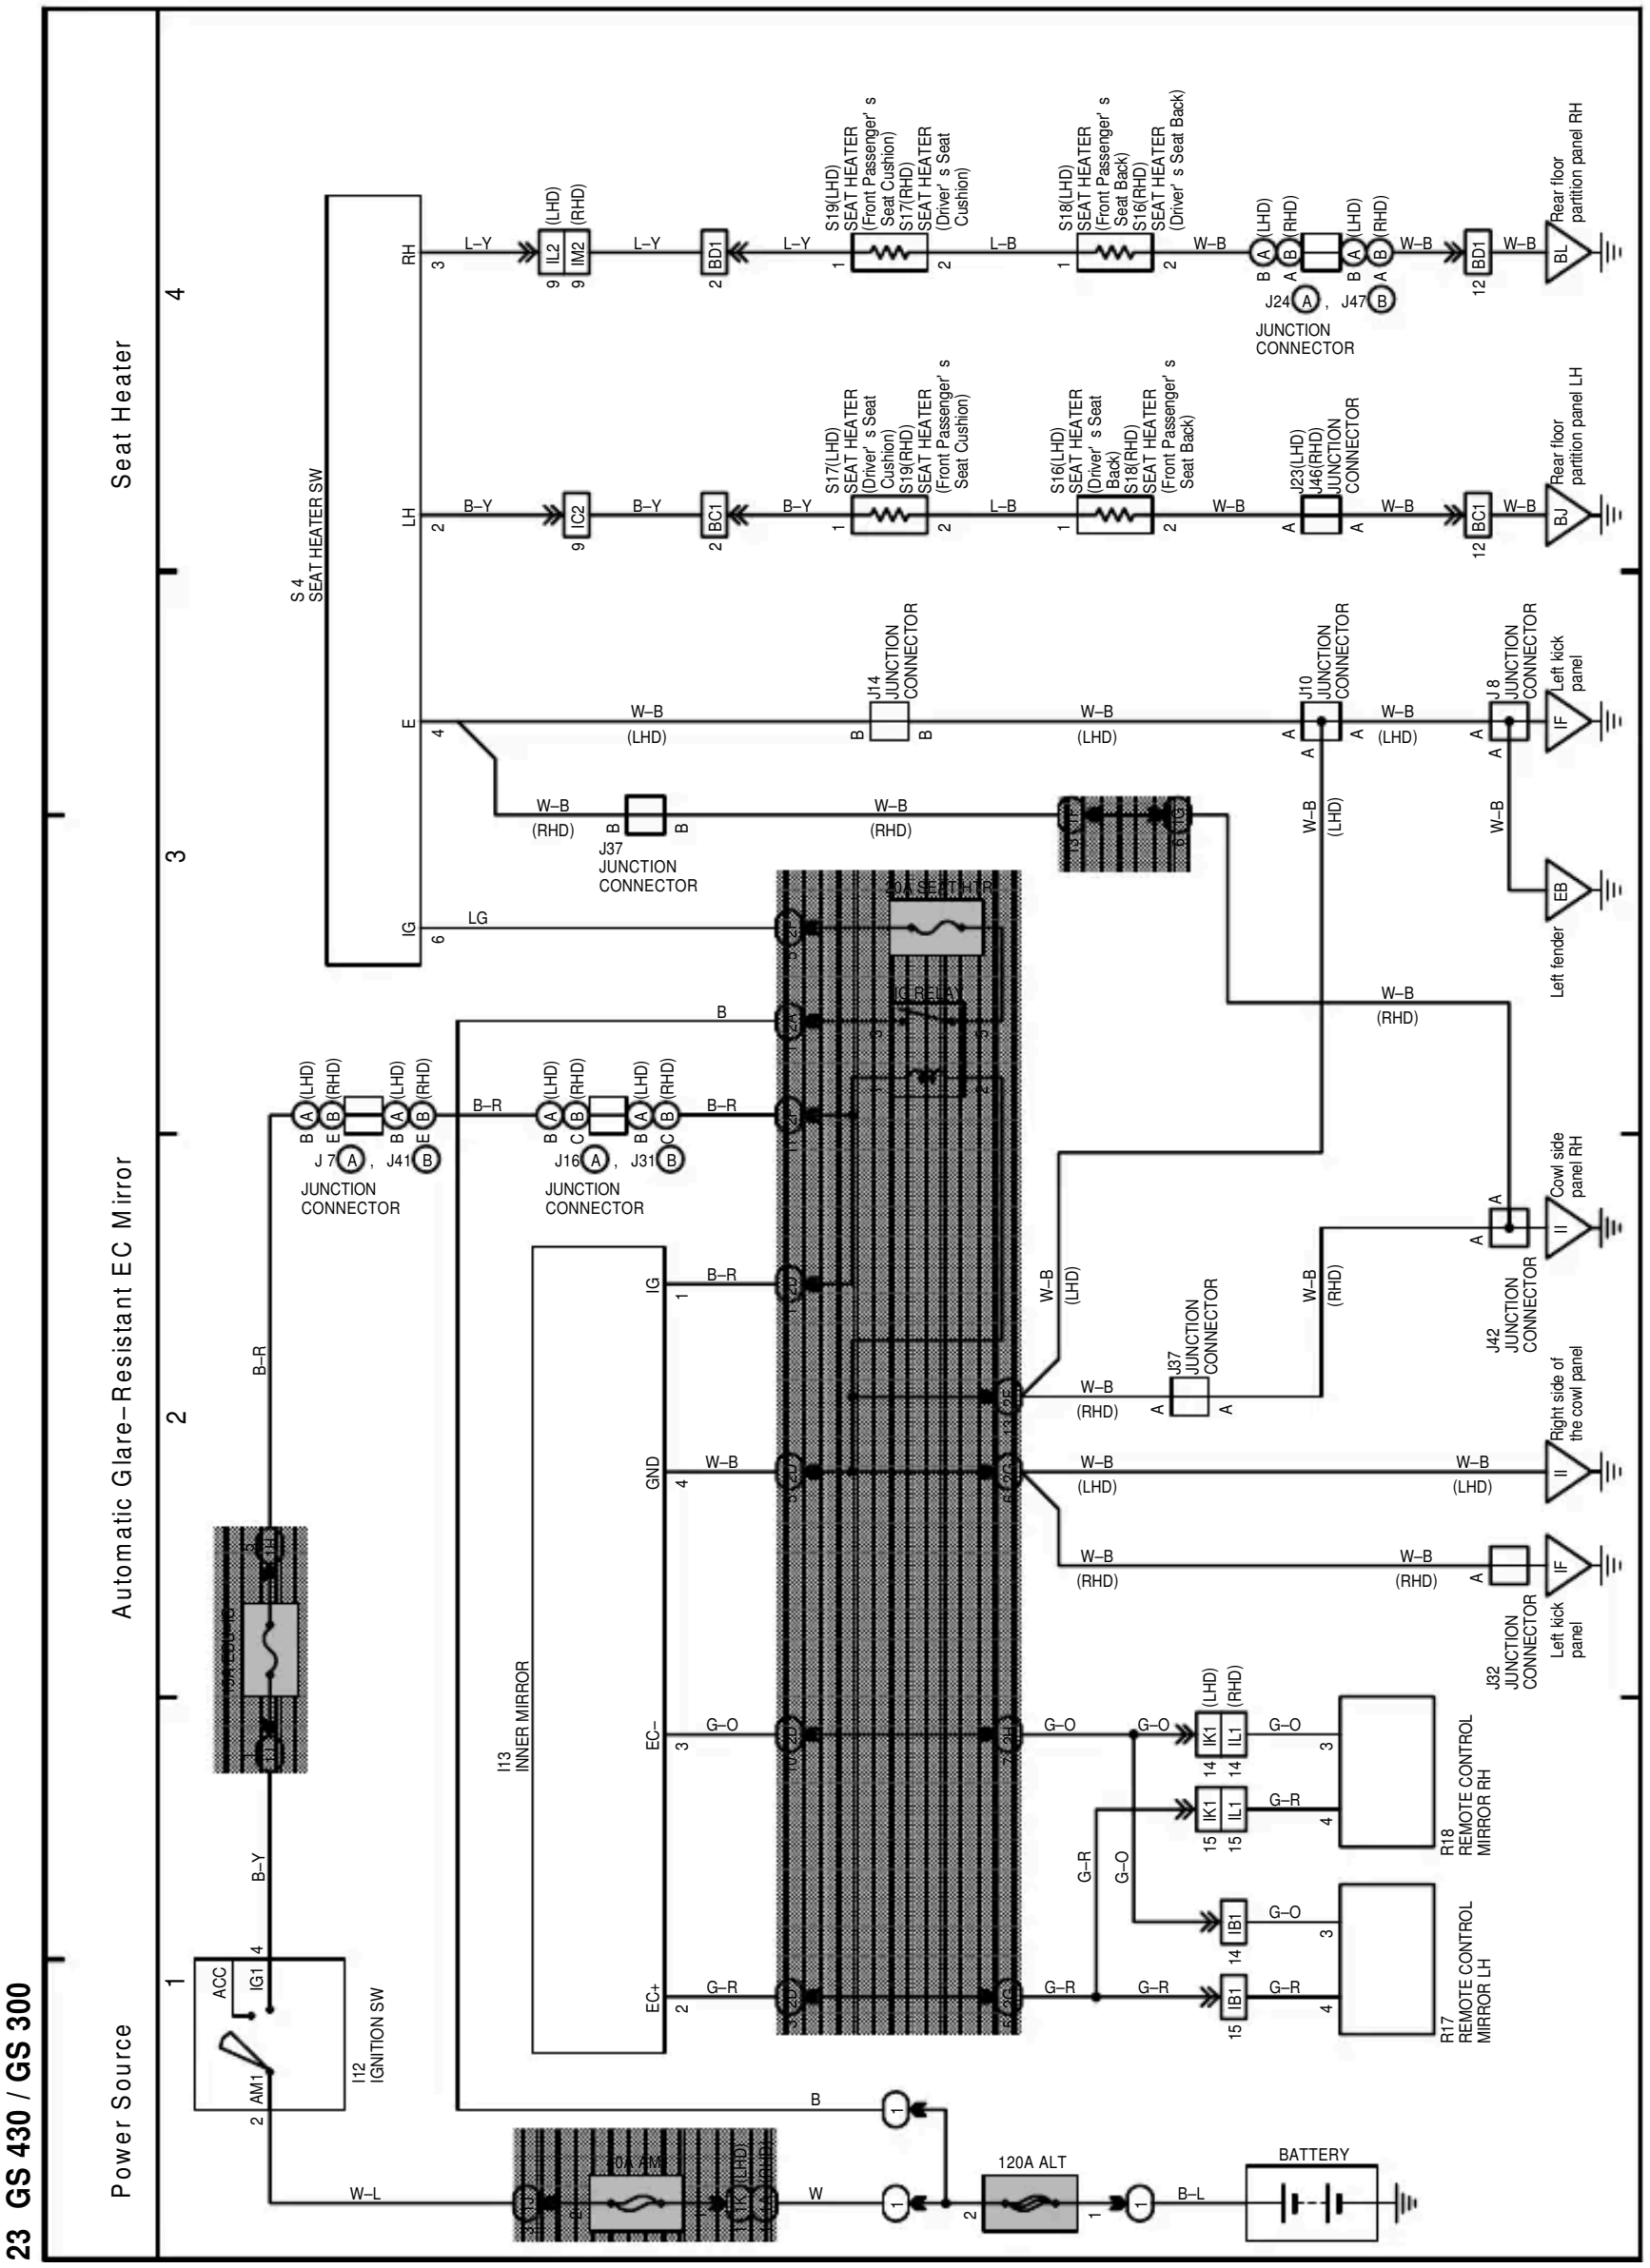

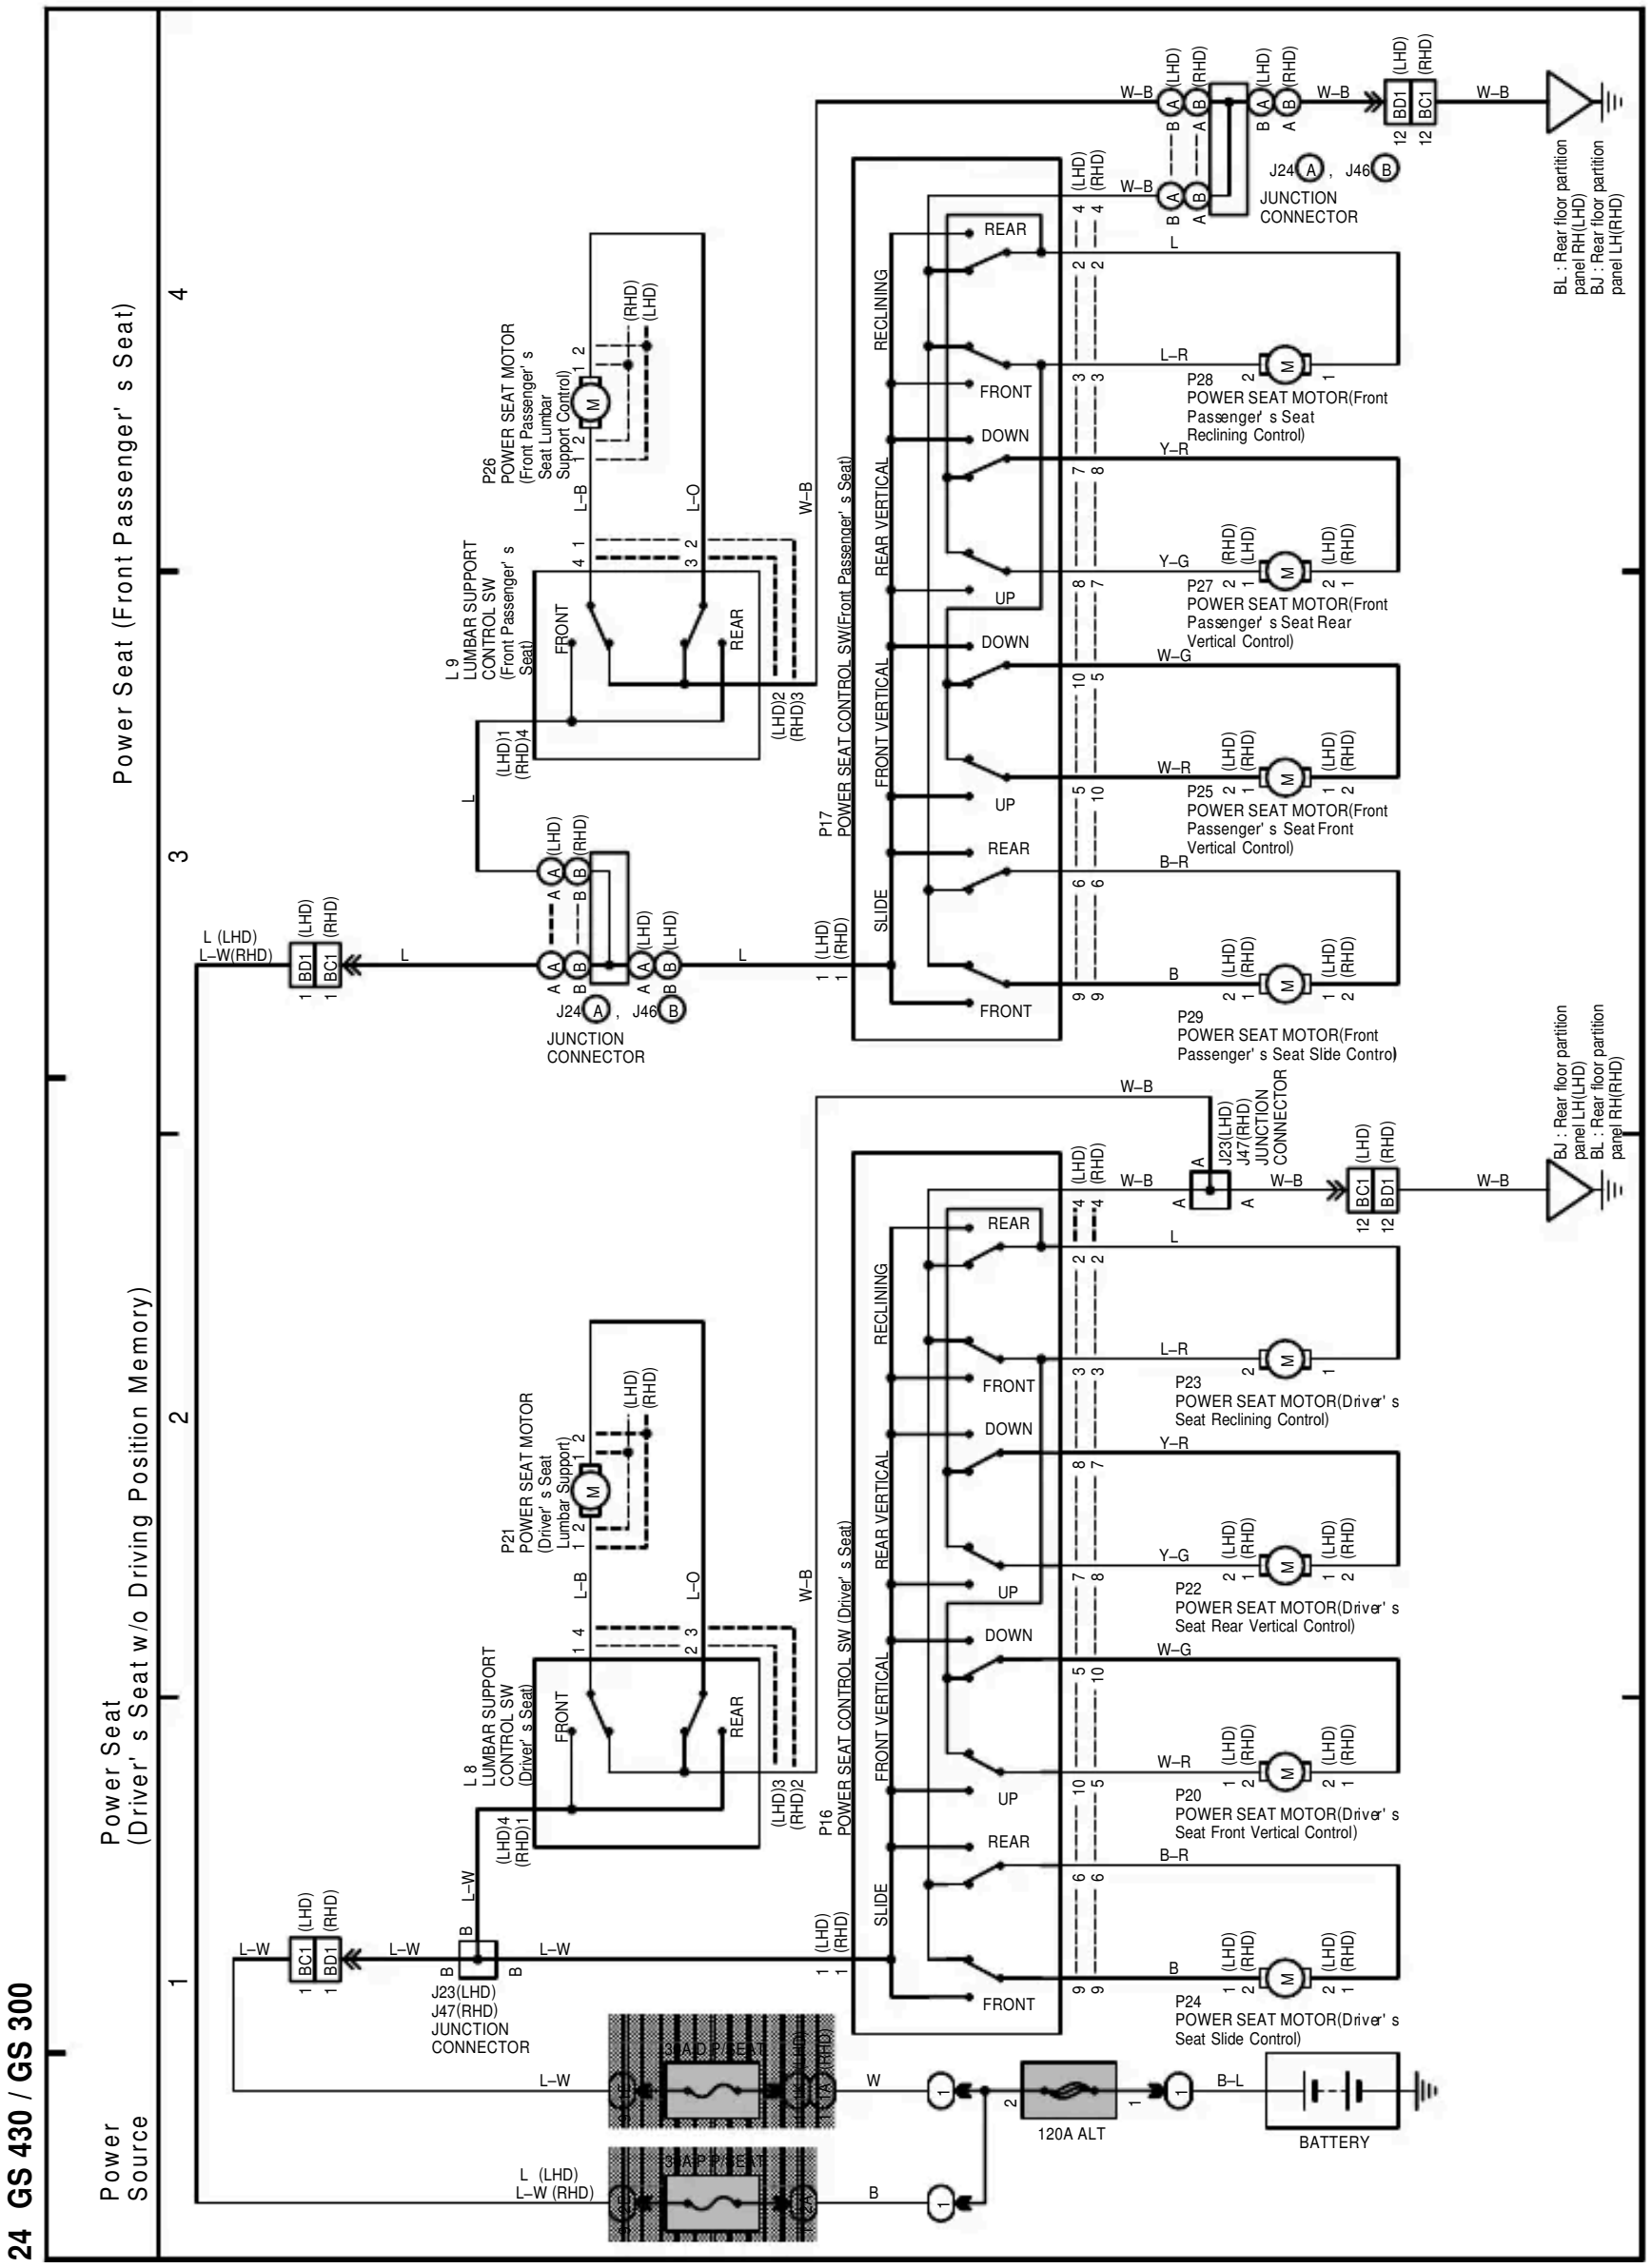
24 GS 430 / GS 300
Power Source
Power Seat
(Driver' s Seat w/o Driving Position Memory)
Power Seat (Front Passenger' s Seat)
1
2
3
4
BATTERY
120A ALT
P24
POWER SEAT MOTOR(Driver' s Seat Slide Control)
P20
POWER SEAT MOTOR(Driver' s Seat Front Vertical Control)
P22
POWER SEAT MOTOR(Driver' s Seat Rear Vertical Control)
P23
POWER SEAT MOTOR(Driver' s Seat Reclining Control)
P29
POWER SEAT MOTOR(Front Passenger' s Seat Slide Control)
P25
POWER SEAT MOTOR(Front Passenger' s Seat Front Vertical Control)
P27
POWER SEAT MOTOR(Front Passenger' s Seat Rear Vertical Control)
P28
POWER SEAT MOTOR(Front Passenger' s Seat Reclining Control)
P16
POWER SEAT CONTROL SW (Driver' s Seat)
P17
POWER SEAT CONTROL SW(Front Passenger' s Seat)
L 8
LUMBAR SUPPORT CONTROL SW (Driver' s Seat)
L 9
LUMBAR SUPPORT CONTROL SW (Front Passenger' s Seat)
P21
POWER SEAT MOTOR (Driver' s Seat Lumbar Support)
P26
POWER SEAT MOTOR (Front Passenger' s Seat Lumbar Support Control)
J23(LHD)
J47(RHD)
JUNCTION CONNECTOR
J24 , J46
JUNCTION CONNECTOR
BL : Rear floor partition panel RH(LHD)
BJ : Rear floor partition panel LH(RHD)
BJ : Rear floor partition panel LH(LHD)
BL : Rear floor partition panel RH(RHD)
RECLINING
FRONT VERTICAL
REAR VERTICAL
SLIDE
FRONT
REAR
UP
DOWN
L–W
L–B
L–O
L–R
Y–R
Y–G
W–G
W–R
B–R
W–B
L
W
B–L
B

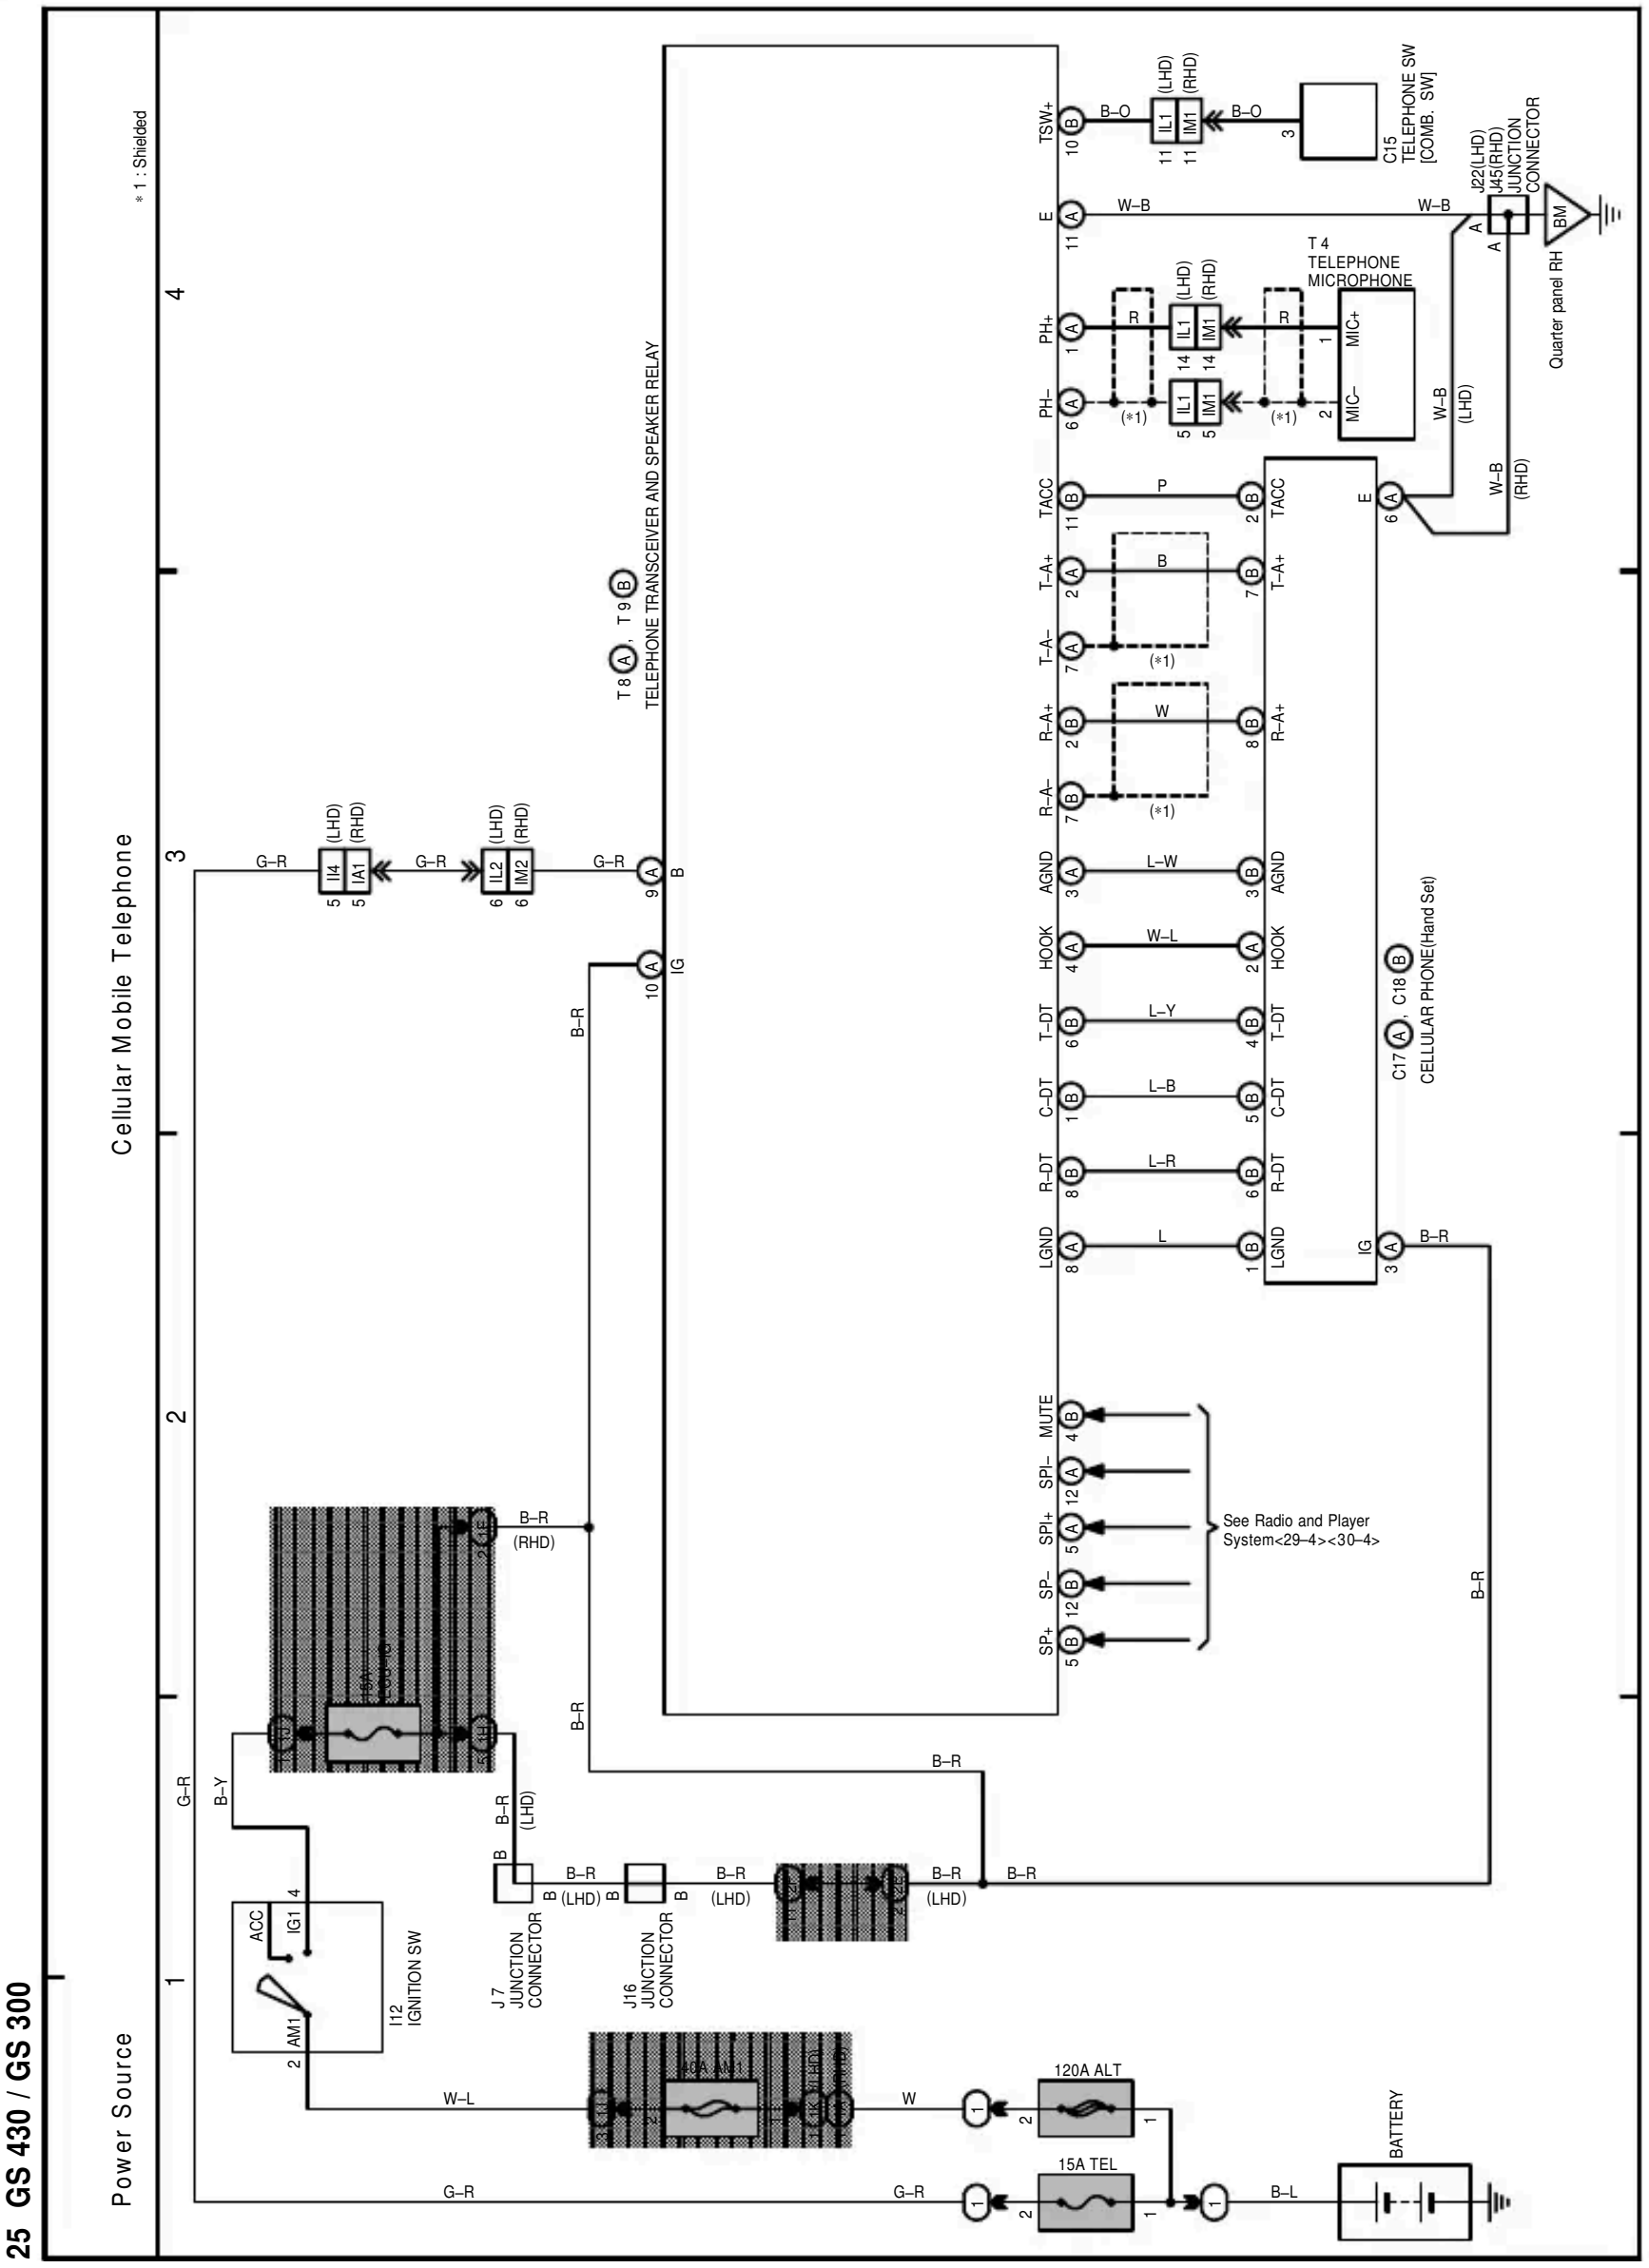
25 GS 430 / GS 300
Power Source
Cellular Mobile Telephone
*1 : Shielded
TELEPHONE TRANSCEIVER AND SPEAKER RELAY
T 8 (A), T 9 (B)
TSW+
TACC
T–A+
T–A–
R–A+
R–A–
AGND
HOOK
T–DT
C–DT
R–DT
LGND
PH+
PH–
E
MUTE
SPI–
SPI+
SP–
SP+
IG
B
C15 TELEPHONE SW [COMB. SW]
T 4 TELEPHONE MICROPHONE
MIC+
MIC–
J22(LHD) J45(RHD) JUNCTION CONNECTOR
Quarter panel RH
BM
C17 (A), C18 (B) CELLULAR PHONE(Hand Set)
See Radio and Player System<29–4><30–4>
I12 IGNITION SW
ACC
IG1
AM1
J 7 JUNCTION CONNECTOR
J16 JUNCTION CONNECTOR
120A ALT
15A TEL
BATTERY
(LHD)
(RHD)
(*1)

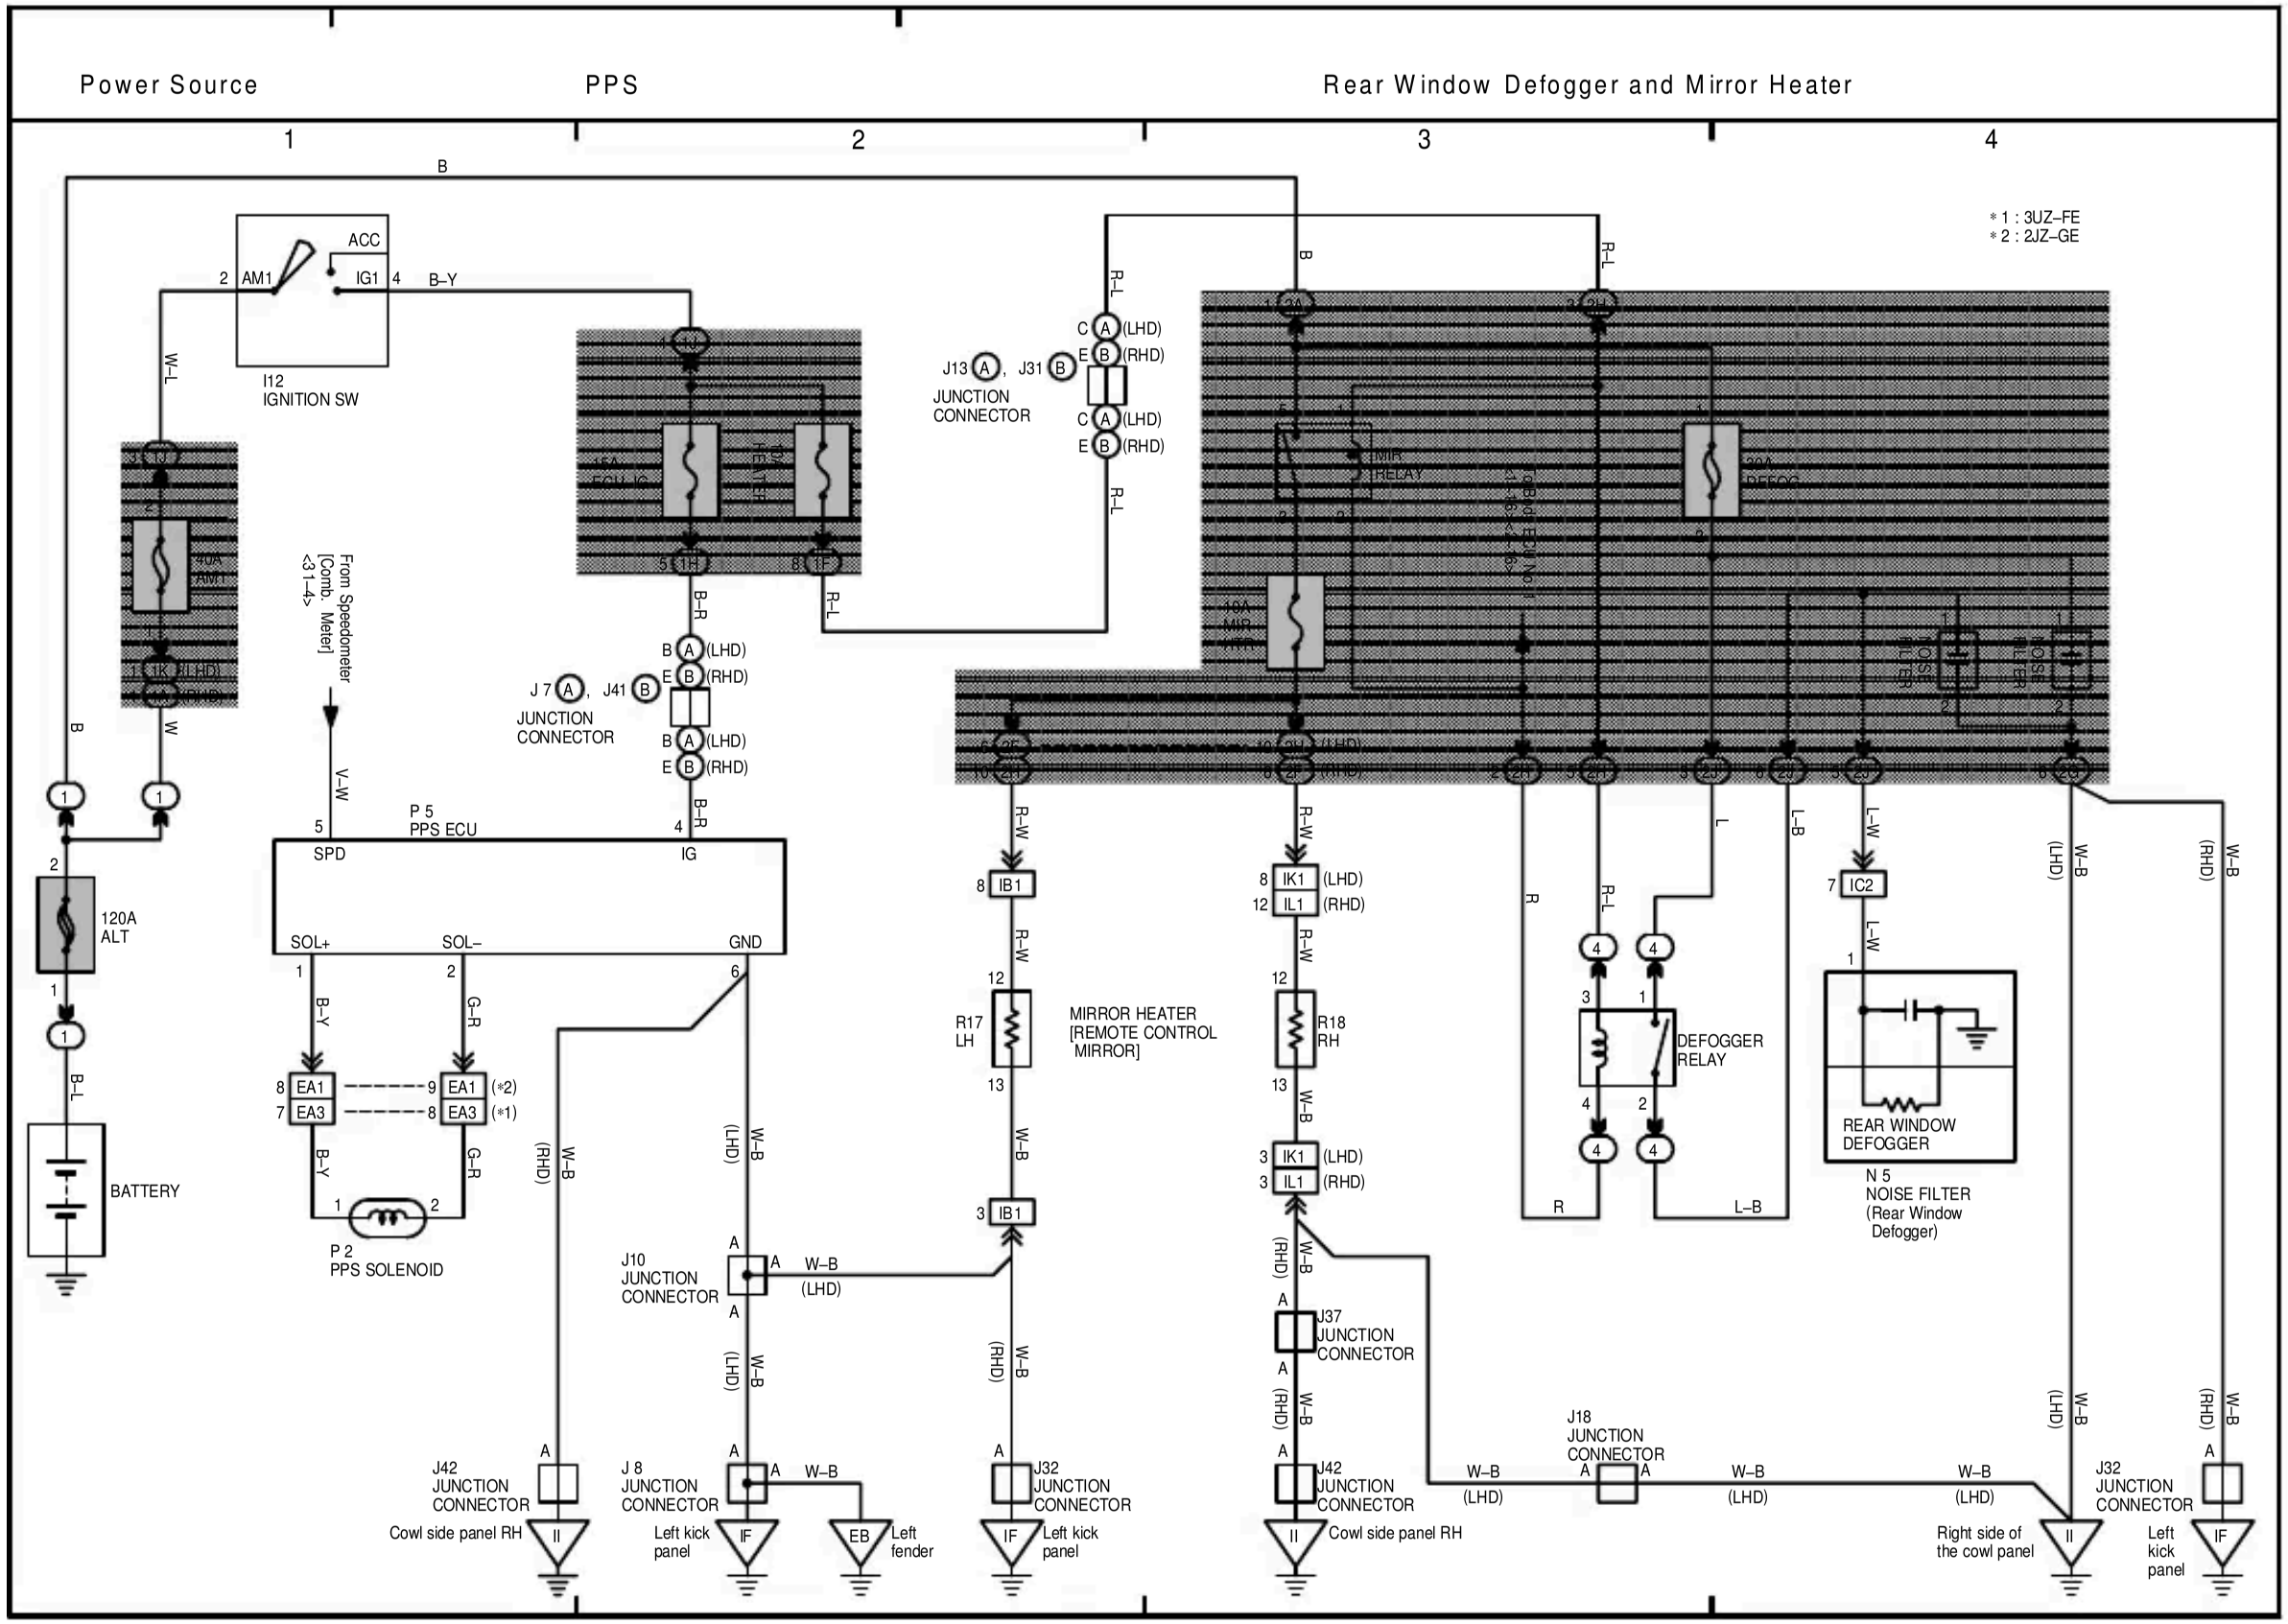
Power Source
PPS
Rear Window Defogger and Mirror Heater
1
2
3
4
*1 : 3UZ-FE
*2 : 2JZ-GE
B
ACC
2 AM1
IG1 4
B-Y
I12
IGNITION SW
W-L
40A AM1
1K (LHD)
1E (RHD)
W
1
2
120A ALT
B-L
BATTERY
From Speedometer [Comb. Meter] <3 1-4>
V-W
P 5
PPS ECU
SPD
IG
SOL+
SOL-
GND
B-Y
G-R
8 EA1
7 EA3
9 EA1 (*2)
8 EA3 (*1)
P 2
PPS SOLENOID
15A ECU-IG
1H
5H
8H
B-R
J 7 A, J41 B
JUNCTION CONNECTOR
B A (LHD)
E B (RHD)
J13 A, J31 B
JUNCTION CONNECTOR
C A (LHD)
E B (RHD)
R-L
MIR HEATER RELAY
10A MIR <ETCS>
20A DEFOG
Fusible Link Block
R-W
8 IB1
12 R17 LH
13
3 IB1
MIRROR HEATER [REMOTE CONTROL MIRROR]
8 IK1 (LHD)
12 IL1 (RHD)
12 R18 RH
13
3 IK1 (LHD)
3 IL1 (RHD)
W-B
(RHD)
(LHD)
J10 JUNCTION CONNECTOR
J42 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
J32 JUNCTION CONNECTOR
J37 JUNCTION CONNECTOR
J18 JUNCTION CONNECTOR
Cowl side panel RH
Left kick panel
Left fender
Right side of the cowl panel
DEFOGGER RELAY
REAR WINDOW DEFOGGER
N 5
NOISE FILTER (Rear Window Defogger)
7 IC2
L-W
L
L-B
R

I OVERALL ELECTRICAL WIRING DIAGRAM

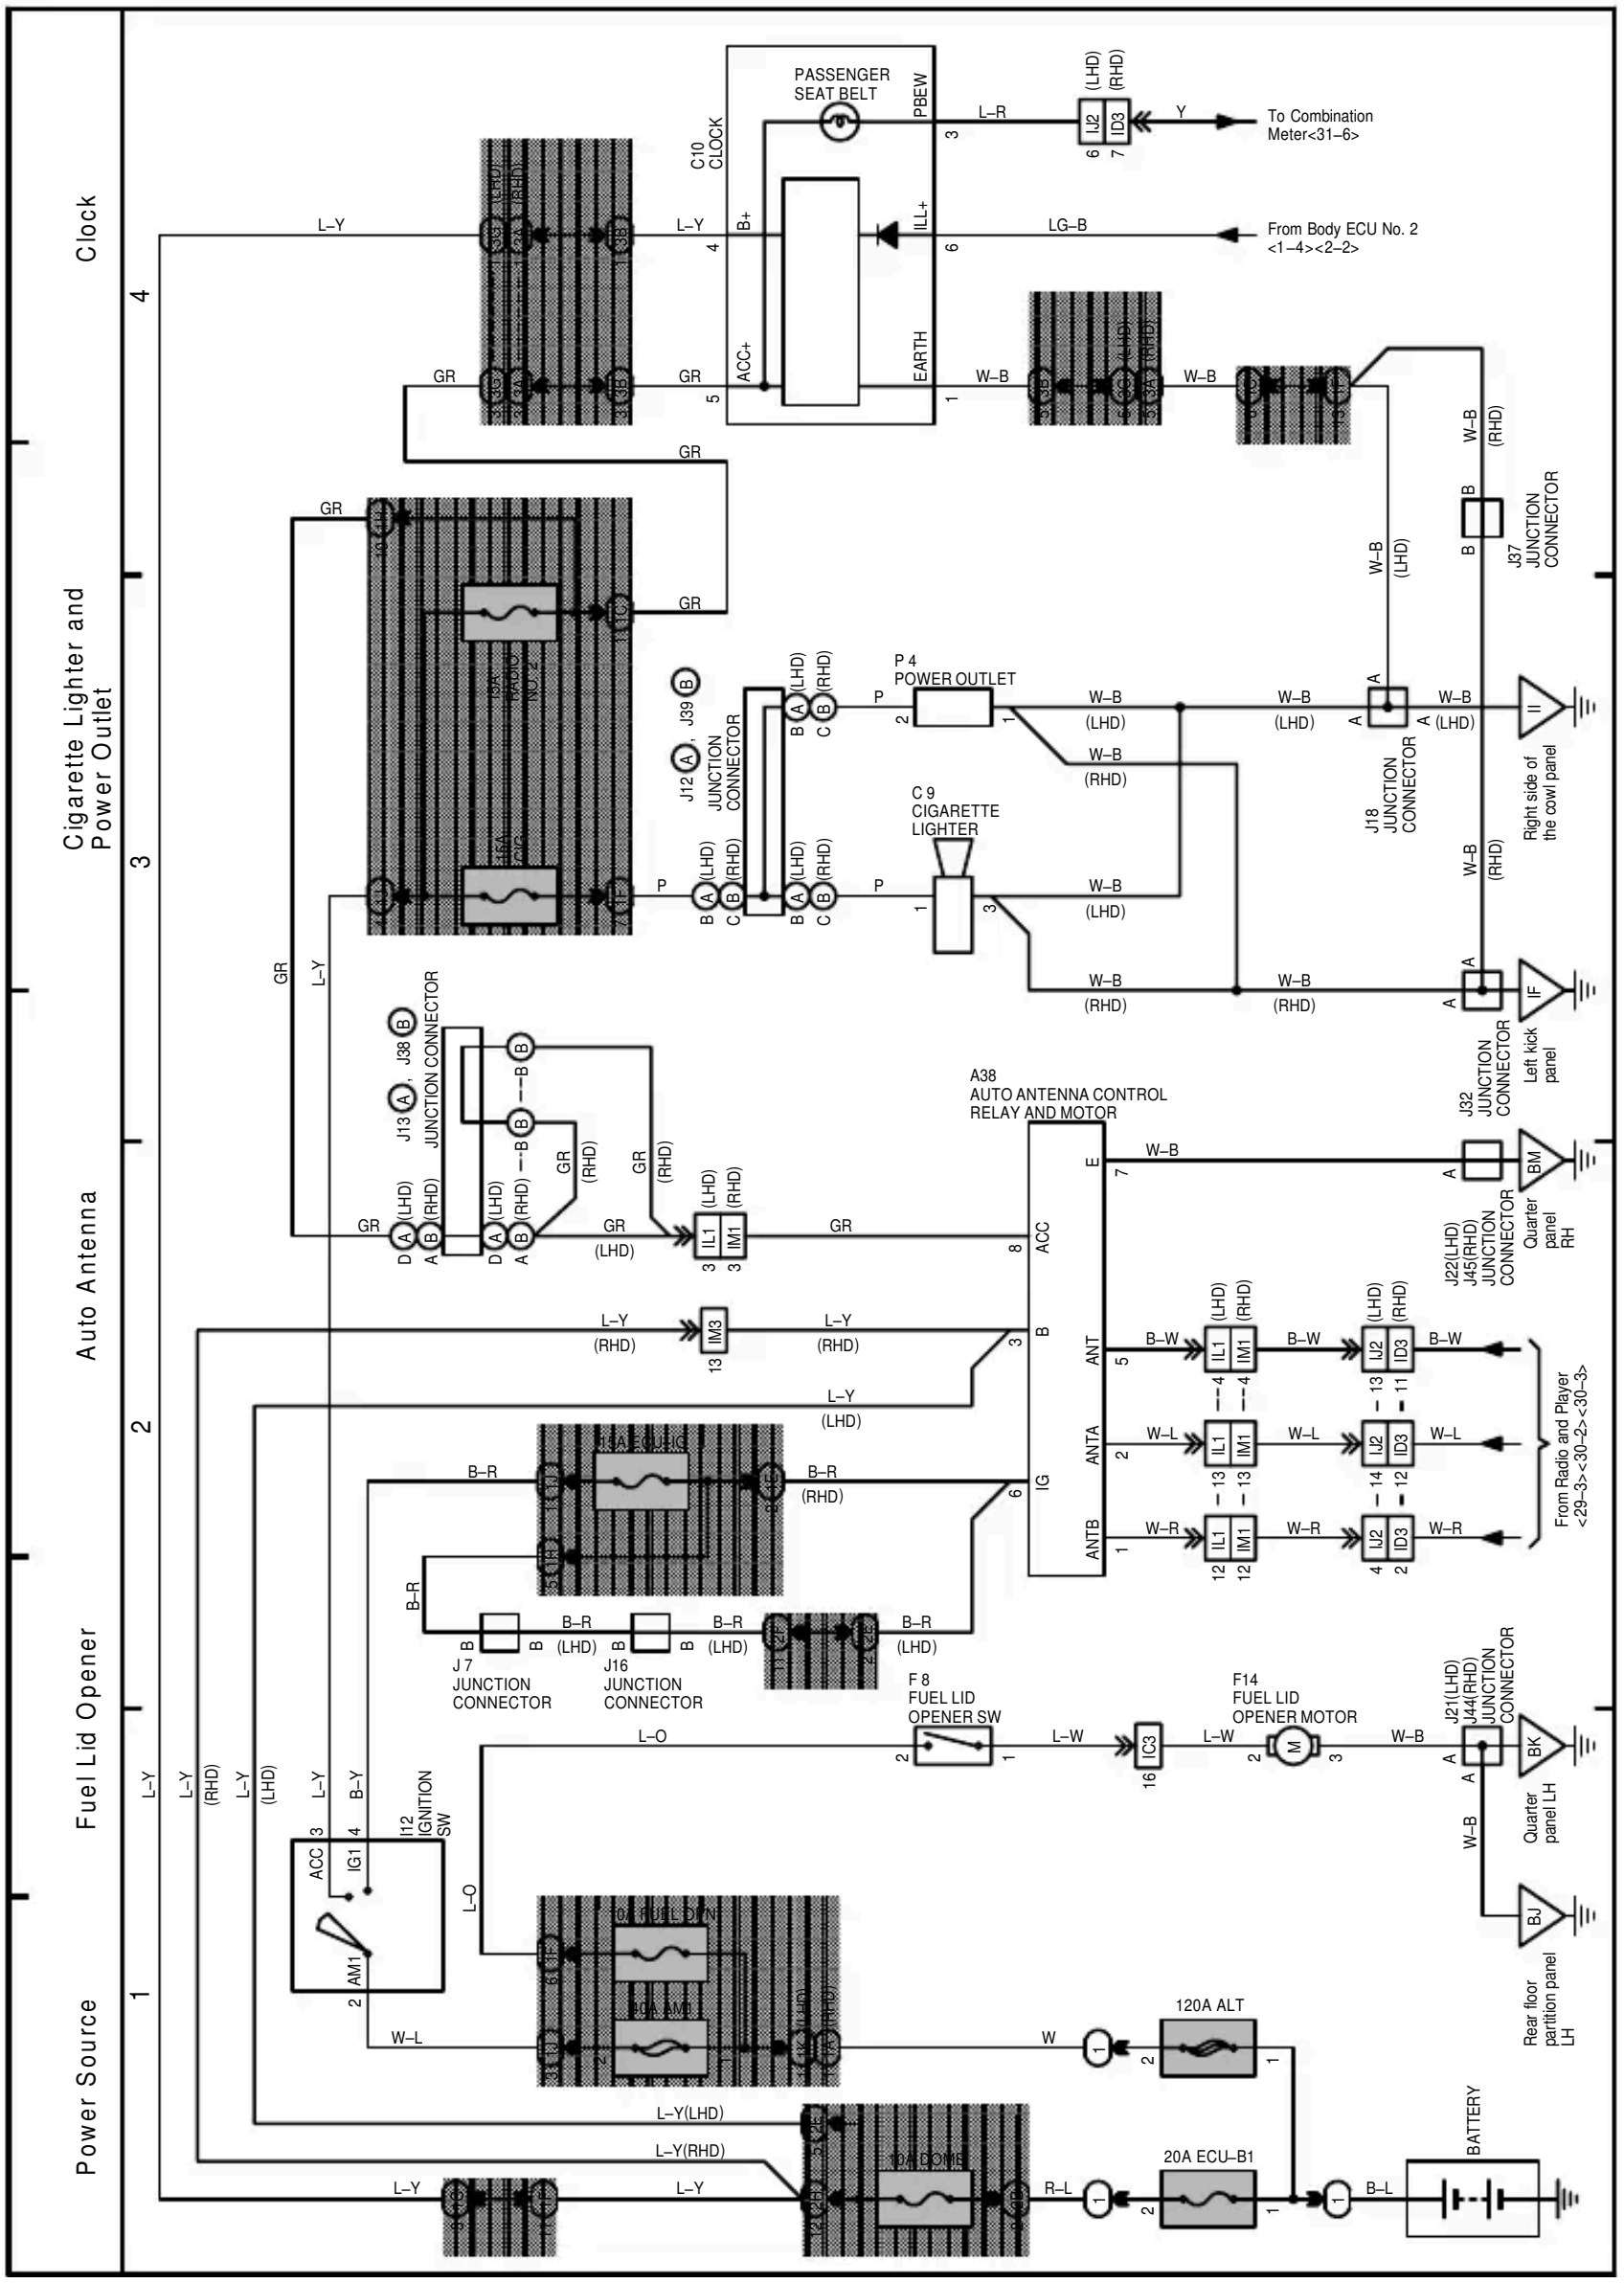

I OVERALL ELECTRICAL WIRING DIAGRAM

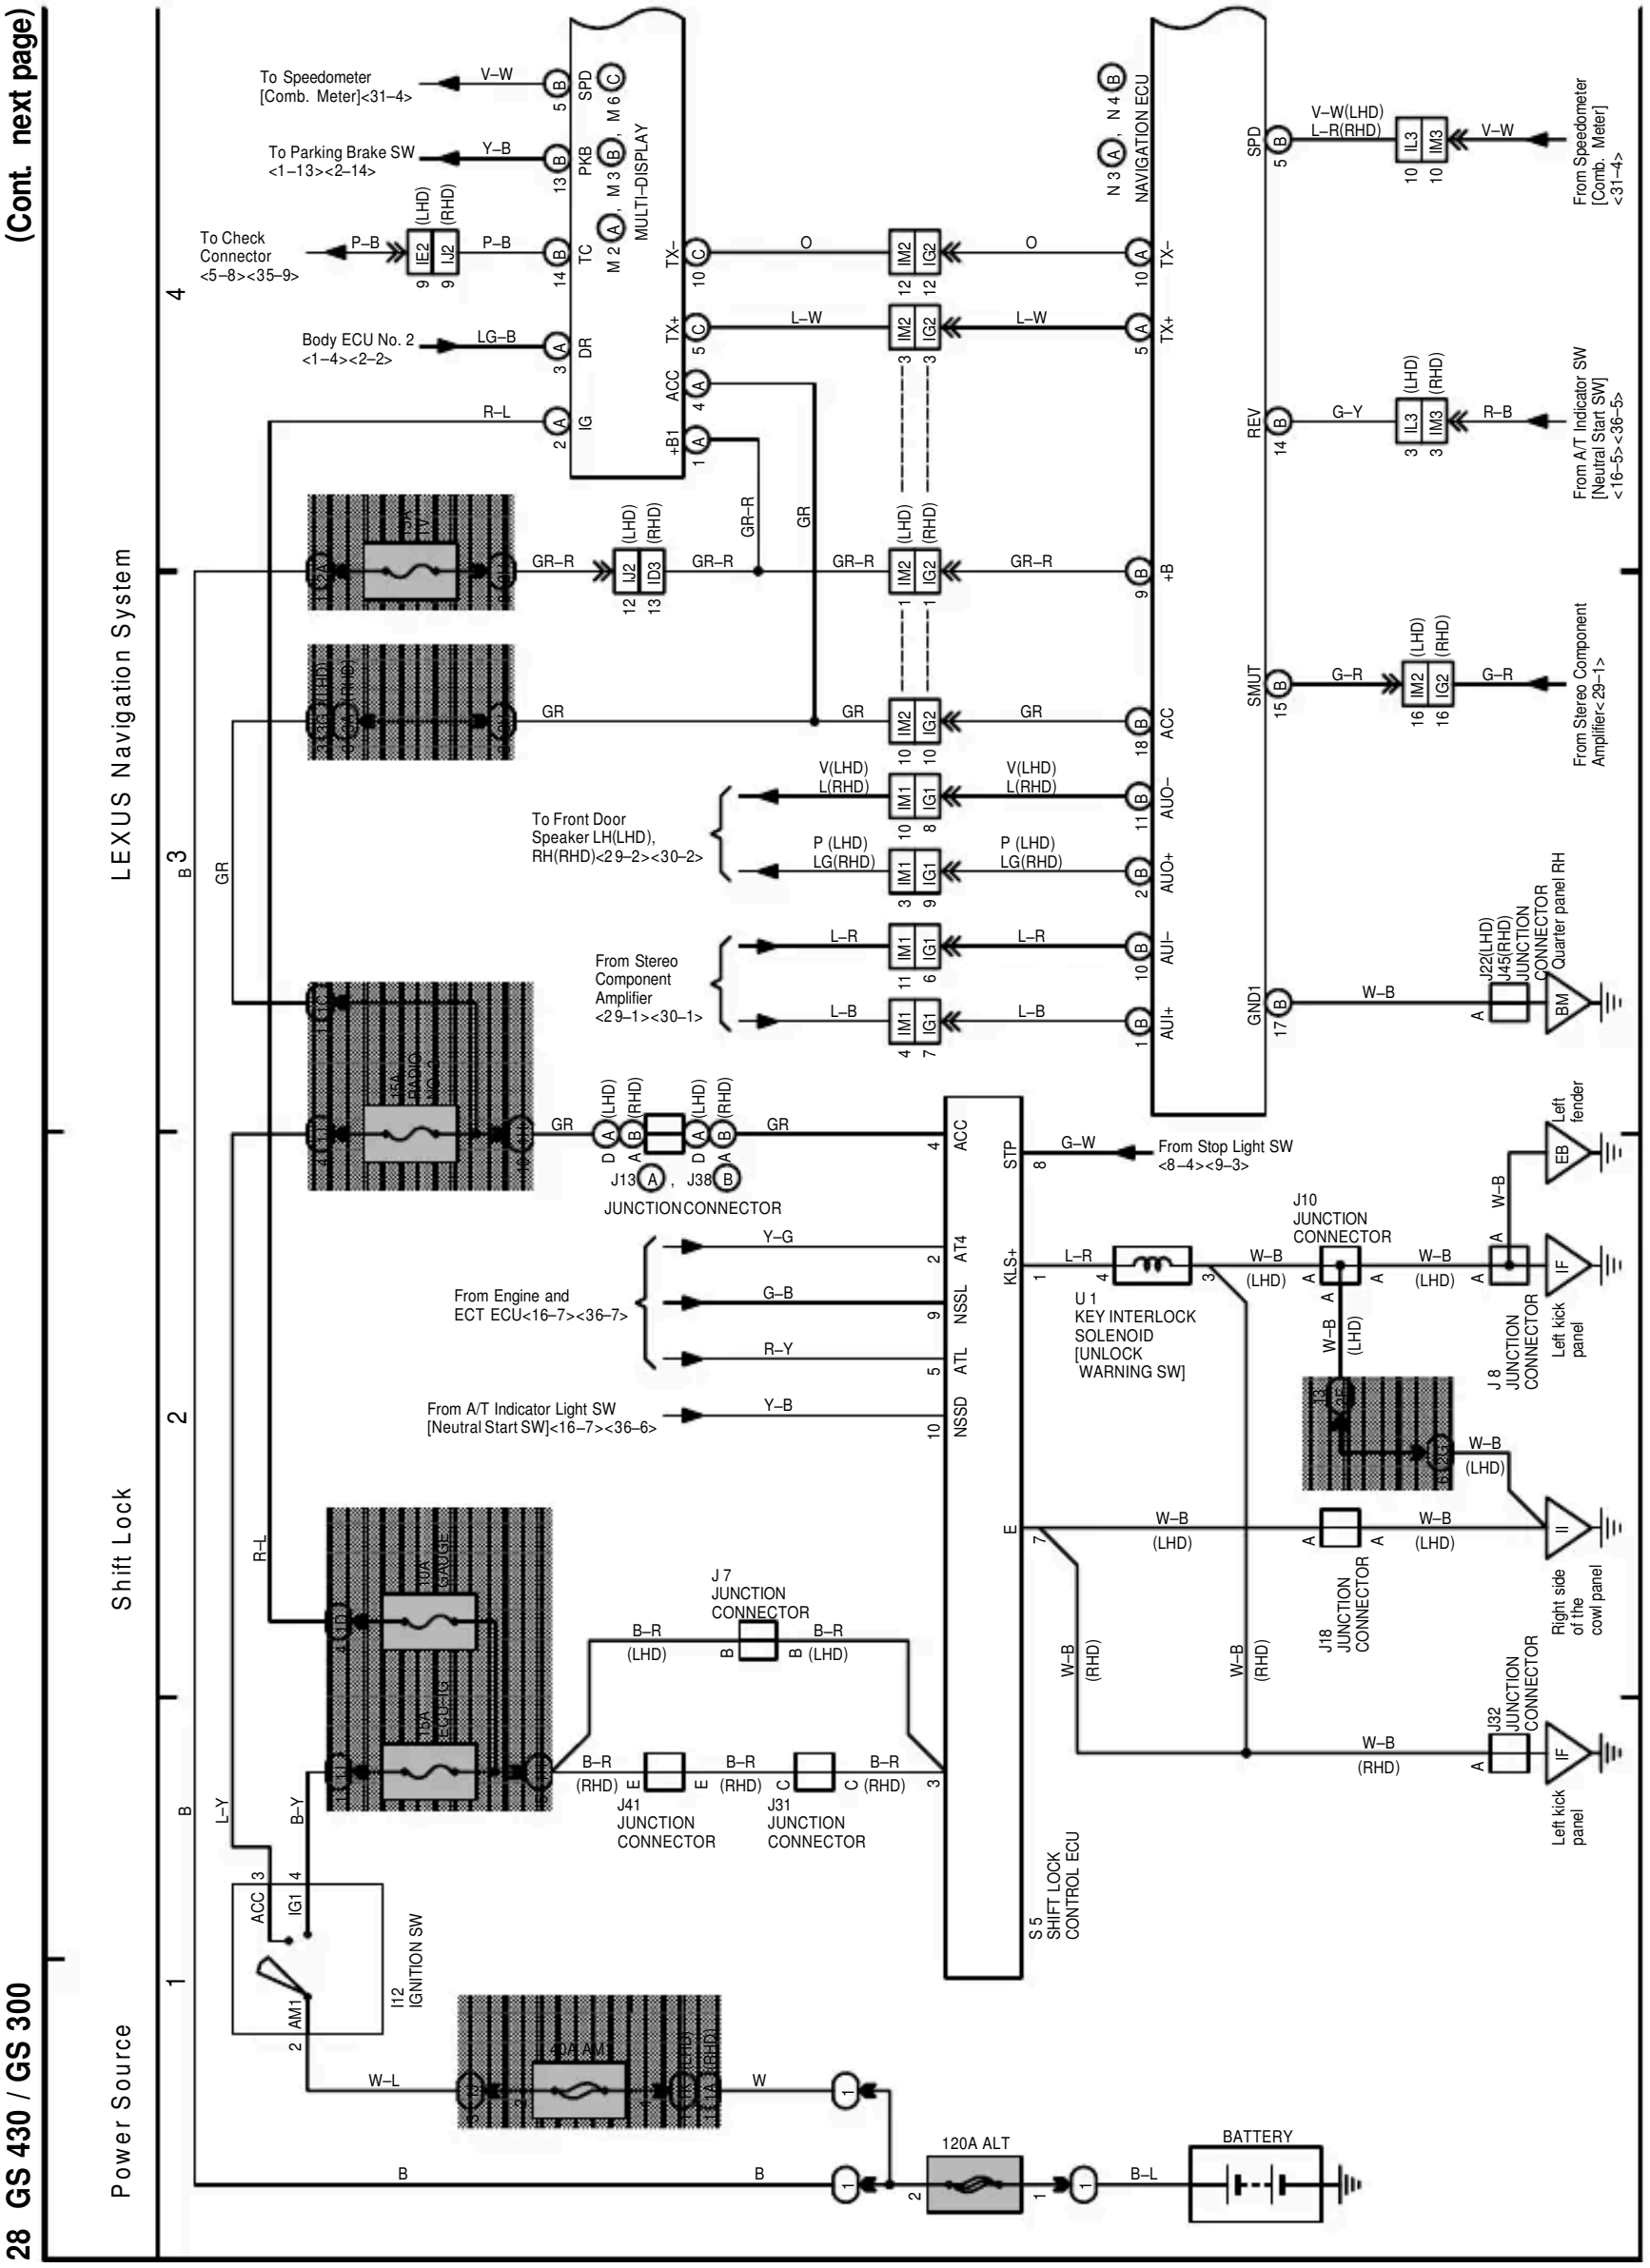

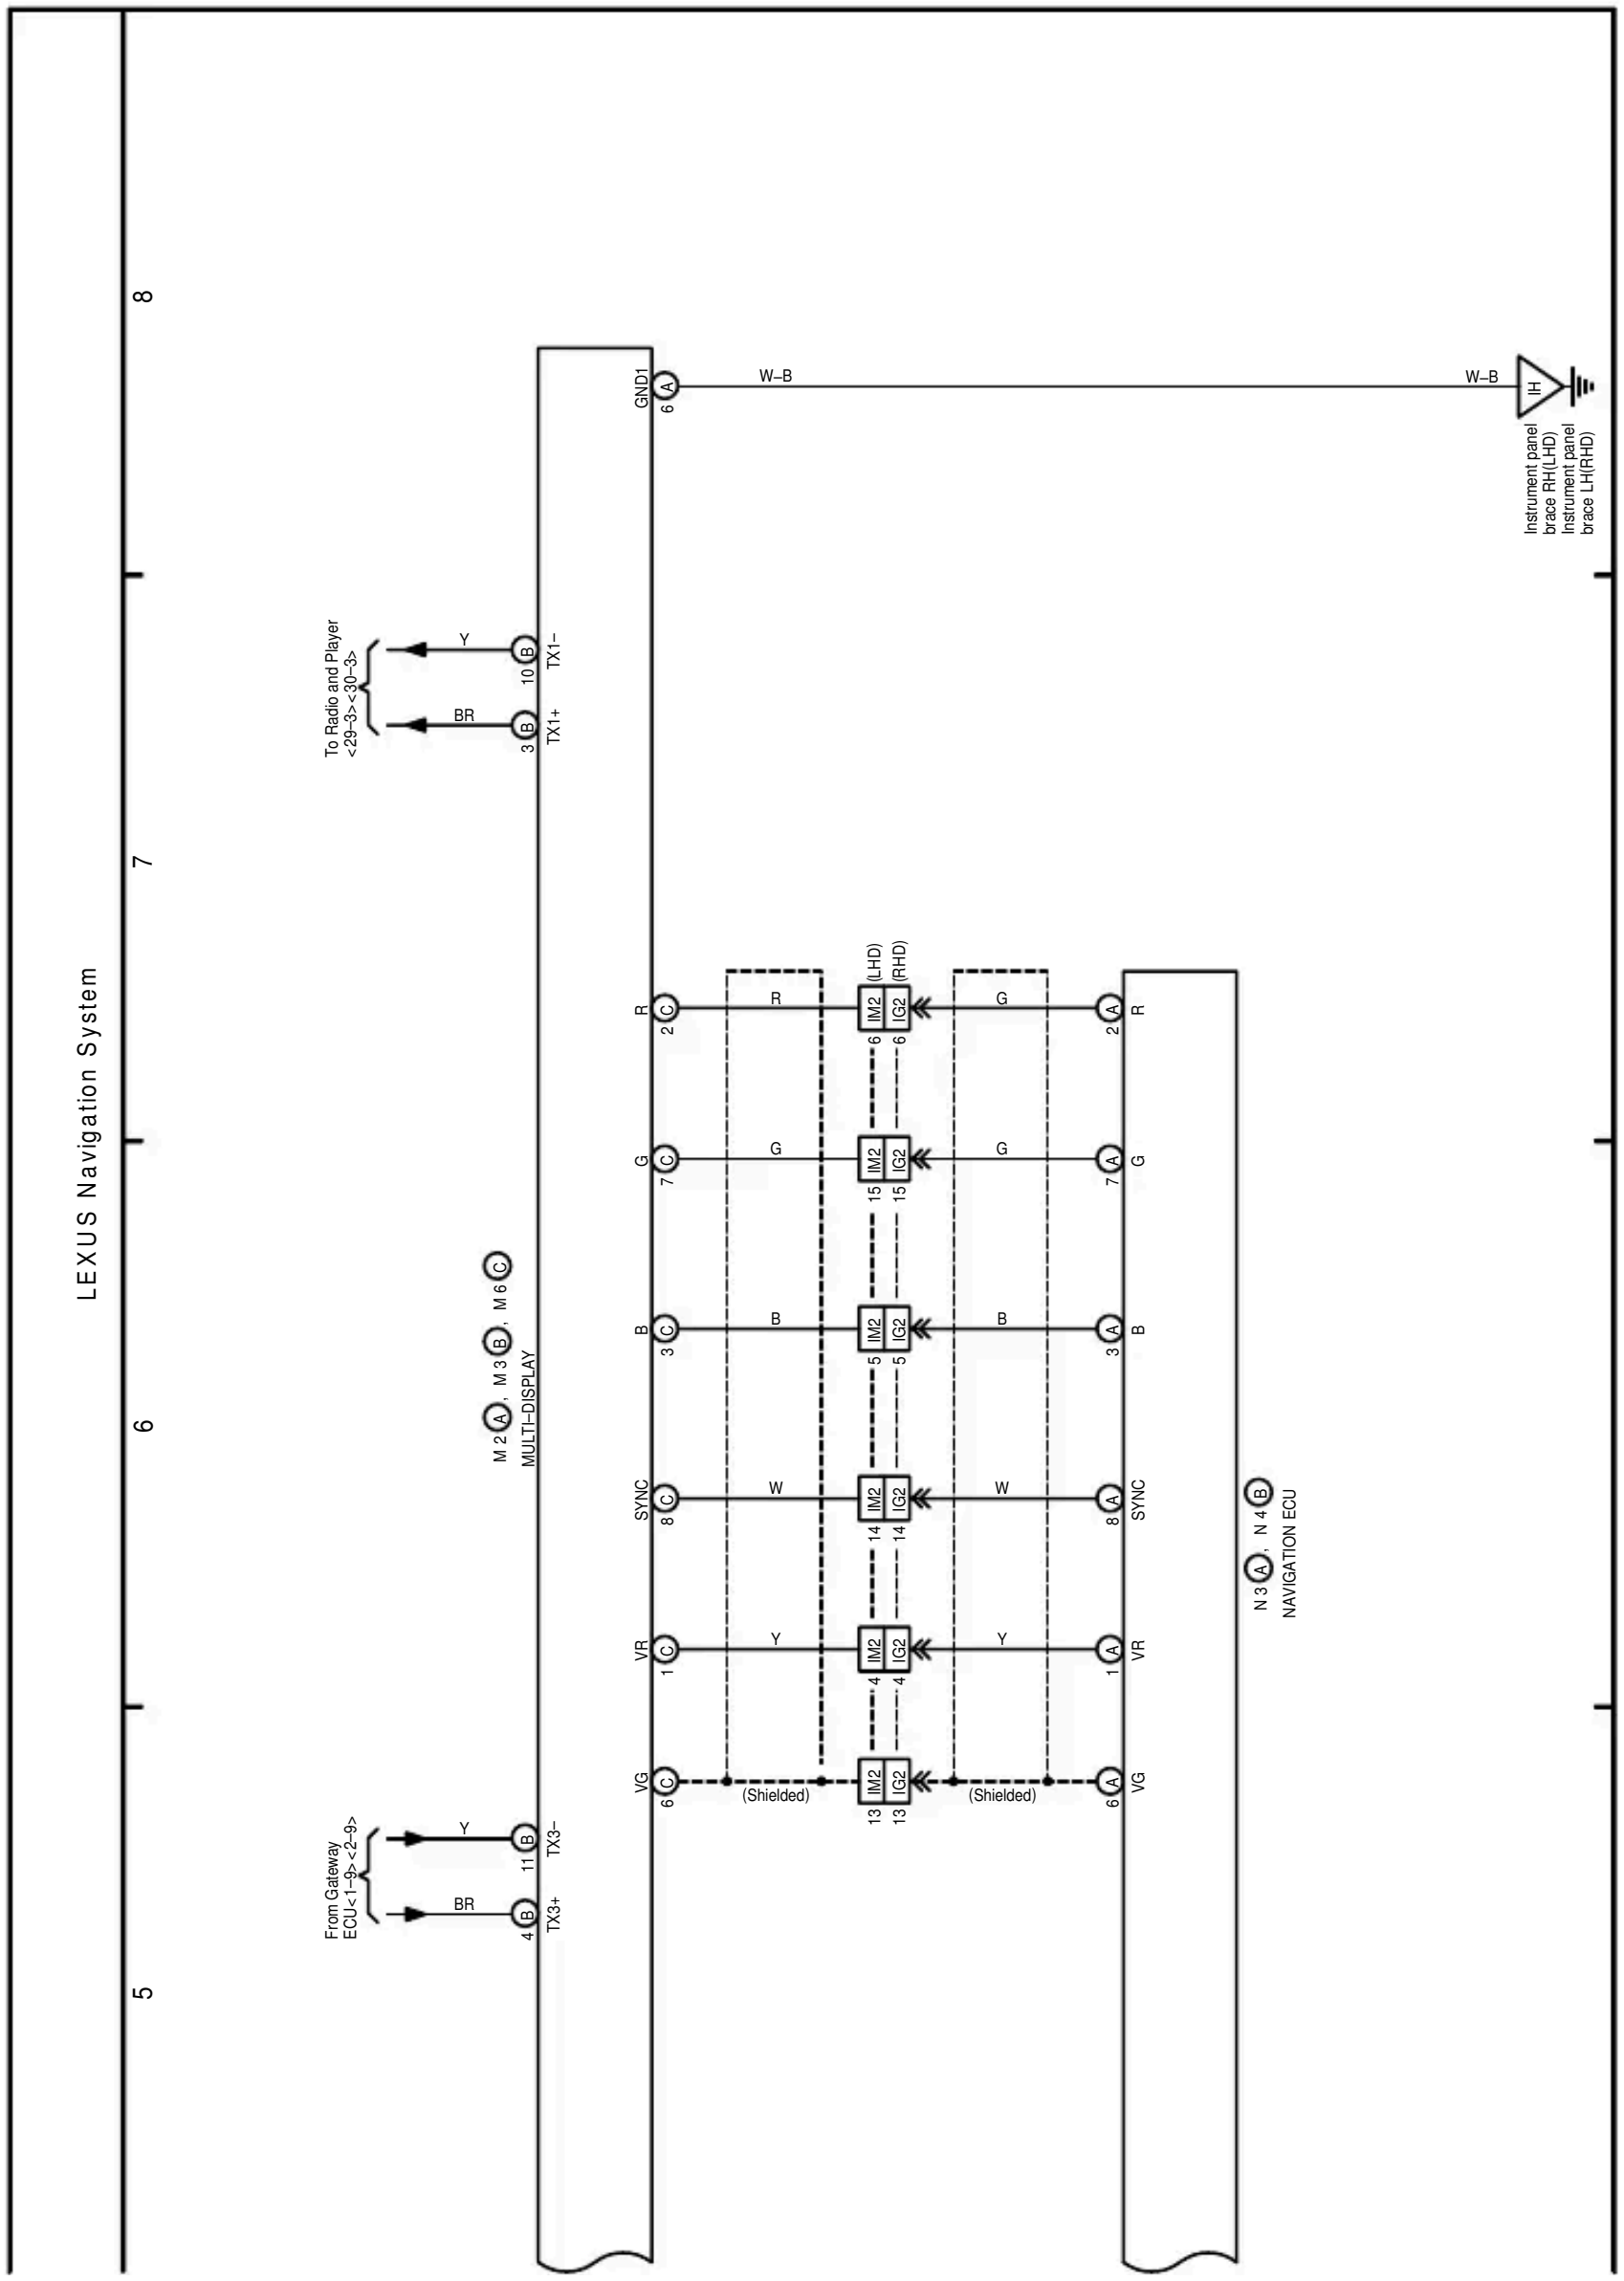
LEXUS Navigation System
8
7
6
5
To Radio and Player
<29–3><30–3>
Y
BR
10 B
3 B
TX1–
TX1+
GND1
6 A
W–B
W–B
IH
Instrument panel brace RH(LHD)
Instrument panel brace LH(RHD)
M 2 A, M 3 B, M 6 C
MULTI–DISPLAY
From Gateway ECU<1–9><2–9>
Y
BR
11 B
4 B
TX3–
TX3+
(LHD)
(RHD)
IM2
IG2
R
G
B
W
Y
VG
SYNC
VR
(Shielded)
N 3 A, N 4 B
NAVIGATION ECU

I OVERALL ELECTRICAL WIRING DIAGRAM

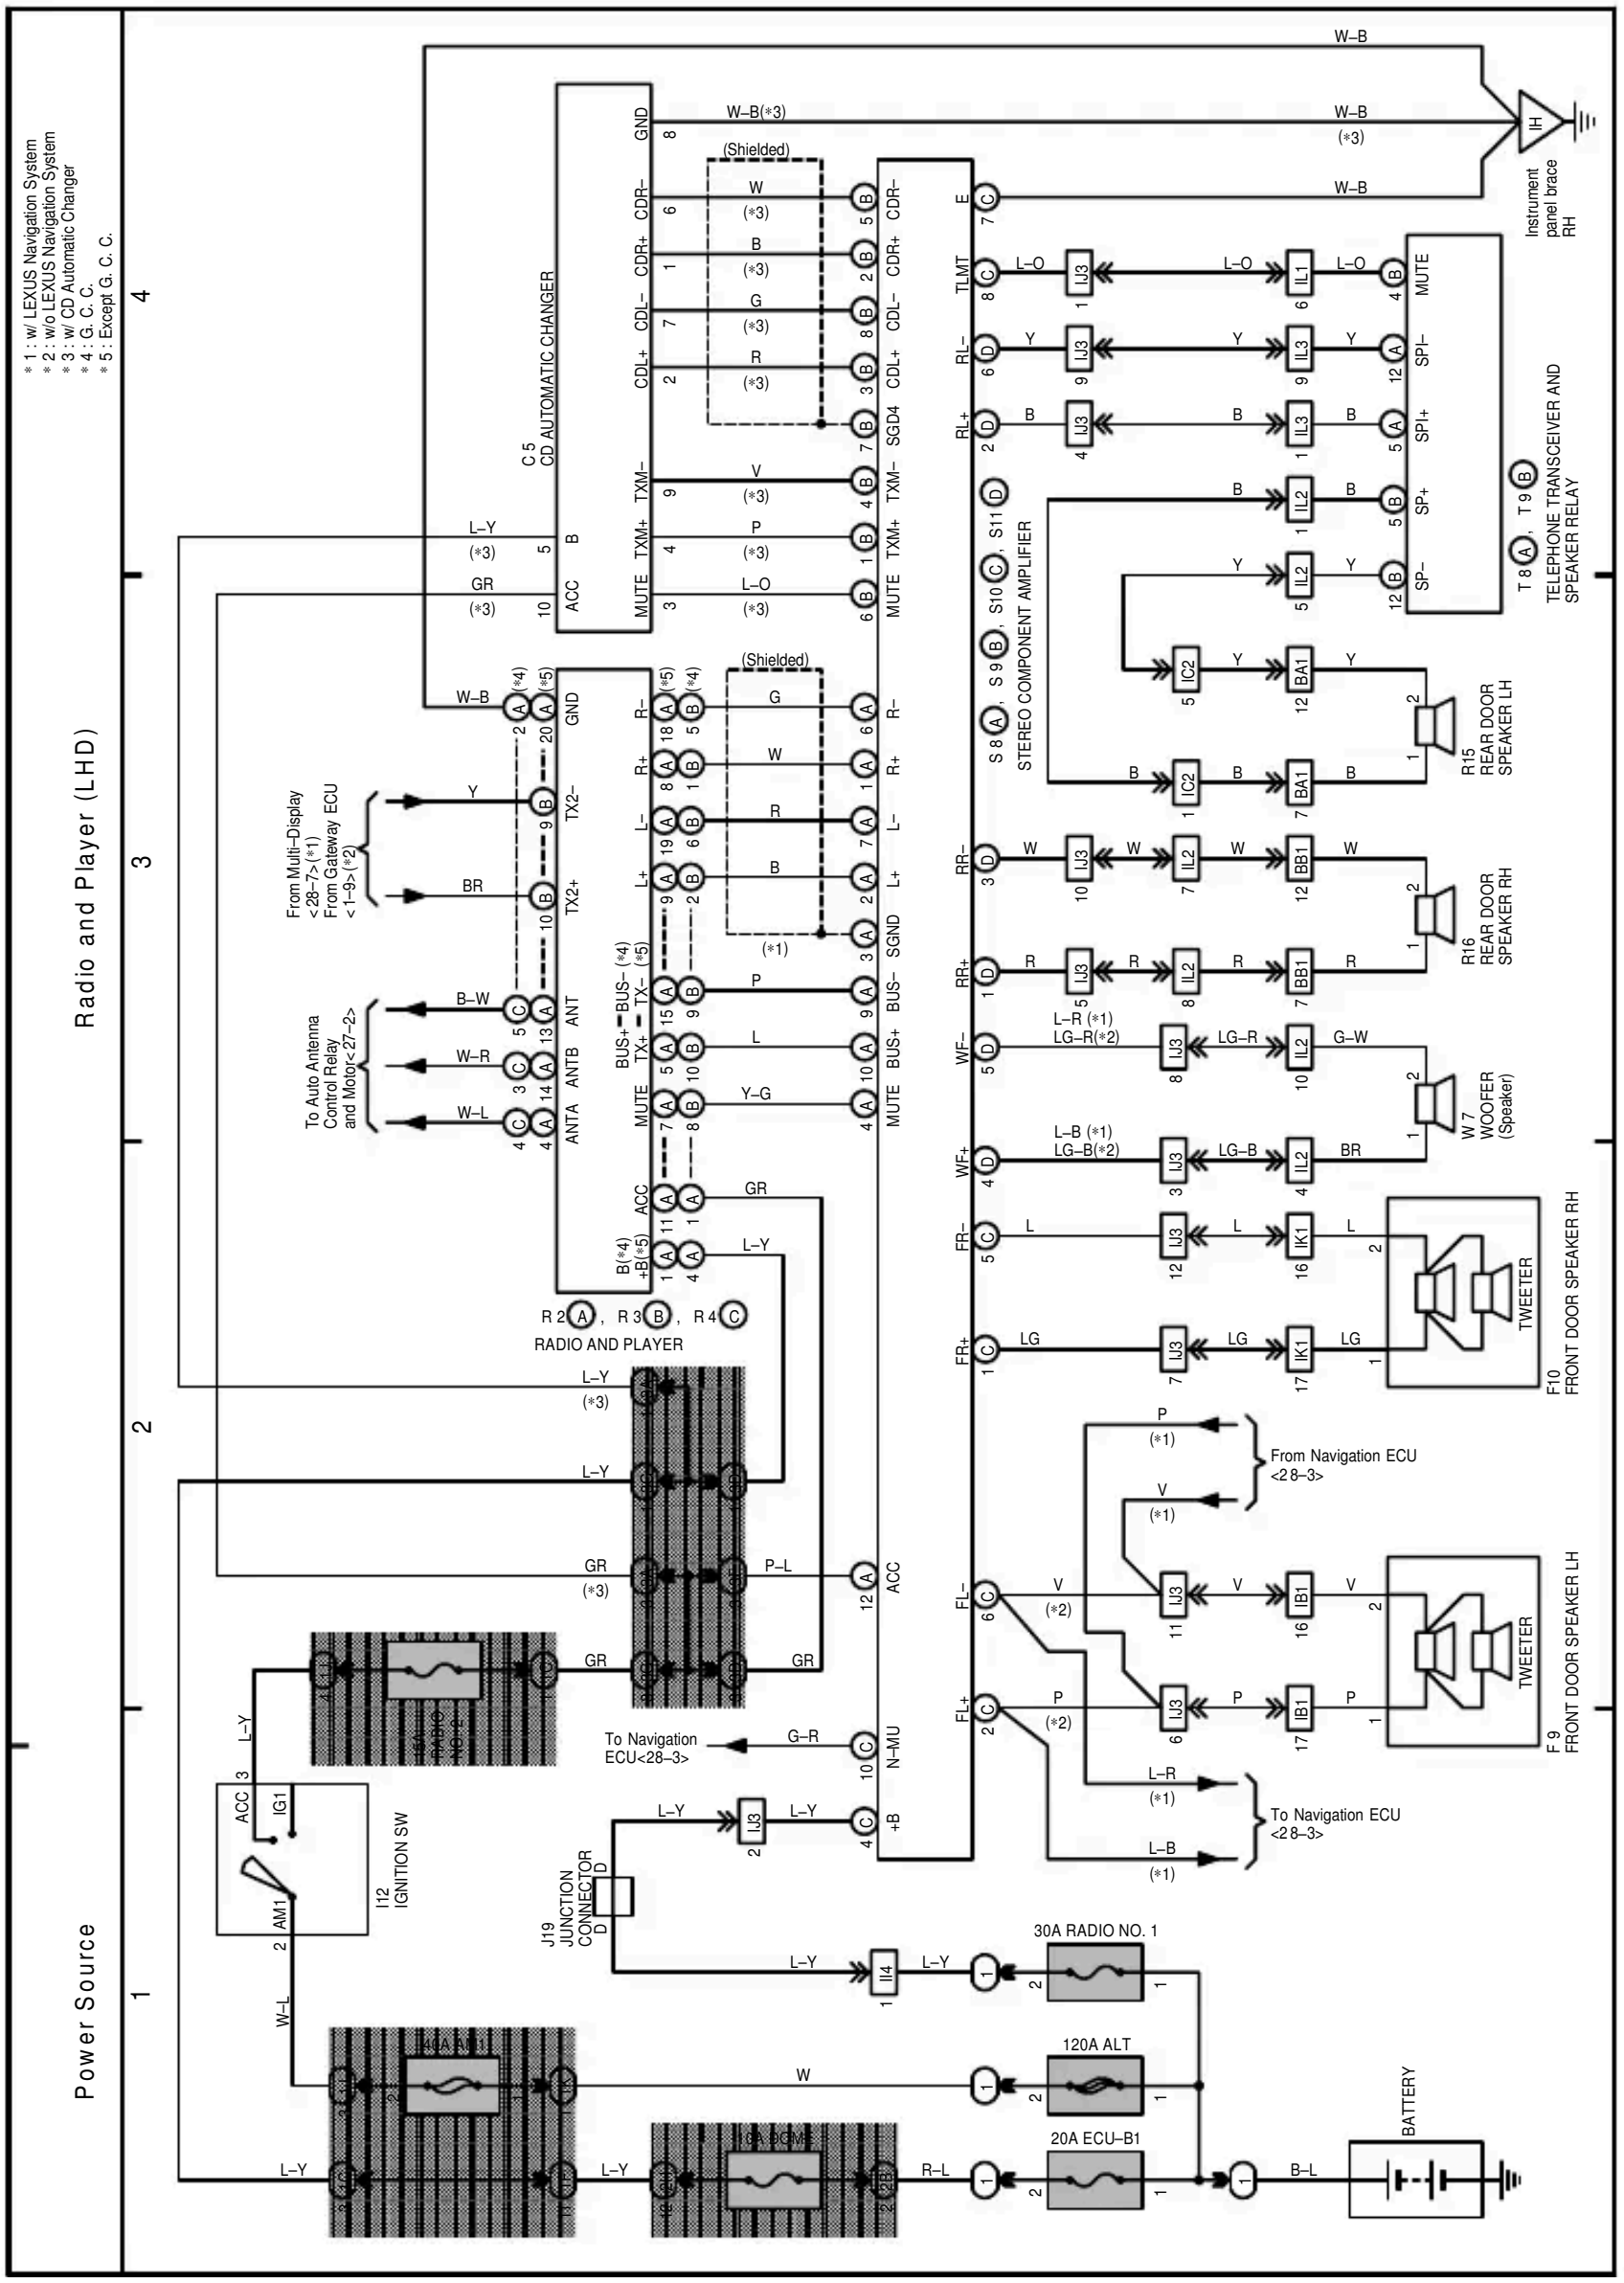

Power Source

Radio and Player (RHD)

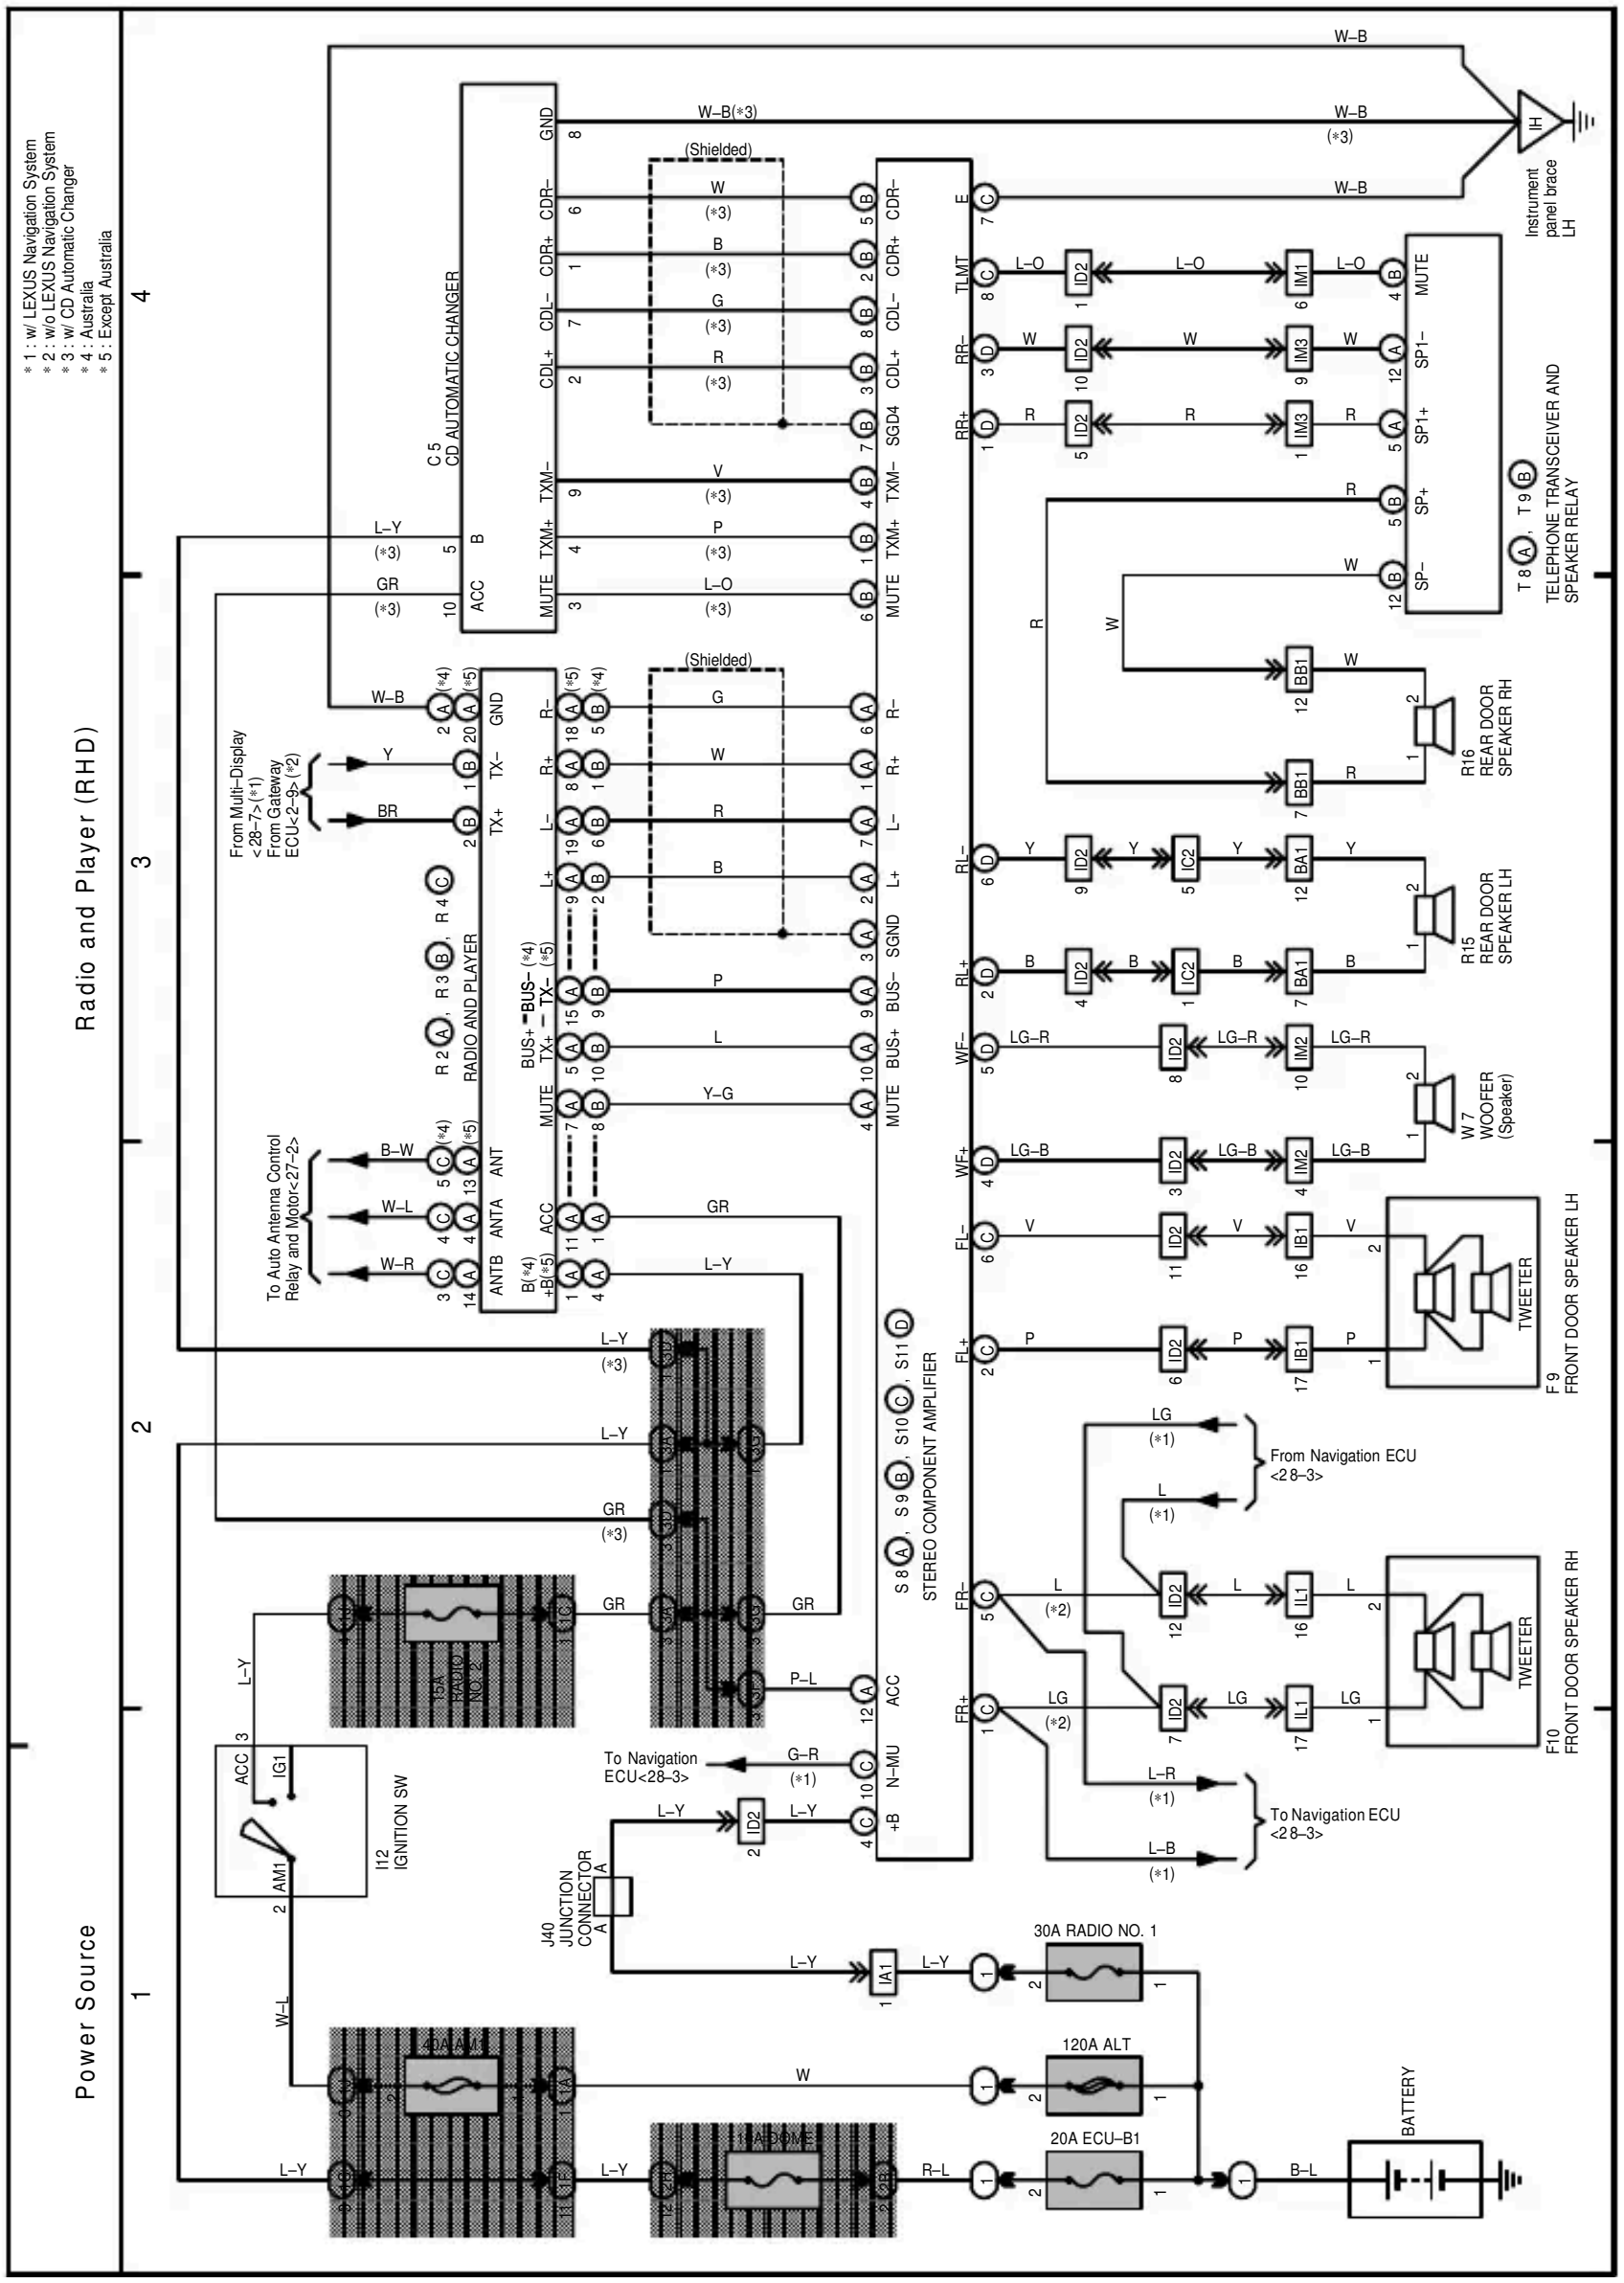

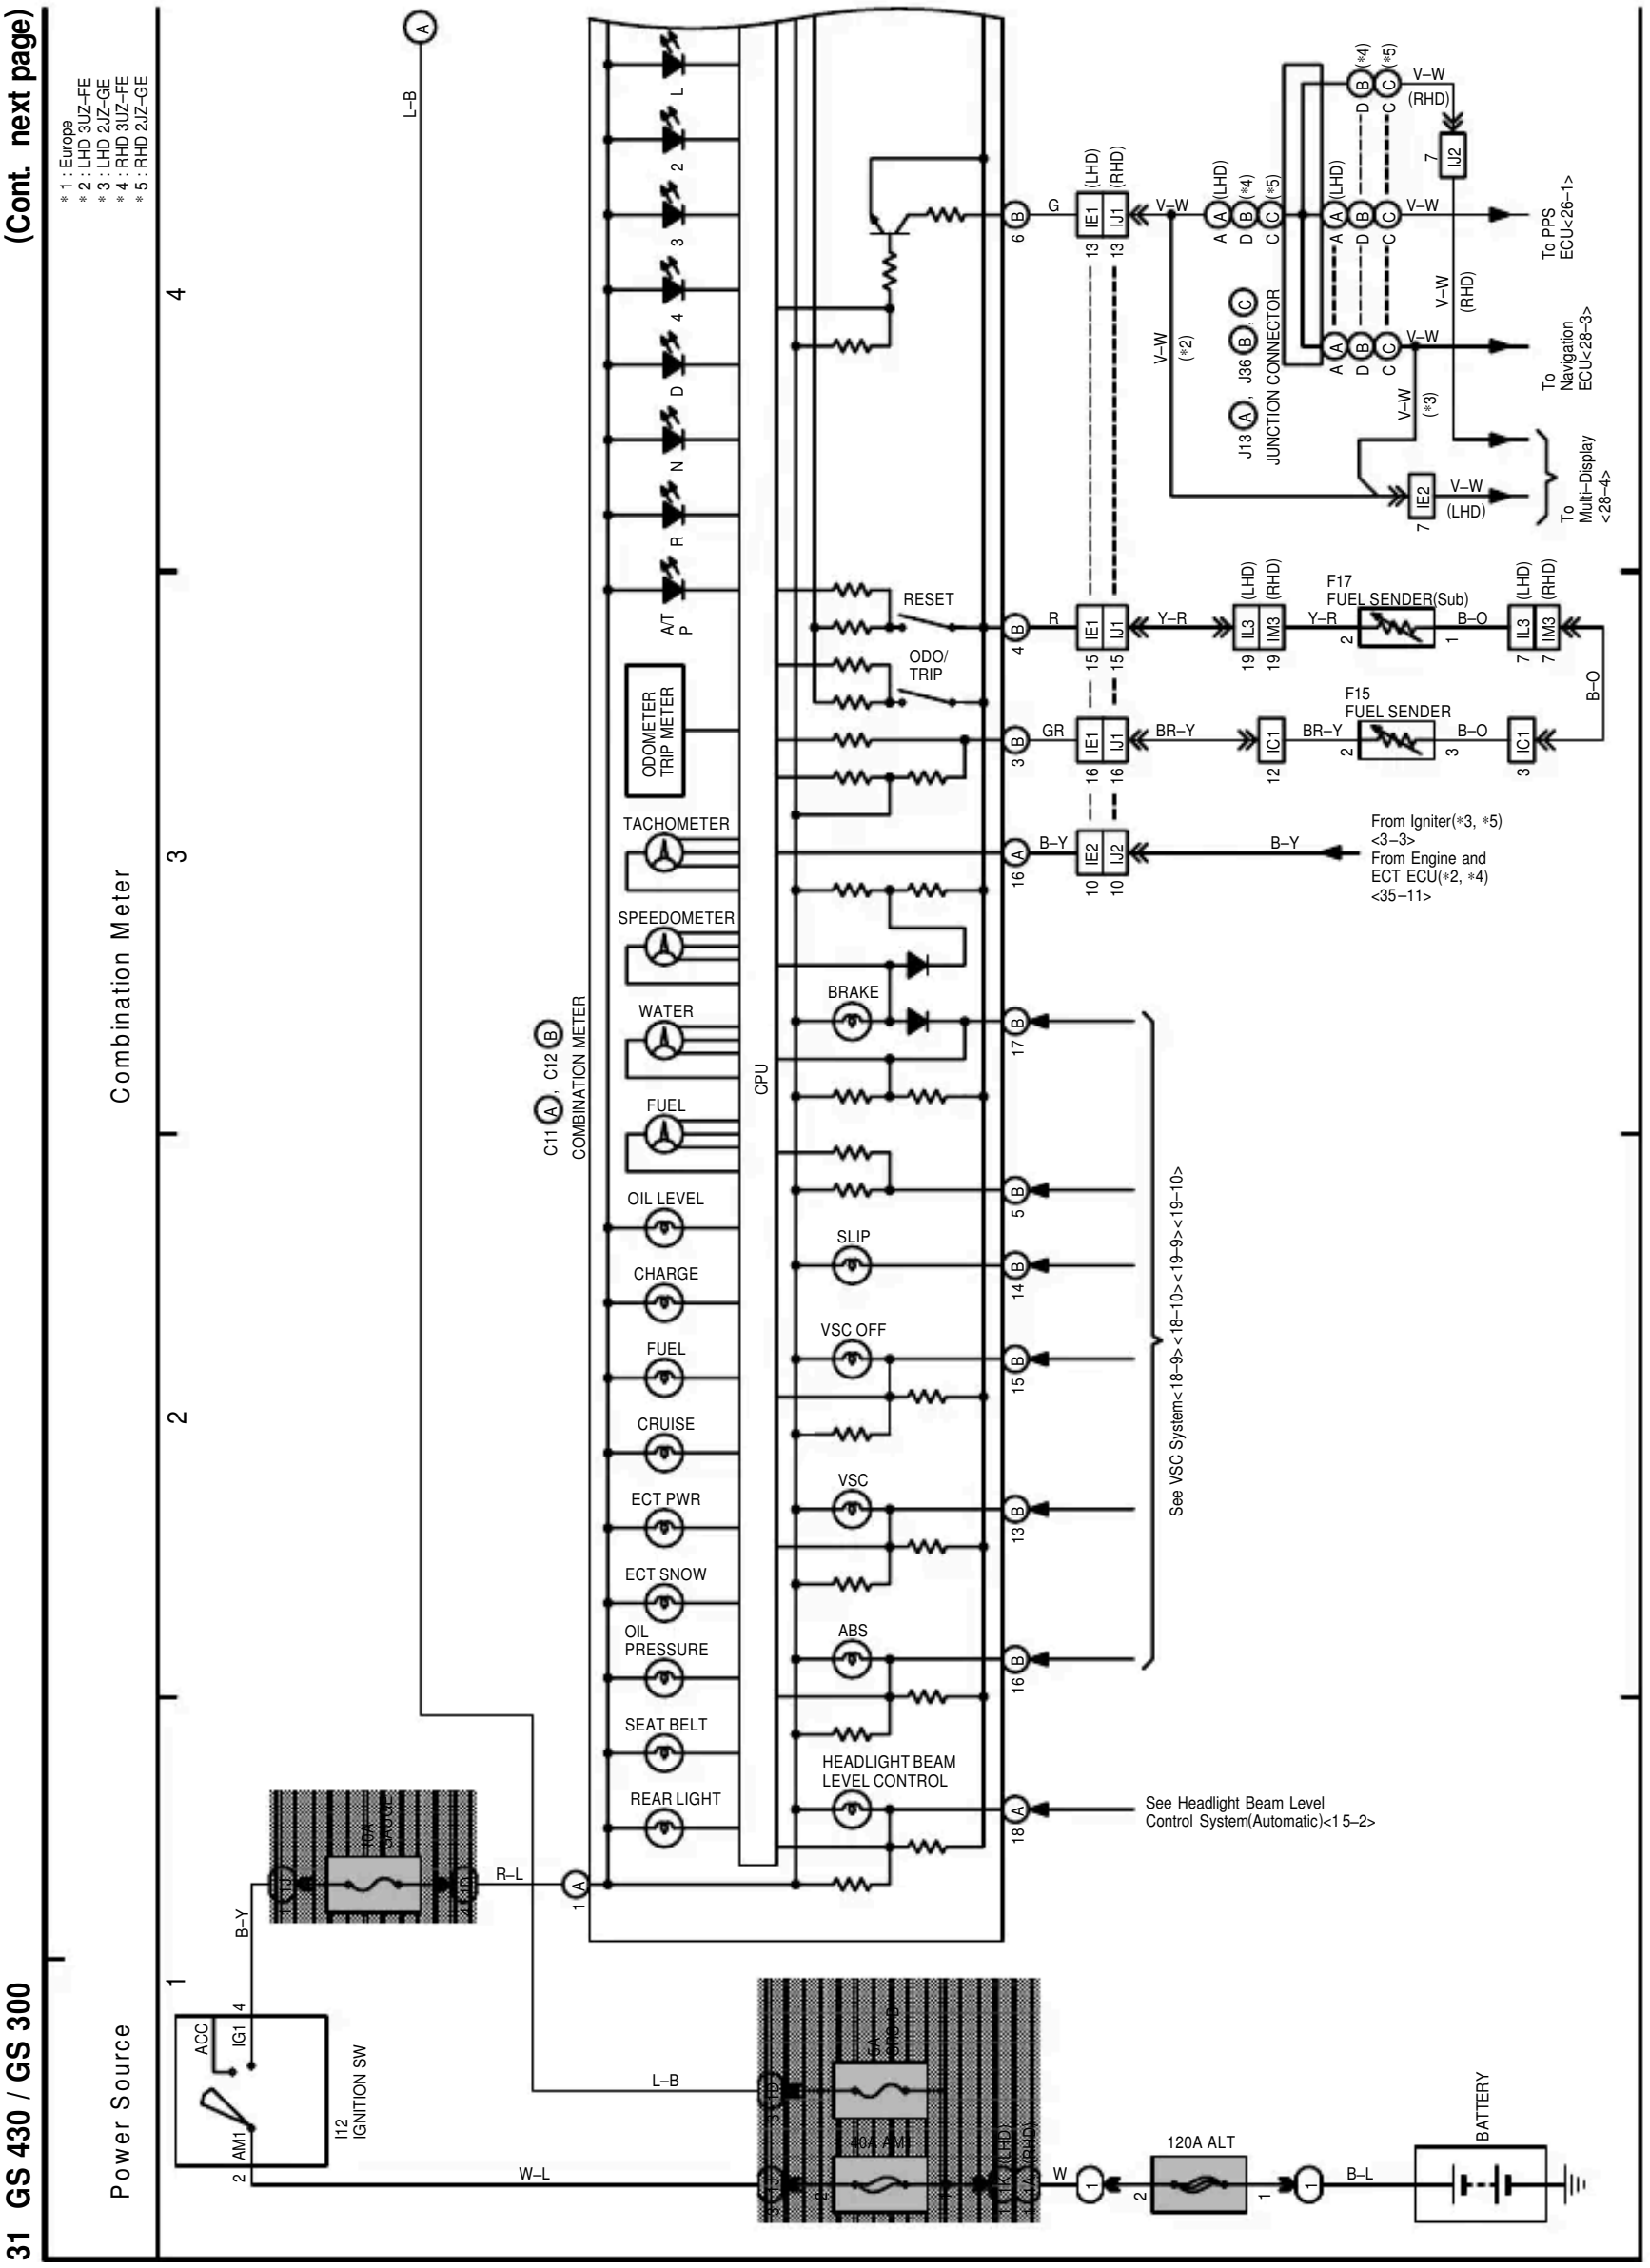
(Cont. next page)
* 1 : Europe
* 2 : LHD 3UZ–FE
* 3 : LHD 2JZ–GE
* 4 : RHD 3UZ–FE
* 5 : RHD 2JZ–GE
Combination Meter
Power Source
31 GS 430 / GS 300
L–B
C11 A, C12 B COMBINATION METER
CPU
ODOMETER TRIP METER
TACHOMETER
SPEEDOMETER
WATER
FUEL
OIL LEVEL
CHARGE
FUEL
CRUISE
ECT PWR
ECT SNOW
OIL PRESSURE
SEAT BELT
REAR LIGHT
A/T P R N D 4 3 2 L
RESET
ODO/ TRIP
BRAKE
SLIP
VSC OFF
VSC
ABS
HEADLIGHT BEAM LEVEL CONTROL
See VSC System<18–9><18–10><19–9><19–10>
See Headlight Beam Level Control System(Automatic)<15–2>
J13 A, J36 B, C JUNCTION CONNECTOR
To PPS ECU<26–1>
To Navigation ECU<28–3>
To Multi–Display <28–4>
F17 FUEL SENDER(Sub)
F15 FUEL SENDER
From Igniter(*3, *5) <3–3>
From Engine and ECT ECU(*2, *4) <35–11>
I12 IGNITION SW
ACC IG1 AM1
120A ALT
BATTERY
R–L
B–Y
W–L
B–L
V–W
Y–R
BR–Y
B–O
GR
W

Combination Meter

* 1 : Europe
* 2 : Except G. C. C.

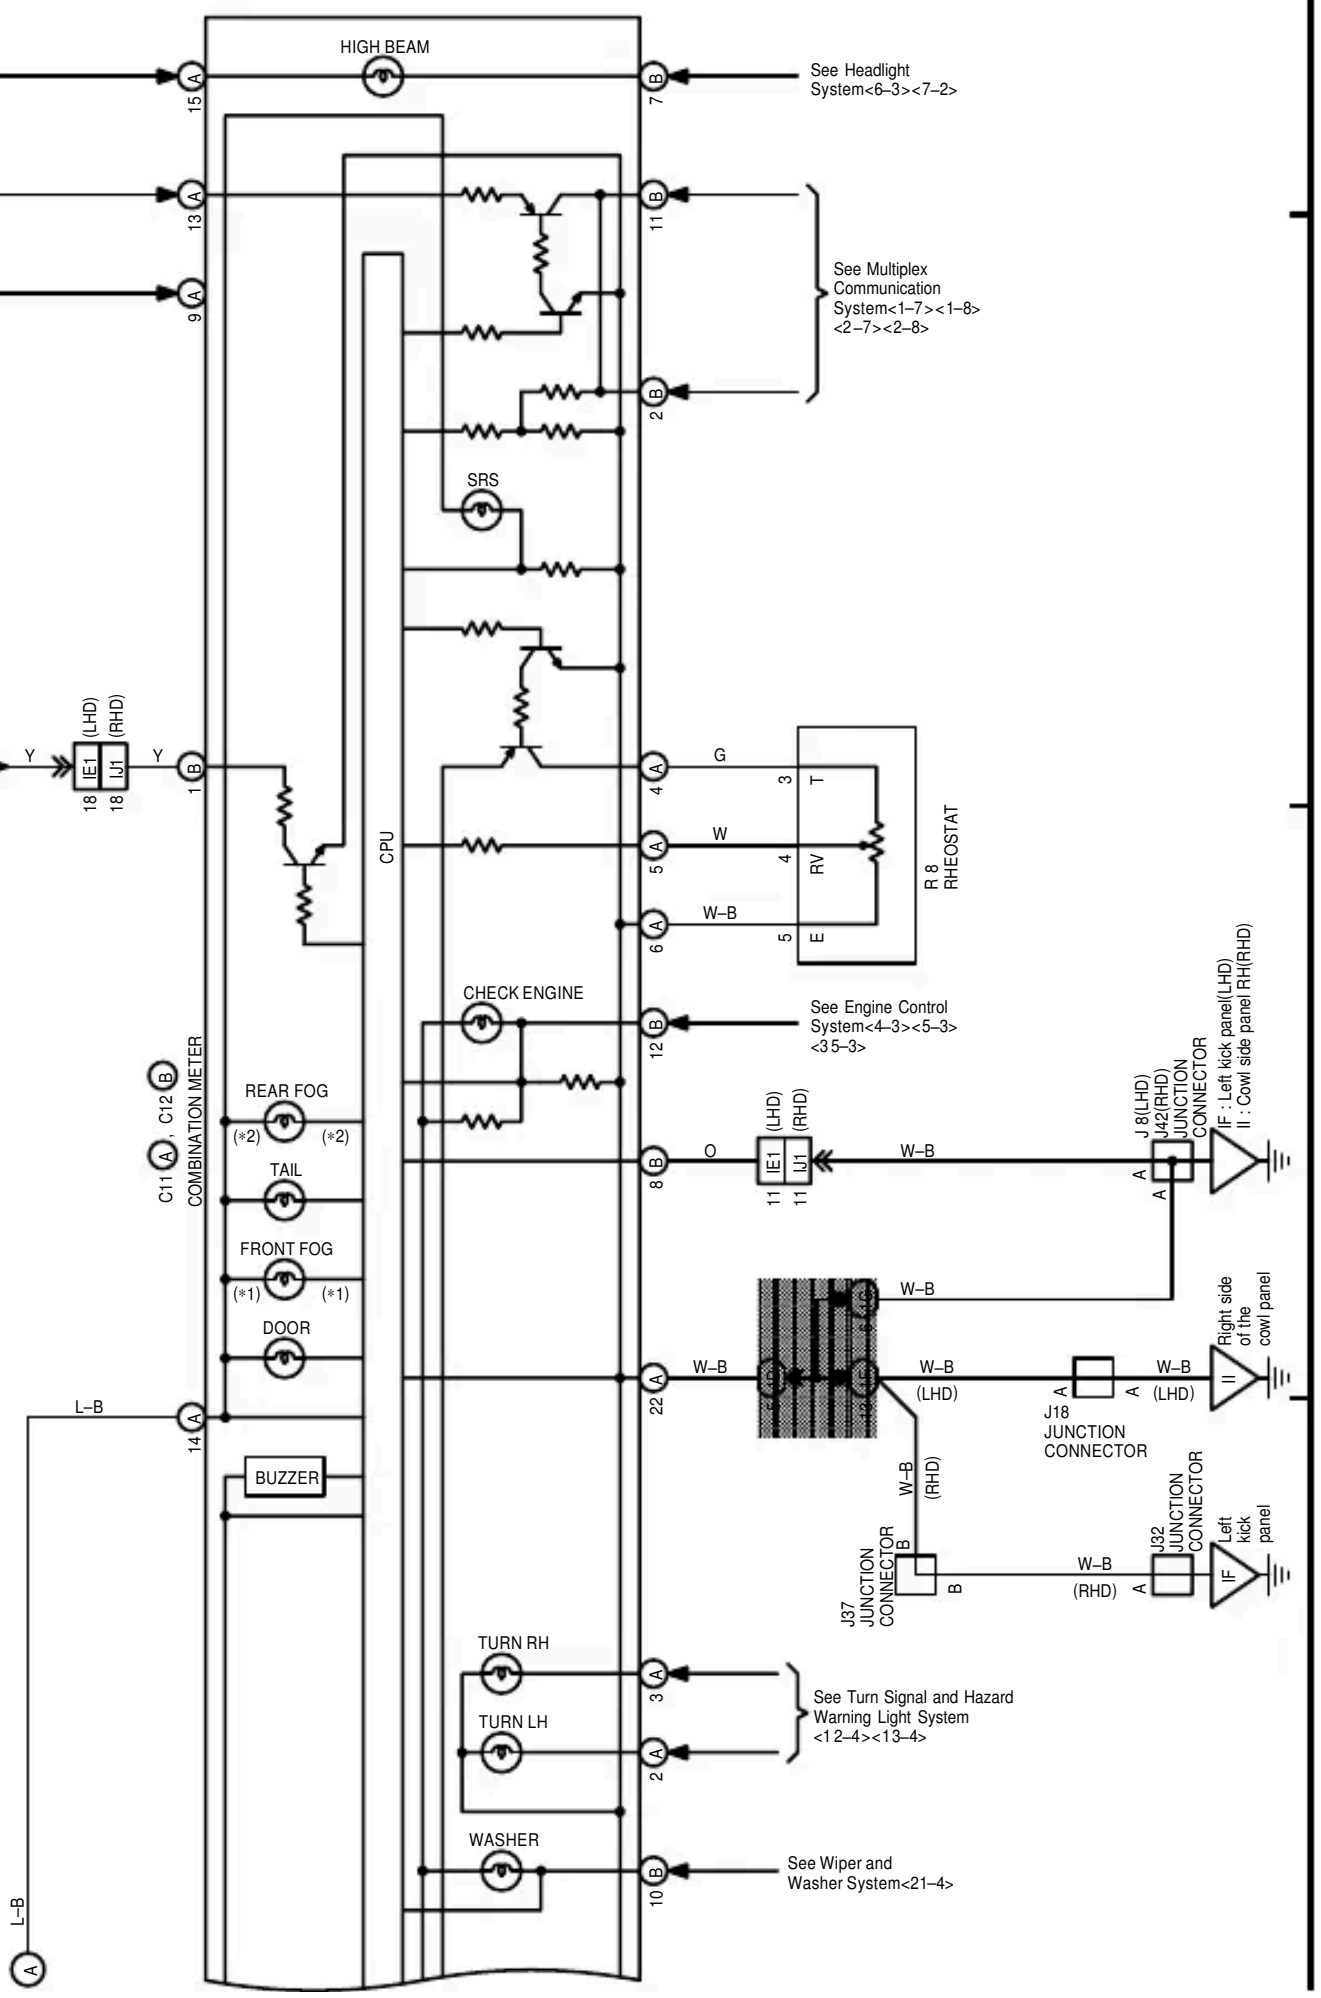

I OVERALL ELECTRICAL WIRING DIAGRAM

(Cont. next page)

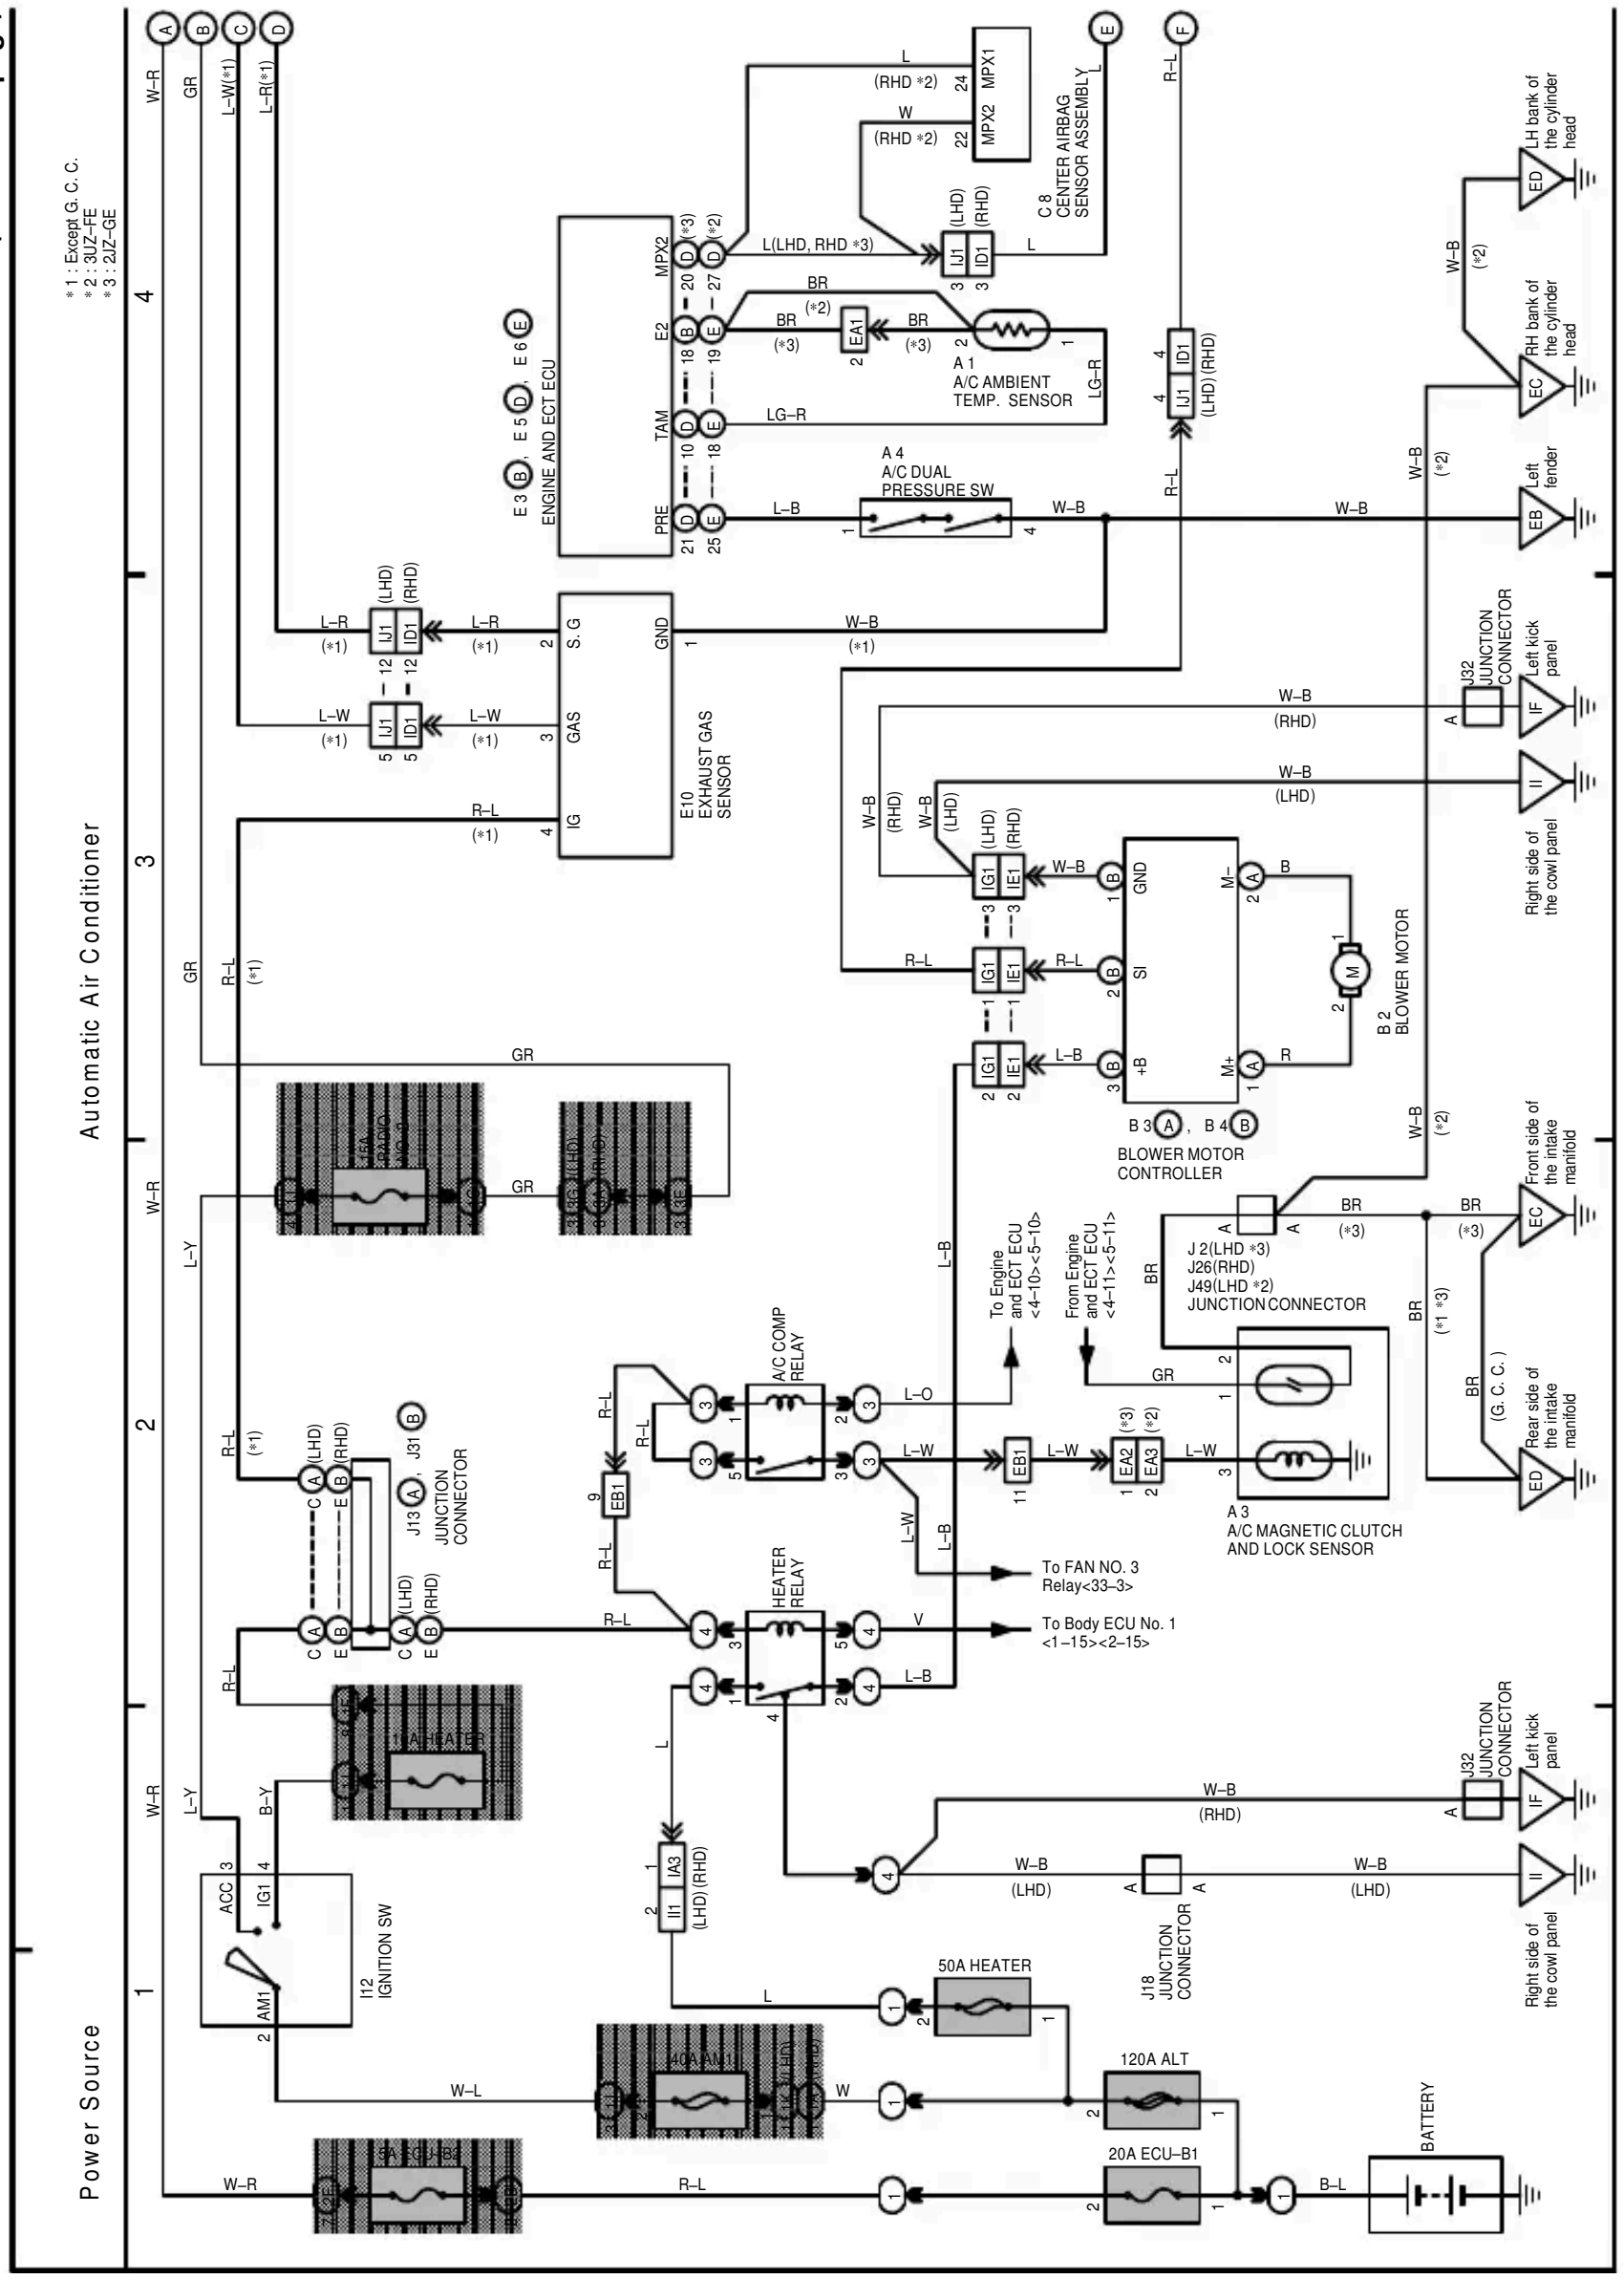

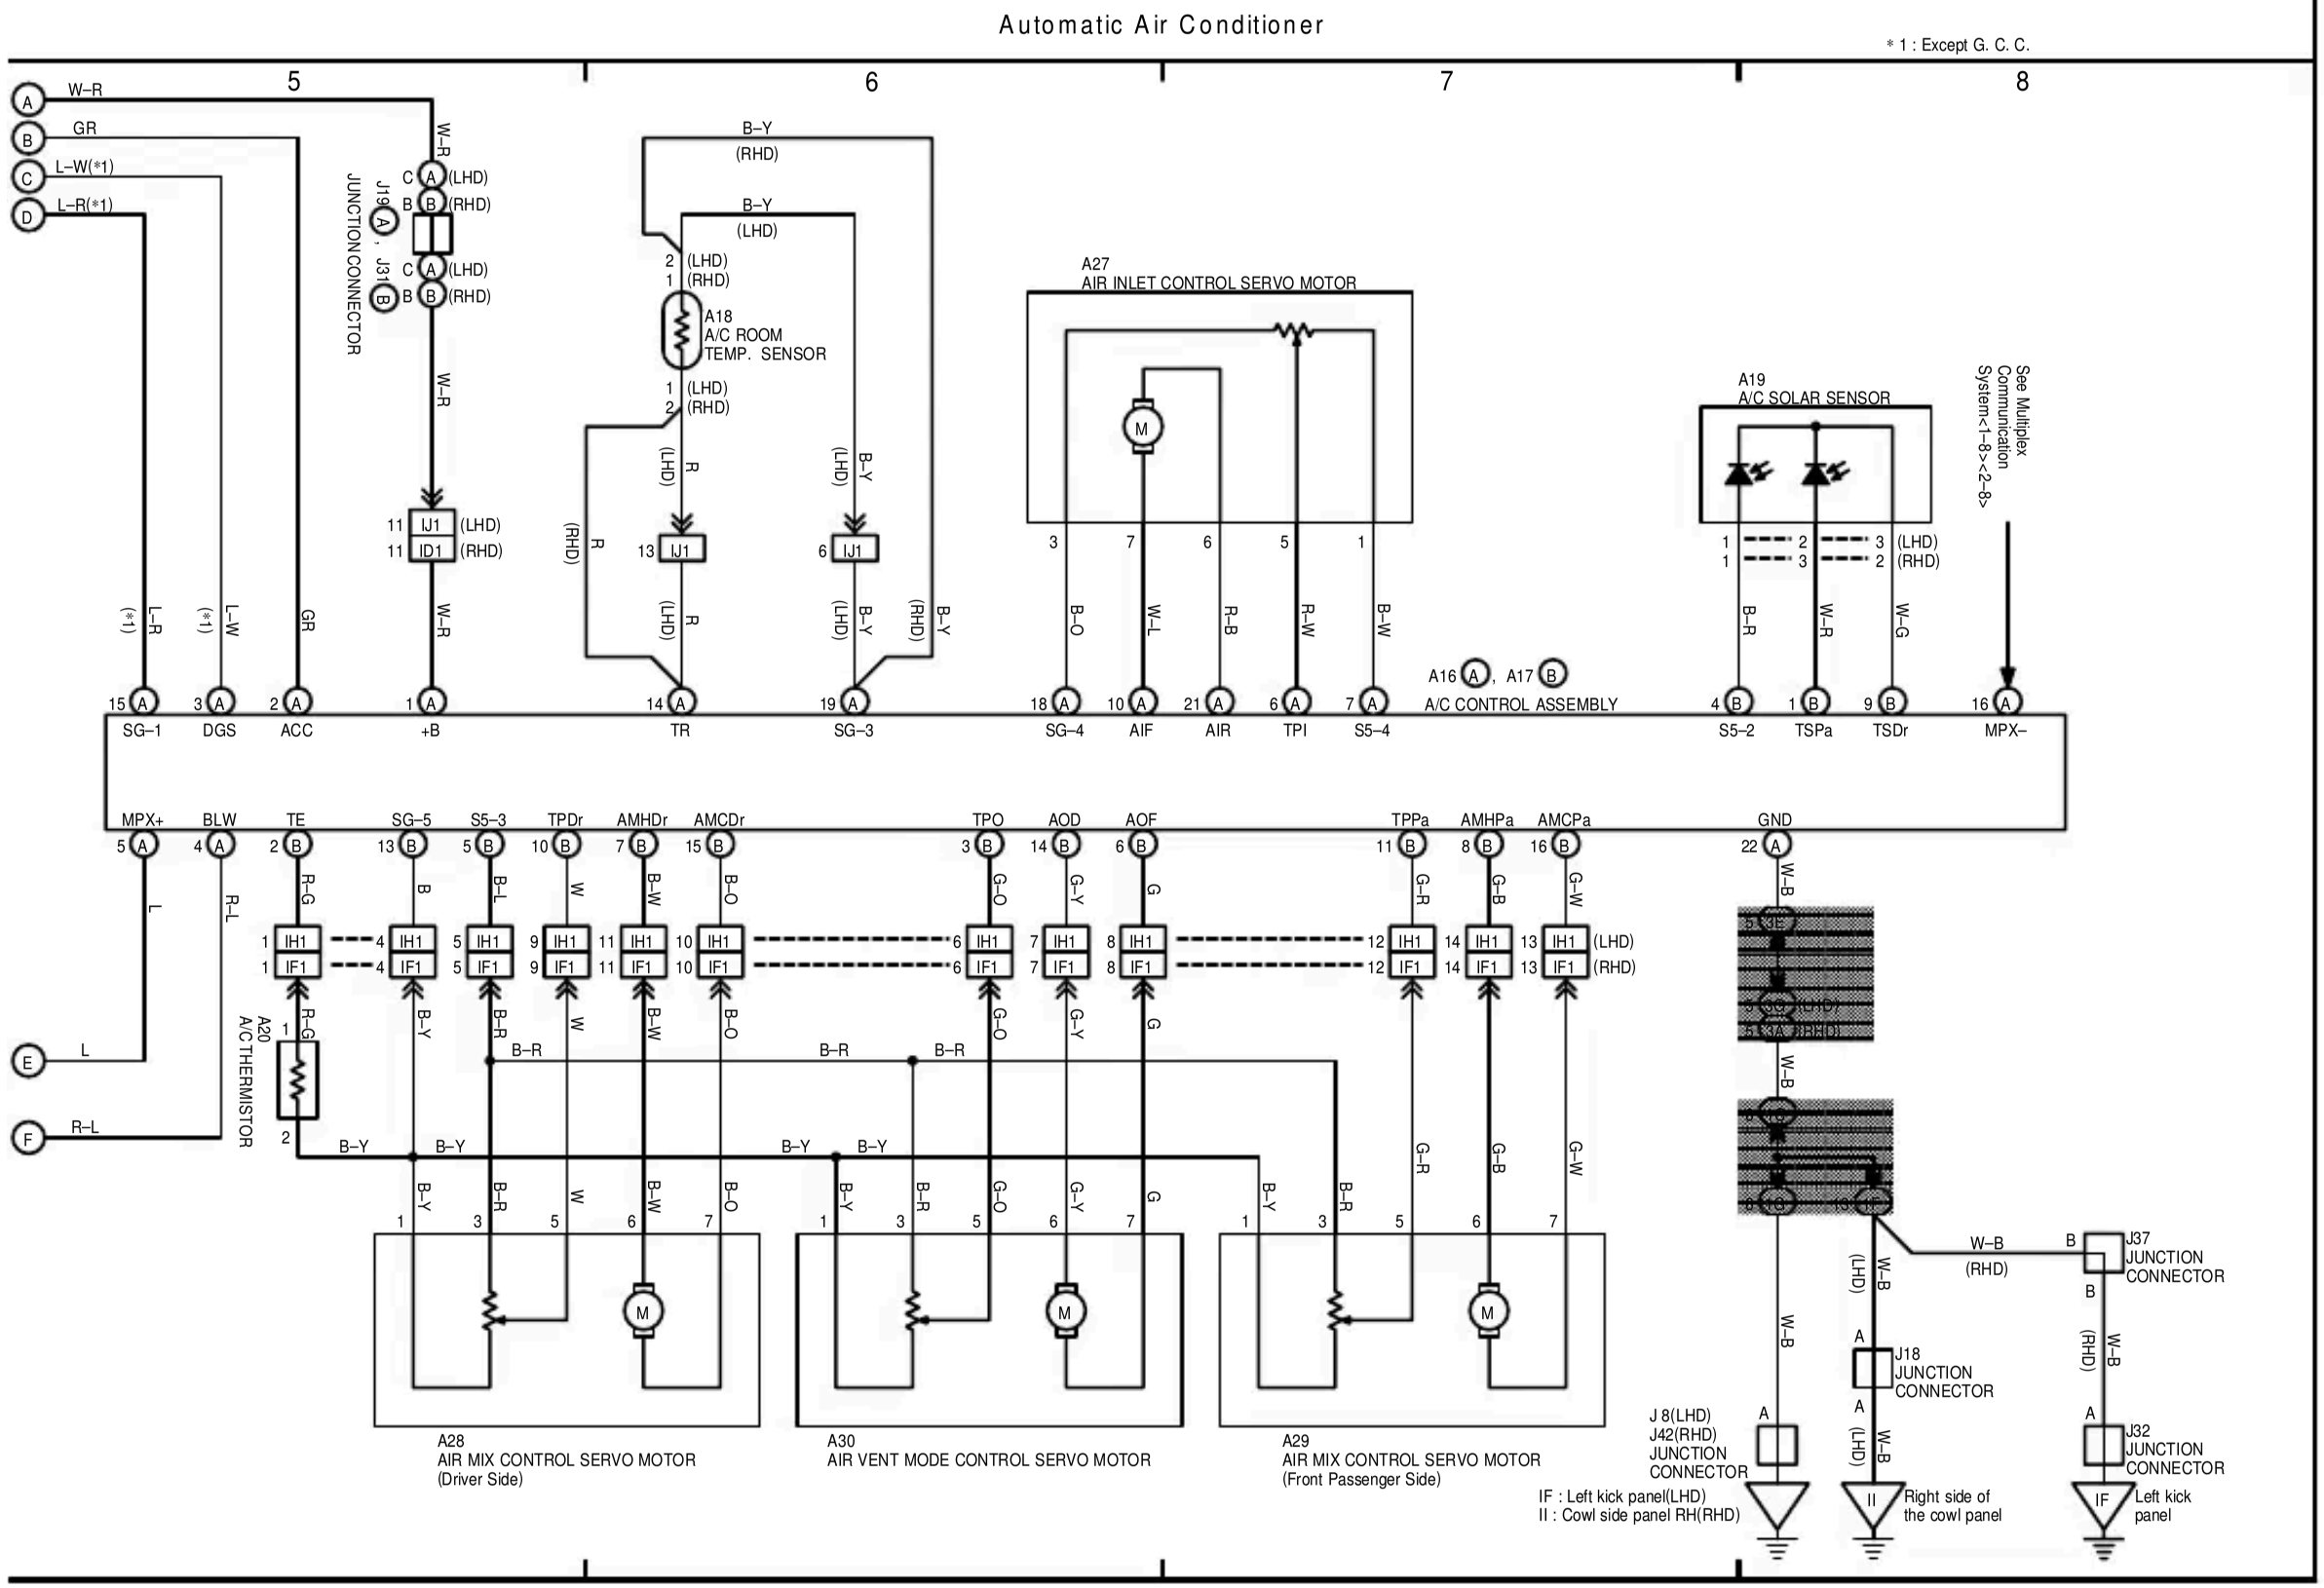
Automatic Air Conditioner
* 1 : Except G. C. C.
5
6
7
8
W–R
GR
L–W(*1)
L–R(*1)
JUNCTION CONNECTOR
J19 A , J31 B
(LHD)
(RHD)
W–R
B–Y
(RHD)
B–Y
(LHD)
A18
A/C ROOM
TEMP. SENSOR
IJ1
ID1
A27
AIR INLET CONTROL SERVO MOTOR
A19
A/C SOLAR SENSOR
See Multiplex Communication System<1–8><2–8>
A16 A , A17 B
A/C CONTROL ASSEMBLY
SG–1
DGS
ACC
+B
TR
SG–3
SG–4
AIF
AIR
TPI
S5–4
S5–2
TSPa
TSDr
MPX–
MPX+
BLW
TE
SG–5
S5–3
TPDr
AMHDr
AMCDr
TPO
AOD
AOF
TPPa
AMHPa
AMCPa
GND
IH1
IF1
A20
A/C THERMISTOR
A28
AIR MIX CONTROL SERVO MOTOR
(Driver Side)
A30
AIR VENT MODE CONTROL SERVO MOTOR
A29
AIR MIX CONTROL SERVO MOTOR
(Front Passenger Side)
J 8(LHD)
J42(RHD)
JUNCTION
CONNECTOR
J18
JUNCTION
CONNECTOR
J37
JUNCTION
CONNECTOR
J32
JUNCTION
CONNECTOR
IF : Left kick panel(LHD)
II : Cowl side panel RH(RHD)
Right side of
the cowl panel
Left kick
panel

I OVERALL ELECTRICAL WIRING DIAGRAM

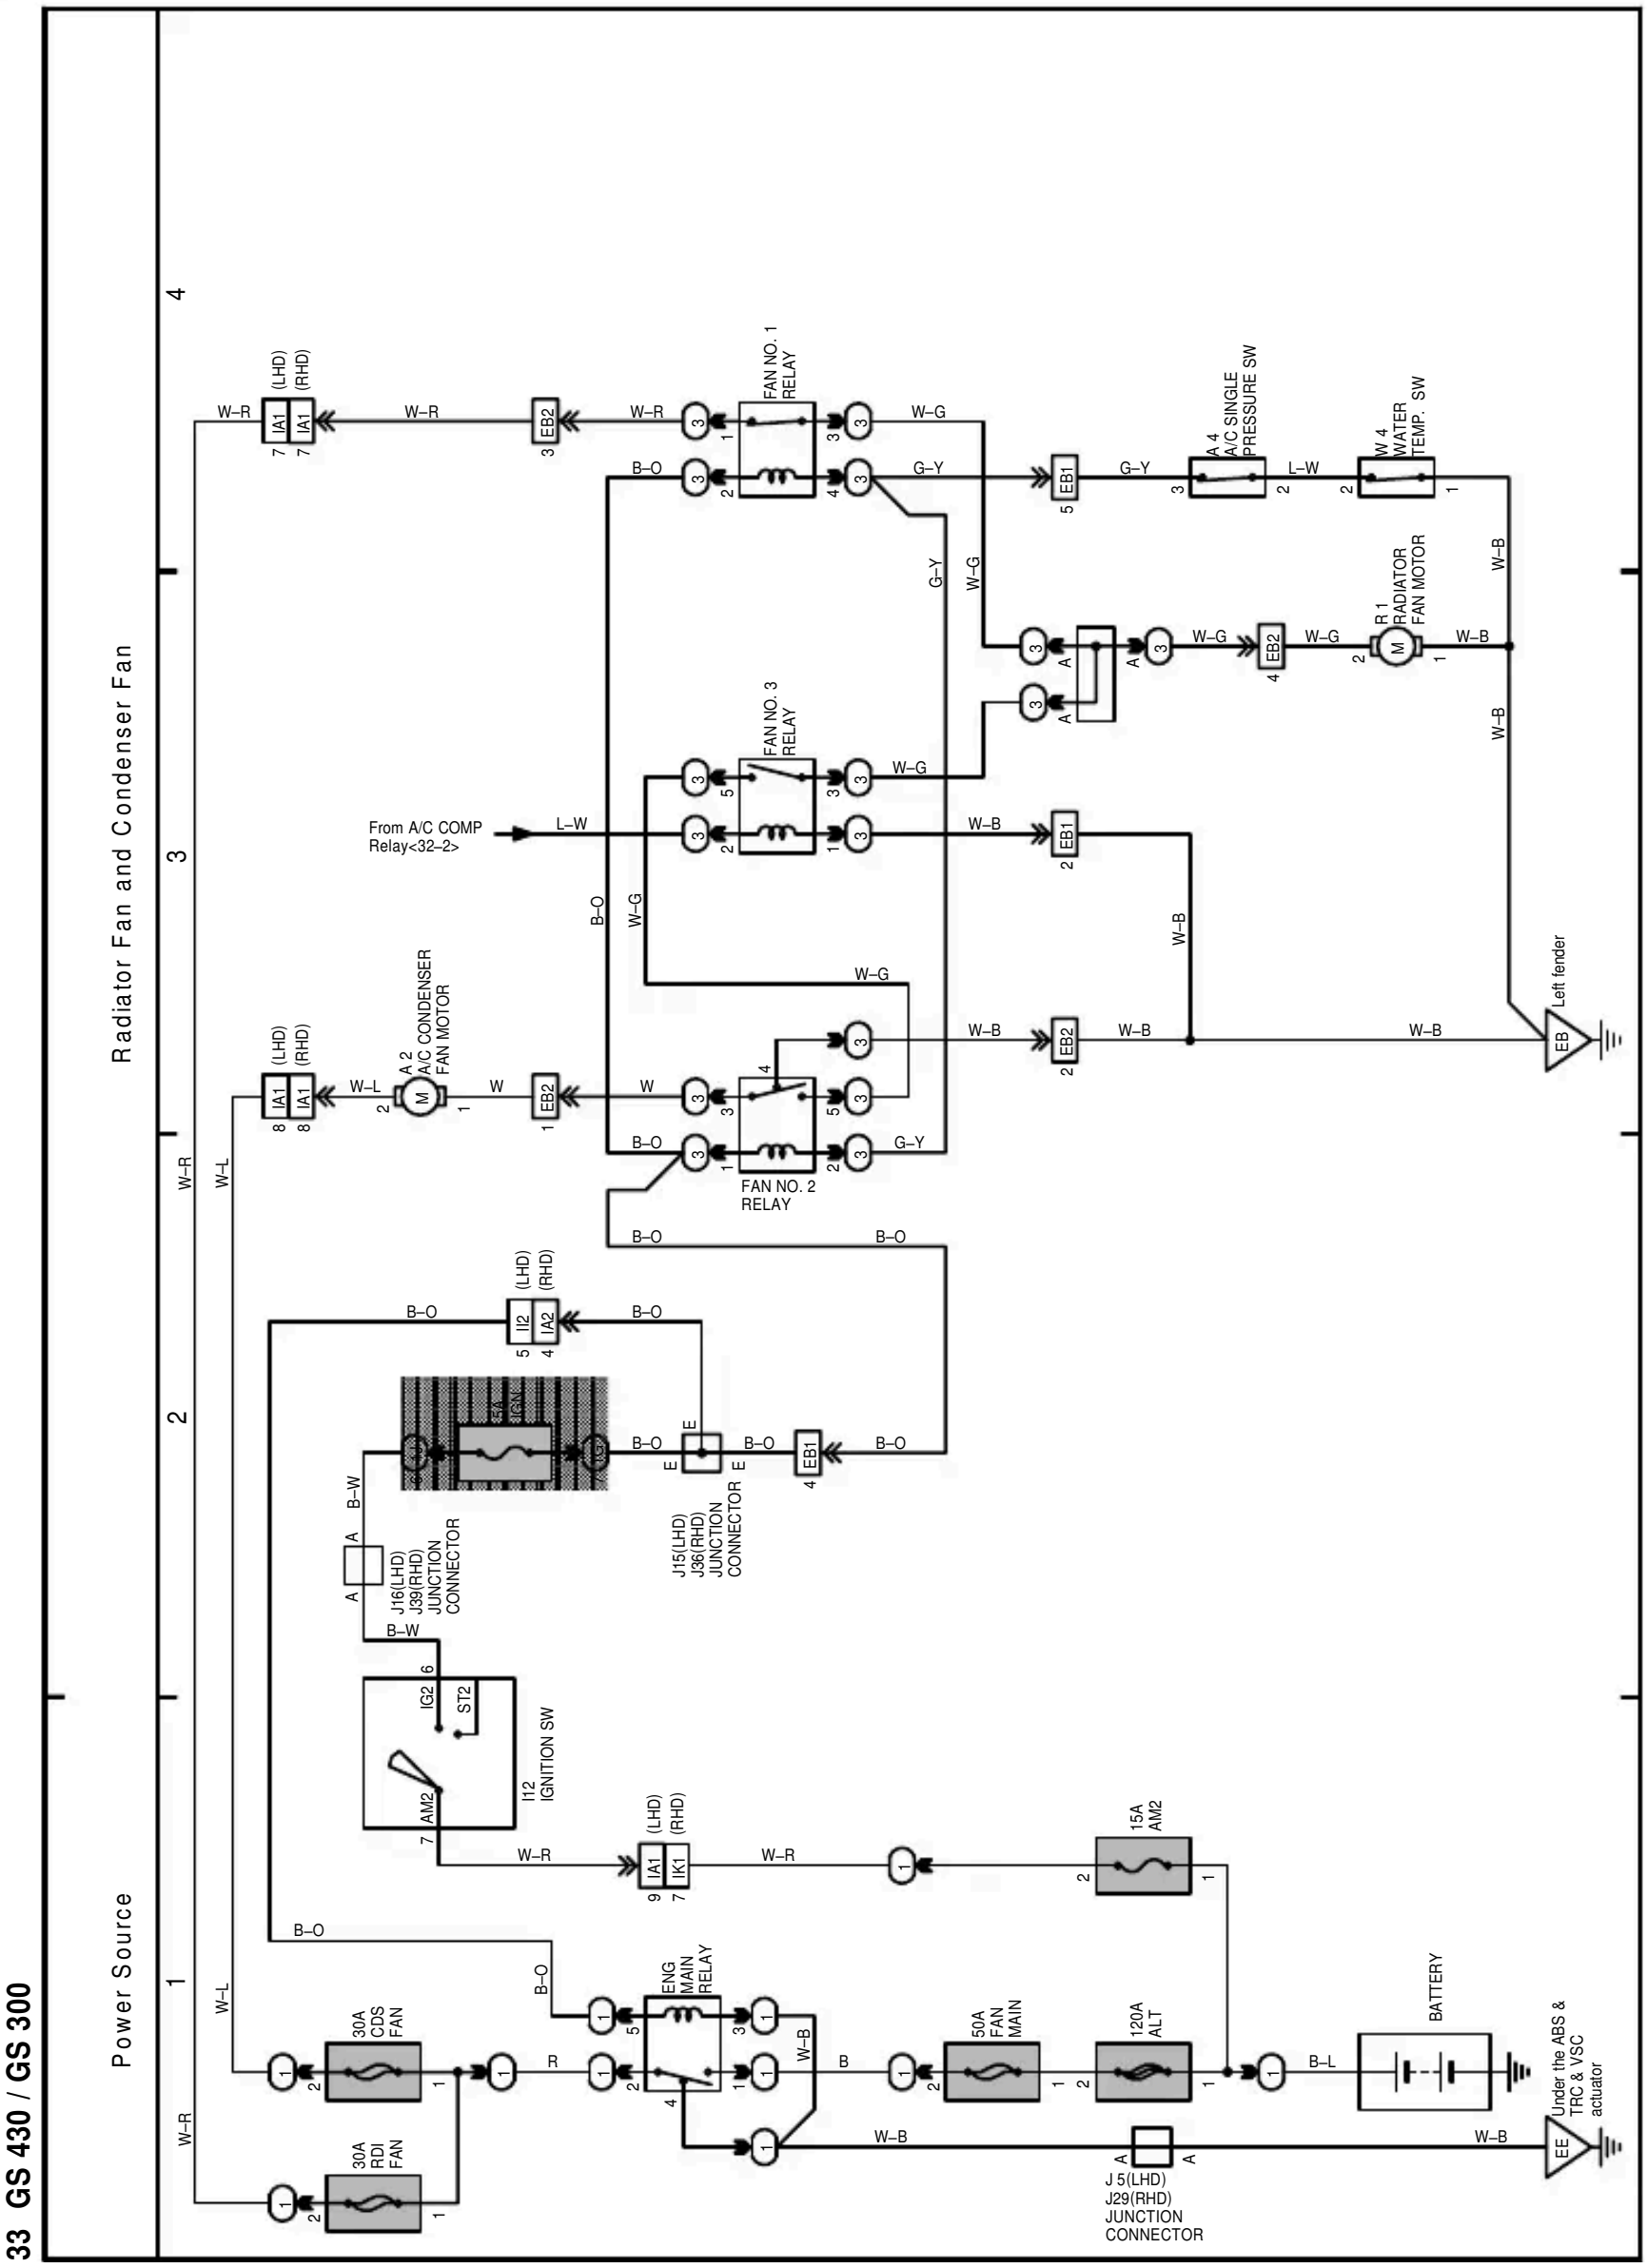

Starting and Ignition (3UZ–FE)

Power Source

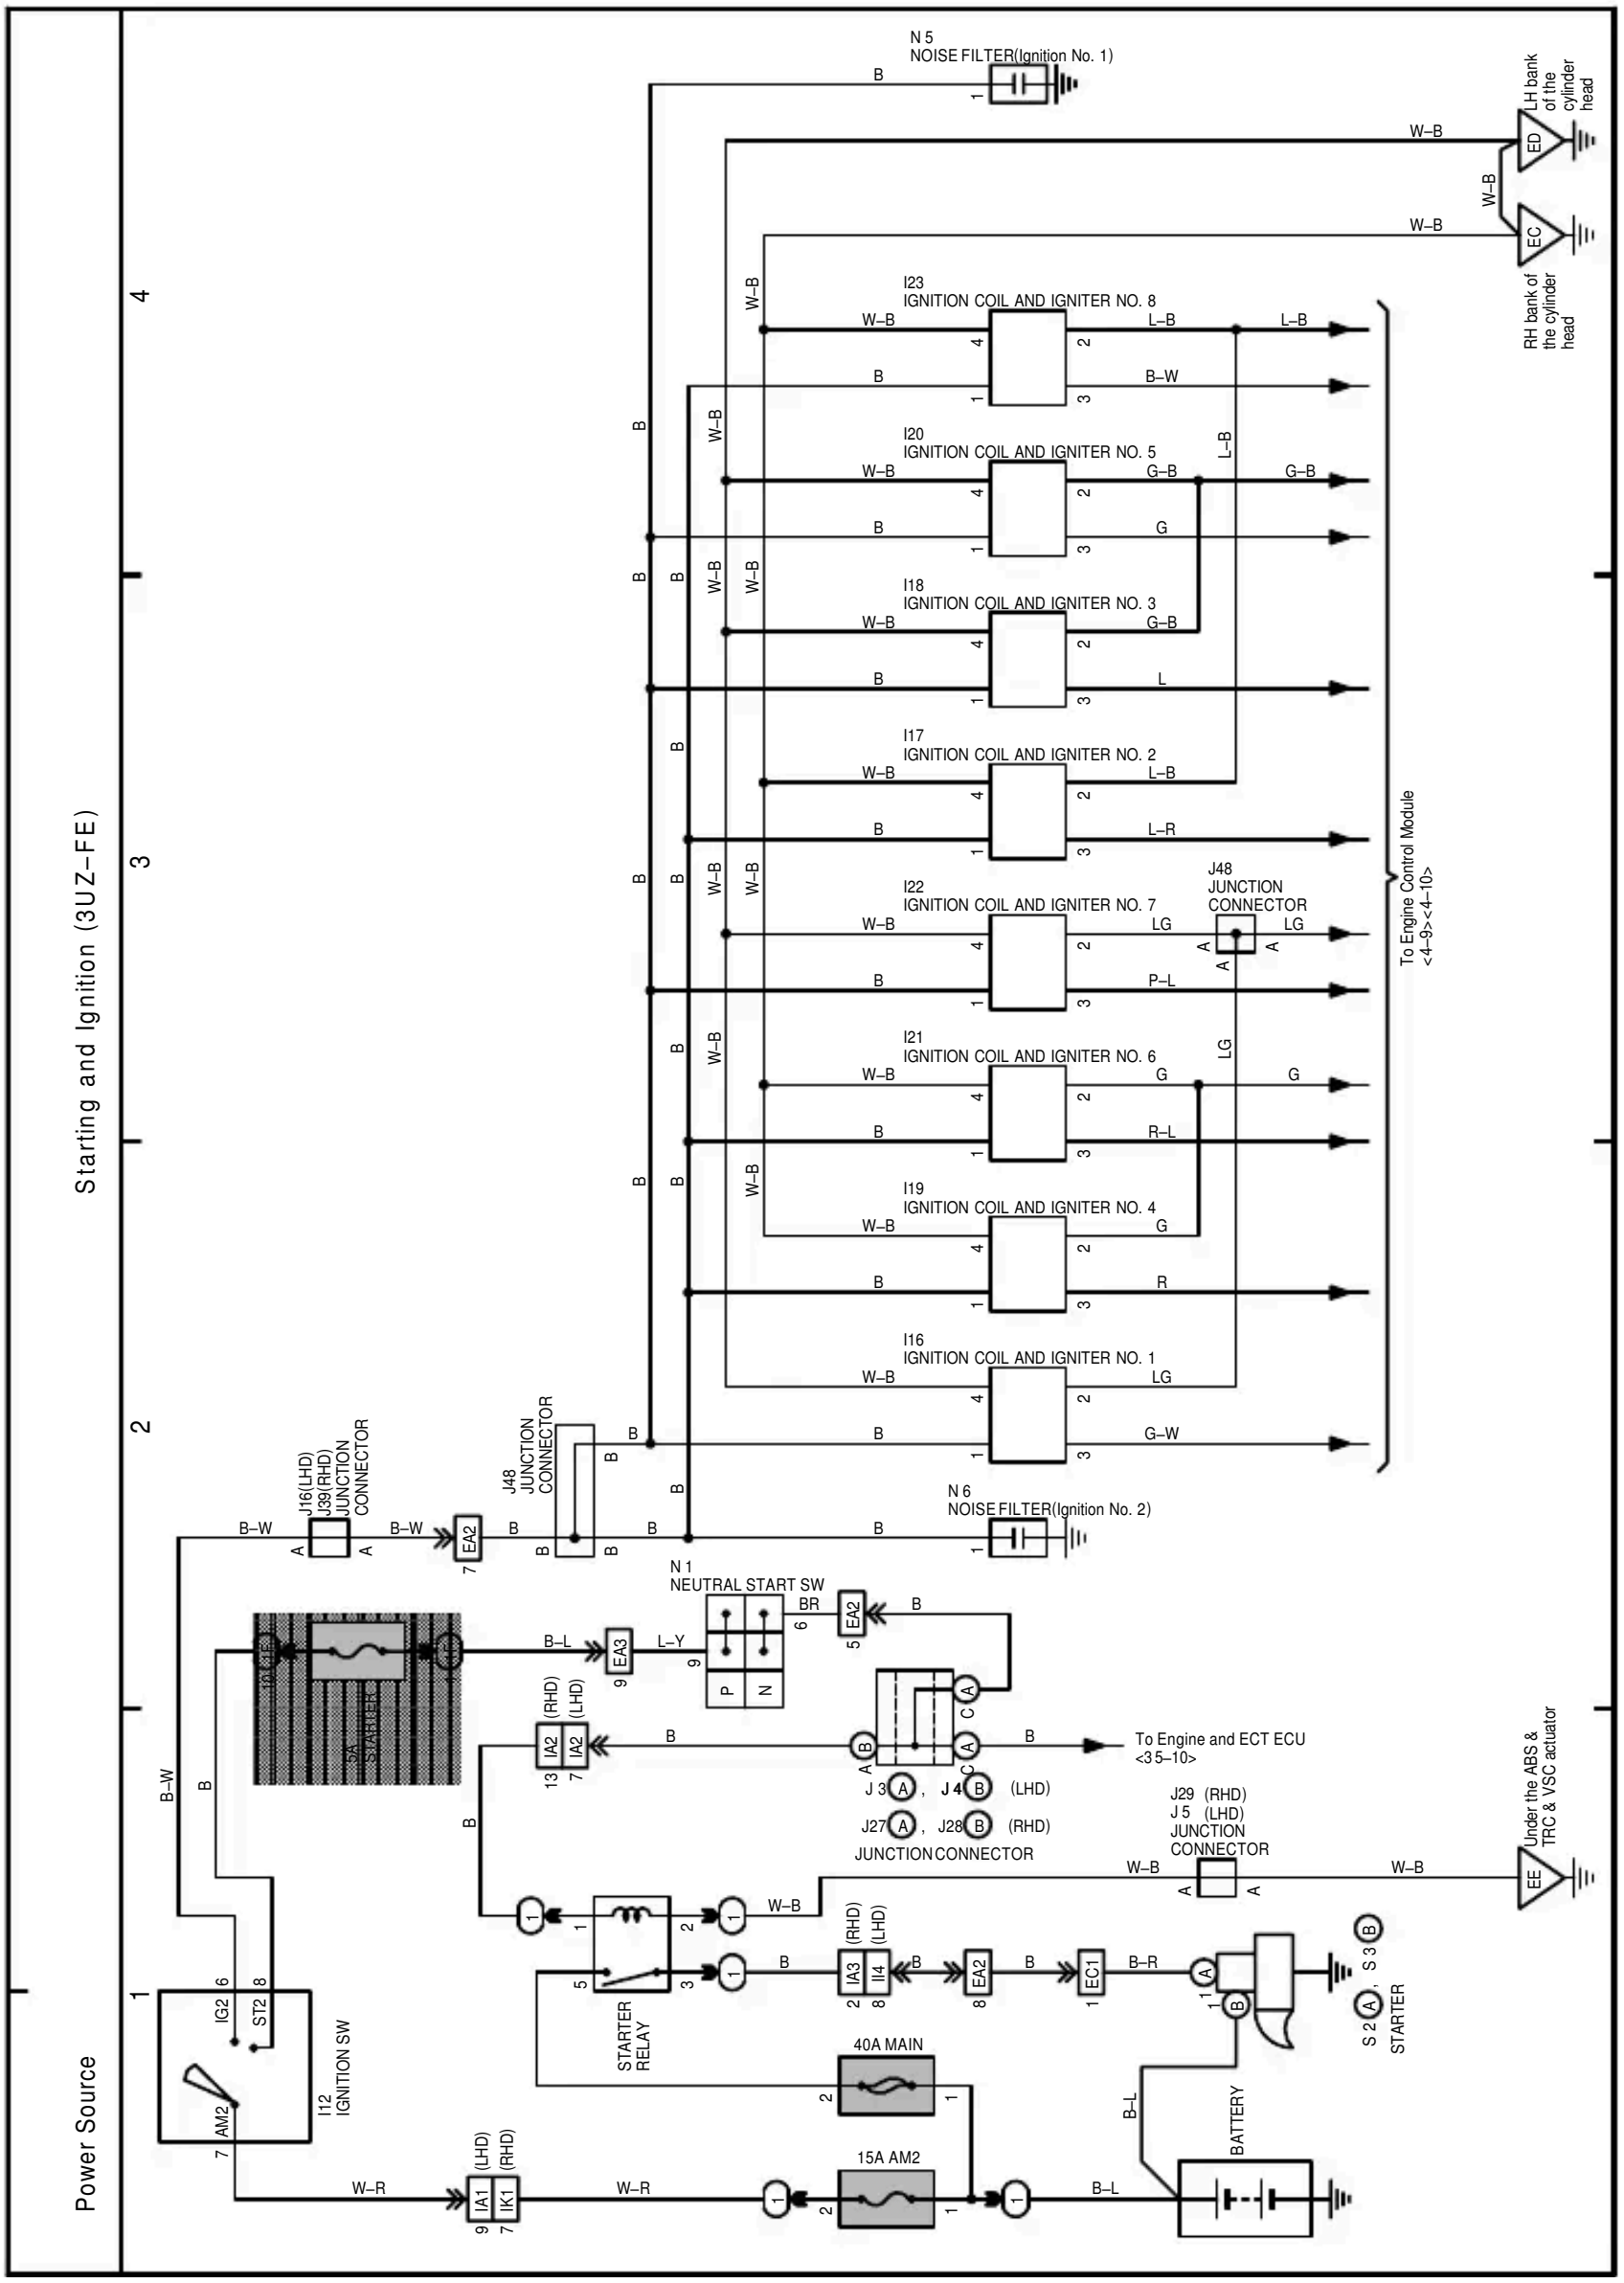

I OVERALL ELECTRICAL WIRING DIAGRAM

(Cont. next page)

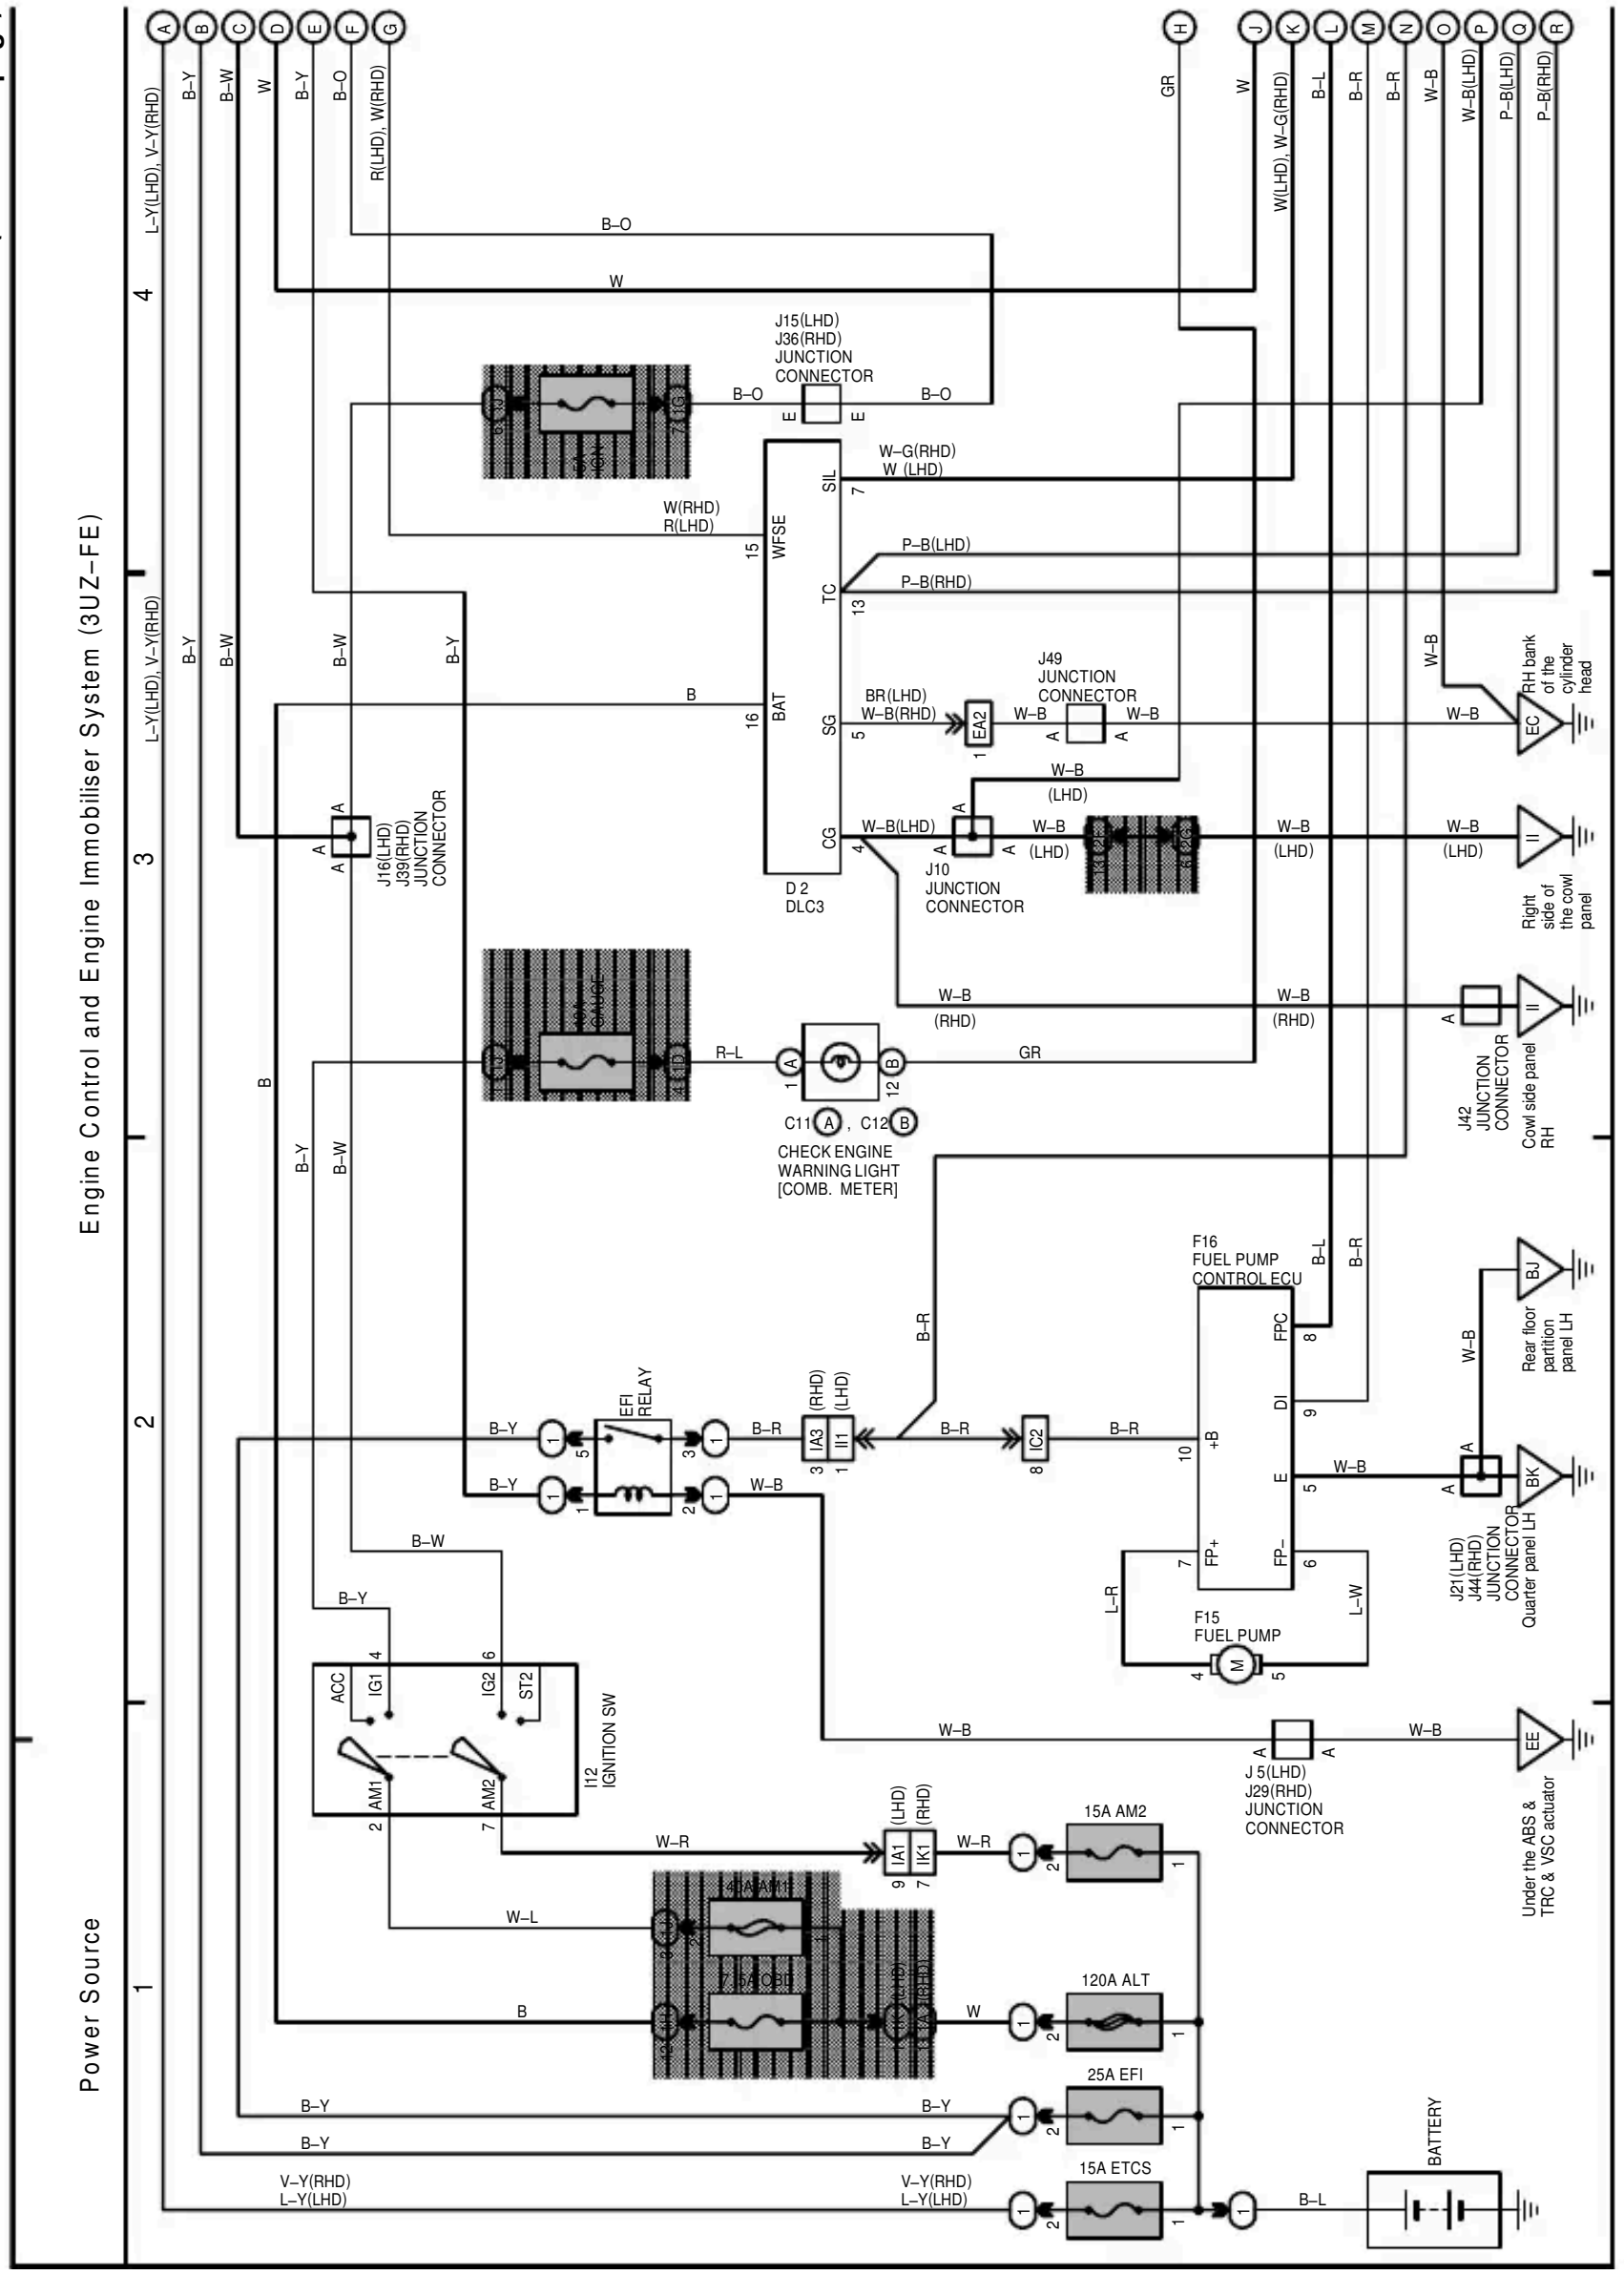
35 GS 430 / GS 300
Power Source
Engine Control and Engine Immobiliser System (3UZ–FE)
J15(LHD)
J36(RHD)
JUNCTION
CONNECTOR
J49
JUNCTION
CONNECTOR
J16(LHD)
J39(RHD)
JUNCTION
CONNECTOR
J10
JUNCTION
CONNECTOR
D 2
DLC3
C11 A , C12 B
CHECK ENGINE
WARNING LIGHT
[COMB. METER]
F16
FUEL PUMP
CONTROL ECU
F15
FUEL PUMP
EFI
RELAY
I12
IGNITION SW
J 5(LHD)
J29(RHD)
JUNCTION
CONNECTOR
J42
JUNCTION
CONNECTOR
Cowl side panel
RH
J21(LHD)
J44(RHD)
JUNCTION
CONNECTOR
Quarter panel LH
RH bank
of the
cylinder
head
Right
side of
the cowl
panel
Rear floor
partition
panel LH
Under the ABS &
TRC & VSC actuator
BATTERY
15A AM2
120A ALT
25A EFI
15A ETCS
L–Y(LHD), V–Y(RHD)
B–Y
B–W
W
B–Y
B–O
R(LHD), W(RHD)
GR
W
W(LHD), W–G(RHD)
B–L
B–R
B–R
W–B
W–B(LHD)
P–B(LHD)
P–B(RHD)
B–O
W
W–G(RHD)
W (LHD)
W(RHD)
R(LHD)
P–B(LHD)
P–B(RHD)
B
BR(LHD)
W–B(RHD)
W–B
W–B
(LHD)
W–B(LHD)
W–B
(LHD)
W–B
(RHD)
W–B
(RHD)
R–L
GR
B–Y
B–W
B–R
B–Y
B–R
B–R
B–R
B–Y
W–B
B–W
B–Y
W–L
B
W
B–Y
B–Y
B–Y
B–Y
V–Y(RHD)
L–Y(LHD)
V–Y(RHD)
L–Y(LHD)
B–L
W–B
W–B
W–R
W–R
L–R
L–W
B–L
B–R
W–B
W–B
W–B

(Cont. next page)

35 GS 430 / GS 300 (Cont' d)

Engine Control and Engine Immobiliser System (3UZ–FE)

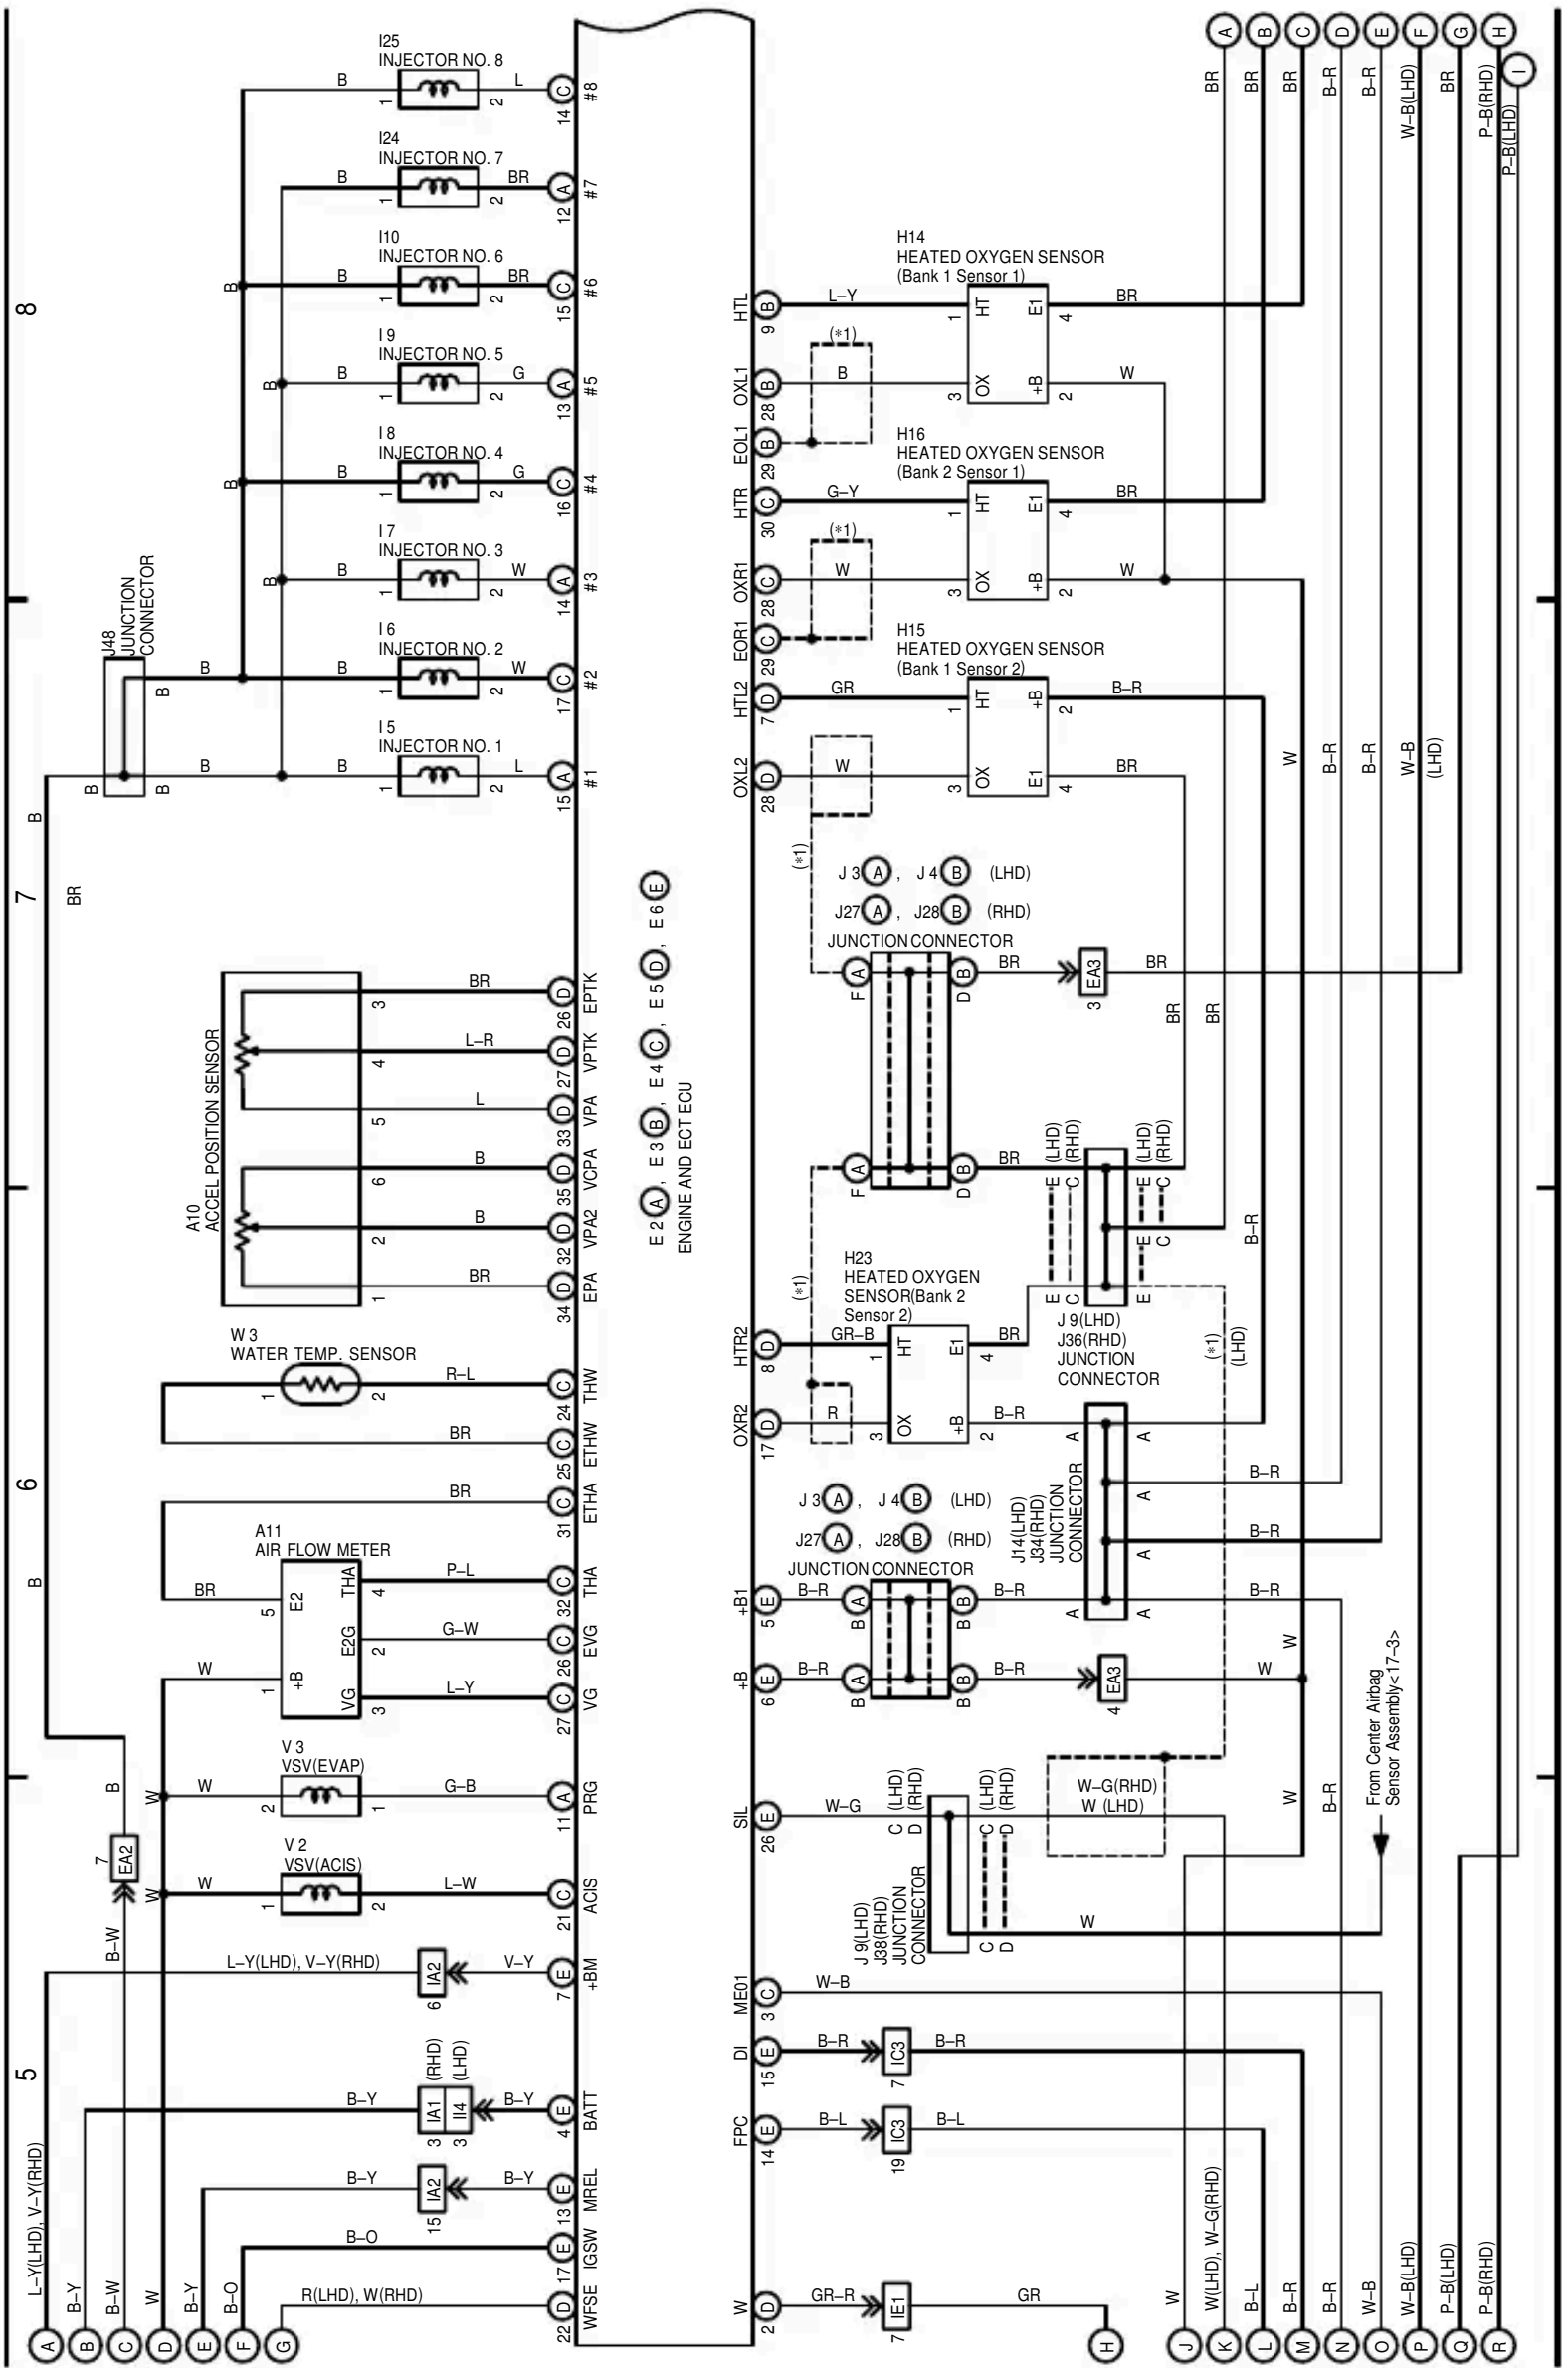

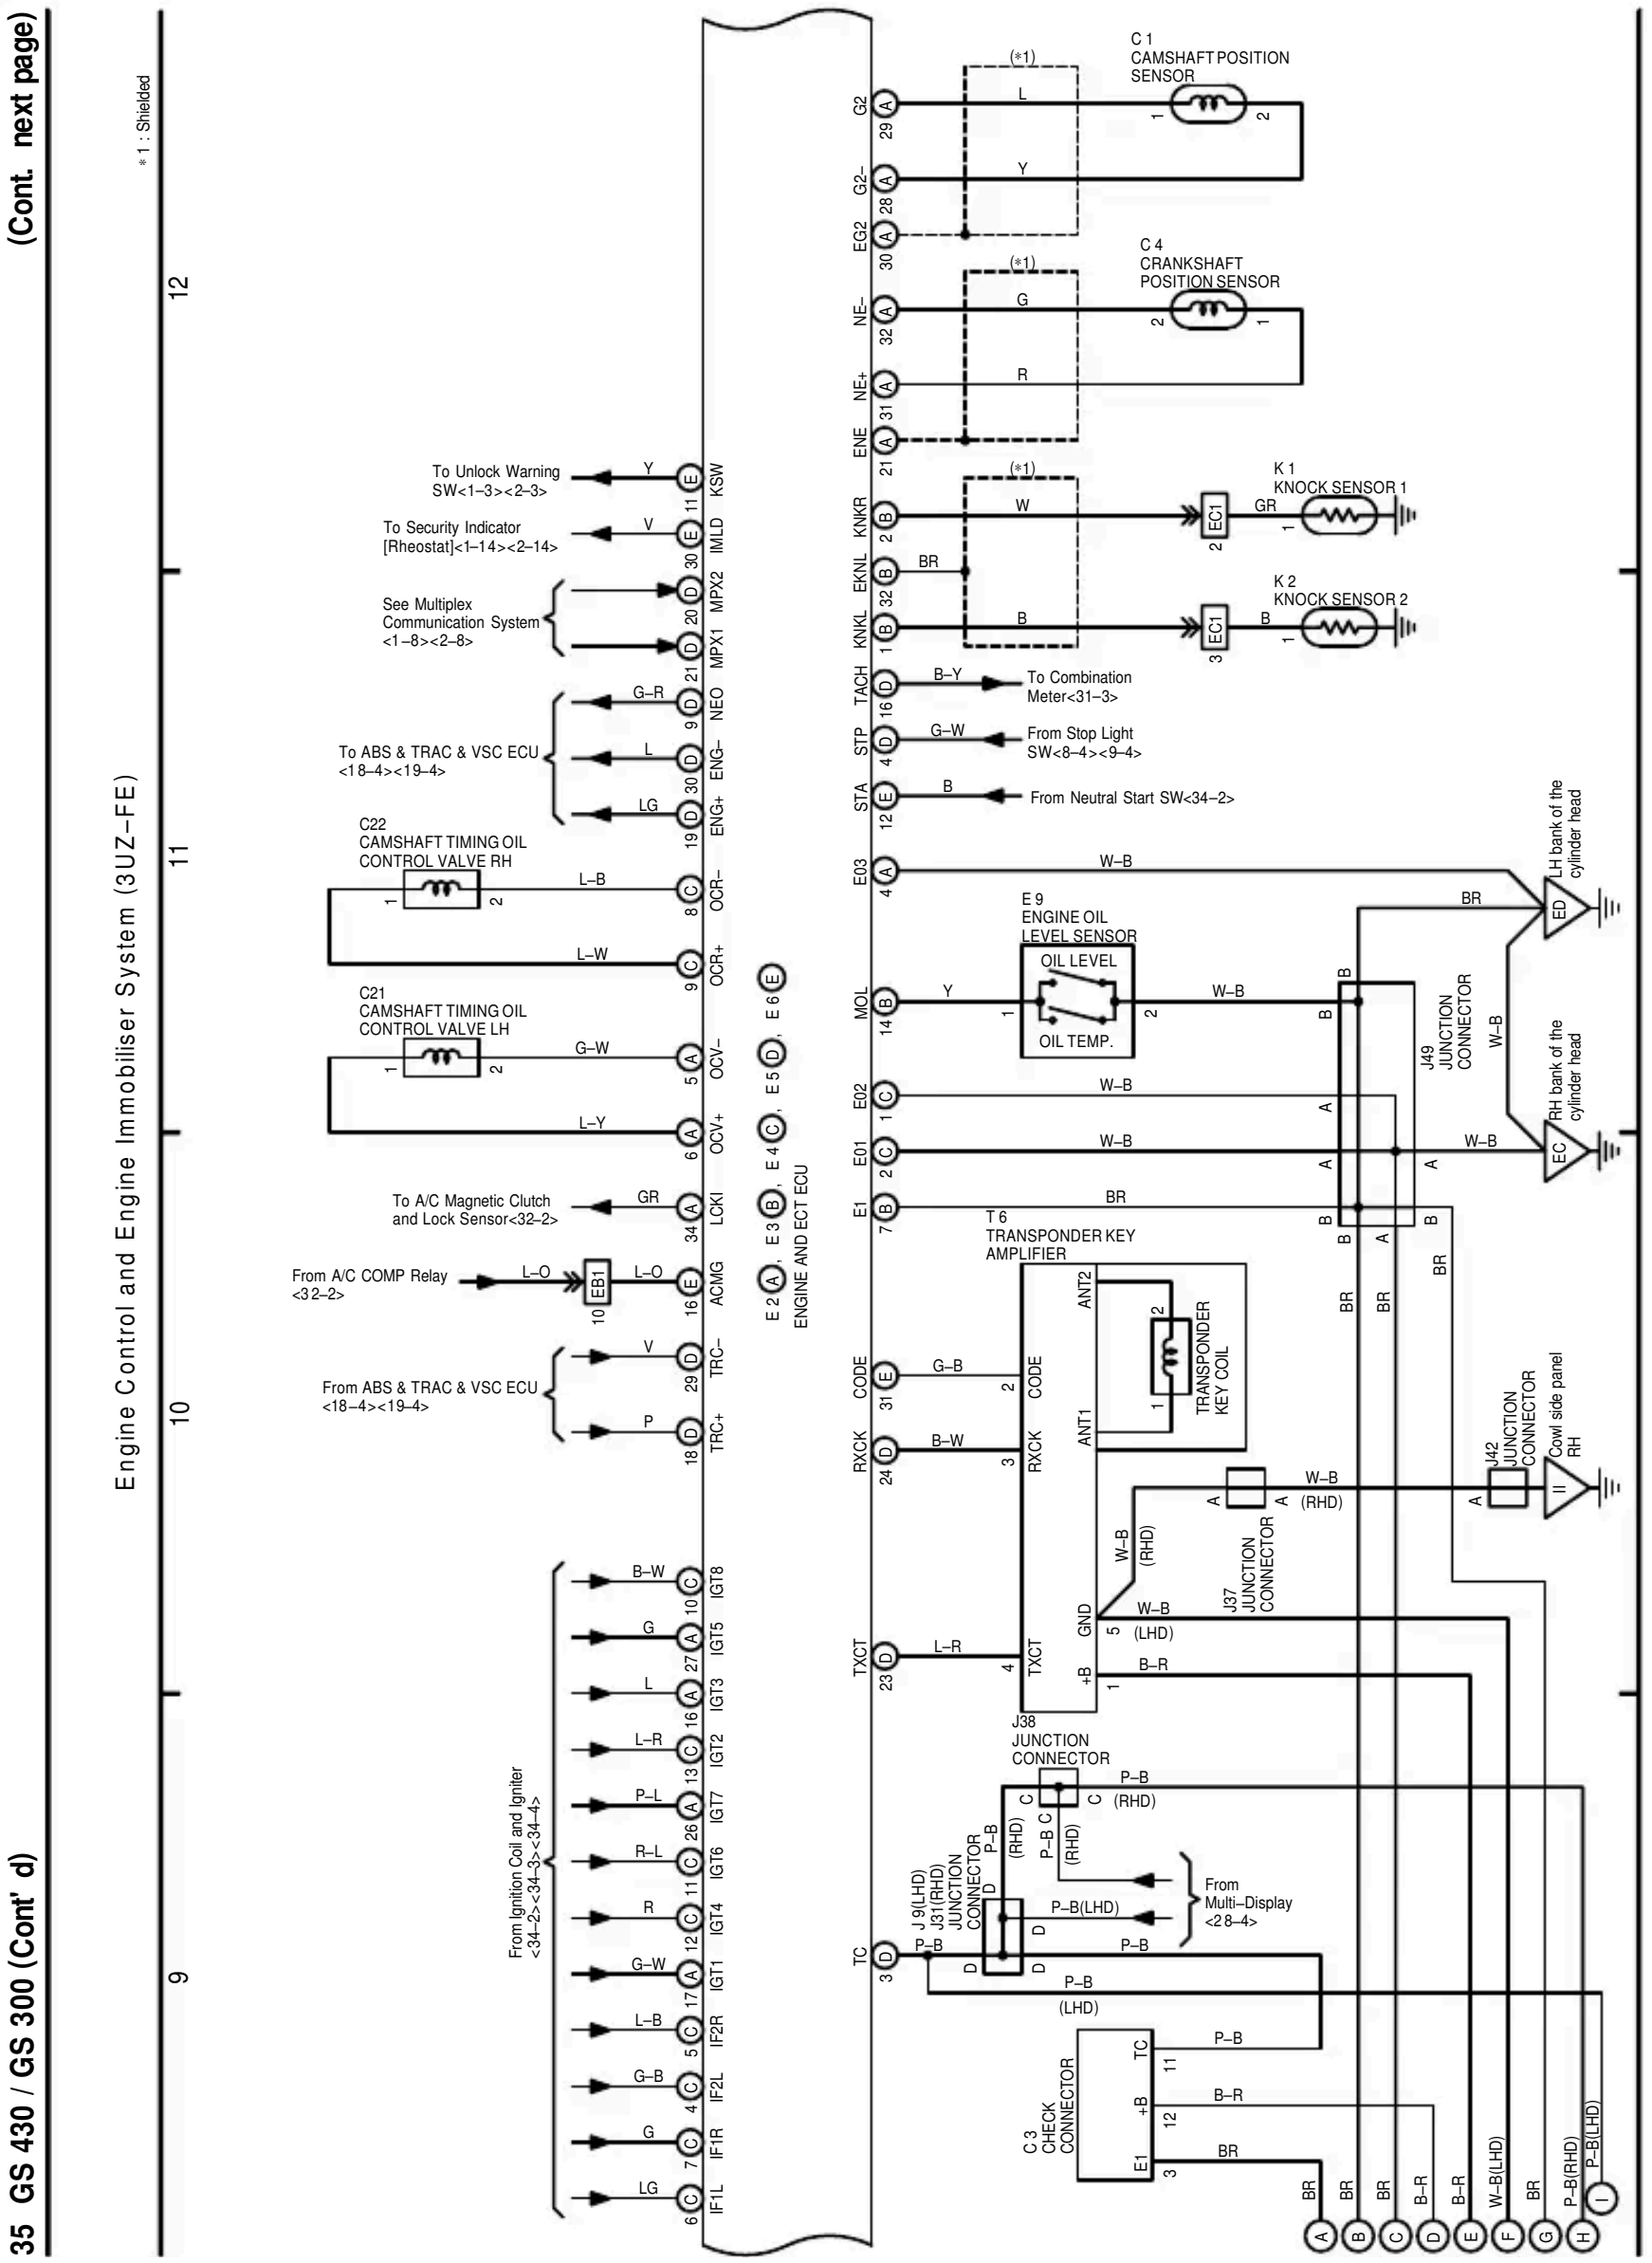
(Cont. next page)
35 GS 430 / GS 300 (Cont' d)
Engine Control and Engine Immobiliser System (3UZ–FE)
12
11
10
9
*1 : Shielded
C 1
CAMSHAFT POSITION SENSOR
C 4
CRANKSHAFT POSITION SENSOR
K 1
KNOCK SENSOR 1
K 2
KNOCK SENSOR 2
To Unlock Warning SW<1–3><2–3>
To Security Indicator [Rheostat]<1–14><2–14>
See Multiplex Communication System <1–8><2–8>
To ABS & TRAC & VSC ECU <18–4><19–4>
To Combination Meter<31–3>
From Stop Light SW<8–4><9–4>
From Neutral Start SW<34–2>
C22
CAMSHAFT TIMING OIL CONTROL VALVE RH
C21
CAMSHAFT TIMING OIL CONTROL VALVE LH
To A/C Magnetic Clutch and Lock Sensor<32–2>
From A/C COMP Relay <32–2>
From ABS & TRAC & VSC ECU <18–4><19–4>
From Ignition Coil and Igniter <34–2><34–3><34–4>
E 9
ENGINE OIL LEVEL SENSOR
OIL LEVEL
OIL TEMP.
J49 JUNCTION CONNECTOR
LH bank of the cylinder head
RH bank of the cylinder head
T 6
TRANSPONDER KEY AMPLIFIER
TRANSPONDER KEY COIL
J42 JUNCTION CONNECTOR
Cowl side panel RH
J37 JUNCTION CONNECTOR
J38 JUNCTION CONNECTOR
J 9(LHD) J31(RHD) JUNCTION CONNECTOR
From Multi–Display <28–4>
C 3 CHECK CONNECTOR
E 2, E 3, E 4, E 5, E 6
ENGINE AND ECT ECU

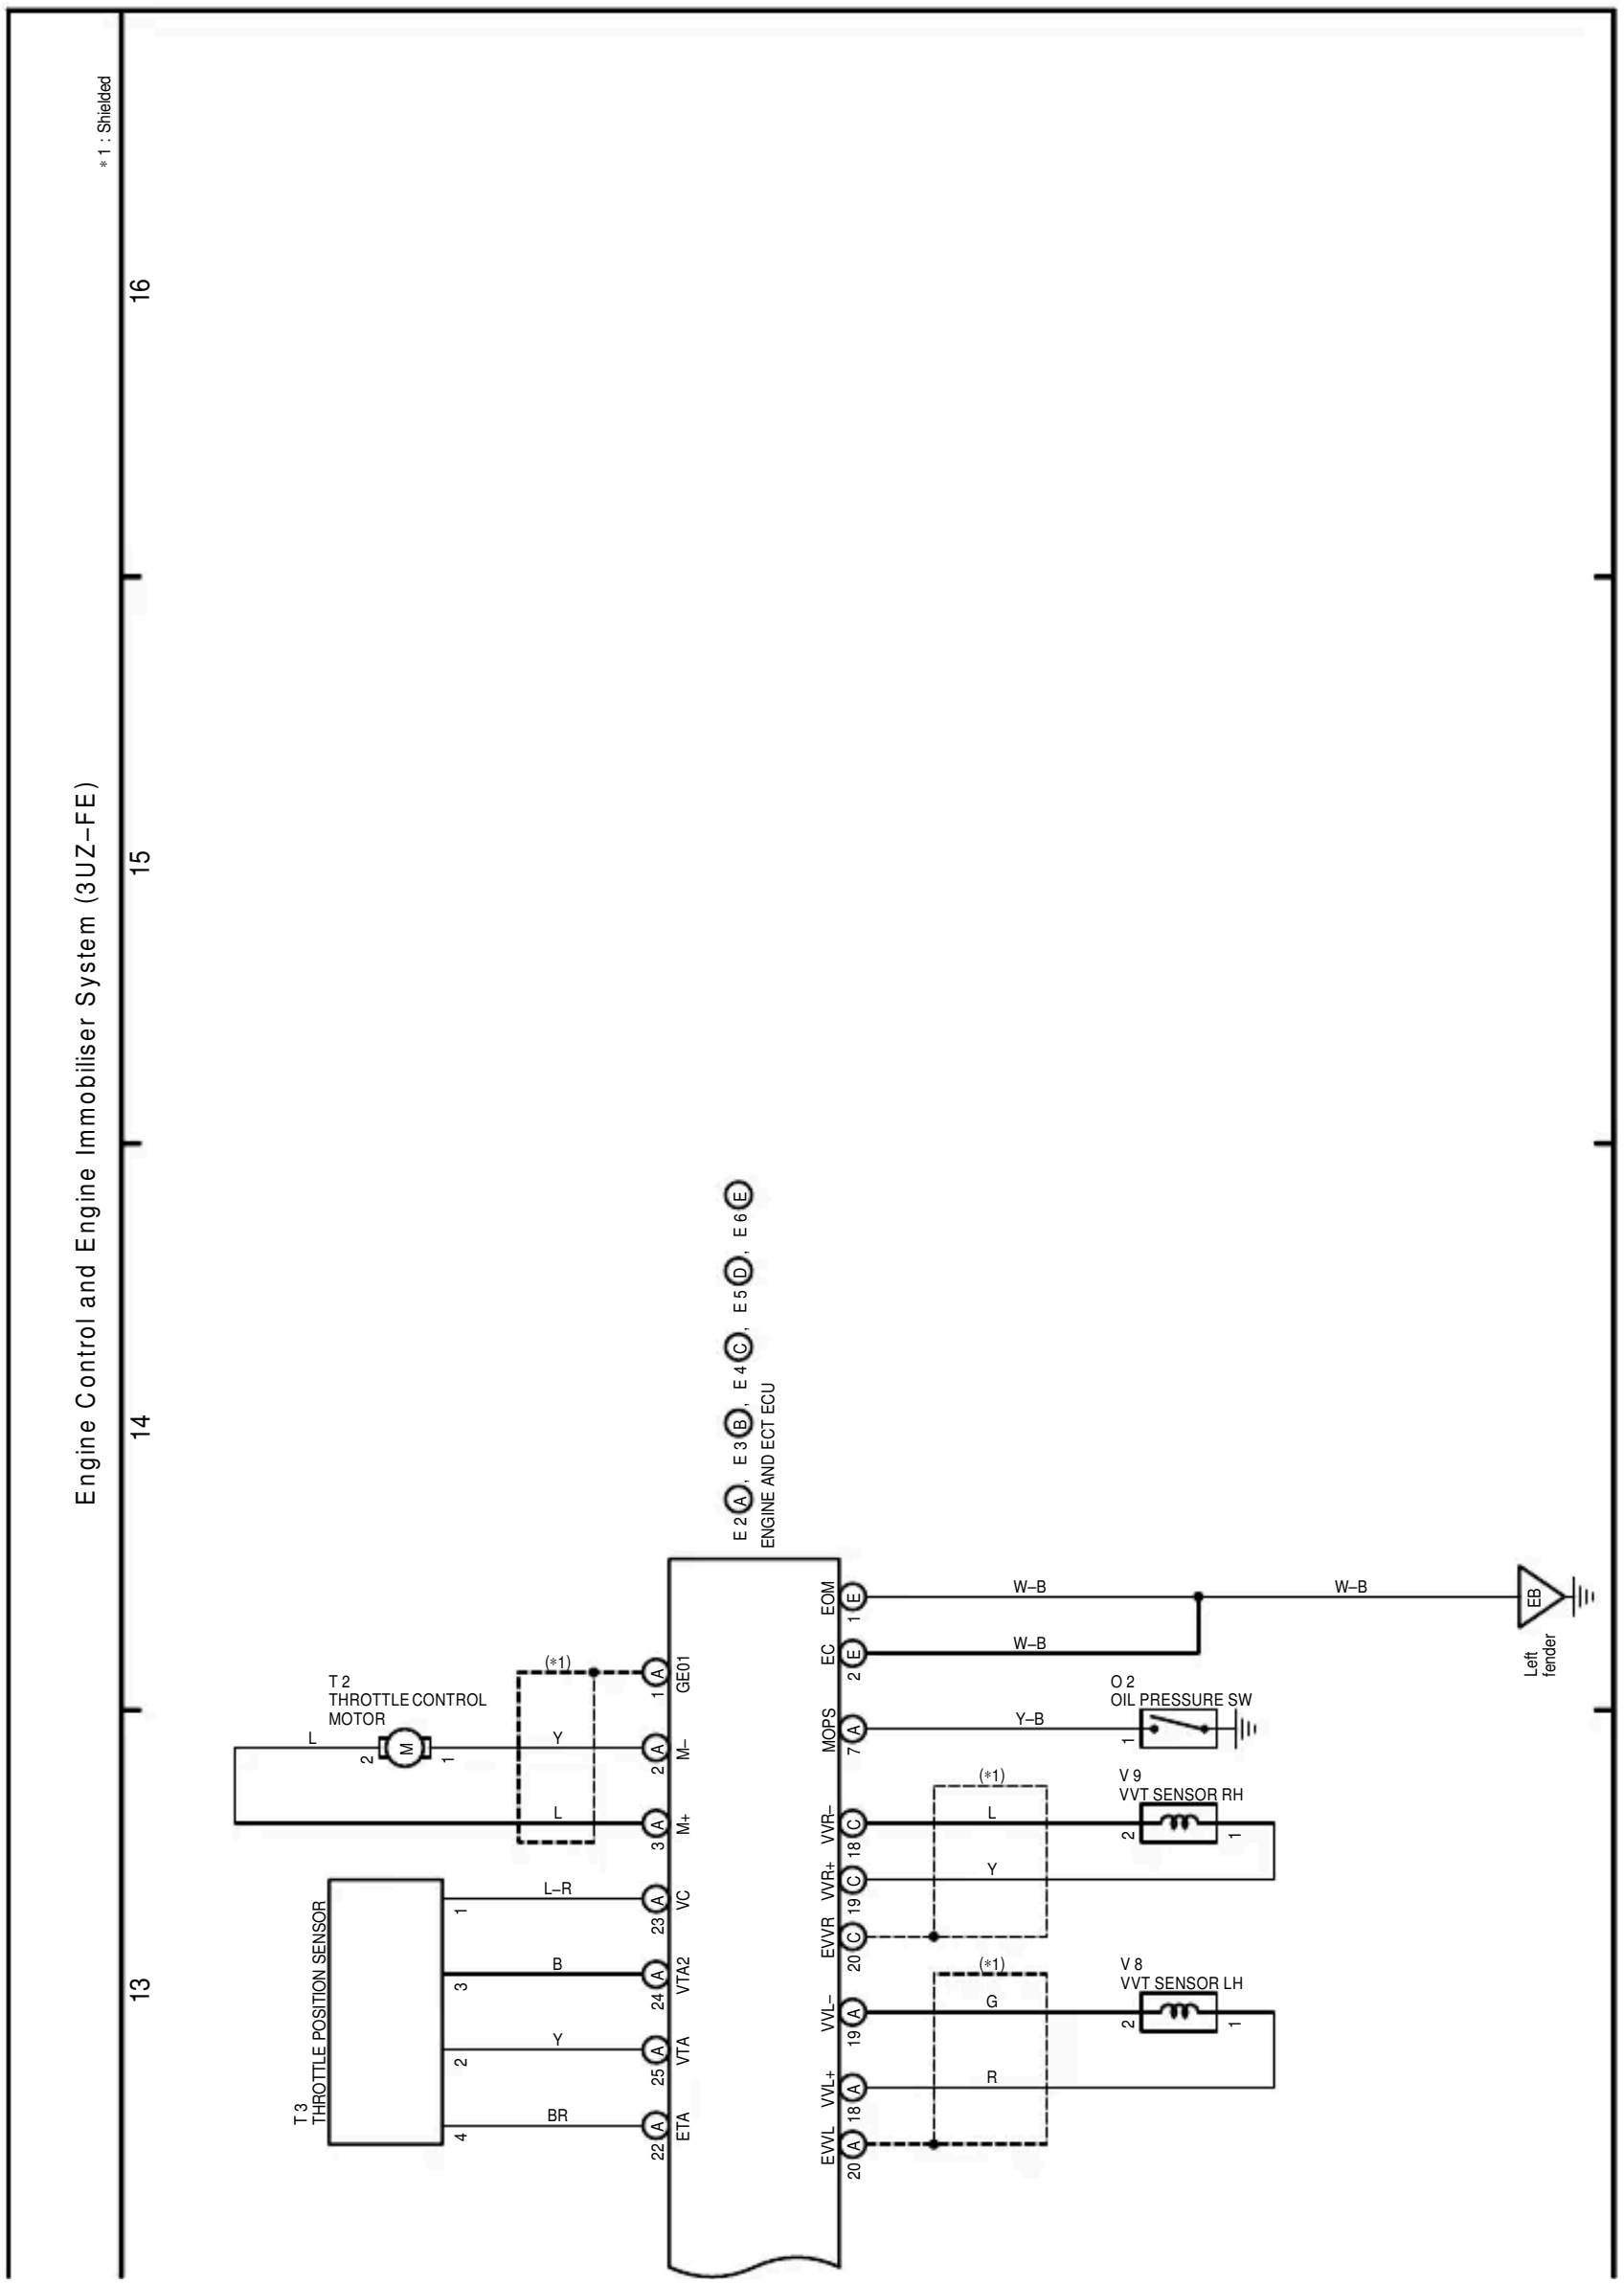
Engine Control and Engine Immobiliser System (3UZ–FE)
13
14
15
16
*1 : Shielded
E 2 (A), E 3 (B), E 4 (C), E 5 (D), E 6 (E)
ENGINE AND ECT ECU
T 2
THROTTLE CONTROL MOTOR
T 3
THROTTLE POSITION SENSOR
(*1)
GE01
M–
M+
VC
VTA2
VTA
ETA
EOM
EC
MOPS
VVR–
VVR+
EVVR
VVL–
VVL+
EVVL
W–B
Y–B
L
Y
L–R
B
BR
G
R
O 2
OIL PRESSURE SW
V 9
VVT SENSOR RH
V 8
VVT SENSOR LH
EB
Left fender

(Cont. next page)

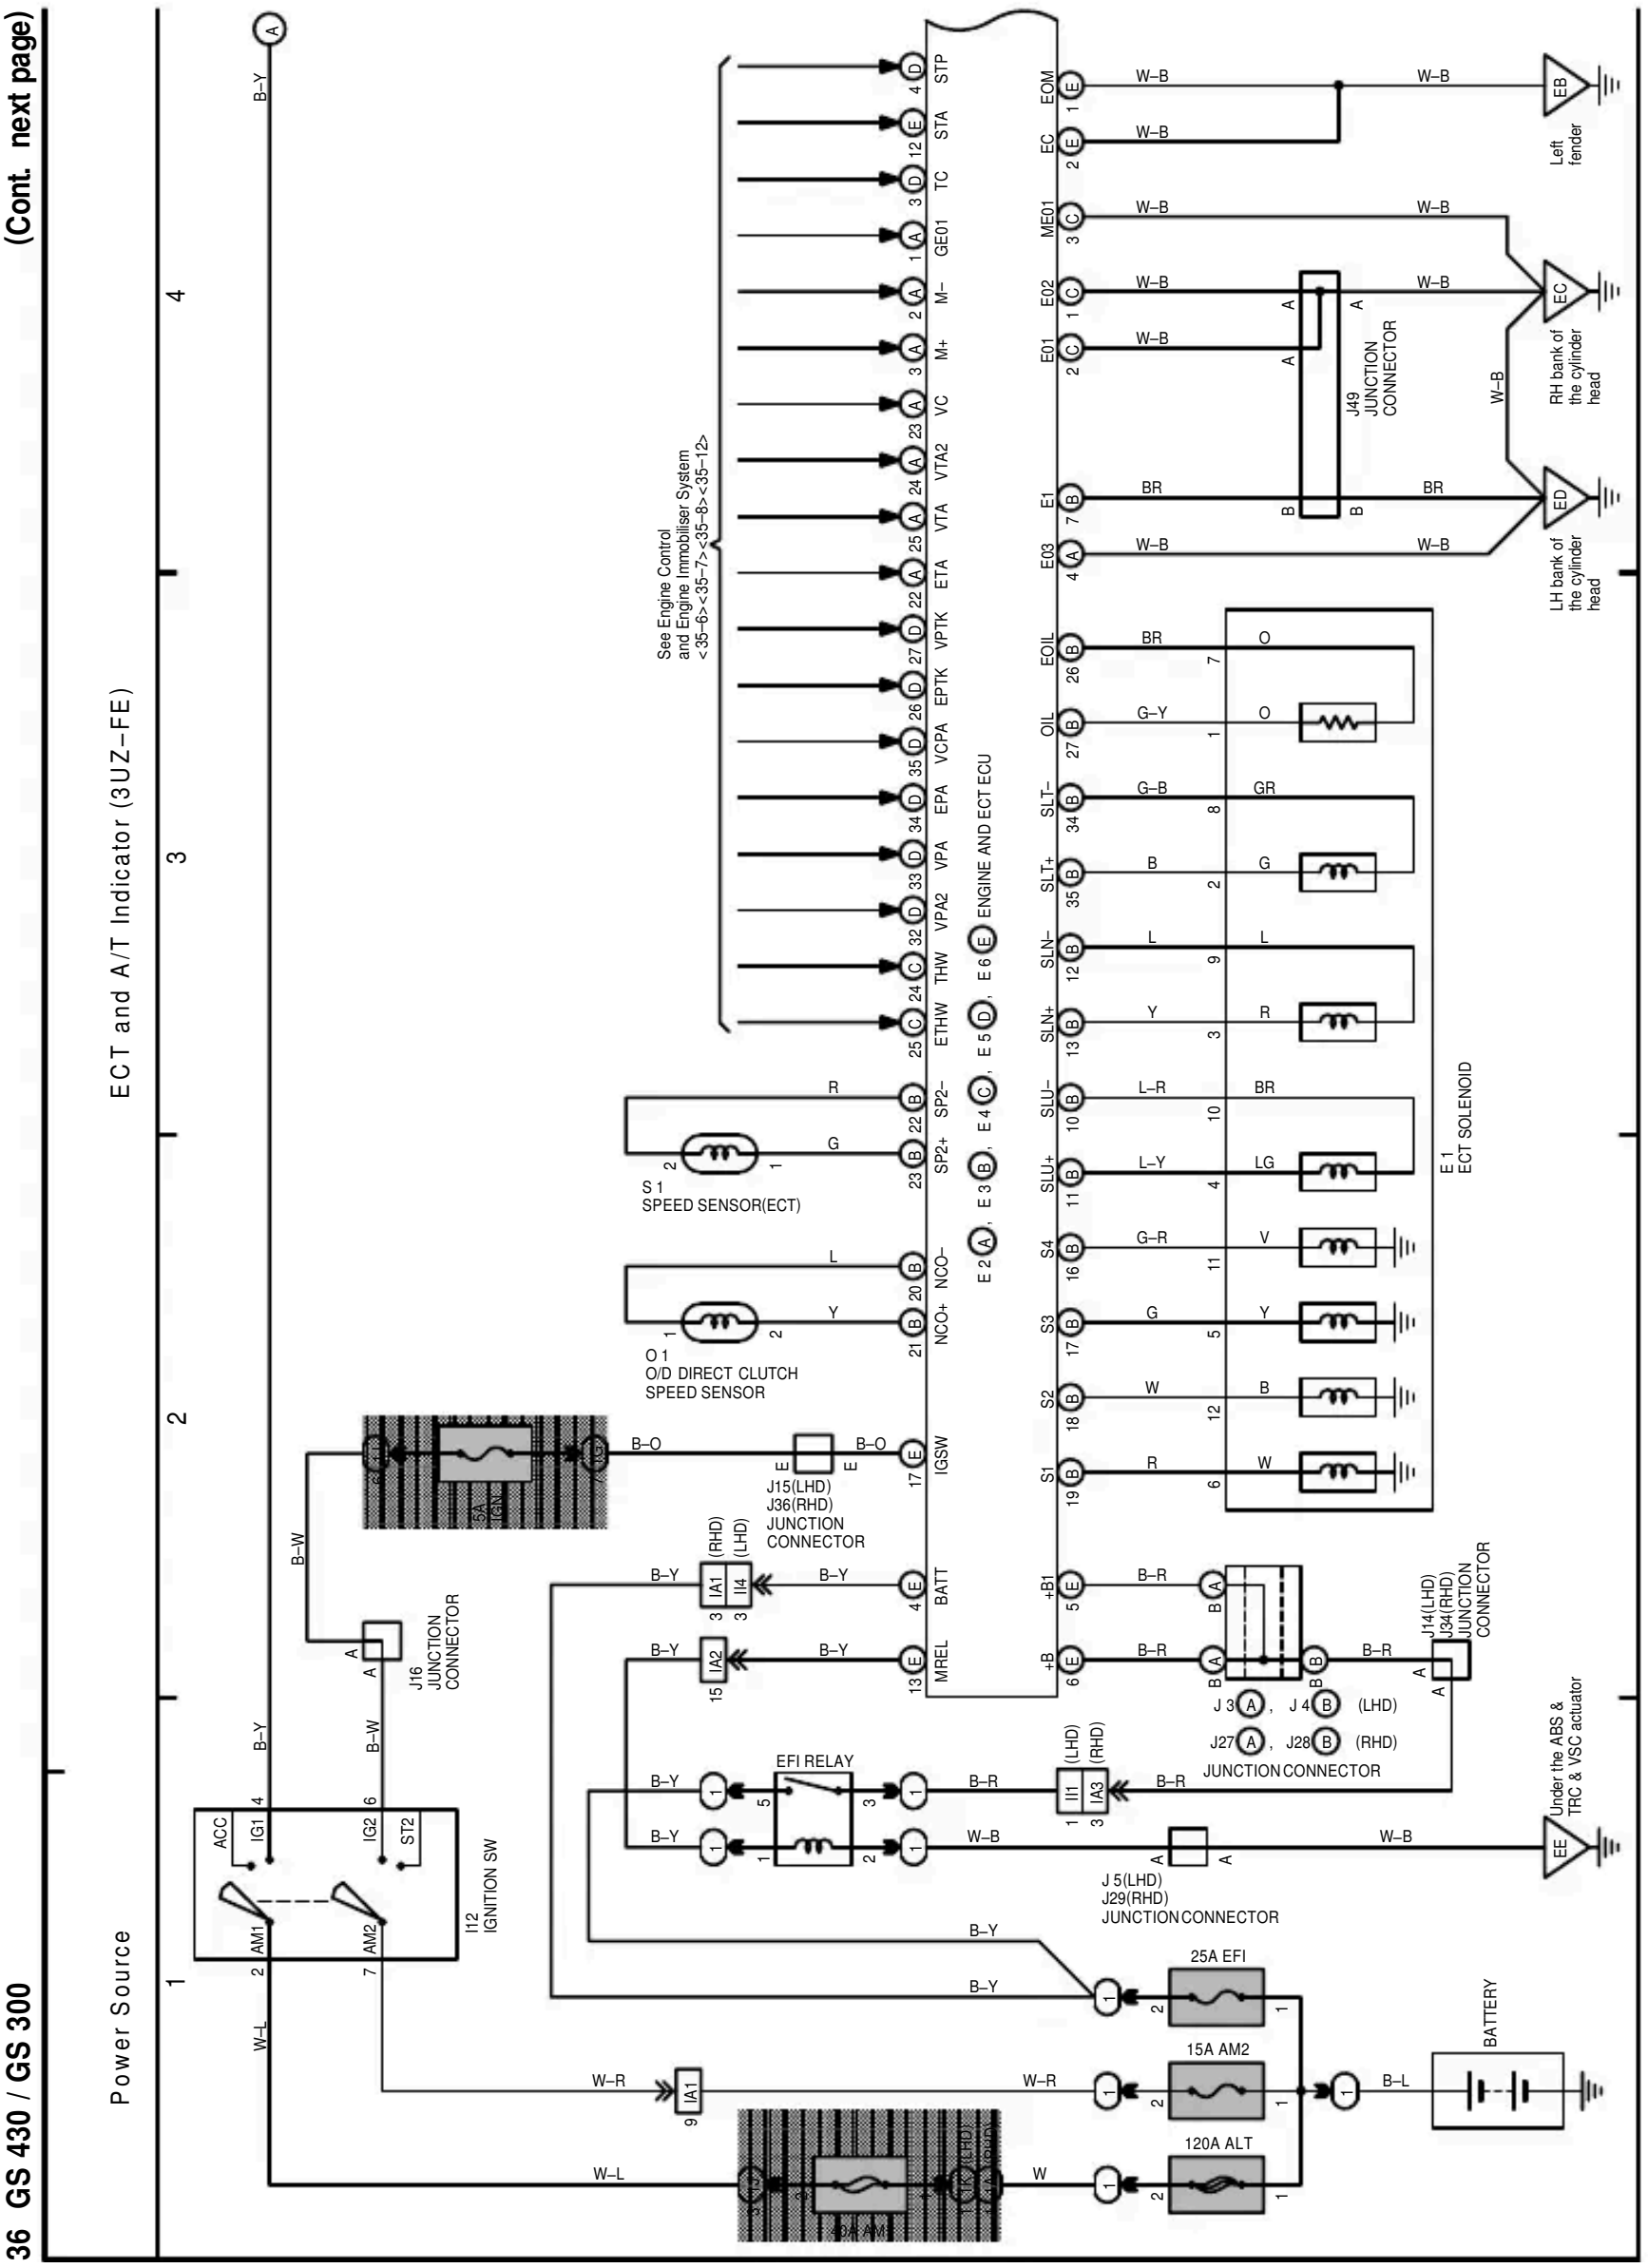

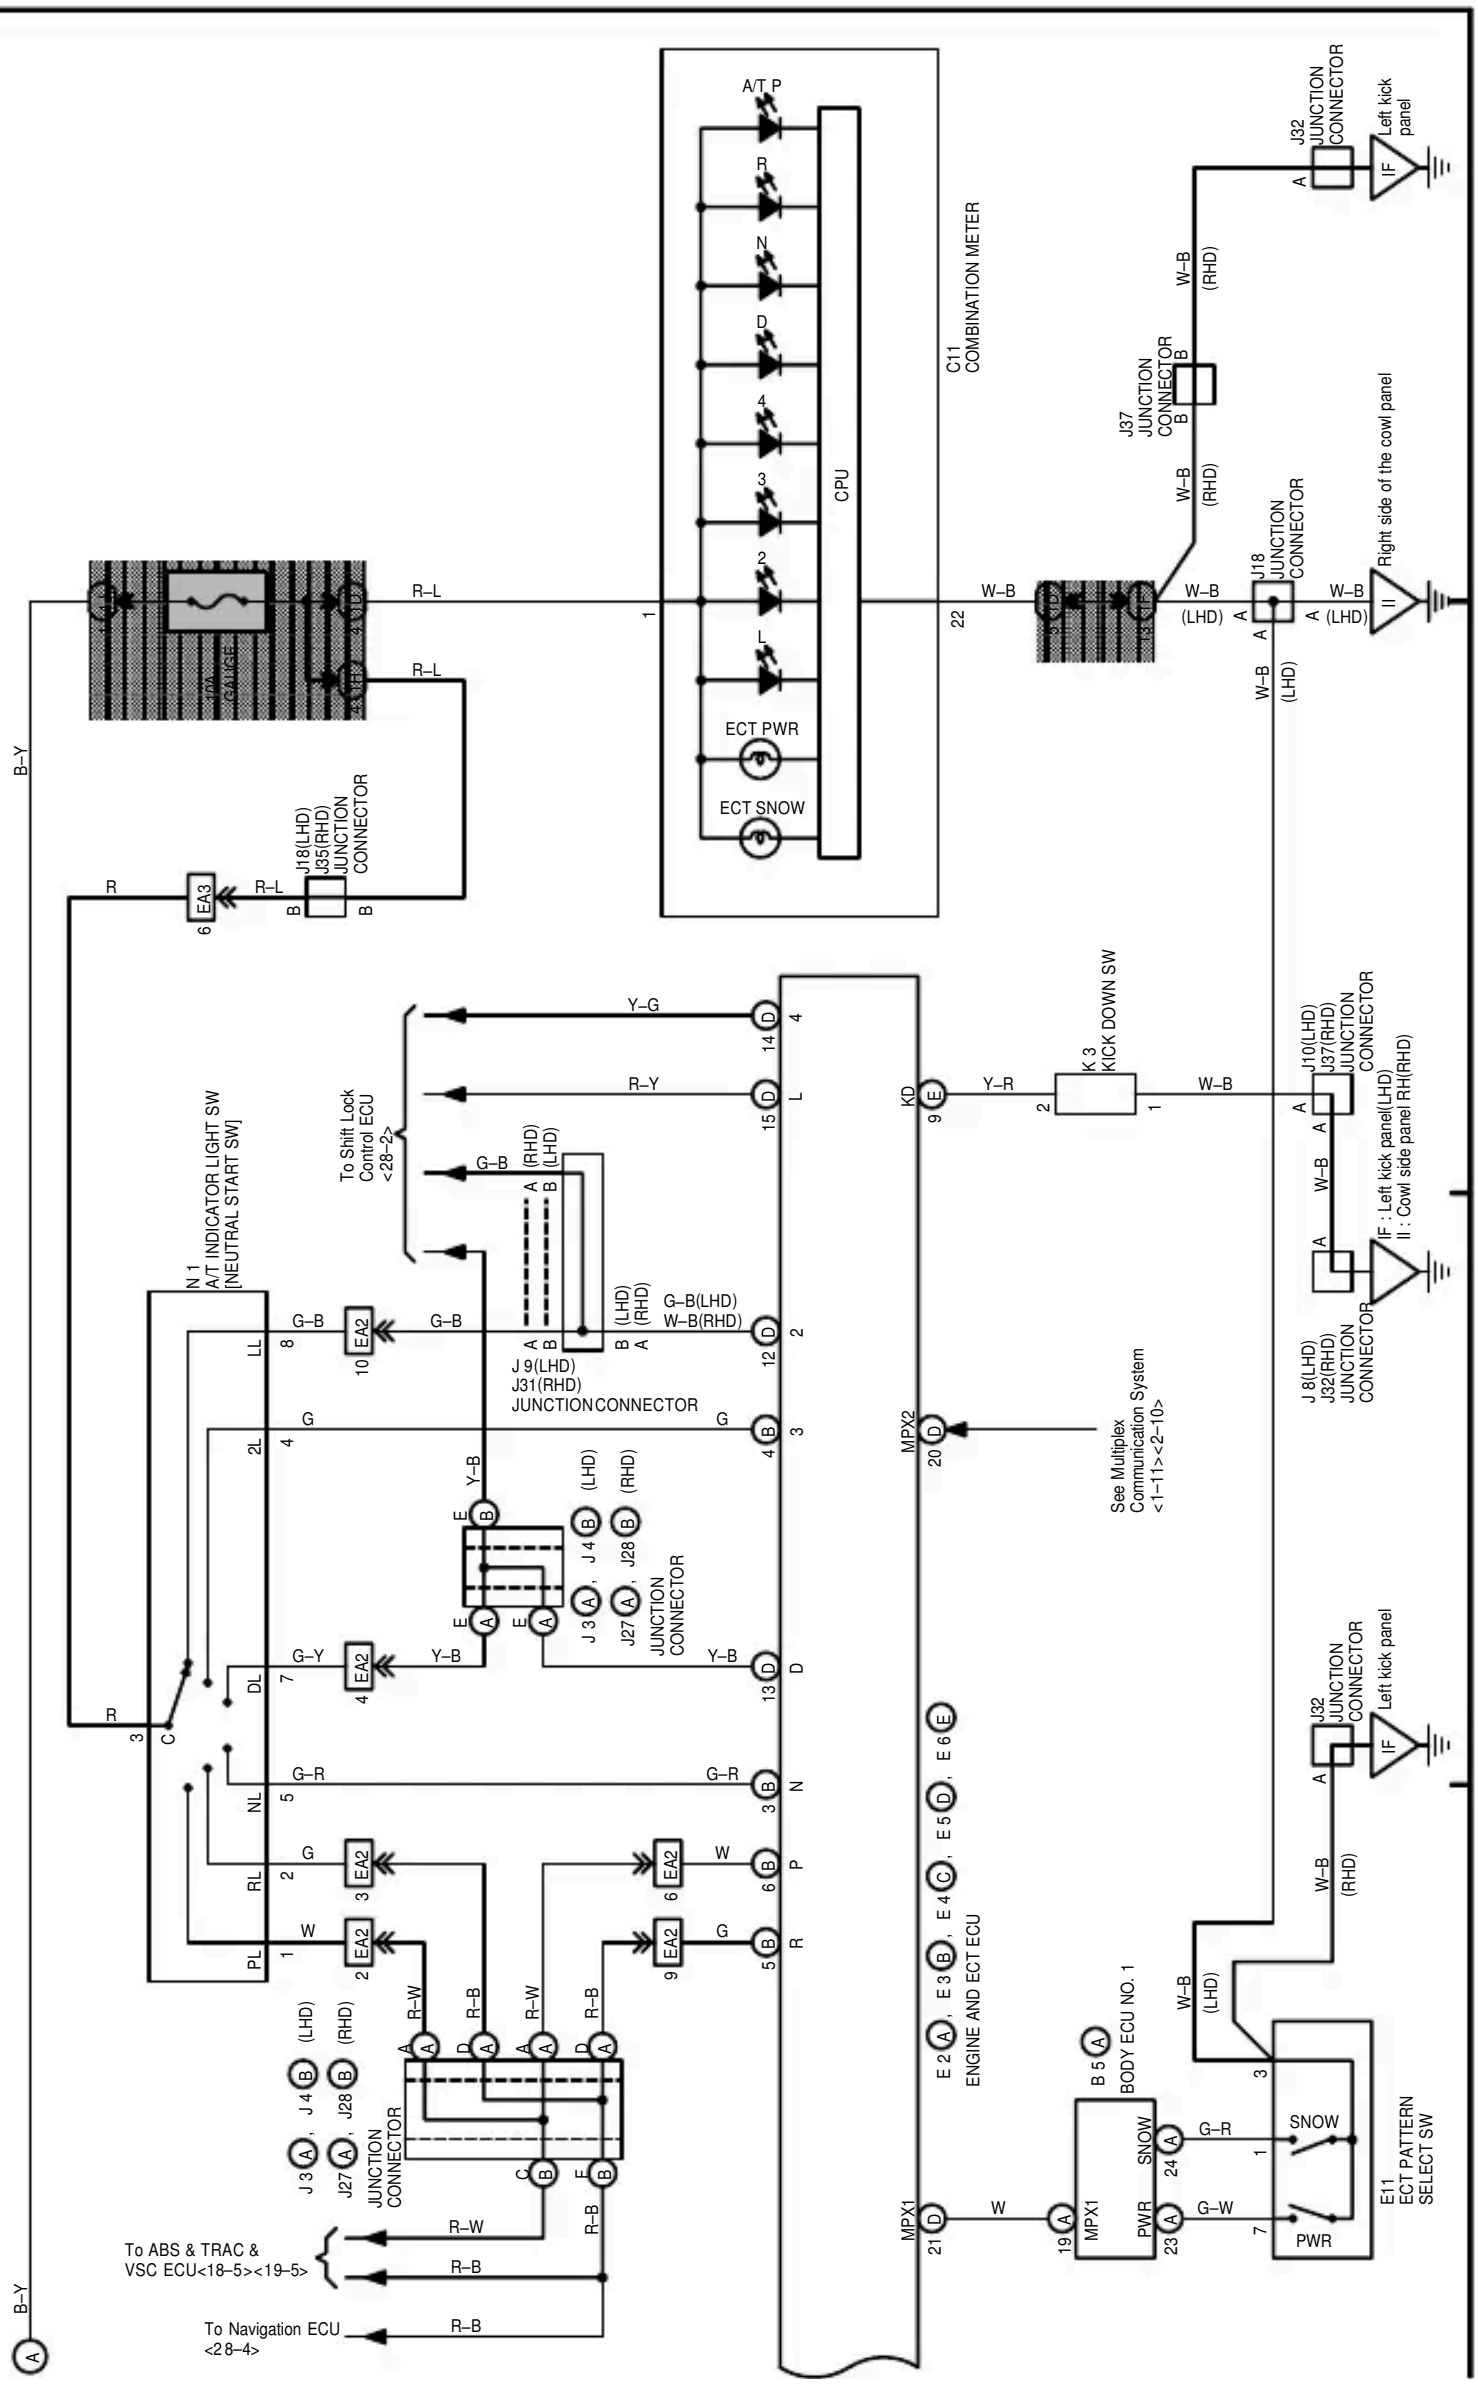
ECT and A/T Indicator (3UZ–FE)
5
6
7
8
A/T P
R
N
D
4
3
2
L
ECT PWR
ECT SNOW
CPU
C11
COMBINATION METER
R–L
B–Y
W–B
22
1
J32
JUNCTION
CONNECTOR
Left kick
panel
IF
J37
JUNCTION
CONNECTOR
B
W–B
(RHD)
W–B
(LHD)
J18
JUNCTION
CONNECTOR
A
W–B
(LHD)
Right side of the cowl panel
II
J18(LHD)
J35(RHD)
JUNCTION
CONNECTOR
R
R–L
EA3
6
B
N 1
A/T INDICATOR LIGHT
[NEUTRAL START SW]
To Shift Lock
Control ECU
<28–2>
Y–G
R–Y
G–B
(RHD)
(LHD)
14
15
4
L
K 3
KICK DOWN SW
K D
9
E
Y–R
2
1
W–B
J10(LHD)
J37(RHD)
JUNCTION
CONNECTOR
IF : Left kick panel(LHD)
II : Cowl side panel RH(RHD)
G–B
G–B
8
10
EA2
LL
J 9(LHD)
J31(RHD)
JUNCTION CONNECTOR
G–B(LHD)
W–B(RHD)
12
2
G
4
2L
G
3
Y–B
E
B
J 4
(LHD)
J28
(RHD)
J 3
J27
JUNCTION
CONNECTOR
G–Y
Y–B
7
DL
4
13
D
R
3
C
G–R
5
NL
N
G
2
RL
3
6
P
W
1
PL
2
9
R
G
R–W
R–B
To ABS & TRAC &
VSC ECU<18–5><19–5>
To Navigation ECU
<28–4>
MPX2
20
See Multiplex
Communication System
<1–11><2–10>
MPX1
21
W
19
E 2
E 3
E 4
E 5
E 6
ENGINE AND ECT ECU
B 5
BODY ECU NO. 1
SNOW
PWR
24
23
G–R
G–W
W–B
(LHD)
W–B
(RHD)
J 8(LHD)
J32(RHD)
JUNCTION
CONNECTOR
J32
JUNCTION
CONNECTOR
Left kick panel
IF
E11
ECT PATTERN
SELECT SW

I OVERALL ELECTRICAL WIRING DIAGRAM

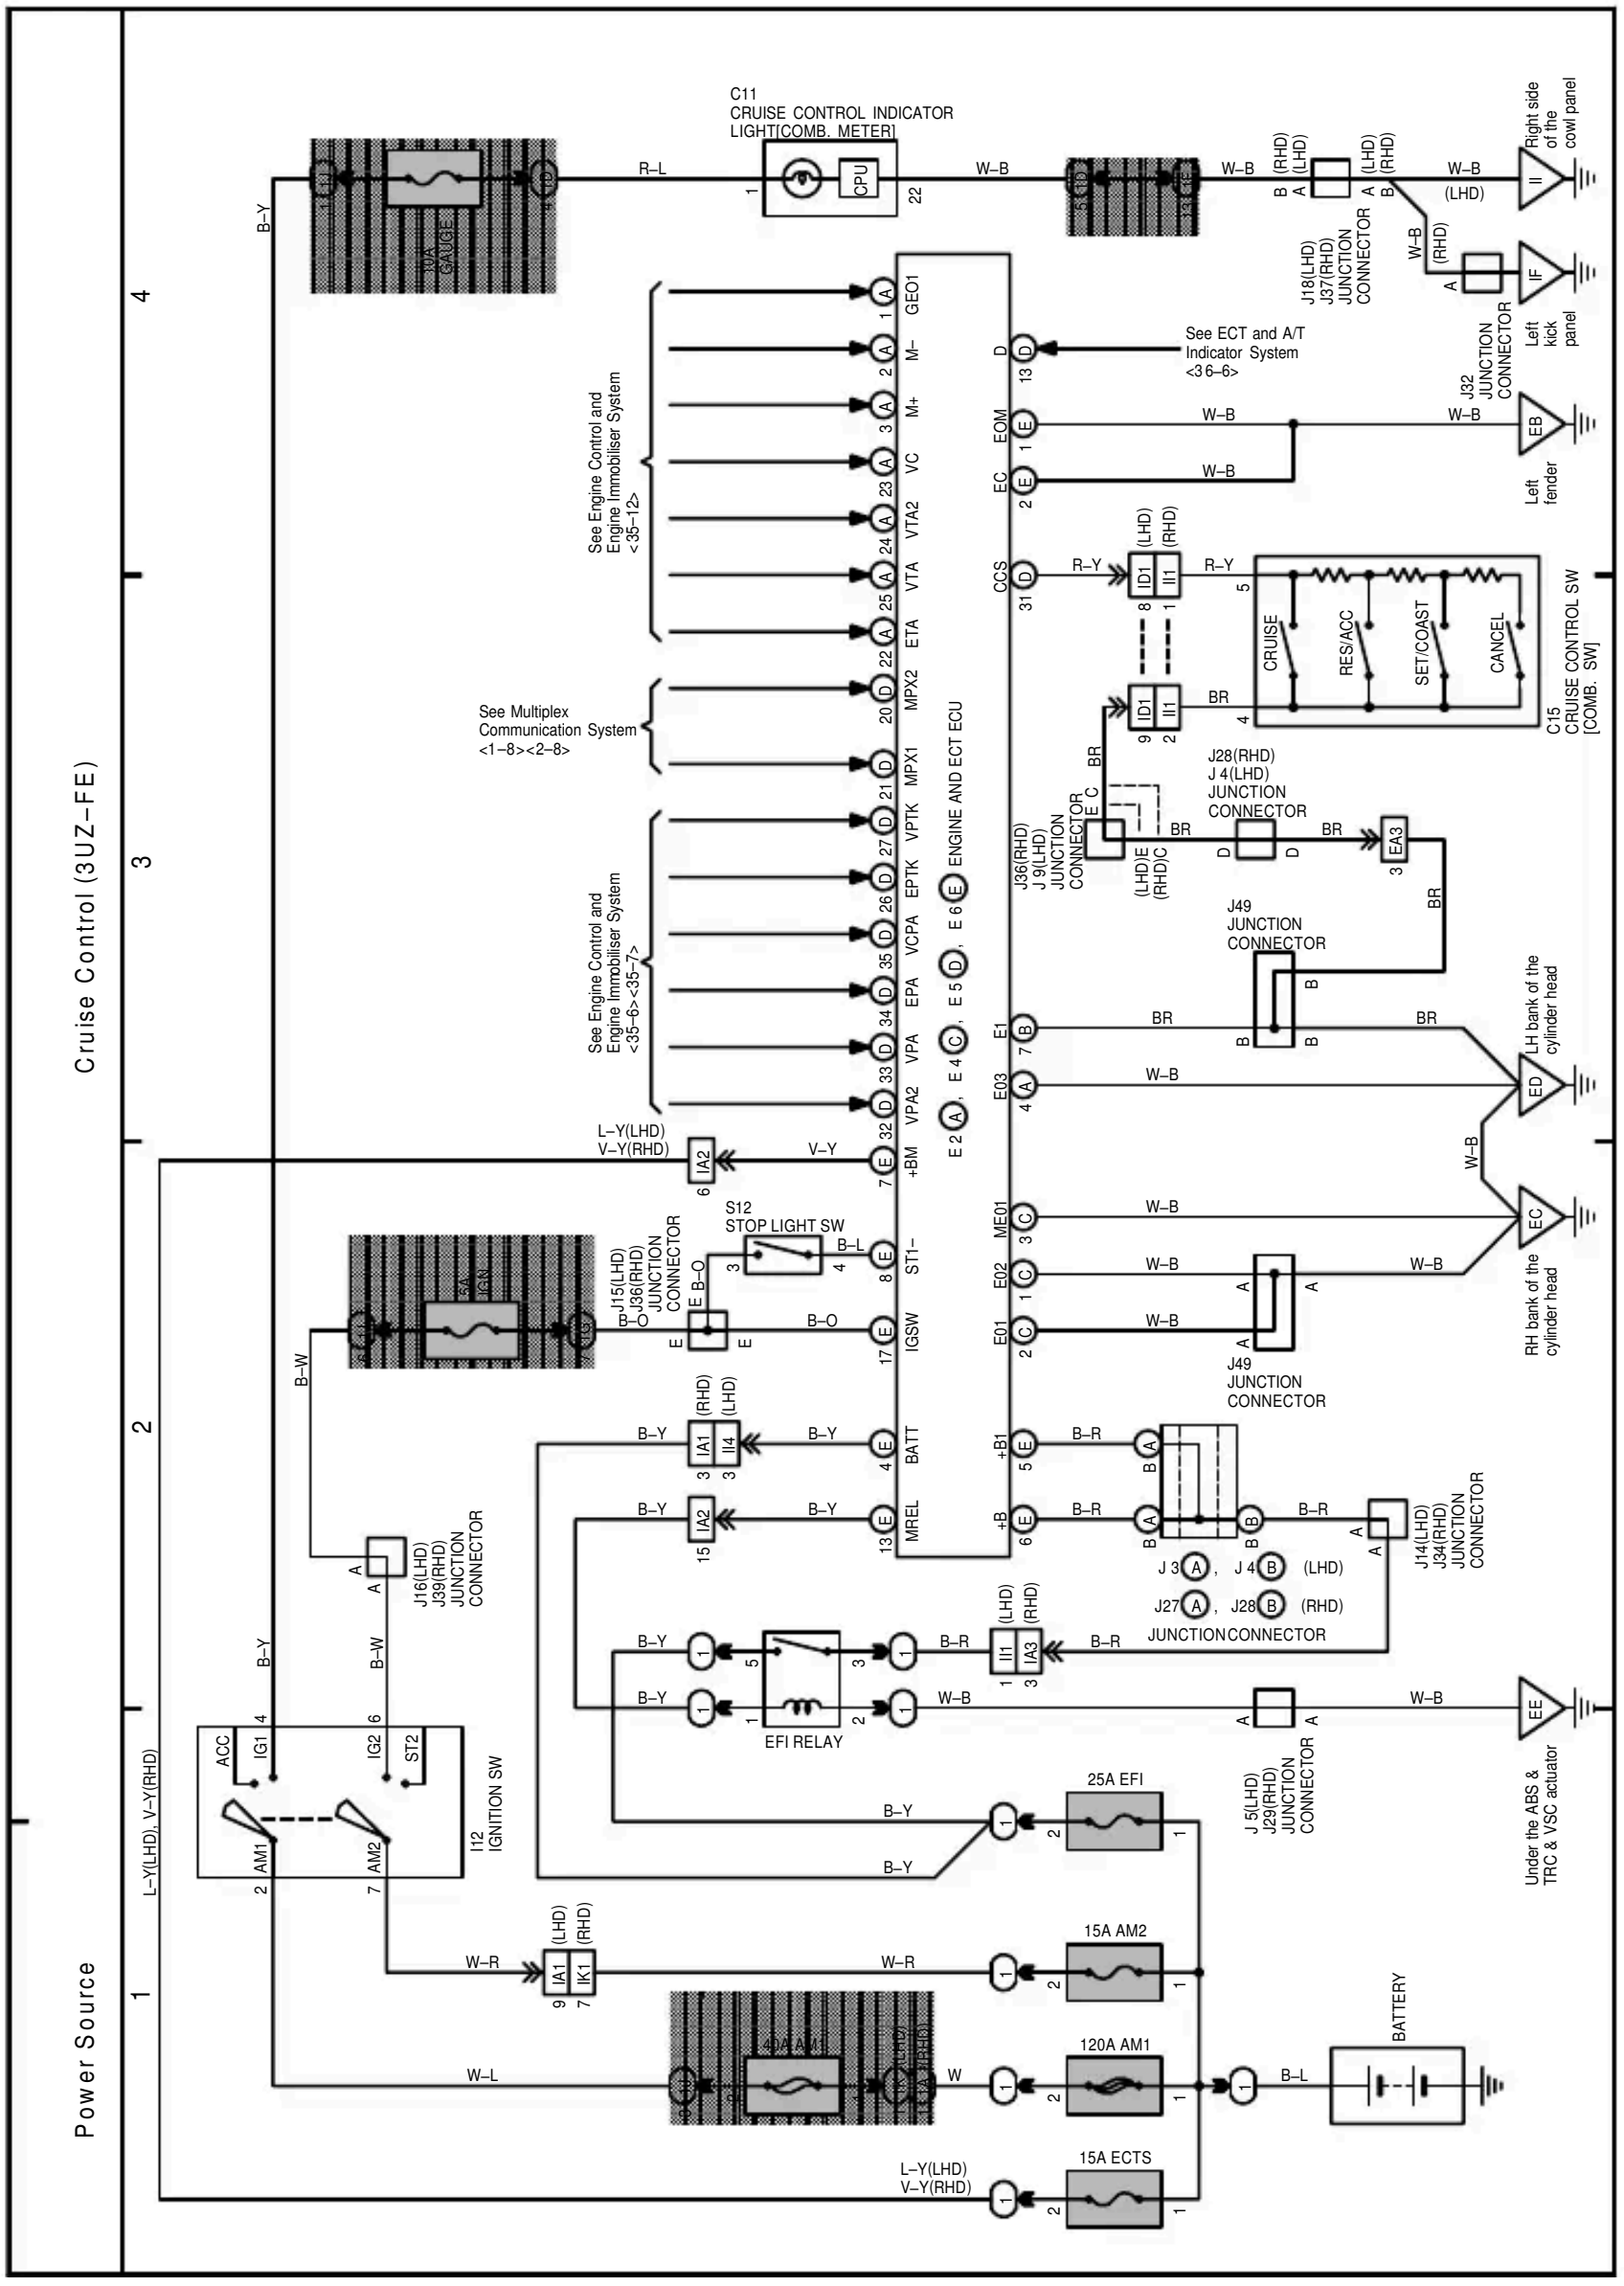

FOREWORD

This supplement provides information covering changes in the electrical system specifications of the GS 430 / GS 300 which were made in Jul., 2000.

Applicable models: UZS161 Series
JZS160 Series

For information which is not mentioned in this manual, please refer to the following Electrical Wiring Diagram Manuals:

Manual Name	Pub. No.
● LEXUS GS 300 Electrical Wiring Diagram	EWD317Y
● LEXUS GS 430 / GS 300 Repair Manual Supplement	RM786E
● LEXUS GS 430 / GS 300 New Car Features Supplement	NCF188E

All information in this manual is based on the latest product information at the time of publication. However, specifications and procedures are subject to change without notice.

TOYOTA MOTOR CORPORATION

NOTICE

When handling supplemental restraint system components (removal, installation or inspection, etc.), always follow the direction given in the repair manuals listed above to prevent accidents and supplemental restraint system malfunction.