

## 3.0 Owner's Manual



This file is part of *WP 34S*.

*WP 34S* is free software: you can redistribute it and / or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version.

*WP 34S* is distributed in the hope that it will be useful, but without any warranty; without even the implied warranty of merchantability or fitness for a particular purpose. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with *WP 34S*. If not, please see <http://www.gnu.org/licenses/>.

First aid if getting trapped in an unexpected or unwanted calculator mode while playing around before reading: **H.d** (i.e. **f** **RCL**) will bring you back to default floating point mode.

For those who don't even read this: Sorry, we can't help you.

## TABLE OF CONTENTS

Welcome .....	4
Getting Started.....	6
What's on the Keyboard and How to Access it? .....	7
Real and Integer Operations.....	14
Statistical Distributions, Probabilities etc.....	15
Matrices .....	16
Complex Operations .....	17
Memory.....	18
Stack Mechanics.....	20
Comparing and Addressing Real Numbers .....	22
Comparing and Addressing Complex Numbers .....	23
Addressing Labels .....	24
Display and Modes .....	25
Modes and Announciators .....	25
Command and Mode Specific Output .....	27
Fonts .....	32
Programming .....	34
Programmed Input and Output.....	35
Index of Operations .....	36
A - C .....	37
D - F .....	40
G - I .....	44
J - L .....	47
M - O .....	50
P - R .....	53
S - U .....	58
V - Z .....	63
$\alpha$ - $\pi$ .....	66
$\Sigma$ - the End.....	68
Alphanumeric input.....	72
Non-programmable Control, Clearing and Information Commands .....	74

Catalogs.....	76
Catalog Contents in Detail .....	79
Addressing Catalog Items.....	82
Constants .....	83
Unit Conversions .....	87
Predefined Global Alpha Labels.....	91
Interactive Programming.....	91
Interrupting a Program for Display of Information.....	91
Temporary Displays.....	92
Data Input.....	92
Hotkeys .....	93
Keyboard Codes .....	93
Direct Keyboard Access.....	94
Appendix A: Support for Flashing, Serial I/O etc.....	96
How to Flash Your <i>HP 20b</i> or <i>30b</i> .....	96
Overlays – Where to Get Them and How to Make Them Yourself .....	97
Commands for Handling Flash Memory on Your <i>WP 34S</i> .....	97
Mapping of Memory Regions to Emulator State Files .....	97
Data Transfer Between Your <i>WP 34S</i> and Your PC (SAM-BA).....	97
Data Transfer Between Your <i>WP 34S</i> and Your PC (Serial I/O) .....	97
More Keyboard Commands Employing ON .....	98
Appendix B: Memory Management.....	99
Status and Configuration Data .....	99
Global Registers .....	99
Summation Registers.....	100
Subroutine Return Stack and Program Memory.....	101
Making Room for Your Needs.....	102
Addressing and Accessing Local Data.....	102
Recursive Programming .....	103
Switching between Real and Integer.....	103
Appendix C: Messages and Error Codes.....	104
Appendix D: Internal Commands .....	107
Appendix E: Library Routines .....	109
Appendix F: Release Notes .....	110

## JUST IN CASE ...

... you still have your *HP-20b Business Consultant* or your *HP-30b Business Professional* sitting on your desk unchanged as produced for HP, please turn to [Appendix A](#) for some instructions how to convert it into a full fledge *WP 34S* yourself. Alternatively, if you don't want to bother with cables on your desk connecting it to your computer, with flashing the calculator firmware and attaching a sticky overlay, you may purchase e.g. a *HP-30b*-based *WP 34S* readily in the internet:

[http://www.thecalculatorstore.com/epages/eb9376.sf/en\\_GB/?ObjectPath=/Shops/eb9376/Products/%22WP34s%20Pack%22](http://www.thecalculatorstore.com/epages/eb9376.sf/en_GB/?ObjectPath=/Shops/eb9376/Products/%22WP34s%20Pack%22)

(We apologize for the small font – it allows this hyperlink fitting into one print line).

The first way may just cost your time, the second will cost you some money at the store. If you choose buying your *WP 34S* at the address mentioned, we (the developers) will get a modest fraction of the price. Both ways, however, are proven to work – it is your choice.

For the following, we assume the flashing is done and you hold a *WP 34S* in your hands.

## WELCOME

Dear user, now you have got it: your own *WP 34S*. It uses the mechanics and hardware of the *HP-20b Business Consultant* or the *HP-30b Business Professional*, so you benefit from their excellent processor speed. And with *HP-30b* you get the famous rotate-and-click keys in addition, giving the tactile feedback appreciated in vintage *Hewlett-Packard* calculators for decades.

On the other hand, the firmware and user interface of your *WP 34S* were thoroughly thought through and discussed by us, newly designed and written from scratch, loaded with functions, pressed into the little memory provided, and tested over and over again to give you **a fast and compact scientific calculator like you have never had before** – keystroke programmable and comfortably fitting in your shirt pocket.

The function set of your *WP 34S* is based on the famous *HP-42S RPN Scientific*, the most powerful programmable RPN calculator built so far<sup>1</sup>. We expanded this set, incorporating the functionality of the renowned programmer's calculator *HP-16C*, the fraction mode of the *HP-32SII*, probability distributions like featured by the *HP-21S*, and added **many more useful functions for mathematics, statistics, physics, engineering, programming etc.** like

- + Euler's Beta and Riemann's Zeta function, Bernoulli and Fibonacci numbers, Lambert's W, the error function as well as Chebyshev's, Hermite's, Laguerre's and Legendre's orthogonal polynomials, testing for primality,
- + many statistical distributions and their inverses like Poisson, Binomial, Geometric as well as Cauchy-Lorentz, Exponential, Logistic, Weibull for reliability analysis, Lognormal and Gaussian with arbitrary means and standard deviations,
- + programmable sums and products, first and second derivatives,
- + extended date and time calculations based on a real time clock,

---

<sup>1</sup> Though the *HP-42S* was sold in 1988 already, this statement holds still. – Due to hardware restrictions, the matrix math of *HP-42S* cannot be supported by the *WP 34S*. Matrices are covered, however, by a package of basic commands.

- + integer computing in arbitrary bases from binary to hexadecimal,
- + financial operations like mean rate of return and margin calculations,
- + 80 conversions, mainly between universal SI and old Imperial units,
- + 50 fundamental physical constants as precise as known today by national standards institutes like NIST or PTB, plus some more out of mathematics, astronomy, and surveying,
- + complete Greek and extended Latin letter sets covering the languages of almost half of this planet (upper and lower case in two font sizes each).

**The WP 34S is the first RPN calculator overcoming the limits of a 4-level stack –** forget worries about stack overflow in calculations. It features a choice of two stack sizes expanded by a complex LASTx register: traditional four stack levels for HP compatibility, eight levels for convenient calculations in complex domain, advanced real calculus, vector algebra, or for whatever application you have in your mind. You find a full set of commands for stack handling and navigation in either size.

Furthermore, your WP 34S features up to 112 global general purpose registers, 112 global user flags, local registers and flags allowing recursive programming, up to 928 program steps in RAM, several thousand in flash, a 31 byte alpha register for message generation, and 4 programmable hotkeys for your favorite functions or routines. Memory layout is user-settable to a large extent. And you may backup your work in battery-fail-safe memory.

The WP 34S is the result of a collaboration of two individuals, an Australian and a German, since 2008. We did this in our free time, so you may call it our hobby (though some people close to us found different names for this). From its very beginning, we discussed our project in the *Museum of HP Calculators* ([www.hpmuseum.org](http://www.hpmuseum.org)), so we want to express our gratitude to all the international contributors there who taught us a lot and brought their ideas and support in several stages of our project. Special thanks go to Marcus von Cube (Germany) supporting us in bringing the WP 34S to life, starting with an emulator for v1.14, allowing widespread use and convenient testing. From v1.17 on, the software runs on the real hardware as well. A very useful assembler / disassembler is supplied by Neil Hamilton (Canada) since v1.18 – even a symbolic preprocessor was added with v2.1. Marcus did a great job presenting v2.2 at the HHC 2011 in San Diego.

We baptized our baby WP 34S in honor of one of the most powerful LED pocket calculators, the *HP-34C* of 1979. The WP 34S is our humble approach – with the hardware given – to a future 43S we can only dream of becoming the successor of the *HP-42S* once. May the WP 34S help in convincing those having access to more resources than us: covering the market of serious scientific instruments is worthwhile.

We have carefully checked everything we could think of to our best knowledge, so our hope may be justified the WP 34S is free of bugs. Anyway, we promise we will continue improving the WP 34S whenever it turns out being necessary – so if you discover any strange result, please report it to us, and if it is revealed to be an internal error we will provide you with an update as soon as we have got one ourselves. We did show short response times so far, and we will continue this way.

Enjoy!

*Paul Dale and Walter Bonin*

## PRINT CONVENTIONS

- Throughout this manual, standard font is Arial. Emphasis is added by underlining. *Specific terms, names or titles* are printed in italics, *hyperlinks* in blue underlined italics. Bold italic letters like **n** are used for variables. Calculator commands – e.g. ENTER – are generally called by their names, printed in capitals in running text for easy recognition. Each and every command featured is listed in the [Index of Operations](#) below.
- This **CPX** font is taken for explicit references to calculator keys.
- Register addresses are printed using **bold Times New Roman**, while lower case italic letters of this font are employed for register contents. So, for example, *y* lives in stack level **Y**, **r45** in general purpose register **R45**, and **alpha** in the alpha register, respectively. Overall stack contents are quoted in the order [*x, y, z, ...*] generally.

All this holds unless stated otherwise explicitly.

## GETTING STARTED

If you know how to deal with a good old HP RPN scientific calculator, you can start with your **WP 34S** right away. Use the following as a reference manual.

Else we recommend you get an *HP-42S Owner's Manual*. It is available at low cost on the DVD distributed by the *Museum of Hewlett-Packard Calculators* ([www.hpmuseum.org](http://www.hpmuseum.org)). There are also other sources in the internet.

Please read Part 1 of said manual as a starter. This part includes an excellent introduction to RPN. This RPN is a very effective method making **(**, **)**, **[**, **]**, **{**, **}** and **=** keys obsolete in calculations. Once you got used to it you will most probably never employ a calculator featuring **=** again.

Part 2 of said manual will support you when you are heading for programming your **WP 34S** for easy handling of repeated or iterative computations. Further documentation, also about the other calculators mentioned above and in the following text, will add valuable information – it is all readily accessible on a single DVD from said source.

Most traditional commands on your **WP 34S** will work as they did on the **HP-42S**. This little manual here is meant as a supplement mainly showing you all the new features. It contains all the necessary information including some formulas and technical explanations but is not intended to replace textbooks about mathematics, statistics, physics, programming, or the like.

**Your WP 34S is designed to help you in calculations and computations. It is, however, just a tool – though a very powerful one – it cannot think for you nor can it check the sense of the problem you apply it. Gather information, think before keying in and check your results: these tasks will remain yours always.**

The following text starts presenting the keyboard as it will be active in various modes, so you know where to find what you are looking for. It continues explaining the memory, addressing items therein, the display and indicators used to give you feedback what is going on. Then the major part of this booklet is taken by the index of all the operations, catalog contents, constants and conversions featured. It closes with a list of messages your **WP 34S** will display if special conditions prevent it from executing your command as expected.

## WHAT'S ON THE KEYBOARD AND HOW TO ACCESS IT?

Let us investigate your *WP 34S* : Take off the battery cover, locate the little RESET hole between the batteries, and use a paper clip to reset. This will erase all user contents and give you a fresh start. Close the cover again and press **ON** (i.e. the bottom left key) to turn your calculator on. You will get what you see below:



As usual, white labels execute the *default primary function* of the respective key. There are further (secondary) functions provided for 34 keys. Their labels are printed next to the white ones in golden, blue, green or grey color.

Green labels are placed on the slanted faces of 34 keys. Golden and blue labels are printed below of the respective key on the *key plate* of your *WP 34S*. Grey letters are put bottom left of 26 keys.

Labels printed underlined open *catalogs*.

To access a golden, blue, or green label, use the *prefix* **f**, **g**, or **h**, respectively.

E.g. the key **5** preceded by

- **f** will calculate the arithmetic mean values of the data accumulated in the statistic registers via  **$\bar{x}$** ,
- **g** will return the standard deviations for the same data via **s**,
- **h** will open a catalog of supplementary statistic functions via **STAT**.
- The grey letter **R** will become relevant in *alpha mode*, e.g. for input of text.

These prefixes allow for easily accessing a multiple of

the 37 primary functions the keyboard can take. You may keep the respective prefix pressed if you want to call several functions in sequence showing the same label color. Any numeric entry will just fill the display and is interpreted when completed, not earlier.

Time for a small example. Turn your *WP 34S* on again if necessary – it may have executed an automatic shut off in between. Nevertheless, it will still show



as before. Generally, we shall quote the numeric results only in the following, i.e.  $0.$  here.

Now let us assume you want to fence a little patch of land 40 yards long<sup>2</sup> and 30 yards wide. You have set the first corner post (A) already, and also the second (B) in a distance of 30 yards from A. Where do you place the third post (C) to be sure setting up the fence forming a proper rectangle? Simply enter:

<b>[4] [0]</b>	<b>40</b>	
<b>[ENTER↑]</b>	<b>40.</b>	(this key is for separating two numbers in input here)
<b>[3] [0]</b>	<b>30</b>	
<b>[→P]</b>	<b>50.</b>	( <b>[→P]</b> is reached by pressing <b>[g]</b> first, then <b>[→]</b> )

So, just take a 90 yards rope, nail its one end on post A and its other end on B, fetch the loose loop and walk 40 yards away. As soon as both parts of the rope are tightly stretched, stop and place post C there. You may set the fourth post the same way.

This method works for arbitrary rectangles. Your *WP 34S* does the calculation of  $\sqrt{40^2 + 30^2}$  (or whatever lengths apply for you) automatically. You just care for the land, the rope, hammer and nails. And it will be up to you to set the posts!

As in this example, we will generally refer to shifted functions like **[→P]** by just printing the colored label in this text and omit the prefix key of corresponding color, since redundant.

By the way, by pressing **[→P]** the function →POL is called, converting rectangular to polar coordinates. Most labels printed on your *WP 34S* simply call operations carrying the same name as the respective label. There are, however, also a number of cases like **[→P]**. Thus, let us introduce them, starting top left on the keyboard:

- **[A], [B], [C], and [D]** are called *hotkeys*, since they immediately call the user programs carrying these labels if defined. If the respective labels are not (yet) defined, these keys act as **[Σ+]**, **[1/x]**, **[y<sup>x</sup>]**, or **[x<sup>y</sup>]**, respectively.
- **[HYP]** is the prefix for hyperbolic functions, as **[HYP<sup>-1</sup>]** is for their inverses (see SINH, COSH, TANH, ASINH, ACOSH, and ATANH). In analogy, **[SIN<sup>-1</sup>]** stands for ASIN, etc.

---

<sup>2</sup> Though this manual is written for an international readership and we very well know the SI system of units agreed on internationally and adopted by almost all countries on this planet, we use Imperial units here making it easier for our US-American readers to follow. But see point 1 at the bottom of next page.

- $\rightarrow$  is the prefix for five immediate conversions:  $\rightarrow$  trailed by **H.MS**, **H.d**, **DEG**, **RAD**, or **GRAD** will convert  $x$ , i.e. the value currently displayed. The respective function names all begin with  $\rightarrow$ . Additionally,  $\rightarrow$  trailed by **2**, **8**, or **16** will show  $x$  converted to an integer number of the respective base until the next keystroke. And furthermore,  $\rightarrow$  is employed for indirect addressing.
- **R $\leftarrow$**  calls  $\rightarrow$ REC converting polar to rectangular coordinates in two dimensions. So the pair **R $\leftarrow$ P** takes care of the two classic coordinate transformations.
- **CPX** is mainly employed as a prefix for calling complex operations. See the respective paragraph [below](#) for more.
- **a b/c** and **d/c** enter the fraction mode for proper and improper fractions, respectively (see PROFRC and IMPFRC).
- **H.MS** and **H.d** represent the two time modes, where **H.d** stands for decimal hours, but also for floating point numbers in general (see DECM).
- **$\alpha$**  enters *alpha mode*, while **2**, **8**, **10**, or **16** will enter integer modes for calculating with binary, octal, decimal, or hexadecimal numbers (see BASE...).
- **!** calls  $x!$  in default floating point mode.
- **./.** toggles radix marks (see RDX, and RDX.), **P/R** programming mode, **↑** upper and lower case in alpha mode, and **|x|** calls ABS.

These were all the special labels featured. You will find each and every command provided on your *WP 34S* below in the [index of operations](#) for your reference, together with the necessary individual explanation.


In four decades of pocket calculators, a wealth of nice to sophisticated application examples were created and described by different authors – more and better than we can ever create ourselves. It is not our intention to copy these old examples. Instead, we recommend the DVD mentioned [above](#) once again: it contains all the user guides, handbooks, and manuals of vintage Hewlett Packard calculators. Be assured that almost everything described there for any scientific calculator can be done on your *WP 34S* significantly faster and sometimes even in a more elegant way.

Let us return to our introductory example for two remarks:


1. There is no need to enter any units. The example will work with meters as well, for example.
2. Although we entered *integer* numbers only for both sides of our little ground, the calculation was executed in default floating point mode of your *WP 34S*. This calculator mode allows for decimal fractions of e.g. feet in input and output as well. Another mode lets you key in proper fractions like e.g. 6  $\frac{1}{4}$ .

Before you suffer from feet fractions, however, we want to briefly show you some additional modes your *WP 34S* features (you will find a complete list of all modes provided in a separate chapter further below).

**Integer modes** are meant to deal with integers only – in input, output, and calculations. This is useful for computer logic and similar applications. Your *WP 34S* allows for binary, ternary, etc. through hexadecimal computing. In these modes, operations like SIN don't make sense for obvious reasons. Thus, for integer bases up to ten, the top row of keys on your *WP 34S* will effectively work as shown here:

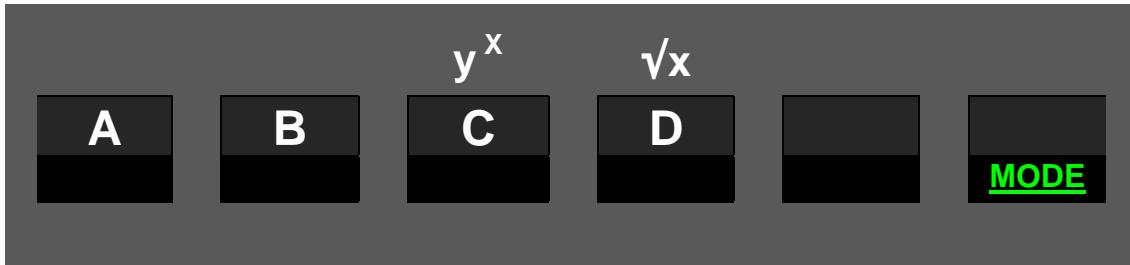

In hexadecimal integer mode, primary functions of these top keys will be switched automatically becoming numeric input, so **f** will be used for accessing their default primary functions:

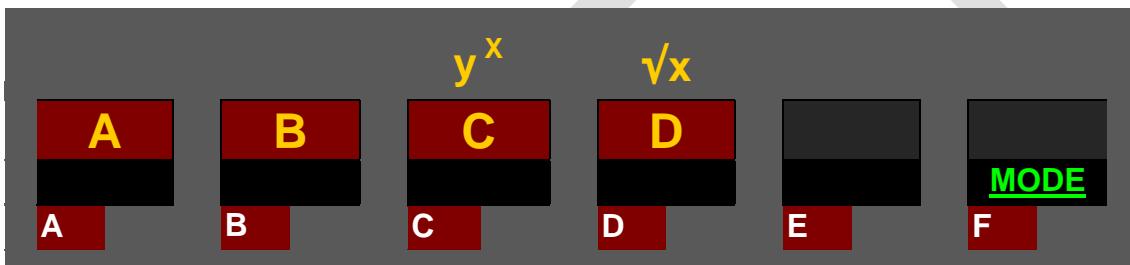

The dark red background is used to highlight changed key functionality here. Prefix **f** will access the default primary functions wherever they aren't primary anymore after reassignment. By the way, pressing any key will show its actual function in the top LCD line for a short time for checking; it will return to NULL if held down longer.

Calculating in bases 11 ... 15, those keys not needed for numeric input will work as shown in the first picture above. In any integer base, attempts to enter an illegal digit – like e.g. 4 in binary – will be blocked.

**Alpha mode** is designed for text entry, e.g. for prompts. In this mode, the alpha register is displayed in the upper part of the LCD, and the numeric line (kept from your last calculation) is accessible by commands only. The display may look like this:




In alpha mode, most mathematical operations are neither needed nor applicable. So the keyboard is redefined automatically when you enter alpha mode, as shown overleaf.



All labels printed on dark red background here append characters to *alpha* immediately or via alpha catalogs. Primary function of most keys is appending the letter printed bottom left of this key – grey on the key plate. Alpha mode starts with capitals, and ↑ toggles upper and lower case. **PSE** appends a space. As in integer modes, **f** will access default primary functions wherever necessary<sup>3</sup>.

Looking at the standard labels on the keyboard, we can safely offer you more:

<sup>3</sup>The digits 0 and 1 may also be called using  0 or  1, respectively.

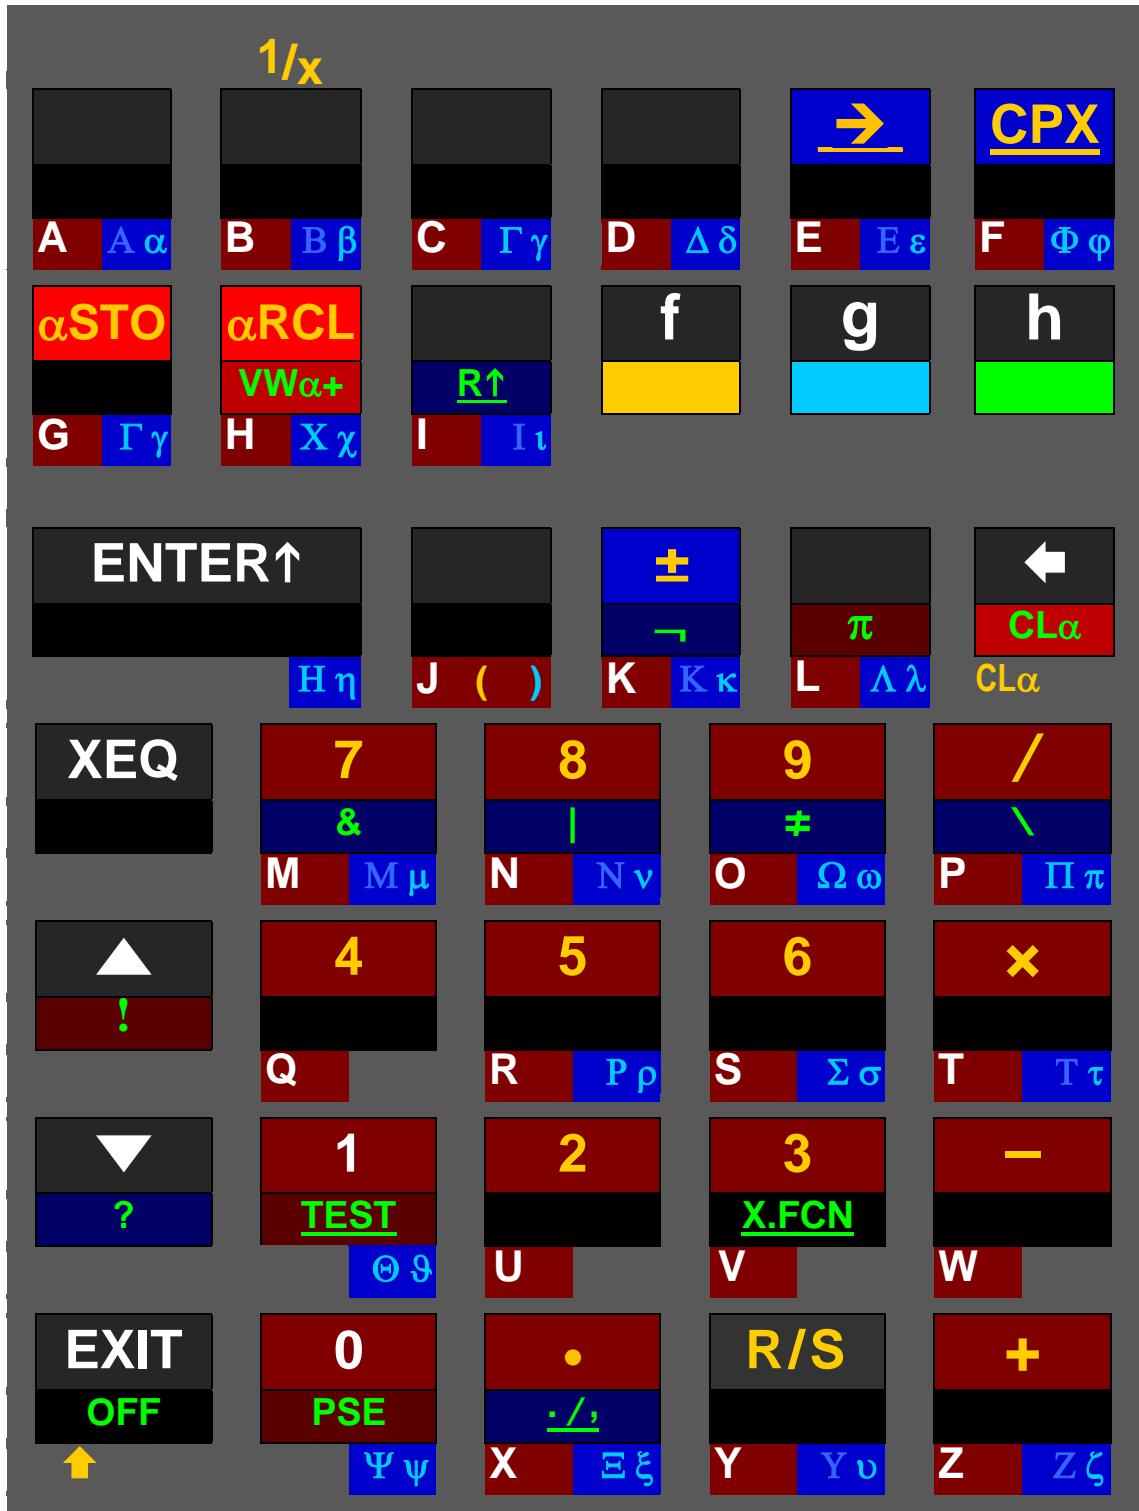


All labels printed on dark blue background here append characters to *alpha* as well, but deviate from the labels printed on your WP 34S keyboard at these locations. Prefix **g** leads to homonymic Greek letters where applicable<sup>4</sup>. And **h** gives access to logic symbols via the Boolean operations.

<sup>4</sup> “Homonymic” according to ancient Greek pronunciation. And we assigned **Gamma** also to **C** due to the alphabet, and **Chi** to **H** since this letter comes next in pronunciation. Three Greek letters require special handling: **Psi** is accessed via **g 0** (below **PSE**), **Theta** via **g 1** (below **TEST** and following ‘T’),

The catalogs accessible via and feature even more characters (see [below](#)). See the [index of operations](#) for  $\alpha\text{STO}$ ,  $\alpha\text{RCL}$ ,  $\text{VW}\alpha+$ , and more alpha commands.

When  $\alpha$  exceeds 31 characters, the leftmost character(s) are discarded.

A **temporary alpha mode** is entered during input processing in comparisons and in memory addressing, e.g. during storing, regardless of the mode set before. Examples are shown [below](#). See the respective virtual keyboard here:

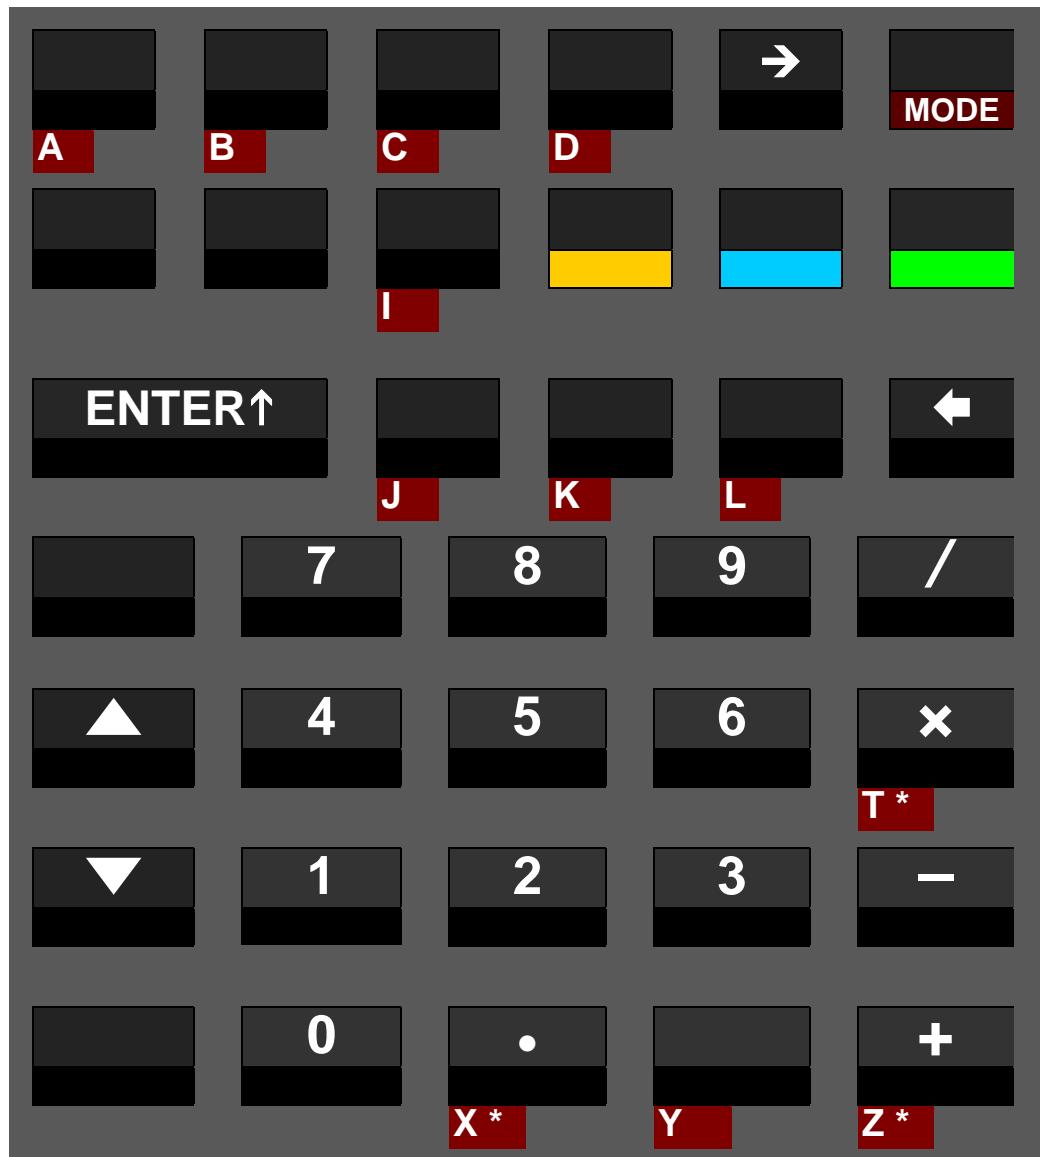


---

and **Eta** via . **Omicron** is not featured since looking exactly like the Latin letter 'O' in either case. – Where we printed Greek capitals with lower contrast, they look like the respective Latin letters in our fonts. Greek professors, we count on your understanding.

## **REAL AND INTEGER OPERATIONS**

Most of the commands your WP 34S features are mathematical operations or functions in real domain. “Real domain” means these functions use real numbers like 1 or 2.34 or  $\pi$  or 5.6E-7, and work with them. Please note integer numbers like 8, 9, 10, or -1 are just a subset of real numbers.

Most real number functions provided operate on one number only. For example, key in

**. 4 9**      0.49

and press

**✓x**      0.7      since  $0.7^2 = 0.49$

Generally, such functions replace  $x$ , i.e. the value contained in register **X** and shown in the display, by the function result  $f(x)$ .

Some of the most popular mathematical functions, however, operate on two numbers. Think of + and -, for example. Now the stack enters the game. Think of it like a pile of numbers: its lowest level is called **X** by convention, the next higher one **Y**, then **Z** etc. (see [below](#)). New numbers are always entered in **X**. For subtracting  $x$  and  $y$ , enter both numbers first, then execute the operation. That's the essence of RPN.

So having an account of 1,234 US\$ and taking 56.7 US\$ from it is solved as follows:

<b>1 2 3 4</b>	1234	enter first number in <b>X</b>
<b>ENTER↑</b>	1234.	terminates input of first number and copies it to <b>Y</b> ("pushes it on the stack")
<b>5 6 . 7</b>	56.7	enter second number in <b>X</b>
<b>-</b>	1177.3	subtract $x$ from $y$

The operation **-** takes its input from the lowest two stack levels **X** and **Y** but needs only one level, i.e. **X**, to put its result  $f(x, y)$  in. This holds for almost all two-number real functions. Thus  $z$  drops in **Y** then, and so on for higher levels as shown [below](#). Please note the top stack level content is repeated (since there is nothing available above for dropping) then. You may employ this top level repetition for some nice tricks.

There are also a few three-number real functions included – e.g.  $\text{I}\beta$ ,  $\rightarrow\text{DATE}$  and  $\%MRR$  – replacing  $x$  by the result  $f(x, y, z)$ . Then  $t$  drops in **Y** and so on, and the content of the top level is repeated twice.

Some real functions (e.g. DECOMP, DATE $\rightarrow$ ) operate on one number but return two or three. Other operations (like RCL or SUM) do not consume any stack input at all but just return one or two numbers. Then these extra number(s) will be pushed on the stack, taking one level per real number.

## Statistical Distributions, Probabilities etc.

You will find a lot of statistics built in your *WP 34S*, going far beyond the Gaussian distribution. Many preprogrammed functions are implemented here for the first time in an RPN calculator – we packed all distributions in we always had missed. All of these functions have a few features in common:

- Discrete statistical distributions (e.g. Poisson, Binomial) are confined to integers. Whenever we sum up a probability mass function (*pmf*<sup>5</sup>)  $p(n)$  to get a cumulated distribution function (*cdf*)  $F(m)$  we start at  $n = 0$ . Thus,

$$F(m) = \sum_{n=0}^m p(n) = P(m) .$$

- Whenever we integrate a function, we start at the left end of the integration interval. Thus, integrating a continuous probability density function (*pdf*)  $f(x)$  to get a *cdf*  $F(x)$  typically works as

$$F(x) = \int_{-\infty}^x f(\xi) d\xi = P(x) .$$

- Typically,  $F$  starts with a very shallow slope, becomes steeper then, and runs out with a decreasing slope while slowly approaching 100%. Obviously you get the most precise results on the left side of the *cdf* using  $P$ . On its right side, however, the “error probability”  $Q = 1 - P$  is more precise: since  $P$  comes very close to 100% there, you may see 1.0000 displayed while e.g.  $P = 0.99996$  in reality.
- On your *WP 34S*, with an arbitrary *cdf* named **XYZ** you find the name **XYZ**<sup>-1</sup> for its inverse (the so-called *quantile function*) and **XYZP** for the *pdf* or *pmf*). This naming convention holds for **Binomial**, **Cauchy**, **Exponential**, **Fisher**, **Geometrical**, **LogNormal**, **Logistic**, **Normal**, **Poisson**, **Student**, and **Weibull** distributions. Chisquare and Standard Normal distributions are named differently. Please see the [index](#) and the [catalog PROB](#).
- For calculating confidence limits for the “true value” based on a sample evaluation, employing a particular confidence level (e.g. 95%), you must know your objective:
  - Do you want to know the upper limit, under which the “true value” will lie with a probability of 95%? Then take 0.95 as the argument of the *inverse cdf* to get said limit, and remember there is an inevitable chance of  $100\% - 95\% = 5\%$  for the “true value” being greater than it.

---

<sup>5</sup> In a nutshell, discrete statistical distributions deal with “events” governed by a known mathematical model. The *pmf* then tells the probability to observe a certain number of such events, e.g. 7. And the *cdf* tells the probability to observe up to 7 such events, but not more.

For doing statistics with continuous statistical variables – e.g. the heights of three-year-old toddlers – similar rules apply: Assume we know the applicable mathematical model. Then the respective *cdf* tells the probability for their heights being less than an arbitrary limit value, for example less than 1m. And the corresponding *pdf* tells how these heights are distributed in a sample of let's say 1000 children of this age.

**WARNING:** This is a very coarse sketch of this topic only – please turn to textbooks about statistics to learn dealing with it properly.

The terms *pmf* and *pdf* translate to German „Dichtefunktion“ or „Wahrscheinlichkeitsdichte“, *cdf* to „Verteilungsfunktion“ or „Wahrscheinlichkeitsverteilung“.

- Do you want an upper and a lower limit confining the “true value”? Then there is an inevitable chance of  $5\% / 2 = 2.5\%$  for said value being less than the lower limit and an equal chance for it being greater than the upper limit. So you shall use 0.025 and 0.975 as arguments in two subsequent calculations using the *inverse cdf* to get both limits.

We strongly recommend you turn to a good statistics textbook for more information, also about the terminology used and the particular distributions provided.

There is a wealth of commands for sample and population statistics in one and two dimensions featured as well. Please see the [index](#) and the [catalogs STAT and SUMS](#).

## Matrices

Numbers arranged in a flat grid like in a table are called matrices by mathematicians. If you do not know matrices, feel free to leave them aside – you can use your *WP 34S* perfectly without them.

Else please note your *WP 34S* features a set of operations for adding, multiplying, inverting and transposing matrices, as well as for manipulating rows in such matrices. In general, the respective commands are building blocks designed to provide the low level support routines for creating more useful matrix functions as keystroke programs. I.e. they represent the basic linear algebra subprograms of the *WP 34S* matrix support. There are, however, also functions featured for computing determinants as well as for solving systems of linear equations.

A matrix is represented within your *WP 34S* by its *descriptor*, formatted `bb.rrcc` with  
***rr*** being the number of its rows and  
***cc*** the number of its columns. Thus the matrix has  $\text{rr} \times \text{cc}$  elements.

These elements are stored in consecutive registers starting at base address **|*bb*|**. See [below](#) to learn about the registers of your *WP 34S*.

**Example:** A descriptor 7.0203 represents a  $2 \times 3$  matrix – let us call it  $(M)$ . As you know, its six elements are arranged in two rows and three columns, and are numbered as follows:

$$(M) = \begin{pmatrix} m_{11} & m_{12} & m_{13} \\ m_{21} & m_{22} & m_{23} \end{pmatrix}$$

The matrix descriptor tells us now where to find the values of these elements:

$m_{11} = r07$  ,  $m_{12} = r08$  ,  $m_{13} = r09$  ,  $m_{21} = r10$  ,  $m_{22} = r11$  , and  $m_{23} = r12$  .

Depending on the current contents of these registers, the actual matrix may look like this:

$$(M) = \begin{pmatrix} 2.3 & 0 & 7.1 \\ 0.4 & 8.5 & 6.9 \end{pmatrix} \text{, for example.}$$

If ***cc*** is omitted in a descriptor, it is set to ***rr*** so a square matrix is assumed. So, for instance a descriptor 13.04 would belong to a  $4 \times 4$  matrix with its elements stored in **R13** through **R28**. The maximum number of matrix elements is 100 – it is the number of general purpose registers available. A vector descriptor looks like `bb.01cc` or `bb.rr01` .

Please see the [index](#) and the [catalog MATRIX](#) for all commands featured.

## COMPLEX OPERATIONS

Mathematicians know more complicated items than real numbers. The next step are complex numbers. If you do not know them, leave them aside – you can use your *WP 34S* perfectly without them.

Else please note your *WP 34S* supports many operations in complex domain as well. The key **CPX** is employed as a prefix for calling complex functions. E.g. **CPX f COS** calls the complex cosine, and it is displayed and listed as **<sup>c</sup>COS** (the elevated C is the signature for complex functions on your *WP 34S*). All such functions operating on complex numbers do so in Cartesian coordinates exclusively. Each complex number occupies two adjacent registers: the lower one for its real part and the higher one for its imaginary part.

Generally, if an arbitrary real function **f** operates on ...


- ... one real number **x** only, then its complex sibling **<sup>c</sup>f** will operate on the complex number  $x_c = x + i y$ .
- ... one register, e.g. **R12**, then **<sup>c</sup>f** will operate on **R12** and **R13**.
- ... **x** and **y**, then **<sup>c</sup>f** will operate on **x, y, z** and **t**.

Where one-number real functions replace **x** by the result **f(x)**, one-argument complex functions replace **x** by the real part and **y** by the imaginary part of the complex result **<sup>c</sup>f(x<sub>c</sub>)**. Higher stack levels remain unchanged. Such functions are e.g. **<sup>c</sup>1/x**, **<sup>c</sup>ABS**, **<sup>c</sup>FP**, **<sup>c</sup>IP**, **<sup>c</sup>RND**, **<sup>c</sup>X!**, **<sup>c</sup>X<sup>2</sup>**, **<sup>c</sup>X<sup>3</sup>**, **<sup>c</sup>√x**, **<sup>c</sup>³√x**, **<sup>c</sup>+/-**, **<sup>c</sup>Γ(x)**, the logarithmic and exponential functions with bases 10, 2 and e, as well as hyperbolic, trigonometric, and their inverses.

Two-number real functions replace **x** by the result **f(x, y)**. Analogously, two-argument complex functions replace **x** by the real part and **y** by the imaginary part of the complex result **<sup>c</sup>f(x<sub>c</sub>, y<sub>c</sub>)**. The next stack levels are filled with the complex contents of higher levels, and the complex number contained in the top two stack levels is repeated as shown below. Such complex functions are **<sup>c</sup>LOG<sub>x</sub>**, **<sup>c</sup>y<sup>x</sup>**, **<sup>c</sup>β(x,y)**, **<sup>c</sup>//**, and the basic arithmetic operations in complex domain.

Where complex operations (like **<sup>c</sup>RCL**) do not consume any stack input at all but just return a complex number, this will be pushed on the stack taking two levels.

## MEMORY

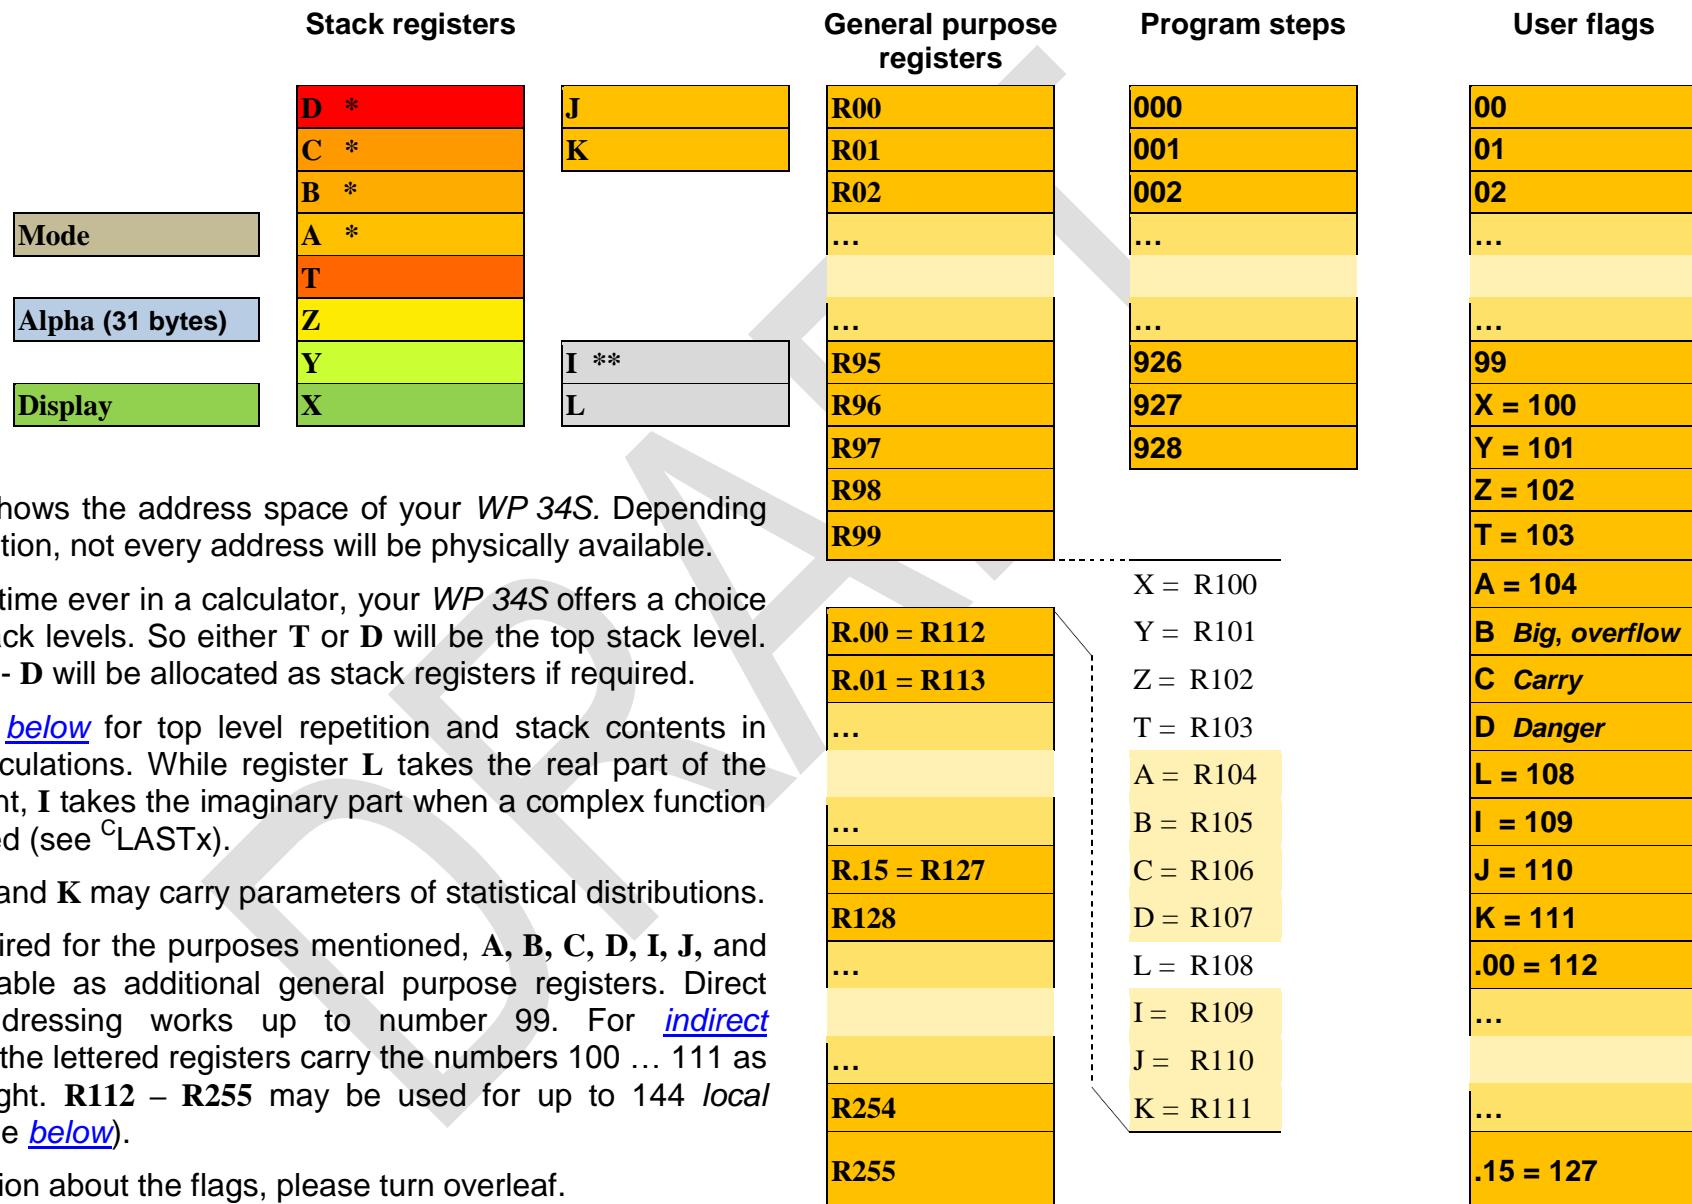

Flags 00 ... 99 are free to use for whatever purpose you like. Further flags are addressed using letters as shown on previous page. They may be used the same way like the other flags. Flags A, B, C and D, however, are also checked by the system. Flag A lights the big '=' symbol in display. In integer modes, flags B and C will be set by the system in analogy to the overflow and carry bits of *HP-16C*. Some integer operations (like shift and rotate) also read flag C. Flag D may be set by the user to allow special results (infinities and non-numeric results) without getting an error. The system only reads this flag.

For [indirect addressing](#), flags X ... K carry the numbers 100 ... 111 as shown on previous page.

Please note you will not get 532 program steps and 211 registers and 112 flags all together at the same time – see [Appendix B](#) for details of memory management.

In addition to the RAM provided, your *WP 34S* allows you to access **flash memory (FM)** for voltage-fail safe storage of user programs and data. Its first section is the backup region (2kB), holding the image of the entire program memory, registers and calculator state as soon as you completed a SAVE. The remaining part holds programs only (several kB depending on configuration). Alphanumeric labels (see below) in FM can be called via XEQ like in RAM. This allows creating program libraries in FM. Use CAT to see the labels defined already.

FM is ideal for backups or other long-living data, but shall not be used for repeated transient storage like in programmed loops (since it will not survive more than some 10,000 flashes). Registers and standard user program memory, residing in RAM on the opposite, are designed for frequent data changes but will not hold data with the batteries removed. So both kinds of memory have specific advantages and disadvantages you shall

take into account for optimum benefit and long lasting joy with your *WP 34S*. Find more about FM in [Appendix A](#) below.

Furthermore, there is a memory section called **XROM** (for “extended ROM”), where some additional routines live. Though written in user code, these routines are read only and thus can be called, executed, but not edited. For you, it makes no difference whether a preprogrammed routine executes in ROM or XROM.

Structuring program memory and jumping around in it is eased by **labels** you may tag to any program steps – as known from previous programmable pocket calculators. Your *WP 34S* features a full set of alphanumeric labels as described [below](#). Furthermore, different programs may be separated by END statements. Think of the beginning and end of program memory containing implicit END statements.

When a command like e.g. GTO **xy** is encountered, with **xy** representing one, two or three characters (like **A**, **BC**, **12**, **Tst**, **Pg3**, **x1μ**, etc.), your *WP 34S* will search this label **xy** using the following method:

1. If **xy** is purely numeric or a hotkey, it will be searched forward from the current position of the program pointer. When an END statement is reached without finding **xy**, the quest will continue right after previous END. This is as known from *HP-41C*.
2. Else, i.e. if **xy** is an alpha label of up to three characters of arbitrary case (automatically enclosed in ' like '**Ab1**'), searching will start at program step 000 and cover the entire memory in the order RAM, FM, and XROM, independent of the position of the program pointer.

## Stack Mechanics

The following assumes you are familiar with RPN – else please turn to the *HP-42S Owner's Manual* first.

The fate of particular stack register contents depends on the operation executed, its domain (real or complex) and the stack size chosen. Real functions in a 4-level stack work as known for decades. In a larger stack, everything works alike on your WP 34S – just with more levels for intermediate results. Please note only the contents of X are displayed in any case. See below for details of the stack mechanics:

Level	Assumed stack contents at the beginning:	Stack contents <u>after</u> executing ...								... <u>real</u> functions of	
		ENTER	FILL	DROP	x↔y	R↓	R↑	LASTx	... one number like $x^2$	... two numbers like /	
With 4 stack levels	T      t		z	x	t	x	z	z	t	t	t
	Z      z		y	x	t	z	y	y	z	z	t
	Y      y		x	x	z	x	x	x	y	y	z
	X      x		x	x	y	y	t	last x	$x^2$	y / x	
With 8 stack levels	D      d		c	x	d	d	x	c	d	d	d
	C      c		b	x	d	c	d	b	c	c	d
	B      b		a	x	c	b	c	a	b	b	c
	A      a		t	x	b	a	b	t	t	a	b
	T      t		z	x	a	t	a	z	z	t	a
	Z      z		y	x	t	z	t	y	y	z	t
	Y      y		x	x	z	x	z	x	y	y	z
	X      x		x	x	y	y	y	d	last x	$x^2$	y / x

Calculating formulas from inside out stays a wise strategy in either stack. With more levels, however, stack overflow will hardly ever happen, even with the most advanced formulas you compute in your life as a scientist or engineer.

Calculating with complex numbers uses two registers or stack levels for each such number as explained above and shown here:

Level	Assumed stack contents at the beginning:	Stack contents <u>after</u> executing ... ... the <u>complex</u> stack register operations						... <u>complex</u> functions of	
		$c_{ENTER}$	$c_{FILL}$	$c_{DROP}$	$c_{x \leftrightarrow y}$	$c_{R \downarrow}$	$c_{R \uparrow}$	$c_{LASTx}$	... one number like $c_x^2$
With 4 stack levels	T $\text{Im}(y_c) = \text{Im}(t_c)$		$\text{Im}(x_c)$		$y_c = t_c$	$\text{Im}(x_c)$	$x_c$	$x_c$	$y_c = t_c$
	Z $\text{Re}(y_c) = \text{Re}(t_c)$		$\text{Re}(x_c)$		$y_c$	$\text{Re}(x_c)$			$\text{Im}(y_c)$
	Y $\text{Im}(x_c)$		$\text{Im}(x_c)$			$\text{Im}(y_c)$	$y_c$	$last\ x_c$	$\text{Im}(x_c)^2$
	X $\text{Re}(x_c)$		$\text{Re}(x_c)$			$\text{Re}(y_c)$			$\text{Re}(x_c)^2$
With 8 stack levels	D $\text{Im}(t_c)$		$z_c$	$x_c$	$t_c$	$t_c$	$x_c$	$z_c$	$t_c$
	C $\text{Re}(t_c)$		$y_c$	$x_c$	$t_c$	$z_c$	$t_c$	$y_c$	$t_c$
	B $\text{Im}(z_c)$		$x_c$	$x_c$	$z_c$	$x_c$	$z_c$	$y_c$	$t_c$
	A $\text{Re}(z_c)$								$t_c$
	T $\text{Im}(y_c)$								$z_c$
	Z $\text{Re}(y_c)$								$z_c$
	Y $\text{Im}(x_c)$							$last\ x_c$	$(x_c)^2$
	X $\text{Re}(x_c)$								$y_c / x_c$

So, an 8-level stack gives you the same flexibility in complex domain you are used to with a 4-level stack in real domain.

## Comparing and Addressing Real Numbers

1 User input Dot matrix display	<b>x=?</b> , <b>x≠?</b> , <b>x&lt;?</b> , <b>x≤?</b> , <b>x≈?</b> , <b>x≥?</b> , or <b>x&gt;?</b>	<b>OP _ ?</b> (with temporary alpha mode set), e.g. <b>x&gt;_?</b>	<b>RCL</b> , <b>STO</b> , <b>RCLM</b> , <b>STOM</b> , <b>RCLS</b> , <b>STOS</b> , <b>aRCL</b> , <b>aSTO</b> , <b>VIEW</b> , <b>VWa+</b> , <b>xΣ</b> , <b>DSE</b> , <b>ISG</b> , <b>DSZ</b> , <b>ISZ</b> , <b>FIX</b> , <b>SCI</b> , <b>ENG</b> , <b>DISP</b> , <b>BASE</b> , <b>KEY?</b> , bit or flag commands, etc.				
2 User input Dot matrix display	<b>0</b> or <b>1</b> <b>OP n ?</b> e.g. <b>x≤0?</b>	Stack level or named reg. <b>Y</b> , <b>Z</b> , ... <b>OP? x</b> e.g. <b>x≥? Y</b>	<b>ENTER↑</b> <sup>7</sup> leaves temp. alpha mode. <b>OP? _</b>	→ opens indirect addressing. <b>OP?→ _</b>	Stack level or named register <b>X</b> , <b>Y</b> , <b>Z</b> , ..., <b>K</b> <sup>8</sup> <b>OP x</b> e.g. <b>SF K</b>	Number of register or flag or bit(s) or decimals <sup>9</sup> <b>OP nn</b> e.g. <b>SF 15</b>	→ <sup>10</sup> opens indirect addressing. <b>OP→ _</b>
3 User input Dot matrix display	Compares <b>x</b> with the number <b>0</b> .  Compares <b>x</b> with the number on stack level <b>Y</b> .	<b>Register no.</b> <b>0 0</b> ... <b>9 9</b>  <b>OP? nn</b> e.g. <b>x≠? 23</b>	Look right for more about indirect addressing.  Compares <b>x</b> with the number stored in <b>R23</b> .	Sets flag 111.	<b>Stack level etc.</b> <b>X</b> , <b>Y</b> , <b>Z</b> , ..., <b>K</b>  <b>OP→ x</b> e.g. <b>VIEW+L</b>	<b>Register number</b> <b>0 0</b> ... <b>9 9</b>  <b>OP→ nn</b> e.g. <b>STO→45</b>	Shows the content of the register where <b>L</b> is pointing to.  Stores <b>x</b> into the location where <b>R45</b> is pointing to.

<sup>6</sup> For **RCL** and **STO**, any of **+**, **-**, **×**, **÷**, **↑**, **▲**, or **▼** may precede step 2, except in RCLM and STOM. **VIEW** **ENTER↑** calls **aVIEW**, And **ENG** **ENTER↑** calls **ENGOVR**, while **SCI** **ENTER↑** calls **SCIOVR**. See the index of operations.

<sup>7</sup> You may skip this keystroke for numbers >19 or local registers. The latter start with a **L** – see the chapter about Programming above and Appendix B below.

<sup>8</sup> Exceptions: RCL T, RCLx T, RCL X, RCL Z, RCL+ Z require an **ENTER↑**, e.g. **RCL + ENTER↑ Z** for the latter. This holds for STO as well.

<sup>9</sup> Legal register numbers are 00 ... 211 (00 ... 99 may be specified directly). Valid flag numbers are 00 ... 111, with the twelve top flags directly addressed via **X** ... **K**. Legal numbers of decimals are 0 ... 11, accepted integer bases are 2 ... 16, bit numbers 0 to 63, and integer word size up to 64 bits. For numbers <10, you may key in e.g. **5 ENTER↑** instead of **0 5**. – Please take into account some registers may be allocated to special applications.

<sup>10</sup> Works for all commands taking a parameter or argument except **DEL\_P**.

## Comparing and Addressing Complex Numbers

1	User input Dot matrix display	<b>CPX</b> <b>x=?</b> or <b>x≠?</b>  <b>OP_</b> (with temporary alpha mode set) e.g. <b>▪x=_?</b>	<b>CPX</b> <b>RCL</b> , <b>STO</b> , or <b>x≥?</b>  <b>OP_</b> (with temporary alpha mode set) e.g. <b>▪RCL _</b> <sup>11</sup>						
2	User input Dot matrix display	<b>0</b> or <b>1</b>  <b>OP n ?</b> e.g. <b>▪x=0?</b>	<b>Stack level or named register</b> <b>X</b> , <b>Z</b> , <b>A</b> , <b>C</b> , <b>L</b> , or <b>J</b>  <b>OP? x</b> e.g. <b>▪x≠? Z</b>	<b>ENTER↑</b> <sup>12</sup> leaves temp. alpha mode	<b>OP?→_</b> → opens indirect addressing.	<b>Stack level or named register</b> <b>Z</b> <sup>13</sup> , <b>A</b> , <b>C</b> , <b>L</b> , or <b>J</b>  <b>OP x</b> e.g. <b>▪RCL L</b>	<b>Register number</b> <b>00</b> ... <b>98</b> <sup>14</sup>  <b>OP nn</b> e.g. <b>▪STO 18</b>	<b>OP→_</b> → opens indirect addressing.	
3	User input Dot matrix display	Compares <b>x + iy</b> with the real number <b>0</b> .  <b>OP? nn</b> e.g. <b>▪x≠? 26</b>	Compares <b>x + iy</b> with <b>z + it</b> .  <b>OP? nn</b> e.g. <b>▪x≠? 26</b>	<b>Register number</b> <b>00</b> ... <b>98</b>  <b>OP? nn</b> e.g. <b>▪x≠? 26</b>	Look right for more about indirect addressing.	This is <b>LASTx</b> .	<b>Stack level or named register</b> <b>X</b> , <b>Y</b> , ..., <b>K</b>  <b>OP→ x</b> e.g. <b>▪x&lt;&gt;Z</b>	<b>Register number</b> <b>00</b> ... <b>99</b>  <b>OP→ nn</b> e.g. <b>▪STO→45</b>	Swaps <b>x</b> with the contents of the register where <b>Z</b> is pointing to, and <b>y</b> with the contents of the next one.  Stores <b>x + iy</b> into 2 consecutive registers, starting with the one where <b>R45</b> is pointing to.

<sup>11</sup> For **RCL** and **STO**, any of **+**, **-**, **×**, or **/** may precede step 2. See the index of operations.

<sup>12</sup> You may skip this keystroke for numbers >19 or local registers. The latter start with a **▪** – see the chapter about Programming above and Appendix B below.

<sup>13</sup> Exceptions: **RCLE** **Z**, **RCLE** **+ Z**, **STOE** **Z**, and **STOE** **+ Z** require an **ENTER↑** preceding **Z**, e.g. **CPX** **STO** **+** **ENTER↑** **Z** for the latter.

<sup>14</sup> You may key in e.g. **8** **ENTER↑** instead of **0** **8**. Take care of pairs, since a complex operation will always affect two registers: the one specified and the one following this. We strongly recommend storing complex numbers with their real parts at even register numbers. – Please take into account some registers may be allocated to special applications.

## Addressing Labels

1 User input Dot matrix display	<b>A</b> , <b>B</b> , <b>C</b> , or <b>D</b>  <b>XEQ label</b> e.g. <b>XEQ C</b>	<b>XEQ</b> , <b>GTO</b> , <b>LBL</b> , <b>LBL?</b> , <b>SLV</b> , <b>f</b> , <b>T</b> , <b>S</b> , <b>aGTO</b> or <b>aXEQ</b>	<b>OP _</b> e.g. <b>GTO _</b>
2 User input Dot matrix display	Calls the function labeled <b>C</b> .  <b>OP label</b> e.g. <b>Z B</b>	<b>A</b> , <b>B</b> , <b>C</b> , or <b>D</b>  <b>ENTER↑</b> sets alpha mode.  <b>OP ' _</b>	<b>→</b> <sup>15</sup> opens indirect addressing and sets temporary alpha mode.  <b>OP → _</b>
3 User input Dot matrix display	Sums up the function given in a routine labeled <b>B</b> .  <b>Alphanumeric (global) label</b> (1 ... 3 characters <sup>16</sup> )  <b>OP 'label</b> e.g. <b>SLV'F1μ'</b>	<b>Stack level or named register</b> <b>X</b> , <b>Y</b> , <b>Z</b> , ..., <b>K</b>  <b>OP → x</b> e.g. <b>f+T</b>	<b>Register number</b> <b>00</b> ... <b>99</b> <sup>17</sup>  <b>OP → nn</b> e.g. <b>XEQ+44</b>

Solves the function given in the routine labeled **F1μ** (with **F1μ** keyed in as explained in footer).      Integrates the function whose label is on stack level **T**.      Executes the routine whose label is in **R44**.

Additionally, see [above](#) for the way your WP 34S searches labels, and look up GTO in the [index of operations](#) for special cases applying to this command exclusively.


<sup>15</sup> Works with all these operations except **LBL**.

<sup>16</sup> The 3<sup>rd</sup> character terminates entry and closes alpha mode again – shorter labels need a closing **ENTER↑**. For the example given here you just press **f** **2** **ENTER↑** **CPX** **1** **f** **EXIT** **g** **7** and you are done. Statements including alpha labels decrement the number of free program steps by 2. – **WARNING:** LBL A and LBL'A' are different animals! The latter is entered in alpha mode, the first via the hotkey directly.

<sup>17</sup> Some registers may be allocated to special applications. Please check the memory table above.

## DISPLAY AND MODES

The display features three sections: numeric, dot matrix and fixed symbols. The numeric section features a minus sign and 12 digits for the mantissa, as well as a minus sign and 3 digits for the exponent. The dot matrix is 6 dots high and 43 dots wide, allowing for some 7 to 12 characters, depending on their widths. The fixed symbols (except the big "=") are called *annunciators*, and are for indicating modes.

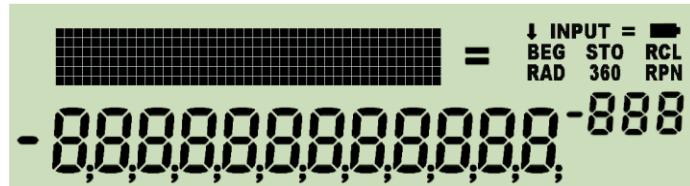

The dot matrix section above is used for

1. indicating some more modes than the annunciators allow,
2. passing additional information to the user.

The numeric section in the lower part of the LCD is used for displaying numbers in different formats, for status, or messages.

If two or more requests concur for display space, the priorities are as follows:

1. error messages as described in [Appendix C](#),
2. special information as explained below,
3. information about the modes the calculator is running in.

## Modes and Annunciators

The *annunciators* or specific characters in the LCD indicate the modes:

<b>Integer base or mode name</b>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	DECM
<b>Signaled by ... in the exponent</b>	b	3	4	5	6	7	o	9	d	-1	-2	-3	-4	-5	h	
<b>Set by ...</b>	2	BASE3, ... , BASE7, 8, BASE9, 10, ... , BASE15												16	.d	
<b>Cleared by ...</b>																

any other BASE setting, FRACT, **a b/c**, **d/c**.  
**ALL**, **FIX**, **SCI**, **ENG**, and TIME will set DECM

<b>Mode name</b>	PRG	$\alpha$					FRC
<b>Signaled by ...</b>	<b>STO</b>	<b>INPUT</b>	<b>360</b>	<b>RAD</b>	<b>G</b>		
<b>Set by ...</b>	<b>P/R</b>	<b><math>\alpha</math></b> $\alpha$ ON	<b>DEG</b>	<b>RAD</b>	<b>GRAD</b>	<b>d/c</b> , <b>a b/c</b> 2 <sup>nd</sup> <b>Q</b> in input BASE1, FRACT	
<b>Cleared by ...</b>	<b>P/R</b> <b>EXIT</b>	<b>ENTER</b> $\alpha$ OFF <b>EXIT</b>	<b>GRAD</b> <b>RAD</b>	<b>DEG</b> <b>GRAD</b>	<b>DEG</b> <b>RAD</b>	<b>BASE ≠ 1</b> <b>H.MS</b> , TIME, <b>→ H.MS</b> <b>ALL</b> , <b>FIX</b> , <b>SCI</b> , <b>ENG</b>	

**BEG** indicates the program pointer standing at step 000 of program memory. A running program is signaled by **RCL** flashing. **RPN** is lit permanently unless a temporary message is shown. Time modes (12h / 24h) are seen in the time string directly. The numeric format of fraction mode is unambiguous as well. Further settings are signaled in the dot matrix section, like the different date modes being indicated there by **Y.MD** or **M.DY**. Defaults D.MY and DECM are not indicated. Please check the examples below.

**All keyboard input will be interpreted according to the modes set at input time.**

Some mode and display settings may be stored and recalled collectively by STOM and RCLM. These are stack depth and contrast set, complete decimal display settings, trig mode, choices for date and time display, the parameters of integer and fraction mode, curve fitting model and rounding mode selected. STOM stores this information in the register you specify. RCLM recalls the contents of such a register and sets the calculator modes accordingly. Please note the user is responsible for recalling valid mode data – else your WP 34S may be driven into a lockup state! See the [index of operations](#) for more information about changing modes and the individual commands employed.

Some regional preferences may be set at once using shortcuts:

Command	Radix mark	Three digit separators	Time	Date	JG <sup>18</sup>	Remarks
SETCHN	Point	Off	24h	Y.MD	1949	Would require separators every four digits.
SETEUR	Comma	On	24h	D.MY	1582	Applies also for South America.
SETIND	Point	Off	24h	D.MY	1752	Would require separators every two digits over 10 <sup>5</sup> .
SETJPN	Point	On	24h	Y.MD	1873	
SETUK	Point	On	12h	D.MY	1752	
SETUSA	Point	On	12h	M.DY	1752	

Please note the people living in the area of the former Soviet Union, in South Africa, Indonesia, and Vietnam use the decimal comma as well, but have different settings for dates and times.

Also the angular modes deserve a closer look: there are three of them, DEG, RAD, and GRAD. And degrees (DEG) may be displayed in decimal numbers as well as in hours, minutes, seconds and hundredth of seconds (H.MS). Conversions are provided for going from one to the other:

---

<sup>18</sup> This column states the year the Gregorian Calendar was introduced in the particular region, typically replacing the Julian Calendar (in East Asia, national calendars were replaced in the respective years). The WP 34S supports both 1582 and 1752. See the index of operations.

From	degrees H.MS	decimal degrees	radians	gon (grad)	current angular mode
to degrees H.MS	—	→H.MS	—	—	—
to decimal degrees	→H.d	—	rad→°	G→°	→DEG
to radians	—	°→rad	—	G→rad	→RAD
to gon/grad	—	°→G	rad→G	—	→GRAD
to current angular mode	—	DEG→	RAD→	GRAD→	—

Please see the [index of operations](#) for the commands printed on white background, and the [catalog of unit conversions](#) for those printed on yellow.

## Command and Mode Specific Output

Some commands and modes use the display in a special way. They are listed below in order of falling priority:

1. **VERS** generates a display similar to the one shown on the title page of this manual. This temporary message will vanish with the next key pressed. will just clear the message, any other key will be executed.
2. **SHOW** displays the full mantissa of  $x$ , i.e. all 16 digits present internally, and the exponent. E.g. **SHOW** returns

as a temporary message.

3. **STATUS** shows the amount of free memory in RAM and flash first, e.g.:

Press and read the number of global numbered registers allocated and the maximum number of registers available for local storage (please note these are displays of the emulator):

After another you will see the status of 30 user flags, shown very concisely in one display, allowing an immediate status overview after some training. If e.g. flags 2, 3, 5, 7, 11, 13, 14, 17, 19, and 23 are set, and labels B, C, and D are defined in program memory, **STATUS** will display this:



Within the numeric section, each row of horizontal bars in the mantissa shows the status of 10 flags. When a flag is set, the respective bar turns black. So here the top row of bars indicates flags 0 and 1 are clear, 2 and 3 set, and flag 4 clear. Then, the divider II separates the first group of five flags from the next. Top row bars on its right side indicate flags 5 and 7 are set. Next row of bars shows flags 11, 13, 14, 17, 19 are set, and in the lowest row only flag 23 is set. All other flags in the range from 10 to 29 are clear.

Scrolling down by  $\blacktriangledown$  will display flags 10 - 39, then 20 - 49 etc. until 70 - 99, 80 - 99, 90 - 99 in the same format, and finally the top 12 flags XYZT A:D LIJK in rows of four. Scrolling up by  $\blacktriangleup$  reverts this. Alternatively, pressing a digit, e.g. 5, will show up to 30 flags starting with 10 times this digit, e.g. flags 50 - 79. The numeric exponent always indicates the status of the hotkeys top left on the keyboard – if all four labels are used in programs then ALL will be shown there.

The status will be displayed until any key is pressed but  $\blacktriangledown$ ,  $\blacktriangleup$ , or a digit.

4. During **command input**, the dot matrix displays the command chosen until input is completed, i.e. until all required trailing parameters are entered. The prefixes **f**, **g**, and **h** are shown until they are resolved. If you pressed any of **f**, **g**, or **h** erroneously, recovery is as easy as follows:

- **f f** = NOP = **g g** = **h h** = **CPX CPX** =  $\rightarrow$   $\rightarrow$
- **g f** = **h f** = **f**  
**f g** = **h g** = **g**  
**f h** = **g h** = **h**

In addressing, progress is recorded as explained in the [tables above](#) in detail. You may cancel such pending operations by **EXIT** as described [below](#).

5. In **programming mode**, the numeric display indicates the program step (000 – 505) in the mantissa and the number of free steps in the exponent, while the dot matrix shows the command contained in the respective step, e.g.:



6. For **floating point decimal numbers**, the mantissa will be displayed adjusted to the right, the exponent to the left. Within the mantissa, either points or commas may be selected as radix marks<sup>19</sup>, and additional marks may be chosen to separate thousands. Assume the display set to FIX 4, then 12.345678901 millions may look like:

---

<sup>19</sup> Starting here, decimal input is written using a point as radix mark throughout this manual, although significantly less visible, unless specified otherwise explicitly. By experience, the „comma people“ are more capable to read radix points and interpret them correctly than vice versa.



with thousands separators on, and without them like:



These separators may also be beneficial in fraction mode described below. – With ENG 3 and after changing the sign, the same number will look like this:




If the last operation executed was a complex one, a capital **C** is displayed top left in the dot matrix pointing to the fact that you find the result of this function in **X** and **Y**.

Floating point decimal numbers within  $10^{-383} < |x| < 10^{+385}$  may be entered easily. Using a decimal mantissa, even numbers down to  $10^{-394}$  can be keyed in. The calculator works with numbers down to  $10^{-398}$  correctly. Smaller values are set to zero. For results  $|x| \geq 10^{+385}$ , error 4 or 5 will appear (see [below](#)).

7. In **integer modes**, numbers are displayed adjusted to the right as well. Word size and complement setting are indicated in the dot matrix using a format **xx.ww**, with **xx** being **1c** or **2c** for 1's or 2's complement, respectively, **un** for unsigned, or **sm** for sign-and-mantissa mode. Sign and first digit of the exponent show the base, a "c" in the second digit signals a carry bit set, an "o" in the third an overflow. Integer bases are indicated as follows:

Base	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Sign and 1 <sup>st</sup> digit of exponent displayed	b	3	4	5	6	7	o	9	d	-1	-2	-3	-4	-5	h

The example shows the WP 34S displaying an arbitrary number in unsigned hexadecimal mode with word size 64, with or without separators:

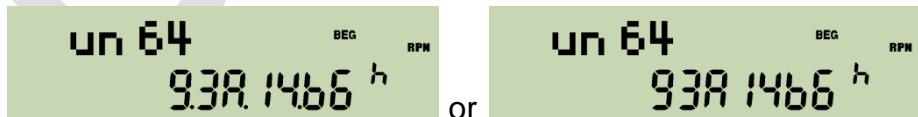

After changing to binary mode, this number will need 28 digits, being 1001001110100001010010110110. The 12 least significant digits will be displayed initially together with an indication that there are four display windows in total with the rightmost shown:



Note the least significant byte is emphasized. Now press and you will get the next byte (note there is an overlap with the first display):

The display shows the mode 'un 64' and the character '1'. Below it, the number '10 000 10 100^b' is displayed in RPN format.

Press again:

The display shows the mode 'un 64' and the character '1'. Below it, the number '100 00 11 10 10^b' is displayed in RPN format.

And finally:

The display shows the mode 'un 64' and the character '1'. Below it, the number '100 1^b' is displayed in RPN format.

If leading zeros were turned on, there will be eight display windows (corresponding to eight bytes) in this case, with the four “most significant” containing only zeros.

Going through the number in steps of eight digits is a specialty of binary integer mode. In any other base the full display width is used as step size. See e.g. the least significant part of the same number in base 3:

The display shows the mode 'un 64' and the character '1'. Below it, the number '02 120 111 1202^3' is displayed in RPN format.

and its most significant part:

The display shows the mode 'un 64' and the character '1'. Below it, the number '10 12 10^3' is displayed in RPN format.

Please note numeric input is limited to 12 digits in any integer base.

8. **Fraction mode** works similar to *HP-35S*. In particular, DENMAX sets the maximum allowable denominator (see the [index of operations](#)). Display will look like in the examples below. If the fraction is exactly equal, slightly less, or greater than the floating point number converted, “=”, “Lt”, or “Gt” is indicated in the exponent, respectively. This mode can handle numbers with absolute values < 100,000 and > 0.0001. Maximum denominator is 9999. Underflows as well as overflows will be displayed in the format set before fraction mode was entered.

Now assume your *WP 34S* being reset. Key in -47.40625 and you will see:

The display shows two states. On the left, the number '-47 13r32 =' is shown. On the right, after pressing the , the display shows '-15 17r32 ='.

Please note integers like 123 will be displayed as “123 0/1” or “123/1” in fraction mode, respectively, to indicate this mode.

Squaring the improper fraction shown above results in

The display shows the result of squaring the fraction, resulting in '230 1289r 1024 ='.

Now, enter **a b/c** for converting this result into a proper fraction. You will get

The calculator display shows the fraction  $\frac{1}{1024}$  converted to its decimal form, 0.0009765625, with a radix point and a little hook over the first digit (4) indicating it's incomplete.

with a little hook left of the first digit shown. This indicates the leading number is displayed incompletely – there are at least two digits preceding 47 but no more display space. Press **SHOW** to unveil the integer part of this proper fraction is 2247.

Input in fraction mode is straightforward and logically coherent:

Key in:	and get in proper fraction mode:
<b>1 2 . 3 . 4 ENTER↑</b>	$1\frac{3}{4}$
<b>1 . 2 ENTER↑</b>	$1\frac{1}{2}$
<b>. 1 . 2 ENTER↑</b>	$1\frac{2}{1}$
<b>. 1 2 ENTER↑</b>	$3\frac{2}{5}$ (= 0.12)
<b>1 . . 2 ENTER↑</b>	$1\frac{0}{2}$ (= $1\frac{1}{2}$ )

For comparison, please note *HP-32SII* reads the last input here as  $\frac{1}{2}$  – which is, however, not consistent with its other input interpretations in fraction mode.

9. In **H.MS display mode**, format is  $hhhh^{\circ}mm'ss.dd$ " with the number of hours or degrees limited to 9,000. Output may look like this:

The calculator display shows the value  $268^{\circ}43'5.173"$  in H.MS mode. The word "or" is positioned between two identical displays.

depending on the radix setting. For decimal times less than 5ms or 0.005 angular seconds but greater than zero, an "u" for underflow will be lit in the exponent section. For times or angles exceeding the upper limit, an "o" will be shown there signaling an overflow, and the value is displayed modulo 9,000.

10. Output of the function **WDAY** will look as follows for an input of 1.13201 in M.DY mode (equivalent to inputs of 13.01201 in D.MY or 2010.0113 in Y.MD):

The calculator display shows the day of the week, "Wednesday", followed by an equals sign and the number "3". The word "or" is positioned above the second display.

Expect similar displays after DAYS+. – Dates before the year 8 may be indicated differently to what they really were due to the inconsistent application of the leap year rule before this.

11. In **alpha mode**, the alpha register is displayed in the dot matrix, showing the last characters it is containing, while the numeric section keeps the result of the last numeric operation, e.g.:

**Answer?**

INPUT  
360 RPM  
-4242-42

Different information may be appended to **alpha**. See the commands starting with “**a**” in the index of operations below. E.g. **aTIME** allows creating texts like

**It's 7:15pm**      INPUT  
360 RPM  
-4242-42

or      **Um 19:15 Uhr**      INPUT  
BEG 360 RPM  
-4242-42

depending on time mode setting (12h / 24h). And **aDATE** will append – depending on date format setting – either 2011-04-16 or 16.04.2011 or 04/16/2011 to **alpha**.

Please note **alpha** takes up to 31 characters. And your **WP 34S** features a rich set of special letters and further characters. So you may easily store a message like

**FOI μΕΩΘΕδα**      INPUT  
BEG 360 RPM  
0-398

**ΜΟΤΙΛ σε χα**      INPUT  
BEG 360 RPM  
0-398

**λρετούν.**      INPUT  
BEG 360 RPM  
0-398

◀ and ▶ will browse such long messages in steps of 6 characters. □ will stop with the very first characters shown, □ stops showing the right end completely, i.e.

**χολρετούν.**      INPUT  
BEG 360 RPM  
0-398

in this very special case.

## Fonts

Your **WP 34S** features a large and a small font. Both are based on Luiz Viera’s (Brazil) fonts as distributed in 2004. Some letters were added and some modified for better legibility, since the dot matrix here is only 6 pixels high. The following tables show the characters directly accessible through the keyboard:

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
<b>A B C D E F G H I J K L M N O P Q R S T U V W X Y Z</b>
<b>A B C D E F G H I J K L M N O P Q R S T U V W X Y Z</b>

a b c d e f g h i j k l m n o p q r s t u v w x y z
<b>a b c d e f g h i j k l m n o p q r s t u v w x y z</b>
<b>a b c d e f g h i j k l m n o p q r s t u v w x y z</b>

ΑΒΓΔΕΖΗΘΙΚΛΜΝΞΟΠΡΣΤΥΦΧΨΩ
<b>ΑΒΓΔΕΖΗΘΙΚΛΜΝΞΟΠΡΣΤΥΦΧΨΩ</b>
<b>ΑΒΓΔΕΖΗΘΙΚΛΜΝΞΟΠΡΣΤΥΦΧΨΩ</b>

αβγδεζηθικλμνξοπρστυφχψω
<b>αβγδεζηθικλμνξοπρστυφχψω</b>
<b>αβγδεζηθικλμνξοπρστυφχψω</b>

0 1 2 3 4 5 6 7 8 9	( ) + - × / ± . ! ? ¬ \ &   ≠
<b>0123456789</b>	<b>0+−×/±.!?¬\&amp; ≠</b>
<b>0123456789</b>	<b>0+−×/±.!?¬\&amp; ≠</b>

More characters live in the alpha catalogs. You find them [below](#).

DRAFT

## **PROGRAMMING**

Your *WP 34S* is a *keystroke-programmable* calculator. If this statement makes you smile with delight, this paragraph is for you. Else please turn to the *HP-42S Owner's Manual* first for an introduction into keystroke-programming, then continue reading here.

The basic building blocks within program memory are routines (or programs). Typically, a routine starts with a label (see [above](#)) and ends with RTN or END. In between, you may store any sequence of instructions (commands, operations, statements) for repeated use. Choose any operation featured – only a few commands are not programmable. The statements in your routine may use each and every register provided – there are (almost) no limits. You are the sole and undisputed master of the memory!

This freedom, however, has a price: you must take care that your routines do not interfere in their quest for data storage space. So it is good practice keeping a list of the registers used by a particular routine, and documenting the purposes or contents of those for later reference.

If – after some time – you have a number of different routines stored, keeping track of their memory requests may become a challenge. Most of modern programming languages take care of this problem by declaring *local variables*, i.e. memory space allocated from general data memory and accessible for the current routine only – when the routine is finished, the respective memory is released again. On the *WP 34S*, registers are for data storage – so we offer you *local registers* allocated to your routine alone.

**Example:** Let us assume you write a routine labeled 'P1':

1. You just enter the command LocR 5 in your routine specifying you want five local registers,
2. then you may access these registers most easily using local numbers .00 ... .04 throughout *P1*.

Now, if you call another routine *P2* from *P1*, also *P2* may contain a step LocR requesting some local registers. They will then carry local register numbers .00 etc. again, but the local register .00 of *P2* will be different from the local register .00 of *P1*, so no interference will happen. As soon as the return statement is executed, the local registers of the corresponding routine are released and given back to the heap mentioned above.

This construction allows e.g. for recursive programs, since every time such a routine is called again it will get a new set of local registers being different from the ones it got before. Nevertheless, since you remain the sole and undisputed master of the memory, proper programming and care-taking persist being your job.

See [Appendix B](#) and the commands LocR, LocR?, MEM?, and PopLR in the [index of operations](#) below for more information.

Like the vintage keystroke-programmable calculators before, your *WP 34S* features a set of **tests**. Generally, they will work as in *HP-42S*: they will return `true` or `false` in the dot matrix if called from the keyboard; if called in a program, they will skip the next program line if the test is false.

As mentioned above, programs typically end with RTN or END. In running programs, both statements work very similar and show only subtle differences:

- An RTN statement immediately after a test returning “false” will be skipped – an END will not.
- SKIP and BACK may jump over a RTN – they cannot pass an END.

## Programmed Input and Output

A number of commands may be employed for controlling I/O of programs. In the index [below](#), their behavior is described if they are entered from the keyboard. Executed by a program, however, this will differ in a characteristic way.

With a program running, the display will be updated at certain instances only instead of after each operation. So where a command in manual mode shows an information until the next key is pressed, it will show it until the next display update in automatic mode. Such an update will occur with PROMPT, PSE, STOP, VIEW, VW $\alpha+$ , and  $\alpha$ VIEW only. This allows for the following operations (please note parameters are omitted here):

- Output of messages or other information for a defined time interval using the following code segment

```
...  
VIEW  
PSE
```

...  
(or simply PSE alone) for plain numeric calculated output or

```
...  
 $\alpha$ VIEW (or even VW $\alpha+$ )  
PSE
```

...  
for complex alphanumeric information you composed in *alpha*.

- Asking (“prompting”) for numeric input employing

```
...  
 $\alpha$ VIEW (or VW $\alpha+$ )  
STOP
```

...  
or simply PROMPT, the latter being identical to VW $\alpha+$  X plus STOP.

Whatever number you key in will be in X when you continue the program by pressing **R/S**. If you want it elsewhere, take care of it.

- Prompting for alphanumeric input by

```
...  
 $\alpha$ ON  
PROMPT  
 $\alpha$ OFF
```

...  
Whatever you key in will be appended to *alpha* here. Again, the program will continue when you pressed **R/S**.

Please see the index for more information about these commands and their parameters.

## INDEX OF OPERATIONS

All commands available are found below with their *names* and *keystrokes* necessary. Names printed in **bold** face in this list belong to functions directly accessible on the keyboard, the other commands may be picked from catalogs. The command names will show up identically in catalogs and program listings unless specified otherwise explicitly. Sorting in index and catalogs is case insensitive and works in the following order:

\_ 0...9, A...Z,  $\alpha$ ... $\omega$ , ( ) + -  $\times$  /  $\pm$ , . ! ? : ; ‘ “ \* @ \_ ~  
 → ← ↑ ↓ ⇔ < ≤ ≠ ≥ > % \$ € £ ¥ √ ∫ ∞ & \ ^ | G [ ] { } #

Super- and subscripts are handled like normal characters in sorting. The “G” at the end of the sorting order list above is the indicator for the angular mode GRAD.

Generally, functions and keystroke-programming will work as on *HP-42S*, bit and integer functions as on *HP-16C*, unless stated otherwise under remarks. Please refer to the manuals of the vintage calculators mentioned for additional information about traditional commands.

Functions available on your *WP 34S* for the first time ever on an RPN calculator got their remarks printed on **yellow background**. Operations carrying a familiar name but deviating in their functionality from said calculators are marked **light red**.

**Parameters** will be taken from the lowest stack level(s) unless mentioned explicitly in the 2<sup>nd</sup> column – then they must follow the command. If **underlined**, they may also be specified using indirect addressing, as shown in the [tables](#) above. Some parameters of statistical distributions must be given in registers **J** and **K** as specified.

In the following, each function is listed stating the mode(s) it will work in, abbreviated by their [\*\*indicators\*\*](#). In this column an “&” stands for a Boolean AND, a comma for an OR, and a “¬” for “not”. So e.g. **2<sup>X</sup>** works in all modes but alpha. All operations may also be entered in programming mode unless stated otherwise explicitly.

Name	Keys to press in modes		Remarks
<b>c...</b>	<b>CPX</b> ...	DECM	Indicates an operation allowing complex input(s) and/or complex results (see <a href="#">above</a> ). The prefix <b>CPX</b> may be heading all functions whose <i>names</i> are printed in <i>italics</i> in this list. Whenever a complex operation is executed, a capital <b>C</b> in the dot matrix will remind you to look at <i>y</i> as well.
<b>10<sup>x</sup></b>	<b>f</b> <b>10<sup>x</sup></b>	DECM	
12h	<b>h</b> <b>MODE</b> ...	¬ $\alpha$	Sets 12h time display mode: then e.g. 1:23 will become 1:23 AM, 23:45 will become 11:45 PM. This makes a difference in <i>αTIME</i> only.
1COMPL	<b>h</b> <b>MODE</b> ...	¬ $\alpha$	Sets 1's complement mode like in <i>HP-16C</i> .
<b>1/x</b>	<b>f</b> <b>1/x</b>	DECM	
	<b>B</b>	DECM	Shortcut as long as label <b>B</b> is not defined yet.

Name	Keys to press in modes		Remarks
24h	<b>h MODE</b> ...	$\neg\alpha$	Sets 24h time display mode: then e.g. 1:23 AM will become 1:23, and 11:45 PM will become 23:45. This makes a difference in $\alpha$ TIME only.
2COMPL	<b>h MODE</b> ...	$\neg\alpha$	Sets 2's complement mode like in HP-16C.
$2^x$	<b>f [2<sup>x</sup>]</b>	$\neg\alpha$	
$\sqrt[3]{x}$	<b>h X.FCN</b> ...	$\neg\alpha$	
<b>ABS</b>	<b>f  x </b>	$\neg\alpha$	Returns the absolute value.
	<b>CPX f  x </b>	DECM	Returns $r = \sqrt{x^2 + y^2}$ in <b>X</b> and clears <b>Y</b> .
<b>ACOS</b>	<b>g COS<sup>-1</sup></b>	DECM	Returns $\arccos(x)$ .
<b>ACOSH</b>	<b>g HYP<sup>-1</sup> COS</b>	DECM	Inverse hyperbolic cosine, known as <i>arcosh</i> . Note there is no need for pressing <b>f</b> here.
<b>AGM</b>	<b>h X.FCN</b> ...	DECM	Returns the arithmetic-geometric mean of $x$ and $y$ .
<b>ALL</b>	<b>h ALL n</b>	$\neg\alpha$	ALL 00 works almost like ALL in HP-42S. For $x > 10^{13}$ , however, display will switch to SCI or ENG with the maximum number of digits necessary (see SCIOVR and ENGOVR). The same will happen if $x < 10^{-n}$ and more than 12 digits are required to show $x$ completely. <b>Example:</b> Input:      Display: 700            700 ALL 03        700. 1/x            0.00 14285 7 143 10 /          14285 7 14285 7 <sup>-4</sup>
<b>AND</b>	<b>h AND</b>	Integer	Works bitwise as in HP-16C.
		DECM	Works like AND in HP-28S, i.e. $x$ and $y$ are interpreted before executing this operation. 0 is “false”, any other real number is “true”.
<b>ANGLE</b>	<b>h X.FCN</b> ...	DECM	Returns the angle between positive x-axis and the straight line from the origin to the point $(x, y)$ , i.e. $\arctan(y/x)$ . This is a two-number function, it consumes $y$ .
<b>ASIN</b>	<b>g SIN<sup>-1</sup></b>	DECM	Returns $\arcsin(x)$ .
<b>ASINH</b>	<b>g HYP<sup>-1</sup> SIN</b>	DECM	Inverse hyperbolic sine, known as <i>arsinh</i> .

Name	Keys to press in modes		Remarks
ASR	<b>h X.FCN</b> ASR <b>n</b>	Integer	Works like <b>n</b> ( $\leq 63$ ) consecutive ASR commands in HP-16C, corresponding to a division by $2^n$ . ASR 0 executes as NOP, but loads <b>L</b> .
ATAN	<b>g TAN<sup>-1</sup></b>	DECM	Returns $\arctan(x)$ .
ATANH	<b>g HYP<sup>-1</sup> TAN</b>	DECM	Inverse hyperbolic tangent, known as <i>artanh</i> .
BACK	<b>h P.FCN</b> BACK <b>n</b>	PRG	Jumps <b>n</b> program steps backwards ( $0 \leq n \leq 255$ ). So e.g. BACK 001 goes to the previous step. If BACK attempts to cross an END statement, an error is thrown. Reaching step 000 stops program execution.
BASE	<b>h MODE</b> BASE <b>n</b>	$\neg\alpha$	Sets the base for integer calculations, with $2 \leq n \leq 16$ . Popular bases are directly accessible on the keyboard. Current integer base setting is indicated in the exponent as explained <a href="#">above</a> .
BASE10	<b>f 10</b>		Furthermore, BASE0 equals DECM, and BASE1 calls FRACT. See below.
BASE16	<b>g 16</b>		<b>ATTENTION:</b> Stack contents are converted when switching from integer to DECM, and are truncated vice versa. Other registers stay as they are. The results may be surprising (see <a href="#">below</a> ).
BASE2	<b>f 2</b>		
BASE8	<b>g 8</b>		
BATT	<b>h X.FCN</b> ...	DECM	Measures the battery voltage in the range between 1.9V and 3.4V and returns this value.
		Integer	As above but returns the voltage in 0.1V units.
BC?	<b>h TEST</b> BC? <b>n</b>	Integer	Tests the specified bit in <b>x</b> .
BestF	<b>h MODE</b> ...	DECM	Selects the best curve fit model, maximizing the correlation like BEST does in HP-42S.
Binom	<b>h PROB</b> ...	DECM	Binomial distribution with the number of successes <b>g</b> in <b>X</b> , the probability of a success <b>p<sub>0</sub></b> in <b>J</b> and the sample size <b>n</b> in <b>K</b> . Binom <sub>P</sub> <sup>20</sup> returns
Binom <sub>P</sub>			$p_B(g; n; p_0) = \binom{n}{g} \cdot p_0^g \cdot (1 - p_0)^{n-g}$ .
Binom <sup>-1</sup>			Binom returns $F_B(m; n; p_0) = \sum_{g=0}^m p_B(g; n; p_0)$ , with the maximum number of successes <b>m</b> in <b>X</b> . Binom <sup>-1</sup> returns <b>m</b> for given probabilities <b>F<sub>B</sub></b> in <b>X</b> and <b>p</b> in <b>J</b> with sample size <b>n</b> in <b>K</b> .

<sup>20</sup> Binom<sub>P</sub> equals BINOMDIST(**g**; **n**; **p<sub>0</sub>**; **0**) and Binom equals BINOMDIST(**m**; **n**; **p<sub>0</sub>**; **1**) in MS Excel.

Name	Keys to press in modes		Remarks
$B_n$	<b>h X.FCN</b> ...	DECM	Returns the Bernoulli number for an integer $n > 0$ given in <b>X</b> : $B_n = (-1)^{n+1} n \cdot \zeta(1-n)$ . See below for $\zeta$ . This lives in XROM, may be less accurate.
$B_n^*$	<b>h X.FCN</b> ...	DECM	Returns the Bernoulli number according to its old definition for integer $n > 0$ given in <b>X</b> : $B_n^* = \frac{2 \cdot (2n)!}{(2\pi)^{2n}} \cdot \zeta(2n)$ . See below for $\zeta$ . This lives in XROM, may be less accurate.
BS?	<b>h TEST BS? <i>n</i></b>	Integer	Tests the specified bit in $x$ .
Cauch	<b>h PROB</b> ...	DECM	Cauchy-Lorentz distribution (also known as Lorentz or Breit-Wigner distribution) with the location $x_0$ specified in <b>J</b> and the shape $\gamma$ in <b>K</b> :  Cauch <sub>P</sub> returns $f_{Ca}(x) = \frac{1}{\pi\gamma} \cdot \frac{1}{1 + \left(\frac{x - x_0}{\gamma}\right)^2}$ ,
Cauch <sub>P</sub>			Cauch returns $F_{Ca}(x) = \frac{1}{2} + \frac{1}{\pi} \arctan\left(\frac{x - x_0}{\gamma}\right)$ .
Cauch <sup>-1</sup>			Cauch <sup>-1</sup> returns $x$ for a given probability $F_{Ca}$ in <b>X</b> , with location $x_0$ in <b>J</b> and shape $\gamma$ in <b>K</b> .
CB	<b>h X.FCN</b> CB <i>n</i>	Integer	Clears the specified bit in $x$ .
CEIL	<b>h X.FCN</b> ...	DECM	Returns the smallest integer $\geq x$ .
CF	<b>g CF <i>n</i></b>	$\neg\alpha$	Clears the flag specified.
CLALL	<b>h P.FCN</b> ...	$\neg\alpha$	Clears all registers and programs if confirmed.
CLFLAG	<b>h P.FCN</b> ...	$\neg\alpha$	Clears all user flags.
CLP	<b>f CLP</b>	All	Clears the current program, i.e. the one the program pointer is in.
CLPALL	<b>h P.FCN</b> ...	All	Clears all programs if confirmed.
CLREG	<b>h P.FCN</b> ...	All	Clears all general purpose registers. The stack and its contents are kept.
CLSTK	<b>0 g FILL</b>	$\neg\alpha$	Clears all stack registers, i.e. <b>X</b> through <b>T</b> or <b>X</b> through <b>D</b> , respectively. All other register contents are kept.
	<b>h P.FCN</b> ...		

Name	Keys to press in modes		Remarks
<b>CLx</b>	<b>h CLx</b>	$\neg\alpha$	Clears <b>X</b> only, disabling stack lift as usual.
<b>CL<math>\alpha</math></b>	<b>h CLx</b>	$\alpha$	Clears the alpha register like CLA in <i>HP-42S</i> .
	<b>h P.FCN ...</b>	All	
<b>CL<math>\Sigma</math></b>	<b>g CL<math>\Sigma</math></b>	DECM	Clears the summation registers and releases the memory allocated for them.
<b>COMB</b>	<b>f Cy,x</b>	DECM	Returns the number of possible <u>sets</u> of $y$ items taken $x$ at a time. No item occurs more than once in a set, and different orders of the same $x$ items are <u>not</u> counted separately.  Formula: $C_{y,x} = \binom{y}{x} = \frac{y!}{x!(y-x)!}$
<b>CONJ</b>	<b>CPX X.FCN ...</b>	DECM	Changes the sign of $y$ , thus returning the complex conjugate of $x_c$ .
<b>CORR</b>	<b>g r</b>	DECM	Returns the correlation coefficient for the current statistical data and curve fitting model.
<b>COS</b>	<b>f COS</b>	DECM	Returns the cosine of the angle in X.
<b>COSH</b>	<b>f HYP COS</b>	DECM	Returns the hyperbolic cosine of $x$ .
<b>COV</b>	<b>h STAT ...</b>	DECM	Returns the population covariance for two data sets. It depends on the fit model selected. For LinF, it calculates $COV_{xy} = \frac{1}{n^2} (n \sum x_i y_i - \sum x_i \sum y_i)$ See $s_{xy}$ for the sample covariance.
<b>DATE</b>	<b>h X.FCN ...</b>	DECM	Recalls the date from the real time clock and displays it in the numeric section in the format selected. See D.MY, M.DY, and Y.MD.  The function DATE of <i>HP-12C</i> corresponds to DAYS+ in your <i>WP 34S</i> (see below).
<b>DATE→</b>	<b>h X.FCN ...</b>	DECM	Assumes $x$ containing a date in the format selected and pushes its three components on the stack.
<b>DAY</b>	<b>h X.FCN ...</b>	DECM	Assumes $x$ containing a date in the format selected and extracts the day.
<b>DAYS+</b>	<b>h X.FCN ...</b>	DECM	Works like DATE in <i>HP-12C</i> , adding $x$ days on a date in <b>Y</b> in the format selected and displaying the resulting date including the day of week in the same format as WDAY does.

Name	Keys to press in modes		Remarks
DBLR	<b>h X.FCN</b> ...	Integer	Double word length commands for remainder, multiplication and division like in <i>HP-16C</i> .
DBL ×			
DBL /			
DEC	<b>h P.FCN DEC r</b>	¬α	Decrements $r$ by one, equivalent to 1 STO- $r$ , but without modifying the stack.
DECM	<b>f H.d</b>	¬α	Sets default decimal mode for calculations.
DECOMP	<b>h X.FCN</b> ...	DECM	Decomposes $x$ (after converting it into an improper fraction, if applicable), resulting in a stack [ <i>denominator(x)</i> , <i>numerator(x)</i> , $y$ , ...]. Reversible by division. <b>Example:</b> If <b>X</b> contains 2.25 then DECOMP will result in $x = 4$ and $y = 9$ , pushing previous content of <b>Y</b> to <b>Z</b> etc.
DEG	<b>g DEG</b>	DECM	Sets angular mode to degrees.
DEG→	<b>h X.FCN</b> ...	DECM	Takes $x$ as degrees and converts them to the angular mode currently set.
DENANY	<b>h MODE</b> ...	¬α	Sets default fraction format like in <i>HP-35S</i> , allowing maximum precision. Any denominator up to the value set by DENMAX may appear. <b>Example:</b> If DENMAX = 5 then DENANY allows denominators are 2, 3, 4, and 5.
DENFAC	<b>h MODE</b> ...	¬α	Sets “factors of the maximum denominator”, i.e. all integer factors of DENMAX may appear. <b>Example:</b> If DENMAX = 12 then DENFAC allows denominators 2, 3, 4, 6, and 12.
DENFIX	<b>h MODE</b> ...	¬α	Sets fixed denominator format, i.e. the one and only denominator allowed is the value set by DENMAX.
DENMAX	<b>h MODE</b> ...	¬α	Works like /c in <i>HP-35S</i> , but maximum denominator settable is 9999. It will be set to this value if $x < 1$ or $x > 9999$ at execution time. For $x = 1$ the current setting is recalled.
DET	<b>h MATRIX</b> ...	¬α	Takes a <u>descriptor</u> of a square matrix in <b>X</b> and returns the determinant of the matrix. The matrix itself is not modified.

Name	Keys to press in modes		Remarks
DISP	<b>h MODE</b> DISP <i>n</i>	DECM	Changes the number of decimals shown while keeping the basic display format (FIX, SCI, ENG) as is. With ALL set, DISP will change the switchover point (see ALL).
DROP	<b>h X.FCN</b> ...	$\neg\alpha$	Drops <i>x</i> . See <a href="#">above</a> for details and $^c$ DROP.
DSE	<b>f DSE</b> <i>r</i>	PRG	Given $cccccc.ffffii$ in <i>r</i> , DSE decrements <i>r</i> by <i>ii</i> , skipping next program line if then $ccccccc \leq fff$ . If <i>r</i> features no fractional part then <i>fff</i> is 0 and <i>ii</i> is set to 1.  Note that neither <i>fff</i> nor <i>ii</i> can be negative, and DSE makes only sense with $cccccc > 0$ .
DSL	<b>h P.FCN</b> DSL <i>r</i>	PRG	Works like DSE but skips if $ccccccc < fff$ .
DSZ	<b>h P.FCN</b> DSZ <i>r</i>	PRG	Decrements <i>r</i> by one, and skips if $ r  < 1$ thereafter. Known from the HP-16C.
D.MY	<b>h MODE</b> ...	$\neg\alpha$	Sets the format for date display.
D→J	<b>h X.FCN</b> ...	DECM	Takes <i>x</i> as a date in the format selected and converts it to a Julian day number according to JG...
D→R		DECM	Please see the <a href="#">catalog of conversions below</a> for conversions from degrees to radians.
END	<b>h P.FCN</b> ...	PRG	Last command in a routine and terminal for searching local labels as described above. Works like RTN in all other aspects.
E3OFF	<b>h MODE</b> ...	$\neg\alpha$	Toggle the thousands separators for DECM (either a point or a comma depending on the radix setting).
E3ON	<b>h MODE</b> ...		
ENG	<b>h ENG</b> <i>n</i>	$\neg\alpha$	Sets engineering display format.
ENGOVR	<b>h ENG</b> <b>ENTER↑</b>	$\neg\alpha$	Numbers exceeding the range displayable in ALL or FIX will be shown in engineering format. See SCIOVR.
ENTER↑	<b>ENTER↑</b>	$\neg\alpha$	See <a href="#">above</a> for details.
ENTRY?	<b>h TEST</b> ...	All	Checks the entry flag. This internal flag is set if: <ul style="list-style-type: none"> <li>any character is entered in alpha mode, or</li> <li>any command is accepted for entry (be it via <b>ENTER↑</b>, a function key, or <b>R/S</b> with a partial command line).</li> </ul>

Name	Keys to press in modes		Remarks
erf	<b>h X.FCN</b> ...	DECM	Returns the error function or its complementary: $\text{erf}(x) = \frac{2}{\sqrt{\pi}} \int_0^x e^{-t^2} dt \quad \text{and} \quad \text{erfc}(x) = 1 - \text{erf}(x)$
erfc	<b>h P.FCN</b> ERR <b>n</b>	PRG	Raises the error specified and clears the return stack. See <a href="#">below</a> for the respective error codes.
EVEN?	<b>h TEST</b> ...	$\neg\alpha$	Checks if $x$ is integer and even.
$e^x$	<b>f ex</b>	DECM	
ExpF	<b>h MODE</b> ...	DECM	Selects the exponential curve fit model $y = a_0 e^{a_1 x}$ .
Expon	<b>h PROB</b> ...	DECM	Exponential distribution with the rate $\lambda$ in J : $\text{Expon}_P^{21}$ returns $f_{Ex}(x) = \lambda \cdot e^{-\lambda x}$ , Expon returns $F_{Ex}(x) = 1 - e^{-\lambda x}$ . Expon $^{-1}$ returns the survival time $t_s$ for a given probability $F_{Ex}$ in X and rate $\lambda$ in J.
Expon <sub>P</sub>			
Expon $^{-1}$			
EXPT	<b>h X.FCN</b>	DECM	Returns the exponent <b>h</b> of the number displayed $x = m \cdot 10^h$ . Compare MANT.
$e^x - 1$	<b>h X.FCN</b> $e^x - 1$	DECM	Returns more accurate results for the fractional part of $e^x$ with $x \approx 0$ .
FAST	<b>h MODE</b> ...	All	Sets the processor speed to "fast". This is startup default and is kept for fresh batteries. Compare SLOW.
FB	<b>h X.FCN</b> FB <b>n</b>	Integer	Inverts ("flips") the specified bit in $x$ .
FC?	<b>h TEST</b> FC? <b>n</b> etc.	$\neg\alpha$	Tests if the flag specified is clear. Clears, flips, or sets this flag after testing, if applicable.
FC?C			
FC?F			
FC?S			
FF	<b>h P.FCN</b> FF <b>n</b>	$\neg\alpha$	Flips the flag specified.
FIB	<b>h X.FCN</b> ...	$\neg\alpha$	Returns the Fibonacci number $F_x$ .
<b>FILL</b>	<b>g FILL</b>	$\neg\alpha$	Copies $x$ to all stack levels. See details <a href="#">above</a> .
<b>FIX</b>	<b>h FIX</b> <b>n</b>	$\neg\alpha$	Sets fixed point display format.

<sup>21</sup> The pdf corresponds to EXPONDIST( $x; \lambda; 0$ ) and the cdf to EXPONDIST( $x; \lambda; 1$ ) in MS Excel.

Name	Keys to press in modes		Remarks
FLASH?	<b>h TEST</b> ...	All	Returns the number of free words in flash memory.
FLOOR	<b>h X.FCN</b> ...	DECM	Returns the largest integer $\leq x$ .
<b>FP</b>	<b>g FP</b>	DECM	Returns the fractional part of $x$ .
FP?	<b>h TEST</b> ...	$\neg\alpha$	Tests $x$ for having a nonzero fractional part.
FRACT	<b>h MODE</b> ...	$\neg\alpha$	Sets fraction mode like in HP-35S, but keeps display format as set by PROFRC or IMPFRC.
FS?	<b>h TEST</b> FS? <i>n</i> etc.	$\neg\alpha$	Tests if the flag specified is set. Clears, flips, or sets this flag after testing, if applicable.
FS?C			
FS?F			
FS?S			
$F_P(x)$	<b>h PROB</b> ...	DECM	Fisher's F-distribution. The <a href="#">cdf</a> $F(x)$ equals $1 - Q(F)$ in HP-21S. The degrees of freedom are specified in <b>J</b> and <b>K</b> .
$F(x)$			
$F^{-1}(p)$			
$f'(x)$	<b>h P.FCN</b> <i>f'(x) label</i>	DECM	Returns the first derivative of the function $f(x)$ at position $x$ . The function must be specified in a routine starting with LBL <b>label</b> . The return stack will have $y$ , $z$ , and $t$ cleared and the position $x$ in <b>L</b> .  This command will attempt to call a user routine labeled ' $\delta x$ ' to provide a fixed step size <b>dx</b> . If that routine is not defined, a step size of 0.1 is used.
$f''(x)$	<b>h P.FCN</b> <i>f''(x) label</i>	DECM	Works like $f'(x)$ but returns the second derivative of $f(x)$ .
GCD	<b>h X.FCN</b> ...	$\neg\alpha$	Returns the Greatest Common Divisor of $x$ and $y$ .
Geom	<b>h PROB</b> ...	DECM	Geometric distribution:  $Geom_P$ returns $f_{Ge}(m) = p_0(1-p_0)^m$ ,
$Geom_P$			$Geom$ returns $F_{Ge}(m) = 1 - (1-p_0)^{m+1}$ , being the probability for a first success after $m = x$ Bernoulli experiments. The probability $p_0$ for a success in each such experiment must be specified in <b>J</b> .
$Geom^{-1}$			$Geom^{-1}$ returns the number of failures $f$ before the first success for given probabilities $F_{Ge}$ in <b>X</b> and $p_0$ in <b>J</b> .

Name	Keys to press in modes		Remarks
<b>GRAD</b>	<b>g GRAD</b>	DECM	Sets angular mode to gon or grads.
<b>GRAD→</b>	<b>h X.FCN ...</b>	DECM	Takes $x$ as given in gon or grads and converts them to the angular mode currently set.
<b>GTO</b>	<b>h GTO <i>label</i></b>	PRG	Inserts an unconditional branch to <i>label</i> .
		¬PRG, ¬ $\alpha$	Positions the program pointer to <i>label</i> .
	<b>h GTO [A], [B], [C], or [D]</b>	¬ $\alpha$	... to one of these labels, if defined.
	<b>h GTO [ ] nnn</b>		... to step <i>nnn</i> .
	<b>h GTO [ ] ▲</b>		... directly after previous END.
	<b>h GTO [ ] ▼</b>		... directly after next END.
	<b>h GTO [ ] [ ]</b>		... to step 000.
<b>GTO<math>\alpha</math></b>	<b>h P.FCN ...</b>	¬ $\alpha$	Takes the first three characters of <i>alpha</i> (or less if there are less available) as a label and positions the program pointer to it.
$H_n$	<b>h X.FCN ...</b>	DECM	Hermite's polynomials for probability: $H_n(x) = (-1)^n \cdot e^{\frac{x^2}{2}} \cdot \frac{d^n}{dx^n} \left( e^{-\frac{x^2}{2}} \right)$ with $n$ in <b>Y</b> , solving the differential equation $f''(x) - 2x \cdot f'(x) + 2n \cdot f(x) = 0$ .
$H_{np}$	<b>h X.FCN ...</b>	DECM	Hermite's polynomials for physics: $H_{np}(x) = (-1)^n \cdot e^{x^2} \cdot \frac{d^n}{dx^n} \left( e^{-x^2} \right)$ with $n$ in <b>Y</b> .
<b>H.MS</b>	<b>f H.MS</b>	DECM	Assumes <b>X</b> containing decimal hours or degrees, and displays them converted in the format $hhhh^{\circ}mm'ss.dd''$ as shown in the paragraph <a href="#">above</a> . Will return to the previous decimal display with the next keystroke thereafter.
<b>H.MS+</b>	<b>h X.FCN ...</b>	DECM	Assumes <b>X</b> and <b>Y</b> containing times or degrees in the format $hhhh.mmssdd$ , and adds or subtracts them, respectively.
<b>H.MS-</b>			
<b>IBASE?</b>	<b>h TEST ...</b>	¬ $\alpha$	Returns the integer base set (see <b>BASE</b> ).

Name	Keys to press in modes		Remarks
IMPFRC	<b>g</b> <b>d/c</b>	¬α	Sets fraction mode allowing improper fractions in display (i.e. $\frac{5}{3}$ instead of $1\frac{2}{3}$ ). Converts $x$ according to the settings by DEN... Absolute decimal equivalents of $x$ must not exceed 100,000. Compare PROFRC.
		FRC	Allows displaying improper fractions. Thus converts a proper fraction in X into the equivalent improper fraction, if applicable.
INC	<b>h</b> <b>P.FCN</b> INC <b>r</b>	¬α	Increments $r$ by one, equivalent to 1 STO+ $r$ , but without modifying the stack.
INTM?	<b>h</b> <b>TEST</b> ...	¬α	Tests if your WP 34S is in an integer mode.
INT?	<b>h</b> <b>TEST</b> ...	¬α	Tests $x$ for being an integer, i.e. having a fractional part equal to zero. Compare FP?.
IP	<b>f</b> <b>IP</b>	DECM	Returns the integer part of $x$ .
iRCL	<b>h</b> <b>X.FCN</b> iRCL <b>nn</b>	¬α	Assumes <b>Rnn</b> contains integer data and recalls them as such. See <a href="#">below</a> .
ISE	<b>h</b> <b>P.FCN</b> ISE <b>r</b>	PRG	Works like ISG but skips if $ccccccc \geq ffff$ .
ISG	<b>g</b> <b>ISG</b> <b>r</b>	PRG	Given $ccccccc.ffffii$ in $r$ , this function increments $r$ by $ii$ , skipping next program line if then $ccccccc > ffff$ . If $r$ features no fractional part then $ii$ is set to 1.  Note that neither $ffff$ nor $ii$ can be negative, but $cccccc$ can.
ISZ	<b>h</b> <b>P.FCN</b> ISZ <b>r</b>	PRG	Increments $r$ by one, skipping next program line if then $ r  < 1$ . Known from HP-16C.
I β	<b>h</b> <b>X.FCN</b> ...	DECM	Returns the regularized incomplete beta function $\frac{\beta_x(x, y, z)}{\beta(y, z)} = \frac{1}{\beta(y, z)} \cdot \int_0^x t^{y-1} (1-t)^{z-1} dt$ with $\beta_x$ being the incomplete beta function and $\beta$ being Euler's beta (see below).
I Γ	<b>h</b> <b>X.FCN</b> ...	DECM	Returns the regularized incomplete gamma function $\frac{\gamma(x, y)}{\Gamma(x)}$ with $\gamma(x, y) = \int_0^y t^{x-1} e^{-t} dt$ being the lower incomplete gamma function. For $\Gamma(x)$ see below.

Name	Keys to press in modes		Remarks
JG1582	<b>h MODE</b> ...	DECM	These two commands reflect different dates the Gregorian calendar was introduced in different large areas of the world. D→J and J→D will be calculated accordingly.
J→D	<b>h X.FCN</b> ...	DECM	Takes $x$ as a Julian day number and converts it to a date according to JG... in the format selected
KEY?	<b>h TEST</b> KEY? $a$	All	Tests if a key was pressed while a program was running or paused. If <u>no</u> key was pressed, the next program step after KEY? will be executed, else it will be skipped and the code of said key will be found in address $a$ . Key codes start top left and correspond to the rows and columns on the keyboard – so e.g. <b>A</b> corresponds to 11, <b>CPX</b> to 16, <b>STO</b> to 21, and <b>+</b> to 75.
KTP?	<b>h TEST</b> KTP? $a$	All	Assumes a key code in address $a$ . Checks this code and returns the key type: <ul style="list-style-type: none"> <li>• 0 ... 9 if it corresponds to a digit <b>0</b> ... <b>9</b>,</li> <li>• 10 if it corresponds to <b>.</b>, <b>EEX</b>, or <b>+/-</b>,</li> <li>• 11 if it corresponds to <b>f</b>, <b>g</b>, or <b>h</b>,</li> <li>• 12 if it corresponds to any other key.</li> </ul> May help in user interaction with programs.
LAST $x$	<b>RCL L</b>	$\neg\alpha$	See <a href="#">above</a> for details.
LBL	<b>f LBL</b> <i>label</i>	PRG	Identifies programs and routines for execution and branching. See opportunities for specifying <i>label</i> in the table <a href="#">above</a> .
LBL?	<b>h TEST</b> LBL? <i>label</i>	All	Tests for the existence of the label specified, anywhere in program memory. See opportunities for specifying <i>label</i> in the table <a href="#">above</a> .
LCM	<b>h X.FCN</b> ...	$\neg\alpha$	Returns the Least Common Multiple of $x$ and $y$ .
LEAP?	<b>h TEST</b> ...	DECM	Takes $x$ as a date in the format selected, extracts the year, and tests for a leap year.

Name	Keys to press in modes		Remarks
LgNrm			Lognormal distribution with $\mu = \ln \bar{x}_g$ specified in <b>J</b> and $\sigma = \ln \varepsilon$ in <b>K</b> . See $\bar{x}g$ and $\varepsilon$ below.
LgNrm <sub>P</sub>	<b>h PROB</b> ...	DECM	LgNrm <sub>P</sub> returns $f_{L_n}(x) = \frac{1}{x\sigma\sqrt{2\pi}} e^{-\frac{(\ln x - \mu)^2}{2\sigma^2}}$ , LgNrm returns $F_{L_n}(x) = \Phi\left(\frac{\ln x - \mu}{\sigma}\right)$ with $\Phi(z)$ denoting the standard normal <a href="#">cdf</a> .
LgNrm <sup>-1</sup>			LgNrm <sup>-1</sup> returns $x$ for a given probability $F_{L_n}$ in <b>X</b> , <b>μ</b> in <b>J</b> , and <b>σ</b> in <b>K</b> .
LINEQS	<b>h X.FCN</b> ...	$\neg\alpha$	Takes a base register in <b>X</b> , a vector <a href="#">descriptor</a> in <b>Y</b> , and a descriptor of a square matrix in <b>Z</b> . Solves the system of linear equations $(Z) \cdot \vec{x} = \vec{y}$ and returns the filled in vector descriptor in <b>X</b> .
LinF	<b>h MODE</b> ...	DECM	Selects the linear curve fit model $y = a_0 + a_1 x$ .
LJ	<b>h X.FCN</b> ...	Integer	Left adjust as in HP-16C.
LN	<b>g LN</b>	DECM	Returns the natural logarithm of $x$ , i.e. the logarithm of $x$ for base e.
$L_n$	<b>h X.FCN</b> ...	DECM	Laguerre's polynomials (compare $L_n\alpha$ below): $L_n(x) = \frac{e^x}{n!} \cdot \frac{d^n}{dx^n} (x^n e^{-x}) = L_n^{(0)}(x)$ with <b>n</b> in <b>Y</b> , solving the differential equation $x \cdot y'' + (1-x)y' + ny = 0$ .
LN1+x	<b>h X.FCN</b> ...	DECM	Natural logarithm of values close to zero. Returns $\ln(1+x)$ , providing a much higher accuracy in the fractional part of the result.
$L_n\alpha$	<b>h X.FCN</b> ...	DECM	Laguerre's generalized polynomials with <b>n</b> in <b>Y</b> and <b>α</b> in <b>Z</b> : $L_n^{(\alpha)}(x) = \frac{x^{-\alpha} e^x}{n!} \cdot \frac{d^n}{dx^n} (x^{n+\alpha} e^{-x})$ .
LNβ	<b>h X.FCN</b> ...	DECM	Returns the natural logarithm of Euler's β function. See there.
LNΓ	<b>h X.FCN</b> ...	DECM	Returns the natural logarithm of $\Gamma(x)$ . See there.

Name	Keys to press in modes		Remarks
LOAD	<b>h P.FCN</b> ...	$\neg\alpha$	Restores the entire backup from flash. Compare SAVE.
LOADP	<b>h P.FCN</b> ...	$\neg\alpha$	Loads the complete program memory from the backup and appends it to the programs already in RAM. This will only work if there is enough space.
LOADR	<b>h P.FCN</b> ...	$\neg\alpha$	Recovers general purpose registers from the backup (see SAVE and <a href="#">above</a> ). The number of registers copied is min(regs(flash),regs(RAM)).
LOADST	<b>h P.FCN</b> ...	$\neg\alpha$	Recovers the system state from the backup.
LOADΣ	<b>h P.FCN</b> ...	$\neg\alpha$	Recovers the summation registers from the backup. Throws an error if there are none.
LocR	<b>h P.FCN</b> LocR <i>n</i>	PRG	Allocates <i>n</i> local registers (up to 144) and 16 local flags for the current program. See <a href="#">above</a> .
LocR?	<b>h TEST</b> LocR?	PRG	Returns the number of local registers allocated.
<b>LOG</b> <sub>10</sub>	<b>g LG</b>	DECM	Returns the logarithm of <i>x</i> for base 10.
<b>LOG</b> <sub>2</sub>	<b>g LB</b>	$\neg\alpha$	Returns the logarithm of <i>x</i> for base 2.
LogF	<b>h MODE</b> ...	DECM	Selects the logarithmic curve fit model $y = a_0 + a_1 \ln x$ .
Logis	<b>h PROB</b> ...	DECM	Logistic distribution with $\mu$ given in <b>J</b> and $s$ in <b>K</b> . Logis <sub>P</sub> returns $f_{Lg}(x) = e^{-\frac{x-\mu}{s}} / s \cdot \left(1 + e^{-\frac{x-\mu}{s}}\right)^2$ ,
Logis <sub>P</sub>			Logis returns $F_{Lg}(x) = \left(1 + e^{-\frac{x-\mu}{s}}\right)^{-1}$ .
Logis <sup>-1</sup>			Logis <sup>-1</sup> returns $F_{Lg}^{-1}(p) = \mu + s \cdot \ln\left(\frac{p}{1-p}\right)$ for a probability <i>p</i> given in <b>X</b> , $\mu$ in <b>J</b> , and $s$ in <b>K</b> .
<b>LOGx</b>	<b>g LOGx</b>	DECM	Returns the logarithm of <i>y</i> for base <i>x</i> .
	<b>CPX</b> <b>g LOGx</b>	DECM	Returns the complex logarithm of <i>z + i t</i> for the complex base <i>x + i y</i> .
LZOFF	<b>h MODE</b> ...	$\neg\alpha$	Toggles leading zeros like flag 3 does in HP-16C. Relevant in integer modes only.
LZON			

Name	Keys to press in modes		Remarks
L.R.	<b>h STAT</b> ...	DECM	Returns the parameters $a_1$ and $a_0$ of the fit curve through the data points accumulated, according to the model selected, and pushes them on the stack. For a straight regression line, $a_0$ is the y-intercept and $a_1$ , the slope.
MANT	<b>h X.FCN</b> ...	DECM	Returns the mantissa $m$ of the number displayed $x = m \cdot 10^h$ . Compare EXPT.
MASKL	<b>h X.FCN</b> MASKL <i>n</i> etc.	Integer	Work like MASKL and MASKR on HP-16C, but with the mask length following the command instead of taken from <b>X</b> .
MASKR			
MAX	<b>h X.FCN</b> ...	$\neg\alpha$	Returns the maximum of $x$ and $y$ .
MEM?	<b>h TEST</b> ...	All	Returns the number of free words in program memory, taking into account the local registers allocated.
MIN	<b>h X.FCN</b> ...	$\neg\alpha$	Returns the minimum of $x$ and $y$ .
MIRROR	<b>h X.FCN</b> ...	Integer	Reflects the bit pattern in $x$ (e.g. 000101 becomes 101000 for word size 6).
MONTH	<b>h X.FCN</b> ...	DECM	Assumes $x$ containing a date in the format selected and extracts the month.
MROW+ $x$	<b>h MATRIX</b> ...	DECM	Takes a matrix <i>descriptor</i> in <b>X</b> , a destination row number in <b>Y</b> , a source row number in <b>Z</b> , and a real number in <b>T</b> . It multiples each element $m_{zi}$ by $t$ and adds it to $m_{yi}$ . The stack is unchanged. M.ROW+ $x$ is similar to PPC M3.
MROW $x$	<b>h MATRIX</b> ...	DECM	Takes a matrix <i>descriptor</i> in <b>X</b> , a row number in <b>Y</b> , and a real number in <b>Z</b> . It multiples each element $m_{yi}$ by $z$ . The stack is unchanged. M.ROW $x$ is similar to PPC M2.
MROW $\Leftarrow$	<b>h MATRIX</b> ...	DECM	Takes a matrix <i>descriptor</i> in <b>X</b> and two row numbers in <b>Y</b> and <b>Z</b> . It swaps the contents of rows $y$ and $z$ . The stack is unchanged. M.ROW $\Leftarrow$ is similar to PPC M1.
MSG	<b>h P.FCN</b> MSG <i>n</i>	PRG	Throws the error message specified. It will vanish with the next keystroke. See <a href="#">below</a> for the respective error codes. Compare ERR.

Name	Keys to press in modes		Remarks
M+ $x$	<b>h</b> <b>MATRIX</b> ...	DECM	Takes two matrix <i>descriptors</i> in <b>X</b> and <b>Y</b> , and a real number $z$ . Returns $(X) + (Y) \cdot z = (X)$ . Thus a scalar multiple of one matrix is added to another matrix. The multiply adds are done internally in high precision and results should be exactly rounded.
$M^{-1}$	<b>h</b> <b>MATRIX</b> ...	DECM	Takes a <i>descriptor</i> of a square matrix in <b>X</b> and inverts the matrix in-situ. Doesn't alter the stack.
M-ALL	<b>h</b> <b>MATRIX</b> ...	DECM	Takes a matrix <i>descriptor</i> in <b>X</b> , saves it in <b>L</b> , and returns a value suitable for ISG or DSL looping in <b>X</b> . The loop processes <i>all</i> elements in the matrix. The loop index is DSL if the descriptor is negative and ISG else.
M-COL	<b>h</b> <b>MATRIX</b> ...	DECM	Takes a matrix <i>descriptor</i> in <b>X</b> and a column number in <b>Y</b> . Returns a loop counter in <b>X</b> , dropping the stack. The matrix descriptor is saved in <b>L</b> . The loop processes all elements $m_{iy}$ only. The loop index is DSL if the descriptor is negative and ISG else.
M-DIAG	<b>h</b> <b>MATRIX</b> ...	DECM	Takes a matrix <i>descriptor</i> in <b>X</b> , saves it in <b>L</b> , and returns a loop counter in <b>X</b> . The loop processes all elements along the matrix diagonal, i.e. all elements $m_{ii}$ . The loop index is DSL if the descriptor is negative and ISG else.
M-ROW	<b>h</b> <b>MATRIX</b> ...	DECM	Takes a matrix <i>descriptor</i> in <b>X</b> and a row number in <b>Y</b> . Returns a loop counter in <b>X</b> , dropping the stack and setting last <b>L</b> like all two-argument commands. The loop processes all elements $m_{yi}$ only. The loop index is DSL if the descriptor is negative and ISG else.
M $x$	<b>h</b> <b>MATRIX</b> ...	DECM	Takes two matrix <i>descriptors</i> in <b>Y</b> and <b>Z</b> and the integer part of $x$ as the base address of the result. Returns $(Z) \cdot (Y) = (X)$ . All calculations are done internally in high precision. The fractional part of $x$ is updated to match the resulting matrix – no overlap checking is performed.
M.COPY	<b>h</b> <b>MATRIX</b> ...	DECM	Takes a matrix <i>descriptor</i> in <b>Y</b> and a register number in <b>X</b> . Copies the matrix into registers starting at <b>X</b> . Returns a properly formatted matrix descriptor in <b>X</b> .
M.DY	<b>h</b> <b>MODE</b> ...	$\neg\alpha$	Sets the format for date display.

Name	Keys to press in modes		Remarks
M.IJ	<b>h MATRIX ...</b>	DECM	Takes a matrix <i>descriptor</i> in <b>X</b> and a register number in <b>Y</b> . Returns the column that register represents in <b>Y</b> and the row in <b>X</b> . The descriptor is saved in <b>L</b> . M.IJ is similar to <i>PPC M4</i> .
M.LU	<b>h MATRIX ...</b>	DECM	Takes <i>descriptor</i> of a square matrix in <b>X</b> . Transforms the matrix into its LU decomposition. The matrix is modified in-situ. The value in <b>X</b> is replaced by a pivot descriptor that defines the pivots that were required to calculate the decomposition. The most significant digit is the pivot for the first diagonal entry, the next most the second and so forth.
M.REG	<b>h MATRIX ...</b>	DECM	Takes a matrix <i>descriptor</i> in <b>X</b> , a row number in <b>Y</b> , and a column number in <b>Z</b> . The descriptor is saved in <b>L</b> . M.REG returns the register number in <b>X</b> (popping the stack twice). It is similar to <i>PPC M5</i> .
M.SQR?	<b>h TEST ...</b>	DECM	Takes a matrix <i>descriptor</i> in <b>X</b> and tests it. Returns "true" if the matrix is square.
NAND	<b>h X.FCN ...</b>	$\neg\alpha$	Works in analogy to AND.
NaN?	<b>h TEST ...</b>	$\neg\alpha$	Tests <i>x</i> for being "Not a Number".
nBITS	<b>h X.FCN ...</b>	Integer	Counts bits set in <i>x</i> like #B does on <i>HP-16C</i> .
nCOL	<b>h MATRIX ...</b>	DECM	Takes a matrix <i>descriptor</i> in <b>X</b> , saves it in <b>L</b> , and returns the number of columns in this matrix.
NEIGHB	<b>h X.FCN ...</b>	$\neg\alpha$	Returns the nearest machine-representable number to <i>x</i> in the direction toward <i>y</i> in the mode set. For <i>x</i> < <i>y</i> (or <i>x</i> > <i>y</i> ), this is the machine successor (or predecessor) of <i>x</i> , for <i>x</i> = <i>y</i> it is <i>y</i> . Thus, in integer modes, either <i>x</i> +1, <i>y</i> , or <i>x</i> -1 are returned.  You will find NEIGHB useful e.g. in investigating numeric stability. See NEIGHBOR in the HP-71 Math Pac.
NEXTP	<b>h X.FCN ...</b>	$\neg\alpha$	Returns the next prime number > <i>x</i> .
NOP	<b>h P.FCN ...</b>	PRG	"Empty" step FWIW.
NOR	<b>h X.FCN ...</b>	$\neg\alpha$	Works in analogy to AND.

Name	Keys to press in modes		Remarks
Norml		DECM	Normal distribution with an arbitrary mean $\mu$ specified in <b>J</b> and standard deviation $\sigma$ in <b>K</b> :  Norml <sub>P</sub> <sup>22</sup> returns $f_N(x) = \frac{1}{\sigma\sqrt{2\pi}} e^{-\frac{(x-\mu)^2}{2\sigma^2}}$ , Norml returns $F_N(x) = \Phi\left(\frac{x-\mu}{\sigma}\right)$ . See below for the standard normal distribution $\Phi$ .
Norml <sub>P</sub>	<b>h PROB</b> ...	DECM	
Norml <sup>-1</sup>	<b>h PROB</b> ...	DECM	Returns $x$ for a given probability $F_N$ in <b>X</b> , mean $\mu$ in <b>J</b> , and standard deviation $\sigma$ in <b>K</b> <sup>23</sup> .
NOT	<b>h NOT</b>	Integer	Inverts bit-wise as on HP-16C.
		DECM	Returns 1 for 0, and 0 for any other input.
nROW	<b>h MATRIX</b> ...	DECM	Takes a matrix <u>descriptor</u> in <b>X</b> , saves it in <b>L</b> , and returns the number of rows in this matrix.
nΣ	<b>h SUMS</b> ...	DECM	Recalls the number of accumulated data points. Necessary for basic statistics.
ODD?	<b>h TEST</b> ...	¬α	Checks if $x$ is integer and odd.
OFF	<b>g OFF</b>	PRG	Inserts a step to turn your WP 34S off under program control.
OR	<b>h OR</b>	¬α	Works in analogy to AND.
PERM	<b>g Py.x</b>	DECM	Returns the number of possible <u>arrangements</u> of $y$ items taken $x$ at a time. No item occurs more than once in an arrangement, and different orders of the same $x$ items <u>are</u> counted separately.  Formula: $P_{y,x} = x!C_{y,x}$ , compare COMB.
P <sub>n</sub>	<b>h X.FCN</b> ...	DECM	Legendre's polynomials: $P_n(x) = \frac{1}{2^n n!} \cdot \frac{d^n}{dx^n} [(x^2 - 1)^n]$ with $n$ in <b>Y</b> , solving the differential equation $\frac{d}{dx} \left[ (1 - x^2) \cdot \frac{d}{dx} f(x) \right] + n(n+1)f(x) = 0.$

<sup>22</sup> Norml<sub>P</sub> corresponds to NORMDIST( $x; \mu; \sigma; 0$ ) and Norml to NORMDIST( $x; \mu; \sigma; 1$ ) in MS Excel.

<sup>23</sup> This corresponds to NORMINV( $F_N; \mu; \sigma$ ) in MS Excel.

Name	Keys to press in modes		Remarks
Poiss	<b>h</b> <b>PROB</b> ...	DECM	Poisson distribution with the number of successes $\mathbf{g}$ in $\mathbf{X}$ , the gross error probability $\mathbf{p}_0$ in $\mathbf{J}$ , and the sample size $\mathbf{n}$ in $\mathbf{K}$ .  $P_{\text{Poiss}}^{24}$ returns $P_p(g; \lambda) = \frac{\lambda^g}{g!} e^{-\lambda}$ with $\lambda = n \cdot p_0$ .
Poiss <sub>P</sub>			 Poiss returns $F_p(m; \lambda) = \sum_{g=0}^m P_p(g; \lambda)$ , with the maximum number of successes $\mathbf{m}$ in $\mathbf{X}$ .
Poiss <sup>-1</sup>			Poiss <sup>-1</sup> returns $\mathbf{m}$ for given probabilities $\mathbf{F}_P$ in $\mathbf{X}$ and $\mathbf{p}_0$ in $\mathbf{J}$ with sample size $\mathbf{n}$ in $\mathbf{K}$ .
Poisλ	<b>h</b> <b>PROB</b> ...	DECM	Poisson distribution, like Poiss... above with $\mathbf{g}$ in $\mathbf{X}$ , but the Poisson parameter $\lambda$ in $\mathbf{J}$ .  Poisλ <sup>-1</sup> returns $\mathbf{m}$ for a given probability $\mathbf{F}_P$ in $\mathbf{X}$ and $\lambda$ in $\mathbf{J}$ .
PopLR			PRG  Pops the local registers without returning. See LocR and RTN.
PowerF			Selects the power curve fit model $y = a_0 x^{a_1}$ .
PRCL	<b>h</b> <b>P.FCN</b> PRCL	¬α	Copies the current program (from flash or RAM) and appends it to RAM where it can be edited then (see <a href="#">above</a> ). Allows duplicating programs in RAM. Will only work if there is enough space.
PRIME?	<b>h</b> <b>TEST</b> ...	¬α	Checks if the absolute value of the integer part of $x$ is a prime. The method is believed to work for integers up to 9E18.
PROFRC	<b>f</b> <b>a b/c</b>	DECM	Sets fraction mode like in HP-35S, allowing only proper fractions or mixed numbers in display. Converts $x$ according to the settings by DEN... Absolute decimal equivalents of $x$ must not exceed 100,000. Compare IMPFRC.
		FRC	Allows displaying only proper fractions. Thus converts an improper fraction in $\mathbf{X}$ , if applicable, e.g. $5/3$ into $1 \frac{2}{3}$ .
PROMPT	<b>h</b> <b>P.FCN</b> ...	PRG	Displays <i>alpha</i> and stops program execution (equaling αVIEW followed by STOP). See <a href="#">above</a> for more.

<sup>24</sup> The pmf corresponds to POISSON( $\mathbf{g}; \lambda; 0$ ) and the cdf to POISSON( $\mathbf{g}; \lambda; 1$ ) in MS Excel.

Name	Keys to press in modes		Remarks
PSE	<b>h PSE <i>nn</i></b>	PRG	Refreshes the display and pauses program execution for <i>nn</i> ticks, with $0 \leq nn \leq 99$ . The pause will be terminated early as soon as a key is pressed.
PSTO	<b>h P.FCN PSTO</b>	$\neg\alpha$	Copies the current program from RAM into flash memory, replacing any program carrying the same label there (see <a href="#">above</a> ). Alphanumeric labels in flash can be browsed using CAT (see <a href="#">below</a> ).
PUTK	<b>h P.FCN PUTK <i>a</i></b>	All	Assumes a key code in address <i>a</i> . Stops program execution, takes said code and puts it in the keyboard buffer resulting in immediate execution of the corresponding call. <b>R/S</b> is required to resume program execution. May help in user interaction with programs.
RAD	<b>g RAD</b>	DECM	Sets angular mode to radians.
RAD→	<b>h X.FCN ...</b>	DECM	Takes <i>x</i> as radians and converts them to the angular mode currently set.
RAN#	<b>f RAN#</b>	DECM	Returns a random number between 0 and 1 like RAN in HP-42S.
		Integer	Returns a random bit pattern for the word size set.
RCL	<b>RCL</b>	$\neg\alpha$	See the <a href="#">addressing table above</a> for ${}^C RCL$ .
RCLM	<b>RCL MODE <i>s</i></b>	$\neg\alpha$	Recalls mode settings stored via STOM as described <a href="#">above</a> .
	<b>h MODE RCLM <i>s</i></b>		
RCLS	<b>h P.FCN RCLS <i>s</i></b>	$\neg\alpha$	Recalls 4 or 8 values from a set of registers starting at address <i>s</i> , and pushes them on the stack. This is the converse command of STOS.
RCL+	<b>RCL + <i>s</i></b>	$\neg\alpha$	Recalls the content of address <i>s</i> , executes the specified operation on it and pushes the result on the stack.  E.g. RCL–12 subtracts <i>r12</i> from <i>x</i> and displays the result (acting like <b>RCL</b> 12 <b>–</b> , but without losing a stack level). In analogy, ${}^C RCL$ –12 subtracts <i>r12</i> from <i>x</i> and <i>r13</i> from <i>y</i> .
RCL–	<b>RCL – <i>s</i></b>		
RCL×	<b>RCL × <i>s</i></b>		
RCL/	<b>RCL / <i>s</i></b>		
RCL↑	<b>RCL ▲ <i>s</i></b>	$\neg\alpha$	RCL↑ (↑) recalls the maximum (minimum) of the values in <i>s</i> and <b>X</b> .
RCL↓	<b>RCL ▼ <i>s</i></b>		

Name	Keys to press in modes		Remarks														
RDX, RDX.	<b>h MODE</b> RDX,	¬α	Sets the decimal mark to a comma.														
	<b>h ./.</b>	DECM	Toggles the radix mark.														
REALM?	<b>h TEST</b> ...	¬α	Sets the decimal mark to a point.														
	<b>h P.FCN</b> ...	¬α	Prepares your <i>WP 34S</i> for receiving data via serial I/O. See <a href="#">Appendix A</a> for more.														
REGS	<b>h MODE</b> REGS <i>nnn</i>	¬α	Specifies the number of general purpose register accessible. With REGS 100 you get the default state, REGS 00 leaves not even one single such register for use.														
REGS?	<b>h TEST</b> ...	¬α	Returns the number of general purpose registers allocated (1 ... 100).														
RESET	<b>h X.FCN</b> ...	All	Executes CLALL and resets all modes to start-up default, i.e. 24h, 2COMPL, ALL 00, DBLOFF, DEG, DENANY, DENMAX 9999, DECM, LinF, PROFRC, RDX., REGS 100, SCIOVR, SSIZE4, WSIZE 64, Y.MD. See these commands for more information. RESET is not programmable.														
RJ	<b>h X.FCN</b> ...	Integer	Right adjusts, in analogy to LJ on <i>HP-16C</i> .														
RL	<b>h X.FCN</b> RL <i>n</i>	Integer	Works like <i>n</i> consecutive RLs / RLCs on <i>HP-16C</i> . For RL, $1 \leq n \leq 63$ . For RLC, $1 \leq n \leq 64$ . RL 0 and RLC 0 execute as NOP.														
RLC	<b>h X.FCN</b> RLC <i>n</i>																
RM	<b>h MODE</b> ...	¬α	<p>Sets the floating point rounding mode. This is only used when converting from the high precision internal format to packed real numbers. It will <u>not</u> alter the display nor change the behavior of ROUND. The following rounding modes are supported:</p> <table> <tbody> <tr> <td>0: round half even:</td> <td><math>\frac{1}{2} = 0.5</math> rounds to next even number (default).</td> </tr> <tr> <td>1: round half up:</td> <td>0.5 rounds up ("businessman's rounding").</td> </tr> <tr> <td>2: round half down:</td> <td>0.5 rounds down.</td> </tr> <tr> <td>3: round up:</td> <td>away from 0.</td> </tr> <tr> <td>4: round down:</td> <td>towards 0 (truncates).</td> </tr> <tr> <td>5: ceiling:</td> <td>rounds towards <math>+\infty</math>.</td> </tr> <tr> <td>6: floor:</td> <td>rounds towards <math>-\infty</math>.</td> </tr> </tbody> </table>	0: round half even:	$\frac{1}{2} = 0.5$ rounds to next even number (default).	1: round half up:	0.5 rounds up ("businessman's rounding").	2: round half down:	0.5 rounds down.	3: round up:	away from 0.	4: round down:	towards 0 (truncates).	5: ceiling:	rounds towards $+\infty$ .	6: floor:	rounds towards $-\infty$ .
0: round half even:	$\frac{1}{2} = 0.5$ rounds to next even number (default).																
1: round half up:	0.5 rounds up ("businessman's rounding").																
2: round half down:	0.5 rounds down.																
3: round up:	away from 0.																
4: round down:	towards 0 (truncates).																
5: ceiling:	rounds towards $+\infty$ .																
6: floor:	rounds towards $-\infty$ .																

Name	Keys to press in modes		Remarks
RM?	<b>h TEST</b> ...	$\neg\alpha$	Returns the floating point rounding mode set. See RM for more.
RMDR	<b>h RMDR</b>	$\neg\alpha$	Equals RMD on HP-16C.
ROUND	<b>g RND</b>	DECM	Rounds $x$ using the current display format, like RND in HP-42S.
		FRC	Rounds $x$ using the current denominator, like RND in HP-35S fraction mode.
ROUNDI	<b>h X.FCN</b> ...	DECM	Rounds $x$ to next integer. $1/2$ rounds to 1.
RR	<b>h X.FCN</b> RR <b>n</b>	Integer	Works like $n$ consecutive RRs / RRCs on HP-16C. See RL / RLC for more.
RRC	<b>h X.FCN</b> RRC <b>n</b>		
RSD	<b>h X.FCN</b> RSD <b>d</b>	DECM	Rounds $x$ to $d$ significant digits, taking the RM setting into account.
RTN	<b>g RTN</b>	PRG	Last command in a routine. Pops the local data (like PopLR) and returns control to the calling routine in program execution, i.e. moves the program pointer one step behind the last XEQ instruction executed. If there was none, program execution halts and the program pointer is set to step 000.
RTN+1	<b>h P.FCN</b> ...	PRG	Works like RTN, but moves the program pointer to the <u>second</u> line following the most recent XEQ instruction encountered. Halts if there is none.
R-CLR	<b>h P.FCN</b> ...	DECM	Interprets $x$ in the form $sss.nn$ . Clears $nn$ registers starting with number $sss$ . <b>Example:</b> For $x = 34.56$ , R-CLR will clear <b>R34</b> through <b>R89</b> .
R-COPY	<b>h P.FCN</b> ...	DECM	Interprets $x$ in the form $sss.nnddd$ . Takes $nn$ registers starting with number $sss$ and copies their contents to $ddd$ etc. <b>Example:</b> For $x = 7.03045678, r07, r08, r09$ will be copied into <b>R45, R46, R47</b> , respectively. For $x < 0$ , R-COPY will take $nn$ registers from flash memory instead, starting with register number $ sss $ there.

Name	Keys to press in modes		Remarks
R-SORT	<b>h P.FCN</b> ...	DECM	Interprets $x$ in the form $sss.nn$ . Sorts the contents of $nn$ registers starting with number $sss$ . <b>Example:</b> Assume $x = 49.036$ , $r49 = 1.2$ , $r50 = -3.4$ , and $r51 = 0$ ; then R-SORT will return $r49 = -3.4$ , $r50 = 0$ , and $r51 = 1.2$ .
R-SWAP	<b>h P.FCN</b> ...	DECM	Works like R-COPY but swaps the contents of source and destination registers.
R→D		DECM	Please see the <a href="#">catalog of conversions below</a> for conversions of radians to degrees.
<b>R↑</b>	<b>h R↑</b>	¬α	Rotates the stack contents one level up or down, respectively. See <a href="#">above</a> for details.
<b>R↓</b>	<b>R↓</b>		
<b>s</b>	<b>g s</b>	DECM	Takes the statistical sums accumulated, calculates the sample standard deviations $s_y$ and $s_x$ and pushes them on the stack.
SAVE	<b>h P.FCN</b> ...	¬α	Saves user program space, registers and system state to flash memory. Program space is stored in segment 0. Registers and system state are in their own special region. <b>WARNING:</b> Do <u>not</u> use SAVE in program loops! Else you might kill your flash memory very fast (see <a href="#">above</a> ).
SB	<b>h X.FCN</b> SB $n$	Integer	Sets the specified bit in $x$ .
SCI	<b>h SCI</b> $n$	¬α	Sets scientific display format.
SCIOVR	<b>h SCI</b> <b>ENTER</b> ↑	¬α	Numbers exceeding the range displayable in ALL or FIX will be shown in scientific format (default as in vintage HP calculators). Compare ENGOVR.
SDL	<b>h X.FCN</b> SDL $n$	DECM	Shifts digits left by $n$ decimals, equivalent to multiplying $x$ by $10^n$ .
SDR	<b>h X.FCN</b> SDR $n$	DECM	Shifts digits right by $n$ decimals, equivalent to dividing $x$ through $10^n$ .
SEED	<b>h STAT</b> ...	DECM	Stores a seed for random number generation.

Name	Keys to press	in modes	Remarks
SENDA	<b>h P.FCN</b> ...	¬α	Sends all RAM data ...
SENDP	<b>h P.FCN</b> ...	¬α	Sends the user program memory ... via serial I/O to the device connected. See <a href="#">Appendix A</a> below for more.
SENR	<b>h P.FCN</b> ...	¬α	Sends the global general purpose registers ...
SENDΣ	<b>h P.FCN</b> ...	¬α	Sends the summation registers ..
SEPOFF	<b>h MODE</b> ...	¬α	Toggle the separators for integer modes. Points or commas will be displayed every ...
SEPON	<b>h ./,</b>	Integer	... four digits in bases 2 and 4, ... two digits in base 16, ... three digits in the other bases.
	<b>h MODE</b> ...		... two digits in base 16, ... three digits in the other bases.
SERR	<b>h STAT</b> ...	DECM	Works like s but pushes the standard errors $s/\sqrt{n}$ on the stack (i.e. the standard deviations of $\bar{x}$ and $\bar{y}$ ).
SERR <sub>w</sub>	<b>h STAT</b> ...	DECM	Works like sw but returns the standard error $s/\sqrt{\sum y_i}$ (i.e. the standard deviation of $\bar{x}_w$ ).
SETCHN	<b>h MODE</b> ...	¬α	Sets some regional preferences (see <a href="#">above</a> ).
SETDAT	<b>h MODE</b> ...	DECM	Sets the date for the real time clock (doesn't work with the emulator, since the emulator takes this information from the PC clock).
SETEUR	<b>h MODE</b> ...	¬α	Set some regional preferences (see <a href="#">above</a> ).
SETIND			
SETJPN			
SETTIM	<b>h MODE</b> ...	DECM	Sets the time for the real time clock (doesn't work with the emulator, since the emulator takes this information from the PC clock).
SETUK	<b>h MODE</b> ...	¬α	Set some regional preferences (see <a href="#">above</a> ).
SETUSA			
SF	<b>f SF n</b>	¬α	Sets the flag specified.
SIGN	<b>h X.FCN</b> ...	¬α	Returns 1 for $x > 0$ , -1 for $x < 0$ , and 0 for $x = 0$ or non-numbers.
	<b>CPX X.FCN</b> ...	DECM	Returns the unit vector of $x + iy$ in <b>X</b> and <b>Y</b> .
SIGNMT	<b>h MODE</b> ...	¬α	Sets sign-and-mantissa mode for integers.

Name	Keys to press in modes		Remarks
<b>SIN</b>	 SIN	DECM	Returns the sine of the angle in <b>X</b> .
S/NC	 ...	DECM	Returns $\frac{\sin(x)}{x}$ .
<b>SINH</b>	 HYP SIN	DECM	Returns the hyperbolic sine of <i>x</i> .
SKIP	 SKIP <i>n</i>	PRG	Skips <i>n</i> program steps forwards ( $0 \leq n \leq 255$ ). So e.g. SKIP 02 skips over the next two steps, going e.g. from step 123 to step 126. If SKIP attempts to cross an END statement, an error is thrown.
SL	 SL <i>n</i>	Integer	Works like <i>n</i> (up to 63) consecutive SLs on HP-16C. SL 0 executes as NOP.
SLOW	 ...	All	Sets the processor speed to “slow”. This is also entered for low battery voltage. Compare FAST.
<b>SLV</b>	 <u>label</u>	DECM	Solves the equation $f(x) = 0$ , with $f(x)$ calculated by the routine specified. Two initial estimates of the root must be supplied in <b>X</b> and <b>Y</b> when calling SLV. For the rest, the user interface is as in HP-15C. This also means SLV acts as a test, so the next program step will be skipped if SLV failed to find a root. Please refer to the <i>HP-15C Owner's Handbook</i> , Section 13 and Appendix D, for more information about automatic root finding and some caveats.
SLVQ	 ...	DECM	<p>Solves the quadratic equation <math>ax^2 + bx + c = 0</math>, with the real parameters put on the stack [<b>c</b>, <b>b</b>, <b>a</b>, ...], and tests the result.</p> <ul style="list-style-type: none"> <li>If <math>r := b^2 - 4ac \geq 0</math>, SLVQ returns <math>-\frac{b \pm \sqrt{r}}{2a}</math> in <b>Y</b> and <b>X</b>. In a program, the step after SLVQ will be executed.</li> <li>Else, SLVQ returns the real part of the first complex root in <b>X</b> and its imaginary part in <b>Y</b> (the 2<sup>nd</sup> root is the conjugate of the first – see CONJ). If run directly from the keyboard, the complex indicator is lit then – in a program, the step after SLVQ is skipped.</li> </ul> <p>In either case, <b>r</b> is returned in <b>Z</b>. Higher stack levels are kept unchanged. <b>L</b> contains <b>c</b>.</p>

Name	Keys to press in modes		Remarks
S MODE?	<b>h TEST</b> ...	$\neg\alpha$	Returns the integer sign mode set, i.e. 2 (meaning "true") for 2's complement, 1 ("true" again) for 1's complement, 0 (i.e. "false") for unsigned, or -1 (i.e. "true") for sign and mantissa mode.
SPEC?	<b>h TEST</b> ...	$\neg\alpha$	True if $x$ is special, i.e. infinity or NaN.
SR	<b>h X.FCN</b> SR <b>n</b>	Integer	Works like <b>n</b> consecutive SRs on HP-16C. SR 0 executes as NOP.
sRCL	<b>h X.FCN</b> sRCL <b>nn</b>	$\neg\alpha$	Assumes <b>Rnn</b> contains single precision real data and recalls them as such. See <a href="#">below</a> .
SSIZE4	<b>h MODE</b> ...	$\neg\alpha$	Sets the stack size to 4 or 8 levels, respectively. See <a href="#">above</a> . Please note register contents will remain unchanged in this operation. The same will happen if stack size is changed via RCLM.
SSIZE8			
SSIZE?	<b>h TEST</b> ...	$\neg\alpha$	Returns the number of stack levels accessible.
STATUS	<b>h STATUS</b>	$\neg\text{PRG}$	Shows – among other data – the status of all user flags, similar to STATUS on HP-16C. See <a href="#">above</a> .
STO	<b>STO</b> <b>d</b>	$\neg\alpha$	See the <a href="#">addressing table above</a> for $^c\text{STO}$ .
STOM	<b>STO</b> <b>MODE</b> <b>s</b> <b>h MODE</b> STOM <b>s</b>	$\neg\alpha$	Stores mode settings for later use as described <a href="#">above</a> . Take RCLM to recall them.
STOP	<b>R/S</b>	PRG	Stops program execution. May be used to wait for an input, for example.
STOPW	<b>h X.FCN</b> ...	$\neg\text{PRG}$	Stopwatch application. Works only with the quartz installed (or on the emulator).
STOS	<b>h P.FCN</b> STOS <b>d</b>	$\neg\alpha$	Stores all stack levels in a set of 4 or 8 registers, starting at destination <b>d</b> .
STO+	<b>STO</b> <b>+</b> <b>d</b>	$\neg\alpha$	Executes the specified operation on the content of address <b>d</b> and stores the result into said address.
STO-	<b>STO</b> <b>-</b> <b>d</b>		E.g. STO-12 subtracts $x$ from <b>r12</b> like the sequence <b>RCL</b> 12 <b>x<math>\leftrightarrow</math>y</b> <b>-</b> <b>STO</b> 12 does, but without touching the stack at all.
STO $\times$	<b>STO</b> <b><math>\times</math></b> <b>d</b>		
STO/	<b>STO</b> <b>/</b> <b>d</b>		See the <a href="#">addressing table above</a> for $^c\text{STO}$ .
STO $\uparrow$	<b>STO</b> <b><math>\blacktriangle</math></b> <b>d</b>	$\neg\alpha$	STO $\uparrow$ ( $\downarrow$ ) takes the maximum (minimum) of the values in <b>d</b> and <b>X</b> and stores it.
STO $\downarrow$	<b>STO</b> <b><math>\blacktriangledown</math></b> <b>d</b>		

Name	Keys to press in modes	Remarks
SUM	<b>h STAT ...</b>	DECM Recalls the linear sums $\Sigma y$ and $\Sigma x$ . Useful for elementary vector algebra in 2D.
$s_w$	<b>h STAT ...</b>	DECM Returns the standard deviation for weighted data with the weights entered in $y$ via $\Sigma +$ : $s_w = \sqrt{ \frac{\sum y_i \cdot \sum (y_i \cdot x_i^2) - [\sum (y_i \cdot x_i)]^2}{(\sum y_i)^2 - \sum y_i^2} } .$
$s_{xy}$	<b>h STAT ...</b>	DECM Returns the sample covariance for two data sets. It depends on the fit model selected. For LinF, it returns $s_{xy} = \frac{n \sum x_i y_i - \sum x_i \sum y_i}{n \cdot (n-1)} .$ See COV for the population covariance.
TAN	<b>f TAN</b>	DECM Returns the tangent of the angle in $\mathbf{X}$ .
TANH	<b>f HYP TAN</b>	DECM Returns the hyperbolic tangent of $x$ .
TICKS	<b>h P.FCN ...</b>	$\neg\alpha$ Returns the number of ticks from the real time clock at execution time. With the quartz built in, 1 tick = 0.1 s. Without, it may be 10% more or less. So the quartz is an inevitable prerequisite for the clock being useful in medium to long range.
TIME	<b>h X.FCN ...</b>	DECM, $\alpha$ Recalls the time from the real time clock at execution, displaying it in the format $hh.mmmsss$ in 24h-mode. Chose FIX 6 for best results.
$T_n$	<b>h X.FCN ...</b>	DECM Chebychev's (a. k. a. Čebyšev, Tschebyschow, Tschebyscheff) polynomials of first kind $T_n(x)$ with $n$ in $\mathbf{Y}$ , solving the differential equation $(1-x^2)y''-x \cdot y'+n^2 y=0 .$
TOP?	<b>h TEST ...</b>	PRG Executes the next step only if TOP? is called in a program that isn't a subroutine, i.e. if the program running flag is set and the return stack pointer points to an empty stack.
TRANSPI	<b>h MATRIX ...</b>	DECM Takes a matrix <u>descriptor</u> in $\mathbf{X}$ and returns the descriptor of its transpose. The transpose is done in-situ and does not require any additional registers or storage.

Name	Keys to press in modes		Remarks
$t_P(x)$	<b>h PROB</b> ...	DECM	Student's t distribution. $t(x)$ equals $1 - Q(t)$ in HP-21S. The degrees of freedom are stored in <b>J</b> . $t_P(x)$ denotes the respective <a href="#">pdf</a> .
$t(x)$			
$t^{-1}(p)$			
$t \leftrightarrow$	<b>h P.FCN</b> ...	$\neg\alpha$	Swaps the contents of <b>T</b> and <b>r</b> , in analogy to $x \leftrightarrow$ .
ULP	<b>h X.FCN</b> ...	$\neg\alpha$	Returns 1 times the smallest power of ten which can be added to $x$ or subtracted from $x$ to actually change the value of $x$ in the machine in the mode set. Thus, in integer mode, 1 is returned.
$U_n$	<b>h X.FCN</b> ...	DECM	Chebychev's polynomials of second kind $U_n(x)$ with <b>n</b> in <b>Y</b> , solving the differential equation $(1-x^2)y''-3x \cdot y'+n(n+2)y=0$ .
UNSIGN	<b>h MODE</b> ...	$\neg\alpha$	Sets unsigned mode for integers.
VERS	<b>h X.FCN</b> ...	$\neg\text{PRG}$	Shows your firmware version and build number.
VIEW	<b>h VIEW</b> <b>s</b>	$\neg\alpha$	Displays the content of address <b>s</b> until the next key is pressed. See <a href="#">above</a> for more.
VW $\alpha+$	<b>h VIEW</b> <b>s</b>	$\alpha$	Displays the alpha register in the top line plus the contents of address <b>s</b> in the bottom line until the next key is pressed. See <a href="#">above</a> for more.
WHO	<b>h X.FCN</b> ...	$\neg\alpha$	Displays credits to the brave men who made the project work.
WDAY	<b>h X.FCN</b> ...	DECM	Takes $x$ as a date in the format selected and returns the name of the day in the dot matrix and a corresponding integer in the numeric display (Monday = 1, Sunday = 7).
$W_p$	<b>h X.FCN</b> ...	DECM	Returns the principal branch of Lambert's W for given $x \geq -1/e$ .
$W_m$	<b>h X.FCN</b> ...	DECM	Returns the negative branch of Lambert's W for given $x \geq -1/e$ .
$W^{-1}$	<b>h X.FCN</b> ...	DECM	Returns $x$ for given $W$ ( $\geq -1$ ). See $W$ above.

Name	Keys to press in modes		Remarks
Weibl	<b>h PROB</b> ...	DECM	Weibull distribution with the shape parameter <b>b</b> in <b>J</b> and the characteristic lifetime <b>T</b> in <b>K</b> :  Weibl <sub>P</sub> <sup>25</sup> returns $f_W(t) = \frac{b}{T} \left(\frac{t}{T}\right)^{b-1} e^{-\left(\frac{t}{T}\right)^b}$ , Weibl returns $F_W(t) = 1 - e^{-\left(\frac{t}{T}\right)^b}$ .
Weibl <sub>P</sub>			
Weibl <sup>-1</sup>			Weibl <sup>-1</sup> returns the survival time <b>t<sub>s</sub></b> for given probability <b>F<sub>W</sub></b> , <b>b</b> in <b>J</b> and <b>T</b> in <b>K</b> .
WSIZE	<b>h MODE</b> WSIZE <b>n</b>	¬α	Works like on HP-16C, but with the parameter following the command instead of taken from <b>X</b> . Reducing the word size truncates the values in the stack registers employed, including <b>L</b> . WSIZE 0 sets the word size to maximum, i.e. 64 bits.
WSIZE?	<b>h TEST</b> ...	¬α	Recalls the word size set.
<b>x<sup>2</sup></b>	<b>g x<sup>2</sup></b>	¬α	
<b>x<sup>3</sup></b>	<b>h X.FCN</b> ...	¬α	
XEQ	<b>XEQ</b> <u>label</u>	PRG	Calls the respective subroutine.
		¬PRG, ¬α	Executes the respective program.
	<b>A</b> , <b>B</b> , <b>C</b> , or <b>D</b> (you may need <b>f</b> for reaching these hotkeys in integer bases >10.)	PRG	Calls the respective subroutine, so e.g. XEQ C will be inserted when <b>C</b> is pressed.
		¬PRG, ¬α	Executes the respective program if defined.
XEQα	<b>h P.FCN</b> ...	¬α	Takes the first three characters of <i>alpha</i> (or less if there are less) as a label and calls or executes the respective routine.
XNOR	<b>h X.FCN</b> ...	¬α	Works in analogy to AND.
XOR	<b>h XOR</b>	¬α	Works in analogy to AND.
<b>Ȑ</b>	<b>f Ȑ</b>	DECM	Pushes $\bar{y} = \frac{1}{n} \sum y$ and $\bar{x} = \frac{1}{n} \sum x$ on the stack. See also <b>s</b> , <b>SERR</b> , and <b>σ</b> .

<sup>25</sup> The pdf equals WEIBULL(*x*; **b**; **T**; **0**) and the cdf WEIBULL(*x*; **b**; **T**; **1**) in MS Excel.

Name	Keys to press in modes	Remarks
$\bar{x}_g$	<b>h</b> <b>STAT</b> ...	DECM Returns the geometric means, pushing $\bar{y}_g = \sqrt[n]{\prod y} = e^{\frac{1}{n} \sum \ln y}$ and $\bar{x}_g = \sqrt[n]{\prod x}$ on the stack. See also $\varepsilon$ , $\varepsilon_m$ , and $\varepsilon_p$ .
$\bar{x}_w$	<b>h</b> <b>STAT</b> ...	DECM Returns the arithmetic mean $\frac{\sum xy}{\sum y}$ for weighted data with the weights entered in $y$ via $\Sigma+$ . See also $sw$ and $SERRw$ .
$\hat{x}$	<b>h</b> <b>STAT</b> ...	DECM Returns a forecast $x$ for a given $y$ (in $X$ ) acc. to the fit model chosen. See L.R. for more.
$\sqrt[x]{y}$	<b>h</b> <b>X.FCN</b> $\sqrt[x]{y}$	$\neg\alpha$
$x!$	<b>h</b> <b>!</b>	DECM Returns the factorial for integer input. Generally, returns $\Gamma(x + 1)$ .
$x \rightarrow \alpha$	<b>h</b> <b>X.FCN</b> ...	All Interprets $x$ as character code. Appends the respective character to <i>alpha</i> , similar to XTOA in HP-42S.
$x \leftrightarrow$	<b>h</b> <b>x</b> <b>r</b>	$\neg\alpha$ Swaps the contents of $X$ and $r$ , in analogy to $x \leftrightarrow y$ . See <a href="#">above</a> for $c x \leftrightarrow$ .
$x \leftrightarrow y$	<b>x</b> <b>y</b>	$\neg\alpha$ Swaps $x$ and $y$ , performing $\text{Re} \leftrightarrow \text{Im}$ if a complex operation was executed immediately before. See <a href="#">above</a> for details, also about $c x \leftrightarrow y$ .
$x < \dots ?$	<b>h</b> <b>TEST</b> $x < ?$ <b>a</b>	$\neg\alpha$ Compare $x$ with $a$ . E.g. <b>h</b> <b>TEST</b> $x < ?$ <b>K</b> will compare $x$ with $k$ , and will be listed as $x \ll K?$ in a program. See the examples given in the <a href="#">addressing table above</a> for more.  $x \approx \dots ?$ will be true if the <u>rounded</u> values of $x$ and $a$ are equal (see ROUND).  <b>CPX</b> <b>f</b> <b>x = ?</b> <b>a</b> and <b>CPX</b> <b>g</b> <b>x ≠ ?</b> <b>a</b> compare the complex number $x + iy$ as explained in the <a href="#">addressing table above</a> .
$x \leq \dots ?$	<b>h</b> <b>TEST</b> $x \leq ?$ <b>a</b>	
$x = \dots ?$	<b>f</b> <b>x = ?</b> <b>a</b>	
$x = +0 ?$	<b>h</b> <b>TEST</b> $x = +0 ?$	
$x = -0 ?$	<b>h</b> <b>TEST</b> $x = -0 ?$	
$x \approx \dots ?$	<b>h</b> <b>TEST</b> $x \approx ?$ <b>a</b>	
$x \neq \dots ?$	<b>g</b> <b>x ≠ ?</b> <b>a</b>	
$x \geq \dots ?$	<b>h</b> <b>TEST</b> $x \geq ?$ <b>a</b>	
$x > \dots ?$	<b>h</b> <b>TEST</b> $x > ?$ <b>a</b>	
YEAR	<b>h</b> <b>X.FCN</b> ...	DECM Assumes $x$ containing a date in the format selected and extracts the year.

Name	Keys to press in modes		Remarks
$y^x$		$\neg\alpha$	In integer modes $x$ must be $\geq 0$ .
		$\neg(\alpha, 13, 14, 15, h)$	Shortcut working as long as label C is not defined yet.
$\hat{y}$		DECM	Returns a forecast $y$ (in X) for a given $x$ following the fit model chosen. See L.R. for more.
Y.MD	<b>MODE</b> ...	$\neg\alpha$	Sets the format for date display.
$y \leftrightarrow$	<b>P.FCN</b> ...	$\neg\alpha$	Swaps the contents of Y or Z and r, in analogy to $x \leftrightarrow$ .
$z \leftrightarrow$			
$\alpha\text{DATE}$	<b>X.FCN</b> ...	$\neg\text{integer}$	Takes $x$ as a date and appends it to <i>alpha</i> in the format set. See DATE. – To append a date stamp to <i>alpha</i> , call DATE $\alpha\text{DATE}$ .
$\alpha\text{DAY}$	<b>X.FCN</b> ...	$\neg\text{integer}$	Takes $x$ as a date, recalls the name of the respective day and appends its first 3 letters to <i>alpha</i> .
$\alpha\text{GTO}$	<b>P.FCN</b> $\alpha\text{GTO } nn$	$\neg\alpha$	Takes the contents of Rnn as character code. Takes the first three characters of the converted code (or less if there is only less) as an alpha label and positions the program pointer to it.
$\alpha\text{IP}$	<b>X.FCN</b> ...	All	Appends the integer part of $x$ to <i>alpha</i> , similar to AIP in HP-42S.
$\alpha\text{LENG}$	<b>X.FCN</b> ....	All	Returns the number of characters found in <i>alpha</i> , like ALENG in HP-42S.
$\alpha\text{MONTH}$	<b>X.FCN</b> ...	$\neg\text{integer}$	Takes $x$ as a date, recalls the name of the respective month and appends its first 3 letters to <i>alpha</i> .
$\alpha\text{OFF}$	<b>P.FCN</b> ...	PRG & $\alpha$	Work like AOFF and AON in HP-42S, turning alpha mode off and on.
$\alpha\text{ON}$	<b>P.FCN</b> ...	PRG & $\neg\alpha$	
$\alpha\text{RCL}$	<b>RCL</b> $s$	$\alpha$	Interprets the content of the source $s$ as characters and appends them to <i>alpha</i> .
	<b>X.FCN</b> $\alpha\text{RCL } s$	$\neg\alpha$	
$\alpha\text{RC\#}$	<b>X.FCN</b> $\alpha\text{RC\# } s$	All	Takes the content of $s$ as a number, converts it to a string in the format set, and appends this to <i>alpha</i> . If e.g. $s = 1234$ and ENG 2 and RDX. are set, then $-1.23E3$ will be appended.

Name	Keys to press in modes		Remarks
$\alpha RL$	<b>h X.FCN</b> $\alpha RL \ n$	All	Rotates $\alpha$ by $n$ characters like AROT in HP-42S, but with $n \geq 0$ and the parameter trailing the command instead of taken from <b>X</b> . $\alpha RL 0$ executes as NOP.
$\alpha RR$	<b>h X.FCN</b> $\alpha RR \ n$	All	Works like $\alpha RL$ but rotates to the right.
$\alpha SL$	<b>h X.FCN</b> $\alpha SL \ n$	All	Shifts the $n$ leftmost characters out of $\alpha$ , like ASHF in HP-42S. $\alpha SL 0$ equals NOP.
$\alpha SR$	<b>h X.FCN</b> $\alpha SR \ n$	All	Works like $\alpha SL$ but takes the $n$ rightmost characters instead.
$\alpha STO$	<b>f STO</b> $d$	$\alpha$	Stores the first (i.e. leftmost) 6 characters in the alpha register into destination $d$ .
	<b>h X.FCN</b> $\alpha STO \ d$	$\neg\alpha$	
$\alpha TIME$	<b>h X.FCN</b> ...	$\neg$ integer	Takes $x$ as a decimal time and appends it to $\alpha$ in the format hh:mm:ss according to the time mode selected. See TIME. – To append a time stamp to $\alpha$ , call TIME $\alpha TIME$ .
$\alpha VIEW$	<b>h VIEW</b> $\alpha$	All	Displays $\alpha$ in the top line and - - - in the bottom line until the next key is pressed. See <a href="#">above</a> for more.
	<b>h P.FCN</b> ...		
	<b>h X.FCN</b> ...		
$\alpha XEQ$	<b>h P.FCN</b> $\alpha XEQ nn$	$\neg\alpha$	Takes the contents of <b>Rnn</b> as character code. Interprets the first three characters (or less if there are only less) of the converted code as an alpha label and calls or executes the respective routine.
$\alpha \rightarrow x$	<b>h X.FCN</b> ...	All	Returns the character code of the leftmost character in $\alpha$ and deletes this character, like ATOX in HP-42S.
$\beta$	<b>h X.FCN</b> $\beta$	DECM	Returns Euler's Beta $B(x, y) = \frac{\Gamma(x) \cdot \Gamma(y)}{\Gamma(x+y)}$ with $\text{Re}(x) > 0$ , $\text{Re}(y) > 0$ . Called $\beta$ here for avoiding ambiguities.
$\Gamma$	<b>h X.FCN</b> $\Gamma$	DECM	Returns $\Gamma(x)$ . Additionally, <b>h !</b> calls $\Gamma(x+1)$ .
$\Delta DAYS$	<b>h X.FCN</b> ...	DECM	Assumes <b>X</b> and <b>Y</b> containing dates in the format chosen and calculates the number of days between them. Works like in HP-12C.

Name	Keys to press in modes		Remarks
$\Delta\%$	<b>g Δ%</b>	DECM	Returns $100 \cdot \frac{x-y}{y}$ like %CH in HP-42S.
$\varepsilon$	<b>h STAT</b> $\varepsilon$	DECM	Calculates the scattering factors (or geometric standard deviations) for lognormally distributed data $\ln(\varepsilon_y) = \sqrt{\frac{\sum \ln^2(y) - 2n \cdot \ln(\bar{y}_G)}{n-1}}$ and $\ln(\varepsilon_x)$ and pushes them on the stack. This $\varepsilon$ works for the geometric mean $\bar{x}g$ in analogy to $s$ for the arithmetic mean $\bar{x}$ but <u>multiplicative</u> .
$\varepsilon_m$	<b>h STAT</b> $\varepsilon_m$	DECM	Works like $\varepsilon$ but pushes the scattering factors of the geometric means $\varepsilon_m = \varepsilon^{\sqrt[n]{-}}$ on the stack.
$\varepsilon_p$	<b>h STAT</b> $\varepsilon_p$	DECM	Works like $\varepsilon$ but with a denominator $n$ instead of $n-1$ , returning the scattering factors of the populations.
$\zeta$	<b>h X.FCN</b> $\zeta$	DECM	Returns Riemann's Zeta function for real arguments, with $\zeta(x) = \sum_{n=1}^{\infty} \frac{1}{n^x}$ for $x > 1$ and its analytical continuation for $x < 1$ : $\zeta(x) = 2^x \pi^{x-1} \sin\left(\frac{\pi}{2}x\right) \cdot \Gamma(1-x) \cdot \zeta(1-x).$ This lives in XROM, may be less accurate.
$\pi$	<b>h π</b>	DECM	Complex version copies $\pi$ in <b>X</b> and clears <b>Y</b> .
$\Pi$	<b>f π</b> <u>label</u>	DECM	Computes a product with the routine specified by <b>label</b> . Initially, <b>X</b> contains the loop control number in the format <b>cccccc.ffffii</b> and the product is set to 1. Each run through the routine specified computes a factor. At its end, this factor is multiplied with said product; the operation then decrements <b>ccccccc</b> by <b>ii</b> and runs said routine again if then <b>ccccccc ≥ fff</b> , else returns the resulting product in <b>X</b> .
$\Sigma$	<b>g Σ</b> <u>label</u>	DECM	Computes a sum with the routine specified by <b>label</b> . Initially, <b>X</b> contains the loop control number in the format <b>cccccc.ffffii</b> and the sum is set to 0. Each run through the routine specified computes a summand. At its end, this summand is added to said sum; the operation then decrements <b>ccccccc</b> by <b>ii</b> and runs said routine again if then <b>ccccccc ≥ fff</b> , else returns the resulting sum in <b>X</b> .

Name	Keys to press in modes	Remarks
$\sigma$	<b>h STAT ...</b>	DECM Works like $s$ but returns the standard deviations of the populations instead.
$\Sigma \ln^2 x$	<b>h SUMS ...</b>	DECM Recall the respective statistical sums. These sums are necessary for curve fitting models beyond pure linear. Calling them by name enhances readability of programs significantly.
$\Sigma \ln^2 y$		
$\Sigma \ln x$		
$\Sigma \ln xy$		
$\Sigma \ln y$		
$\Sigma x \ln y$		
$\Sigma y \ln x$		
$\sigma_w$	<b>h STAT ...</b>	DECM Works like $sw$ but returns the standard deviation of the population instead. $\sigma_w = +\sqrt{\frac{\sum y_i(x_i - \bar{x}_w)^2}{\sum y_i}}$
$\Sigma x$	<b>h SUMS ...</b>	DECM Recall the respective statistical sums. These sums are necessary for basic statistics and linear curve fitting. Calling them by name enhances readability of programs significantly.
$\Sigma x^2$		
$\Sigma x^2 y$		
$\Sigma xy$		
$\Sigma y$		
$\Sigma y^2$		
$\Sigma+$	<b>h <math>\Sigma+</math></b>	DECM Adds a data point to the statistical sums.
	<b>A</b>	DECM Shortcut as long as label A is not defined yet.
$\Sigma-$	<b>h <math>\Sigma-</math></b>	DECM Subtracts a data point from the statistical sums.
$\varphi(x)$	<b>h PROB ...</b>	DECM Standard normal <a href="#">pdf</a> : $\varphi(x) = \frac{1}{\sqrt{2\pi}} e^{-x^2/2}$ .
$\Phi(x)$	<b>f <math>\Phi</math></b>	DECM Standard normal <a href="#">cdf</a> $\Phi(z) = \int_{-\infty}^z \varphi(x) dx$ , equals $1 - Q$ in HP-32E and $1 - Q(z)$ in HP-21S with $z = x$ .
$\Phi^{-1}(p)$	<b>g <math>\Phi^{-1}</math></b>	

Name	Keys to press in modes	Remarks
$\chi^2$	<b>h PROB</b> ...	Chisquare distribution. The <i>cdf</i> $\chi^2$ (with the degrees of freedom given in J) equals $1 - Q(\chi^2)$ in HP-21S.
$\chi^2_{INV}$		
$\chi^2_P$		
$(-1)^x$	<b>h X.FCN</b> ...	For $x$ not being a natural number, this function will return $\cos(\pi \cdot x)$ .
+	<b>+</b>	¬α Returns $y + x$ .
-	<b>-</b>	¬α Returns $y - x$ .
×	<b>×</b>	¬α Returns $y \cdot x$ .
/	<b>/</b>	¬α Returns $y / x$ .
+/-	<b>+/-</b>	¬α Unary minus like CHS in HP-35.
→DATE	<b>h X.FCN</b> ...	DECM Assumes the three components of a date on the stack in proper order for the date format selected and converts them to a single date in $x$ . Thus inverts DATE→.
→DEG	<b>→ DEG</b>	DECM Takes $x$ as an angle in the angular mode currently set and converts it to degrees. Prefix <b>g</b> may be omitted.
→GRAD	<b>→ GRAD</b>	DECM Like →DEG, but converts to gon or grads.
→H	<b>→ f H.d</b>	DECM Takes $x$ as hours or degrees in the format hhhh.mmssdd and converts them into a decimal time or angle.
→H.MS	<b>→ f H.MS</b>	DECM Takes $x$ as decimal hours or degrees and converts them into hhhh.mmssdd as in vintage HPs. For calculations, use H.MS+ or H.MS- then or reconvert to decimal values before.
→POL	<b>g →P</b>	DECM Assumes <b>X</b> and <b>Y</b> containing 2D Cartesian coordinates ( $x, y$ ) of a point and converts them to the respective polar coordinates ( $r, \theta$ ) with the radius $r = \sqrt{x^2 + y^2}$
→RAD	<b>→ RAD</b>	DECM Works like →DEG, but converts to radians.
→REC	<b>f R←</b>	DECM Assumes <b>X</b> and <b>Y</b> containing 2D polar coordinates ( $r, \theta$ ) of a point and converts them to the respective Cartesian coordinates ( $x, y$ ).

Name	Keys to press in modes		Remarks
↔	<b>h P.FCN</b> ↔ -----	¬α	Shuffles the lowest four stack contents. Examples: ↔XYZ works like ENTER↑, ↔YZTX works like R↓, but also ↔ZZZX is possible. Play! But remember it only affects the lowest four stack levels.
%	<b>f %</b>	DECM	Returns $\frac{x \cdot y}{100}$ , leaving <b>Y</b> unchanged.
%MG	<b>h X.FCN</b> ...	DECM	Returns the margin <sup>26</sup> $100 \cdot \frac{x - y}{x}$ in % for a price $x$ and cost $y$ , like %MU-Price in <i>HP-17B</i> .
%MRR	<b>h X.FCN</b> ...	DECM	Returns the mean rate of return in percent per period, i.e. $100 \cdot \left[ \left( \frac{x}{y} \right)^{\frac{1}{z}} - 1 \right]$ with $x$ = future value after $z$ periods, $y$ = present value. For $z = 1$ , Δ% returns the same result easier.
%T	<b>h X.FCN</b> ...	DECM	Returns $100 \cdot \frac{x}{y}$ , interpreted as % of total.
%Σ	<b>h X.FCN</b> ... <b>h STAT</b> ...	DECM	Returns $100 \cdot \frac{x}{\sum x}$ .
%+MG	<b>h X.FCN</b> ...	DECM	Calculates a sales price by adding a margin of $x$ % to the cost $y$ , as %MU-Price does in <i>HP-17B</i> . Formula: $\frac{y}{1 - \frac{x}{100}}$
√	<b>f √x</b> <b>D</b>	¬α ¬(α, 14, 15, h)	Shortcut working as long as label D is not defined yet.
∫	<b>g ∫ label</b>	DECM	Integrates the function given in the routine specified. Lower and upper integration limits must be supplied in <b>Y</b> and <b>X</b> , respectively. Otherwise, the user interface is as in <i>HP-15C</i> . Please refer to the <i>HP-15C Owner's Handbook</i> , Section 14 and Appendix E, for more information about automatic integration and some caveats.

<sup>26</sup> Margin corresponds to „Handelsspanne“ in German.






Name	Keys to press in modes		Remarks
$\infty?$	<b>h TEST</b> ...	$\neg\alpha$	Tests $x$ for infinity.
$1/\!$	<b>g II</b>	DECM	Returns $\left(\frac{1}{x} + \frac{1}{y}\right)^{-1}$ .
#	<b>h CONST</b> # <b>n</b>	$\neg\alpha$	Inserts a short integer value $n$ in a single program step ( $0 \leq n \leq 255$ ), thus saving up to two steps and an ENTER.

## Alphanumeric input

Character	Keys to press in modes		Remarks
-	<b>h PSE</b>	$\alpha$	Appends a blank space to <i>alpha</i> .
.	,	DECM	Separates degrees or hours from minutes and seconds, so input format is $hhhh.mmssdd$ . The user has to take care where an arbitrary real number represents such an angle or time.
0 ... 9	<b>0</b> ... <b>9</b>	$\neg\alpha$	Standard numeric input. For integer bases <10, input of illegal digits is blocked. Please note you cannot enter more than 12 digits in the mantissa.
		in addressing	Register input. See the <a href="#">tables</a> above for more.
	<b>0</b> , <b>1</b> , <b>f 2</b> , ..., <b>f 9</b>	$\alpha$	Appends the respective digit to <i>alpha</i> .
A ... F	<b>A</b> ... <b>F</b> (grey print)	11, 12, 13, 14, 15, h	Numeric input for digits >10. See page 6 for more information.
A ... Z	<b>A</b> ... <b>Z</b> (grey print)	in addressing	Register input. See the <a href="#">addressing tables</a> above for the letters applicable.
		$\alpha$	Appends the respective Latin letter to <i>alpha</i> . Use <b>f ↑</b> to toggle cases.
EEX	<b>EEX</b>	DECM & $\neg$ FRACT	Works like <b>E</b> in the Pioneers.
i	<b>CPX</b> .	DECM & $\neg$ FRACT	Enters the complex number <i>i</i> .
A ... $\Omega$	<b>g A</b> ... <b>g O</b> (grey print)	$\alpha$	Appends the respective Greek letter to <i>alpha</i> . <b>f ↑</b> will toggle cases. See page 12 for more.

Character	Keys to press in modes		Remarks
(	f	$\alpha$	Appends the respective symbol to <i>alpha</i> .
)	g		
+	f		
-	f		
x	f		
/	Second	DECM	A persistent 2 <sup>nd</sup> in input switches to fraction mode. It will be interpreted as explained below. Please note you cannot enter <b>EEX</b> after you entered  twice – but you may delete the 2 <sup>nd</sup> dot while editing the input line.
		FRC	First  is interpreted as a space, 2 <sup>nd</sup> as a fraction mark. E.g. input of <b>2</b> <b>3</b> <b>4</b> results in $2 \frac{3}{4}$ in the display. Improper fractions may be entered starting with a , e.g. <b>3</b> <b>2</b> .
	f	$\alpha$	Appends a slash to <i>alpha</i> .
$\pm$	f	$\alpha$	Appends the respective symbol to <i>alpha</i> .
,	h  XEQ		
.	f		
‘’ or ‘,		DECM	Inserts a radix mark as selected.
!	h	$\alpha$	Appends the respective symbol to <i>alpha</i> .
?	h		
$\neq$	h		
&	h		
\	h		
	h		

## Non-programmable Control, Clearing and Information Commands

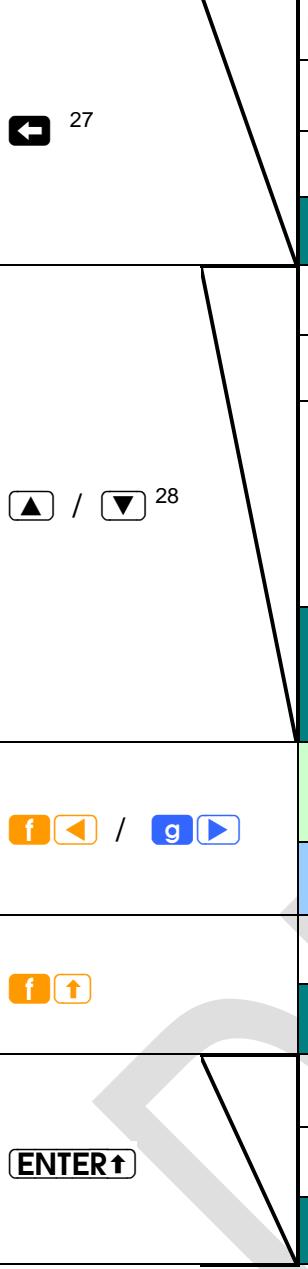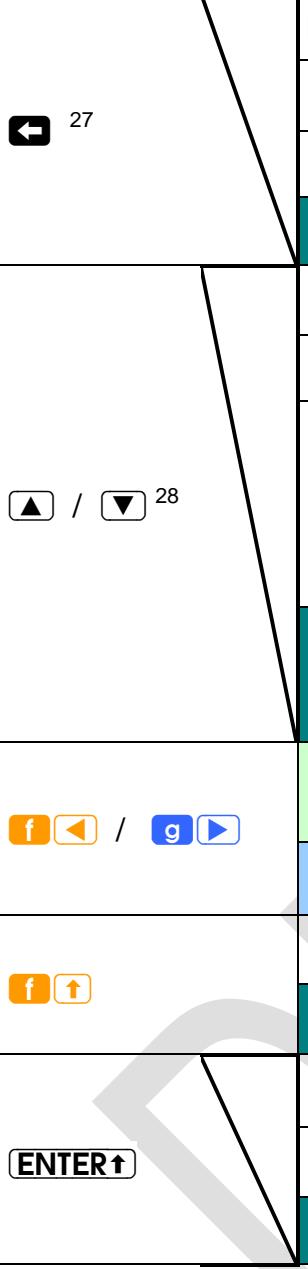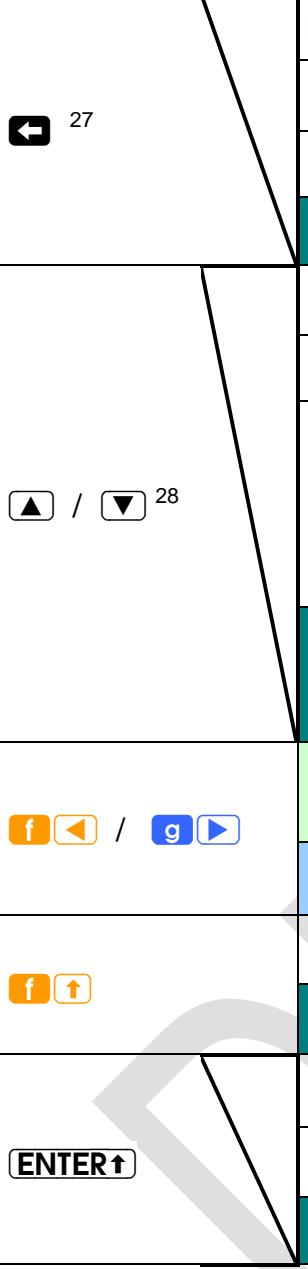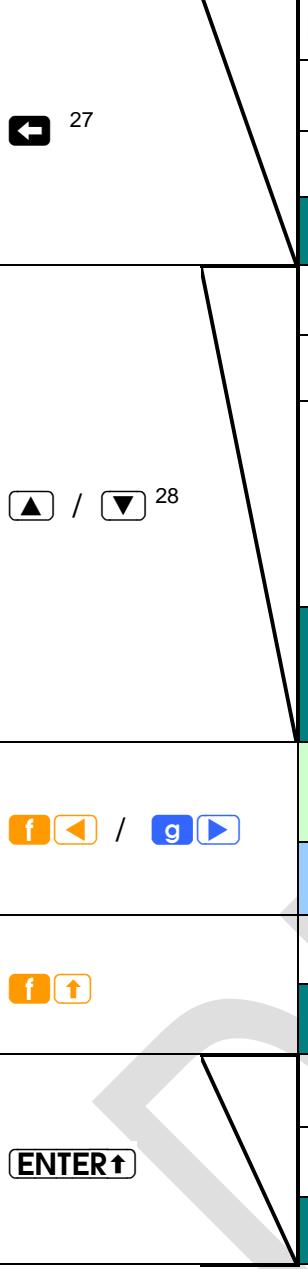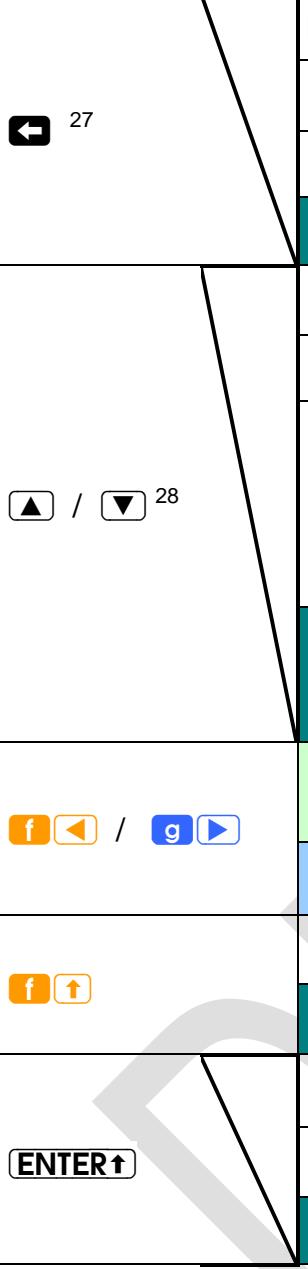Keys to press	in modes	Remarks
	Input pending	Deletes the last digit or character put in.
	$\alpha$	Deletes the rightmost character in <i>alpha</i> .
	PRG	Deletes current step.
	Else	Acts like CLx.
	Status open	Goes to previous / next set of flags.
	Catalog open	Goes to previous / next item in this catalog.
	$\alpha$	Scrolls the display window six characters to the left / right in <i>alpha</i> if possible. If less than six characters are beyond the limits of the display window on the left / right side, the window will be positioned to the beginning / end of string. Useful for longer strings.
	Else	Acts like BST / SST in HP-42S. I.e. browses programs in PRG. Out of PRG, SST will also execute the respective program step.
	Integer & $\neg$ PRG	Shifts the display window to the left / right like in HP-16C. Helpful while working with small bases.
	DECIM & $\neg$ PRG	Act like <b>SHOW</b> described below.
	$\alpha$	Toggles upper and lower case (indicated by $\downarrow$ ).
	$\neg\alpha$	Enters a memory browser.
	Catalog open	Selects the current item like <b>XEQ</b> below.
	$\alpha$	Turns alpha mode off.
	Else	Acts like the command ENTER described above.

<sup>27</sup> The mode conditions specified will be checked top down for this command:

If there is a pending input, the last digit / character entered will be deleted;

else if alpha mode is set, the last character of *alpha* will be deleted;

else if the WP 34S is in programming mode, the current step will be deleted;

else CLx will be called. Period.

This method holds for all commands listed here using this symbolic.


<sup>28</sup> These two navigation keys will repeat with 5Hz when held down for longer than 0.5s. Out of PRG, however, SST will not repeat.

Keys to press	in modes	Remarks
<b>EXIT</b>	Catalog open	Leaves the catalog without executing anything.
	Input pending	Cancels the execution of pending operations, returning to the calculator status as it was before.
	Program running	Stops the running program like <b>R/S</b> . See below.
	PRG	Leaves programming mode like <b>P/R</b> . See below.
	$\alpha$	Turns alpha mode off like <b>ENTER↑</b> . See above.
	Else	Does nothing.
<b>h OFF</b>	$\neg\text{PRG}$	Turns calculator off.
<b>ON</b>	Calculator off	Turns calculator on.
	Else	There are several <b>ON</b> -key combinations available. See <a href="#">below</a> for more.
<b>h P/R</b>	$\neg\alpha$	Toggles programming mode for keyboard entry.
<b>R/S</b>	Program running	Stops the program execution immediately. “Stopped” will be shown in the upper row until the next keystroke.
	$\neg\text{PRG}, \neg\alpha$	Runs the current program or resumes its execution starting with the current step.
	$\alpha$	Appends an ‘Y’ to <i>alpha</i> .
	PRG	Acts like the command STOP described above.
<b>g SHOW</b>	DECM & $\neg\text{PRG}$	Shows the full mantissa until the next key is pressed. See <a href="#">above</a> .
	PRG	Displays a CRC checksum of program memory contents, allowing validation of program integrity.
<b>XEQ</b>	Catalog open	Selects the item currently displayed and exits, executing the respective command. See <a href="#">below</a> .
	Else	Acts like the command XEQ described above.
<b>→ f 2</b>	DECM	Shows $x$ as integer to base 2. Returns to the base set with the next keystroke.
<b>→ 8</b>	DECM	Shows $x$ as integer to base 8 or 16, respectively. Returns to the base set with the next keystroke. Prefix <b>g</b> may be omitted here.
<b>→ 16</b>		

Keys to press	in modes	Remarks
<b>f</b> <b>[α]</b>	$\neg\alpha$	Turns on alpha mode for keyboard entry. When entering alpha constants in programs, please note there is no concatenation character – added characters are appended to <i>alpha</i> always. For starting a new string, use CL $\alpha$ first. Alpha constants will be listed like e.g. ‘Test 1’.

## CATALOGS

A catalog on your *WP 34S* is a collection of items, e.g. operations or characters. Opening a catalog will set alpha mode to allow for typing the first character(s) of the item wanted. A subset of the full alpha keyboard shown [above](#) is sufficient for browsing:

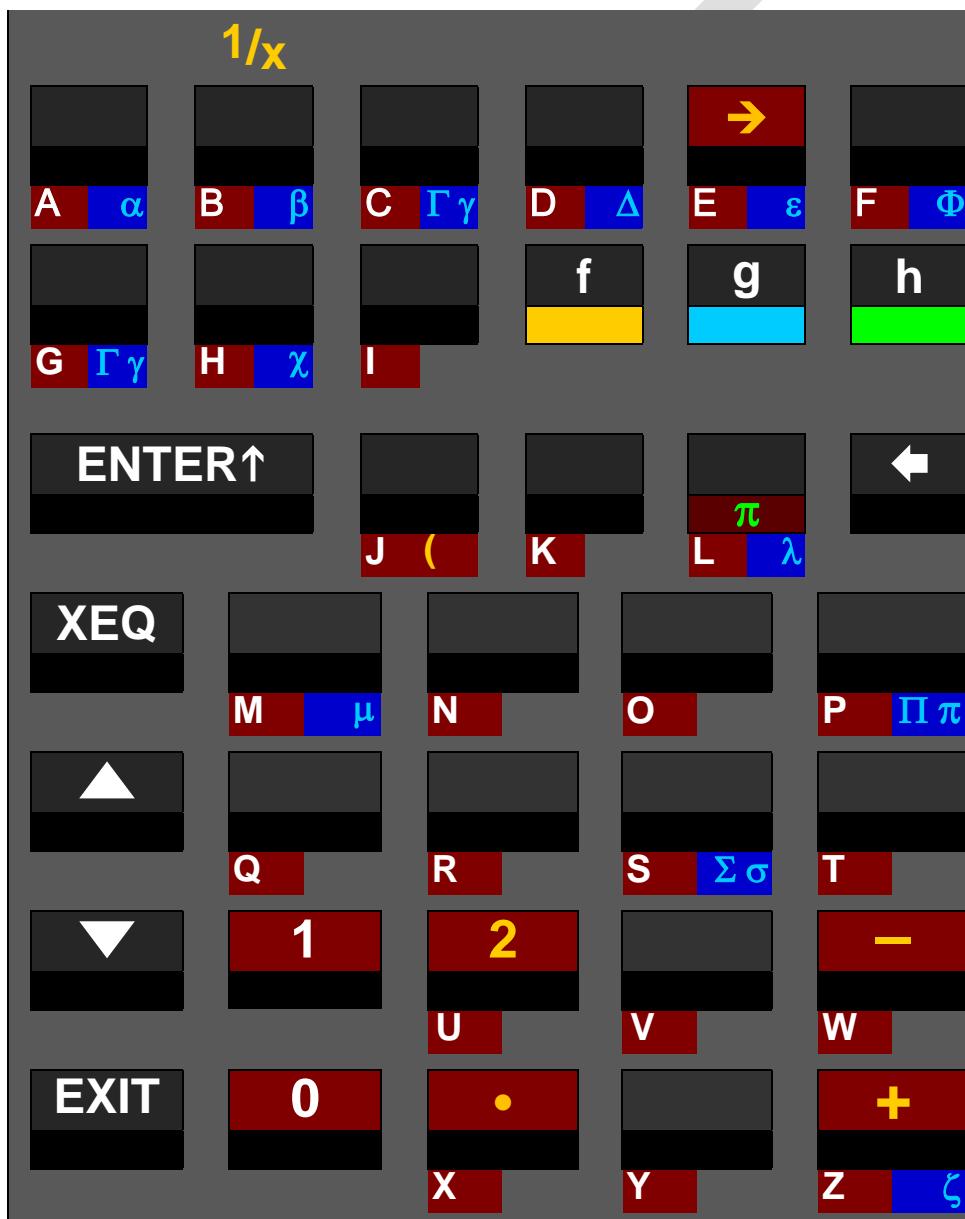

**f** **B** ( = **1/x** ) allows for easy reverse conversions in CONV as described [below](#).

**f** **→** just calls the character → while browsing a catalog.

**▲** and **▼** will browse the open catalog.

**ENTER↑** or **XEQ** select the item displayed, recall or execute it, and exit the catalog.

**EXIT** leaves the catalog without executing anything, i.e. cancels the catalog call.

See [below](#) for some examples.

Such catalogs may be called using the keystrokes listed below:

Keys to press	in modes	Contents of said catalog
<b>h CAT</b>	$\neg\alpha$	<p>Defined alpha labels. Some special rules apply here:</p> <p><b>▲</b> and <b>▼</b> browse the catalog as usual, but in the numeric line the location of the respective label is indicated (rAM, Lib for XROM, or SEG <b>n</b> for flash memory segment <b>n</b>).</p> <p><b>0</b> – <b>9</b> trigger a search starting in the flash segment specified (and continued in further segments as long as necessary) for the first alpha label defined.</p> <p><b>ENTER↑</b> goes to the alpha label as displayed, while <b>XEQ</b> or <b>R/S</b> execute it. These keystrokes will perform a label search as described <a href="#">above</a>. Labels in XROM cannot be accessed by <b>ENTER↑</b>.</p> <p><b>.</b> goes to the first alpha label in XROM.</p> <p><b>◀</b> or <b>EXIT</b> leave CAT returning to the state as it was before.</p>
<b>h CONST</b>	DECM	Constants like in HP35s. Picking a constant will recall it. See the constants listed in a <a href="#">table below</a> .
<b>CPX CONST</b>	DECM	This catalog contains the same constants as in real domain. Picking one, however, does a complex recall here. So, if the stack did look like $[x, y, \dots]$ before calling CONST, it will contain $[\text{constant}, 0, x, y, \dots]$ thereafter.
<b>h CONV</b>	DECM	Conversions as listed in a <a href="#">table below</a> .
<b>f CPX</b>	$\alpha$	“Complex” letters mandatory for many languages. Case is determined by setting (see <b>f ↑</b> above).
<b>h MATRIX</b>	DECM	Matrix operations library.
<b>h MODE</b>	$\neg\alpha$	Mode setting functions.
<b>h PROB</b>	DECM	Probability distributions beyond standard normal.
<b>h P.FCN</b>	$\neg\alpha$	Extra programming and I/O functions.
<b>h R↑</b>	$\alpha$	Superscripts and subscripts.
<b>h STAT</b>	DECM	Extra statistical functions.
<b>h SUMS</b>	DECM	Read access to all statistical sums.
<b>h TEST</b>	$\neg\alpha$	All tests except the two on the keyboard.
	$\alpha$	Comparison symbols and brackets, except <b>f ()</b> and <b>g ()</b> .

Keys to press	in modes	Contents of said catalog	
<b>h X.FCN</b>	DECM	Extra real functions.	These three catalogs are merged in mode PRG to ease programming.
	Integer	Extra integer functions.	
	α	Extra alpha functions.	
<b>CPX X.FCN</b>	DECM	Extra complex functions.	
<b>h ./,</b>	α	Punctuation marks and text symbols.	
<b>f →</b>	α	Arrows and mathematical symbols.	

Reopening the very last catalog called, the last command selected therein is displayed for easy repetitive use.

See the [table below about addressing cataloged items](#), and the next pages for detailed item lists of the various catalogs. Within each catalog, items are sorted alphabetically (see [above](#) for the sorting order). You may access particular items fast and easily by typing the first characters of their names. See [below](#) for some examples and constraints.

A single function, e.g. CB, may be contained in more than one catalog.

The alpha catalogs are found three pages below. See also the special catalogs CONST and CONV in separate paragraphs further below.

## Catalog Contents in Detail

MODE	MATRIX	PROB	STAT	TEST	P.FCN
12h	DET	Binom	COV	BC?	BACK PROMPT
1COMPL	LINEQS	Binom <sub>P</sub>	L.R.	BS?	CLALL PSTO
24h	MROW+ $\leftrightarrow$	Binom <sup>-1</sup>	SEED	CNVG?	CLFLAG PUTK
2COMPL	MROWx	Cauch	SERR	DBL?	CLPALL RCLS
BASE	MROW $\Leftarrow$	Cauch <sub>P</sub>	SERR <sub>w</sub>	ENTRY?	CLREG RECV
BestF	M+ $\times$	Cauch <sup>-1</sup>	SUM	EVEN?	CLSTK RTN+1
DBLOFF	M <sup>-1</sup>	Expon	s <sub>w</sub>	FC?	CL $\alpha$ R-CLR
DBLON	M-ALL	Expon <sub>P</sub>	sxy	FC?C	DEC R-COPY
DENANY	M-COL	Expon <sup>-1</sup>	$\bar{x}$ g	FC?F	DROP R-SORT
DENFAC	M-DIAG	F <sub>P</sub> (x)	$\bar{x}$ w	FC?S	DSL R-SWAP
DENFIX	M-ROW	F(x)	$\hat{x}$	FLASH?	DSZ SAVE
DENMAX	Mx	F <sup>-1</sup> (p)	$\varepsilon$	FP?	END SENDA
DISP	M.COPY	Geom	$\varepsilon_m$	FS?	ERR SENDP
D.MY	M.IJ	Geom <sub>P</sub>	$\varepsilon_p$	FS?C	FF SENDR
E3OFF	M.LU	Geom <sup>-1</sup>	$\sigma$	FS?F	f'(x) SEND $\Sigma$
E3ON	M.REG	Lgnrm	$\sigma_w$	FS?S	f"(x) SKIP
ExpF	nCOL	Lgnrm <sub>P</sub>	% $\Sigma$	IBASE?	GTO $\alpha$ STOS
FAST	nROW	Lgnrm <sup>-1</sup>		INTM?	INC TICKS
FRACT	TRANSP	Logis		INT?	ISE t $\Leftarrow$
JG1582		Logis <sub>P</sub>		KEY?	ISZ VW $\alpha$ +
JG1752		Logis <sup>-1</sup>		KTP?	LOAD XEQ $\alpha$
LinF		Norml		LBL?	LOADP y $\Leftarrow$
LogF		Norml <sub>P</sub>		LEAP?	LOADR z $\Leftarrow$
LZOFF		Norml <sup>-1</sup>	n $\Sigma$	LocR?	LOADST $\alpha$ GTO
LZON		Poiss	$\Sigma \ln^2 x$	MEM?	LOAD $\Sigma$ $\alpha$ OFF
M.DY		Poiss <sub>P</sub>	$\Sigma \ln^2 y$	M.SQR?	LocR $\alpha$ ON
PowerF		Poiss <sup>-1</sup>	$\Sigma \ln x$	NaN?	MSG $\alpha$ VIEW
RCLM		Pois $\lambda$	$\Sigma \ln xy$	ODD?	NOP $\alpha$ XEQ
RDX,		Pois $\lambda$ <sub>P</sub>	$\Sigma \ln y$	PRIME?	PopLR $\Leftarrow$
RDX.		Pois $\lambda$ <sup>-1</sup>	$\Sigma x$	REALM?	PRCL
REGS		t <sub>P</sub> (x)	$\Sigma x^2$	REGS?	
RM		t(x)	$\Sigma x^2 y$	RM?	
SEPOFF	SETUSA	t <sup>-1</sup> (p)	$\Sigma x \ln y$	SMODE?	
SEPON	SIGNMT	Weibl	$\Sigma xy$	SPEC?	
SETCHN	SLOW	Weibl <sub>P</sub>	$\Sigma y$	SSIZE?	
SETDAT	SSIZE4	Weibl <sup>-1</sup>	$\Sigma y^2$	TOP?	
SETEUR	SSIZE8	$\phi(x)$	$\Sigma y \ln x$	WSIZE?	
SETIND	STOM	$\chi^2$		x < ?	x $\approx$ ?
SETJPN	UNSIGN	$\chi^2$ INV		x $\leq$ ?	x $\geq$ ?
SETTIM	WSIZE	$\chi^2_P$		x = +0?	x > ?
SETUK	Y.MD			x = -0?	$\infty$ ?

**X.FCN** varies with the mode set, except in PRG. It contains in ...

... alpha mode:	... decimal mode:			... integer modes:		CPX <b>X.FCN</b>
	$\sqrt[3]{x}$	$L_n$	$W_m$		$\sqrt[3]{x}$	$C\sqrt[3]{x}$
RESET	AGM	$LN1+x$	$W_p$	ASR	RR	$CAGM$
VERS	ANGLE	$L_n\alpha$	$W^{-1}$	BATT	RRC	$CCONJ$
$x \rightarrow \alpha$	BATT	$LN\beta$	XNOR	CB	SB	$CDROP$
$\alpha DATE$	$B_n$	$LN\Gamma$	$x^3$	DBLR	SEED	$Ce^x - 1$
$\alpha DAY$	$B_n^*$	MANT	$x \rightarrow \alpha$	DBL*	SIGN	$CFIB$
$\alpha IP$	CEIL	MAX	$\sqrt[x]{y}$	DBL/	SL	$CLN1+x$
$\alpha LENG$	DATE	MIN	YEAR	dRCL	SR	$CLN\beta$
$\alpha MONTH$	DATE $\rightarrow$	MONTH	$\alpha DATE$	DROP	sRCL	$CLN\Gamma$
$\alpha RC\#$	DAY	NAND	$\alpha DAY$	FB	ULP	$CSIGN$
$\alpha RL$	DAY $S+$	NEIGHB	$\alpha IP$	FIB	VERS	$CSINC$
$\alpha RR$	DECOMP	NEXTP	$\alpha LENG$	GCD	WHO	$CW_p$
$\alpha SL$	DEG $\rightarrow$	NOR	$\alpha MONTH$	LCM	$x^3$	$CW^{-1}$
$\alpha SR$	dRCL	$P_n$	$\alpha RCL$	LJ	XNOR	$Cx^3$
$\alpha TIME$	DROP	RAD $\rightarrow$	$\alpha RC\#$	MASKL	$x \rightarrow \alpha$	$C\sqrt[x]{y}$
$\alpha \rightarrow x$	D $\rightarrow$ J	RESET	$\alpha RL$	MASKR	$\sqrt[x]{y}$	$C\beta$
	erf	ROUNDI	$\alpha RR$	MAX	$\alpha IP$	$C\Gamma$
	erfc	RSD	$\alpha SL$	MIN	$\alpha LENG$	$C(-1)^x$
	EXPT	SDL	$\alpha SR$	MIRROR	$\alpha RCL$	
	$e^x - 1$	SDR	$\alpha STO$	NAND	$\alpha RC\#$	
	FIB	SIGN	$\alpha TIME$	nBITS	$\alpha RL$	
	FLOOR	SINC	$\alpha \rightarrow x$	NEIGHB	$\alpha RR$	
	GCD	SLVQ	$\beta$	NEXTP	$\alpha SL$	
	GRAD $\rightarrow$	sRCL	$\Gamma$	NOR	$\alpha SR$	
	$H_n$	STOPW	$\Delta DAYS$	RESET	$\alpha STO$	
	$H_{np}$	TIME	$\zeta$	RJ	$\alpha \rightarrow x$	
	H.MS $+$	$T_n$	$(-1)^x$	RL	$(-1)^x$	
	H.MS $-$	ULP	$\rightarrow DATE$			
	iRCL	$U_n$	%MG			
	I $\beta$	VERS	%MRR			
	I $\Gamma$	WDAY	%T			
	J $\rightarrow$ D	WHO	% $\Sigma$			
	LCM		%+MG			

À	À	à	à
Á	Á	á	á
ÂÃÄÄ	ÂÃÄÄ	âãäää	âãäää
Ä	Ä	ä (ä)	ä (ä)
Æ	Æ	æ	æ
Å	Å	å	å
Ć	Ć	ć	ć
Č	Č	č	č
Ç	Ç	ç	ç
Đ	Đ	đ	đ
È	È	è	è
É	É	é	é
ÊËÉÉ	ÊËÉÉ	êëéé	êëéé
Ë	Ë	ë (ë)	ë (ë)
		h	h
Ì	Ì	ì	ì
Í	Í	í	í
ÎÏÍÍ	ÎÏÍÍ	îïíí	îïíí
Ï	Ï	ï (í)	ï (í)
ÑÑ	ÑÑ	ñ ñ	ñ ñ
Ò	Ò	ò	ò
Ó	Ó	ó	ó
ÔÕÖÖ	ÔÕÖÖ	ôõöö	ôõöö
Ö	Ö	ö (ö)	ö (ö)
Ø	Ø	ø	ø
Ř	Ř	ř	ř
Š	Š	š	š
		ß	ß
Ù	Ù	ù	ù
Ú	Ú	ú	ú
ÛÜÜÜ	ÛÜÜÜ	ûüüü	ûüüü
Ü	Ü	ü (ü)	ü (ü)
Ü	Ü	ü	ü
		x / ï	x / ï
Ý	Ý	ý	ý
		ŷ / ū	ŷ / ū
Ŷ	Ŷ	ÿ	ÿ
Ž	Ž	ž	ž

Here are the contents of the alpha catalogs making the *WP 34S* the most versatile global calculator known. Large font is printed in grey cells on this page. **CPX** is listed left. Accented letters show the same width as plain ones wherever possible.

# , : ; ‘ “ * @ _ ~ % \$ € £ ¥ ⊖ ⊕	. /
,;:"*@_~%\$€£¥⊖⊕#	
,;:"*e_~%\$€£¥⊖⊕#	
< ≤ = ≈ ≥ > [ ] { }	→ ← ↑ ↓ ⇄ √ ∫ ∞ ^ ⇈
<≤=≈≥[ ]{ }	→←↑↓⇄√∫∞^⇄
<≤=≈≥>[ ]{ }	→←↑↓⇄√∫∞^⇄
0 ° 1 2 2 3 A B c e k m n p u w X μ -1 ∞	R↑
0 1 2 2 3 m n c e k m n p u w X μ -1 ∞	
0 1 2 2 3 m n c e k m n p u w X μ -1 ∞	

The letters provided in your *WP 34S* allow for correct writing the languages of more than  $3 \cdot 10^9$  people using Greek or variants of Latin letters (still only half of mankind yet), i.e. the following languages:

Afrikaans, Català, Cebuano, Česky, Cymraeg, Dansk, Deutsch, Eesti, English, Español, Euskara, Français, Gaeilge, Galego, Ελληνικά, Hrvatski, Bahasa Indonesia, Italiano, Basa Jawa, Kiswahili, Kreyòl ayisyen, Magyar, Bahasa Melayu, Nederlands, Norsk, Português, Quechua, Shqip, Slovenčina, Slovenščina, Srpski, Basa Sunda, Suomeksi, Svenska, Tagalog, Winaray, and Zhōngwén (with a little trick explained below). If you know further living languages covered, please tell us.

Mandarin Chinese (Zhōngwén) features four tones, usually transcribed like e.g. mā, má, mǎ, and mà. So we need different letters for á and ä here, and for e, i, o, and u as well. With six pixels total character height, we found no way to display these in both fonts nicely, keeping letters and accents separated for easy reading. For an unambiguous solution, we suggest using a dieresis (else not employed in Hán yǔ pīnyīn) representing the third tone here. Pinyin writers, we ask for your understanding.

## Addressing Catalog Items

1	User input Dot matrix display	<b>CONST</b> , <b>CONV</b> , <b>MODE</b> , <b>PROB</b> , <b>P.FCN</b> , <b>STAT</b> , <b>TEST</b> , or <b>X.FCN</b>	<b>CPX</b> , <b>R↓</b> , or <b>R↑</b> in alpha mode	<b>→</b> , <b>TEST</b> , or <b>./.</b> in alpha mode
		<b>Shows 1<sup>st</sup> item in selected catalog.</b> (e.g. <b>BC?</b> in <b>P.FCN</b> ) Alpha mode is set.	(e.g. <b>Á</b> in <b>CPX</b> )	(e.g. <b>,</b> in <b>./.</b> )
2	User input Dot matrix display	<b>XEQ</b> , <b>▼</b> , <b>▲</b> , <b>EXIT</b> , or 1 <sup>st</sup> character (e.g. <b>F</b> )	<b>XEQ</b> , <b>▼</b> , <b>▲</b> , <b>EXIT</b> , or character (e.g. <b>O</b> )	<b>Shows 1<sup>st</sup> item starting with this character *</b> (e.g. <b>FB</b> ) <b>Shows 1<sup>st</sup> item starting with this letter *</b> (e.g. <b>Ó</b> )
3	User input Dot matrix display	<b>XEQ</b> , <b>▼</b> , <b>▲</b> , <b>EXIT</b> , or 2 <sup>nd</sup> character (e.g. <b>S</b> )		
		<b>Shows 1<sup>st</sup> item starting with this sequence *</b> (e.g. <b>FS?</b> )		
4	User input Dot matrix display		<b>XEQ</b> , <b>▼</b> , <b>▲</b> , or <b>EXIT</b> (e.g. <b>▼</b> )	<b>Shows next item in this catalog</b> (e.g. <b>Ó</b> )      (e.g. <b>?</b> )
		... Continue browsing this way until reaching the item desired		
n	User input Dot matrix display	<b>FS?F</b> . ... and executes or inserts the command chosen, or recalls the constant selected. <b>Result</b>	<b>XEQ</b> Calculator leaves the catalog returning to the mode set before ... and appends the selected character to <b>alpha</b> . <b>Contents of alpha register</b> (e.g. <b>Östl. Seite:</b> )	

- \*) If a character or sequence specified is not found in this catalog then the first item following alphabetically will be shown. If there is no such item, then the last item in this catalog is displayed. You may key in even more than two characters – after 3 seconds, however, or after **▼** or **▲**, the search string will be reset and you may start with a first character again.

## Constants

Below you find the contents of the catalog CONST, and one command at the end. Navigation works as in the catalogs mentioned before. Names of **astronomical** and **mathematical** constants are printed on colored background below. Values of physical constants (*incl. their relative standard deviations given in parentheses below*) are from CODATA 2010, copied in July 2011, unless stated otherwise explicitly. Green background denotes exact or almost exact values. The more the color turns to red, the less precise the respective constant is known<sup>29</sup>.

For the units, remember Tesla with  $1T = 1\frac{Wb}{m^2} = 1\frac{V \cdot s}{m^2}$ , Joule with  $1J = 1N \cdot m = 1\frac{kg \cdot m^2}{s^2}$

and on the other hand  $1J = 1W \cdot s = 1V \cdot A \cdot s = \frac{1}{e} eV \approx 6.24 \cdot 10^6 TeV$ . Thus  $1\frac{J}{T} = 1A \cdot m^2$ .

	Numeric value	Unit	Remarks
<b>a</b>	365.2425 ( <i>per definition</i> )	<i>d</i>	Gregorian year
<b>a<sub>0</sub></b>	5.2917721092E-11 (3.2E-10)	<i>m</i>	Bohr radius $= \frac{\alpha}{4\pi \cdot R_{\infty}}$
<b>a<sub>m</sub></b>	384.4E6 (1E-3)	<i>m</i>	Semi-major axis of the Moon's orbit around the Earth
<b>a<sub>⊕</sub></b>	1.495979E11 (1E-6)	<i>m</i>	Semi-major axis of the Earth's orbit around the sun. Within the uncertainty stated here, it equals 1 AU.
<b>c</b>	2.99792458E8 ( <i>per definition</i> )	<i>m/s</i>	Vacuum speed of light
<b>c<sub>1</sub></b>	3.74177153E-16 (4.4E-8)	<i>m<sup>2</sup> · W</i>	First radiation constant $= 2\pi \cdot h \cdot c^2$
<b>c<sub>2</sub></b>	0.014387770 (9.1E-7)	<i>m · K</i>	Second radiation constant $= hc/k$
<b>e</b>	1.602176565E-19 (2.2E-8)	<i>C</i>	Electron charge $= \frac{2}{K_J R_K} = \Phi_0 G_0$
<b>eE</b>	2.718281828459045...	1	Euler's e. Please note the letter <i>e</i> represents the electron charge elsewhere in this table.
<b>F</b>	96485.3365 (2.2E-8)	<i>C/mol</i>	Faraday's constant $= e N_A$
<b>F<sub>α</sub></b>	2.5029078750958928...	1	Feigenbaum's $\alpha$
<b>F<sub>δ</sub></b>	4.6692016091029906...	1	Feigenbaum's $\delta$
<b>g</b>	9.80665 ( <i>per definition</i> )	<i>m/s<sup>2</sup></i>	Standard earth acceleration

<sup>29</sup> The bracketed values printed here for your kind attention allow you to compute the precision of results you may obtain using these constants. The procedure to be employed is called error propagation. It is often ignored, though essential for trustworthy results – not only in science. Please turn to respective texts before you believe in 4 decimals of a calculation result based on yardstick measurements.

	Numeric value	Unit	Remarks
<b>G</b>	6.67384E-11 (1.2E-4)	$\frac{m^3}{kg \cdot s^2}$	Newton's gravitation constant. See <b>GM</b> below for a more precise value.
<b>G<sub>o</sub></b>	7.7480917346E-5 (3.2E-10)	$\frac{1}{\Omega}$	Conductance quantum $= 2e^2/h = 2/R_K$
<b>G<sub>c</sub></b>	0.915965594177...	1	Catalan's constant
<b>g<sub>e</sub></b>	2.00231930436153 (2.6E-13)	1	(Landé's) electron g-factor
<b>GM</b>	3.986004418E14 (2.0E-9)	$\frac{m^3}{s^2}$	Newton's gravitation constant times the Earth's mass with its atmosphere included (according to WGS84, see <b>Sa</b> below).
<b>h</b>	6.62606957E-34 (4.4E-8)	$J_s$	Planck constant
<b>ħ</b>	1.054571726E-34 (4.4E-8)		$= h/(2\pi)$
<b>k</b>	1.3806488E-23 (9.1E-7)	$\frac{J}{K}$	Boltzmann constant $= R/N_A$
<b>K<sub>j</sub></b>	4.83597870E14 (2.2E-8)	$\frac{Hz}{V}$	Josephson constant $= 2e/h$
<b>l<sub>p</sub></b>	1.616199E-35 (6.0E-5)	$m$	Planck length $= \sqrt{\hbar G/c^3} = t_p c$
<b>m<sub>e</sub></b>	9.10938291E-31 (4.4E-8)	$kg$	Electron mass
<b>M<sub>m</sub></b>	7.349E22 (5E-4)		Mass of the Moon
<b>m<sub>n</sub></b>	1.674927351E-27 (4.4E-8)		Neutron mass
<b>m<sub>p</sub></b>	1.672621777E-27 (4.4E-8)		Proton mass
<b>M<sub>p</sub></b>	2.17651E-8 (6.0E-5)		Planck mass $= \sqrt{\hbar c/G} \approx 22\mu g$
<b>m<sub>u</sub></b>	1.660538921E-27 (4.4E-8)		Atomic unit mass $= 10^{-3} kg / N_A$
<b>m<sub>u</sub>c<sup>2</sup></b>	1.492 417 954E-10 (4.4E-8)	$J$	Atomic unit mass energy equivalent
<b>m<sub>μ</sub></b>	1.883531475E-28 (5.1E-8)	$kg$	Muon mass
<b>M<sub>⊙</sub></b>	1.9891E30 (5E-5)		Mass of the sun
<b>M<sub>⊕</sub></b>	5.9736E24 (5E-5)		Mass of the Earth
<b>N<sub>A</sub></b>	6.02214129E23 (4.4E-8)	$\frac{1}{mol}$	Avogadro's number
<b>NaN</b>			"not a number"
<b>p<sub>o</sub></b>	101325 (per definition)	$Pa$	Standard atmospheric pressure
<b>q<sub>p</sub></b>	1,8755459E-18 (6.0E-5)	$As$	Planck charge $= \sqrt{4\pi\epsilon_0\hbar c} \approx 11.7e$ . This was in CODATA 2006, but in 2010 no more.

	Numeric value	Unit	Remarks
<b>R</b>	8.3144621 (9.1E-7)	$\frac{J}{mol \cdot K}$	Molar gas constant
<b>r<sub>e</sub></b>	2.8179403267E-15 (9.7E-10)	<i>m</i>	Classical electron radius = $\alpha^2 \cdot a_0$
<b>R<sub>K</sub></b>	25812.8074434 (3.2E-10)	$\Omega$	von Klitzing constant = $\frac{h}{e^2}$
<b>R<sub>m</sub></b>	1.737530E6 (5E-7)	<i>m</i>	Mean radius of the Moon
<b>R<sub>∞</sub></b>	1.0973731568539E7 (5.0E-12)	$\frac{1}{m}$	Rydberg constant = $\frac{\alpha^2 m_e c}{2 h}$
<b>R<sub>⊕</sub></b>	6.96E8 (5E-3)	<i>m</i>	Mean radius of the sun
<b>R<sub>⊕</sub></b>	6.371010E6 (5E-7)	<i>m</i>	Mean radius of the Earth
<b>S<sub>a</sub></b>	6.3781370E6 ( <i>per definition</i> )	<i>m</i>	Semi-major axis of the model WGS84 used to define the Earth's surface for GPS and other surveying purposes (please look at the site <a href="http://earth-info.nga.mil/GandG/publications/tr8350.2/tr8350_2.html">http://earth-info.nga.mil/GandG/publications/tr8350.2/tr8350_2.html</a> )
<b>S<sub>b</sub></b>	6.3567523142E6 (1.6E-11)	<i>m</i>	Semi-minor axis of WGS84
<b>S<sub>e</sub><sup>2</sup></b>	6.69437999014E-3 (1.5E-12)	1	First eccentricity squared of WGS84
<b>S<sub>e'</sub><sup>2</sup></b>	6.73949674228E-3 (1.5E-12)	1	Second eccentricity squared of WGS84 (it is really called e' <sup>2</sup> in this article, I apologize)
<b>S<sub>f</sub><sup>-1</sup></b>	298.257223563 ( <i>per definition</i> )	1	Flattening parameter of WGS84
<b>T<sub>o</sub></b>	273.15 ( <i>per definition</i> )	<i>K</i>	= 0°C, standard temperature
<b>t<sub>p</sub></b>	5.39106E-44 (6.0E-5)	<i>s</i>	Planck time = $\sqrt{\frac{\hbar G}{c^5}} = \frac{l_p}{c}$
<b>T<sub>p</sub></b>	1.416833E32 (6.0E-5)	<i>K</i>	Planck temperature = $\frac{c^2}{k} \sqrt{\frac{\hbar c}{G}} = \frac{M_p c^2}{k} = \frac{E_p}{k}$
<b>V<sub>m</sub></b>	0.022413968 (9.1E-7)	$\frac{m^3}{mol}$	Molar volume of an ideal gas at standard conditions = $\frac{RT_0}{p_0}$
<b>Z<sub>o</sub></b>	376.730313461...	$\Omega$	Charact. impedance of vacuum = $\sqrt{\frac{\mu_0}{\epsilon_0}} = \mu_0 c$
<b>α</b>	7.2973525698E-3 (3.2E-10)	1	Fine-structure constant = $\frac{e^2}{4\pi\epsilon_0\hbar c} \approx \frac{1}{137}$
<b>γEM</b>	0.57721566490153286...	1	Euler-Mascheroni constant

	Numeric value	Unit	Remarks
$\gamma_p$	2.675222005E8 (2.4E-8)	$\frac{1}{s \cdot T}$	Proton gyromagnetic ratio $= \frac{2\mu_p}{\hbar}$
$\epsilon_0$	8.854187817...E-12	$\frac{A \cdot s}{V \cdot m}$ or $F/m$	Electric constant, vacuum permittivity $= \frac{1}{\mu_0 c^2}$
$\lambda_c$	2.4263102389E-12 (6.5E-10)	$m$	Compton wavelength of the electron $= \frac{h}{m_e c}$
$\lambda_{cn}$	1.3195909068E-15 (8.2E-10)		Compton wavelength of the neutron $= \frac{h}{m_n c}$
$\lambda_{cp}$	1.32140985623E-15 (7.1E-10)		Compton wavelength of the proton $= \frac{h}{m_p c}$
$\mu_0$	1.2566370614...E-6	$\frac{V \cdot s}{A \cdot m}$	Magnetic constant, also known as vacuum permeability $= 4\pi \cdot 10^{-7} \frac{V \cdot s}{A \cdot m}$ (per definition)
$\mu_B$	9.27400968E-24 (2.2E-8)	$J/T$ or $A \cdot m^2$	Bohr's magneton $= \frac{e\hbar}{2m_e}$
$\mu_e$	-9.28476430E-24 (2.2E-8)		Electron magnetic moment
$\mu_n$	-9.6623647E-27 (2.4E-7)		Neutron magnetic moment
$\mu_p$	1.410606743E-26 (2.4E-8)		Proton magnetic moment
$\mu_u$	5.05078353E-27 (2.2E-8)		Nuclear magneton $= \frac{e\hbar}{2m_p}$
$\mu_\mu$	-4.49044807E-26 (3.4E-8)		Muon magnetic moment
$\pi$	3.141592653589793...	1	
$\sigma_B$	5.670373E-8 (3.6E-6)	$\frac{W}{m^2 K^4}$	Stefan Boltzmann constant $= \frac{2\pi^5 k^4}{15h^3 c^2}$
$\Phi$	1.618033988749894...	1	Golden ratio $= \frac{1+\sqrt{5}}{2}$
$\Phi_0$	2.067833758E-15 (2.2E-8)	$V \cdot s$	Magnetic flux quantum $= \frac{h}{2e} = \frac{1}{K_J}$
$\omega$	7.292115E-5 (2E-8)	$rad/s$	Angular velocity of the Earth according to WGS84 (see <b>Sa</b> above)
$-\infty$		1	Negative and positive infinity (may the Lord of Mathematics forgive us calling these 'constants')
$\infty$			
#		1	See the last command in the index <a href="#">above</a> .

## Unit Conversions

Find below the contents of the catalog CONV<sup>30</sup>. Navigation works as in the other catalogs. There is one specialty, however: **f B** (i.e. **1/x**) will execute the inverse of the conversion displayed and leave CONV.

Example: Assume the display set to FIX 3. Then keying in

- |  |                  |  |
|--|------------------|--|
| <b>4 h CONV A</b>                          | will display     | acres→ha and 1.619 below telling you 4 acres equal 1.619 hectares. |
| Now press <b>f B</b>                       | and you will get | 9.884 instead, being the amount of acres equaling 4 hectares.      |
| Press <b>h CONV</b> again and you will see |                  | acres→ha and 4.000 below confirming what was just said.            |
| Leave the catalog via <b>EXIT</b>          |                  | and the display will return to 9.884.                              |

The constant **T<sub>0</sub>** may be useful for conversions of temperatures, too; it is found in the [catalog CONST](#) and is not repeated here since being only added or subtracted. The conversion factors or divisors listed below for your information are user transparent in executing a conversion – those printed on light green background in this table apply exactly.

Conversion		Remarks	Class
°C→°F	* 1.8 + 32		Temperature
°F→°C	- 32 ) / 1.8		Temperature
°→G	/ 0.9	Converts to ‘grads’ or ‘gon’	Angle
°→rad	* π / 180	Equals D→R	Angle
acres→ha	* 0.4046873	1 ha = 10 <sup>4</sup> m <sup>2</sup>	Area
ar.→dB	20lg( $a_1/a_2$ )	Amplitude ratio	Ratio
atm→Pa	* 1.01325E5		Pressure
AU→km	* 1.495979E8	Astronomic units	Length
bar→Pa	* 1E5		Pressure
Btu→J	* 1055.056	British thermal units	Energy
cal→J	* 4.1868		Energy
cft→l	* 28.31685	Cubic feet	Volume

<sup>30</sup> For most readers, many of the units appearing in CONV may look obsolete at least. They die hard, however, in some corners of this world. All these corners have in common is English being spoken there. For symmetry reasons, we may also add some traditional Indian and Chinese units. Anyway, this catalog provides the means to convert local to common units.

Conversion		Remarks	Class
cm→inches	/ 2.54		Length
dB→ar.	$10^{R_{dB}/20}$	Amplitude ratio	Ratio
dB→pr.	$10^{R_{dB}/10}$	Power ratio	Ratio
fathom→m	* 1.8288		Length
feet→m	* 0.3048		Length
flozUK→ml	* 28.41306	$1 \text{ l} = 1/1000 \text{ m}^3$	Volume
flozUS→ml	* 29.57353		
galUK→l	* 4.54609		
galUS→l	* 3.785418		
G→°	* 0.9	Grads or gon	Angle
g→oz	/ 28.34952		Mass
G→rad	* $\pi / 200$		Angle
g→tr.oz	/ 31.10348		Mass
ha→acres	/ 0.4046873	1 ha = 10000 m <sup>2</sup>	Area
HP <sub>e</sub> →W	* 746	Electric horse power	Power
hpUK→W	* 745.6999	British horse power	Power
inches→cm	* 2.54		Length
inHg→Pa	* 3386.389		Pressure
J→Btu	/ 1055.056		Energy
J→cal	/ 4.1868		Energy
J→kWh	/ 3.6E6		Energy
kg→lb	/ 0.4535924		Mass
kg→stones	/ 6.35029318		Mass
km→AU	/ 1.495979E8	Astronomic units	Length
km→l.y.	/ 9.460730E12	Light years	Length
km→miles	/ 1.609344		Length
km→nmi	/ 1.852	Nautical miles	Length
km→pc	/ 3.085678E16	Parsec	Length

Conversion		Remarks	Class
kWh→J	* 3.6E6		Energy
lbf→N	* 4.448222		Force
lb→kg	* 0.4535924		Mass
l.y.→km	* 9.460730E12	Light years	Length
l → cft	/ 28.31685	1 l = $1/_{1000} \text{ m}^3$	Volume
l → galUK	/ 4.54609		
l → galUS	/ 3.785418		
miles→km	* 1.609344		Length
ml→flozUK	/ 28.41306	1 ml = 1 cm <sup>3</sup>	Volume
ml→flozUS	/ 29.57353		
mmHg→Pa	* 133.3224	1 torr = 1 mm Hg	Pressure
m→fathom	/ 1.8288		Length
m→feet	/ 0.3048		Length
m→yards	/ 0.9144		Length
nmi→km	* 1.852	Nautical miles	Length
N→lbf	/ 4.448222		Force
oz→g	* 28.34952	Ounces	Mass
Pa→atm	/ 1.01325E5	1 Pa = 1 N/m <sup>2</sup>	Pressure
Pa→bar	/ 1E5		Pressure
Pa→inHg	/ 3386.389		Pressure
Pa→mmHg	/ 133.3224		Pressure
Pa→psi	/ 6894.757		Pressure
Pa→torr	/ 133.3224		Pressure
pc→km	* 3.085678E16	Parsec	Length
pr.→dB	$10\lg\left(\frac{P_1}{P_2}\right)$	Power ratio	Ratio
psi→Pa	* 6894.757	Pounds per square inch	Pressure
PS(hp)→W	* 735.4988	Horse power	Power
rad→°	* 180 / π	Equals R→D	Angle

Conversion		Remarks	Class
rad→G	* 200 / π		Angle
stones→kg	* 6.35029318		Mass
s.tons→t	* 0.9071847	Short tons	Mass
tons→t	* 1.016047	Imperial tons	Mass
torr→Pa	* 133.3224	1 torr = 1 mm Hg	Pressure
tr.oz→g	* 31.10348	Troy ounces	Mass
t→s.tons	/ 0.9071847	1 t = 1000 kg	Mass
t→tons	/ 1.016047		
W→HP <sub>e</sub>	/ 746		Power
W→hpUK	/ 745.6999		Power
W→PS(hp)	* 735.4988		Power
yards→m	* 0.9144		Length

You may, of course, combine conversions as you like. For example, filling your tires with a maximum pressure of 30 psi the following will help you at a gas station in Europe and beyond:

**3 0 h CONV P S XEQ**  
**h CONV P ✓ XEQ** resulting in 2.1 bar.

Now you can set the filler and will not blow your tires.

In cases of emergency of a particular kind, remember Becquerel equals Hertz, Gray is the unit for deposited or absorbed energy ( $1\text{Gy} = 1\text{J/kg}$ ), and Sievert ( $\text{Sv}$ ) is Gray times a radiation dependant dose conversion factor for the damage caused in human bodies.

In this area also some outdated units may be found in older literature: Pour les amis de Mme. Curie,  $1\text{Ci} = 3.7 \cdot 10^{10} \text{Bq} = 3.7 \cdot 10^{10} \text{decays/s}$ . And for those admiring the very first Nobel laureate in physics, Mr. Röntgen, for finding the x-rays (ruining his hands in these experiments), the charge generated by radiation in matter was measured by the unit  $1\text{R} = 2.58 \cdot 10^{-4} \text{As/kg}$ . A few decades ago, Rem (i.e. Röntgen equivalent men) was measuring what Sievert does today.

## Predefined Global Alpha Labels

There may be labels employed and provided for particular tasks already. You find them listed in CAT when the respective routines are loaded in flash memory. Thus they will not take any steps from user program memory in RAM.

Such routines are found at <http://wp34s.svn.sourceforge.net/viewvc/wp34s/library/> as text files with extension .wp34s by convention. This includes, for example, a suite of basic 3D vector operations, a TVM application, and more. You may open these files using e.g. Notepad, and download them following your needs. README\_ASM explains the loading procedure.

## INTERACTIVE PROGRAMMING

This chapter deals with writing programs that interact with the user. Topics covered are the display of messages, getting input from the user, hot keys and truly interactive "real time" programs.

### Interrupting a Program for Display of Information

When a program is started, the display contents are replaced by the "Running Program" message. To display a number while a program is executing, use VIEW in programming and specify a register to display. Here, **X** is a valid parameter so you can present the standard top stack level contents to the user. The command formats the number to the present settings and updates the LCD to display it. This causes a small overhead so expect that your program slows down a bit with each update. This is especially true if the displays follow each other in a tight loop because the flicker avoidance logic needs to wait for a complete display refresh cycle before the next update is allowed.

Another way to show what would normally appear on the display without a program running is to use the PSE instruction specifying the time in 10ths of seconds to suspend execution. A time of zero will have the same effect as a VIEW **X** instruction. PSE following VIEW **s** will display the contents of address **s**. The display will then stay unchanged until the next VIEW or PSE instruction is executed, not only for the time specified with PSE. The next PSE or STOP will switch back to the normal display of **x**. VIEW **s** followed by STOP will display the contents of address **s** until the user presses **R/S**.

To make things clearer: VIEW immediately displays the register when encountered in program execution. When followed by PSE or STOP, the display persists. Only the next PSE or STOP (or keyboard entry after the program has halted) will revert to the normal **x** display. To make sure that STOP or PSE always display a specific information it is best to directly precede it by the respective VIEW instruction. There is no way to get the "Running Program" message back once it has been replaced by a programmed display.

Generally speaking, a message is a string of characters that is shown in the upper region of the display. The program interface to this area is via the alpha register. You need to switch to alpha mode to access most of the commands that deal with this register. The annunciator INPUT lights if alpha mode is active. The X.FCN catalogue changes in alpha mode to contain alpha commands. Displaying a message will normally start with a CL[alpha] instruction because most commands append their output to what is already

stored. To save space, characters in program mode may be entered in groups of three by typing **α** while already in alpha mode. This saves one program step per three characters. A few special characters are not allowed in the last position for technical reasons. Single characters and grouped characters can be freely mixed. The register is 31 characters wide. The display capacity is considerably smaller and depends on the width of each symbol. The display switches to a smaller font if necessary. The contents can be scrolled in interactive alpha mode with the up and down arrow keys (as described above).

If you just want to display a text message and no number with it, use **αVIEW**. To get to this command you must be out of alpha mode and open the P.FCN catalogue. **g A** brings you to the alpha commands. The **αVIEW** display starts at the first character of the string. The numeric portion of the LCD is replaced by three dashes. You can of course display a message together with a chosen register. Go to alpha mode and press **VIEW**. This will produce the **αVW+ nn** command. It is meant to display alpha together with ('+') numeric data coming from any register. As with **VIEW**, X is allowed here. The above comments regarding PSE or STOP following any of these commands are valid here, too.

Another way to display the alpha register is to switch to alpha mode with **αON**. The main difference is that you are presented the tail of the string instead of its head. Also, a PSE is necessary to update the actual display which **αON** alone does not do. If followed by a **STOP**, alpha mode stays on causing user input to go to the upper display! **αOFF** returns everything to normal.

## Temporary Displays

Whenever the display does not show the actual contents of the X register in the current mode, this is considered a temporary display. To distinguish this from the normal display, the RPN annunciator is off during temporary displays and on otherwise. The following displays are considered temporary:

1. Any errors,
2. **αVIEW**,
3. **αVW+ nn**,
4. **VIEW nn** where **nn** is not X,
5. **VIEW X** if encountered in a program because X may have changed before the stop,
6. H.MS display,
7. Temporary display in another base (not programmable).

Press **EXIT** or **◀** to get back to the normal display.

## Data Input

The easiest way of getting user input, apart from expecting everything on the stack, is just stopping the program with **STOP**, letting the user input a number and let him press **R/S** to continue execution. Without any clue what the program is asking for, this is only suitable for very simple programs. The least you want to do is present a message to the user what he is supposed to enter when the program stops. This can be done with any of the **[alpha]VIEW** commands followed by **STOP**. There is a shorthand especially made for this: **PROMPT**. It is a combination of **[alpha]VW+ X** and **STOP**. It displays the alpha register together with the current X register and halts program execution. This is good for entering a lengthy list of parameters in a given order without much programming.

## Hotkeys

A more versatile way of doing things is using the dedicated keys A to D in the top row. If the user presses one of these keys the program executes the next subroutine or program with a label of the same name. If you have more than one program using labels A to D in RAM or in a flash region, it's necessary to move the program counter (PC) to the top of the program and stop there. A typical program structure might be the following:

```
LBL 'MYP'
CL[alpha]
[alpha]'HeL'
[alpha]'lo!'
PROMPT
BACK 01
LBL A
ENTRY?
SKIP 01
XEQ 01
STO 01
RTN
LBL B
...
END
```

This sets up a message and stops. **R/S** does nothing, it simply returns to the prompt. If the user enters a number and hits A, the program starts with the ENTRY? test which is true if the user has entered fresh data. The input will be stored in register 01 and the program jumps back to the prompt. If the user has not entered any information after the last prompt, subroutine 01 will be called to compute a new value which is then stored and displayed. This is the way the TVM application is implemented.

## Keyboard Codes

Sometimes, the hot keys **A** to **D** aren't enough. But there are ways to extend the number of directly addressable subroutines by a simple trick: shorthand addressing of numeric labels. To make this possible, each key is identified by a row and a column, each starting with one.

A	B	C	D	->	CPX
11	12	13	14	15	16
STO	RCL	Rv	f	g	h
21	22	23	24	25	26
ENTER^	x<>y	+/-	EEX	<-	
31	32	33	34	35	
XEQ	7	8	9	/	
41	42	43	44	45	
^	4	5	6	x	
51	52	53	54	55	
v	1	2	3	-	
61	62	63	64	65	

EXIT	0	.	R/S	
71	72	73	74	75

Whenever you are asked for the entry of a two-digit label, any of the keys marked in *italic* in the above picture can be used as direct input. The label will be replaced by the row/column code of the respective key. Some keys are not available this way because they have a predefined meaning in this context. They can still be used for a short address by preceding the key with the f prefix. Only the f prefix itself cannot be used for shorthand addressing. If you want to associate a program with the key **STO**, just put the label 21 in front of the routine and it can be conveniently called with **XEQ STO** by the user.

## Direct Keyboard Access

The same codes are returned by the KEY? command which allows true "real time" response to user input from the keyboard. KEY? takes a register argument (X is allowed but does not lift the stack) and stores the key most recently pressed during program execution in the specified register. R/S and EXIT cannot be queried, they stop program execution immediately. The keyboard is active during execution but it is of course desirable to show a message and suspend the program with the PSE command while waiting for user input. PSE is interrupted by a key press, so you can simply use a PSE 99 statement in a loop to wait for input. KEY? acts as a conditional at the same time so a typical user input loop will look like this:

```

LBL 'USR'
CL $\alpha$ 
 $\alpha$  'KEY'
 $\alpha$  ?
LBL 00
 $\alpha$ VIEW
PSE 99
KEY? 00
GTO 00
LBL?->00
XEQ->00
GTO 00

```

This code fragment prompts for a key and stores it in register 00. The line directly after KEY? is executed when no key was pressed. The statement KEY? is only executed every 9.9 seconds if the user does not press a key. If he does, the PSE is immediately terminated, KEY? is executed, finds the key code and stores it in register 00. The LBL→00 instruction checks if a label corresponding to the key code has been defined and executes it if found. Instead of the dumb waiting loop, the program can do some computations and update the display before the next call to PSE and KEY? – think of a lunar lander game.

To be even more versatile, the instruction KTP? *nn* is designed to return the key type of a row / column code in register *nn*: 0 to 9 for the respective digits, 10 for the other numeric keys (., +/- and EEX), 11 for any of the three shift keys and 12 for the rest. An invalid code in the target register throws an "Invalid Range Error".

If you decide not to handle the key in the program you may feed it back to the main processing loop of the calculator with the PUTK *nn* command. What happens is that the program halts and the key is treated as if pressed after the stop. This is especially useful if you want to allow numeric input while waiting for some special keys like the arrows. This allows writing of a vector or matrix editor in user code. After execution of the PUTK

command the user is responsible for letting the program continue its work by pressing **(R/S)** or a hot key.

DRAFT

## **APPENDIX A: SUPPORT FOR FLASHING, SERIAL I/O ETC.**

### **How to Flash Your HP 20b or 30b**

You may do the flashing yourself. Then you need your calculator, a special connecting cable, and specific software on your PC or Mac. A PC featuring an hardware serial port and running Windows XP is beneficial. **Please read this paragraph completely before actually starting the procedure.**

- You will get the necessary software – the SAM-BA In-system Programmer – here for free:

[http://www.atmel.com/dyn/products/tools\\_card.asp?tool\\_id=3883](http://www.atmel.com/dyn/products/tools_card.asp?tool_id=3883)

Install it as explained by Atmel.

- You will get the cable from Gene Wright.

- The specific file you will need to transmit to your calculator to make it your WP 34S is called calc.bin and is included in the zipped package you can download from here:

<http://sourceforge.net/projects/wp34s/files/>

Alternatively, you may download calc.bin alone from

<http://wp34s.svn.sourceforge.net/viewvc/wp34s/trunk/realbuild/>

Now, having got these three (SAM-BA, the cable, and calc.bin), please turn to the file <http://dl.dropbox.com/u/10022608/Flashing%20a%2020b%20Calculator.pdf> (edited by Tim Wessmann and Gene Wright). Read it thoroughly for information about connecting and flashing.

**ATTENTION:** If your PC does not feature an hardware serial interface, you will need an USB-to-serial converter to connect the special cable to your PC. Following our experience, converters containing FTDI chips will work – others may not.

On other operating systems than XP flashing may work or not (definitively not on Windows 2000 or earlier). Please check.

On Windows 7 load MS Windows Virtual PC and Windows XP Mode, then work therein.


Then proceed as described in *Flashing a 20b Unit* in said file, steps 1 to 3 only.

**ATTENTION:** Flashing your HP 20b or 30b will erase the HP firmware in step 3, meaning your business calculator will be gone then. The firmware will be replaced with the WP 34S file completely! After this flash is finished, you will have a *WP 34S RPN Scientific* – i.e. your calculator will react as documented in this very manual.

This also means your device will not do anything useful for you between step 3 and 13. It may even look dead – it is not, be assured, at least it will just be eating your batteries (see below)! If you (have to) interrupt the flashing process at any time in this interval for any reason whatsoever, don't worry: simply start again. You may, however, not get any feedback displayed in step 3 anymore. That does not matter, just stick to the procedure.

As long as the cable is connected to your calculator, it will draw a considerable current from the calculator batteries. If you happen to hang anywhere in the flashing process, also the processor is left running at full speed. So chances are high your coin cells will be drained while you are trying to find out what is going wrong. Thus it is wise to disconnect the cable from your calculator when you will not need the cable for the next couple of minutes. For repeated flashing, an external 3V DC supply may pay very fast. Take care to connect '+' to the outer and '-' to the inner contact. The following will work with a good 3V supply only.

Having completed step 3 of said file, call your SAM-BA for step 4. It may take a long time to start up (some sixty seconds), so be patient. When it launches (step 5), a window pops up:

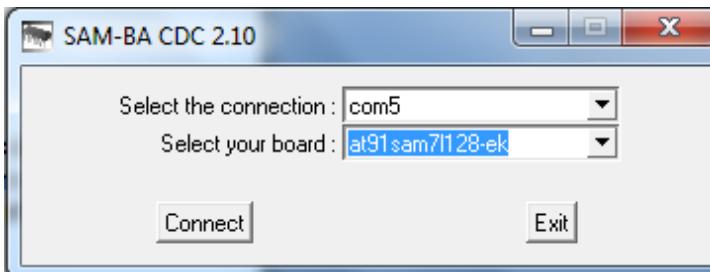

Choose the correct connection (take the port you put your cable in – it may differ from what is printed here). Select the board built in your calculator (i.e. AT91SAM7L128-EK as shown). Press [Connect] then. This was step 6.

In step 7, put in the address of `calc.bin` on your PC. Then continue according to steps 8 to 13. Not reaching step 7 may be due to low supply voltage on your calculator (see above).

## Overlays – Where to Get Them and How to Make Them Yourself

After flashing successfully, a keyboard overlay is very helpful for further work since most labels deviate from the ones used on said business calculators. You may get fine adhesive vinyl overlays from Eric Rechlin.

If those are not available for any reason whatsoever, preliminary paper overlays are most easily made of a file contained in <http://wp34s.svn.sourceforge.net/viewvc/wp34s/artwork/> carrying the word “overlay” in its name. There are various ways to use it. E.g. on a PC with MS Word installed, open a new Word file, <insert> <graphics> <from file>, and select the desired file. Then format the picture setting its width to 68mm, and print that page. Cut it out, span it over your *WP 34S* using some transparent adhesive tape, and you are done.

You may – if you know how to handle a sharp pointed knife carefully – also cut along the thin white lines on the left, top, and right side of each key. Thereafter, attach the base paper to the key plate and each key will peek through its little door. When you stick the end of each such door or flap to the respective key then, your paper cover will come pretty close to a professional overlay already.

## Commands for Handling Flash Memory on Your *WP 34S*

### Mapping of Memory Regions to Emulator State Files

### Data Transfer Between Your *WP 34S* and Your PC (SAM-BA)

Please turn to the file [\*flash.txt\*](#) for these three topics.

### Data Transfer Between Your *WP 34S* and Your PC (Serial I/O)

You will need the special interface cable mentioned above once again, or a [\*modified 20b or 30b\*](#) as described elsewhere. Said special cable draws current from the batteries of your calculator; it shall thus be disconnected from your *WP 34S* as soon as not needed anymore.

Communication is between your *WP 34S* and another *WP 34S*. The Windows emulator counts as a valid partner so you can exchange data between your *WP 34S* and the PC. Since PCs tend to have more than one port you have to tell the emulator which one to use. Create a text file `wp34s.ini` in the directory where the state files `wp34s.dat` reside and put the name of the port as the only line in this file, e.g. `COM5` – the very same port SAM-BA uses to access your *WP 34S* for flashing.

The following commands allow for sending programs, registers or all RAM. They are found in the P.FCN catalog.

On the receiving device, start the command RECV. It will display **Wait...**.

On the sender you have four choices:

1. SENDP will send the user program space. After successful termination, the receiver will display **Program**.
2. SENDR will send the registers 00 to 99. The receiver will display **Register** after successful termination.
3. SENDA will send the complete 2 KB of non-volatile memory. The receiver will display **All RAM** after successful termination.
4. SENDL *n* will send a library region directly. It will arrive in RAM and may be stored using PSTO.

The commands for sending and receiving feature a fixed timeout of some 10 seconds for setting up the connection. After an interval of inactivity of said length, **I/O Error** is displayed indicating no communication has occurred. If **I/O Error** appears in the middle of a transmission try again.

On a device without the crystal installed, you may get said error because of the baud rate setting may be a bit too far off. To determine the speed, use the loop

```
CLx  
INC X  
BACK 01
```

and let it run for 30 seconds. The expected result at nominal speed is around 191,000. The I/O commands accept a correction factor in percent in **X**. Try with 95 if your device is a bit too slow or 105 if it is a bit too fast. Values between 80 and 120 are accepted – all other are ignored. On the emulator or with the crystal installed, *x* is ignored.

The little "=" annunciator is lit while the serial port is in use. **EXIT** can be used to abort the communication.

## More Keyboard Commands Employing ON

**ON** + **+** or **-** : Adjust display contrast.

**ON** + **C** : Tells the system a quartz crystal is installed for the real time clock. The quartz is inevitable prerequisite for the clock being useful in medium to long range (see TICKS). Its installation is a hardware modification described elsewhere.

**ATTENTION:** If this command is entered though the hardware does not contain said modification, the system will hang and can only be brought back to live with a reset or a battery pull!

**ON** + **D** : Enters debugging mode (use at your own risk).

## **APPENDIX B: MEMORY MANAGEMENT**

This chapter discusses how the available memory is divided in program area, local and global data. The two kilobytes (or 1024 words) of non volatile RAM are divided in four distinct sectors:

1. Status and configuration data
2. Global registers, i.e. general purpose registers and stack
3. Registers used for cumulative statistics (optional)
4. Subroutine return stack and program memory.

These sectors are ordered top down. This chapter covers the variable boundaries between them.

A complete copy of the nonvolatile RAM can be written to flash memory using SAVE (or ON+STO). See [Appendix A](#) for more information about the handling of flash memory.

### **Status and Configuration Data**

This sector of 88 bytes is fixed at the very top of available memory and is completely user transparent. Thus it is not covered here besides saying it contains 42 bytes of status and modes data, the alpha register, and 14 bytes holding the 112 global user flags.

### **Global Registers**

Global registers are placed near the end of available memory. In startup default memory layout, the numbered registers **R00** to **R99** precede the stack and special registers **X**, **Y**, **Z**, **T**, **A**, **B**, **C**, **D**, **L**, **I**, **J**, and **K** as shown [above](#). This totals to 112 registers, which is the maximum available. The number can be reduced by using REGS (see [above](#)). REGS? will return an integer between 1 and 100 corresponding to the number of numbered global registers currently allocated.

REGS controls the lower boundary of the register sector. Reducing the number of registers will pull it up to higher absolute addresses; increasing their number will push it down. The memory contents are moved accordingly, thus preserving the data in the surviving registers. Contents of deallocated registers are lost, newly added registers are cleared. The lettered registers do not move.

**Example:** Please see the global register sector at startup default in the left three columns of the following memory table. The next two sets of two columns show what happens after subsequent execution of REGS 96 and REGS 98. The registers are loaded with arbitrary values here to allow tracing them easier.

Absolute address	Default startup memory allocation		After executing REGS 96		Then after executing REGS 98	
	Contents	Relative register address	Contents	Relative register address	Contents	Relative register address
X+11	$k = 40.7$	R111 = K	40.7	K = R111	40.7	K = R111
...	...	...	...	...	...	...
X+2	$z = 4.5$	R102 = Z	4.5	Z = R102	4.5	Z = R102
X+1	$y = -33.8$	R101 = Y	-33.8	Y = R101	-33.8	Y = R101
X	$x = 123.0$	R100 = X	123.0	X = R100	123.0	X = R100
X-1	$r99 = -13.6$	R99	23.1	R95	0.0	R97
X-2	$r98 = 67.9$	R98	6.4	R94	0.0	R96
X-3	$r97 = -45.2$	R97	4.8	R93	23.1	R95
X-4	$r96 = 9.7$	R96	...	R92	6.4	R94
X-5	$r95 = 23.1$	R95	...	R91	4.8	R93
X-6	$r94 = 6.4$	R94	...	R90	...	R92
X-7	$r93 = 4.8$	R93	...	R89	...	R91
...	...	...	...	...	...	...
X-94	...	R06	5.7	R02	...	R04
X-95	...	R05	-2.4	R01	81.3	R03
X-96	...	R04	1.1	R00	5.7	R02
X-97	$r03 = 81.3$	R03			-2.4	R01
X-98	$r02 = 5.7$	R02			1.1	R00
X-99	$r01 = -2.4$	R01				
X-100	$r00 = 1.1$	R00				

Please note the absolute addresses of **R00** up to **Rn-1** will change after REGS *n* whenever *n* is changed. The space below of **R00** will be used for other data (see below).

In indirect addressing, zero in the index register points to **R00** always. Index values exceeding the maximum set by REGS will throw an “out of range” error, unless they fall between 100 and 111 – where the lettered registers live.

The space freed by reducing the number of global registers is generally added to the return stack. It may make room for the statistics registers as well. Both these sectors are tied to the boundary of the global register sector – they will be copied when it moves. This allows to execute REGS in the middle of a subroutine without disrupting the program.

## Summation Registers

The registers needed for cumulative statistics are no longer held in global register space but are allocated separately. This allows to deal with higher internal precision and avoids clobbering their contents manually. The only way to set these registers is with  $\Sigma+$  and  $\Sigma-$ . The sums can be recalled by their respective dedicated commands only, and cannot be accessed by STO or RCL.

The first invocation of  $\Sigma+$  allocates 70 words for the 14 summation registers<sup>31</sup>. They are inserted just below **R00** and above the subroutine return stack, pushing the latter down in memory. Depending on the competing requirements for program and data space, it may be necessary to make room first (see below).

When the number of statistical data points reaches zero, either by  $\Sigma-$ , CL $\Sigma$ , CLALL, or RESET, the space for the summation registers is released again. All pointers are automatically adjusted so this allocation or deallocation will not disrupt a running program. Recall commands like e.g.  $\Sigma n$  will return zero if no data are allocated, other statistical operations will throw an error if not enough data are present.

**ATTENTION:** The summation data will be cleared automatically when a long program is loaded from flash or via the serial interface and after the load the registers would no longer fit in memory. You can avoid this by reducing the amount of numbered registers with the command REGS before the load attempt. This will (hopefully) move the summation data out of the way.

## Subroutine Return Stack and Program Memory

Both share the remaining space at low memory addresses.

The **subroutine return stack** is used for return addresses and local data (registers and flags). Its upper boundary is given by the location of **R00** or the lowest summation register if applicable. There is no command to set the size of this stack – it fills all the space down to the top program step currently stored. When new program steps are entered, the subroutine return stack is reset, not only to make room but because any stored address may become invalid by changing the program.

Local data are stored in a way you cannot overwrite the user's global resources. This feature may enhance the flexibility of programs significantly. LocR *n* allocates *n* local registers and a fixed amount of 16 local flags. Executing LocR, a frame is placed on the return stack containing a marker, a flag word, and the register data. The memory required for it depends on the precision set (see [below](#)). A pointer to this frame in memory is initialized. If the pointer is zero, no local registers exist. The size of the frame in words is encoded in the marker. Newly allocated registers are cleared.

Calling LocR again in the same subroutine will adjust the number of local registers. This requires data copying since these registers are allocated from low to high addresses and the return stack grows in the opposite direction. LocR? will return the number of local registers currently allocated in the routine you are in.

See below for addressing local data, and for an example of recursive programming. You will need a big enough return stack for these local data, however, so you may have to make room first – see next paragraph.

**Program memory** holds the program steps stored. A program step typically is just one word. The multi byte labels and multi character alpha strings take two words each. The total size of program memory is dependent on the number of registers allocated (see next paragraph).

---

<sup>31</sup> Here 2 words are employed for  $\Sigma n$ ,  $4 \times 8$  for  $\Sigma x^2$ ,  $\Sigma y^2$ ,  $\Sigma xy$ , and  $\Sigma x^2y$ , and  $9 \times 4$  for the other sums. If memory allocation for these 70 words fails, an error will be thrown.

## Making Room for Your Needs

The 12 special registers are always present. The return stack has a minimum size of six words or levels. Everything else is user distributable within the 980 words left for sections 2 to 4, so:

$$980 = r + s + p \text{ with}$$

$r$  = number of words allocated for global registers. These are 4 per standard register. There are at least 12 and max. 112 of them. So  $r$  varies between 48 and 896 (this maximum is explained [below](#)). Startup default is 448.

$s$  = words allocated for summation registers (70 if applicable, startup default is 0).

$p$  = number of words available for program steps and return stack. One step is taken by the inevitable final END statement already, 6 words are the minimum size of the return stack. So you will see up to 925 free program steps. Startup default is 532 steps. Subroutine nesting and employing local registers will let the return stack grow and thus reduce the number of program steps available.

If, for instance, you need to do statistics and also use 20 global numbered registers, there will be space for 775 program steps maximum.

You have several options for increasing the free space where you need it:

1. Reduce the number of global numbered registers allocated. One register less allows for four additional program steps typically.
2. Move programs to flash memory and clear the respective steps in RAM. Four cleared steps allow for one additional register typically.
3. Deallocate the summation registers when you do not need them. The space may be distributed to up to 70 additional program steps, up to 17 additional registers, or a mix.

Which solution suites you best depends on the application. You may of course combine different options. Use STATUS to monitor the free space in steps and the amount of global numbered registers allocated.

## Addressing and Accessing Local Data

The first 16 local registers and all local flags may be directly addressed using a dot heading the number – the arguments go from .00 to .15. Up to 144 local registers, however, are possible with the top 128 being only indirectly addressable. Addresses of local data begin with 112 and may go up to 255 if as many registers are allocated (will be hard to find the space necessary). Directly addressable local registers and all local flags extend from 112 to 127 (127 is the greatest argument that can be stored in an op-code, hence the limit in direct addressing). This scheme allows for indirectly addressing

- a global register via a global index register (e.g. STO→00 with  $r00 < 112$ ),
- a global register via a local index register (e.g. STO→.00 with  $r.00 < 112$ ),
- a local register via a global index register (e.g. STO→00 with  $r00 \geq 112$ ), and
- a local register via a local index register (e.g. STO→.00 with  $r.00 \geq 112$ ).

**Subroutine calls:** When XEQ is executed in a program it just pushes the return address on the return stack before it branches to the target. The subroutine called will have access to the caller's local data as long as it does not execute LocR itself. As soon as it does, the pointer to the local data is newly set, and then the subroutine called cannot access the caller's local data anymore.

RTN or PopLR executed in a program check if the current return stack pointer points to a local frame (as explained [above](#)). If true then the pointer is moved above that frame, and the stack is searched from this point upwards for another local frame. If one is found then its pointer is stored, else the pointer to the active local frame is cleared. RTN will branch to the return address found while PopLR will just continue execution. So the – until then – current local frame is dropped and the next higher (older) frame reactivated if existent.

Manually executing RTN, starting a new program with XEQ, or program editing will clear the return stack and remove all local data by clearing the pointer. Thus, all contents of local registers and flags are lost then!

## Recursive Programming

Using local registers allows for creating a subroutine that calls itself recursively. Each invocation deals with its local data only. Of course the RPN stack is global so be careful not to corrupt it.

Here is a recursive implementation of the factorial (not setting LastX correctly):

```
LBL 'FAC'
IP
x>1?
SKIP 02
1
RTN
LocR 001
STO .00
DEC X
XEQ 'FAC'
RCLx .00
RTN
```

## Switching between Real and Integer

Your WP 34S starts in standard real mode (DECM) when you get it new. You may use it for integer computations as well, as shown above many times. Going from DECM to any integer mode, the values on stack will be truncated to integers. Going from integer mode to DECM, the integer stack contents will be converted to decimal. All other memory contents will stay where and as they were!

See the fate of some register contents undergoing subsequent mode switches in the following examples. The registers **J**, **K**, **R00**, and **R01** will be checked by recalling their contents to **X**:

	<b>X</b>	<b>Y</b>	<b>J</b>	<b>K</b>	<b>R00</b>	<b>R01</b>
Contents at start e.g.	1.1	20.2	300.3	4,000.4	50,000.5	600,000.6
Then after WSIZE 32, BASE 10	1 <sup>d</sup>	20 <sup>d</sup>	3,075 <sup>d</sup>	40,964 <sup>d</sup>	512,005 <sup>d</sup>	6,291,462 <sup>d</sup>
Recall the registers by sRCL			300 <sup>d</sup>	4,000 <sup>d</sup>	50,000 <sup>d</sup>	600,000 <sup>d</sup>
567 STO J, -9 STO 00	-9 <sup>d</sup>	567 <sup>d</sup>	567 <sup>d</sup>	4,000 <sup>d</sup>	-9 <sup>d</sup>	600,000 <sup>d</sup>
DECM	-9.0	567.0	5.7 E-396	4,000.4	3.0 E-389	600,000.6
Recall the registers by iRCL			567.0	40,964.0	-9.0	6,291,462.0

## APPENDIX C: MESSAGES AND ERROR CODES

There are some commands generating messages, also in the dot matrix section of the display. Four of them, DAY, DAYS+, STATUS, and VERS, were introduced above in the [paragraph about display](#) already. Others are PROMPT, dVIEW and many more alpha commands, and the test commands as mentioned [above](#).

Also two constants will return a special message when called:



Furthermore, there are a number of error messages. Depending on error conditions, the following messages will be displayed in the mode(s) listed:

Message	Error Code	Mode(s)	Explanation and Examples
<b>Bad time or date</b>	2	DECM	Invalid date format or incorrect date or time in input, e.g. month >12, day >31 etc.
<b>Bad digit Error</b>	9	Integer	Invalid digit in integer input, e.g. 2 in binary, 9 in octal, or +/- in unsigned mode.
<b>Bad mode Error</b>	13	All	Caused by calling an operation in a mode where it is not defined, e.g. SIN in hexadecimal.
<b>Domain Error</b>	1	-a	An argument exceeds the domain of the mathematical function called. May be caused by roots or logs of negative numbers (if not preceded by <b>[CPX]</b> ), by 0/0, LN(0), Γ(0), TAN(90°) and equivalents, ATANH(x) for $ Re(x)  \geq 1$ , ACOSH(x) for $Re(x) < 1$ , etc.
<b>Illegal OPERAt ion</b>	7	All	Self-explanatory.
<b>Invalid data</b>	18	All	Set when there is a checksum error either in flash or as part of a serial download. It is also set if a flash segment is otherwise unusable.

Message	Error Code	Mode(s)	Explanation and Examples
<b>Invalid Parameter</b> <small>BEG 360 RPM</small>	16	¬a	Similar to error 1 but a parameter specified in <b>J</b> or <b>K</b> is out of supported range for the function called. May appear e.g. if LgNrm is called with $j < 0$ .
<b>I/O Error</b> <small>BEG 360 RPM</small>	17	¬a	Please see <a href="#">Appendix A</a> .
<b>Matrix Pn! SMATCH</b> <small>BEG 360 RPM</small>	21	DECM	<ul style="list-style-type: none"> <li>A matrix isn't square when it should be.</li> <li>Matrix sizes aren't miscible.</li> </ul>
<b>No such LABEL</b> <small>360 RPM</small>	6	All	Attempt to address an undefined label.
<b>No write In FLASH</b> <small>BEG 360</small>	19	All	Attempt to delete program lines while inside a flash segment..
<b>Out of range Error</b> <small>360 RPM</small>	8	All	<ul style="list-style-type: none"> <li>A number exceeds the valid range. Caused e.g. by specifying decimals &gt;11, word size &gt;64, negative flag numbers, integers <math>\geq 2^{64}</math>, hours or degrees &gt;9000, invalid times, denominators <math>\geq 9999</math> etc.</li> <li>A register address exceeds the valid range. May also happen in indirect addressing or calling nonexistent locals.</li> <li>An R-operation (e.g. R.COPY) attempts exceeding valid register numbers (0 .. 99).</li> <li>A matrix <i>descriptor</i> would go beyond the registers available or a row or column index is too large.</li> </ul>
<b>RTN Stack Full</b> <small>BEG 360</small>	11	PRG	No more space in return stack (see <a href="#">above</a> ).
<b>Singular Error</b> <small>BEG 360 RPM</small>	22	DECM	<ul style="list-style-type: none"> <li>Attempt to use a LU decomposed matrix for solving a system of equations.</li> <li>Attempt to invert a matrix when it isn't of full rank.</li> </ul>
<b>Solve FAILED</b> <small>BEG 360</small>	20	DECM	The solver did not converge.

Message	Error Code	Mode(s)	Explanation and Examples
<b>Stack CLASH</b> <small>360 RPM</small>	12	All	STOS or RCLS attempt using registers that would overlap the stack. Will happen with e.g. SSIZE = 8 and STOS 94.
<b>Too few data Points</b> <small>360 RPM</small>	15	DECM	A statistical calculation was started based on too few data points, e.g. regression or standard deviation for < 2 points.
<b>Too long Error</b> <small>360 RPM</small>	10	All	Keyboard input is too long for the buffer (should never happen, but who knows).
<b>undefined OP-CODE</b> <small>STO 360 RPM</small>	3	All	An instruction with an undefined op-code occurred (should never happen, but who knows).
<b>Word size too SMALL</b> <small>RPN</small>	14	Integer, ¬PRG	Stack or register content is too big for the word size set.
<b>+∞ Error</b> <small>360 RPM</small>	4	¬a, ¬PRG	<ul style="list-style-type: none"> <li>Division of a number <math>&gt; 0</math> (or <math>&lt; 0</math>) by zero.</li> <li>Divergent sum or product or integral.</li> <li>Positive (or negative) overflow in DECM (see <a href="#">above</a>).</li> </ul>
<b>-∞ Error</b> <small>360 RPM</small>	5	¬a, ¬PRG	

Error messages are temporary.  will erase the message. Any other key pressed will erase it as well and execute with the stack contents present. Thus, an easy and safe return to the display shown before the error occurred is pressing an arbitrary prefix twice.

## APPENDIX D: INTERNAL COMMANDS

The following operations are for advanced users. They ease some internal jobs, mainly in programming, but require special care and/or a deeper understanding of the respective ‘mechanics’ of the WP 34S. They are collected in the internal catalog (**Cpx** **h MODE**) but are not documented above to avoid overloading. The table below follows the rules applying in the index of operations above.

Name	Keys to press	in modes	Remarks
BSRB	... BSRB <i>n</i>	PRG	BSRB (BSRF) calls a labelless subroutine starting <i>n</i> program steps backwards (forwards) with $0 \leq n \leq 255$ . It pushes the program counter on the return stack and executes BACK <i>n</i> (SKIP <i>n</i> ) then.
BSRF	... BSRF <i>n</i>	PRG	These two commands are most useful if you are short on local labels but carries the same risks as BACK and SKIP when editing programs.
CNVG?	... CNVG? <i>c</i>	Integer	Tests for $x = y$ .
		DECIM	Checks for convergence by comparing <i>x</i> and <i>y</i> as determined by the lowest five bits of <i>c</i> . The very lowest two bits set the tolerance limit: 0 = 1E-14, 1 = 1E-24, 2 = 1E-32, 3 = Choose the best for the modes set, resulting in taking 0 for single precision and 2 for double precision. The next two bits determine the comparison mode: 0 = compare the real numbers <i>x</i> and <i>y</i> relatively, 1 = compare them absolutely, 2 = check the absolute difference between the complex values $x + iy$ and $z + it$ , 3 = works as 0 so far. The top bit tells how special numbers are handled: 0 = NaN and infinities are considered converged, 1 = they are not considered converged.
DBLOFF	...	$\neg\alpha$	Toggles double precision mode. Setting becomes effective in DECM only. See <a href="#">below</a> .
DBLON	...	$\neg\alpha$	
DBL?	...	$\neg\alpha$	Checks if double precision mode is turned on.
dRCL	... dRCL <i>nn</i>	$\neg\alpha$	Assumes <b>Rnn</b> contains double precision real data and recalls them as such. See <a href="#">below</a> .

## Switching between Single Precision, Double Precision and Integer

Your WP 34S starts in standard (i.e. single precision) real mode per default. Switching between single precision and integer modes was discussed [above](#) already. You may also use your WP 34S in double precision mode for (hopefully) more precise decimal calculations.

Each double precision register will contain 16 bytes instead of eight, allowing for 34 digits instead of 16. **SHOW** (and ) display the 16 most significant digits only in this mode, while shows the 18 trailing digits.

Going from single to double precision, the contents of the twelve special registers are copied, cutting 48 bytes into the former s. p. numbered register sector. All other memory contents stay where and as they were – just each relative d. p. register address covers what were two s. p. registers before. E.g. starting with the default memory configuration and executing DBLON then will leave you with 44 d. p. registers. Executing REGS with an argument >44 in d. p. mode is legal, but the numbered register sector will cut into the former program sector then.

Returning to s. p., all lettered registers are copied again. And everything else stays where and as it was, if you did use ≤44 d. p. registers – just each relative s. p. register address points to only one half of a former d. p. register; and the space released by the shrinking special registers allows adding (or returning) twelve numbered registers on top, each containing zero now. With more than 44 d. p. registers, the correspondence becomes more complicated - the number of global registers will not, however, exceed 112.

For the following table, assume startup in s. p. mode with REGS 16. Now see what will happen to the contents of **J**, **K**, and the lowest numbered registers. They will be checked by recalling their contents to **X**:

	<b>J</b>	<b>K</b>	<b>R00</b>	<b>R01</b>	<b>R02</b>	<b>R03</b>
Starts with e.g.	34.32	0.00	0.54	6.6	0.00	-1234.89
WSIZE 32, BASE 10, 14 STO K, 543 STO 00	3,504 d	14 d	54 d	66 d	543 d	126,441 d
DECM	34.32	1.40 E-397	0.54	6.6	5.43 E-396	-1234.89
DBLON	34.32	1.40 E-397	1.03 E 182	-1.95 E 184	n/a	n/a
Recall by sRCL	34.32	1.40 E-397	0.54	6.6	5.43 E-396	-1234.89
... and by iRCL	3,504.00	14.00	54.00	66.00	543.00	126,441.00
DBLOFF	34.32	1.40 E-397	0.54	6.6	5.43 E-396	-1234.89
Recall by dRCL	Out of range	Out of range	1.03 E 182	-1.95 E 184	n/a	n/a
DBLON	34.32	1.40 E-397	1.03 E 182	-1.95 E 184	n/a	n/a
RCL J, STO J, RCL K, STO K, then recall by sRCL	1.40 E-397	1.28 E-23	0.54	6.6	5.43 E-396	-1234.89
... and by iRCL	14.00	0.00	54.00	66.00	543.00	126,441.00
DBLOFF	34.32	1.40 E-397	0.54	6.6	5.43 E-396	-1234.89

## **APPENDIX E: LIBRARY ROUTINES**

TVM lives in the library file `wp34s-1.dat`, located in the library directory. Here is how to install this routine in the emulator and on the calculator.

1. Copy `wp34s-1.dat` into the emulator directory.
2. Start the emulator and the calculator with the serial cable still connected. Make sure a file `wp34s.ini` exists in the emulator directory naming the COM port in use.
3. Make sure you have a backup of your programs on the calculator and on the emulator.
4. Use PRCL 1 on the emulator to copy the library into user program RAM.
5. Use RECV on the calculator and SENDP on the emulator. This will transfer the program memory of the emulator to the calculator.
6. On the calculator, use PSTO to save the library.
7. Restore your backups.

Alternatively use SAM-BA to transfer the image directly to a RAM region as described elsewhere.

## APPENDIX F: RELEASE NOTES

	Date	Release notes
1	9.12.08	Start
1.1	15.12.08	Added the table of indicators; added NAND, NOR, XNOR, RCLWS, STOWS, //, N, SERR, SIGMA, < and >; deleted HR, INPUT, 2 flag commands, and 2 conversions; extended explanations for addressing and COMPLEX & ...; put XOR on the keyboard; corrected errors.
1.2	4.1.09	Added ASRN, CBC?, CBS?, CCB, SCB, FLOAT, MIRROR, SLN, SRN, >BIN, >DEC, >HEX, >OCT, BETA, D>R, DATE, D DAYS, D.MY, M.DY, Y.MD, CEIL, FLOOR, DSZ, ISZ, D>R, R>D, EMGAM, GSB, LNBETA, LNGAMMA, MAX, MIN, NOP, REAL, RJ, W and WINV, ZETA, %+ and %-; renamed the top left keys B, C, and D, and bottom left EXIT.
1.3	17.1.09	Added AIP, ALENG, ARCL, AROT, ASHF, ASTO, ATOX, XTOA, AVIEW, CLA, PROMPT (all taken from 42S), CAPP, FC?C, FS?C, SGMNT, and the ...# commands; renamed NBITS to BITS and STOWS to WSIZE; specified the bit commands closer; deleted the 4 carry bit operations.
1.4	10.2.09	Added CONST and a table of constants provided, D>J and J>D, LEAP?, %T, RCL and STO ▲ and ▼, and 2 forgotten statistics registers; deleted CHS, EMGAM, GSB, REAL and ZETA; purged and renamed the bit operations; renamed many commands.
1.5	5.3.09	Added RNDINT, CONV and its table, a memory table, the description of XEQ B, C, D to the operation index, and $\alpha g_e$ to the table of constants; put CLSTK on a key, moved CLΣ and FILL, changed the % and log labels on the keyboard, put CLALL in X.FCN; checked and cleaned alpha mode keyboard and added a temporary alpha keyboard; rearranged the alphabet to put Greek after Latin, symbols after Greek consistently; separated the input and non-programmable commands; cleaned the addressing tables.
1.6	12.8.09	Added BASE, DAYS+, DROP, DROPY, E3OFF, E3ON, FC?F, FC?S, FIB, FS?F, FS?S, GCD, LCM, SETDAT, SETTIM, SET24, SINC, TIME, VERS, αDAY, αMONTH, αRC#, %Σ, as well as F-, t-, and $\chi^2$ -distributions and their inverses; reassigned DATE, modified DENMAX, FLOAT, αROT, and αSHIFT; deleted BASE arithmetic, BIN, DEC, HEX, and OCT; updated the alpha keyboards; added flags in the memory table; included indirect addressing for comparisons; added a paragraph about the display; updated the table of indicators; corrected errors.
1.7	9.9.09	Added P.FCN and STAT catalogs, 4 more conversions, 3 more flags, Greek character access, CLFLAG, DECOMP, DENANY, DENFAC, DENFIX, Iβ, IΓ, αDATE, αRL, αRR, αSL, αSR, αTIME, 12h, 24h, fraction mode limits, normal distribution and its inverse for arbitrary $\mu$ and $\sigma$ , and Boolean operations working within FLOAT; deleted αROT, αSHIFT, the timer, and forced radians after inverse hyperbolics; renamed WINV to W⁻¹, and beta and gamma commands to Greek; added tables of catalog contents; modified label addressing; relabeled PRGM to P/R and PAUSE to PSE; swapped SHOW and PSE as well as Δ% and % on the keyboard; relabeled Q; corrected CEIL and FLOOR; updated X.FCN and alpha commands; updated the virtual alpha keyboard.
1.8	29.10.09	Added R-CLR, R-COPY, R-SORT, R-SWAP, RCLM, STOM, alpha catalogs, 1 more constant and some more conversions, a table of error messages, as well as the binomial, Poisson, geometric, Weibull and exponential distributions and their inverses; renamed some commands; put √ instead of π on hotkey D.
1.9	14.12.09	Added two complex comparisons; swapped and changed labels in the top three rows of keys, dropped CLST; completed function descriptions in the index.
1.10	19.1.10	Added IMPFRC, PROFRC, ⓂENTER, αBEG, αEND, and an addressing table for items in catalogs; updated temporary alpha mode, display and indicators, RCLM and STOM, alpha-commands and the message table; renamed the exponential distribution; wrote the introduction.
1.11	21.9.10	Changed keyboard layout to bring Π and Σ to the front, relabeled binary log, swapped the locations of π, CLPR, and STATUS, as well as SF and FS?; created a menu TEST for the comparisons removed and the other programmable tests from P.FCN; added %MG, %+MG, %MRR, RESET, SSIZE4, SSIZE8, SSIZE?, ⓂDROP, ⓂFILL, ⓂR↓, ⓂR↑, registers J and K, a table of contents and tables for stack mechanics and addressing in complex operations; updated memory and real number addressing tables, DECOMP, αOFF, αON, Π, and Σ; renamed ROUND1, WSIZE?, β(x,y), Γ(x) and the constant p₀; deleted DROPY (use x↔y, DROP instead), αAPP, αBEG, αEND, and the “too long error” message; deleted Josephson and von Klitzing constants (they are just the inverses of other constants included in CONST already); brought more symbols on the alpha keyboard.
1.12	22.12.10	Modified keyboard layout; added catalogs MODE and PROB; changed mode word, catalog contents and handling (XEQ instead of ENTER), as well as some non-programmable info commands; expanded IMPFRC and PROFRC; added a paragraph about the fonts provided and explained alpha catalogs in detail; added PRIME? and some conversions; deleted FRACT, OFF and ON.
1.13	3.2.11	Modified keyboard layout; modified αTIME, radix setting, H.MS+ and H.MS-; added EVEN?, FP?, INT?, LZOFF, LZON, ODD?, RCLS, STOS, returned FRACT; added and renamed some conversions; updated the paragraph about display; added appendices A and B; baptized the device WP 34S.

1.14	18.3.11	Started the Windows emulator. Added DEC and INC, renamed FLOAT to DECM; redefined $\alpha$ TIME and H.MS mode; updated appendix A; documented the annunciators BEG and = as well as underflows and overflows in H.MS; corrected some errors showing up with the emulator.
1.15	21.3.11	Modified FIX, removed ALL from MODE, updated CONV.
1.16	27.3.11	Added LBL?, f'(x), and f''(x); modified PSE; upgraded catalog searching.
1.17	9.5.11	Modified keyboard layout for adding a fourth hotkey; added AGM, BATT, B <sub>n</sub> , B <sub>n</sub> *, Cauch, Lgnrm, Logis and their inverses, all the pdf, COV, CUBE, CUBERT, DEG $\rightarrow$ , ENGOVR, ENTRY?, erfc, GRAD $\rightarrow$ , GTO . hotkey, KEY?, RAD $\rightarrow$ , SCIOVR, SERRw, SLVQ, sw, sxy, TICKS, TVM, xg, $\varepsilon$ , $\varepsilon_m$ , $\varepsilon_p$ , $\zeta$ , $\sigma_w$ , (-1) $^X$ , the polynomials, four angular conversions, four Planck constants, the regional settings, global alpha labels, and three messages; renamed most cdf; changed $\rightarrow$ DEG, $\rightarrow$ RAD, $\rightarrow$ GRAD to leaving angular mode as set; altered PSE for early termination by keystroke; made D.MY default instead of Y.MD; moved degrees to radians conversions to CONV; removed $^C$ CLx, H.MS mode, %+ and %-; corrected errors.
1.18	5.6.11	Expanded program memory; modified label addressing ( $A \neq 'A'$ ) and fraction mode limits, changed ANGLE to work in real and complex domains, renamed MOD to RMDR, changed the keyboard layout; put BACK, ERR, SKIP, and SPEC? to the main index; added CAT and the I/O commands for flash memory, expanded R-COPY; corrected x $\rightarrow$ a.
2.0	21.7.11	Entered beta test phase. Added DAY, MONTH, YEAR, FAST, SLOW, S.L, S.R, VW $\alpha$ +, flag A, ON + and -, some constants, and a paragraph about I/O; renamed old DAY to WDAY, RRCL to RCFRG, SRCL to RCFST; added an inverse conversion shortcut, stones $\leftrightarrow$ kg, and changed Pa $\leftrightarrow$ mbar to Pa $\leftrightarrow$ bar; modified the VIEW commands, ALL, DISP, MODE, RCLM, STOM, and X.FCN; repaired hyperlinks; corrected some errors; included flash.txt; updated the first chapters, explained stack mechanics in more detail.
2.1	3.10.11	Added serial I/O commands, DEL <sub>P</sub> , DSL, EXPT, IBASE?, INTM?, ISE, KTY?, MANT, NEXTP, PUTK, REALM?, RM, RM?, SMODE?, TOP?, $\sqrt[3]{y}$ , signed tests for zero, some constants, and the paragraph about interactive programming; updated the values in CONST to CODATA 2010, also updated SLVQ, SHOW, $\Sigma$ , $\Pi$ , and the paragraphs about statistics, predefined alpha labels and memory; corrected some errors; deleted complex ANGLE, $\rightarrow$ BIN, $\rightarrow$ DEC, $\rightarrow$ HEX, and $\rightarrow$ OCT; redistributed the contents of X.FCN and P.FCN; renamed S.L and S.R to SDL and SDR; put '?' on the alpha keyboard and moved £ to P to make room for $\pi$ ; expanded Appendix A; reorganized the structure of the document; added first aid to the front page; rewrote the keyboard chapter.
2.2	1.11.11	Added MSG, y $\leftrightarrow$ , z $\leftrightarrow$ , and matrix operations, a paragraph about them and two new error messages for them, plus a footnote for DEL <sub>P</sub> ; updated the introduction to statistics. With build 1990, this version is available as the last one working with the old overlays.
3.0	13.2.12	Added CLPALL, iRCL, sRCL, END, FLASH?, GTO. $\blacktriangle$ and $\blacktriangledown$ , LOAD..., LocR, LocR?, MEM?, NEIGHB, PopLR, REGS, REGS?, RSD, SEPOFF, SEPON, SETJPN, t $\leftarrow$ , ULP, $\leftarrow$ , #, as well as SUMS and MATRIX catalogs; renamed KTY? to KTP?, CUBE to $x^3$ and CUBERT to $\sqrt[3]{x}$ ; split Lambert's W into W <sub>p</sub> and W <sub>m</sub> ; returned $\rightarrow$ BIN, $\rightarrow$ HEX, and $\rightarrow$ OCT; deleted DEL <sub>P</sub> , removed LN $\beta$ , LN $\Gamma$ , $\beta$ , and $\Gamma$ from STAT; changed keyboard layout to bring MATRIX, CLP, SF, and CF to the front and to swap OFF and SHOW, removed x $\leftrightarrow$ $\alpha$ from the key plate; modified the virtual alpha keyboard, some characters and respective catalogs; redistributed commands in the catalogs; updated and rearranged the chapters about memory, display, programming, and messages; added some caveats and remarks as well as sections about local registers and memory management, rewrote the section about internal commands.