

MICROSAR CRC

Technical Reference

Version 4.00.00

Authors Claudia Mausz

Status Released



1 Document Information

©2008, Vector Informatik GmbH Version: 4.00.00 2 / 24



Contents

| 1 | Document Information2 | | | |
|---|-----------------------|--|----|--|
| | 1.1 | History | 2 | |
| | 1.2 | Reference Documents | 2 | |
| | 1.1 | Scope of the Document | 2 | |
| 2 | Compo | nent History | 6 | |
| 3 | Introdu | ction | 7 | |
| | 3.1 | Architecture Overview | 8 | |
| 4 | Functio | nal Description | 9 | |
| | 4.1 | Features | 9 | |
| | 4.2 | Initialization | g | |
| | 4.3 | States | g | |
| | 4.4 | Main Functions | 9 | |
| | 4.5 | Error Handling | 10 | |
| | 4.5.1 | Development Error Reporting | 10 | |
| | 4.5.1.1 | Parameter Checking | 10 | |
| | 4.5.2 | Production Code Error Reporting | 10 | |
| | 4.5.2.1 | Parameter Checking | 10 | |
| 5 | Integrat | tion | 11 | |
| | 5.1 | Scope of Delivery | 11 | |
| | 5.1.1 | Static Files | 11 | |
| | 5.1.2 | Dynamic Files | 11 | |
| | 5.2 | Include Structure | 11 | |
| | 5.3 | Compiler Abstraction and Memory Mapping | 12 | |
| 6 | API Des | scription | 13 | |
| | 6.1 | Type Definitions | 13 | |
| | 6.2 | Interrupt Service Routines provided by CRC | 13 | |
| | 6.3 | Services provided by CRC | 13 | |
| | 6.3.1 | Crc_CalculateCRC8 | 14 | |
| | 6.3.2 | Crc_CalculateCRC16 | 15 | |
| | 6.3.3 | Crc_CalculateCRC32 | 16 | |
| | 6.3.4 | Crc_GetVersionInfo | 17 | |
| | 6.4 | Services used by CRC | 17 | |
| | 6.5 | Callback Functions | 17 | |

Technical Reference MICROSAR CRC



| | 6.6 | Configurable Interfaces | 17 |
|----|---------|--------------------------------|----|
| | 6.6.1 | Notifications | 17 |
| | 6.6.2 | Callout Functions | 17 |
| | 6.7 | Service Ports | 17 |
| 7 | Configu | ıration | 19 |
| | 7.1 | Configuration with EAD | 19 |
| | 7.1.1 | Start configuration of the CRC | 19 |
| | 7.1.2 | CRC configuration tab | 19 |
| | 7.1.2.1 | General Settings | 19 |
| | 7.1.2.2 | Module API | 20 |
| 8 | AUTOS | AR Standard Compliance | 22 |
| | 8.1 | Deviations | 22 |
| | 8.2 | Additions/ Extensions | 22 |
| | 8.3 | Limitations | 22 |
| 9 | Glossar | ry and Abbreviations | 23 |
| | 9.1 | Glossary | 23 |
| | 9.2 | Abbreviations | |
| 10 | Contact | | 24 |

Technical Reference MICROSAR CRC



Illustrations

| Figure 3-1 | AUTOSAR architecture | |
|------------|---|----|
| Figure 5-1 | Include structure | |
| Figure 7-1 | EAD Configuration – General Settings | 19 |
| Figure 7-2 | EAD Configuration – Module API | 20 |
| Tables | | |
| Table 1-1 | History of the document | 2 |
| Table 1-2 | Reference documents | 2 |
| Table 2-1 | Component history | 6 |
| Table 4-1 | Supported SWS features | g |
| Table 4-2 | Not supported SWS features | 9 |
| Table 5-1 | Static files | |
| Table 5-2 | Generated files | 11 |
| Table 5-3 | Compiler abstraction and memory mapping | 12 |
| Table 6-1 | Type definitions | |
| Table 6-2 | Std_VersionInfoType | 13 |
| Table 6-3 | Crc_CalculateCRC8 | 14 |
| Table 6-4 | Crc_CalculateCRC16 | 15 |
| Table 6-5 | Crc_CalculateCRC32 | 16 |
| Table 6-6 | Crc_GetVersionInfo | 17 |
| Table 7-1 | EAD Configuration – General Settings | 20 |
| Table 7-2 | EAD Configuration – Module API | |
| Table 9-1 | Glossary | |
| Table 9-2 | Abbreviations | 00 |



2 Component History

The component history gives an overview over the important milestones, that are supported in the different versions of the component.

| Component Version | New Features |
|--------------------------|-------------------------------|
| 04.00.00 | Update to AUTOSAR Version 3.0 |
| | Add Crc8 calculation |

Table 2-1 Component history



3 Introduction

This document describes the functionality, API and configuration of the AUTOSAR BSW module CRC as specified in [1].

| Supported AUTOSAR Release: | 3.0 | | |
|-----------------------------------|---------------|--|--|
| Supported Configuration Variants: | pre-compile | | |
| | | | |
| Vendor ID: | CRC_VENDOR_ID | 30 decimal (= Vector-Informatik, according to HIS) | |
| Module ID: | CRC_MODULE_ID | 201 decimal (according to ref. [2]) | |

This component implements service functions in ANSI C for calculating CRC checksums. The module allows pre-compile configuration of the calculation method, which is used to compute the CRC values. The three possible methods are table based or runtime calculation of CRC values.

There are three different CRC calculation services available:

- Checksum calculation of 8bit CRC value from a buffer,
- Checksum calculation of 16bit CRC value from a buffer.
- Checksum calculation of 32bit CRC value from a buffer.



3.1 Architecture Overview

The following figure shows where the CRC is located in the AUTOSAR architecture.

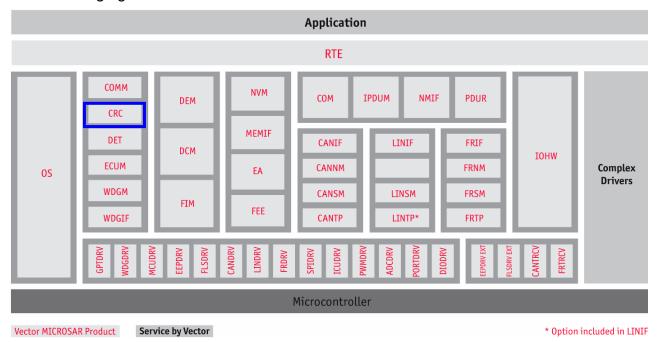


Figure 3-1 AUTOSAR architecture

No interface from other module is required. The CRC component is a service module. It can be called from any module or application (e.g. NVRAM Manager).



4 Functional Description

4.1 Features

The features listed in this chapter cover the complete functionality specified in [1].

The "supported" and "not supported" features are presented in the following two tables. For further information of not supported features also see chapter 8.

The following features described in [1] are supported:

Supported Feature

Crc8 calculation based on the SAE-J1850 CRC8 Standard

Crc16 calculation based on the CCITT Standard

Crc32 calculation based on the IEEE-802.3 Ethernet Standard

For all CRC calculations following methods can be used:

- Table based calculation: results in fast execution, but increases code size (ROM table)
- Runtime calculation: results in smaller code size, but slower execution time

All routines are re-entrant and can be used by multiple applications at the same time.

Table 4-1 Supported SWS features

The following features described in [1] are not supported:

Not Supported Feature

None

Table 4-2 Not supported SWS features

4.2 Initialization

No initialization is necessary.

4.3 States

This component contains no state machine.

4.4 Main Functions

This component has no main function. It contains only the routines to calculate the checksums. These API functions are called from the NVRAM Manager.



4.5 Error Handling

4.5.1 Development Error Reporting

Module CRC does not provide any development error detection mechanism.



Info

CRC recalculation and comparison with original CRC values must be done by the user itself (e.g. NVRAM Manager).

4.5.1.1 Parameter Checking

Module CRC's functions do not perform any checks.

4.5.2 Production Code Error Reporting

Module CRC does not provide any production error detection mechanism.

4.5.2.1 Parameter Checking

Module CRC's functions do not perform any checks.



5 Integration

This chapter gives necessary information for the integration of the MICROSAR CRC into an application environment of an ECU.

5.1 Scope of Delivery

The delivery of the CRC contains the files which are described in the chapters 5.1.1 and 5.1.2:

5.1.1 Static Files

| File Name | Description |
|-----------|-------------------------------------|
| Crc.c | Implementation of the CRC routines. |
| Crc.h | Header files of the CRC routines. |

Table 5-1 Static files

5.1.2 Dynamic Files

The dynamic files are generated by the configuration tool EAD.

| File Name | Description |
|-----------|--|
| Crc_Cfg.h | Configuration of the calculation method. |

Table 5-2 Generated files

5.2 Include Structure

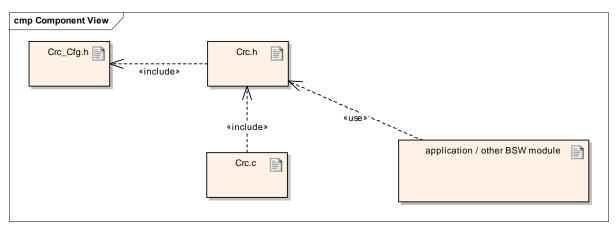


Figure 5-1 Include structure



5.3 Compiler Abstraction and Memory Mapping

The objects (e.g. variables, functions, constants) are declared by compiler independent definitions – the compiler abstraction definitions. Each compiler abstraction definition is assigned to a memory section.

The following table contains the memory section names and the compiler abstraction definitions, defined for the CRC and illustrates their assignment among each other.

| Compiler Abstraction Definitions | | CONST | |
|----------------------------------|------|------------------|-----------|
| Memory Mapping | CODE | CRC_PUBLIC_CONST | CRC_CONST |
| Sections | CRC_ | CRC_ | CRC |
| CRC_START_SEC_CONST_UNSPECIFIED | | | |
| CRC_START_SEC_CONST_8BIT | | | |
| CRC_START_SEC_CONST_16BIT | | | |
| CRC_START_SEC_CONST_32BIT | | | |
| CRC_START_SEC_CODE | | | |

Table 5-3 Compiler abstraction and memory mapping



6 API Description

6.1 Type Definitions

The types defined by the CRC are described in this chapter.

| Type Name | C-Type | Description | Value Range |
|-----------------|--------|--|---------------|
| Crc_DataRefType | uint8 | Pointer type for pointers to data buffers, from which the CRC value is to be calculated. | 0-254 (uint8) |

Table 6-1 Type definitions

Std_VersionInfoType

| Struct Element Name | C-Type | Description | Value Range | |
|---------------------|--------------|---------------------|------------------------|------------------------|
| Std_VersionInfoType | struct | Returns the version | uint16 vendorID | |
| Cta_vereienmerype | information. | | uint8 moduleID | |
| | | | uint8 instanceID | |
| | | | | uint8 sw major version |
| | | | | |
| | | | uint8 sw patch version | |

Table 6-2 Std_VersionInfoType

6.2 Interrupt Service Routines provided by CRC

The CRC component has no interrupt service routine.

6.3 Services provided by CRC

The CRC API consists of services, which are realized by function calls.



6.3.1 Crc_CalculateCRC8

| Prototype | | | | |
|--|--|--|--|--|
| <pre>uint8 Crc_CalculateCRC8(const uint8* Crc_DataPtr, uint32 Crc_Length, uint8 Crc_StartValue8)</pre> | | | | |
| Parameter | | | | |
| Crc_DataPtr Pointer to start address of data block to be calculated. | | | | |
| Crc_Length Length of data block to be calculated in bytes. | | | | |
| Crc_StartValue8 Initial value when the algorithm starts. | | | | |
| Return code | | | | |
| uint8 8 bit result of CRC calculation. | | | | |
| Functional Description | | | | |

The function Crc_CalculateCRC8 (service id: 1) performs a CRC8 calculation on Crc_Length data bytes, pointed to by Crc_DataPtr, with the starting value of Crc_StartValue8. The CRC8 routine is based on the SAE-J1850 CRC8 Standard:

SAE-J1850 CRC8 Standard



6.3.2 Crc_CalculateCRC16

Prototype

uint16 Crc_CalculateCRC16(const uint8* Crc_DataPtr, uint32 Crc_Length, uint16
Crc StartValue16)

| | , | | |
|------------------|--|--|--|
| Parameter | | | |
| Crc_DataPtr | Pointer to start address of data block to be calculated. | | |
| Crc_Length | Length of data block to be calculated in bytes. | | |
| Crc_StartValue16 | Initial value when the algorithm starts. | | |
| Return code | | | |
| uint16 | 16 bit result of CRC calculation | | |

Functional Description

The function Crc_CalculateCRC16 (service id: 2) performs a CRC16 calculation on Crc_Length data bytes, pointed to by Crc_DataPtr, with the starting value of Crc_StartValue16. The CRC16 routine is based on the CCITT CRC16 Standard:

| SAE-J1850 CRC8 Standard | value |
|-------------------------|--------|
| CRC result width: | 16bits |
| Polynomial: | 1021h |
| Initial value: | FFFFh |
| Input data reflected: | No |
| Result data reflected: | No |
| XOR value: | 0000h |
| Check: | 29B1h |

Particularities and Limitations

■ If large data blocks have to be calculated (>32 bytes), the table based calculation method should be configured in order to decrease the calculation time.

Expected Caller Context

Application, any module.

Table 6-4 Crc_CalculateCRC16



6.3.3 Crc_CalculateCRC32

Prototype

uint32 Crc_CalculateCRC32(const uint8* Crc_DataPtr, uint32 Crc_Length, uint32 Crc StartValue32)

| Parameter | |
|------------------|--|
| Crc_DataPtr | Pointer to start address of data block to be calculated. |
| Crc_Length | Length of data block to be calculated in bytes. |
| Crc_StartValue32 | Initial value when the algorithm starts. |
| Return code | |
| uint32 | 32 bit result of CRC calculation. |

Functional Description

The function Crc_CalculateCRC32 (service id: 3) performs a CRC32 calculation on Crc_Length data bytes, pointed to by Crc_DataPtr, with the starting value of Crc_StartValue32. The CRC32 routine is based on the IEEE-802.3 CRC32 Ethernet Standard:

| SAE-J1850 CRC8 Standard | value |
|-------------------------|-----------|
| CRC result width: | 32bits |
| Polynomial: | 04C11DB7h |
| Initial value: | FFFFFFFh |
| Input data reflected: | Yes |
| Result data reflected: | Yes |
| XOR value: | FFFFFFFh |
| Check: | CBF43926h |

Particularities and Limitations

■ If large data blocks have to be calculated (>32 bytes), the table based calculation method should be configured in order to decrease the calculation time.

Expected Caller Context

Application, any module.

Table 6-5 Crc_CalculateCRC32



6.3.4 Crc_GetVersionInfo

| Prototype | | |
|---|---|--|
| <pre>void Crc_GetVersionInfo(Std_VersionInfoType *versioninfo)</pre> | | |
| Parameter | | |
| versioninfo | Pointer to where to store the version information of this module. | |
| Return code | | |
| none | | |
| Functional Description | | |
| This service returns the version information of the module. The version information includes: | | |
| Module Id | | |
| Vendor Id | | |

Vendor specific version numbers.Instanceld

This function is pre compile time configurable On/Off by the configuration parameter: ${\tt CRC\ VERSION\ INFO\ API.}$

Particularities and Limitations

None

Expected Caller Context

Application.

Table 6-6 Crc_GetVersionInfo

6.4 Services used by CRC

The CRC component does not use services from other modules. Module CRC does not provide any error detection mechanism

6.5 Callback Functions

Module CRC's functions do not provide any call-back functions.

6.6 Configurable Interfaces

6.6.1 Notifications

The CRC module does not provide notifications for upper layers. The CRC routines return the checksum; this value will be evaluated by application or other modules.

6.6.2 Callout Functions

Further on the CRC module supports no callout function.

6.7 Service Ports

Service Ports are not available and necessary by this module.

Technical Reference MICROSAR CRC



©2008, Vector Informatik GmbH Version: 4.00.00 18 / 24



7 Configuration

In the CRC the attributes can be configured with the following methods:

Configuration in EAD for a detailed description see 7.1

7.1 Configuration with EAD

The CRC is configured with the help of the configuration tool EAD.



Info

In case of object delivery modifications are without effect, if a parameter is specified as a pre-compile value. Different object code is needed for different settings. Other object files can be obtained at Vector Informatik.

7.1.1 Start configuration of the CRC

The component name of the Cyclic Redundancy Check in EAD is "Crc". In the "Architecture view" (initial page) of the EAD, the CRC can be opened by its context menu to start its configuration. Optionally, the CRC can be opened for configuration with the component list under the "System" tab located at the left side of the EAD.

7.1.2 CRC configuration tab

7.1.2.1 General Settings

This tab describes the three different CRC routines and the available methods, which can be used for the checksum.

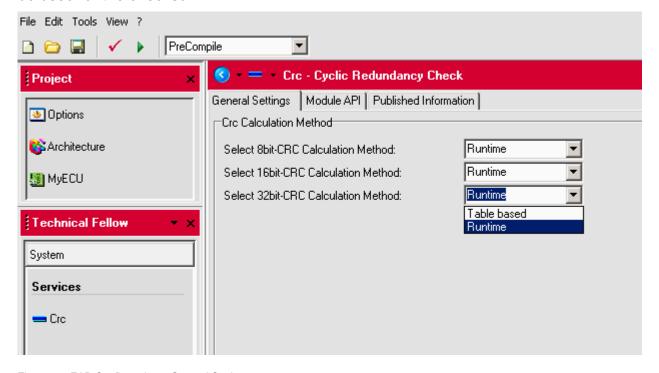


Figure 7-1 EAD Configuration – General Settings



| Attribute Name | Configuration Variant | Value Type | Values The default value is written in bold | Description |
|---|--------------------------|---------------|---|---|
| Select 8-Bit CRC Calculation Method | pre-compile | uint8 | Table based Runtime | Selection between "Table based" calculation method and "Runtime" calculation method to calculate the CRC8. |
| Select 16-Bit CRC Calculation Method | pre-compile | uint8 | Table based Runtime | Selection between "Table based" calculation method and "Runtime" calculation method to calculate the CRC16. |
| Select 32-Bit CRC Calculation Method | pre-compile | uint8 | Table based Runtime | Selection between "Table based" calculation method and "Runtime" calculation method to calculate the CRC32. |

Table 7-1 EAD Configuration – General Settings

7.1.2.2 Module API

In this Tab the provided APIs of the module are shown.

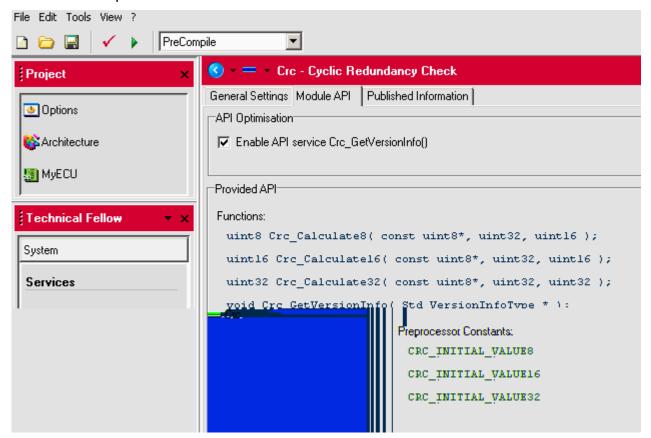


Figure 7-2 EAD Configuration – Module API



Additionally parts of the API can be removed to optimize the module towards ROM consumption:

| Attribute Name | Configuration Variant | Value Type | Values The default value is written in bold | Description |
|--|--------------------------|---------------|---|--|
| Enable API service Crc_GetVersionInfo() | pre-compile | uint8 | OFF ON | This switch can be used to reduce ROM consumption of module CRC. If this switch is deactivated, the code for the version information API is omitted by the compiler. |

Table 7-2 EAD Configuration – Module API



8 AUTOSAR Standard Compliance

8.1 Deviations

No deviations exist.

8.2 Additions/ Extensions

No extensions available.

8.3 Limitations

No limitations exist.



9 Glossary and Abbreviations

9.1 Glossary

| Term | Description |
|------|---|
| EAD | Embedded Architecture Designer; generation tool for MICROSAR components |

Table 9-1 Glossary

9.2 Abbreviations

| Abbreviation | Description |
|--------------|--|
| API | Application Programming Interface |
| AUTOSAR | Automotive Open System Architecture |
| BSW | Basis Software |
| DEM | Diagnostic Event Manager |
| DET | Development Error Tracer |
| EAD | Embedded Architecture Designer |
| ECU | Electronic Control Unit |
| HIS | Hersteller Initiative Software |
| ISR | Interrupt Service Routine |
| MICROSAR | Microcontroller Open System Architecture (the Vector AUTOSAR solution) |
| PPort | Provide Port |
| RPort | Require Port |
| RTE | Runtime Environment |
| SRS | Software Requirement Specification |
| SWC | Software Component |
| SWS | Software Specification |
| CRC | Cyclic Redundancy Check |

Table 9-2 Abbreviations



10 Contact

Visit our website for more information on

- > News
- > Products
- > Demo software
- > Support
- > Training data
- > Addresses

www.vector-informatik.com