

MICROSAR Complex Device Driver

Technical Reference

DaVinci Configurator Version 2.04.00

Authors	Safiulla Shakir, Gunnar Meiss, Markus Bart
Status	Released



Document Information

History

Author	Date	Version	Remarks
Safiulla Shakir	2012-03-23	1.00.00	Initial Version
Gunnar Meiss	2012-08-08	2.00.00	Support AUTOSAR 4
Gunnar Meiss	2013-05-13	2.00.01	performed review rework
Markus Bart	2014-02-05	2.01.00	Support J1939Rm Contribution
Markus Bart	2014-02-28	2.02.00	Support the StartOfReception API with the PduInfoType according to ASR4.1.2
Gunnar Meiss	2014-05-07	2.02.00	AR4-769: ESCAN00075414 AR4-744: Cdd shall support CddSoAdUpperLayerContribution as an extension to AR 4.0.3 (schema shall remain at AR 4.0.3)
Gunnar Meiss	2016-02-24	2.03.00	FEAT-1631: Trigger Transmit API with SduLength In/Out according to ASR4.2.2
Gunnar Meiss	2017-01-09	2.04.00	Rename TechnicalReference_Cdd.pdf to TechnicalReference_Cdd_Communication.pdf

Reference Documents

No.	Source	Title	Version
[1]	AUTOSAR	AUTOSAR_TPS_ECUConfiguration.pdf	3.2.0
[2]	AUTOSAR	AUTOSAR_TR_BSWModuleList.pdf	1.6.0



Caution

We have configured the programs in accordance with your specifications in the questionnaire. Whereas the programs do support other configurations than the one specified in your questionnaire, Vector's release of the programs delivered to your company is expressly restricted to the configuration you have specified in the questionnaire.





Caution

This symbol calls your attention to warnings.

Contents

1	Com	ponent Hi	story	7
2	Intro	duction		8
	2.1	Archite	cture Overview	9
3	Func	tional Des	scription	10
	3.1	Feature	es	10
4	Integ	ration		11
	4.1	Scope	of Delivery	11
		4.1.1	Static Files	11
		4.1.2	Dynamic Files	11
	4.2	Compile	er Abstraction and Memory Mapping	11
5	API D	Descriptio	n CddPduRUpperLayerContribution as IF	12
	5.1	Service	es used by <cdd></cdd>	12
	5.2	Callbac	k Functions	12
		5.2.1	<cdd>_RxIndication</cdd>	12
		5.2.2	<cdd>_TxConfirmation</cdd>	13
		5.2.3	<cdd>_TriggerTransmit</cdd>	13
6	API D	Descriptio	n CddPduRUpperLayerContribution as TP	15
	6.1	Service	es used by <cdd></cdd>	15
	6.2	Callbac	k Functions	15
		6.2.1	<cdd>_StartOfReception</cdd>	15
		6.2.2	<cdd>_CopyRxData</cdd>	16
		6.2.3	<cdd>_TpRxIndication</cdd>	17
		6.2.4	<cdd>_CopyTxData</cdd>	18
		6.2.5	<cdd>_TpTxConfirmation</cdd>	19
7	API D	Descriptio	n CddPduRLowerLayerContribution as IF	20
	7.1	Service	es provided by <cdd></cdd>	20
		7.1.1	<cdd> Transmit</cdd>	20



13	AUTO	SAR Star	ndard Compliance	42
	12.1	Configu	ration Variants	41
12				
		11.3.5	<cdd>_[SoAd][Tp]TxConfirmation</cdd>	40
		11.3.4	<cdd>_[SoAd][Tp]CopyTxData</cdd>	
		11.3.3	<cdd>_[SoAd][Tp]RxIndication</cdd>	
		11.3.2	<cdd>_[SoAd][Tp]CopyRxData</cdd>	37
		11.3.1	<cdd>_[SoAd][Tp]StartOfReception</cdd>	36
	11.3	Transpo	ort Protocol Callback Functions	36
		11.2.3	<cdd>_[SoAd][If]TriggerTransmit</cdd>	
		11.2.2	<cdd>_[SoAd][If]TxConfirmation</cdd>	
		11.2.1	<cdd>_[SoAd][If]RxIndication</cdd>	
	11.2		nication Interface Callback Functions	
••	11.1		s used by <cdd></cdd>	
11	API D	escription	n CddSoAdUpperLayerContribution	32
		10.2.3	<cdd>_RequestTimeoutIndication</cdd>	3´
		10.2.2	<cdd>_AckIndication</cdd>	30
		10.2.1	<cdd>_RequestIndication</cdd>	30
	10.2		k Functions	
10	10.1	-	s used by <cdd></cdd>	
10	VDI D	ascrintic	n CddJ1939RmContribution	20
		9.2.3	<cdd>_TriggerTransmit</cdd>	28
		9.2.2	<cdd>_TxConfirmation</cdd>	27
		9.2.1	<cdd>_RxIndication</cdd>	27
	9.2	Callback	k Functions	26
	9.1	Services	s used by <cdd></cdd>	26
9	API D	escription	n CddComlfUpperLayerContribution	26
	8.2	Services	s used by <cdd></cdd>	25
		8.1.4	<cdd>_ChangeParameter</cdd>	
		8.1.3	<cdd>_CancelReceive</cdd>	
		8.1.2	<cdd>_CancelTransmit</cdd>	
		8.1.1	<cdd>_Transmit</cdd>	
	8.1		s provided by <cdd></cdd>	
8	API D	escription	n CddPduRLowerLayerContribution as TP	22
	7.2	Services	s used by <cdd></cdd>	Z I
	7.0	7.1.2	<cdd>_CancelTransmit</cdd>	
		7 4 0	40DD	0.4



15	Conta	act	45
	14.2	Abbreviations	44
		Glossary	
14		sary and Abbreviations	
	13.3	Limitations	42
		Additions/ Extensions	
		Deviations	



Illustrations		
Figure 2-1	AUTOSAR 4.1 Architecture Overview	9
Tables		
Table 1-1	Component history	7
Table 3-1	Supported AUTOSAR standard conform features	10
Table 3-2	Not supported AUTOSAR standard conform features	10
Table 3-3	Features provided beyond the AUTOSAR standard	
Table 4-1	Generated files	11
Table 5-1	Services used by the <cdd></cdd>	
Table 5-2	<cdd>_RxIndication</cdd>	12
Table 5-3	<cdd>_TxConfirmation</cdd>	13
Table 5-4	<cdd>_TriggerTransmit</cdd>	
Table 6-1	Services used by the <cdd></cdd>	
Table 6-2	<cdd>_StartOfReception</cdd>	16
Table 6-3	<cdd>_CopyRxData</cdd>	
Table 6-4	<cdd>_TpRxIndication</cdd>	
Table 6-5	<cdd>_CopyTxData</cdd>	
Table 6-6	<cdd>_TpTxConfirmation</cdd>	
Table 7-1	<cdd>_Transmit</cdd>	
Table 7-2	<cdd>_CancelTransmit</cdd>	
Table 7-3	Services used by the <cdd></cdd>	
Table 8-1	<cdd>_Transmit</cdd>	
Table 8-2	<cdd>_CancelTransmit</cdd>	
Table 8-3	<cdd>_CancelReceive</cdd>	
Table 8-4	<cdd>_ChangeParameter</cdd>	
Table 8-5	Services used by the <cdd></cdd>	
Table 9-1	Services used by the <cdd></cdd>	
Table 9-2	<cdd>_RxIndication</cdd>	
Table 9-3	<cdd>_RxIndication</cdd>	
Table 9-4	<cdd>_TriggerTransmit</cdd>	
Table 10-1	Services used by the <cdd></cdd>	
Table 10-2	<cdd>_RequestIndication</cdd>	
Table 10-3	<cdd>_AckIndication</cdd>	
Table 10-4 Table 11-1	<cdd>_RequestTimeoutIndication</cdd>	
	Services used by the <cdd></cdd>	
Table 11-2 Table 11-3	<cdd>_[SoAd][If]RxIndication</cdd>	
Table 11-3	<pre><cdd>_[SoAd][If]TxConfirmation</cdd></pre> <pre><cdd>_[SoAd][If]TriggerTransmit</cdd></pre>	
Table 11-4	<cdd>_[SoAd][II]TriggerTransfill(<</cdd>	
Table 11-5	<cdd>_[SoAd][Tp]CopyRxData</cdd>	
Table 11-6	<cdd>_[SoAd][Tp]CopyRxData</cdd> _[SoAd][Tp]RxIndication	
Table 11-7	<cdd>_[SoAd][Tp]CopyTxData</cdd>	
Table 11-8	<cdd>_[SoAd][Tp]TxConfirmation</cdd>	
Table 11-9	Glossary	
Table 14-1	Abbreviations	
IUDIC IT-L	/ NDI G * IGUIO II	



1 Component History

The component history gives an overview over the important milestones that are supported in the different versions of the component.

Component Version	New Features
1.00.00	First DaVinci Configurator AUTOSAR 3 Version
2.00.00	Added support of AUTOSAR 4
3.00.00	Added support for Java 7 & SoAd & Dolp
3.01.00	Added support for J1939Rm
3.02.00	Added support for StartOfReception with the PduInfoType according to ASR4.1.2
	AR4-769: Support Cdd API-SERVICE-PREFIX Parameter as APIs and SNV Prefix
	AR4-744: Cdd shall support CddSoAdUpperLayerContribution as an extension to AR 4.0.3 (schema shall remain at AR 4.0.3)

Table 1-1 Component history



2 Introduction

This document describes the functionality, API and configuration of the AUTOSAR BSW module <CDD> as specified in [1].

Supported AUTOSAR Release*: 4.x



2.1 Architecture Overview

The following figure shows where the <CDD> is located in the AUTOSAR architecture.

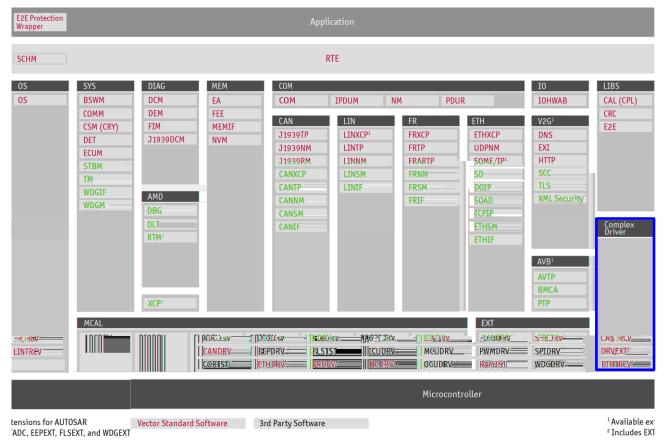


Figure 2-1 AUTOSAR 4.1 Architecture Overview



3 Functional Description

3.1 Features

The features listed in the following tables cover the complete functionality specified for the <CDD>.

The AUTOSAR standard functionality is specified in [1], the corresponding features are listed in the tables

- Table 3-1 Supported AUTOSAR standard conform features
- > Table 3-2 Not supported AUTOSAR standard conform features

For further information of not supported features see also chapter 13.

Vector Informatik provides further <CDD> functionality beyond the AUTOSAR standard. The corresponding features are listed in the table

> Table 3-3 Features provided beyond the AUTOSAR standard

The following features specified in [1] are supported:

Supported AUTOSAR Standard Conform Features
CddComlfUpperLayerContribution
CddPduRLowerLayerContribution
CddPduRUpperLayerContribution
CddSoAdUpperLayerContribution

Table 3-1 Supported AUTOSAR standard conform features

The following features specified in [1] are not supported:

Not Supported AUTOSAR Standard Conform Features
CddEcucPartitionInteraction
CddComMLowerLayerContribution
CddGenericNmLowerLayerContribution

Table 3-2 Not supported AUTOSAR standard conform features

The following features are provided beyond the AUTOSAR standard:

Features Provided Beyond The AUTOSAR Standard
CddJ1939RmContribution

Table 3-3 Features provided beyond the AUTOSAR standard



4 Integration

This chapter gives necessary information for the integration of the MICROSAR <CDD> into an application environment of an ECU.



Note

The MSN is derived from the short name of the module configuration and not from the API-SERVICE-PREFIX of the VSMD file.

4.1 Scope of Delivery

The delivery of the <CDD> contains the files which are described in the chapters 4.1.1 and 4.1.2:

4.1.1 Static Files

The <CDD> implementation has no static files.

4.1.2 Dynamic Files

The dynamic files are generated by the configuration tool CFG5.

File Name	Description
Cdd_Cbk.h	This file is generated if the <cdd> is configured as a CddPduRUpperLayerContribution or CddComlfUpperLayerContribution.</cdd>
Cdd.h	This file is generated if the <cdd> is configured as a CddPduRLowerLayerContribution</cdd>

Table 4-1 Generated files

4.2 Compiler Abstraction and Memory Mapping

The objects (e.g. variables, functions, constants) are declared by compiler independent definitions – the compiler abstraction definitions. Each compiler abstraction definition is assigned to a memory section.



Edi

Update for each <CDD> instance the templates _MemMap.h and _Compiler_Cfg.h and replace "_CDD" with your <CDD> name.



5 API Description CddPduRUpperLayerContribution as IF

This chapter describes APIs to be implemented by the <CDD> if the <CDD> is configured as upper layer communication interface for the PduR.

5.1 Services used by <CDD>

In the following table services provided by other components, which are used by the <CDD> are listed. For details about prototype and functionality refer to the documentation of the providing component.

Component	API
PduR	PduR_ <cdd>Transmit</cdd>

Table 5-1 Services used by the <CDD>

5.2 Callback Functions

This chapter describes the callback functions that are implemented by the <CDD> and can be invoked by other modules. The prototypes of the callback functions are provided in the header file <CDD> Cbk.h by the <CDD>.

5.2.1 <CDD> RxIndication

Prototype	
void	(PduIdType RxPduId, PduInfoType* PduInfoPtr)
Parameter	
RxPduId	id of the CddPduRUpperLayerRxPdu.
PduInfoPtr	Payload information of the received I-PDU (pointer to data and data length).
Return code	
void	
F	

Functional Description

The function is called to indicate the complete reception of a RX I-PDU.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_RxIndication call for the same RxPduId.

Table 5-2 <CDD> RxIndication



5.2.2 <CDD>_TxConfirmation

Prototype	
void	(PduIdType TxPduId)
Parameter	
TxPduId	id of the CddPduRUpperLayerTxPdu.
Return code	
void	

Functional Description

The function is called to confirm the transmission of an I-PDU.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_TxConfirmation call for the same TxPduId.

Table 5-3 <CDD>_TxConfirmation

5.2.3 <CDD>_TriggerTransmit

Prototype	
Std_ReturnType PduInfoPtr)	(PduIdType TxPduId, PduInfoType
Parameter	
TxPduId	id of the CddPduRUpperLayerTxPdu.
PduInfoPtr	Contains a pointer to a buffer (SduDataPtr) to where the SDU data shall be copied, and the available buffer size in SduLengh. On return, the service will indicate the length of the copied SDU data in SduLength.
Return code	
Std_ReturnType	E_OK SDU has been copied and SduLength indicates the number of copied bytes.
	E_NOT_OK No data has been copied, because Cdd is not initialized or TxPduId is not valid or PduInfoPtr is NULL_PTR or SduDataPtr is NULL_PTR or SduLength is too small.
Functional Description	
The function is called to red	quest the I-PDU for transmission.



Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_TriggerTransmit call for the same TxPduId.

Table 5-4 <CDD>_TriggerTransmit



6 API Description CddPduRUpperLayerContribution as TP

This chapter describes APIs to be implemented by the <CDD> if the <CDD> is configured as upper layer transport protocol for the PduR.

6.1 Services used by <CDD>

In the following table services provided by other components, which are used by the <CDD> are listed. For details about prototype and functionality refer to the documentation of the providing component.

Component	API
PduR	PduR_ <cdd>Transmit</cdd>
PduR	PduR_ <cdd>ChangeParameter</cdd>
PduR	PduR_ <cdd>CancelReceive</cdd>

Table 6-1 Services used by the <CDD>

6.2 Callback Functions

This chapter describes the callback functions that are implemented by the <CDD> and can be invoked by other modules. The prototypes of the callback functions are provided in the header file <CDD> Cbk.h by the <CDD>.

6.2.1 <CDD>_StartOfReception

Prototype	
BufReq_ReturnType PduLengthType TpSduLe	(PduIdType id, PduInfoType* info, ength, PduLengthType* bufferSizePtr)
Parameter	
id	id of the CddPduRUpperLayerRxPdu.
info	Pointer to a PduInfoType structure containing the payload data (without protocol information) and payload length of the first frame or single frame of a transport protocol I-PDU reception. Depending on the global parameter MetaDataLength, additional bytes containing MetaData (e.g. the CAN ID) are appended after the payload data.
TpSduLength	Length of the entire TP SDU which will be received.
bufferSizePtr	Length of the available receive buffer in the <cdd>. This parameter is used e.g. in CanTp to calculate the Block Size (BS).</cdd>
Return code	
BufReq_ReturnType	a BufReq_ReturnType constant of ComStackTypes.h.
Functional Description	
The function call indicates the reception start of a segmented PDU.	



Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD> StartOfReception call for the same id.

Table 6-2 <CDD>_StartOfReception

6.2.2 <CDD>_CopyRxData

Prototype	
BufReq_ReturnType PduLengthType* buffer	(PduIdType id, PduInfoType* info, rSizePtr)
Parameter	
id	id of the CddPduRUpperLayerRxPdu.
info	a PduInfoType pointing to the data to be copied in the <cdd> data buffer.</cdd>
bufferSizePtr	available receive buffer after data has been copied.
Return code	
BufReq_ReturnType	a BufReq_ReturnType constant of ComStackTypes.h.
Functional Description	

This function is called to trigger the copy process of a segmented PDU. The function can be called several times and each call to this function copies parts of the received data.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_CopyRxData call for the same id.

Table 6-3 <CDD>_CopyRxData



6.2.3 <CDD>_TpRxIndication

Prototype	
void	(PduIdType id, Std_ReturnType result)
Parameter	
id	id of the CddPduRUpperLayerRxPdu.
result	a Std_ReturnType to indicate the result of the reception.
Return code	
void	

Functional Description

The function is called to indicate the complete reception of a <CDD> TP SDU or to report an error that occurred during reception.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_TpRxIndication call for the same id.

Table 6-4 <CDD>_TpRxIndication



6.2.4 <CDD>_CopyTxData

Prototype

rdulengthiype availableDatarti	
Parameter	
id	id of the CddPduRUpperLayerTxPdu.
info	a PduInfoType pointing to the destination buffer.
retry	NULL_PTR to indicate a successful copy process or a RetryInfoType containing a TpDataStateType constant of ComStackTypes.h.
availableDataPtr	Indicates the remaining number of bytes that are available in the TX buffer. availableDataPtr can be used by TP modules that support dynamic payload lengths (e.g. Iso FrTp) to determine the size of the following CFs.
Return code	
BufReq_ReturnType	a BufReq_ReturnType constant of ComStackTypes.h.

Functional Description

This function is called to request transmit data of a TP CddPduRUpperLayerTxPdu. The function can be called several times and each call to this function copies the next part of the data to be transmitted.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_CopyTxData call for the same id.

Table 6-5 <CDD>_CopyTxData



6.2.5 <CDD>_TpTxConfirmation

Prototype	
void	(PduIdType id, Std_ReturnType result)
Parameter	
id	id of the CddPduRUpperLayerTxPdu.
result	a Std_ReturnType to indicate the result of the transmission.
Return code	
BufReq_ReturnType	a BufReq_ReturnType constant of ComStackTypes.h.

Functional Description

The function is called to confirm a successful transmission of a TP CddPduRUpperLayerTxPdu or to report an error that occurred during transmission.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_TpTxConfirmation call for the same id.

Table 6-6 <CDD>_TpTxConfirmation



7 API Description CddPduRLowerLayerContribution as IF

This chapter describes APIs to be implemented by the <CDD> if the <CDD> is configured as lower layer communication interface for the PduR.

7.1 Services provided by <CDD>

7.1.1 <CDD>_Transmit

Prototype	
Std_ReturnType	(PduIdType TxPduId, PduInfoType* PduInfoPtr)
Parameter	
TxPduId	id of the IF CddPduRLowerLayerTxPdu.
PduInfoPtr	a PduInfoType pointing to the transmit buffer.
Return code	
Std_ReturnType	E_OK the transmission request has been accepted.
	E_NOT_OK the transmission request has NOT been accepted.

Functional Description

The function is called to initiate a transmission request of a TX I-PDU.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_Transmit call for the same TxPduId.

Table 7-1 <CDD>_Transmit



7.1.2 <CDD> CancelTransmit

Prototype	
Std_ReturnType	(PduIdType TxPduId)
Parameter	
TxPduId	id of the IF CddPduRLowerLayerTxPdu.
Return code	
Std_ReturnType	E_OK the transmission cancellation has been processed successful.
	E_NOT_OK the transmission cancellation has NOT been processed successful.
Functional Description	n ,
The function is called to ca	ancel a transmission request of a TX I-PDU.
Particularities and Limitations	
> Service ID: N.a.	

- OCIVICE ID. IV.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_CancelTransmit call for the same TxPduld.

Table 7-2 <CDD>_CancelTransmit

7.2 Services used by <CDD>

In the following table services provided by other components, which are used by the <CDD> are listed. For details about prototype and functionality refer to the documentation of the providing component.

Component	API
PduR	PduR_ <cdd>RxIndication</cdd>
PduR	PduR_ <cdd>TxConfirmation</cdd>
PduR	PduR_ <cdd>TriggerTransmit</cdd>

Table 7-3 Services used by the <CDD>



8 API Description CddPduRLowerLayerContribution as TP

This chapter describes APIs to be implemented by the <CDD> if the <CDD> is configured as lower layer transport protocol for the PduR.

8.1 Services provided by <CDD>

8.1.1 <CDD>_Transmit

Prototype	
Std_ReturnType	(PduIdType TxPduId, PduInfoType* PduInfoPtr)
Parameter	
TxPduId	id of the IF CddPduRLowerLayerTxPdu.
PduInfoPtr	a PduInfoType pointing to the transmit buffer.
Return code	
Std_ReturnType	E_OK the transmission request has been accepted. E_NOT_OK the transmission request has NOT been accepted.

Functional Description

The function is called to initiate a transmission request of a TX I-PDU.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_Transmit call for the same TxPduId.

Table 8-1 <CDD>_Transmit



8.1.2 <CDD> CancelTransmit

Prototype	
Std_ReturnType	(PduIdType id)
Parameter	
id	id of the IF CddPduRLowerLayerTxPdu.
Return code	
Std_ReturnType	E_OK the transmission cancellation has been processed successful. E_NOT_OK the transmission cancellation has NOT been processed successful.

Functional Description

The function is called to cancel a transmission request of a TX I-PDU.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_CancelTransmit call for the same id.

Table 8-2 <CDD>_CancelTransmit



8.1.3 <CDD>_CancelReceive

Prototype	
Std_ReturnType	(PduIdType id)
Parameter	
id	id of the TP CddPduRLowerLayerRxPdu.
Return code	
Std_ReturnType	E_OK the reception cancellation has been processed successful.
	E_NOT_OK the reception cancellation has NOT been processed successful.

Functional Description

The function is called to cancel a reception of a RX I-PDU.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_CancelReceive call for the same id.

Table 8-3 <CDD>_CancelReceive



Prototype

8.1.4 <CDD>_ChangeParameter

1 Tototypo		
Std_ReturnType uint16 value)	(PduIdType id, TPParameterType parameter,	
Parameter		
id	id of the TP CddPduRLowerLayerRxPdu.	
parameter	a TPParameterType enumeration of ComStackTypes.h.	
value	the new value of the parameter	
Return code		
Std_ReturnType	E_OK the parameter change has been processed successful.	
	E_NOT_OK the parameter change has NOT been processed successful.	
Functional Decerinti	on	

Functional Description

The function is called to change a transport protocol parameter (e.g. block size) of a RX I-PDU

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD> CancelParameter call for the same id.

Table 8-4 < CDD > _ Change Parameter

8.2 Services used by <CDD>

In the following table services provided by other components, which are used by the <CDD> are listed. For details about prototype and functionality refer to the documentation of the providing component.

Component	API
PduR	PduR_ <cdd>StartOfReception</cdd>
PduR	PduR_ <cdd>CopyRxData</cdd>
PduR	PduR_ <cdd>RxIndication</cdd>
PduR	PduR_ <cdd>CopyTxData</cdd>
PduR	PduR_ <cdd>TxConfirmation</cdd>

Table 8-5 Services used by the <CDD>

Technical Reference MICROSAR Complex Device Driver



9.2.1 <CDD> RxIndication

Prototype	
void	(PduIdType RxPduId, PduInfoType* PduInfoPtr)
Parameter	
RxPduId	id of the CddComIfUpperLayerRxPdu.
PduInfoPtr	Payload information of the received I-PDU (pointer to data and data length).
Return code	
void	

Functional Description

The function is called to indicate the complete reception of a RX I-PDU.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by a communication hardware abstraction layer.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_RxIndication call for the same RxPduId.

Table 9-2 <CDD>_RxIndication

9.2.2 <CDD> TxConfirmation

Prototype	
void	(PduIdType TxPduId)
Parameter	
TxPduId	id of the CddComlfUpperLayerTxPdu.
Return code	
void	
Functional Description	

Functional Description

The function is called to confirm the transmission of an I-PDU.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by a communication hardware abstraction layer.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_TxConfirmation call for the same TxPduId.

Table 9-3 <CDD>_RxIndication



9.2.3 <CDD>_TriggerTransmit

Prototype	
Std_ReturnType PduInfoPtr)	(PduIdType TxPduId, PduInfoType
Parameter	
TxPduId	id of the CddComIfUpperLayerTxPdu.
PduInfoPtr	Contains a pointer to a buffer (SduDataPtr) to where the SDU data shall be copied, and the available buffer size in SduLengh. On return, the service will indicate the length of the copied SDU data in SduLength.
Return code	
Std_ReturnType	E_OK SDU has been copied and SduLength indicates the number of copied bytes.
	E_NOT_OK No data has been copied, because Cdd is not initialized or TxPduId is not valid or PduInfoPtr is NULL_PTR or SduDataPtr is NULL_PTR or SduLength is too small.
Fti	

Functional Description

The function is called to request the I-PDU for transmission.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the PduR.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_TriggerTransmit call for the same TxPduId.

Table 9-4 <CDD>_TriggerTransmit



10 API Description CddJ1939RmContribution

This chapter describes APIs to be implemented by the <CDD> if the <CDD> is configured as upper layer of the J1939Rm module.

10.1 Services used by <CDD>

In the following table services provided by other components, which are used by the <CDD> are listed. For details about prototype and functionality refer to the documentation of the providing component.

Component	API

Table 10-1 Services used by the <CDD>

10.2 Callback Functions

This chapter describes the callback functions that are implemented by the <CDD> and can be invoked by other modules. The prototypes of the callback functions are provided in the header file <CDD> Cbk.h by the <CDD>.



10.2.1 <CDD>_RequestIndication

Prototype

Parameter	
node	Node by which the request was received.
channel	Channel on which the request was received.
requestedPgn	PGN of the requested PG.
sourceAddress	Address of the node that sent the Request PG.
destAddress	Address of this node or 0xFF for broadcast.
priority	Priority of the Request PG.

Return code

void

Functional Description

The RequestIndication provides information about a received J1939 RQST message which affects a J1939Rm user that references this CDD.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD> RequestIndication call for the same node.

Table 10-2 <CDD>_RequestIndication

10.2.2 <CDD>_AckIndication

Prototype void (uint8 node, NetworkHandleType channel, uint32 ackPgn, uint8 ackCode, uint8 ackAddress, uint8 sourceAddress, uint8 priority)

Parameter	
node	Node by which the acknowledgement was received.
channel	Channel on which the acknowledgement was received.
ackPgn	Acknowledged PGN.
ackCode	Type of acknowledgement, see definition of J1939Rm_AckCode for available codes.
ackAddress	Address of this node.
sourceAddress	Address of the node that sent the Acknowledgement PG.
priority	Priority of the Acknowledgement PG.
Return code	
void	



Functional Description

The AckIndication provides information about a received J1939 ACKM message which affects a J1939Rm user that references this CDD.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD> AckIndication call for the same node.

Table 10-3 <CDD>_AckIndication

Prototype

10.2.3 <CDD>_RequestTimeoutIndication

Trototypo		
<pre>void uint32 requestedPgn,</pre>	<pre>(uint8 node, NetworkHandleType channel, uint8 destAddress)</pre>	
Parameter		
node	Node by which the request was sent.	
channel	Channel on which the request was sent.	
requestedPgn	PGN of the requested PG.	
destAddress	Address of the destination node or 0xFF for broadcast.	
Return code		
void		

Functional Description

The RequestTimeoutIndication is called after time out of a transmitted J1939 RQST message.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_RequestTimeoutIndication call for the same node.

Table 10-4 <CDD>_RequestTimeoutIndication



11 API Description CddSoAdUpperLayerContribution

This chapter describes APIs to be implemented by the <CDD> if the <CDD> is configured as upper layer interface in the SoAd.

Note

The caller and type infixes of the APIs are configurable in the SoAdBswModules.

11.1 Services used by <CDD>

In the following table services provided by other components, which are used by the <CDD> are listed. For details about prototype and functionality refer to the documentation of the providing component.

Component	API
SoAd	SoAd_lfTransmit

© 2017 Vector Informatik GmbH Version 2.04.00 32



11.2 Communication Interface Callback Functions

This chapter describes the callback functions that are implemented by the <CDD> and can be invoked by other modules. The prototypes of the callback functions are provided in the header file <CDD> Cbk.h by the <CDD>.

11.2.1 <CDD>_[SoAd][If]RxIndication

Prototype	
void	(PduIdType RxPduId, PduInfoType* PduInfoPtr)
Parameter	
RxPduId	id of the CddSoAdUpperLayerRxPdu.
PduInfoPtr	Payload information of the received I-PDU (pointer to data and data length).
Return code	
void	

Functional Description

The function is called to indicate the complete reception of a RX I-PDU.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the SoAD.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_[SoAd][lf]RxIndication call for the same RxPduId.

Table 11-2 <CDD>_[SoAd][lf]RxIndication



11.2.2 <CDD>_[SoAd][If]TxConfirmation

Prototype	
void	(PduIdType TxPduId)
Parameter	
TxPduId	id of the CddSoAdUpperLayerTxPdu.
Return code	
void	

Functional Description

The function is called to confirm the transmission of an I-PDU.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the SoAd.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_[SoAd][lf]TxConfirmation call for the same TxPduld.

Table 11-3 <CDD>_[SoAd][If]TxConfirmation



11.2.3 <CDD>_[SoAd][If]TriggerTransmit

Prototype	
Std_ReturnType PduInfoPtr)	(PduIdType TxPduId, PduInfoType
Parameter	
TxPduId	id of the CddSoAdUpperLayerTxPdu.
PduInfoPtr	Contains a pointer to a buffer (SduDataPtr) to where the SDU data shall be copied, and the available buffer size in SduLengh. On return, the service will indicate the length of the copied SDU data in SduLength.
Return code	
Std_ReturnType	E_OK SDU has been copied and SduLength indicates the number of copied bytes.
	E_NOT_OK No data has been copied, because Cdd is not initialized or TxPduId is not valid or PduInfoPtr is NULL_PTR or SduDataPtr is NULL_PTR or SduLength is too small.
Functional Description	

Functional Description

The function is called to request the I-PDU for transmission.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the SoAd.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_[SoAd][lf]TriggerTransmit call for the same TxPduld.

Table 11-4 <CDD>_[SoAd][If]TriggerTransmit



11.3 Transport Protocol Callback Functions

This chapter describes the callback functions that are implemented by the <CDD> and can be invoked by other modules. The prototypes of the callback functions are provided in the header file <CDD> Cbk.h by the <CDD>.

11.3.1 <CDD>_[SoAd][Tp]StartOfReception

Prototype		
BufReq_ReturnType info, PduLengthType 1	(PduIdType id, PduInfoType* TpSduLength, PduLengthType* bufferSizePtr)	
Parameter		
id	id of the CddSoAdUpperLayerRxPdu.	
info	Pointer to a PduInfoType structure containing the payload data (without protocol information) and payload length of the first frame or single frame of a transport protocol I-PDU reception. Depending on the global parameter MetaDataLength, additional bytes containing MetaData (e.g. the CAN ID) are appended after the payload data.	
TpSduLength	Length of the entire TP SDU which will be received.	
bufferSizePtr	Length of the available receive buffer in the <cdd>. This parameter is used e.g. in CanTp to calculate the Block Size (BS).</cdd>	
Return code		
BufReq_ReturnType	a BufReq_ReturnType constant of ComStackTypes.h.	

Functional Description

The function call indicates the reception start of a segmented PDU.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the SoAd.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_[SoAd][Tp]StartOfReception call for the same id.

Table 11-5 <CDD>_[SoAd][Tp]StartOfReception



11.3.2 <CDD>_[SoAd][Tp]CopyRxData

Prototype	
BufReq_ReturnType	(PduIdType id, PduInfoType* info,
PduLengthType* bufferSizePtr)	

Parameter	
id	id of the CddSoAdUpperLayerRxPdu.
info	a PduInfoType pointing to the data to be copied in the <cdd> data buffer.</cdd>
bufferSizePtr	available receive buffer after data has been copied.
Return code	
BufReq_ReturnType	a BufReq_ReturnType constant of ComStackTypes.h.

Functional Description

This function is called to trigger the copy process of a segmented PDU. The function can be called several times and each call to this function copies parts of the received data.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the SoAd.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_[SoAd][Tp]CopyRxData call for the same id.

Table 11-6 <CDD>_[SoAd][Tp]CopyRxData



11.3.3 <CDD>_[SoAd][Tp]RxIndication

Prototype	
void	(PduIdType id, Std_ReturnType result)
Parameter	
id	id of the CddSoAdUpperLayerRxPdu.
result	a Std_ReturnType to indicate the result of the reception.
Return code	
void	

Functional Description

The function is called to indicate the complete reception of a <CDD> TP SDU or to report an error that occurred during reception.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the SoAd.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_[SoAd][Tp]RxIndication call for the same id.

Table 11-7 <CDD>_[SoAd][Tp]RxIndication



11.3.4 <CDD>_[SoAd][Tp]CopyTxData

Prototype

reery, radicingentype	avarrabrebacarer,
Parameter	
id	id of the CddSoAdUpperLayerTxPdu.
info	a PduInfoType pointing to the destination buffer.
retry	NULL_PTR to indicate a successful copy process or a RetryInfoType containing a TpDataStateType constant of ComStackTypes.h.
availableDataPtr	Indicates the remaining number of bytes that are available in the TX buffer. availableDataPtr can be used by TP modules that support dynamic payload lengths (e.g. Iso FrTp) to determine the size of the following CFs.
Return code	
BufReq ReturnType	a BufReq ReturnType constant of ComStackTypes.h.

Functional Description

This function is called to request transmit data of a TP CddSoAdUpperLayerTxPdu. The function can be called several times and each call to this function copies the next part of the data to be transmitted.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the SoAd.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_[SoAd][Tp]CopyTxData call for the same id.

Table 11-8 <CDD>_[SoAd][Tp]CopyTxData



11.3.5 <CDD>_[SoAd][Tp]TxConfirmation

Prototype		
void	(PduIdType id, Std_ReturnType result)	
Parameter		
id	id of the CddSoAdUpperLayerTxPdu.	
result	a Std_ReturnType to indicate the result of the transmission.	
Return code		
BufReq_ReturnType	a BufReq_ReturnType constant of ComStackTypes.h.	

Functional Description

The function is called to confirm a successful transmission of a TP CddSoAdUpperLayerTxPdu or to report an error that occurred during transmission.

Particularities and Limitations

- > Service ID: N.a.
- > The **<CDD>** is initialized and active.
- > The function is called by the SoAd.

Expected Caller Context

> The function can be called in interrupt and on task level and should not be interrupted by another <CDD>_[SoAd][Tp]TxConfirmation call for the same id.

Table 11-9 <CDD>_[SoAd][Tp]TxConfirmation



12 Configuration

12.1 Configuration Variants

The <CDD> supports the configuration variants

> VARIANT-PRE-COMPILE

The configuration classes of the <CDD> parameters depend on the supported configuration variants. For their definitions please see the [BSW_specific]_bswmd.arxml file.



13 AUTOSAR Standard Compliance

13.1 Deviations

No deviations.

13.2 Additions/ Extensions

See Table 3-3 Features provided beyond the AUTOSAR standard.

13.3 Limitations

See Table 3-2 Not supported AUTOSAR standard conform features.



14 Glossary and Abbreviations

14.1 Glossary

Term	Description
BSWMD	The BSWMD is a formal notation of all information belonging to a certain BSW artifact (BSW module or BSW cluster) in addition to the implementation of that artifact.
Buffer	A buffer in a memory area normally in the RAM. It is an area, that the application has reserved for data storage.
CANbedded	is the trademark of the Vector communication stack.
CFG5	Generation tool for CANbedded and MICROSAR components
Component	CAN Driver, Network Management are software COMPONENTS in contrast to the expression module, which describes an ECU.
Confirmation	A service primitive defined in the ISO/OSI Reference Model (ISO 7498). With the service primitive 'confirmation' a service provider informs a service user about the result of a preceding service request of the service user. Notification by the CAN Driver on asynchronous successful transmission of a CAN message.
Electronic Control Unit	Also known as ECU. Small embedded computer system consisting of at least one CPU and corresponding periphery which is placed in one housing.
Indication	A service primitive defined in the ISO/OSI Reference Model (ISO 7498). With the service primitive 'indication' a service provider informs a service user about the occurrence of either an internal event or a service request issued by another service user. Notification of application in case of events in the Vector software components, e.g. an asynchronous reception of a CAN message.
Interrupt	Processor-specific event which can interrupt the execution of a current program section.
Interrupt service routine	The function used for direct processing of an interrupt.
Network	A network defines the assignment (1:N) between a logical communication grouping and a physical layer on which different modules are connected to (either CAN or LIN). One network consists of one channel, Y networks consists of 1Z channel(s). We say network if we talk about more than one bus.
Transport Protocol	Some information that must be transferred over the CAN/LIN bus does not fit into individual message frames because the data length exceeds the maximum of 8 bytes. In this case, the sender must divide up the data into a number of messages. Additional information is necessary for the receiver to put the data together again.

Table 14-1 Glossary



14.2 Abbreviations

Abbreviation	Description
API	Application Programming Interface
AUTOSAR	Automotive Open System Architecture
BSW	Basis Software
CAN	Controller Area Network protocol originally defined for use as a communication network for control applications in vehicles.
CANIF	Controller Area Network Interface
CDD	Complex Device Driver, Complex Drivers
COM	Communication
ECU	Electronic Control Unit
FRIF	Flexray Interface
HIS	Hersteller Initiative Software
ID	Identifier (e.g. Identifier of a CAN message)
ISR	Interrupt Service Routine
MICROSAR	Microcontroller Open System Architecture (the Vector AUTOSAR solution)
MSN	Module Short Name
PDU	Protocol Data Unit
SDU	Service Data Unit
SWC	Software Component
SWS	Software Specification
TP	Transport Protocol
VSMD	Vendor Specific Module Description

Table 14-2 Abbreviations



15 Contact

Visit our website for more information on

- > News
- > Products
- > Demo software
- > Support
- > Training data
- > Addresses

www.vector.com