
01 DEFAULT LAYOUT

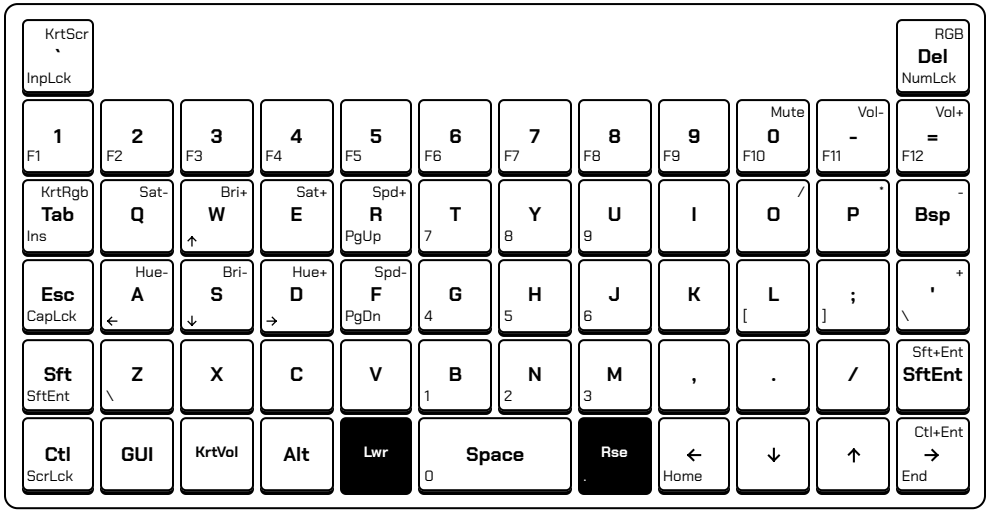

ALIASES

ALIAS	FUNCTION	ACTION
SftEnt	Space cadet enter	Tap for Enter, hold for Shift
InpLck	Input lock	Disables typing (for cleaning and switch testing)

KRT KEYCODES

KEYCODE	PRESS	SHIFT + PRESS	CTRL + PRESS
KrtScr	Next OLED screen	Previous screen	Default screen
KrtRgb	Next RGB effect	Previous effect	Default effect
KrtVol	Volume down	Volume up	Mute

SYSTEM SHORTCUTS

SHORTCUT	ACTION
LShift + RShift + B	Trigger bootloader mode for flashing new firmware
LShift + RShift + C	Factory reset, wipes your VIA keymap back to default

02 CONNECT TO VIA

VIA allows you to easily change the keyboard layout or settings. Follow the steps below to complete the VIA interface setup.

[1] Get **krteq_via.json** from **github.com/swift502/Krteq/production**

[2] Visit **usevia.app**

[3] In the **Settings** tab, enable **Show Design tab**

[4] In the **Design** tab, click **Load** and select the JSON file

[5] Refresh the page (F5)

[6] In the **Configure** tab, click **Authorize device** and select Krteq

03 CUSTOMIZATION

You can add more interactive screens or override the built-in behaviors by compiling your own QMK user keymap. Documentation and examples are available in the GitHub README.

And if you find more built-in behaviors that you think should be exposed for overrides, let's discuss it on GitHub and improve the firmware!

04 DISASSEMBLY

If the keyboard stops working, it might be possible to repair it by replacing a part or repairing some of the solder joints.

[1] Unplug the USB cable from the back

[2] Unscrew the 6 screws holding the plate

[3] Separate the case from the plate

> COMPONENTS

The OLED display and USB breakout board can be replaced after desoldering their connections.

- The OLED display is only clipped in. To remove it, push down on it from the top side.
- The USB breakout board is secured with two more screws. Unscrew them to replace the board.

