

FANUC Robot series

R-30iB Mate CONTROLLER MAINTENANCE MANUAL

MARETIBCN01121E REV. C

©2014 FANUC America Corporation
All Rights Reserved.

This publication contains proprietary information
of FANUC America Corporation furnished for
customer use only. No other uses are authorized
without the express written permission of
FANUC America Corporation.

**FANUC America Corporation
3900 W. Hamlin Road
Rochester Hills, Michigan 48309-3253**

B-83525EN/03

Copyrights and Trademarks

This new publication contains proprietary information of FANUC America Corporation furnished for customer use only. No other uses are authorized without the express written permission of FANUC America Corporation.

The descriptions and specifications contained in this manual were in effect at the time this manual was approved for printing. FANUC America Corporation, hereinafter referred to as FANUC, reserves the right to discontinue models at any time or to change specifications or design without notice and without incurring obligations.

FANUC manuals present descriptions, specifications, drawings, schematics, bills of material, parts, connections and/or procedures for installing, disassembling, connecting, operating and programming FANUC products and/or systems. Such systems consist of robots, extended axes, robot controllers, application software, the KAREL® programming language, INSIGHT® vision equipment, and special tools.

FANUC recommends that only persons who have been trained in one or more approved FANUC Training Course(s) be permitted to install, operate, use, perform procedures on, repair, and/or maintain FANUC products and/or systems and their respective components. Approved training necessitates that the courses selected be relevant to the type of system installed and application performed at the customer site.

⚠ WARNING

This equipment generates, uses, and can radiate radiofrequency energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. As temporarily permitted by regulation, it has not been tested for compliance with the limits for Class A computing devices pursuant to subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference. Operation of the equipment in a residential area is likely to cause interference, in which case the user, at his own expense, will be required to take whatever measure may be required to correct the interference.

FANUC conducts courses on its systems and products on a regularly scheduled basis at the company's world headquarters in Rochester Hills, Michigan. For additional information contact

FANUC America Corporation
Training Department
3900 W. Hamlin Road
Rochester Hills, Michigan 48309-3253
www.fanucrobotics.com

For customer assistance, including Technical Support, Service, Parts & Part Repair, and Marketing Requests, contact the Customer Resource Center, 24 hours a day, at 1-800-47-ROBOT (1-800-477-6268). International customers should call 011-1-248-377-7159.

Send your comments and suggestions about this manual to:
product.documentation@fanucrobotics.com

**Copyright © 2014 by FANUC America Corporation
All Rights Reserved**

The information illustrated or contained herein is not to be reproduced, copied, downloaded, translated into another language, published in any physical or electronic format, including internet, or transmitted in whole or in part in any way without the prior written consent of FANUC America Corporation.

**AccuStat®, ArcTool®, iRVision®, KAREL®, PaintTool®, PalletTool®,
SOCKETS®, SpotTool®, SpotWorks®, and TorchMate® are Registered
Trademarks of FANUC.**

FANUC reserves all proprietary rights, including but not limited to trademark and trade name rights, in the following names:

AccuAir™, AccuCal™, AccuChop™, AccuFlow™, AccuPath™,
AccuSeal™, ARC Mate™, ARC Mate Sr.™, ARC Mate System 1™,
ARC Mate System 2™, ARC Mate System 3™, ARC Mate System 4™,
ARC Mate System 5™, ARCWorks Pro™, AssistTool™, AutoNormal™,
AutoTCP™, BellTool™, BODYWorks™, Cal Mate™, Cell Finder™,
Center Finder™, Clean Wall™, DualARM™, LR Tool™,
MIG Eye™, MotionParts™, MultiARM™, NoBots™, Paint
Stick™, PaintPro™, PaintTool 100™, PAINTWorks™, PAINTWorks
II™, PAINTWorks III™, PalletMate™, PalletMate PC™,
PalletTool PC™, PayloadID™, RecipTool™, RemovalTool™,
Robo Chop™, Robo Spray™, S-420i™, S-430i™, ShapeGen™,
SoftFloat™, SOFT PARTS™, SpotTool+™, SR Mate™, SR
ShotTool™, SureWeld™, SYSTEM R-J2 Controller™, SYSTEM R-J3
Controller™, SYSTEM R-J3iB Controller™, SYSTEM R-J3iC Controller™,
SYSTEM R-30iA Controller™, SYSTEM R-30iA Mate Controller™, SYSTEM
R-30iB Controller™, SYSTEM R-30iB Mate Controller™, TCP Mate™,
TorchMate™, TripleARM™, TurboMove™, visLOC™, visPRO-3D™,
visTRACT™, WebServer™, WebTP™, and YagTool™.

©FANUC CORPORATION 2014

- No part of this manual may be reproduced in any form.
- All specifications and designs are subject to change without notice.

Patents

One or more of the following U.S. patents might be related to the FANUC products described in this manual.

FANUC America Corporation Patent List

4,630,567 4,639,878 4,707,647 4,708,175 4,708,580 4,942,539 4,984,745
5,238,029 5,239,739 5,272,805 5,293,107 5,293,911 5,331,264 5,367,944
5,373,221 5,421,218 5,434,489 5,644,898 5,670,202 5,696,687 5,737,218
5,823,389 5,853,027 5,887,800 5,941,679 5,959,425 5,987,726 6,059,092
6,064,168 6,070,109 6,086,294 6,122,062 6,147,323 6,204,620 6,243,621
6,253,799 6,285,920 6,313,595 6,325,302 6,345,818 6,356,807 6,360,143
6,378,190 6,385,508 6,425,177 6,477,913 6,490,369 6,518,980 6,540,104
6,541,757 6,560,513 6,569,258 6,612,449 6,703,079 6,705,361 6,726,773
6,768,078 6,845,295 6,945,483 7,149,606 7,149,606 7,211,978 7,266,422
7,399,363

FANUC CORPORATION Patent List

4,571,694 4,626,756 4,700,118 4,706,001 4,728,872 4,732,526 4,742,207
4,835,362 4,894,596 4,899,095 4,920,248 4,931,617 4,934,504 4,956,594
4,967,125 4,969,109 4,970,370 4,970,448 4,979,127 5,004,968 5,006,035
5,008,834 5,063,281 5,066,847 5,066,902 5,093,552 5,107,716 5,111,019
5,130,515 5,136,223 5,151,608 5,170,109 5,189,351 5,267,483 5,274,360
5,292,066 5,300,868 5,304,906 5,313,563 5,319,443 5,325,467 5,327,057
5,329,469 5,333,242 5,337,148 5,371,452 5,375,480 5,418,441 5,432,316
5,440,213 5,442,155 5,444,612 5,449,875 5,451,850 5,461,478 5,463,297
5,467,003 5,471,312 5,479,078 5,485,389 5,485,552 5,486,679 5,489,758
5,493,192 5,504,766 5,511,007 5,520,062 5,528,013 5,532,924 5,548,194
5,552,687 5,558,196 5,561,742 5,570,187 5,570,190 5,572,103 5,581,167
5,582,750 5,587,635 5,600,759 5,608,299 5,608,618 5,624,588 5,630,955
5,637,969 5,639,204 5,641,415 5,650,078 5,658,121 5,668,628 5,687,295
5,691,615 5,698,121 5,708,342 5,715,375 5,719,479 5,727,132 5,742,138
5,742,144 5,748,854 5,749,058 5,760,560 5,773,950 5,783,922 5,799,135
5,812,408 5,841,257 5,845,053 5,872,894 5,887,122 5,911,892 5,912,540
5,920,678 5,937,143 5,980,082 5,983,744 5,987,591 5,988,850 6,023,044
6,032,086 6,040,554 6,059,169 6,088,628 6,097,169 6,114,824 6,124,693
6,140,788 6,141,863 6,157,155 6,160,324 6,163,124 6,177,650 6,180,898
6,181,096 6,188,194 6,208,105 6,212,444 6,219,583 6,226,181 6,236,011
6,236,896 6,250,174 6,278,902 6,279,413 6,285,921 6,298,283 6,321,139
6,324,443 6,328,523 6,330,493 6,340,875 6,356,671 6,377,869 6,382,012
6,384,371 6,396,030 6,414,711 6,424,883 6,431,018 6,434,448 6,445,979
6,459,958 6,463,358 6,484,067 6,486,629 6,507,165 6,654,666 6,665,588
6,680,461 6,696,810 6,728,417 6,763,284 6,772,493 6,845,296 6,853,881
6,888,089 6,898,486 6,917,837 6,928,337 6,965,091 6,970,802 7,038,165
7,069,808 7,084,900 7,092,791 7,133,747 7,143,100 7,149,602 7,131,848
7,161,321 7,171,041 7,174,234 7,173,213 7,177,722 7,177,439 7,181,294
7,181,313 7,280,687 7,283,661 7,291,806 7,299,713 7,315,650 7,324,873
7,328,083 7,330,777 7,333,879 7,355,725 7,359,817 7,373,220 7,376,488
7,386,367 7,464,623 7,447,615 7,445,260 7,474,939 7,486,816 7,495,192
7,501,778 7,502,504 7,508,155 7,512,459 7,525,273 7,526,121

Conventions

WARNING

Information appearing under the "WARNING" caption concerns the protection of personnel. It is boxed and bolded to set it apart from the surrounding text.

CAUTION

Information appearing under the "CAUTION" caption concerns the protection of equipment, software, and data. It is boxed and bolded to set it apart from the surrounding text.

Note Information appearing next to NOTE concerns related information or useful hints.

• Original Instructions

Before using the Robot, be sure to read the "FANUC Robot Safety Manual (B-80687EN)" and understand the content.

- No part of this manual may be reproduced in any form.
- All specifications and designs are subject to change without notice.

The products in this manual are controlled based on Japan's "Foreign Exchange and Foreign Trade Law". The export from Japan may be subject to an export license by the government of Japan.

Further, re-export to another country may be subject to the license of the government of the country from where the product is re-exported. Furthermore, the product may also be controlled by re-export regulations of the United States government.

Should you wish to export or re-export these products, please contact FANUC for advice.

The products in this manual are manufactured under strict quality control. However, when using any of the products in a facility in which a serious accident or loss is predicted due to a failure of the product, install a safety device.

In this manual we have tried as much as possible to describe all the various matters. However, we cannot describe all the matters which must not be done, or which cannot be done, because there are so many possibilities. Therefore, matters which are not especially described as possible in this manual should be regarded as "impossible".

Safety

FANUC America Corporation is not and does not represent itself as an expert in safety systems, safety equipment, or the specific safety aspects of your company and/or its work force. It is the responsibility of the owner, employer, or user to take all necessary steps to guarantee the safety of all personnel in the workplace.

The appropriate level of safety for your application and installation can be best determined by safety system professionals. FANUC America Corporation therefore, recommends that each customer consult with such professionals in order to provide a workplace that allows for the safe application, use, and operation of FANUC America Corporation systems.

According to the industry standard ANSI/RIA R15-06, the owner or user is advised to consult the standards to ensure compliance with its requests for Robotics System design, usability, operation, maintenance, and service. Additionally, as the owner, employer, or user of a robotic system, it is your responsibility to arrange for the training of the operator of a robot system to recognize and respond to known hazards associated with your robotic system and to be aware of the recommended operating procedures for your particular application and robot installation.

Ensure that the robot being used is appropriate for the application. Robots used in classified (hazardous) locations must be certified for this use.

FANUC America Corporation therefore, recommends that all personnel who intend to operate, program, repair, or otherwise use the robotics system be trained in an approved FANUC America Corporation training course and become familiar with the proper operation of the system. Persons responsible for programming the system—including the design, implementation, and debugging of application programs—must be familiar with the recommended programming procedures for your application and robot installation.

The following guidelines are provided to emphasize the importance of safety in the workplace.

CONSIDERING SAFETY FOR YOUR ROBOT INSTALLATION

Safety is essential whenever robots are used. Keep in mind the following factors with regard to safety:

- The safety of people and equipment
- Use of safety enhancing devices
- Techniques for safe teaching and manual operation of the robot(s)
- Techniques for safe automatic operation of the robot(s)
- Regular scheduled inspection of the robot and workcell
- Proper maintenance of the robot

Keeping People Safe

The safety of people is always of primary importance in any situation. When applying safety measures to your robotic system, consider the following:

- External devices
- Robot(s)
- Tooling
- Workpiece

Using Safety Enhancing Devices

Always give appropriate attention to the work area that surrounds the robot. The safety of the work area can be enhanced by the installation of some or all of the following devices:

- Safety fences, barriers, or chains
- Light curtains
- Interlocks
- Pressure mats
- Floor markings
- Warning lights
- Mechanical stops
- EMERGENCY STOP buttons
- DEADMAN switches

Setting Up a Safe Workcell

A safe workcell is essential to protect people and equipment. Observe the following guidelines to ensure that the workcell is set up safely. These suggestions are intended to supplement and not replace existing federal, state, and local laws, regulations, and guidelines that pertain to safety.

- Sponsor your personnel for training in approved FANUC America Corporation training course(s) related to your application. Never permit untrained personnel to operate the robots.
- Install a lockout device that uses an access code to prevent unauthorized persons from operating the robot.
- Use anti-tie-down logic to prevent the operator from bypassing safety measures.
- Arrange the workcell so the operator faces the workcell and can see what is going on inside the cell.
- Clearly identify the work envelope of each robot in the system with floor markings, signs, and special barriers. The work envelope is the area defined by the maximum motion range of the robot, including any tooling attached to the wrist flange that extend this range.

Safety

- Position all controllers outside the robot work envelope.
- Never rely on software or firmware based controllers as the primary safety element unless they comply with applicable current robot safety standards.
- Mount an adequate number of EMERGENCY STOP buttons or switches within easy reach of the operator and at critical points inside and around the outside of the workcell.
- Install flashing lights and/or audible warning devices that activate whenever the robot is operating, that is, whenever power is applied to the servo drive system. Audible warning devices shall exceed the ambient noise level at the end-use application.
- Wherever possible, install safety fences to protect against unauthorized entry by personnel into the work envelope.
- Install special guarding that prevents the operator from reaching into restricted areas of the work envelope.
- Use interlocks.
- Use presence or proximity sensing devices such as light curtains, mats, and capacitance and vision systems to enhance safety.
- Periodically check the safety joints or safety clutches that can be optionally installed between the robot wrist flange and tooling. If the tooling strikes an object, these devices dislodge, remove power from the system, and help to minimize damage to the tooling and robot.
- Make sure all external devices are properly filtered, grounded, shielded, and suppressed to prevent hazardous motion due to the effects of electro-magnetic interference (EMI), radio frequency interference (RFI), and electro-static discharge (ESD).
- Make provisions for power lockout/tagout at the controller.
- Eliminate *pinch points*. Pinch points are areas where personnel could get trapped between a moving robot and other equipment.
- Provide enough room inside the workcell to permit personnel to teach the robot and perform maintenance safely.
- Program the robot to load and unload material safely.
- If high voltage electrostatics are present, be sure to provide appropriate interlocks, warning, and beacons.
- If materials are being applied at dangerously high pressure, provide electrical interlocks for lockout of material flow and pressure.

Staying Safe While Teaching or Manually Operating the Robot

Advise all personnel who must teach the robot or otherwise manually operate the robot to observe the following rules:

- Never wear watches, rings, neckties, scarves, or loose clothing that could get caught in moving machinery.
- Know whether or not you are using an intrinsically safe teach pendant if you are working in a hazardous environment.

- Before teaching, visually inspect the robot and work envelope to make sure that no potentially hazardous conditions exist. The work envelope is the area defined by the maximum motion range of the robot. These include tooling attached to the wrist flange that extends this range.
- The area near the robot must be clean and free of oil, water, or debris. Immediately report unsafe working conditions to the supervisor or safety department.
- FANUC America Corporation recommends that no one enter the work envelope of a robot that is on, except for robot teaching operations. However, if you must enter the work envelope, be sure all safeguards are in place, check the teach pendant DEADMAN switch for proper operation, and place the robot in teach mode. Take the teach pendant with you, turn it on, and be prepared to release the DEADMAN switch. Only the person with the teach pendant should be in the work envelope.

⚠️WARNING

Never bypass, strap, or otherwise deactivate a safety device, such as a limit switch, for any operational convenience. Deactivating a safety device is known to have resulted in serious injury and death.

- Know the path that can be used to escape from a moving robot; make sure the escape path is never blocked.
- Isolate the robot from all remote control signals that can cause motion while data is being taught.
- Test any program being run for the first time in the following manner:

⚠️WARNING

Stay outside the robot work envelope whenever a program is being run. Failure to do so can result in injury.

- Using a low motion speed, single step the program for at least one full cycle.
 - Using a low motion speed, test run the program continuously for at least one full cycle.
 - Using the programmed speed, test run the program continuously for at least one full cycle.
- Make sure all personnel are outside the work envelope before running production.

Staying Safe During Automatic Operation

Advise all personnel who operate the robot during production to observe the following rules:

- Make sure all safety provisions are present and active.

Safety

- Know the entire workcell area. The workcell includes the robot and its work envelope, plus the area occupied by all external devices and other equipment with which the robot interacts.
- Understand the complete task the robot is programmed to perform before initiating automatic operation.
- Make sure all personnel are outside the work envelope before operating the robot.
- Never enter or allow others to enter the work envelope during automatic operation of the robot.
- Know the location and status of all switches, sensors, and control signals that could cause the robot to move.
- Know where the EMERGENCY STOP buttons are located on both the robot control and external control devices. Be prepared to press these buttons in an emergency.
- Never assume that a program is complete if the robot is not moving. The robot could be waiting for an input signal that will permit it to continue its activity.
- If the robot is running in a pattern, do not assume it will continue to run in the same pattern.
- Never try to stop the robot, or break its motion, with your body. The only way to stop robot motion immediately is to press an EMERGENCY STOP button located on the controller panel, teach pendant, or emergency stop stations around the workcell.

Staying Safe During Inspection

When inspecting the robot, be sure to

- Turn off power at the controller.
- Lock out and tag out the power source at the controller according to the policies of your plant.
- Turn off the compressed air source and relieve the air pressure.
- If robot motion is not needed for inspecting the electrical circuits, press the EMERGENCY STOP button on the operator panel.
- Never wear watches, rings, neckties, scarves, or loose clothing that could get caught in moving machinery.
- If power is needed to check the robot motion or electrical circuits, be prepared to press the EMERGENCY STOP button, in an emergency.
- Be aware that when you remove a servomotor or brake, the associated robot arm will fall if it is not supported or resting on a hard stop. Support the arm on a solid support before you release the brake.

Staying Safe During Maintenance

When performing maintenance on your robot system, observe the following rules:

- Never enter the work envelope while the robot or a program is in operation.
- Before entering the work envelope, visually inspect the workcell to make sure no potentially hazardous conditions exist.

- Never wear watches, rings, neckties, scarves, or loose clothing that could get caught in moving machinery.
- Consider all or any overlapping work envelopes of adjoining robots when standing in a work envelope.
- Test the teach pendant for proper operation before entering the work envelope.
- If it is necessary for you to enter the robot work envelope while power is turned on, you must be sure that you are in control of the robot. Be sure to take the teach pendant with you, press the DEADMAN switch, and turn the teach pendant on. Be prepared to release the DEADMAN switch to turn off servo power to the robot immediately.
- Whenever possible, perform maintenance with the power turned off. Before you open the controller front panel or enter the work envelope, turn off and lock out the 3-phase power source at the controller.
- Be aware that when you remove a servomotor or brake, the associated robot arm will fall if it is not supported or resting on a hard stop. Support the arm on a solid support before you release the brake.

AWARNING

Lethal voltage is present in the controller WHENEVER IT IS CONNECTED to a power source. Be extremely careful to avoid electrical shock. HIGH VOLTAGE IS PRESENT at the input side whenever the controller is connected to a power source. Turning the disconnect or circuit breaker to the OFF position removes power from the output side of the device only.

- Release or block all stored energy. Before working on the pneumatic system, shut off the system air supply and purge the air lines.
- Isolate the robot from all remote control signals. If maintenance must be done when the power is on, make sure the person inside the work envelope has sole control of the robot. The teach pendant must be held by this person.
- Make sure personnel cannot get trapped between the moving robot and other equipment. Know the path that can be used to escape from a moving robot. Make sure the escape route is never blocked.
- Use blocks, mechanical stops, and pins to prevent hazardous movement by the robot. Make sure that such devices do not create pinch points that could trap personnel.

AWARNING

Do not try to remove any mechanical component from the robot before thoroughly reading and understanding the procedures in the appropriate manual. Doing so can result in serious personal injury and component destruction.

- Be aware that when you remove a servomotor or brake, the associated robot arm will fall if it is not supported or resting on a hard stop. Support the arm on a solid support before you release the brake.
- When replacing or installing components, make sure dirt and debris do not enter the system.
- Use only specified parts for replacement. To avoid fires and damage to parts in the controller, never use nonspecified fuses.
- Before restarting a robot, make sure no one is inside the work envelope; be sure that the robot and all external devices are operating normally.

KEEPING MACHINE TOOLS AND EXTERNAL DEVICES SAFE

Certain programming and mechanical measures are useful in keeping the machine tools and other external devices safe. Some of these measures are outlined below. Make sure you know all associated measures for safe use of such devices.

Programming Safety Precautions

Implement the following programming safety measures to prevent damage to machine tools and other external devices.

- Back-check limit switches in the workcell to make sure they do not fail.
- Implement “failure routines” in programs that will provide appropriate robot actions if an external device or another robot in the workcell fails.
- Use *handshaking* protocol to synchronize robot and external device operations.
- Program the robot to check the condition of all external devices during an operating cycle.

Mechanical Safety Precautions

Implement the following mechanical safety measures to prevent damage to machine tools and other external devices.

- Make sure the workcell is clean and free of oil, water, and debris.
- Use DCS (Dual Check Safety), software limits, limit switches, and mechanical hardstops to prevent undesired movement of the robot into the work area of machine tools and external devices.

KEEPING THE ROBOT SAFE

Observe the following operating and programming guidelines to prevent damage to the robot.

Operating Safety Precautions

The following measures are designed to prevent damage to the robot during operation.

- Use a low override speed to increase your control over the robot when jogging the robot.
- Visualize the movement the robot will make before you press the jog keys on the teach pendant.
- Make sure the work envelope is clean and free of oil, water, or debris.
- Use circuit breakers to guard against electrical overload.

Programming Safety Precautions

The following safety measures are designed to prevent damage to the robot during programming:

- Establish *interference zones* to prevent collisions when two or more robots share a work area.
- Make sure that the program ends with the robot near or at the home position.
- Be aware of signals or other operations that could trigger operation of tooling resulting in personal injury or equipment damage.
- In dispensing applications, be aware of all safety guidelines with respect to the dispensing materials.

NOTE: Any deviation from the methods and safety practices described in this manual must conform to the approved standards of your company. If you have questions, see your supervisor.

ADDITIONAL SAFETY CONSIDERATIONS FOR PAINT ROBOT INSTALLATIONS

Process technicians are sometimes required to enter the paint booth, for example, during daily or routine calibration or while teaching new paths to a robot. Maintenance personnel also must work inside the paint booth periodically.

Whenever personnel are working inside the paint booth, ventilation equipment must be used. Instruction on the proper use of ventilating equipment usually is provided by the paint shop supervisor.

Although paint booth hazards have been minimized, potential dangers still exist. Therefore, today's highly automated paint booth requires that process and maintenance personnel have full awareness of the system and its capabilities. They must understand the interaction that occurs between the vehicle moving along the conveyor and the robot(s), hood/deck and door opening devices, and high-voltage electrostatic tools.



CAUTION

Ensure that all ground cables remain connected. Never operate the paint robot with ground provisions disconnected. Otherwise, you could injure personnel or damage equipment.

Paint robots are operated in three modes:

- Teach or manual mode
- Automatic mode, including automatic and exercise operation
- Diagnostic mode

During both teach and automatic modes, the robots in the paint booth will follow a predetermined pattern of movements. In teach mode, the process technician teaches (programs) paint paths using the teach pendant.

In automatic mode, robot operation is initiated at the System Operator Console (SOC) or Manual Control Panel (MCP), if available, and can be monitored from outside the paint booth. All personnel must remain outside of the booth or in a designated safe area within the booth whenever automatic mode is initiated at the SOC or MCP.

In automatic mode, the robots will execute the path movements they were taught during teach mode, but generally at production speeds.

When process and maintenance personnel run diagnostic routines that require them to remain in the paint booth, they must stay in a designated safe area.

Paint System Safety Features

Process technicians and maintenance personnel must become totally familiar with the equipment and its capabilities. To minimize the risk of injury when working near robots and related equipment, personnel must comply strictly with the procedures in the manuals.

This section provides information about the safety features that are included in the paint system and also explains the way the robot interacts with other equipment in the system.

The paint system includes the following safety features:

- Most paint booths have red warning beacons that illuminate when the robots are armed and ready to paint. Your booth might have other kinds of indicators. Learn what these are.

- Some paint booths have a blue beacon that, when illuminated, indicates that the electrostatic devices are enabled. Your booth might have other kinds of indicators. Learn what these are.
- EMERGENCY STOP buttons are located on the robot controller and teach pendant. Become familiar with the locations of all E-STOP buttons.
- An intrinsically safe teach pendant is used when teaching in hazardous paint atmospheres.
- A DEADMAN switch is located on each teach pendant. When this switch is held in, and the teach pendant is on, power is applied to the robot servo system. If the engaged DEADMAN switch is released or pressed harder during robot operation, power is removed from the servo system, all axis brakes are applied, and the robot comes to an EMERGENCY STOP. Safety interlocks within the system might also E-STOP other robots.

WARNING

An EMERGENCY STOP will occur if the DEADMAN switch is released on a bypassed robot.

- Overtravel by robot axes is prevented by software limits. All of the major and minor axes are governed by software limits. DCS (Dual Check Safety), limit switches and hardstops also limit travel by the major axes.
- EMERGENCY STOP limit switches and photoelectric eyes might be part of your system. Limit switches, located on the entrance/exit doors of each booth, will EMERGENCY STOP all equipment in the booth if a door is opened while the system is operating in automatic or manual mode. For some systems, signals to these switches are inactive when the switch on the SOC is in teach mode.
- When present, photoelectric eyes are sometimes used to monitor unauthorized intrusion through the entrance/exit silhouette openings.
- System status is monitored by computer. Severe conditions result in automatic system shutdown.

Staying Safe While Operating the Paint Robot

When you work in or near the paint booth, observe the following rules, in addition to all rules for safe operation that apply to all robot systems.

WARNING

Observe all safety rules and guidelines to avoid injury.

⚠️ WARNING

Never bypass, strap, or otherwise deactivate a safety device, such as a limit switch, for any operational convenience. Deactivating a safety device is known to have resulted in serious injury and death.

⚠️ WARNING

Enclosures shall not be opened unless the area is known to be nonhazardous or all power has been removed from devices within the enclosure. Power shall not be restored after the enclosure has been opened until all combustible dusts have been removed from the interior of the enclosure and the enclosure purged. Refer to the Purge chapter for the required purge time.

- Know the work area of the entire paint station (workcell).
- Know the work envelope of the robot and hood/deck and door opening devices.
- Be aware of overlapping work envelopes of adjacent robots.
- Know where all red, mushroom-shaped EMERGENCY STOP buttons are located.
- Know the location and status of all switches, sensors, and/or control signals that might cause the robot, conveyor, and opening devices to move.
- Make sure that the work area near the robot is clean and free of water, oil, and debris. Report unsafe conditions to your supervisor.
- Become familiar with the complete task the robot will perform BEFORE starting automatic mode.
- Make sure all personnel are outside the paint booth before you turn on power to the robot servo system.
- Never enter the work envelope or paint booth before you turn off power to the robot servo system.
- Never enter the work envelope during automatic operation unless a safe area has been designated.
- Never wear watches, rings, neckties, scarves, or loose clothing that could get caught in moving machinery.
- Remove all metallic objects, such as rings, watches, and belts, before entering a booth when the electrostatic devices are enabled.
- Stay out of areas where you might get trapped between a moving robot, conveyor, or opening device and another object.
- Be aware of signals and/or operations that could result in the triggering of guns or bells.
- Be aware of all safety precautions when dispensing of paint is required.
- Follow the procedures described in this manual.

Special Precautions for Combustible Dusts (Powder Paint)

When the robot is used in a location where combustible dusts are found, such as the application of powder paint, the following special precautions are required to insure that there are no combustible dusts inside the robot.

- Purge maintenance air should be maintained at all times, even when the robot power is off. This will insure that dust can not enter the robot.
 - A purge cycle will not remove accumulated dusts. Therefore, if the robot is exposed to dust when maintenance air is not present, it will be necessary to remove the covers and clean out any accumulated dust. Do not energize the robot until you have performed the following steps.
1. Before covers are removed, the exterior of the robot should be cleaned to remove accumulated dust.
 2. When cleaning and removing accumulated dust, either on the outside or inside of the robot, be sure to use methods appropriate for the type of dust that exists. Usually lint free rags dampened with water are acceptable. Do not use a vacuum cleaner to remove dust as it can generate static electricity and cause an explosion unless special precautions are taken.
 3. Thoroughly clean the interior of the robot with a lint free rag to remove any accumulated dust.
 4. When the dust has been removed, the covers must be replaced immediately.
 5. Immediately after the covers are replaced, run a complete purge cycle. The robot can now be energized.

Staying Safe While Operating Paint Application Equipment

When you work with paint application equipment, observe the following rules, in addition to all rules for safe operation that apply to all robot systems.

WARNING

When working with electrostatic paint equipment, follow all national and local codes as well as all safety guidelines within your organization. Also reference the following standards: NFPA 33 Standards for Spray Application Using Flammable or Combustible Materials, and NFPA 70 National Electrical Code.

- **Grounding:** All electrically conductive objects in the spray area must be grounded. This includes the spray booth, robots, conveyors, workstations, part carriers, hooks, paint pressure pots, as well as solvent containers. Grounding is defined as the object or objects shall be electrically connected to ground with a resistance of not more than 1 megohms.
- **High Voltage:** High voltage should only be on during actual spray operations. Voltage should be off when the painting process is completed. Never leave high voltage on during a cap cleaning process.
- Avoid any accumulation of combustible vapors or coating matter.
- Follow all manufacturer recommended cleaning procedures.
- Make sure all interlocks are operational.

- No smoking.
- Post all warning signs regarding the electrostatic equipment and operation of electrostatic equipment according to NFPA 33 Standard for Spray Application Using Flammable or Combustible Material.
- Disable all air and paint pressure to bell.
- Verify that the lines are not under pressure.

Staying Safe During Maintenance

When you perform maintenance on the painter system, observe the following rules, and all other maintenance safety rules that apply to all robot installations. Only qualified, trained service or maintenance personnel should perform repair work on a robot.

- Paint robots operate in a potentially explosive environment. Use caution when working with electric tools.
- When a maintenance technician is repairing or adjusting a robot, the work area is under the control of that technician. All personnel not participating in the maintenance must stay out of the area.
- For some maintenance procedures, station a second person at the control panel within reach of the EMERGENCY STOP button. This person must understand the robot and associated potential hazards.
- Be sure all covers and inspection plates are in good repair and in place.
- Always return the robot to the “home” position before you disarm it.
- Never use machine power to aid in removing any component from the robot.
- During robot operations, be aware of the robot’s movements. Excess vibration, unusual sounds, and so forth, can alert you to potential problems.
- Whenever possible, turn off the main electrical disconnect before you clean the robot.
- When using vinyl resin observe the following:
 - Wear eye protection and protective gloves during application and removal.
 - Adequate ventilation is required. Overexposure could cause drowsiness or skin and eye irritation.
 - If there is contact with the skin, wash with water.
 - Follow the Original Equipment Manufacturer’s Material Safety Data Sheets.
- When using paint remover observe the following:
 - Eye protection, protective rubber gloves, boots, and apron are required during booth cleaning.
 - Adequate ventilation is required. Overexposure could cause drowsiness.
 - If there is contact with the skin or eyes, rinse with water for at least 15 minutes. Then seek medical attention as soon as possible.
 - Follow the Original Equipment Manufacturer’s Material Safety Data Sheets.

SAFETY PRECAUTIONS

Thank you for purchasing FANUC Robot.

This chapter describes the precautions which must be observed to ensure the safe use of the robot.

Before attempting to use the robot, be sure to read this chapter thoroughly.

Before using the functions related to robot operation, read the relevant operator's manual to become familiar with those functions.

If any description in this chapter differs from that in the other part of this manual, the description given in this chapter shall take precedence.

For the safety of the operator and the system, follow all safety precautions when operating a robot and its peripheral devices installed in a work cell.

In addition, refer to the "FANUC Robot SAFETY HANDBOOK (B-80687EN)".

1 WORKING PERSON

The personnel can be classified as follows.

Operator:

- Turns robot controller power ON/OFF
- Starts robot program from operator's panel

Programmer or teaching operator:

- Operates the robot
- Teaches robot inside the safety fence

Maintenance engineer:

- Operates the robot
- Teaches robot inside the safety fence
- Maintenance (adjustment, replacement)

- An operator cannot work inside the safety fence.
- A programmer, teaching operator, and maintenance engineer can work inside the safety fence. The working activities inside the safety fence include lifting, setting, teaching, adjusting, maintenance, etc..
- To work inside the fence, the person must be trained on proper robot operation.

During the operation, programming, and maintenance of your robotic system, the programmer, teaching operator, and maintenance engineer should take additional care of their safety by using the following safety precautions.

- Use adequate clothing or uniforms during system operation
- Wear safety shoes
- Use helmet

2 NOTATION OF "WARNING", "CAUTION" and "NOTE"

This manual contains safety precautions against injury and property damage. Those precautions are labeled "Warning" or "Caution," according to the degree of importance. Supplementary explanation is given under "Note." Before starting to use a robot, carefully read the "Warning," "Caution," and "Note."

WARNING

Failure to follow the instruction given under "Warning" can cause fatal or serious injury to the user. This information is indicated in bold type in a box so that it can be easily distinguished from the main body of this manual.

CAUTION

Failure to follow the instruction given under "Caution" can cause injury to the user or property damage. This information is indicated in a box so that it can be easily distinguished from the main body of this manual.

NOTE

The information given under "Note" is a supplementary explanation, which is neither a warning nor a caution.

Carefully read and save this manual.

3 WORKING PERSON SAFETY

Working person safety is the primary safety consideration. Because it is very dangerous to enter the operating space of the robot during automatic operation, adequate safety precautions must be observed. The following lists the general safety precautions. Careful consideration must be made to ensure working person safety.

- (1) Have the robot system working persons attend the training courses held by FANUC.

FANUC provides various training courses. Contact our sales office for details.

- (2) Even when the robot is stationary, it is possible that the robot is still in a ready to move state, and is waiting for a signal. In this state, the robot is regarded as still in motion. To ensure working person safety, provide the system with an alarm to indicate visually or aurally that the robot is in motion.
- (3) Install a safety fence with a gate so that no working person can enter the work area without passing through the gate. Install an interlocking device, a safety plug, and so forth in the safety gate so that the robot is stopped as the safety gate is opened.



The controller is designed to receive this interlocking signal of the door switch. When the gate is opened and this signal received, the controller stops the robot (Please refer to "STOP TYPE OF ROBOT" in SAFETY PRECAUTIONS for detail of stop type). For connection, see Fig.3 (b).

- (4) Provide the peripheral devices with appropriate grounding (Class A, Class B, Class C, and Class D).

- (5) Try to install the peripheral devices outside the work area.
- (6) Draw an outline on the floor, clearly indicating the range of the robot motion, including the tools such as a hand.
- (7) Install a mat switch or photoelectric switch on the floor with an interlock to a visual or aural alarm that stops the robot when a working person enters the work area.
- (8) If necessary, install a safety lock so that no one except the working person in charge can turn on the power of the robot.

The circuit breaker installed in the controller is designed to disable anyone from turning it on when it is locked with a padlock.

- (9) When adjusting each peripheral device independently, be sure to turn off the power of the robot
- (10) Operators should be ungloved while manipulating the operator's panel or teach pendant. Operation with gloved fingers could cause an operation error.
- (11) Programs, system variables, and other information can be saved on memory card or USB memories. Be sure to save the data periodically in case the data is lost in an accident.
- (12) The robot should be transported and installed by accurately following the procedures recommended by FANUC. Wrong transportation or installation may cause the robot to fall, resulting in severe injury to workers.
- (13) In the first operation of the robot after installation, the operation should be restricted to low speeds. Then, the speed should be gradually increased to check the operation of the robot.
- (14) Before the robot is started, it should be checked that no one is in the area of the safety fence. At the same time, a check must be made to ensure that there is no risk of hazardous situations. If detected, such a situation should be eliminated before the operation.
- (15) When the robot is used, the following precautions should be taken. Otherwise, the robot and peripheral equipment can be adversely affected, or workers can be severely injured.
 - Avoid using the robot in a flammable environment.
 - Avoid using the robot in an explosive environment.
 - Avoid using the robot in an environment full of radiation.
 - Avoid using the robot under water or at high humidities.
 - Avoid using the robot to carry a person or animal.
 - Avoid using the robot as a stepladder. (Never climb up on or hang from the robot.)
- (16) After connecting the safety signals like external emergency stop signal and/or safety fence signal, verify that,
 - All safety signals stop the robot as intended.
 - There is no mistake in connection of safety signals.

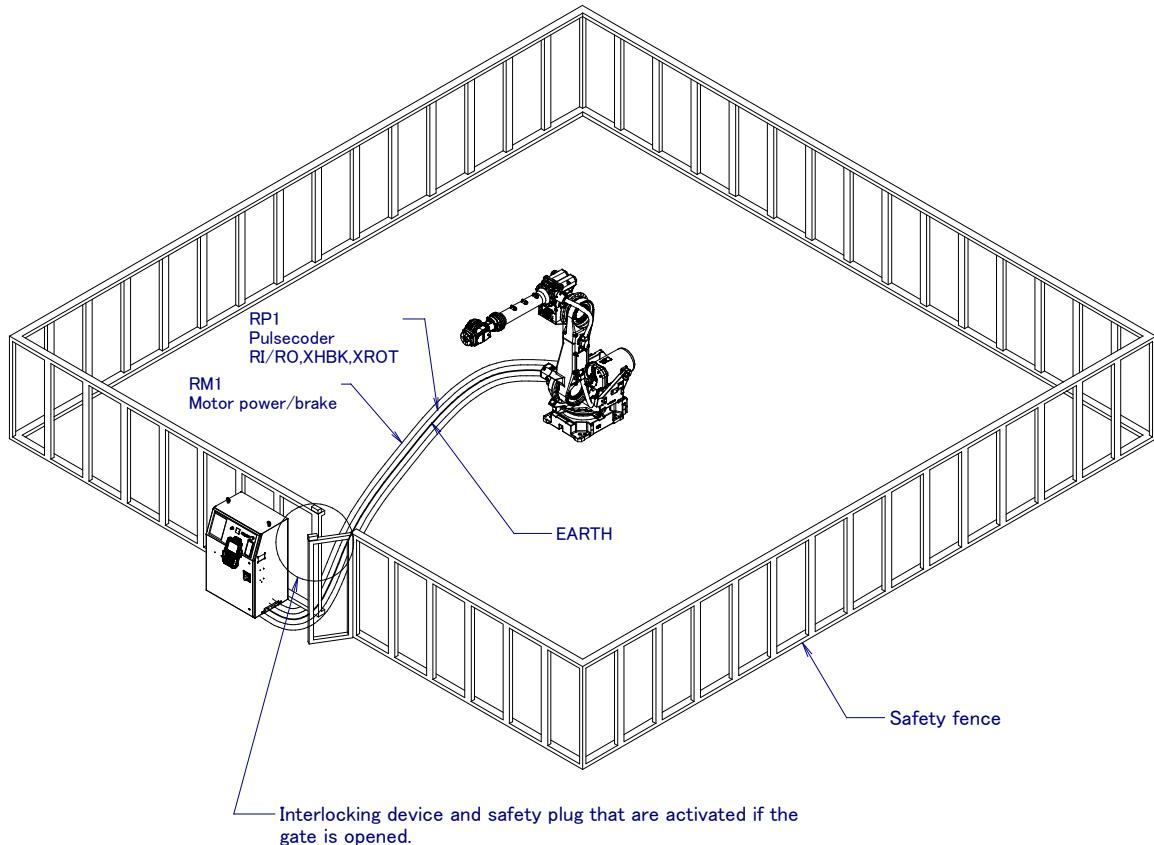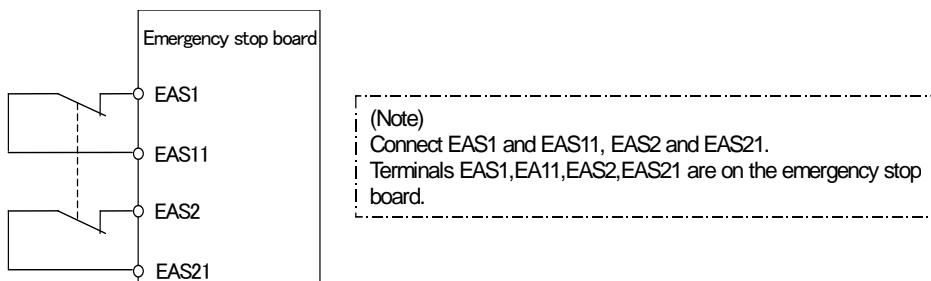**Fig.3 (a) Safety fence and safety gate****Fig.3 (b) Limit switch circuit diagram of the safety fence**

3.1 OPERATOR SAFETY

The operator is a person who operates the robot system. In this sense, a worker who operates the teach pendant is also an operator. However, this section does not apply to teach pendant operators.

- (1) If you do not have to operate the robot, turn off the power of the robot controller or press the EMERGENCY STOP button, and then proceed with necessary work.
- (2) Operate the robot system at a location outside of the safety fence
- (3) Install a safety fence with a safety gate to prevent any worker other than the operator from entering the work area unexpectedly and to prevent the worker from entering a dangerous area.
- (4) Install an EMERGENCY STOP button within the operator's reach.

The robot controller is designed to be connected to an external EMERGENCY STOP button. With this connection, the controller stops the robot operation (Please refer to "STOP TYPE OF ROBOT" in SAFETY PRECAUTIONS for detail of stop type), when the external EMERGENCY STOP button is pressed. For connection, see Fig.3.1.

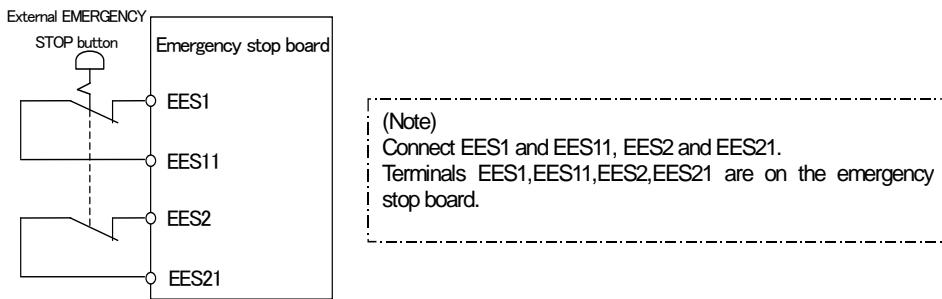


Fig. 3.1 Connection diagram for external emergency stop button

3.2 SAFETY OF THE PROGRAMMER

While teaching the robot, the operator must enter the work area of the robot. The operator must ensure the safety of the teach pendant operator especially.

- (1) Unless it is specifically necessary to enter the robot work area, carry out all tasks outside the area.
- (2) Before teaching the robot, check that the robot and its peripheral devices are all in the normal operating condition.
- (3) If it is inevitable to enter the robot work area to teach the robot, check the locations, settings, and other conditions of the safety devices (such as the EMERGENCY STOP button, the DEADMAN switch on the teach pendant) before entering the area.
- (4) The programmer must be extremely careful not to let anyone else enter the robot work area.
- (5) Programming should be done outside the area of the safety fence as far as possible. If programming needs to be done in the area of the safety fence, the programmer should take the following precautions:
 - Before entering the area of the safety fence, ensure that there is no risk of dangerous situations in the area.
 - Be prepared to press the emergency stop button whenever necessary.
 - Robot motions should be made at low speeds.
 - Before starting programming, check the entire system status to ensure that no remote instruction to the peripheral equipment or motion would be dangerous to the user.

The operator panel is provided with an emergency stop button and a key switch (mode switch) for selecting the automatic operation mode (AUTO) and the teach modes (T1 and T2). Before entering the inside of the safety fence for the purpose of teaching, set the switch to a teach mode, remove the key from the mode switch to prevent other people from changing the operation mode carelessly, then open the safety gate. If the safety gate is opened with the automatic operation mode set, the robot stops (Please refer to "STOP TYPE OF ROBOT" in SAFETY PRECAUTIONS for detail of stop type). After the switch is set to a teach mode, the safety gate is disabled. The programmer should understand that the safety gate is disabled and is responsible for keeping other people from entering the inside of the safety fence.

The teach pendant is provided with an enable/disable switch, DEADMAN switch as well as an emergency stop button. These button and switch function as follows:

- (1) Emergency stop button: Causes an emergency stop (Please refer to "STOP TYPE OF ROBOT" in SAFETY PRECAUTIONS for detail of stop type) when pressed.
- (2) DEADMAN switch: Functions differently depending on the teach pendant enable/disable switch setting status.
 - (a) Disable: The DEADMAN switch is disabled.
 - (b) Enable: Servo power is turned off when the operator releases the DEADMAN switch or when the operator presses the switch strongly.

Note) The DEADMAN switch is provided to stop the robot when the operator releases the teach pendant or presses the pendant strongly in case of emergency. The R-30iB Mate employs a 3-position DEADMAN switch, which allows the robot to operate when the 3-position DEADMAN switch is pressed to its intermediate point. When the operator releases the DEADMAN switch or presses the switch strongly, the robot stops immediately.

Based on the risk assessment by FANUC, number of operation of DEADMAN SW should not exceed about 10000 times per year.

The operator's intention of starting teaching is determined by the controller through the dual operation of setting the teach pendant enable/disable switch to the enable position and pressing the DEADMAN switch. The operator should make sure that the robot could operate in such conditions and be responsible in carrying out tasks safely.

The teach pendant, operator panel, and peripheral device interface send each robot start signal. However the validity of each signal changes as follows depending on the mode switch of the operator panel, the teach pendant enable/disable switch and the remote condition on the software.

Mode	Teach pendant enable/disable switch	Software remote condition	Teach pendant	Operator panel	Peripheral device
AUTO mode	On	Local	Not allowed	Not allowed	Not allowed
		Remote	Not allowed	Not allowed	Not allowed
	Off	Local	Not allowed	Allowed to start	Not allowed
		Remote	Not allowed	Not allowed	Allowed to start
T1, T2 mode	On	Local	Allowed to start	Not allowed	Not allowed
		Remote	Allowed to start	Not allowed	Not allowed
	Off	Local	Not allowed	Not allowed	Not allowed
		Remote	Not allowed	Not allowed	Not allowed

T1, T2 mode: DEADMAN switch is effective.

- (6) To start the system using the operator's panel, make certain that nobody is the robot work area and that there are no abnormal conditions in the robot work area.
- (7) When a program is completed, be sure to carry out a test operation according to the procedure below.
 - (a) Run the program for at least one operation cycle in the single step mode at low speed.
 - (b) Run the program for at least one operation cycle in the continuous operation mode at low speed.
 - (c) Run the program for one operation cycle in the continuous operation mode at the intermediate speed and check that no abnormalities occur due to a delay in timing.
 - (d) Run the program for one operation cycle in the continuous operation mode at the normal operating speed and check that the system operates automatically without trouble.
 - (e) After checking the completeness of the program through the test operation above, execute it in the automatic operation mode.
- (8) While operating the system in the automatic operation mode, the teach pendant operator should leave the robot work area.

3.3 SAFETY OF THE MAINTENANCE ENGINEER

For the safety of maintenance engineer personnel, pay utmost attention to the following.

- (1) During operation, never enter the robot work area.
- (2) A hazardous situation may arise when the robot or the system, are kept with their power-on during maintenance operations. Therefore, for any maintenance operation, the robot and the system should be put into the power-off state. If necessary, a lock should be in place in order to prevent any other person from turning on the robot and/or the system. In case maintenance needs to be executed in the power-on state, the emergency stop button must be pressed.
- (3) If it becomes necessary to enter the robot operation range while the power is on, press the emergency stop button on the operator panel, or the teach pendant before entering the range. The maintenance personnel must indicate that maintenance work is in progress and be careful not to allow other people to operate the robot carelessly.
- (4) When entering the area enclosed by the safety fence, the maintenance worker should check the entire system to make sure that no dangerous situations are present. If the worker needs to enter the area of the fence while a dangerous situation exists, the worker should always take extreme care and check the current system status.
- (5) Before the maintenance of the pneumatic system is started, the supply pressure should be shut off and the pressure in the piping should be reduced to zero.
- (6) Before the start of teaching, check that the robot and its peripheral devices are all in the normal operating condition.
- (7) Do not operate the robot in the automatic mode while anybody is in the robot work area.
- (8) When you maintain the robot alongside a wall or instrument, or when multiple workers are working nearby, make certain that their escape path is not obstructed.
- (9) When a tool is mounted on the robot, or when any moving device other than the robot is installed, such as belt conveyor, pay careful attention to its motion.
- (10) If necessary, have a worker who is familiar with the robot system stand beside the operator panel and observe the work being performed. If any danger arises, the worker should be ready to press the EMERGENCY STOP button at any time.
- (11) When replacing a part, please contact FANUC service center. If a wrong procedure is followed, an accident may occur, causing damage to the robot and injury to the worker.
- (12) When replacing or reinstalling components, take care to prevent foreign matter from entering the system.
- (13) When handling each unit or printed circuit board in the controller during inspection, turn off the circuit breaker to protect against electric shock.
If there are two cabinets, turn off the both circuit breaker.
- (14) A part should be replaced with a part recommended by FANUC. If other parts are used, malfunction or damage would occur. Especially, a fuse that is not recommended by FANUC should not be used. Such a fuse may cause a fire.
- (15) When restarting the robot system after completing maintenance work, make sure in advance that there is no person in the work area and that the robot and the peripheral devices are not abnormal.
- (16) When a motor or brake is removed, the robot arm should be supported with a crane or other equipment beforehand so that the arm would not fall during the removal.
- (17) Whenever grease is spilled on the floor, it should be removed as quickly as possible to prevent dangerous falls.
- (18) The following parts are heated. If a maintenance worker needs to touch such a part in the heated state, the worker should wear heat-resistant gloves or use other protective tools.
 - Servo motor
 - Inside the controller
- (19) Maintenance should be done under suitable light. Care must be taken that the light would not cause any danger.

- (20) When a motor, decelerator, or other heavy load is handled, a crane or other equipment should be used to protect maintenance workers from excessive load. Otherwise, the maintenance workers would be severely injured.
- (21) The robot should not be stepped on or climbed up during maintenance. If it is attempted, the robot would be adversely affected. In addition, a misstep can cause injury to the worker.
- (22) After the maintenance is completed, spilled oil or water and metal chips should be removed from the floor around the robot and within the safety fence.
- (23) When a part is replaced, all bolts and other related components should put back into their original places. A careful check must be given to ensure that no components are missing or left unmounted.
- (24) In case robot motion is required during maintenance, the following precautions should be taken :
 - Foresee an escape route. And during the maintenance motion itself, monitor continuously the whole system so that your escape route will not become blocked by the robot, or by peripheral equipment.
 - Always pay attention to potentially dangerous situations, and be prepared to press the emergency stop button whenever necessary.
- (25) The robot should be periodically inspected. (Refer to the manual of the controller or mechanical unit.) A failure to do the periodical inspection can adversely affect the performance or service life of the robot and also may cause an accident.
- (26) After a part is replaced, a test operation should be given for the robot according to a predetermined method. (See TESTING section of “Controller operator’s manual”.) During the test operation, the maintenance staff should work outside the safety fence.

4 SAFETY OF THE TOOLS AND PERIPHERAL DEVICES

4.1 PRECAUTIONS IN PROGRAMMING

- (1) Use a limit switch or other sensor to detect a dangerous condition and, if necessary, design the program to stop the robot when the sensor signal is received.
- (2) Design the program to stop the robot when an abnormal condition occurs in any other robots or peripheral devices, even though the robot itself is normal.
- (3) For a system in which the robot and its peripheral devices are in synchronous motion, particular care must be taken in programming so that they do not interfere with each other.
- (4) Provide a suitable interface between the robot and its peripheral devices so that the robot can detect the states of all devices in the system and can be stopped according to the states.

4.2 PRECAUTIONS FOR MECHANISM

- (1) Keep the component cells of the robot system clean, and operate the robot in an environment free of grease, water, and dust.
- (2) Don’t use unconfirmed liquid for cutting fluid and cleaning fluid.
- (3) Employ a limit switch or mechanical stopper to limit the robot motion so that the robot or cable does not strike against its peripheral devices or tools.
- (4) Observe the following precautions about the mechanical unit cables. Failure to follow precautions may cause mechanical troubles.
 - Use mechanical unit cable that have required user interface.
 - Don’t add user cable or hose to inside of mechanical unit.
 - Please do not obstruct the movement of the mechanical unit cable when cables are added to outside of mechanical unit.

- In the case of the model that a cable is exposed, Please do not perform remodeling (Adding a protective cover and fix an outside cable more) obstructing the behavior of the outcrop of the cable.
 - When installing user peripheral equipment on the robot mechanical unit, please pay attention that equipment does not interfere with the robot itself.
- (5) The frequent power-off stop for the robot during operation causes the trouble of the robot. Please avoid the system construction that power-off stop would be operated routinely. (Refer to bad case example.) Please execute power-off stop after reducing the speed of the robot and stopping it by hold stop or cycle stop when it is not urgent. (Please refer to "STOP TYPE OF ROBOT" in SAFETY PRECAUTIONS for detail of stop type.)
(Bad case example)
- Whenever poor product is generated, a line stops by emergency stop.
 - When alteration was necessary, safety switch is operated by opening safety fence and power-off stop is executed for the robot during operation.
 - An operator pushes the emergency stop button frequently, and a line stops.
 - An area sensor or a mat switch connected to safety signal operate routinely and power-off stop is executed for the robot.
- (6) Robot stops urgently when collision detection alarm (SRVO-050) etc. occurs. Please try to avoid unnecessary power-off stops. It may cause the trouble of the robot, too. So remove the causes of the alarm.

5 SAFETY OF THE ROBOT MECHANISM

5.1 PRECAUTIONS IN OPERATION

- (1) When operating the robot in the jog mode, set it at an appropriate speed so that the operator can manage the robot in any eventuality.
- (2) Before pressing the jog key, be sure you know in advance what motion the robot will perform in the jog mode.

5.2 PRECAUTIONS IN PROGRAMMING

- (1) When the work areas of robots overlap, make certain that the motions of the robots do not interfere with each other.
- (2) Be sure to specify the predetermined work origin in a motion program for the robot and program the motion so that it starts from the origin and terminates at the origin.
Make it possible for the operator to easily distinguish at a glance that the robot motion has terminated.

5.3 PRECAUTIONS FOR MECHANISMS

- (1) Keep the work areas of the robot clean, and operate the robot in an environment free of grease, water, and dust.

5.4 PROCEDURE TO MOVE ARM WITHOUT DRIVE POWER IN EMERGENCY OR ABNORMAL SITUATIONS

For emergency or abnormal situations (e.g. persons trapped in or by the robot), brake release unit can be used to move the robot axes without drive power.

Please refer to this manual and mechanical unit operator's manual for using method of brake release unit and method of supporting robot.

6 SAFETY OF THE END EFFECTOR

6.1 PRECAUTIONS IN PROGRAMMING

- (1) To control the pneumatic, hydraulic and electric actuators, carefully consider the necessary time delay after issuing each control command up to actual motion and ensure safe control.
- (2) Provide the end effector with a limit switch, and control the robot system by monitoring the state of the end effector.

7 STOP TYPE OF ROBOT

The following three robot stop types exist:

Power-Off Stop (Category 0 following IEC 60204-1)

Servo power is turned off and the robot stops immediately. Servo power is turned off when the robot is moving, and the motion path of the deceleration is uncontrolled.

The following processing is performed at Power-Off stop.

- An alarm is generated and servo power is turned off.
- The robot operation is stopped immediately. Execution of the program is paused.

Controlled stop (Category 1 following IEC 60204-1)

The robot is decelerated until it stops, and servo power is turned off.

The following processing is performed at Controlled stop.

- The alarm "SRVO-199 Controlled stop" occurs along with a decelerated stop. Execution of the program is paused.
- An alarm is generated and servo power is turned off.

Hold (Category 2 following IEC 60204-1)

The robot is decelerated until it stops, and servo power remains on.

The following processing is performed at Hold.

- The robot operation is decelerated until it stops. Execution of the program is paused.

WARNING

The stopping distance and stopping time of Controlled stop are longer than the stopping distance and stopping time of Power-Off stop. A risk assessment for the whole robot system, which takes into consideration the increased stopping distance and stopping time, is necessary when Controlled stop is used.

When the E-Stop button is pressed or the FENCE is open, the stop type of robot is Power-Off stop or Controlled stop. The configuration of stop type for each situation is called *stop pattern*. The stop pattern is different according to the controller type or option configuration.

There are the following 2 Stop patterns.

Stop pattern	Mode	E-Stop button	External E-Stop	FENCE open	SVOFF input
A	AUTO	P-Stop	P-Stop	C-Stop	C-Stop
	T1	P-Stop	P-Stop	-	C-Stop
	T2	P-Stop	P-Stop	-	C-Stop
C	AUTO	C-Stop	C-Stop	C-Stop	C-Stop
	T1	P-Stop	P-Stop	-	C-Stop
	T2	P-Stop	P-Stop	-	C-Stop

P-Stop: Power-Off stop

C-Stop: Controlled stop

-: Disable

WARNING

In this manual, the term "Emergency-stop" is used for the stop by above safety signals. Please refer to above table for actual stop type.

The following table indicates the Stop pattern according to the controller type or option configuration.

Option	Stop pattern
Standard	A
Controlled stop by E-Stop (A05B-2600-J570)	C

The stop pattern of the controller is displayed in "Stop pattern" line in software version screen. Please refer "Software version" in operator's manual of controller for the detail of software version screen.

"Controlled stop by E-Stop" option

"Controlled stop by E-Stop" option (A05B-2600-J570) is an optional function. When this option is loaded, the stop type of the following alarms becomes Controlled stop but only in AUTO mode. In T1 or T2 mode, the stop type is Power-Off stop which is the normal operation of the system.

Alarm	Condition
SRVO-001 Operator panel E-stop	Operator panel E-stop is pressed.
SRVO-002 Teach pendant E-stop	Teach pendant E-stop is pressed.
SRVO-007 External emergency stops	External emergency stop input (EES1-EES11, EES2-EES21) is open.
SRVO-408 DCS SSO Ext Emergency Stop	In DCS Safe I/O connect function, SSO[3] is OFF.
SRVO-409 DCS SSO Servo Disconnect	In DCS Safe I/O connect function, SSO[4] is OFF.

Controlled stop is different from Power-Off stop as follows:

- In Controlled stop, the robot is stopped on the program path. This function is effective for a system where the robot can interfere with other devices if it deviates from the program path.
- In Controlled stop, physical impact is less than Power-Off stop. This function is effective for systems where the physical impact to the mechanical unit or EOAT (End Of Arm Tool) should be minimized.
- The stopping distance and stopping time of Controlled stop is longer than the stopping distance and stopping time of Power-Off stop, depending on the robot model and axis. Please refer the operator's manual of a particular robot model for the data of stopping distance and stopping time.

When this option is loaded, this function can not be disabled.

The stop type of DCS Position and Speed Check functions is not affected by the loading of this option.

⚠ WARNING

The stopping distance and stopping time of Controlled stop are longer than the stopping distance and stopping time of Power-Off stop. A risk assessment for the whole robot system, which takes into consideration the increased stopping distance and stopping time, is necessary when this option is loaded.

8 WARNING LABEL

- (1) Step-on prohibitive label



Fig.8 (a) Step-on prohibitive label

Description

Do not step on or climb the robot or controller as it may adversely affect the robot or controller and you may get hurt if you lose your footing.

- (2) High-temperature warning label

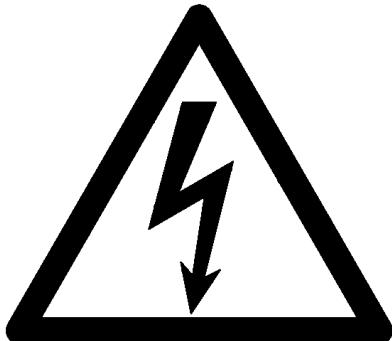


Fig.8 (b) High-Temperature warning label

Description

Be cautious about a section where this label is affixed, as the section generates heat. If you must touch such a section when it is hot, use a protective provision such as heat-resistant gloves.

(3) High-voltage warning label

**Fig.8 (c) High-voltage warning label****Description**

A high voltage is applied to the places where this label is attached.

Before starting maintenance, turn the power to the controller off, and turn the circuit breaker off to avoid electric shock hazards. Take additional precautions with the servo amplifier and other equipment, because high-voltage remains in these units for a certain amounts of time

PREFACE

This manual describes the following models (R-30iB Mate controller).

Model	Abbreviation	Controller Size	
FANUC Robot LR Mate 200iD	LR Mate 200iD	LR Mate 200iD	Small
FANUC Robot LR Mate 200iD/4S	LR Mate 200iD/4S		
FANUC Robot LR Mate 200iD/7L	LR Mate 200iD/7L		
FANUC Robot LR Mate 200iD/7C	LR Mate 200iD/7C		
FANUC Robot LR Mate 200iD/4SC	LR Mate 200iD/4SC		
FANUC Robot LR Mate 200iD/7LC	LR Mate 200iD/7LC		
FANUC Robot LR Mate 200iD/7H	LR Mate 200iD/7H		
FANUC Robot LR Mate 200iD/4SH	LR Mate 200iD/4SH		
FANUC Robot LR Mate 200iD/7WP	LR Mate 200iD/7WP		
FANUC Robot M-1iA/0.5A	M-1iA/0.5A	M-1iA	Small
FANUC Robot M-1iA/0.5S	M-1iA/0.5S		
FANUC Robot M-1iA/1H	M-1iA/1H		
FANUC Robot M-1iA/0.5AL	M-1iA/0.5AL		
FANUC Robot M-1iA/0.5SL	M-1iA/0.5SL		
FANUC Robot M-1iA/1HL	M-1iA/1HL		
FANUC Robot M-2iA/3S	M-2iA/3S	M-2iA	Large
FANUC Robot M-2iA/3SL	M-2iA/3SL		
FANUC Robot M-2iA/6H	M-2iA/6H		
FANUC Robot M-2iA/6HL	M-2iA/6HL		
FANUC Robot M-2iA/3A	M-2iA/3A		
FANUC Robot M-2iA/3AL	M-2iA/3AL	M-3iA	Large
FANUC Robot M-3iA/6A	M-3iA/6A		
FANUC Robot M-3iA/6S	M-3iA/6S		
FANUC Robot M-3iA/12H	M-3iA/12H		
FANUC Robot M-10iA	M-10iA	M-10iA	Medium
FANUC Robot M-10iA/6L	M-10iA/6L		
FANUC Robot M-10iA/10S	M-10iA/10S		
FANUC Robot M-10iA/10M	M-10iA/10M		
FANUC Robot M-10iA/10MS	M-10iA/10MS		
FANUC Robot M-10iA/12	M-10iA/12		
FANUC Robot M-20iA	M-20iA	M-20iA	Medium
FANUC Robot M-20iA/10L	M-20iA/10L		
FANUC Robot M-20iA/20M	M-20iA/20M		
FANUC Robot M-20iA/35M	M-20iA/35M		
FANUC Robot ARC Mate 50iD	ARC Mate 50iD	ARC Mate 50iD	Medium or Small
FANUC Robot ARC Mate 50iD/7L	ARC Mate 50iD/7L		
FANUC Robot ARC Mate 100iC FANUC ROBOWELD 100iC	ARC Mate 100iC	ARC Mate 100iC	Medium
FANUC Robot ARC Mate 100iC/6L FANUC ROBOWELD 100iC/6L	ARC Mate 100iC/6L		
FANUC Robot ARC Mate 100iC/10S	ARC Mate 100iC/10S		
FANUC Robot ARC Mate 100iC/12	ARC Mate 100iC/12		
FANUC Robot ARC Mate 120iC FANUC ROBOWELD 120iC	ARC Mate 120iC		
FANUC Robot ARC Mate 120iC/10L FANUC ROBOWELD 120iC/10L	ARC Mate 120iC/10L	ARC Mate 120iC	Medium

Model	Abbreviation	Controller Size	
FANUC Robot ARC Mate 0 <i>i</i> B	ARC Mate 0 <i>i</i> B	Medium	
FANUC Robot R-0 <i>i</i> B	R-0 <i>i</i> B	Medium	
FANUC Robot R-2000 <i>i</i> C/165F	R-2000 <i>i</i> C/165F	R-2000 <i>i</i> C	Large
FANUC Robot R-2000 <i>i</i> C/210F	R-2000 <i>i</i> C/210F		
FANUC Robot R-1000 <i>i</i> A/80F	R-1000 <i>i</i> A/80F	R-1000 <i>i</i> A	Large
FANUC Robot R-1000 <i>i</i> A/100F	R-1000 <i>i</i> A/100F		
FANUC Robot M-710 <i>i</i> C/70	M-710 <i>i</i> C/70	M-710 <i>i</i> C	Large
FANUC Robot M-710 <i>i</i> C/70T	M-710 <i>i</i> C/70T		
FANUC Robot M-710 <i>i</i> C/50	M-710 <i>i</i> C/50		
FANUC Robot M-710 <i>i</i> C/50S	M-710 <i>i</i> C/50S		
FANUC Robot M-710 <i>i</i> C/50T	M-710 <i>i</i> C/50T		
FANUC Robot M-710 <i>i</i> C/50E	M-710 <i>i</i> C/50E		
FANUC Robot M-710 <i>i</i> C/20L	M-710 <i>i</i> C/20L		

TABLE OF CONTENTS

SAFETY PRECAUTIONS.....	s-1
PREFACE.....	p-1
I. MAINTENANCE	
1 OVERVIEW	3
2 CONFIGURATION	4
2.1 EXTERNAL VIEW OF THE CONTROLLER	4
2.2 COMPONENT FUNCTIONS.....	9
2.3 PREVENTIVE MAINTENANCE	10
3 TROUBLESHOOTING	12
3.1 POWER CANNOT BE TURNED ON	12
3.1.1 When the Teach Pendant Cannot be Powered on.....	12
3.1.2 When the Teach Pendant Does not Change from the Initial Screen.....	13
3.2 ALARM OCCURRENCE SCREEN	14
3.3 STOP SIGNALS	16
3.4 MASTERING	17
3.5 TROUBLESHOOTING USING THE ERROR CODE	19
3.6 FUSE-BASED TROUBLESHOOTING	64
3.7 TROUBLESHOOTING BASED ON LED INDICATIONS	68
3.7.1 Troubleshooting Using the LEDs On the Main Board	68
3.7.2 Troubleshooting by LEDs on the 6-Axis Servo Amplifier	72
3.7.3 Troubleshooting by LED on the Emergency Stop Board.....	73
3.7.4 Troubleshooting by Alarm LEDs on the Process I/O Board.....	75
3.8 MANUAL OPERATION IMPOSSIBLE	75
3.9 LEDS ON UNITS SUPPORTING I/O LINK <i>i</i>	76
3.9.1 Meanings of LEDs on Units Supporting I/O Link <i>i</i>	76
4 PRINTED CIRCUIT BOARDS.....	78
4.1 MAIN BOARD	78
4.2 EMERGENCY STOP BOARD:A20B-2005-0150	80
4.3 BACKPLANE	80
4.4 PROCESS I/O BOARD MA (A20B-2004-0381).....	81
4.5 PROCESS I/O BOARD MB (A20B-2101-0731).....	82
4.6 CONNECTOR CONVERTER BOARD (A20B-2004-0411)	83
4.7 TERMINAL CONVERTER BOARD (A20B-1009-0690)	83
5 SERVO AMPLIFIERS	84
5.1 LEDS OF SERVO AMPLIFIER	85
5.2 SETTING OF SERVO AMPLIFIER.....	86
5.3 6-AXIS SERVO AMPLIFIER SPECIFICATIONS	87
6 POWER SUPPLY.....	88
6.1 BLOCK DIAGRAM OF THE POWER SUPPLY	88

7	REPLACING UNITS.....	89
7.1	REPLACING THE PRINTED-CIRCUIT BOARDS	89
7.1.1	Replacing the Backplane Board (Unit).....	90
7.1.2	Replacing the Main Board.....	91
7.2	REPLACING CARDS AND MODULES ON THE MAIN BOARD	91
7.3	REPLACING THE E-STOP UNIT	96
7.4	REPLACING THE EMERGENCY STOP BOARD	96
7.5	REPLACING THE POWER SUPPLY UNIT	97
7.6	REPLACING THE REGENERATIVE RESISTOR UNIT	98
7.7	REPLACING THE 6-AXIS SERVO AMPLIFIER	99
7.8	REPLACING THE TEACH PENDANT.....	101
7.9	REPLACING THE CONTROL SECTION FAN MOTOR	102
7.10	REPLACING THE AC FAN MOTOR	103
7.10.1	Replacing the Heat Exchanger and Door Fan Unit (A-cabinet).....	103
7.11	REPLACING THE BATTERY	104
7.11.1	Battery for Memory Backup (3 VDC).....	104

II. CONNECTIONS

1	GENERAL	109
2	BLOCK DIAGRAM.....	110
3	ELECTRICAL CONNECTIONS.....	111
3.1	CONNECTION DIAGRAM BETWEEN MECHANICAL UNITS	111
3.2	FANUC I/O LINK.....	113
3.2.1	Connection of I/O Link	113
3.2.2	Connection of the I/O Link Cable	114
3.3	EXTERNAL CABLE WIRING DIAGRAM	117
3.3.1	Robot Connection Cables	117
3.3.2	Teach Pendant Cable	120
3.3.3	Connecting the Input Power	120
3.3.3.1	Connecting the input power cable	120
3.3.3.2	Isolated transformer	121
3.3.3.3	Leakage breaker.....	122
3.3.4	Connecting the External Emergency Stop.....	122
3.3.5	Connecting the Auxiliary Axis Brake (CRR65 A/B)	129
3.3.6	Connecting the Auxiliary Axis Over Travel (CRM68)	130
4	PERIPHERAL DEVICE, ARC WELDING, AND EE INTERFACES	131
4.1	PERIPHERAL DEVICE INTERFACE BLOCK DIAGRAM.....	133
4.1.1	In Case of Main Board (CRMA15, CRMA16)	133
4.1.2	In the Case of the Process I/O Board MA	133
4.1.3	In the Case of the Process I/O Board MB	134
4.1.4	In the Case of the Connector Conversion Board	134
4.1.5	In the Case of the Terminal Converter Board.....	135
4.2	I/O SIGNALS OF MAIN BOARD.....	136
4.3	INTERFACE FOR PERIPHERAL DEVICES.....	138
4.3.1	Connection between the Main Board (CRMA15, CRMA16) and Peripheral Devices	138
4.3.2	Connection between the Connector Converter Board and Peripheral Devices	144

4.3.3	Connection between the Terminal Converter Board and Peripheral Devices	145
4.3.4	Connection between the Process I/O Board MA and Peripheral Devices.....	146
4.4	INTERFACE FOR WELDING MACHINES	150
4.4.1	Connection between the Process I/O Board MB and Welding Machines	150
4.5	EE INTERFACE.....	152
4.5.1	Connection between the Robot and End Effector	152
4.6	DIGITAL I/O SIGNAL SPECIFICATIONS	154
4.6.1	Peripheral Device Interface A	154
4.6.2	EE Interface.....	156
4.6.3	I/O Signal Specifications for ARC-Welding Interface (A-cabinet/Process I/O Board MB)	157
4.7	SPECIFICATIONS OF THE CABLES USED FOR PERIPHERAL DEVICES AND WELDERS	160
4.7.1	Peripheral Device Interface A1 Cable (CRMA15; Tyco Electronics AMP, 40 pins).....	160
4.7.2	Peripheral Device Interface A2 Cable (CRMA16; Tyco Electronics AMP, 40 pins).....	160
4.7.3	Peripheral Device Interface B1 and B2 Cables (CRMA52; Tyco Electronics AMP, 30 pin).....	161
4.7.4	ARC Weld Connection Cables (CRW11; Tyco Electronics AMP, 20 pin).....	161
4.8	CABLE CONNECTION FOR THE PERIPHERAL DEVICES, END EFFECTORS, AND ARC WELDERS	162
4.8.1	Peripheral Device Connection Cable.....	162
4.8.2	Peripheral Device Cable Connector	163
4.8.3	Recommended Cables	165
4.9	CONNECTION OF HDI	166
4.9.1	Connecting HDI	166
4.9.2	Input Signal Rules for the High-speed Skip (HDI)	167
4.10	CONNECTING THE COMMUNICATION UNIT	168
4.10.1	RS-232-C Interface.....	168
4.10.1.1	Interface	168
4.10.1.2	RS-232-C interface signals	169
4.10.1.3	Connection between RS-232-C interface and I/O device	169
4.10.2	Ethernet Interface	171
4.10.2.1	Connection to Ethernet	171
4.10.2.2	Routing of the Ethernet cable	172
4.10.2.3	100BASE-TX connector (CD38A, CD38B) pin assignments.....	172
4.10.2.4	Twisted-pair cable specification	173
4.10.2.5	Electrical noise countermeasures	176
4.10.2.6	Check items at installation	179
5	TRANSPORTATION AND INSTALLATION	180
5.1	TRANSPORTATION.....	180
5.2	INSTALLATION	181
5.2.1	Installation Method.....	181
5.2.2	Assemble at Installation	183
5.3	INSTALLATION OF TEACH PENDANT HOOK (Option).....	184
5.4	INSTALLATION CONDITION	185
5.5	ADJUSTMENT AND CHECKS AT INSTALLATION	188
5.6	RESETTING OVERTRAVEL AND EMERGENCY STOP AT INSTALLATION	188

5.6.1	Peripheral Device Interface Processing	188
5.6.2	Resetting Overtravel.....	189
5.6.3	How to Disable/Enable HBK	189
5.6.4	How to Disable/Enable Pneumatic Pressure Alarm (PPABN)	189

APPENDIX

A	TOTAL CONNECTION DIAGRAM.....	193
B	SPECIFICATIONS OF PERIPHERAL DEVICE INTERFACE	218
B.1	SIGNAL	218
B.2	SETTING COMMON VOLTAGE.....	220
B.3	I/O SIGNALS	220
B.3.1	Input Signals.....	220
B.3.2	Output Signals	223
B.4	SPECIFICATIONS OF DIGITAL INPUT/OUTPUT.....	226
B.4.1	Overview	226
B.4.2	Input/Output Hardware Usable in the R-30iB Mate Controller	226
B.4.3	Software Specifications	227
C	OPTICAL FIBER CABLE.....	228
D	BRAKE RELEASE UNIT.....	231
D.1	SAFETY PRECAUTIONS	231
D.2	CONFIRMATIONS BEFORE OPERATION.....	231
D.3	OPERATION.....	232
D.3.1	In case of operating to the robot	232
D.3.2	In case of operating to the auxiliary Axis.....	234
D.4	HOW TO CONNECT THE PLUG TO THE POWER CABLE (IN CASE OF NO POWER PLUG)	235
D.5	DIMENSION	236
D.6	FUSE	237
D.7	SPECIFICATIONS	238
E	TEACH PENDANT DISCONNECT FUNCTION (OPTION).....	239
E.1	CONFIGURATION.....	239
E.2	PROCEDURE OF TEACH PENDANT DISCONNECT	239
E.2.1	Teach Pendant Disconnect	239
E.2.2	Teach Pendant Connect	240
F	INSTRUCTION FOR TERMINAL BLOCK	241
F.1	EXTERNAL EMERGENCY STOP SIGNAL INPUT/OUTPUT TERMINAL BLOCK	241
F.2	TERMINAL CONVERTER BOARD TERMINAL BLOCK	243
G	REPLACING THE PROTECTION SHEET	244
H	SEALING OF THE CABLE ENTRANCE OF THE CABINET	245
H.1	CABLE ENTRANCE FOR A-CABINET	245
H.2	HOLES OF CABLE SEAL BLOCK FOR CABLE ENTRANCE	246
H.3	SUITABLE CABLE DIAMETER	247
H.4	ADJUST THE CABLE DIAMETER	248

I. MAINTENANCE

1 OVERVIEW

This manual is applied to R-30iB Mate controller (called R-30iB Mate).

R-30iB Mate has three variations depending on the required standards.

Basic controller : To meet Safety Standard and General electrical requirement

CE controller : To meet Machinery Directive, Low voltage Directive, EMC Directive to cover the requirement of CE mark

NRTL controller: To meet UL/CSA standard

This manual covers these three variations of R-30iB Mate.

The difference of NRTL and CE controller from Basic controller is small as shown in Table 1 (ex. EMC parts, Breakers).

And the specific descriptions of CE and NRTL controller have notifications in this manual.

Table 1. Applied standards

	Common Standard	EMC Standard	UL/CSA Standard	Requirement	Difference
Basic controller	ISO 10218-1	-	-	Safety Standard General electrical requirement	-
CE controller	ISO 13849-1 IEC 60204-1 IEC 61508	EN 55011 EN 61000-6-2 EN 61000-6-4	-	CE Marking •Europe	•Noise filter •EMC Cabinet •Shielded cable
NRTL controller		-	UL1740 CAN/CSA Z434 NFPA79	UL standard CSA standard •USA and Canada	•UL listed main breaker

This manual describes the maintenance and connection of R-30iB Mate.

- Maintenance Part: Troubleshooting, and the setting, adjustment, and replacement of units
- Connection Part: Connection of R-30iB Mate to the robot mechanical unit and peripheral devices, and installation of the controller

⚠ WARNING

Before you enter the robot working area, be sure to turn off the power to the controller or press the EMERGENCY STOP button on the operator's panel or teach pendant.

Otherwise, you could injure personnel or damage equipment.

2 CONFIGURATION

2.1 EXTERNAL VIEW OF THE CONTROLLER

The appearance and components might slightly differ depending on the controlled robot, application, and options used.

Fig.2.1 (a) shows the view of R-30iB Mate.

Fig.2.1 (b) to (d) show the construction of the R-30iB Mate controller.

Fig.2.1 (e) to (g) show the external view of the operator's panel and teach pendant.

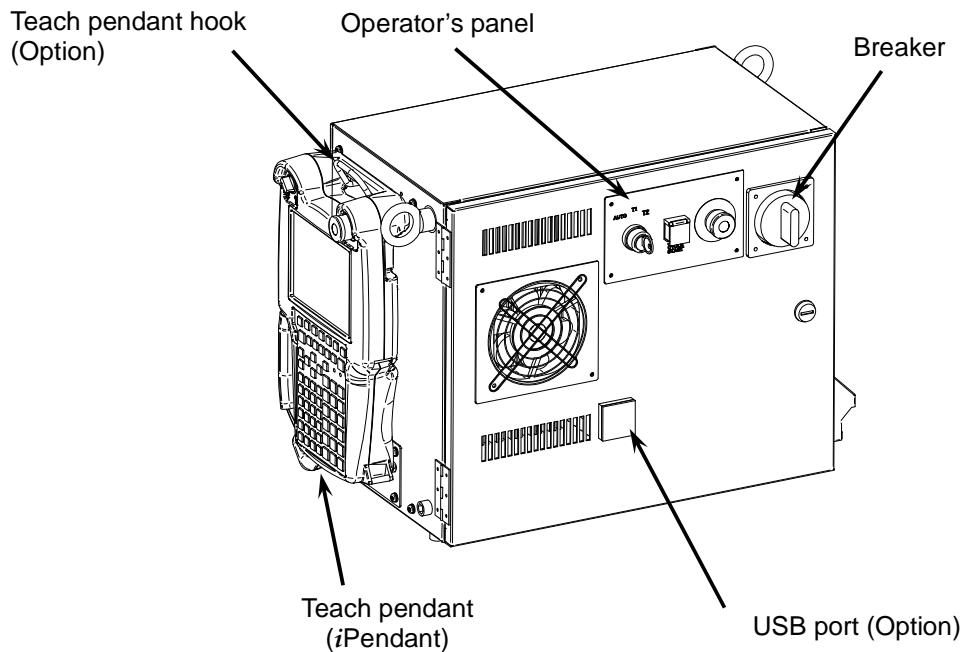


Fig.2.1 (aa) External view of the R-30iB Mate controller

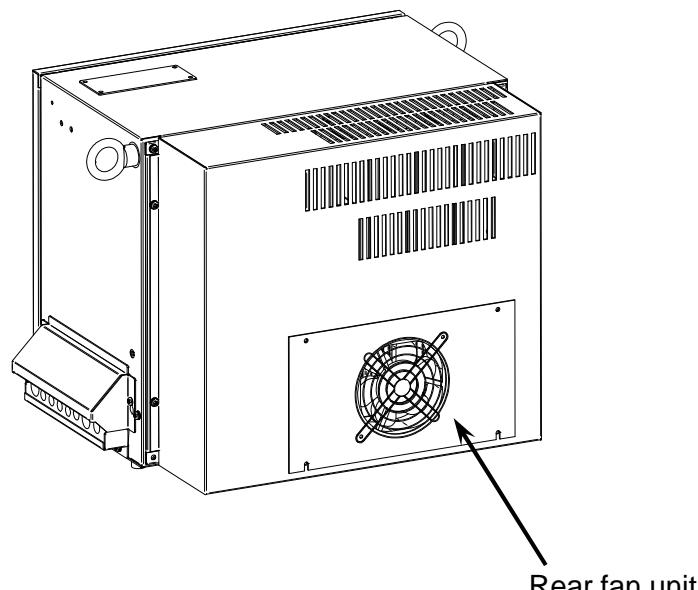


Fig.2.1 (ab) External view of the R-30iB Mate controller (Middle/Large size) (Rear)

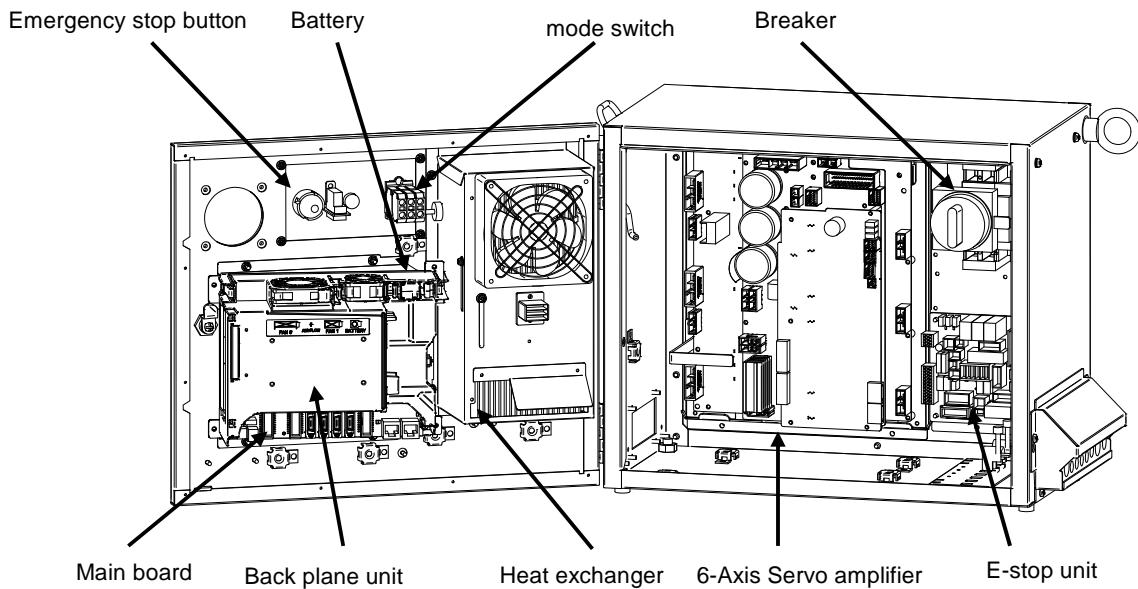


Fig.2.1 (b) R-30iB Mate cabinet interior (Front-1)

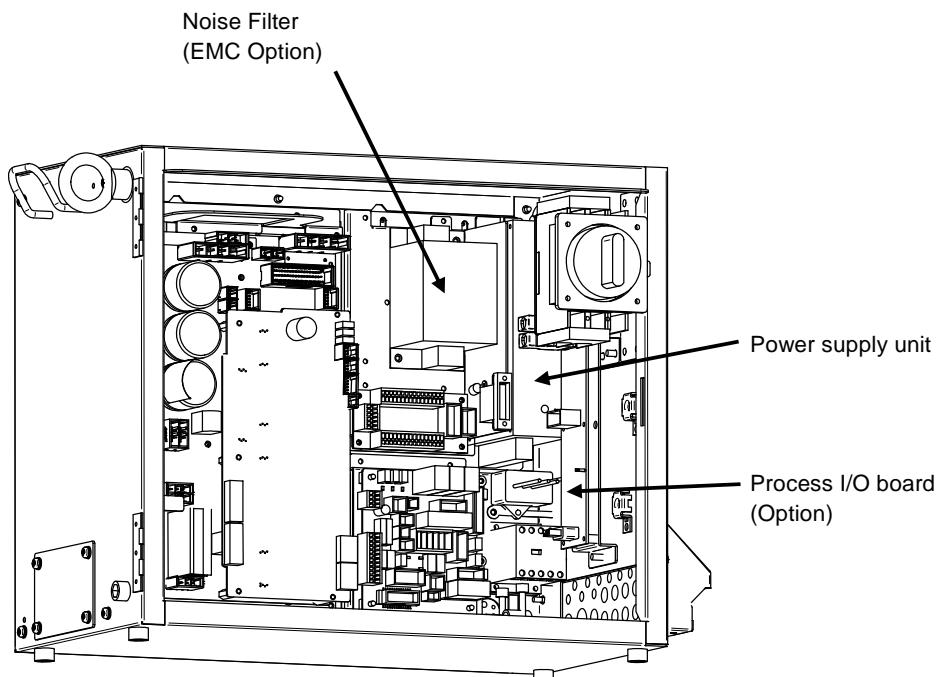


Fig.2.1 (c) R-30iB Mate cabinet interior (Front-2)

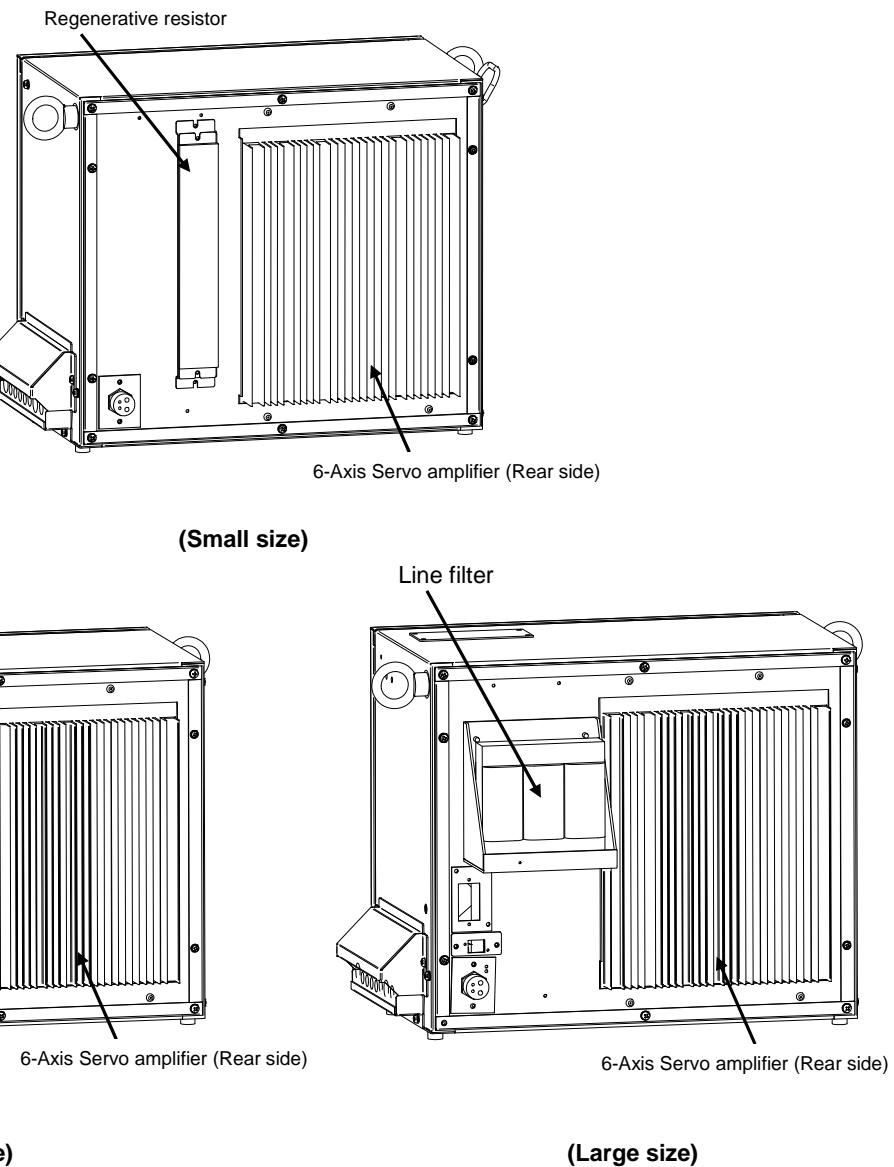
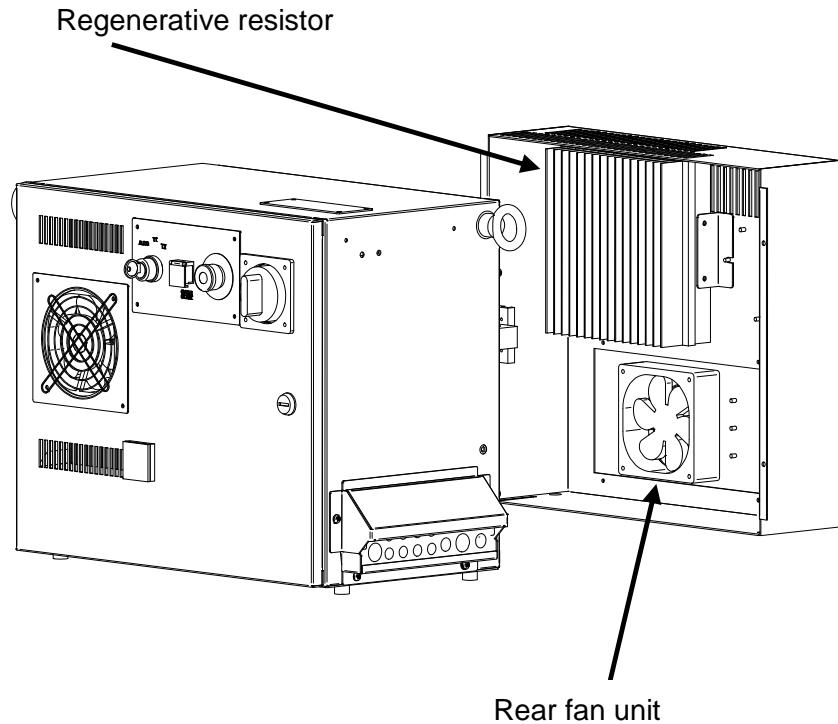


Fig.2.1 (da) R-30iB Mate cabinet interior (Rear)

**NOTE**

The number of fans on the fan unit (0,1,2) will vary depending on the robot type.

Fig.2.1 (db) R-30iB Mate cabinet interior (Middle/Large size) (Rear)

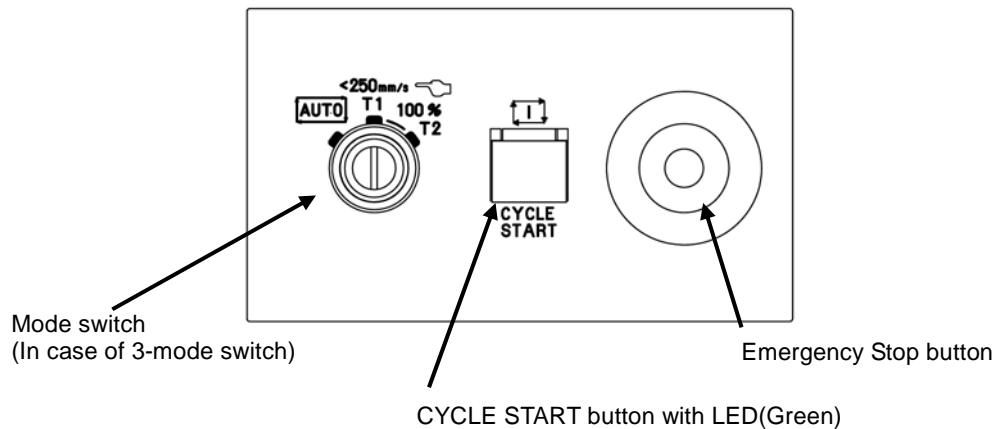


Fig.2.1 (e) R-30iB Mate operator's panel

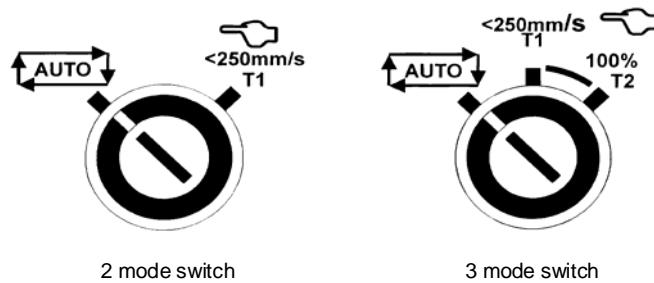


Fig.2.1 (f) Mode switch

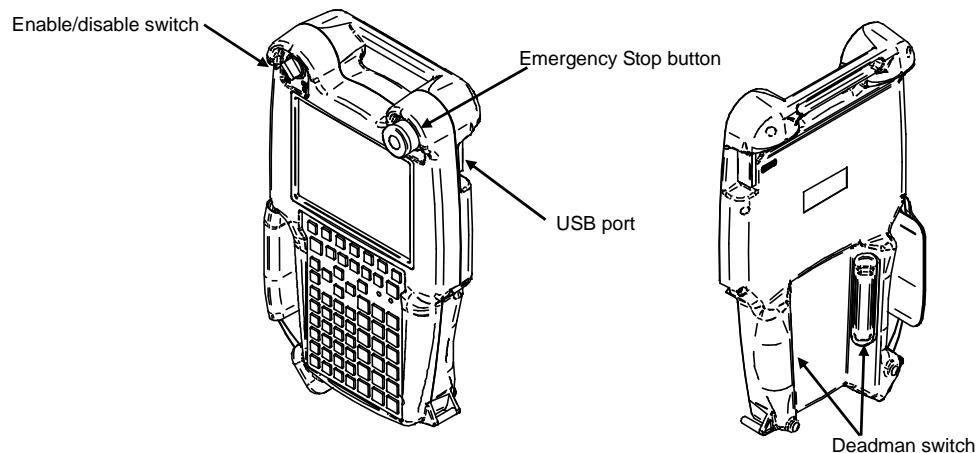


Fig.2.1 (g) Teach pendant (iPendant)

2.2 COMPONENT FUNCTIONS

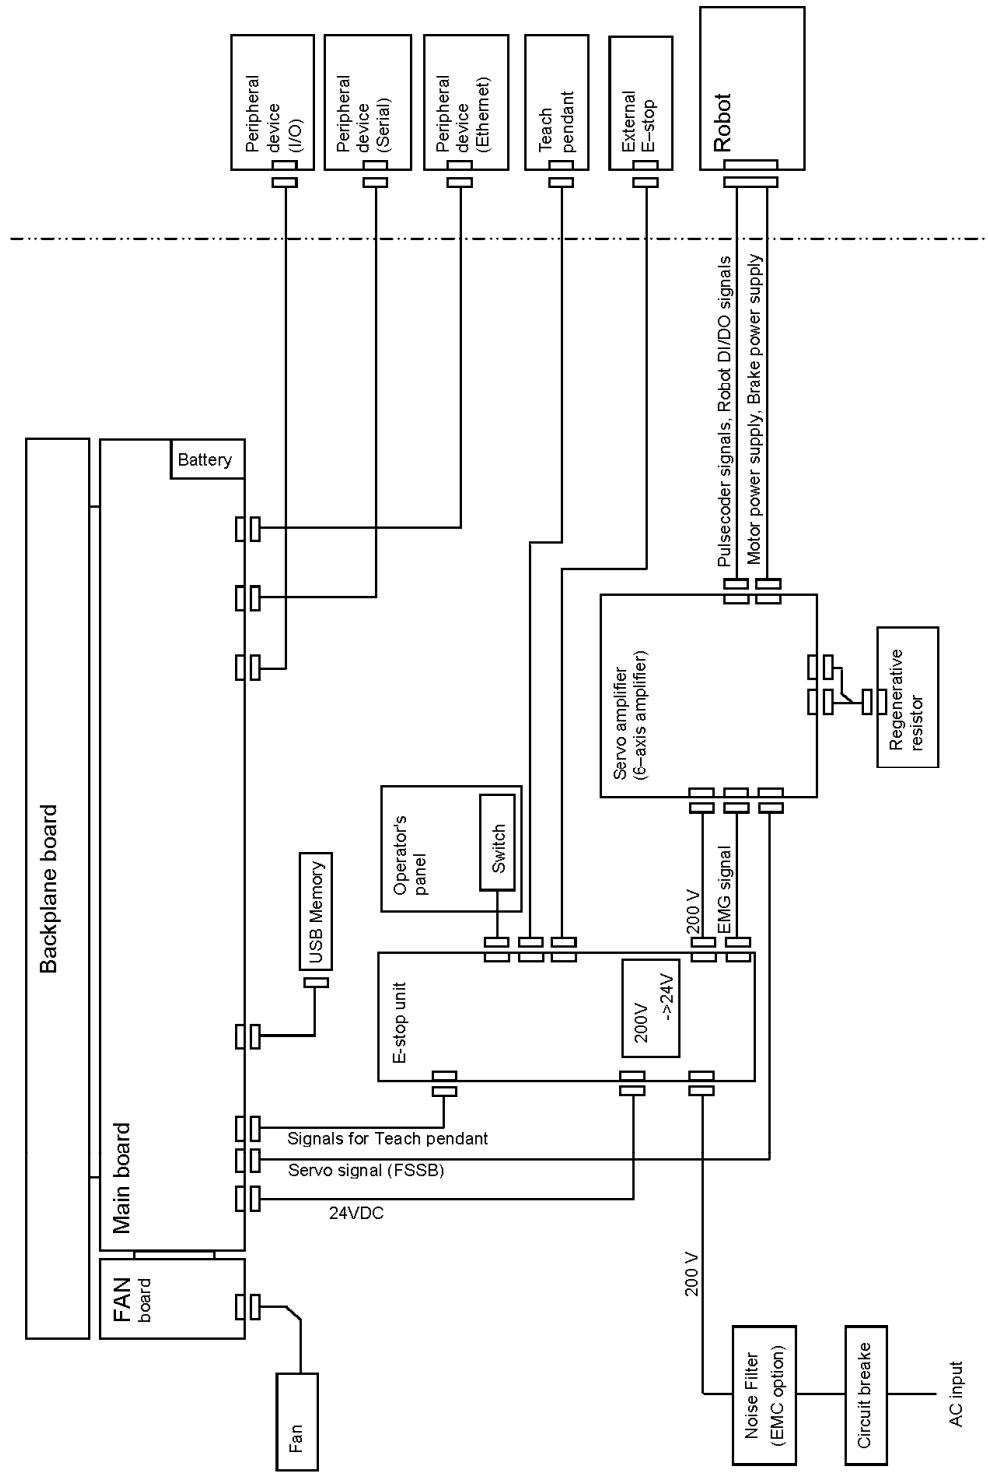


Fig.2.2 Block diagram of the R-30iB Mate

- **Main board**

The main board contains a microprocessor, its peripheral circuits, memory, and operator's panel control circuit. The main CPU controls servo mechanism positioning.

- **I/O printed circuit board**

Various types of printed circuit boards are provided for applications including process I/O board. These are connected with FANUC I/O Link.

- E-stop unit
This unit controls the emergency stop system of the robot controller. It also has user interface terminals of safety relevant signals, external on/off signals etc.
- Power supply unit
The power supply unit converts the AC power to various levels of DC power.
- Backplane printed circuit board
The various control printed circuit boards are mounted on the backplane printed circuit board.
- Teach pendant
All operations including robot programming are performed with this unit. The controller status and data are indicated on the liquid-crystal display (LCD) on the pendant.
- 6-Axis Servo amplifier
The servo amplifier controls servomotor, PulseCoder signal, brake control, overtravel and hand broken.
- Operator's panel
Buttons and LEDs on the operator's panel are used to start the robot and to indicate the robot status.
- Fan unit, heat exchanger
These components cool the inside of the controller.
- Circuit breaker
If the electric system in the controller malfunctions, or if abnormal input power causes high current in the system, the input power is connected to the circuit breaker to protect the equipment.
- Regenerative resistor
To discharge the counter electromotive force from the servomotor, connect a regenerative resistor to the servo amplifier.

2.3 PREVENTIVE MAINTENANCE

Daily maintenance and periodic maintenance/inspection ensure reliable robot performance for extended periods of time.


- (1) Daily maintenance
Before operating the system each day, clean each part of the system and check the system parts for any damage or cracks. Also, check the following:
 - (a) Before operation
Check the cable connected to the teach pendant for excessive twisting. Check the controller and peripheral devices for abnormalities.
 - (b) After operation
At the end of operation, return the robot to the specified position, and then turn off the controller. Clean each part, and check for any damage or cracks. If the ventilation port of the controller is dusty, clean it.
- (2) Check after one month
Check that the fan is rotating normally. If the fan has dirt and dust built up, clean the fan according to step (d) described below for inspection to be performed every 6 months.
- (3) Battery daily check
Replace the battery on the front panel of the main board every 4 years. Please refer to the Section 7.11.
- (4) Maintenance tools
The following maintenance tools are recommended:
 - (a) Measuring instruments
AC/DC voltmeter (A digital voltmeter is sometimes required.)
Oscilloscope with a frequency range of 5 MHz or higher, two channels
 - (b) Tools
Phillips screwdrivers: Large, medium, and small
Standard screwdrivers: Large, medium, and small
Nut driver set (Metric)

Pliers
Needle-nose pliers
Diagonal cutting pliers



3 TROUBLESHOOTING

This chapter describes the checking method and corrective action for each error code indicated if a hardware alarm occurs. Refer to the operator's manual to release program alarms.



3.1 POWER CANNOT BE TURNED ON

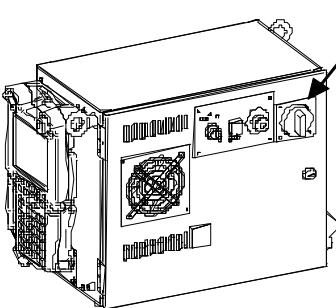Check and Corrective action		Figure
(Check 1)	Check that the circuit breaker is on and has not tripped.	
(Corrective action)	<ul style="list-style-type: none"> a) If circuit breaker is OFF. Turn on the circuit breaker. b) If the circuit breaker has tripped, find the cause by referencing the total connection diagram presented in the appendix. 	

3.1.1 When the Teach Pendant Cannot be Powered on

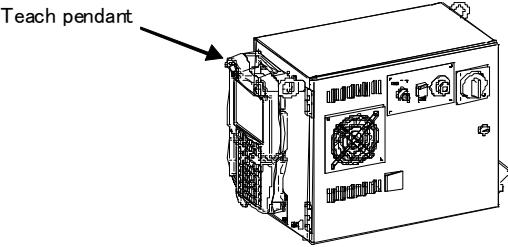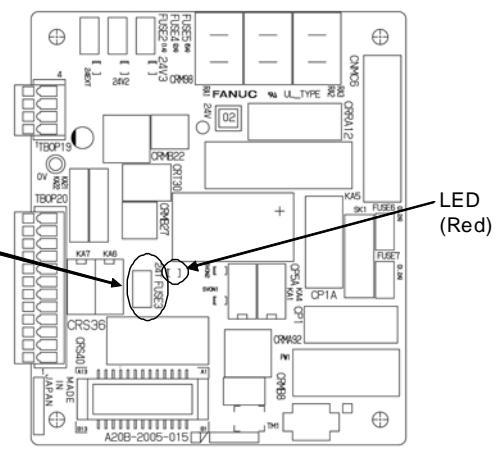Inspection and action	Illustration
<p>(Inspection 1) Confirm that fuse (FUSE3) on the emergency stop board is not blown. When it is blown, the LED on the emergency stop board lights in red. When fuse (FUSE3) is blown, carry out action 1 and replace the fuse.</p> <p>(Inspection 2) When fuse (FUSE3) is not blown, carry out action 2.</p> <p>(Action 1) (a) Check the cable of the teach pendant for failure and replace it as necessary. (b) Check the teach pendant for failure and replace it as necessary. (c) Replace the emergency stop board.</p> <p>(Action 2) When the LED on the main board does not light, replace the emergency stop unit. When the LED on the main board lights, carry out action 1.</p>	 

3.1.2 When the Teach Pendant Does not Change from the Initial Screen

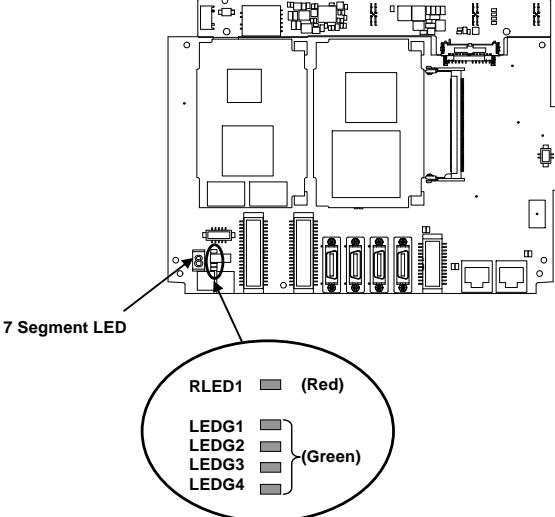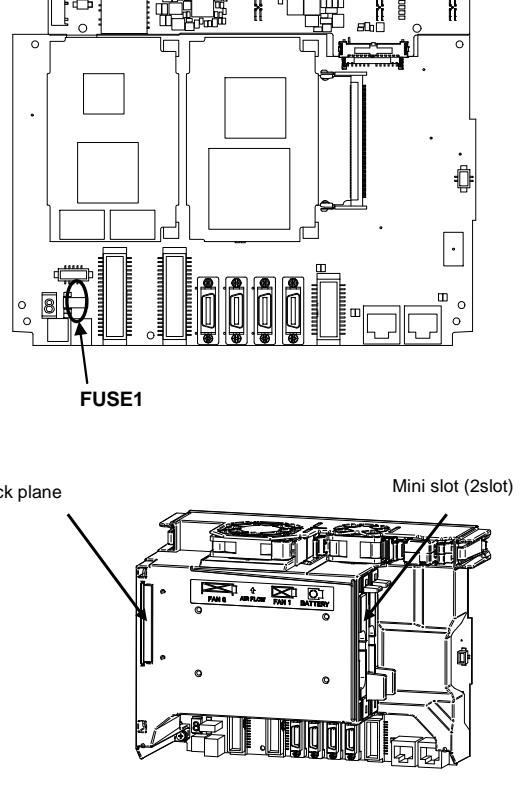Inspection and action	Illustration
<p>(Inspection 1)</p> <p>Check that the status display LED and 7-segment LED on the main board operate normally.</p> <p>(Action) Carry out an action according to the LED status. For details, see "TROUBLESHOOTING USING THE LEDS ON THE MAIN BOARD".</p>	 <p>7 Segment LED</p> <p>RLED1 (Red)</p> <p>LEDG1 LEDG2 LEDG3 LEDG4 (Green)</p>
<p>(Inspection 2)</p> <p>When the LED on the main board does not light in inspection 1, check if fuse (FUSE1) on the main board is blown.</p> <p>(a) When fuse (FUSE1) is blown See action 1.</p> <p>(b) When fuse (FUSE1) is not blown See action 2.</p> <p>(Action 1)</p> <ul style="list-style-type: none"> (a) Replace the backplane board. (b) Replace the main board. (c) When an option board is installed in the mini slot, replace the option board. <p>(Action 2)</p> <ul style="list-style-type: none"> (a) Replace the emergency stop unit. (b) Replace the cable between the main board and the emergency stop unit. (c) Replace the boards indicated in action 1. 	 <p>FUSE1</p> <p>Back plane</p> <p>Mini slot (2slot)</p>

3.2 ALARM OCCURRENCE SCREEN

The alarm occurrence screen displays only the alarm conditions that are currently active. If an alarm reset signal is input to reset the alarm conditions, the alarm occurrence screen displays the message "PAUSE or more serious alarm has not occurred."

The alarm occurrence screen displays only the alarm conditions (if any) that occur after the most recently entered alarm reset signal. To erase all alarm displays from the alarm occurrence screen. Press the CLEAR key (+ shift) on the alarm history screen.

The alarm occurrence screen is intended to display PAUSE or alarms that are more serious. It will not display WARN, NONE, or a reset. It is possible to disable PAUSE and some of more serious alarms from being displayed by setting the \$ER_NOHIS system variable appropriately.

If two or more alarms have occurred, the display begins with the most recent alarm.

Up to 100 lines can be displayed.

If an alarm has a cause code, it is displayed below the line indicating the alarm.

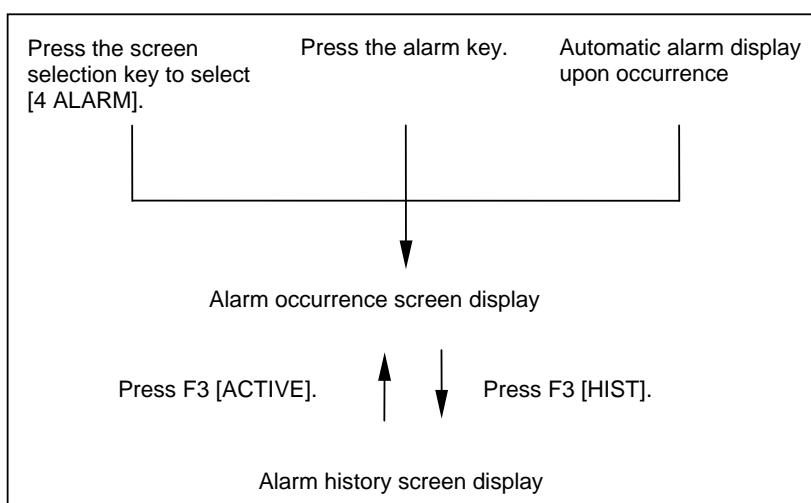


Fig.3.2 Alarm occurrence screen and alarm history screen display procedure


Displaying the alarm history/alarm detail information

Step


- (1) Press the MENU key to display the screen menu.
- (2) Select [ALARM].

You will see a screen similar to the following.

If an alarm has occurred, however, the alarm screen appears automatically.

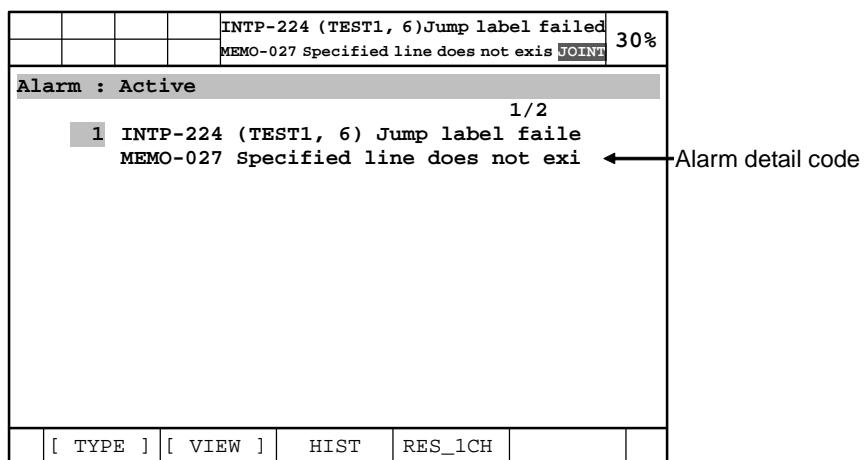


- (3) To display the alarm history screen, press F3, [HIST].
 Press F3 [ACTIVE] again, the alarm screen appears.

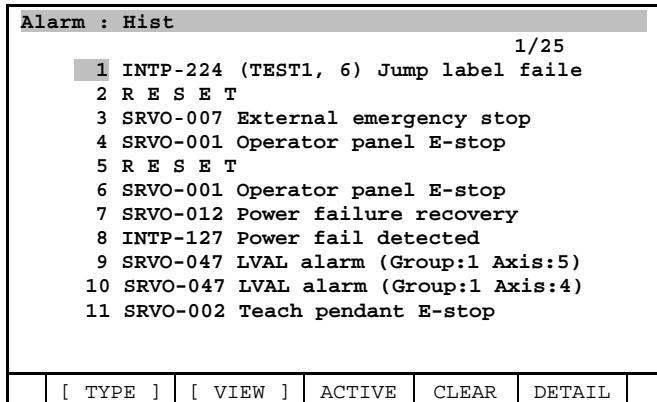**NOTE**

The latest alarm is assigned number 1. To view messages that are currently not on the screen, press the F5, HELP, and then press the right arrow key.

- (4) To display the alarm detail screen, press F5, [HELP].

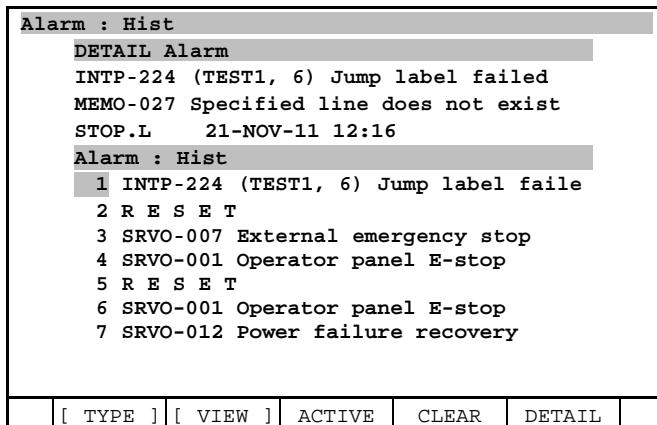


- (5) To return to the alarm history screen, press the PREV key.

- (6) To delete all the alarm histories, press and hold down the SHIFT key, then press F4, [CLEAR].

NOTE

When system variable \$ER_NOHIS = 1, NONE alarms or WARN alarms are not recorded. When \$ER_NOHIS=2, resets are not recorded in the alarm history. When \$ER_NOHIS=3, resets, WARN alarms, and NONE alarms are not recorded.

The following map indicates teach pendant operations used to check an alarm.

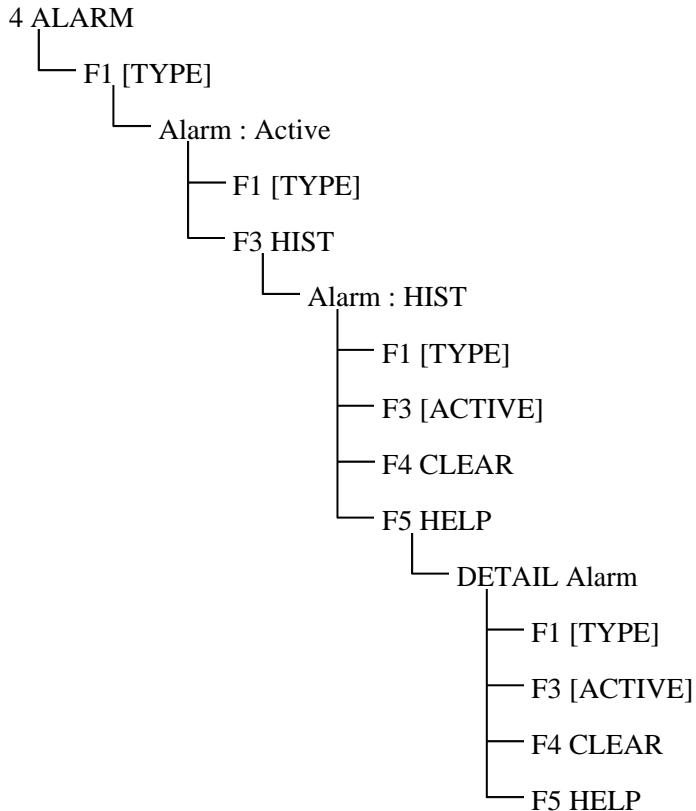

3.3 STOP SIGNALS

The stop signal screen indicates the state of signals related to stop.

To be specific, the screen indicates whether each stop signal is currently on. On this screen, it is impossible to change the state of any stop signal.


Table 3.3 Stop signals

Stop signal	Description
Operator's panel emergency stop	This item indicates the state of the emergency stop button on the operator's panel. If the EMERGENCY STOP button is pressed, the state is indicated as "TRUE".
Teach pendant emergency stop	This item indicates the state of the emergency stop button on the teach pendant. If the EMERGENCY STOP button is pressed, the state is indicated as "TRUE".
External emergency stop	This item indicates the state of the external emergency stop signal. If the EMERGENCY STOP signal is asserted, the state is indicated as "TRUE".
Fence open	This item indicates the state of the safety fence. If the safety fence is open, the state is indicated as "TRUE".
DEADMAN switch	This item indicates whether the DEADMAN switch on the teach pendant is grasped. If the teach pendant is operable, and the DEADMAN switch is grasped correctly, the state is indicated as "TRUE". If the DEADMAN switch is released or is grasped tightly when the teach pendant is operable, an alarm occurs, causing the servo power to be switched off.
Teach pendant operable	This item indicates whether the teach pendant is operable. If the teach pendant is operable, the state is indicated as "TRUE".
Hand broken	This item indicates the state of the hand safety joint. If the hand interferes with a workpiece or anything like this, and the safety joint is opened, the state is indicated as "TRUE". In this case, an alarm occurs, causing the servo power to be switched off.

Stop signal	Description
Robot overtravel	This item indicates whether the current position of the robot is out of the operation range. If any robot articulation goes out of the operation range beyond the overtravel switch, the state is indicated as "TRUE". In this case, an alarm occurs, causing the servo power to be switched off.
Abnormal air pressure	This item indicates the state of the air pressure. The abnormal air pressure signal is connected to the air pressure sensor. If the air pressure is not higher than the specified value, the state is indicated as "TRUE".

Step

- (1) Press the MENU key to display the screen menu.
- (2) Select STATUS on the next page.
- (3) Press F1, [TYPE] to display the screen switching menu.
- (4) Select Stop Signal. You will see a screen similar to the following.

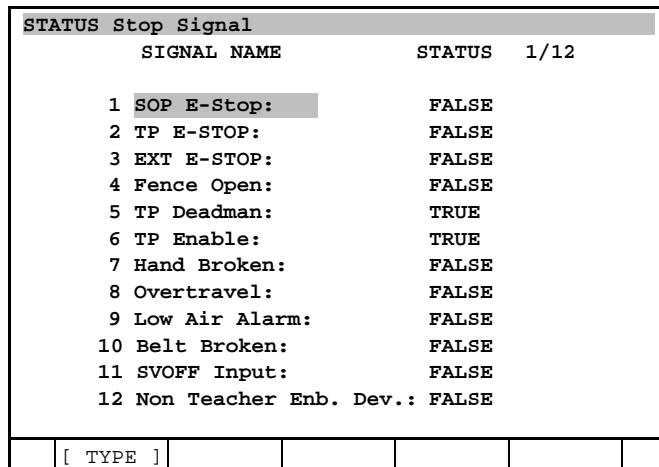

3.4 MASTERING

Mastering is needed if:


- (1) The SRVO-062 BZAL or SRVO-038 pulse mismatch alarm occurs, or
- (2) The Pulsecoder is replaced.

Item (1) requires quick mastering, while item (2) requires single axis or fixture position mastering.

The mastering procedure is described below. For details, refer to an applicable maintenance manual of mechanical unit or operator's manual of controller.


Condition

System variable \$MASTER_ENB must be set to 1 or 2.

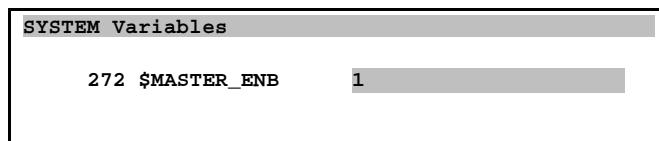


Step

- (1) Press the MENU key to display the screen menu.
- (2) Select SYSTEM on the next page.
- (3) Press F1, [TYPE] to display the screen switching menu.
- (4) Select Master/Cal you will see a screen similar to the following.
- (5) Move the robot by jog feed to the mastering position. Release the brake on the manual brake control screen if necessary.

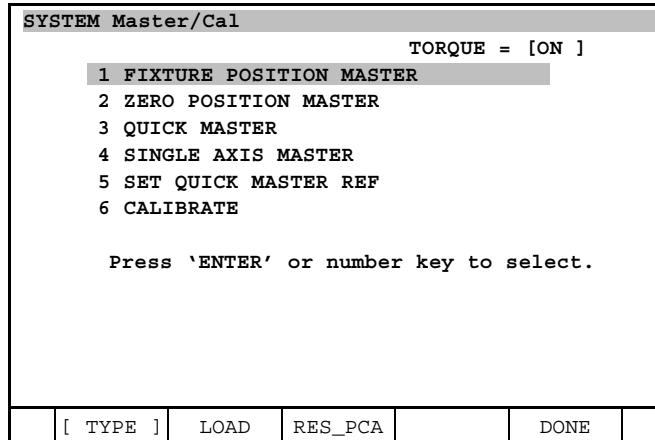**NOTE**


Mastering cannot be performed until axis is rotated enough to establish a pulse.

- (6) Select "1 FIXTURE POSITION MASTER" and press the F4 key (yes). Mastering data is set.

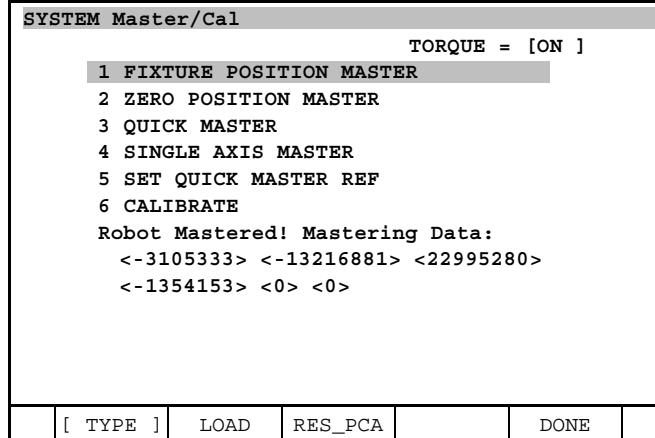

- (7) Select "6 CALIBRATE" and press the F4 key (yes). Calibration is performed.

Alternatively, to perform positioning, turn the power off, and then turn it on again. Calibration is performed whenever the power is turned on.

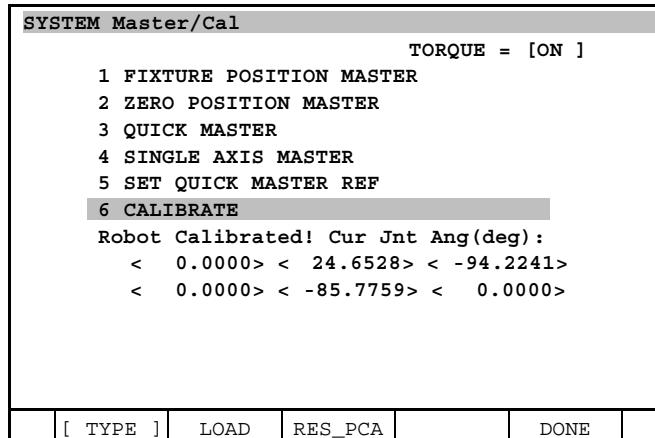

- (8) Press F5 "DONE", after mastering.
 (9) Restore the brake condition to its original condition.

3.5 TROUBLESHOOTING USING THE ERROR CODE

SRVO-001 Operator panel E-stop

- (Explanation) The emergency stop button on the operator's panel is pressed.
- (Action 1) Release the emergency stop button pressed on the operator's panel.
- (Action 2) Check the wires connecting between the emergency stop button and the emergency stop board (CRT30) for continuity. If an open wire is found, replace the entire harness.
- (Action 3) Check the wires connecting between the teach pendant and the emergency stop board (CRS36) for continuity. If an open wire is found, replace the entire harness.
- (Action 4) With the emergency stop in the released position, check for continuity across the terminals of the switch. If continuity is not found, the emergency stop button is broken. Replace the emergency stop button or the operator's panel.
- (Action 5) Replace the teach pendant.
- (Action 6) Replace the emergency stop board.

Before executing the (Action 7), perform a complete controller back-up to save all your programs and settings.

- (Action 7) Replace the main board.

NOTE

If SRVO-001 is issued together with SRVO-213, a fuse may have blown. Take the same actions as for SRVO-213.

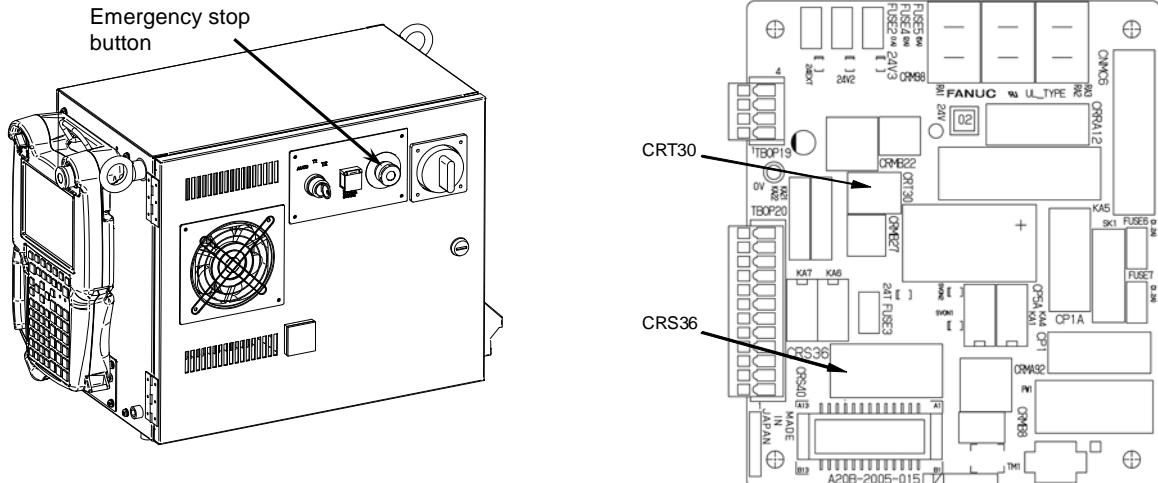


Fig.3.5 (a) SRVO-001 Operator panel E-stop

SRVO-002 Teach pendant E-stop

- (Explanation) The emergency stop button on the teach pendant was pressed.
 (Action 1) Release the emergency stop button on the teach pendant.
 (Action 2) Replace the teach pendant.

SRVO-003 DEADMAN switch released

- (Explanation) The teach pendant is enabled, but the DEADMAN switch is not pressed. Alternatively, the DEADMAN switch is pressed strongly.
 (Action 1) Check the intermediate position of the DEADMAN switch on the teach pendant.
 (Action 2) Check that the mode switch on the operator's panel and the enable/disable switch on the teach pendant are at the correct positions.
 (Action 3) Replace the teach pendant.
 (Action 4) Check the mode switch connection and operation. If trouble is found, replace the mode switch.
 (Action 5) Replace the emergency stop board.

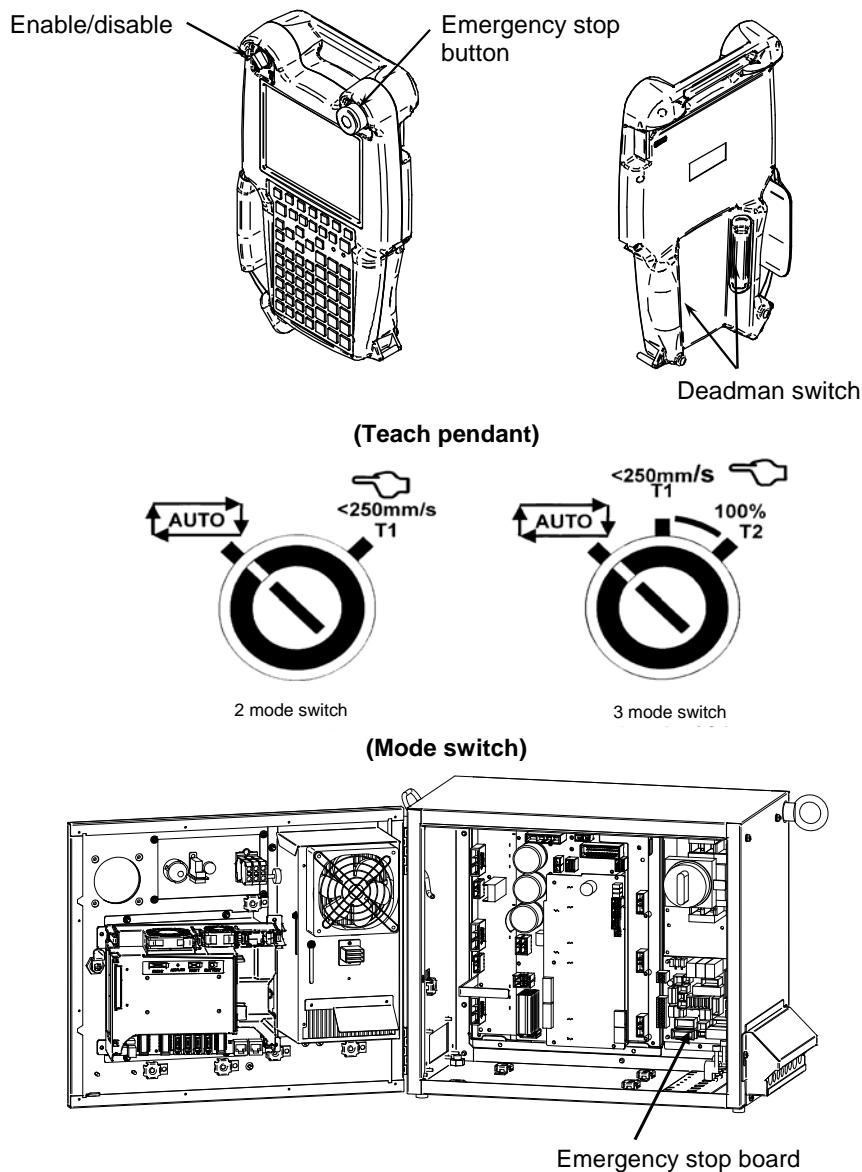


Fig.3.5 (b)

SRVO-002 Teach pendant E-stop
SRVO-003 Mode switch and emergency stop board

SRVO-004 **Fence open**

- (Explanation) In the automatic operation mode, the safety fence contact connected to EAS1-EAS11 or EAS2-EAS21 of TBOP20 is open.

(Action 1) When a safety fence is connected, close the safety fence.

(Action 2) Check the cables and switches connected between EAS1 and EAS11 and between EAS2 and EAS21 of the terminal block TBOP20 on the emergency stop board.

(Action 3) If the safety fence signal is not used, make a connection between EAS1 and EAS11 and between EAS2 and EAS21 of the terminal block TBOP20 on the emergency stop board.

(Action 4) Check the mode switch. If trouble is found, replace the mode switch.

(Action 5) Replace the emergency stop board.

NOTE

If SRVO-004 is issued together with SRVO-213, a fuse may have blown. Take the same actions as for SRVO-213.

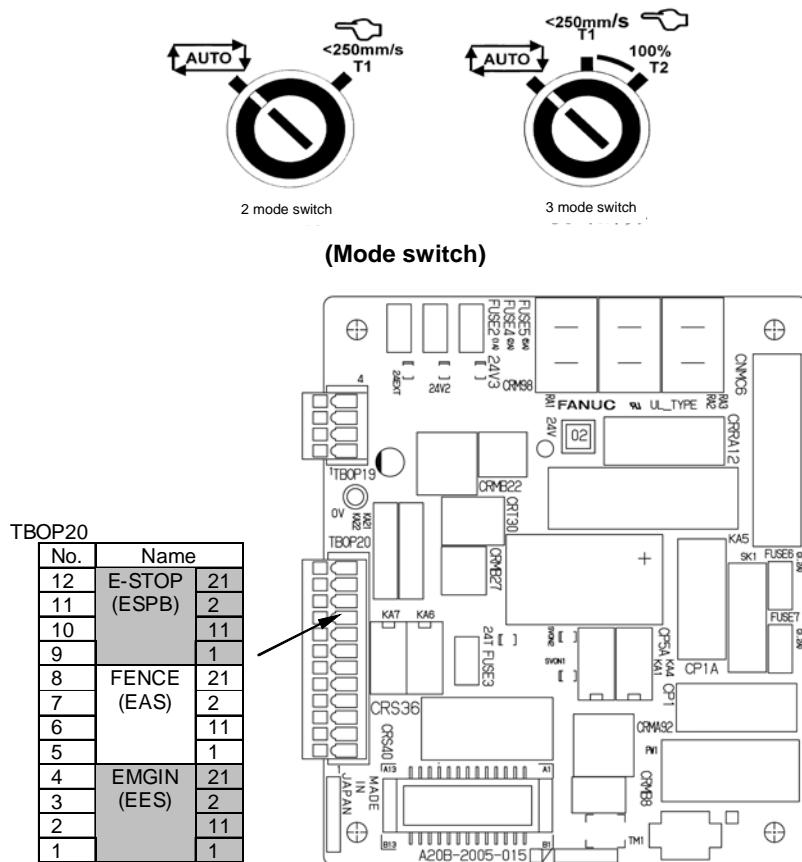


Fig.3.5 (c) SRVO-004 Fence open



WARNING

In a system using the safety fence signal, it is very dangerous to disable the signal when a connection is made between EAS1 and EAS11 and between EAS2 and EAS21. Never make such an attempt. If a temporary connection is needed for operation, separate safety measures must be taken.

SRVO-005 Robot overtravel

- (Explanation) The robot has moved beyond a hardware limit switch on the axes.
- (Action 1) 1) Select [System OT release] on the overtravel release screen to release each robot axis from the overtravel state.
2) Hold down the shift key, and press the alarm release button to reset the alarm condition.
3) Still hold down the shift key, and jog to bring all axes into the movable range.
- (Action 2) Replace the limit switch.
- (Action 3) Check the FS2 fuse on the servo amplifier. If the SRVO-214 fuse blown alarm is also generated, the FS2 fuse has blown.
- (Action 4) Check the EE connector.
- (Action 5) Replace the 6-Axis servo amplifier.
- (Action 6) Verify the following for connector RMP1, RP1 at the base of the robot:
1) There are no bent or dislocated pins in the male or female connectors.
2) The connector is securely connected.
Then verify that connectors CRF8 and CRM68 on the servo amplifier are securely connected. Also, verify that the robot connection cable (RMP1, RP1) is in good condition, and there are no cuts or kinks visible. Check the internal cable of the robot for a short circuit or connection to ground.

NOTE



It is factory-placed in the overtravel state for packing purposes.
If the Overtravel signal is not in use, it may have been disabled by short-circuiting in the mechanical unit.

SRVO-006 Hand broken

- (Explanation) The safety joint (if in use) might have been broken. Alternatively, the HBK signal on the robot connection cable might be a ground fault or a cable disconnection.
- (Action 1) Hold down the shift key, and press the alarm release button to reset the alarm condition. Still hold down the shift key, and jog the tool to the work area.
1) Replace the safety joint.
2) Check the safety joint cable.
- (Action 2) Replace the 6-Axis servo amplifier.
- (Action 3) Verify the following for connector RMP1, RP1 at the base of the robot:
1) There are no bent or dislocated pins in the male or female connectors.
2) The connector is securely connected.
Then verify that connectors CRF8 and CRM68 on the servo amplifier are securely connected. Also, verify that the robot connection cable (RMP1, RP1) is in good condition, and there are no cuts or kinks visible. Check the internal cable of the robot for a short circuit or connection to ground.

NOTE

If the Hand broken signal is not in use, it can be disabled by software setting.
Refer to Subsection 5.6.3 in CONNECTIONS to disable the Hand broken signal.

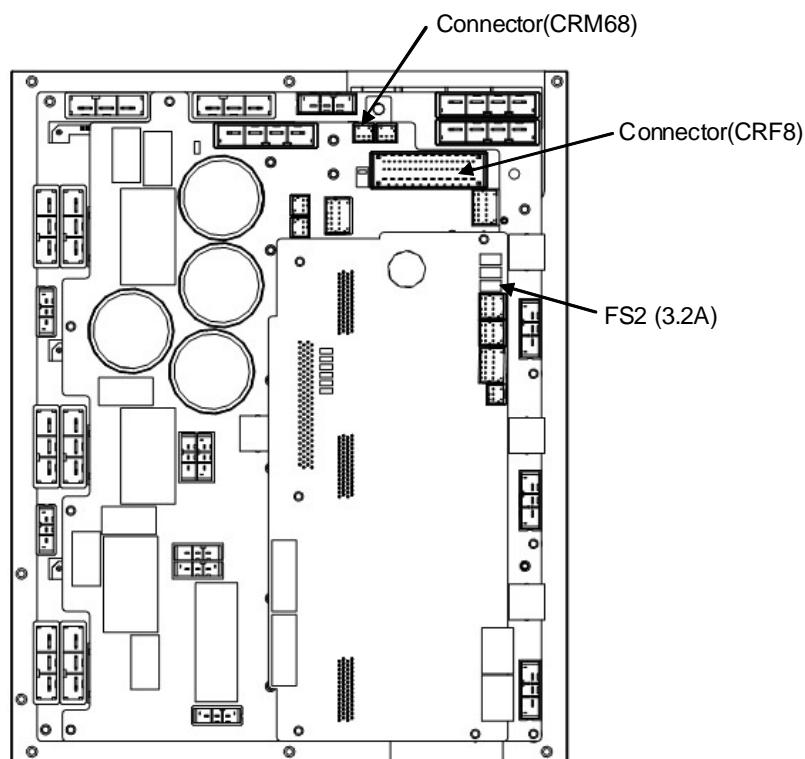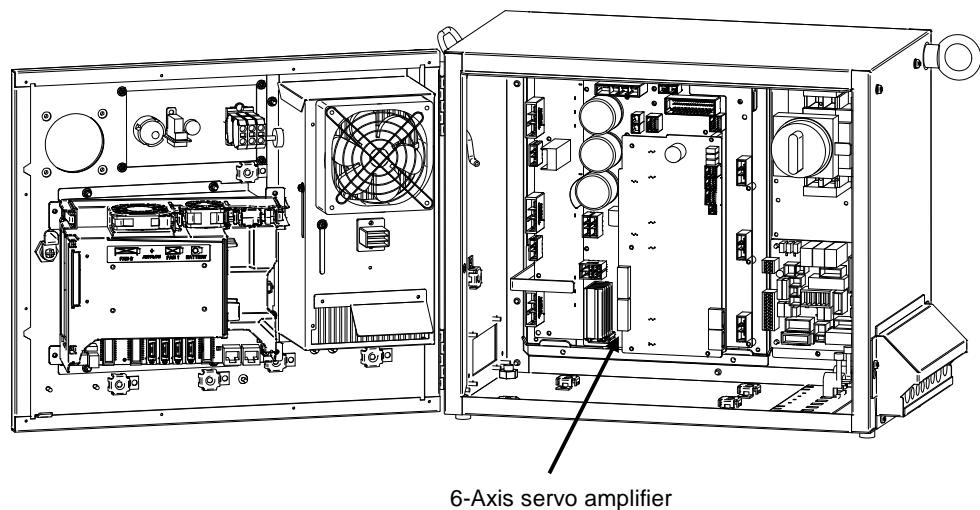

(6-Axis servo amplifier)

Fig.3.5 (d)

SRVO-005 Robot overtravel
SRVO-006 Hand broken

SRVO-007 External E-stop

- (Explanation) On the terminal block TBOP20 of the emergency stop board, no connection of external emergency stop is made between EES1 and EES11, EES2 and EES21.
- (Action 1) If an external emergency stop switch is connected, release the switch.
- (Action 2) Check the switch and cable connected to EES1-EES11 and EES2-EES21 on TBOP20 of the emergency stop board.
- (Action 3) When this signal is not used, make a connection between EES1 and EES11, EES2 and EES21.
- (Action 4) Replace the emergency stop board.

NOTE

If SRVO-007 is issued together with SRVO-213, a fuse may have blown. Take the same actions as for SRVO-213.

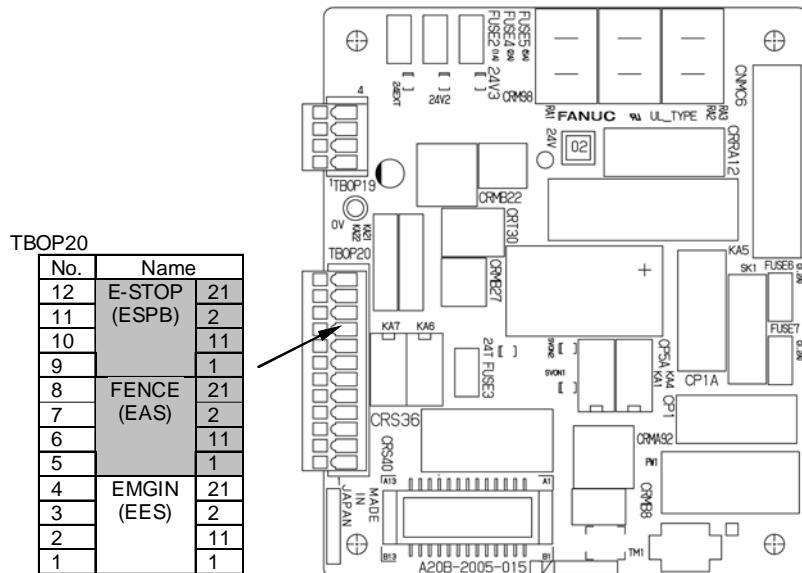


Fig.3.5 (e) SRVO-007 External E-stop

**WARNING**

In a system using the external emergency stop signal, it is very dangerous to disable the signal when a connection is made between EES1 and EES11 and between EES2 and EES21. Never make such an attempt. If a temporary connection is needed for operation, separate safety measures must be taken.

SRVO-009 Pneumatic pressure alarm

- (Explanation) An abnormal air pressure was detected. The input signal is located on the end EE interface of the robot. Refer to the manual of your robot.
- (Action 1) If an abnormal air pressure is detected, check the cause.
- (Action 2) Check the EE connector.
- (Action 3) Check the robot connection cable (RMP1, RP1) and the internal cable of the robot for a ground fault or a cable disconnection. If a fault or a disconnection is detected, replace the cable.
- (Action 4) Replace the 6-Axis servo amplifier.
- (Action 5) Replace the internal cables of the robot.

NOTE

Pneumatic pressure alarm input is on the EE interface. Please refer to the manual of your robot.

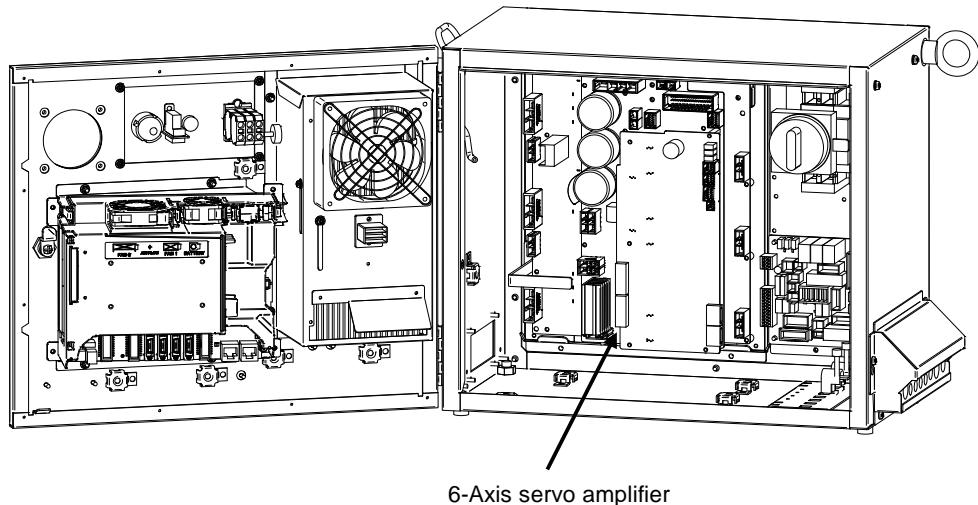


Fig.3.5 (f) **SRVO-009 Pneumatic pressure alarm**

SRVO-014 Fan motor abnormal (n), CPU STOP

(Explanation) When a fan motor stops on backplane unit, Teach pendant shows the following message. In one minutes from occurring of alarm, robot stops and cannot be operated from TP. The robot can be recovered by replacing a fan motor. Number in the bracket indicates which fan is abnormal.

(1): FAN0

(2): FAN1

(3): both fans

(Action 1) Check the fan motor and its cables. Replace them if necessary.

(Action 2) Replace the fan board.

Before executing the (Action 3), perform a complete controller back up to save all your programs and settings.

(Action 3) Replace the main board.

NOTE

The controller will stop operation after 1 minutes of this alarm.

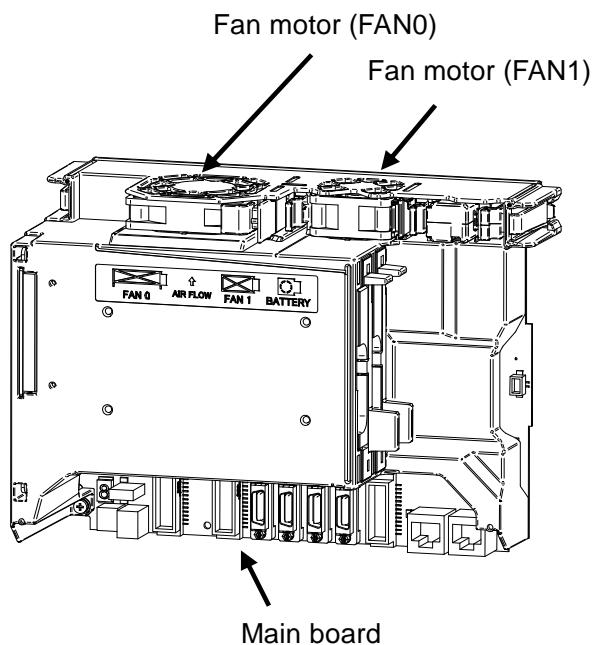


Fig.3.5 (g) SRVO-014 Fan motor abnormal

SRVO-015 SYSTEM OVER HEAT

- (Explanation) The temperature in the controller exceeds the specified value. In one minutes from occurring of alarm, robot stops and cannot be operated from TP.
- (Action 1) If the ambient temperature is higher than specified (45°C), cool down the ambient temperature.
- (Action 2) If the fan motor is not running, check it, its cables and related fuses. Replace them if necessary.

Before executing the (Action 3), perform a complete controller backup to save all your programs and settings.

- (Action 3) Replace the main board. (The thermostat on the main board may be faulty.)

NOTE

The controller will stop operation after 1 minutes of this alarm.

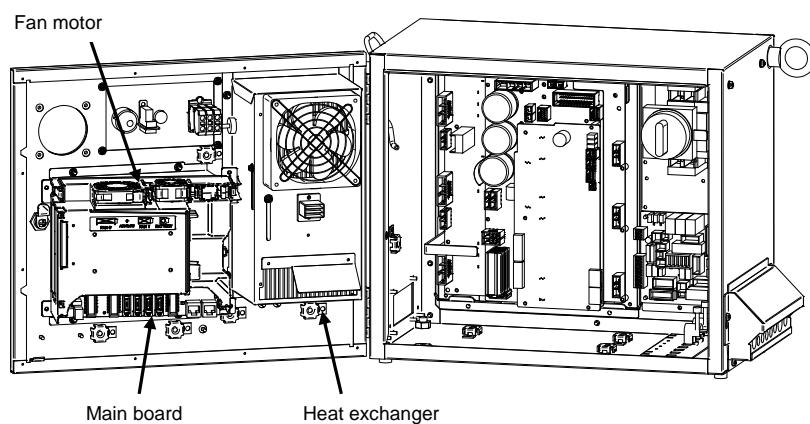
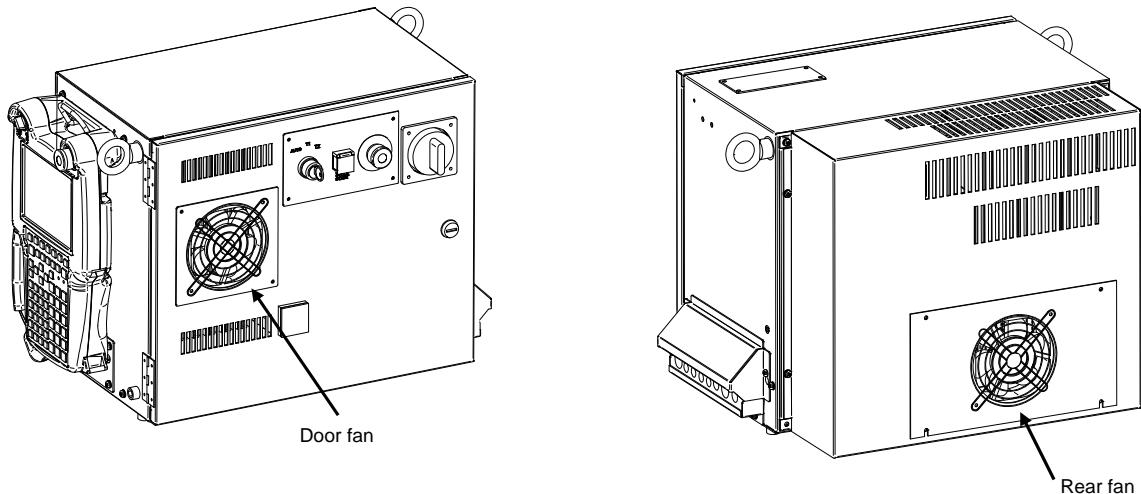


Fig.3.5 (h) SRVO-015 SYSTEM OVER HEAT

SRVO-018 Brake abnormal (G:i A:j)

- (Explanation) An excessive brake current is detected. The ALM LED (SVALM) on the 6-Axis servo amplifier is lit.
- (Action 1) Check the robot connection cable (RMP1, RP1) and the internal cable of the robot and motor brakes connected to CRR88 connector on the 6-Axis servo amplifier.
If a short-circuit or grounding fault is found, replace the failed part.
- (Action 2) Check the cables and motor brakes connected to CRR65A, CRR65B connector on the 6-Axis servo amplifier. If a short-circuit or grounding fault is found, replace the failed part.
- (Action 3) Replace the 6-Axis servo amplifier.

⚠ CAUTION

This error can be caused by the optional brake release unit if the on/off switch is left in on position while the operator attempts to jog the robot. To recover, turn the brake release unit off and cycle the controller power.

SRVO-021 SRDY off (Group:i Axis:j)

- (Explanation) The HRDY is on and the SRDY is off, although there is no other cause of an alarm. (HRDY is a signal with which the host detects the servo system whether to turn on or off the servo amplifier magnetic contactor. SRDY is a signal with which the servo system informs the host whether the magnetic contactor is turned on.)
If the servo amplifier magnetic contactor cannot be turned on when directed so, it is most likely that a servo amplifier alarm has occurred. If a servo amplifier alarm has been detected, the host will not issue this alarm (SRDY off). Therefore, this alarm indicates that the magnetic contactor cannot be turned on for an unknown reason.
- (Action 1) Make sure that the emergency stop board connectors CP5A, CRMA92, CRMB22, and 6-Axis servo amplifier CRMA91 are securely attached to the servo amplifier.
- (Action 2) It is possible that an instant disconnection of power source causes this alarm. Check whether an instant disconnection occurred.
- (Action 3) Replace the E-stop unit.
- (Action 4) Replace the servo amplifier.

SRVO-022 SRDY on (Group:i Axis:j)

- (Explanation) When the HRDY is about to go on, the SRDY is already on. (HRDY is a signal with which the host directs the servo system whether to turn on or off the servo amplifier magnetic contactor. SRDY is a signal with which the servo system informs the host whether the magnetic contactor is turned on.)
- (Action 1) Replace the servo amplifier as the alarm message.

SRVO-023 Stop error excess (G:i A:j)

- (Explanation) When the servo is at stop, the position error is abnormally large.
Check whether the brake is released through the clack sound of the brake or vibration.
In case that the brake is not released.
- (Action 1) If the brake is not released, check the continuity of the brake line in the robot connection cable and the robot internal cable.
- (Action 2) If the disconnection is not found, replace the 6-Axis servo amplifier or the servo motor.

In case that the brake is released.

- (Action 1) Check whether the obstacle disturbs the robot motion.
- (Action 2) Make sure that connectors CNJ1A-CNJ6 are securely attached to the 6-Axis servo amplifier.

- (Action 3) Check the continuity of the robot connection cable and the internal robot power cable.
- (Action 4) Check to see if the load is greater than the rating. If greater, reduce it to within the rating. (If the load is too great, the torque required for acceleration / deceleration becomes higher than the capacity of the motor.
As a result, the motor becomes unable to follow the command, and an alarm is issued.)
- (Action 5) Check the input voltage to the controller is within the rated voltage and no phase is lack.
Check each phase voltage of the CRR38A or CRR38B connector of the three-phase power (200 VAC) input to the 6-Axis servo amplifier. If it is 210 VAC or lower, check the line voltage. (If the voltage input to the 6-Axis servo amplifier becomes low, the torque output also becomes low. As a result, the motor may become unable to follow the command, hence possibly causing an alarm.).
- (Action 6) Replace the servo amplifier.
- (Action 7) Replace the motor of the alarm axis.

NOTE

Incorrect setting of the brake number causes this alarm.

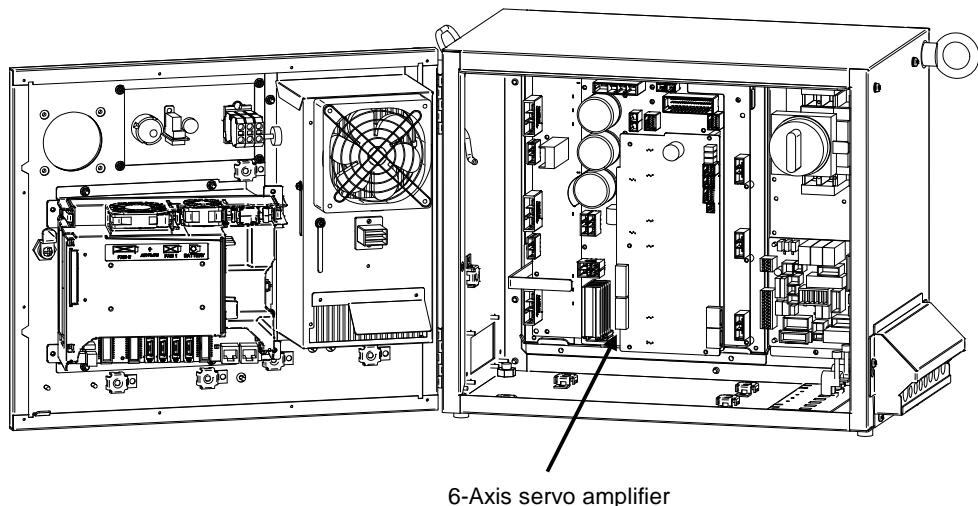


Fig.3.5 (i)

SRVO-018 Brake abnormal
SRVO-021 SRDY off
SRVO-022 SRDY on
SRVO-023 Stop error excess

SRVO-024 Move error excess (G:i A:j)

(Explanation) When the robot is running, its position error is greater than a specified value (\$PARAM _ GROUP. \$MOVER _ OFFST). It is likely that the robot cannot follow the speed specified by program.

- (Action 1) Take the same actions as SRVO-023.

SRVO-027 Robot not mastered (Group:i)

(Explanation) An attempt was made to calibrate the robot, but the necessary adjustment had not been completed.

- (Action) Check whether the mastering is valid. If the mastering is invalid, master the robot.

⚠ WARNING

If the position data is incorrect, the robot or additional axis can operate abnormally, set the position data correctly. Otherwise, you could injure personnel or damage equipment.

SRVO-030 Brake on hold (Group:i)

- (Explanation) If the temporary halt alarm function is enabled (\$SCR.\$BRKHOLD ENB=1), SRVO-030 is issued when a temporary halt occurs. When this function is not used, disable the setting.
 (Action) Disable [Servo-off in temporary halt] on the general item setting screen [6 General Setting Items].

SRVO-033 Robot not calibrated (Group:i)

- (Explanation) An attempt was made to set up a reference point for quick mastering, but the robot had not been calibrated.
 (Action) Calibrate the robot.
 1. Supply power.
 2. Set up a quick mastering reference point using [Positioning] on the positioning menu.

SRVO-034 Ref pos not set (Group:i)

- (Explanation) An attempt was made to perform quick mastering, but the reference point had not been set up.
 (Action) Set up a quick mastering reference point on the positioning menu.

SRVO-036 Inpos time over (G:i A:j)

- (Explanation) The robot did not get to the effective area (\$PARAM _ GROUP.\$ STOPTOL) even after the position check monitoring time (\$PARAM _ GROUP. \$INPOS _ TIME) elapsed.
 (Action) Take the same actions as for SRVO-023 (large position error at a stop).

SRVO-037 IMSTP input (Group:i)

- (Explanation) The *IMSTP signal for a peripheral device interface was input.
 (Action) Turn on the *IMSTP signal.

SRVO-038 Pulse mismatch (Group:i Axis:j)

- (Explanation) The pulse count obtained when power is turned off does not match the pulse count obtained when power is applied. This alarm is asserted after exchange the Pulsecoder or battery for back up of the Pulsecoder data or loading back up data to the Main Board.

Check the alarm history.


- (Action 1) If the brake number is set to the non-brake motors, this alarm may occur. Check the software setting of the brake number.
 (Action 2) In case the robot has been moved by using the brake release unit while the power is off or when restoring the back-up data to the main board, this alarm may occur. Remaster the robot.
 (Action 3) If the robot has been moved because the brake failed, this alarm may occur. Check the cause of the brake trouble. Then remaster the robot.
 (Action 4) Replace the Pulsecoder and master the robot.

SRVO-043 DCAL alarm (Group:i Axis:j)

- (Explanation) The regenerative discharge energy was too high to be dissipated as heat. (To run the robot, the servo amplifier supplies energy to the robot. When going down the

vertical axis, the robot operates from the potential energy. If a reduction in the potential energy is higher than the energy needed for acceleration, the servo amplifier receives energy from the motor. A similar phenomenon occurs even when no gravity is applied, for example, at deceleration on a horizontal axis. The energy that the servo amplifier receives from the motor is called the regenerative energy. The servo amplifier dissipates this energy as heat. If the regenerative energy is higher than the energy dissipated as heat, the difference is stored in the servo amplifier, causing an alarm.)

- (Action 1) This alarm may occur if the axis is subjected to frequent acceleration/deceleration or if the axis is vertical and generates a large amount of regenerative energy.
If this alarm has occurred, relax the service conditions.
- (Action 2) Check fuse (FS3) in the 6-Axis servo amplifier. If it has blown, remove the cause, and replace the fuse.
- (Action 3) The ambient temperature is excessively high. Or the regenerative resistor can't be cooled effectively. Check the external fan unit and related fuses. Clean up the fun unit, the regenerative resistor and the louver if they are dirty.
- (Action 4) Make sure that the 6-Axis servo amplifier CRR63A and CRR63B connectors are connected tightly. Then detach the cable from CRR63A and CRR63B connectors on the 6-Axis servo amplifier, and check for continuity between pins 1 and 2 of the cable-end connector. If there is no continuity between the pins, replace the regenerative resistor.
- (Action 5) Make sure that the 6-Axis servo amplifier CRRA11A and CRRA11B are connected tightly, then detach the cables from CRRA11A and CRRA11B on the 6-Axis servo amplifier and check the resistance between pins 1 and 3 of each cable end connector. If the resistance is not 6.5Ω , replace the regenerative resistor. CRRA11B may not be used depending on the robot model.
- (Action 6) Replace the 6-Axis servo amplifier.

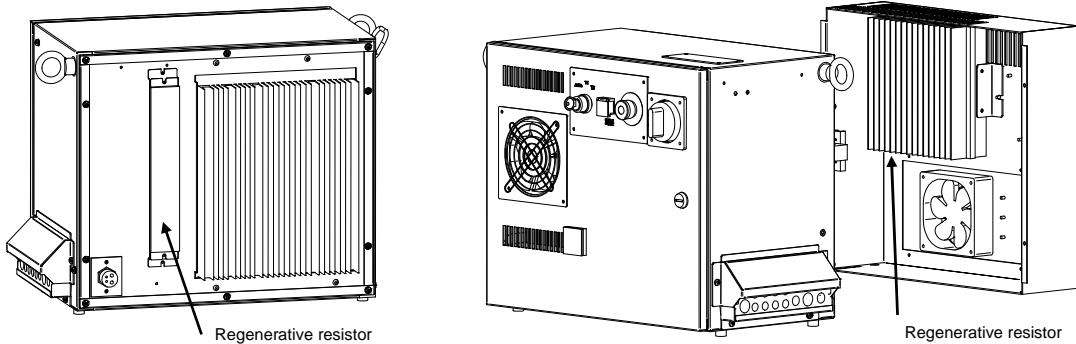

(Small size)

Fig.3.5 (ja)

(Middle/Large size)

SRVO-043 DCAL alarm

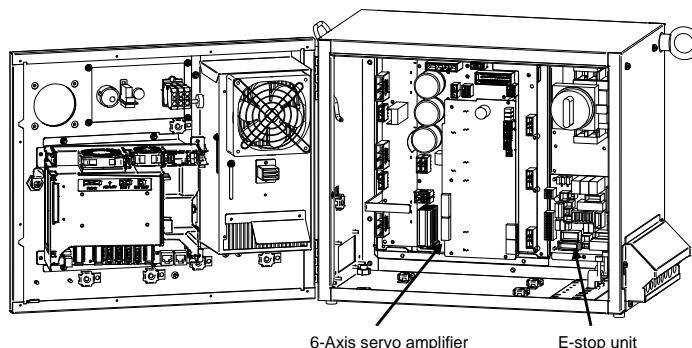


Fig.3.5 (jb)

SRVO-043 DCAL alarm

SRVO-044 DCHVAL%s alarm (G:i A:j)

- (Explanation) The DC voltage (DC link voltage) of the main circuit power supply is abnormally high.
- (Action 1) Check the input voltage to the controller is within the rated voltage. And check the setting of the transformer is correct.
- (Action 2) Check the three-phase input voltage at the 6-Axis servo amplifier. If it is 240 VAC or higher, check the line voltage. (If the three-phase input voltage is higher than 240 VAC, high acceleration/deceleration can cause in this alarm.)
- (Action 3) Check that the load weight is within the rating. If it is higher than the rating, reduce it to within the rating. (If the machine load is higher than the rating, the accumulation of regenerative energy might result in the HVAL alarm even when the three-phase input voltage is within the rating.)
- (Action 4) Check that the CRRA11A and CRRA11B connectors of the 6-Axis servo amplifier are attached firmly. Next, detach the cables then check the continuity between pins. If the resistance is not 6.5Ω , replace the regenerative resistor. CRRA11B may not be used depending on the robot model.
- (Action 5) Replace the 6-Axis servo amplifier.

SRVO-045 HCAL alarm (Group:i Axis:j)

- (Explanation) Abnormally high current flowed in the main circuit of the servo amplifier.
- (Action 1) Turn off the power, and disconnect the power cable from the servo amplifier indicated by the alarm message. (And disconnect the brake cable (CRR88 on the 6-Axis servo amplifier) to avoid the axis falling unexpectedly.) Supply power and see if the alarm occurs again. If the alarm occurs again, replace the servo amplifier.
- (Action 2) Turn off the power and disconnect the power cable from the servo amplifier indicated by the alarm message, and check the insulation of their U, V, W and the GND lines each other. If there is a short-circuit, replace the power cable.
- (Action 3) Turn off the power and disconnect the power cable from the servo amplifier by the alarm message, and measure the resistance between their U and V, V and W and W and U with an ohmmeter that has a very low resistance range. If the resistances at the three places are different from each other, the motor, the power cable is defective. Check each item in detail and replace it if necessary.

SRVO-046 OVC alarm (Group:i Axis:j)

- (Explanation) This alarm is issued to prevent the motor from thermal damage that might occur when the root mean square current calculated within the servo system is out of the allowable range.
- (Action 1) Check the operating condition for the robot and relax the service condition if possible. If the load or operating condition has exceeded the rating, reduce the load or relax the operating condition to meet the rating.
- (Action 2) Check whether the voltage input to the controller is within the rated voltage.
- (Action 3) Check whether the brake of the corresponding axis is released.
- (Action 4) Check whether there is a factor that has increased the mechanical load on the corresponding axis.
- (Action 5) Replace the servo amplifier.
- (Action 6) Replace the motor of the corresponding axis.
- (Action 7) Replace the E-stop unit
- (Action 8) Replace the motor power line (robot connection cable) of the corresponding axis.
- (Action 9) Replace the motor power line and brake line (internal cable of the robot) of the corresponding axis.

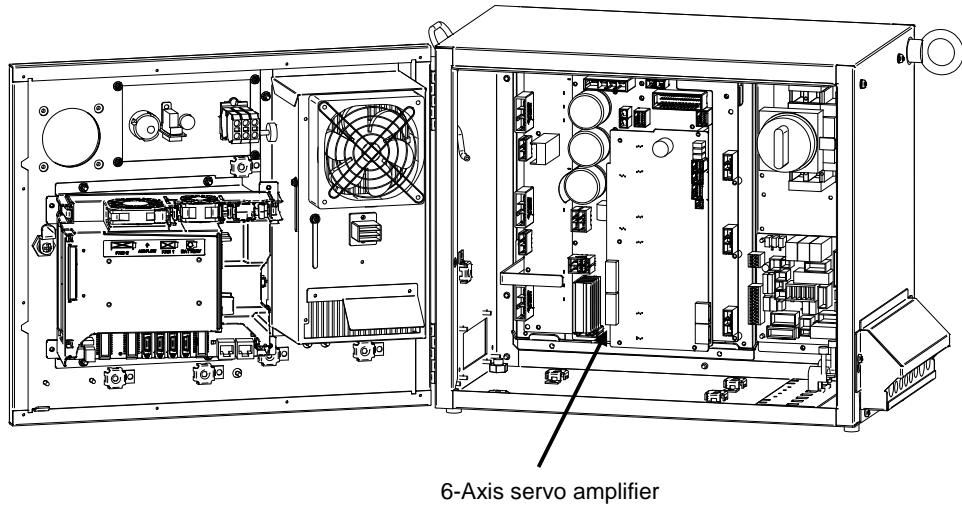


Fig.3.5(k)

SRVO-044 HVAL alarm**SRVO-045 HCAL alarm****SRVO-046 OVC alarm**

Reference

Relationships among the OVC, OHAL, and HC alarms

- **Overview**

This section points out the differences among the OVC, OHAL, and HC alarms and describes the purpose of each alarm.

- **Alarm detection section**

Abbreviation	Designation	Detection section
OVC	Overcurrent alarm	Servo software
OHAL	Overheat alarm	Thermal relay in the motor Thermal relay in the servo amplifier Thermal relay in the separate regenerative resistor
HC	High current alarm	Servo amplifier

- **Purpose of each alarm**

- 1) HC alarm (high current alarm)

If high current flow in a power transistor momentarily due to abnormality or noise in the control circuit, the power transistor and rectifier diodes might be damaged, or the magnet of the motor might be degaussed. The HC alarm is intended to prevent such failures.

- 2) OVC and OHAL alarms (overcurrent and overload alarms)

The OVC and OHAL alarms are intended to prevent overheat that may lead to the burnout of the motor winding, the breakdown of the servo amplifier transistor, and the separate regenerative resistor.

The OHAL alarm occurs when each built-in thermal relay detects a temperature higher than the rated value. However, this method is not necessarily perfect to prevent these failures. For example, if the motor frequently repeats to start and stop, the thermal time constant of the motor, which has a large mass, becomes higher than the time constant of the thermal relay, because these two components are different in material, structure, and dimension. Therefore, if the motor continues to start and stop within a short time as shown in Fig. 3.5 (p), the temperature rise in the motor is steeper than that in the thermal relay, thus causing the motor to burn before the thermal relay detects an abnormally high temperature.

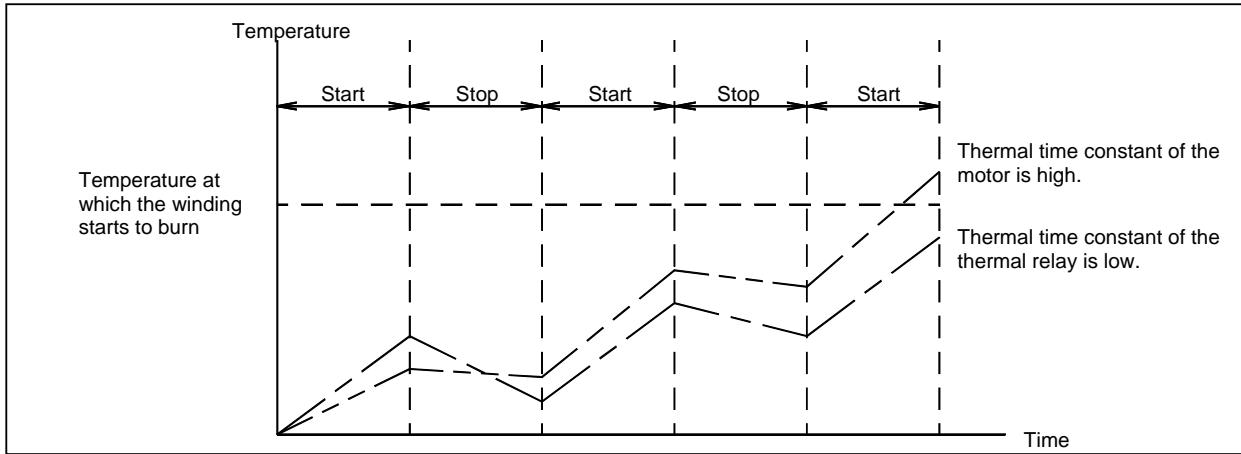


Fig.3.5 (l) Relationship between the temperatures of the motor and thermal relay on start/stop cycles

To prevent the above defects, software is used to monitor the current in the motor constantly in order to estimate the temperature of the motor. The OVC alarm is issued based on this estimated temperature. This method estimates the motor temperature with substantial accuracy, so it can prevent the failures described above.

To sum up, a double protection method is used; the OVC alarm is used for protection from a short-time overcurrent, and the OHAL alarm is used for protection from long-term overload. The relationship between the OVC and OHAL alarms is shown in Fig.3.5 (q).

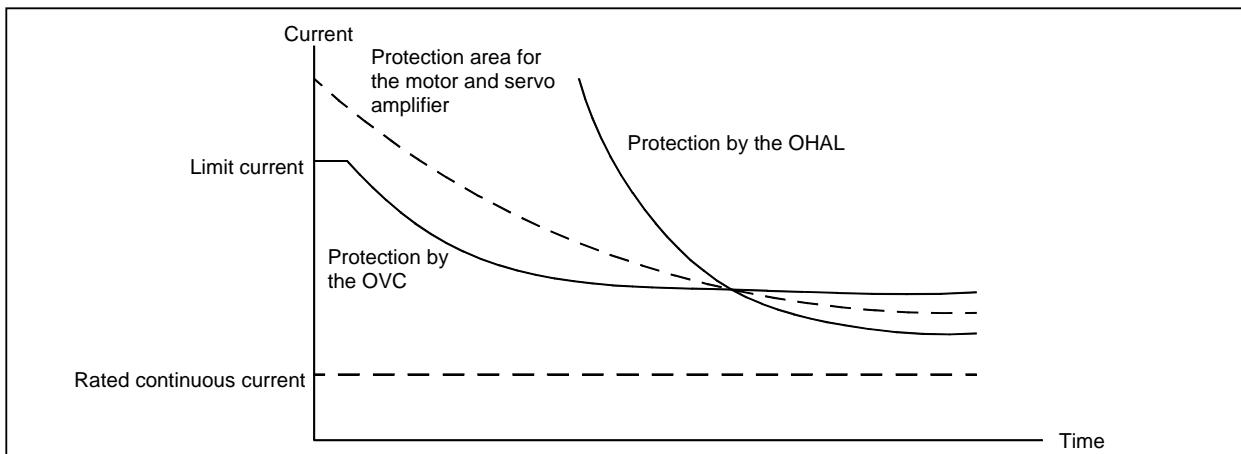



Fig.3.5 (m) Relationship between the OVC and OHAL alarms

NOTE

The relationship shown in Fig.3.5 (q) is taken into consideration for the OVC alarm. The motor might not be hot even if the OVC alarm has occurred. In this case, do not change the parameters to relax protection.

SRVO-047 LVAL alarm (Group:i Axis:j)

- (Explanation) The control power supply voltage (+5 V, etc.) supplied from the power supply circuit in the servo amplifier is abnormally low.
- (Action 1) Replace the servo amplifier.
- (Action 2) Replace the power supply unit.

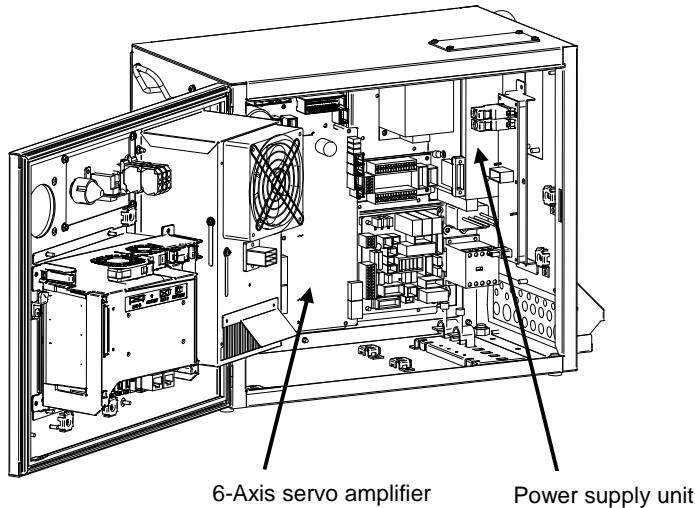**Fig.3.5 (n) SRVO-047 LVAL alarm****SRVO-049 OHAL1 alarm (Grp:i Ax:j)**

- (Explanation) The 6-Axis servo amplifier detects transformer overheat signal.
- (Action 1) Check that a connection is made between the 6-Axis servo amplifier CRMA91.
- (Action 2) Replace the 6-Axis servo amplifier.

SRVO-050 Collision Detect alarm (G:i A:j)

- (Explanation) The disturbance torque estimated by the servo software is abnormally high. (A collision has been detected.)
- (Action 1) Check whether the robot has collided and also check whether there is a factor that has increased the mechanical load on the corresponding axis.
- (Action 2) Check whether the load settings are valid.
- (Action 3) Check whether the brake of the corresponding axis is released.
- (Action 4) If the load weight exceeds the rated range, decrease it to within the limit.
- (Action 5) Check whether the voltage input to the controller is within the rated voltage.
- (Action 6) Replace the servo amplifier.
- (Action 7) Replace the motor of the corresponding axis.
- (Action 8) Replace the E-stop unit.
- (Action 9) Replace the motor power line (robot connection cable) of the corresponding axis.
- (Action 10) Replace the motor power line and brake line (internal cable of the robot) of the corresponding axis.

SRVO-051 CUER alarm (Group:i Axis:j)

- (Explanation) The offset of the current feedback value is abnormally high.
- (Action) Replace the servo amplifier.

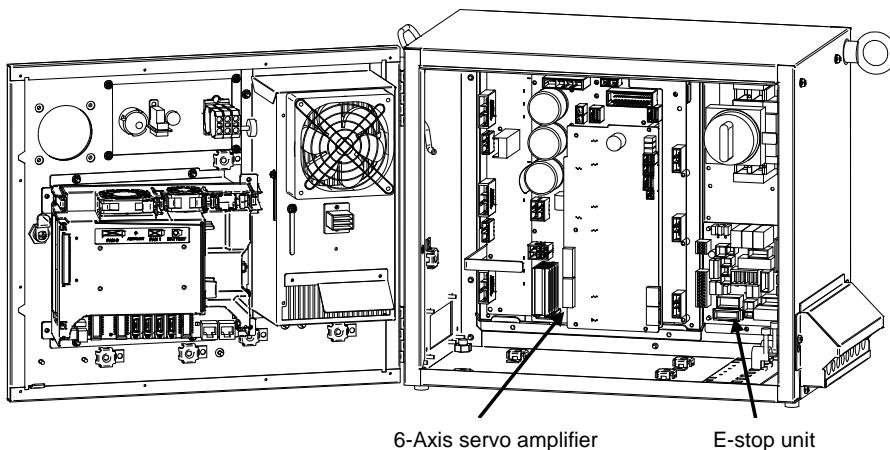


Fig.3.5 (o)

SRVO-049 OHAL1 alarm
SRVO-050 CLALM alarm
SRVO-051 CUER alarm

SRVO-055 FSSB com error 1 (G:i A:j)

- (Explanation) A communication error has occurred between the main board and servo amplifier.
- (Action 1) Check the optical fiber cable between the axis control card and servo amplifier.
Replace it if it is faulty.
- (Action 2) Replace the axis control card on the main board.
- (Action 3) Replace the servo amplifier.

SRVO-056 FSSB com error 2 (G:i A:j)

- (Explanation) A communication error has occurred between the main board and servo amplifier.
- (Action 1) Check the optical fiber cable between the axis control card and servo amplifier.
Replace it if it is faulty.
- (Action 2) Replace the axis control card on the main board.
- (Action 3) Replace the servo amplifier.

SRVO-057 FSSB disconnect (G:i A:j)

- (Explanation) Communication was interrupted between the main board and servo amplifier.
- (Action 1) Check whether fuse (FS1) on the 6-Axis servo amplifier has blown. If the fuse has blown, replace the 6-Axis servo amplifier including the fuse.
- (Action 2) Check the optical fiber cable between the axis control card and servo amplifier.
Replace it if it is faulty.
- (Action 3) Replace the axis control card on the main board.
- (Action 4) Replace the servo amplifier.
- (Action 5) Check for a point where the robot connection cable (RMP1, RP1) or an internal cable running to each Pulsecoder through the robot mechanical section is grounded.

Before continuing to the next step, perform a complete controller back up to save all your programs and settings.

- (Action 6) Replace the main board.


SRVO-058 FSSB xx init error (yy)

- (Explanation) Communication was interrupted between the main board and servo amplifier.
- (Action 1) Check whether fuse (FS1) on the 6-Axis servo amplifier has blown. If the fuse has blown, replace the 6-Axis servo amplifier including the fuse.
- (Action 2) Turn off the power and disconnect the CRF8 connector on the 6-Axis servo amplifier.
Then check whether this alarm occurs again. (Ignore the alarm SRVO-068 because of disconnecting the CRF8 connector.)


If this alarm does not occur, the robot connection cable (RMP1, RP1) or the internal cable of the robot may be short-circuited to the ground. Check the cables and replace it if necessary.

- (Action 3) Check whether the LED (P5V and P3.3V) on the 6-Axis servo amplifier is lit. If they are not lit, the DC power is not supplied to the 6-Axis servo amplifier.
Make sure the connector CP5 on the power supply unit and the connector CXA2B on the 6-Axis servo amplifier are connected tightly. If they are connected tightly, replace the 6-Axis servo amplifier.
 - (Action 4) Check the optical fiber cable between the axis control card and servo amplifier. Replace it if it is faulty.
 - (Action 5) Replace the axis control card on the main board.
 - (Action 6) Replace the 6-Axis servo amplifier.
 - (Action 7) If the other units (the servo amplifier for the auxiliary axis and the line tracking interface) are connected in the FSSB optical communication, disconnect these units and connect only 6-Axis servo amplifier for the robot. Then turn on the power. If this alarm does not occur, search the failed unit and replace it.
- Before executing the (Action 8), perform a complete controller back up to save all your programs and settings.

- (Action 8) Replace the main board.

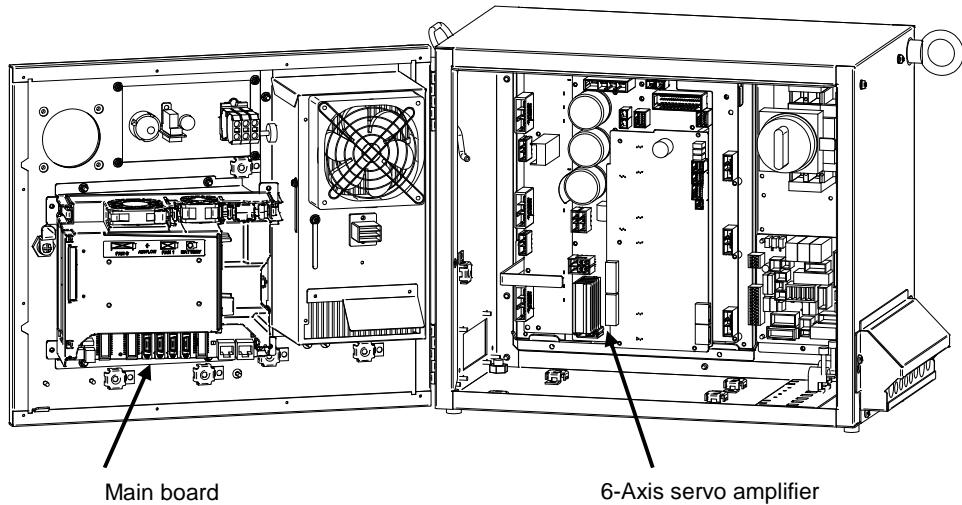

Axis control card

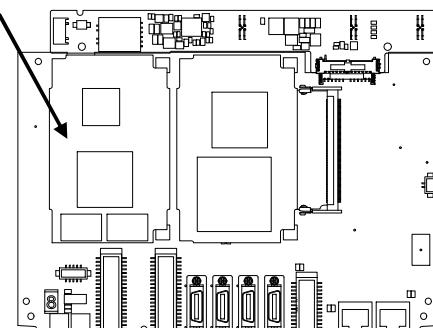

(Main board)

Fig.3.5 (p)

- SRVO-055 FSSB com error 1**
- SRVO-056 FSSB com error 2**
- SRVO-057 FSSB disconnect**
- SRVO-058 FSSB init error**

SRVO-059 Servo amp init error (G:i A:j)

- (Explanation) Servo amplifier initialization is failed.
- (Action 1) Check the optical fiber cable between the axis control card on the main board servo amplifier. Replace it if it is faulty.
- (Action 2) Turn off the power and disconnect the CRF8 connector on the 6-Axis servo amplifier. Then check whether this alarm occurs again. (Ignore the alarm SRVO-068 because of disconnecting the CRF8 connector.)
If this alarm does not occur, the robot connection cable (RMP1, RP1) or the internal cable of the robot (Pulsecoder cable) may be short-circuited to the ground. Check the cables and replace it if necessary.
- (Action 3) Check whether the LED (P5V and P3.3V) on the 6-Axis servo amplifier is lit. If they are not lit, the DC power is not supplied to the servo amplifier.
Make sure the connector CP5 on the power supply unit and the connector CXA2B on the 6-Axis servo amplifier are connected tightly. If they are connected tightly, replace the 6-Axis servo amplifier.
- (Action 4) Replace the servo amplifier.
- (Action 5) Replace the line tracking board (If installed).
- (Action 6) Replace the Pulsecoder

SRVO-062 BZAL alarm (Group:i Axis:j)

- (Explanation) This alarm occurs if battery for Pulsecoder absolute-position backup is empty. A probable cause is a broken battery cable or no batteries in the robot.
- (Action 1) Replace the battery in the battery box of the robot base.
- (Action 2) Replace the Pulsecoder with which an alarm has been issued.
- (Action 3) Check whether the robot internal cable for feeding power from the battery to the Pulsecoder is not disconnected and grounded. If an abnormality is found, replace the cable.

⚠ CAUTION

After correcting the cause of this alarm, set the system variable (\$MCR.\$SPC_RESET) to TRUE then turn on the power again. Mastering is needed.

SRVO-064 PHAL alarm (Group:i Axis:j)

- (Explanation) This alarm occurs if the phase of the pulses generated in the Pulsecoder is abnormal.
- (Action) Replace the Pulsecoder with which an alarm has been issued.

NOTE

This alarm might accompany the DTERR, CRCERR, or STBERR alarm. In this case, however, there may be no actual condition for this alarm.

SRVO-065 BLAL alarm (Group:i Axis:j)

- (Explanation) The battery voltage for the Pulsecoder is lower than the rating.
- (Action) Replace the battery.
(If this alarm occurs, turn on the power and replace the battery as soon as possible. A delay in battery replacement may result in the BZAL alarm being detected. In this case, the position data will be lost. Once the position data is lost, mastering will become necessary.)

SRVO-067 OHAL2 alarm (Grp:i Ax:j)

- (Explanation) The temperature inside the Pulsecoder or motor is abnormally high, and the built-in thermostat has operated.

- (Action 1) Check the robot operating conditions. If a condition such as the duty cycle and load weight has exceeded the rating, relax the robot load condition to meet the allowable range.
- (Action 2) When power is supplied to the motor after it has become sufficiently cool, if the alarm still occurs, replace the motor.

SRVO-068 DTERR alarm (Grp:i Ax:j)

- (Explanation) The serial Pulsecoder does not return serial data in response to a request signal.
- (Action 1) Make sure that the robot connection cable (RMP1, RP1) connector (CRF8) of 6-Axis servo amplifier and the connector (motor side) are connected tightly.
- (Action 2) Check that the shielding of the robot connection cable (RMP1, RP1) is grounded securely in the cabinet.
- (Action 3) Replace the Pulsecoder.
- (Action 4) Replace the servo amplifier.
- (Action 5) Replace the robot connection cable (RMP1, RP1, RM1).
- (Action 6) Replace the internal cable of the robot (for the Pulsecoder, For the Motor).

SRVO-069 CRCERR alarm (Grp:i Ax:j)

- (Explanation) The serial data has disturbed during communication.
- (Action) See actions on SRVO-068

SRVO-070 STBERR alarm (Grp:i Ax:j)

- (Explanation) The start and stop bits of the serial data are abnormal.
- (Action) See actions on SRVO-068

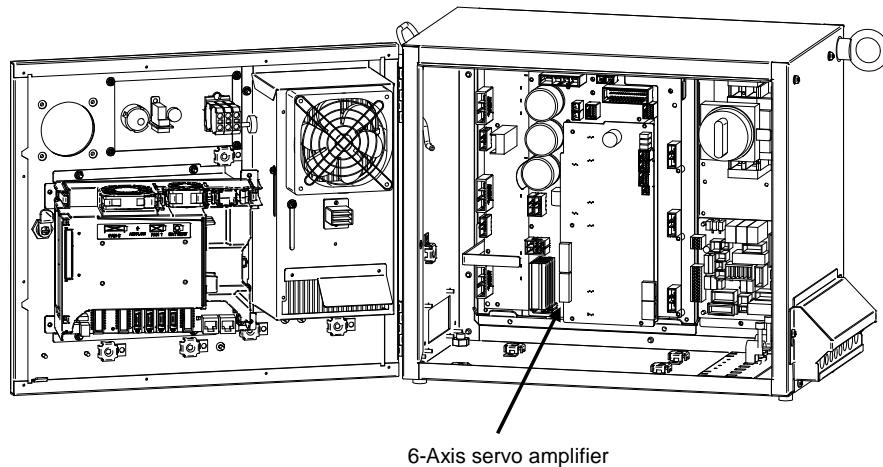


Fig.3.5 (q)

SRVO-059 Servo amp init error
SRVO-070 STBERR alarm

SRVO-071 SPHAL alarm (Grp:i Ax:j)

- (Explanation) The feedback speed is abnormally high.
- (Action) Action as same as the SRVO-068.

NOTE

If this alarm occurs together with the PHAL alarm (SRVO-064), this alarm does not correspond to the major cause of the failure.

SRVO-072 PMAL alarm (Group:i Axis:j)

- (Explanation) It is likely that the Pulsecoder is abnormal.
- (Action) Replace the Pulsecoder and remaster the robot.

SRVO-073 CMAL alarm (Group:i Axis:j)

- (Explanation) It is likely that the Pulsecoder is abnormal or the Pulsecoder has malfunctioned due to noise.
- (Action 1) Check whether the connection of the controller earth is good. Check the earth cable connection between controller and robot connection cables are connected securely to the grounding plate.
- (Action 2) Reinforce the earth of the motor flange. (In case of Auxiliary axis)
- (Action 3) Replace the Pulsecoder.
- (Action 4) Replace the robot connection cable (RMP1, RM1, RP1).
- (Action 5) Replace the internal cable of the robot (for the Pulsecoder, For the Motor).

SRVO-074 LDAL alarm (Group:i Axis:j)

- (Explanation) The LED in the Pulsecoder is broken.
- (Action) Replace the Pulsecoder, and remaster the robot.

SRVO-075 Pulse not established (G:i A:j)

- (Explanation) The absolute position of the Pulsecoder cannot be established.
- (Action) Reset the alarm, and jog the axis on which the alarm has occurred until the same alarm will not occur again.

SRVO-076 Tip Stick Detection (G:i A:j)

- (Explanation) An excessive disturbance was assumed in servo software at the start of operation. (An abnormal load was detected. The cause may be welding.)
- (Action 1) Check whether the robot has collided. Or check whether the machinery load of the corresponding axis is increased.
- (Action 2) Check whether the load settings are valid.
- (Action 3) Check whether the brake of the corresponding axis is released.
- (Action 4) Check whether the load weight is within the rated range. If the weight exceeds the upper limit, decrease it to the limit.
- (Action 5) Check whether the voltage input to the controller is within the rated voltage.
- (Action 6) Replace the servo amplifier.
- (Action 7) Replace the corresponding servo motor.
- (Action 8) Replace the E-stop unit.
- (Action 9) Replace the power cable of the robot connection cable in which the corresponding axis is connected.
- (Action 10) Replace the internal cable of the robot (power/brake) in which the corresponding axis is connected.

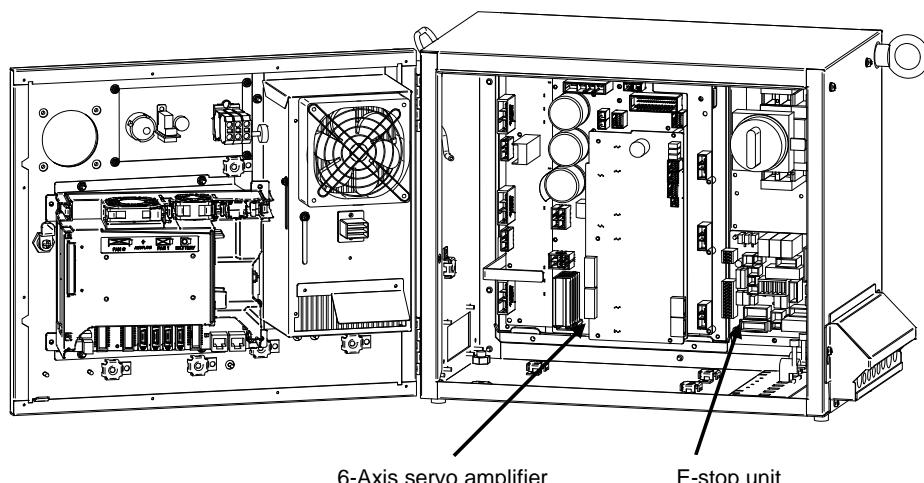


Fig.3.5 (r)

SRVO-076 Tip stick detection

SRVO-081 EROFL alarm (Track enc:i)

- (Explanation) The pulse counter for line tracking has overflowed.
 (Action 1) Check whether the condition of the line tracking exceeds the limitation.
 (Action 2) Replace the Pulsecoder.
 (Action 3) Replace the line tracking board.

SRVO-082 DAL alarm (Track encoder:i)

- (Explanation) The line tracking Pulsecoder has not been connected.
 (Action 1) Check the connection cable at each end (the line tracking board and the motor side)
 (Action 2) Check whether the shielding of the connection cable is connected securely to the grounding plate.
 (Action 3) Replace the line tracking cable.
 (Action 4) Replace the Pulsecoder.
 (Action 5) Replace the line tracking board.

SRVO-084 BZAL alarm (Track enc:i)

- (Explanation) This alarm occurs if the backup battery for the absolute position of the Pulsecoder has not been connected. See the description about the BZAL alarm (SRVO-062).

SRVO-087 BLAL alarm (Track enc:i)

- (Explanation) This alarm occurs if the voltage of the backup battery for the absolute position of the Pulsecoder is low. See the description about the BLAL alarm (SRVO-065).

SRVO-089 OHAL2 alarm (Track enc:i)

- (Explanation) The motor has overheated. When power is supplied to the Pulsecoder after it has become sufficiently cool, if the alarm still occurs. See the description about the OHAL2 alarm (SRVO-067).

SRVO-090 DTERR alarm (Track enc:i)

- (Explanation) Communication between the Pulsecoder and line tracking board is abnormal. See the SRVO-068 DTERR alarm.
 (Action 1) Check the connection cable at each end (the line tracking board and the Pulsecoder)
 (Action 2) Check whether the shielding of the connection cable is connected securely to the grounding plate.
 (Action 3) Replace the Pulsecoder.
 (Action 4) Replace the line tracking cable.
 (Action 5) Replace the line tracking board.

SRVO-091 CRCERR alarm (Track enc:i)

- (Explanation) Communication between the Pulsecoder and line tracking board is abnormal.
 (Action) Action as same as the SRVO-090.

SRVO-092 STBERR alarm (Track enc:i)

- (Explanation) Communication between the Pulsecoder and line tracking board is abnormal.
 (Action) Action as same as the SRVO-090.

SRVO-093 SPHAL alarm (Track enc:i)

- (Explanation) This alarm occurs if the current position data from the Pulsecoder is higher than the previous position data.
 (Action) Action as same as the SRVO-090.

SRVO-094 PMAL alarm (Track enc:i)

- (Explanation) It is likely that the Pulsecoder is abnormal. See the description about the PMAL alarm (SRVO-072).
 (Action) Replace the Pulsecoder.

SRVO-095 CMAL alarm (Track enc:i)

- (Explanation) It is likely that the Pulsecoder is abnormal or the Pulsecoder has malfunctioned due to noise. See the description about the CMAL alarm (SRVO-073).
 (Action 1) Reinforce the earth of the flange of the Pulsecoder.
 (Action 2) Reset the Pulse count.
 (Action 3) Replace the Pulsecoder.

SRVO-096 LDAL alarm (Track enc:i)

- (Explanation) The LED in the Pulsecoder is broken. See the description about the LDAL alarm (SRVO-074).


SRVO-097 Pulse not established (Enc:i)

- (Explanation) The absolute position of the Pulsecoder cannot be established. See the description about (SRVO-075). Pulse not established.
 (Action 1) Reset the alarm, and jog the axis on which the alarm has occurred until the same alarm does not occur again. (Jog one motor revolution)

SRVO-105 Door open or E.Stop

- (Explanation) The cabinet door is open.

- When the door switch is not mounted skip Action 1 and 2 and start from Action 3
 (Action 1) If the auxiliary cabinet (option) is installed, check whether the door of the auxiliary cabinet is open. When the door is open, close it
 (Action 2) If the auxiliary cabinet (option) is installed, check the door switch and its wiring. If the switch or wiring is faulty, replace it.
 (Action 3) Check that the CRMA92, CRMB8 connectors on the E-STOP unit and CRMA91 on the 6-Axis servo amplifier are connected securely.
 (Action 4) Replace the emergency stop board.
 (Action 5) Replace the 6- Axis servo amplifier.

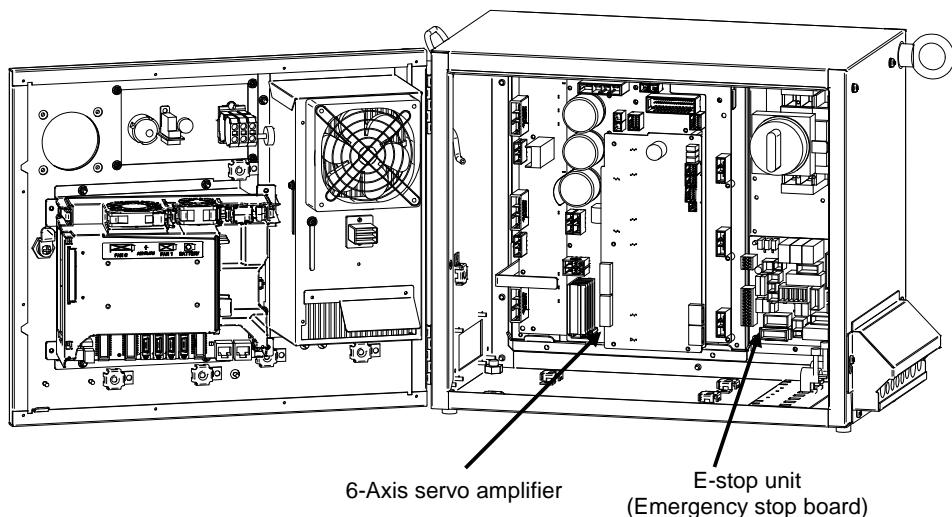**Fig.3.5 (s)****SRVO-105 Door open or E-stop**

SRVO-123 Fan motor rev slow down(%d)

(Explanation) The rotation speed of fan motor is slow down.

(Action 1) Check the fan motor and its cables. Replace them if necessary.

(Action 2) Replace the backplane unit.

Before executing the (Action 3), perform a complete controller back up to save all your programs and settings.

(Action 3) Replace the main board.

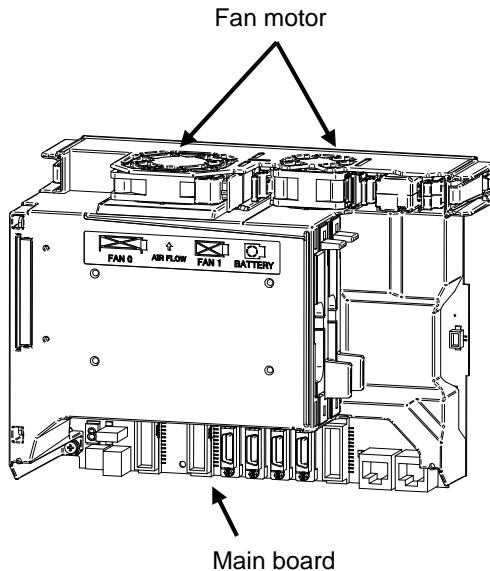


Fig.3.5 (t) SRVO-123 Fan motor rev slow down(%d)

SRVO-134 DCLVAL alarm (G:I A:j)

(Explanation) The DC voltage (DC link voltage) of the main circuit power supply for the servo amplifier is abnormally low.

(Action 1) It is possible that an instant disconnection of power source causes this alarm. Check whether an instant disconnection occurred.

(Action 2) Check the input voltage to the controller is within the rated voltage.

(Action 3) Modify the program in order that robot and the auxiliary axis do not accelerate simultaneously in the system with the auxiliary axis.

(Action 4) Replace the E-stop unit.

(Action 5) Replace the servo amplifier.

SRVO-156 IPMAL alarm (G:i A:j)

(Explanation) Abnormally high current flowed through the main circuit of the servo amplifier.


(Action 1) Turn off the power, and disconnect the power cable from the servo amplifier indicated by the alarm message. (And disconnect the brake cable (CRR88 on the servo amplifier) to avoid the axis falling unexpectedly.) Turn on the power, and if the alarm occurs again, replace the servo amplifier.

(Action 2) Turn off the power and disconnect the power cable from the servo amplifier indicated by the alarm message, and check the insulation of their U, V, W and the GND lines each other. If there is a short-circuit, replace the power cable.

(Action 3) Turn off the power and disconnect the power cable from the servo amplifier by the alarm message, and measure the resistance between their U and V, V and W and W and U with an ohmmeter that has a very low resistance range. If the resistances at the three places are different from each other, the motor, the power cable is defective. Check each item in detail and replace it if necessary.

SRVO-157 CHGAL alarm (G:i A:j)

- (Explanation) The capacitor on the servo amplifier was not charged properly within the specified time when the servo power is on.
- (Action 1) Check the input voltage to the controller is within the rated voltage.
- (Action 2) Make sure that the 6-axis servo amplifier CRRA12 and emergency stop board CRRA12 connector are connected tightly.
- (Action 3) Replace the 6-axis servo amplifier.
- (Action 4) Replace the E-stop unit.

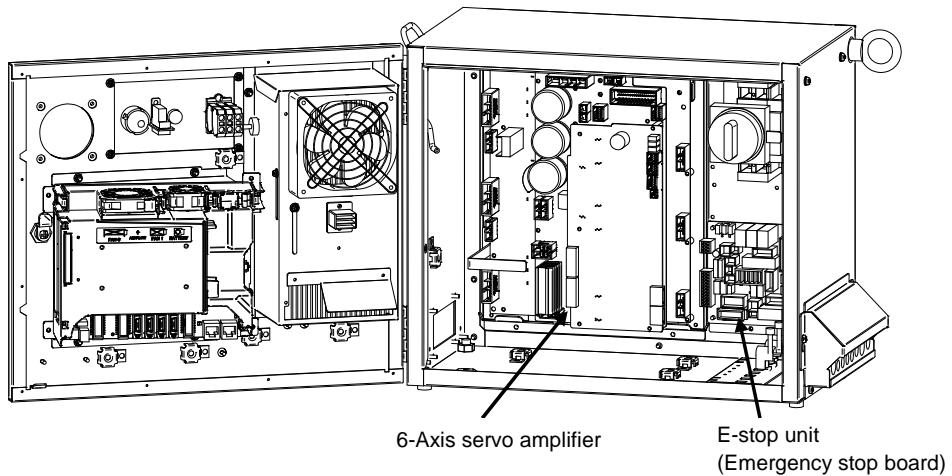**Fig.3.5 (u)****SRVO-156 IPMAL alarm
SRVO-157 CHGAL alarm**

SRVO-204 External (SVEMG abnormal) E-stop

(Explanation) The switch connected across EES1 – EES11 and EES2 – EES21 on the TBOP20 on the emergency stop board was pressed, but the EMERGENCY STOP line was not disconnected.

(Action 1) Check the switch and cable connected to EES1 – EES11 and EES2 – EES21 on the TBOP20. If the cable is abnormal, replace it.

Before executing the (Action 2), perform a complete controller back up to save all your programs and settings.

(Action 2) Replace the main board.

(Action 3) Replace the emergency stop board.

(Action 4) Replace the 6-Axis servo amplifier.

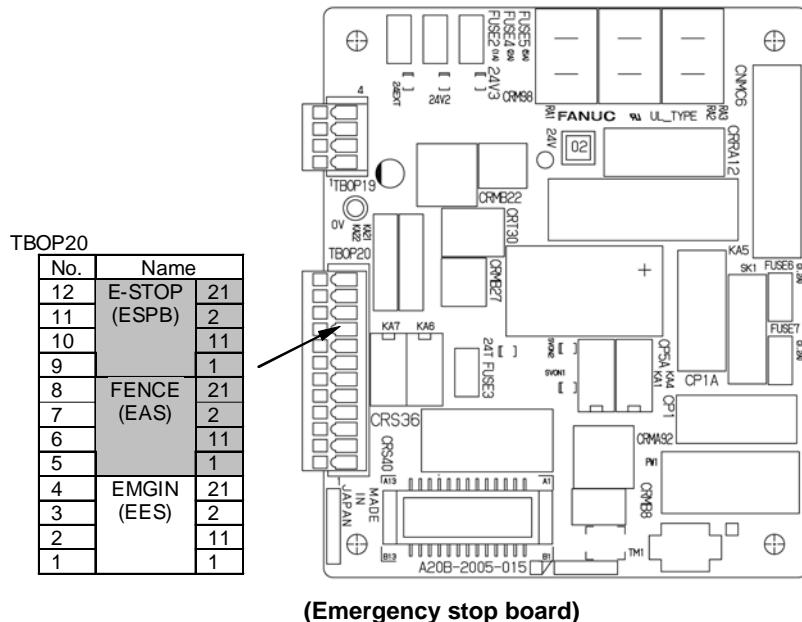
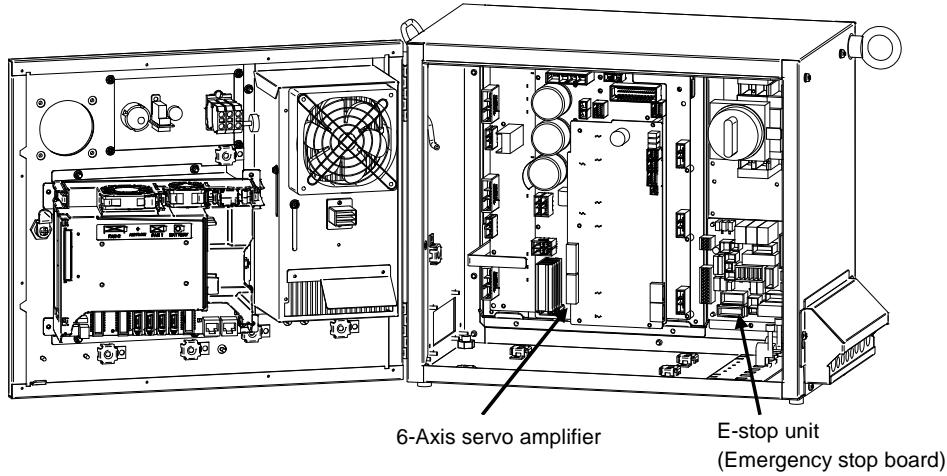


Fig.3.5 (v) SRVO-204 External (SVEMG abnormal) E-stop

SRVO-205 Fence open (SVEMG abnormal)

(Explanation) The switch connected across EAS1 – EAS11 and EAS2 – EAS21 on the TBOP20 on the emergency stop board was opened, but the EMERGENCY STOP line was not disconnected.



(Action 1) Check the switch and cable connected to EAS1 – EAS11 and EAS2 – EAS21 on the TBOP20. If the cable is abnormal, replace it.

Before executing the (Action 2), perform a complete controller back up to save all your programs and settings.

(Action 2) Replace the main board.

(Action 3) Replace the emergency stop board.

(Action 4) Replace the 6-Axis servo amplifier.

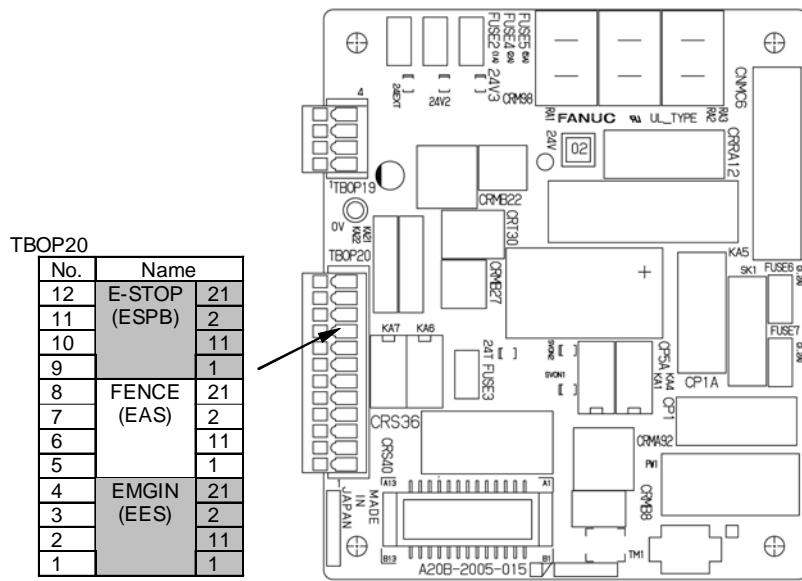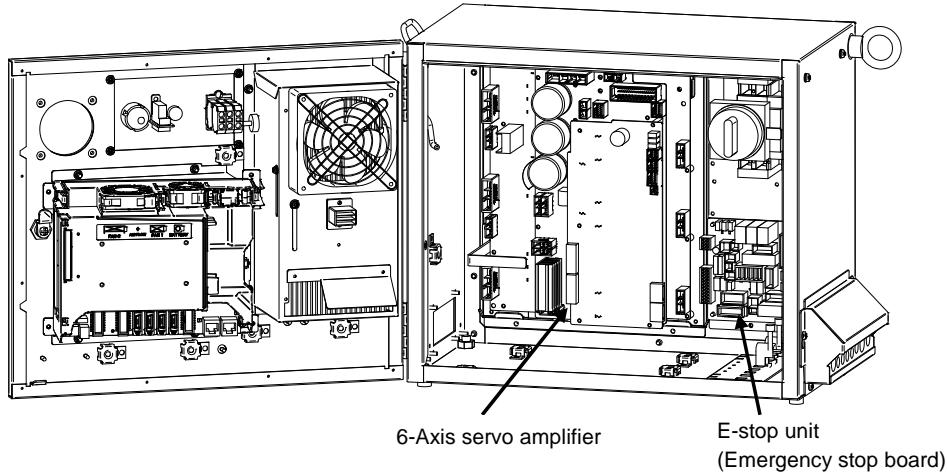

(Emergency stop board)

Fig.3.5 (w)

SRVO-205 Fence open (SVEMG abnormal)

SRVO-206 Deadman switch (SVEMG abnormal)


- (Explanation) When the teach pendant was enabled, the DEADMAN switch was released or pressed strongly, but the emergency stop line was not disconnected.
- (Action 1) Replace the teach pendant.
- (Action 2) Check the teach pendant cable. If it is inferior, replace the cable.

Before executing the (Action 2), perform a complete controller back up to save all your programs and settings.

- (Action 2) Replace the main board.
- (Action 3) Replace the emergency stop board.
- (Action 4) Replace the 6-Axis servo amplifier.

SRVO-213 E-STOP Board FUSE2 blown

- (Explanation) A fuse (FUSE2) on the emergency stop board has blown, or no voltage is supplied to EXT24V.
- (Action 1) Check whether the fuse (FUSE2) on the emergency stop board has blown. If the fuse has blown, 24EXT may be short-circuited to 0EXT. Take Action 2. If FUSE2 has not blown, take Action 3 and up.
- (Action 2) Disconnect the connection destinations of 24EXT that can cause grounding then check that the fuse (FUSE2) does not blow. Disconnect the following on the emergency stop board then turn on the power:
- CRS36
 - CRT30
 - TBOP20: EES1, EES11, EAS1, EAS11
- If the fuse (FUSE2) does not blow in this state, 24EXT and 0EXT may be short-circuited at any of the connection destinations above. Isolate the faulty location then take action.
- If the fuse (FUSE2) blows even when the connection destinations above are detached, replace the emergency stop board.
- (Action 3) Check whether 24 V is applied to between EXT24V and EXT0V of TBOP19. If not, check the external power supply circuit.
- If no external power supply is used, check whether the terminals above are connected to the INT24V and INT0V terminals, respectively.
- (Action 4) Replace the emergency stop board.
- (Action 5) Replace the teach pendant cable.
- (Action 6) Replace the teach pendant.
- (Action 7) Replace the operator's panel cable (CRT30).

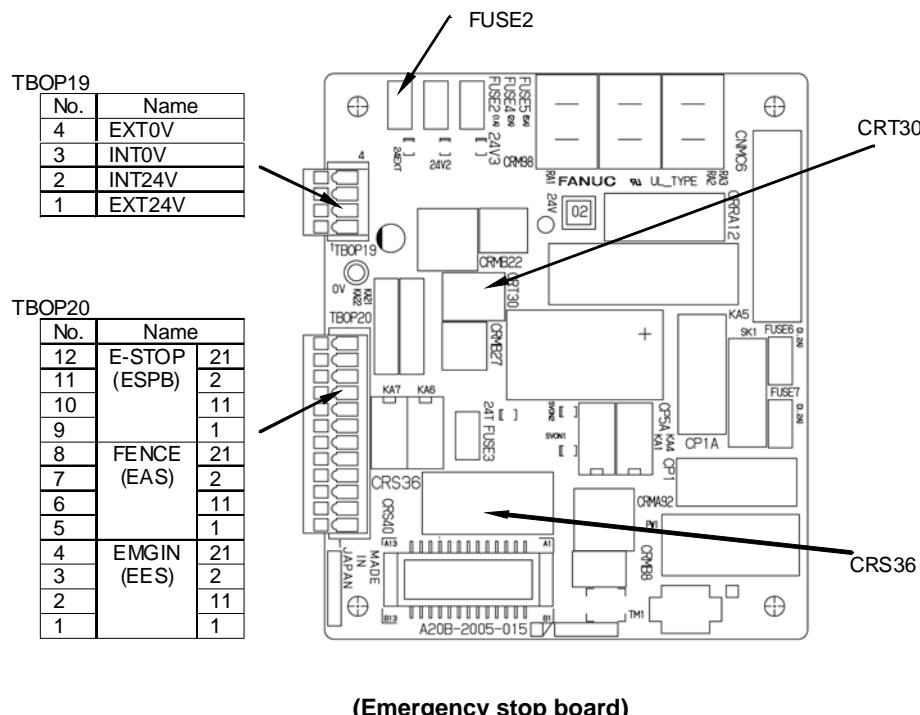

(Emergency stop board)

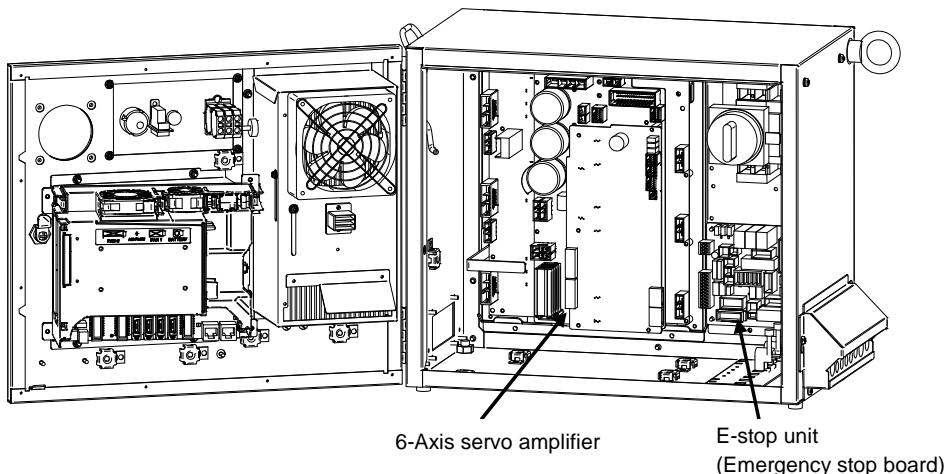


Fig.3.5 (x)

**SRVO-206 DEADMAN switch (SVEMG abnormal)
SRVO-213 E-STOP Board FUSE2 blown**

SRVO-214 6ch amplifier fuse blown (Robot:i)

- (Explanation) A fuse (FS2 or FS3) in the 6-Axis servo amplifier has blown.
- (Action 1) A fuse (FS2 or FS3) is blown, eliminate the cause, and then replace the fuse. (See Section 3.6)
- (Action 2) Replace the 6-Axis servo amplifier.

SRVO-216 OVC (total) (Robot:i)


- (Explanation) The current (total current for six axes) flowing through the motor is too large.
- (Action 1) Slow the motion of the robot where possible. Check the robot operation conditions. If the robot is used with a condition exceeding the duty or load weight robot rating, reduce the load condition value to the specification range.
- (Action 2) Check the input voltage to the controller is within the rated voltage.
- (Action 3) Replace the 6-Axis servo amplifier.

SRVO-221 Lack of DSP (G:i A:j)


- (Explanation) A controlled axis card corresponding to the set number of axes is not mounted.
- (Action 1) Check whether the set number of axes is valid. If the number is invalid, set the correct number.
- (Action 2) Replace the axis control card with a card corresponding to the set number of axes.

SRVO-223 DSP dry run (%d,%d)

- (Explanation) A servo DSP initialization failure occurred due to hardware failure or wrong software setting. Then, the software entered DSP dry run mode. The first number indicates the cause of the failure. The second number is extra information.
- (Action) Perform an action according to the first number that is displayed in the alarm message.
- 1: This is a warning due to \$scr.\$startup_cnd=12.
 - 2,3,4,7: Replace a servo card.
 - 5: Invalid ATR setting. Software axis config (FSSB line number, hardware start axis number, amplifier number, and amplifier type) might be wrong.
 - 6: SRVO-180 occurs simultaneously. Controllable axis does not exist on any group. Execute aux axis setting to add axis at controlled start.
 - 8,10: SRVO-058 (FSSB init error) occurs simultaneously. Follow the remedy of SRVO-058.
 - 9: There is no amplifier that is connected to the servo card.
 - Check the hardware connection.
 - Check the optical fiber cable.
 - Check whether the servo amplifier power is supplied.
 - Check whether the fuse on the servo amplifier has blown.
 - Replace the optical fiber cable.
 - Replace the servo amplifier
 - 11: Invalid axisorder setting. Non-existing axis number is specified. Software axis config (FSSB line number) might be wrong or auxiliary axis board is necessary.
 - 12: SRVO-059 (Servo amp init error) occurs simultaneously. Follow the remedy of SRVO-059.
 - 13,14,15: Document the events that led to the error, and contact your FANUC technical representative.

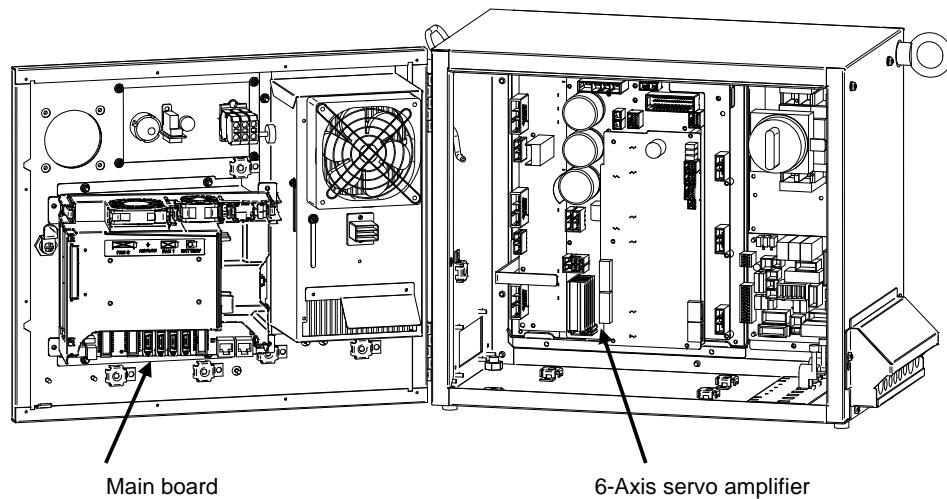

Axis control card

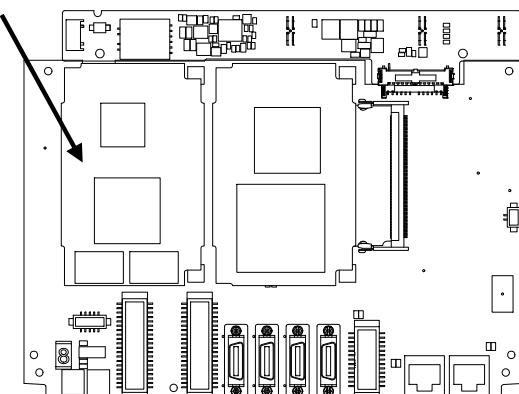

(Main board)

Fig.3.5 (y)

SRVO-214 6ch amplifier fuse blown (Panel PCB)
SRVO-216 OVC (total)
SRVO-221 Lack of DSP
SRVO-223 DSP dry run (%d,%d)

SRVO-230 Chain 1 abnormal a, b**SRVO-231 Chain 2 abnormal a, b**

(Explanation) A mismatch occurred between duplicate safety signals.

SRVO-230 is issued if such a mismatch that a contact connected on the chain 1 side (between EES1 and EES11, between EAS1 and EAS11, and so forth) is closed, and a contact on the chain 2 side (between EES2 and EES21, between EAS2 and EAS21, and so forth) is open occurs. SRVO-231 is issued if such a mismatch that a contact on the chain 1 side is open, and a contact on the chain 2 side is closed occurs.

If a chain error is detected, correct the cause of the alarm then reset the alarm according to the method described later.

(Action) Check the alarms issued at the same time in order to identify with which signal the mismatch occurred.

SRVO-266 through SRVO-275 and SRVO-370 through SRVO-385 are issued at the same time. Take the action(s) described for each item.

 WARNING

If this alarm is issued, do not reset the chain error alarm until the failure is identified and repaired. If robot use is continued with one of the duplicate circuits being faulty, safety may not be guaranteed when the other circuit fails.

 CAUTION

- 1 The state of this alarm is preserved by software. After correcting the cause of the alarm, reset the chain error alarm according to the chain error reset procedure described later.
- 2 Until a chain error is reset, no ordinary reset operation must be performed. If an ordinary reset operation is performed before chain error resetting, the message "SRVO-237 Chain error cannot be reset" is displayed on the teach pendant.

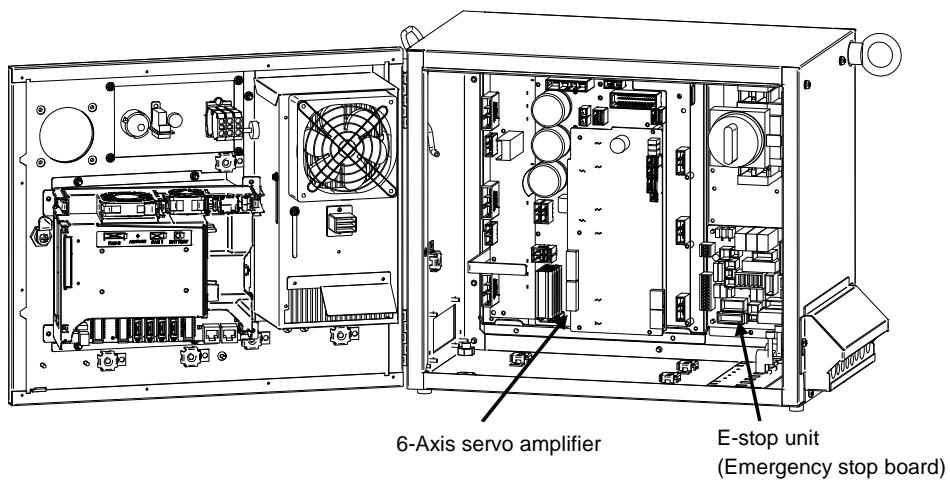


Fig.3.5 (z)

SRVO-230 Chain 1 (+24V) abnormal a, b
SRVO-231 Chain 2 (0V) abnormal a, b

Alarm history display method

1. Press the screen selection key on the teach pendant.
2. Select [4 ALARM] on the teach pendant.
3. Press F3 [HIST] on the teach pendant.

Chain error reset procedure

 **CAUTION**

Do not perform this operation until the cause of the alarm is corrected.

<Method 1>

1. Press the emergency stop button.
2. Press the screen selection key on the teach pendant.
3. Select [0 NEXT PAGE] on the teach pendant.
4. Press [6 SYSTEM] on the teach pendant.
5. Press [7 SYSTEM SETTING] on the teach pendant.
6. Find "28" Chain Error Reset Execution.
7. Press F3 on the teach pendant to reset "Chain Error".

<Method 2>

1. Press the screen selection key on the teach pendant.
2. Select [4 ALARM] on the teach pendant.
3. Press F4 [CHAIN RESET] on the teach pendant.

SRVO-233 TP disabled in T1, T2/Door open

(Explanation) Teach pendant is disabled when the mode switch is T1 or T2.
Or controller door is opened.

- (Action 1) Enable the teach pendant in teaching operation. In other case the mode switch should be AUTO mode.
- (Action 2) Close the controller door, if open.
- (Action 3) Replace the teach pendant.
- (Action 4) Replace the teach pendant cable.
- (Action 5) Replace the mode switch.
- (Action 6) Replace the emergency stop board.
- (Action 7) Replace the 6-Axis servo amplifier.

SRVO-235 Short term Chain abnormal

(Explanation) Short term single chain failure condition is detected.

- Cause of this alarm is:
 - Half release of DEADMAN switch
 - Half operation of emergency stop switch.

- (Action 1) Cause the same error to occur again, and then perform resetting.
- (Action 2) Replace the emergency stop board.
- (Action 3) Replace the 6-Axis servo amplifier.

SRVO-251 DB relay abnormal (G:i A:j)

(Explanation) An abnormality was detected in the internal relay (DB relay) of the servo amplifier.



- (Action 1) Replace the servo amplifier.
- (Action 2) Replace the E-stop unit.

SRVO-252 Current detect abnl (G:i A:j)

(Explanation) An abnormality was detected in the current detection circuit inside the servo amplifier.
 (Action) Replace the servo amplifier.

SRVO-253 Amp internal over heat (G:i A:j)

(Explanation) An overheat was detected inside the servo amplifier.
 (Action) Replace the servo amplifier.

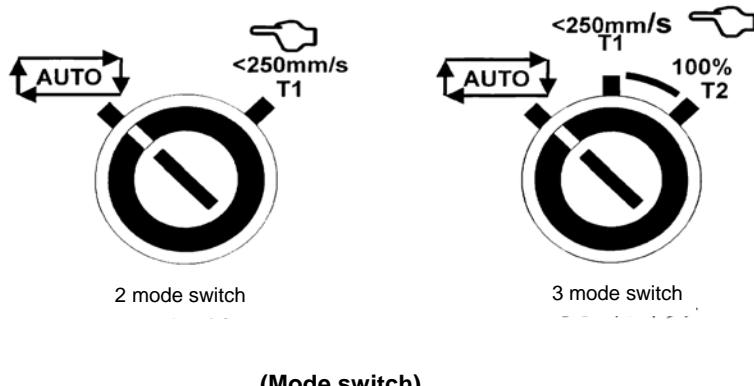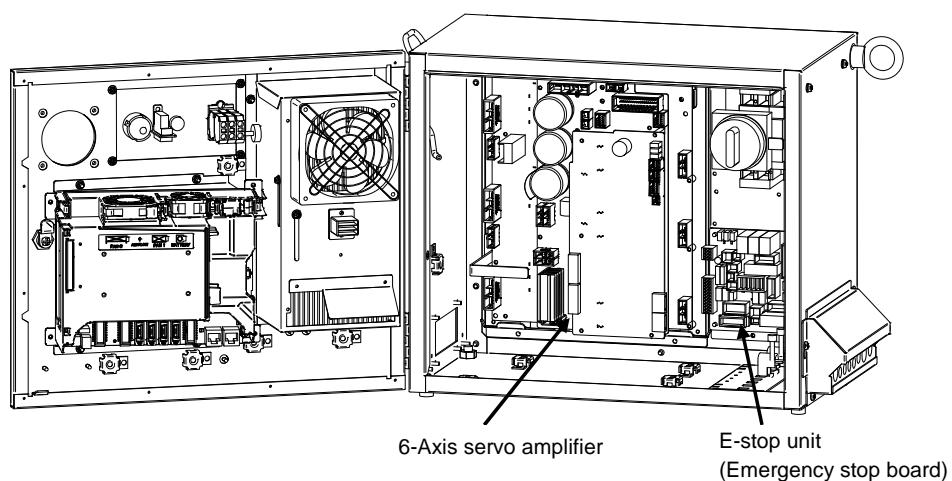

(Mode switch)

Fig.3.5 (aa)

SRVO-233 TP disabled in T1, T2/Door open

SRVO-235 Short term Chain abnormal

SRVO-251 DB relay abnormal

SRVO-252 Current detect abnl

SRVO-253 Amp internal over heat

SRVO-266 FENCE1 status abnormal
SRVO-267 FENCE2 status abnormal

(Explanation) A chain alarm was detected with the EAS (FENCE) signal.

(Action 1) Check whether the circuitry connected to the dual input signal (EAS) is faulty.

(Action 2) Check whether the timing of the dual input signal (EAS) satisfies the timing specification (See Subsection 3.2.5, Table 3.2.5 in CONNECTIONS).

Before executing the (Action 3), perform a complete controller back up to save all your programs and settings.

(Action 3) Replace the main board.


(Action 4) Replace the emergency stop board.

WARNING

If this alarm is issued, do not reset the chain error alarm until the failure is identified and repaired. If robot use is continued with one of the duplicate circuits being faulty, safety may not be guaranteed when the other circuit fails.

NOTE

For the procedure of recovery from this alarm, see the descriptions of SRVO-230 and SRVO-231.

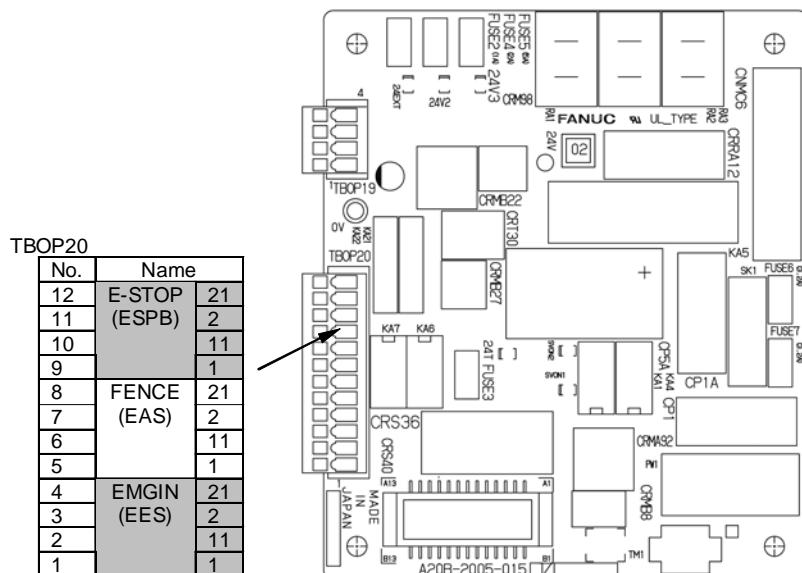

(Emergency stop board)

Fig.3.5 (ab)

SRVO-266 FENCE1 status abnormal
SRVO-267 FENCE2 status abnormal

**SRVO-270 EXEMG1 status abnormal
SRVO-271 EXEMG2 status abnormal**

- (Explanation) A chain alarm was detected with the EES (EXEMG) signal.
- (Action 1) Check whether the circuitry connected to the dual input signal (EES) is faulty.
- (Action 2) Check whether the timing of the dual input signal (EES) satisfies the timing specification (See Subsection 3.2.5, Fig 3.2.5(c) in CONNECTIONS).
- (Action 3) Replace the teach pendant cable.
- (Action 4) Replace the teach pendant.
- (Action 5) Replace the emergency stop board.
- (Action 6) Replace the emergency stop switch on the operator's panel (or replace entire operator's panel).

Before executing the (Action 7), perform a complete controller back up to save all your programs and settings.


- (Action 7) Replace the main board.

WARNING

If this alarm is issued, do not reset the chain error alarm until the failure is identified and repaired. If robot use is continued with one of the duplicate circuits being faulty, safety may not be guaranteed when the other circuit fails.

NOTE

For the procedure of recovery from this alarm, see the descriptions of SRVO-230 and SRVO-231.

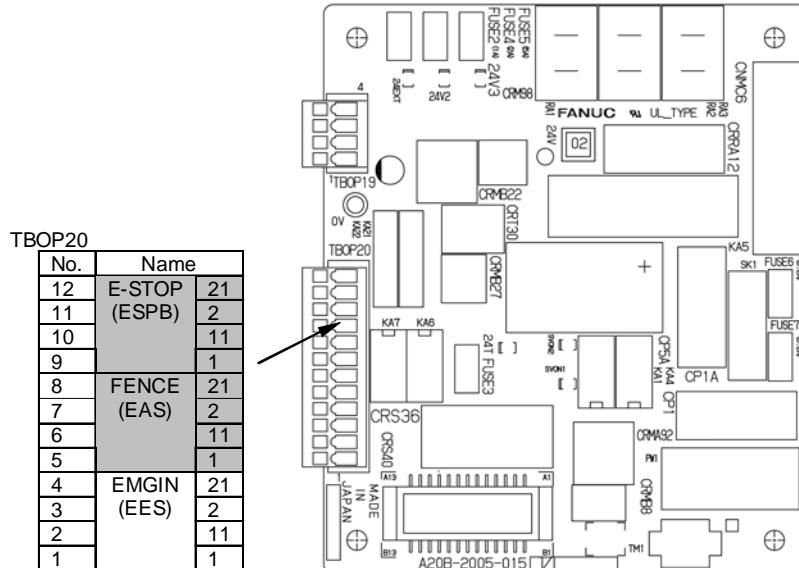

(Emergency stop board)

Fig.3.5 (ac)

**SRVO-270 EXEMG1 status abnormal
SRVO-271 EXEMG2 status abnormal**

SRVO-274 NTED1 status abnormal**SRVO-275 NTED2 status abnormal**

- (Explanation) A chain alarm was detected with the NTED signal.
- (Action 1) This alarm may be issued when the DEADMAN switch is pressed to a proper position or is operated very slowly. In such a case, release the DEADMAN switch once completely then press the DEADMAN switch again.
- (Action 2) Check whether the circuitry connected to the dual input signal (NTED) is faulty.
- (Action 3) Check whether the timing of the dual input signal (NTED) satisfies the timing specification
(See Subsection 3.2.5, Fig 3.2.5(c) in CONNECTIONS).
- (Action 4) Replace the teach pendant cable.
- (Action 5) Replace the teach pendant.
- (Action 6) Replace the emergency stop board.
- (Action 7) Replace the mode switch on the operator's panel.

Before executing the (Action 8), perform a complete controller back up to save all your programs and settings.

- (Action 8) Replace the main board.

⚠ WARNING

If this alarm is issued, do not reset the chain error alarm until the failure is identified and repaired. If robot use is continued with one of the duplicate circuits being faulty, safety may not be guaranteed when the other circuit fails.

NOTE

For the procedure of recovery from this alarm, see the descriptions of SRVO-230 and SRVO-231.

SRVO-277 Panel E-stop (SVEMG abnormal)

- (Explanation) The emergency stop line was not disconnected although the emergency stop button on the operator's panel was pressed.

Before executing the (Action 1), perform a complete controller back up to save all your programs and settings.

- (Action 1) Replace the main board.
- (Action 2) Replace the emergency stop board.
- (Action 3) Replace the 6-Axis servo amplifier.

SRVO-278 TP E-stop (SVEMG abnormal)



- (Explanation) The emergency stop line was not disconnected although the emergency stop button on the teach pendant was pressed.
- (Action 1) Replace the teach pendant.
- (Action 2) Replace the teach pendant cable.

Before executing the (Action 3), perform a complete controller back up to save all your programs and settings.

- (Action 3) Replace the main board.
- (Action 4) Replace the emergency stop board.
- (Action 5) Replace the 6-Axis servo amplifier.

NOTE

This alarm may be issued if the emergency stop button is pressed very slowly.

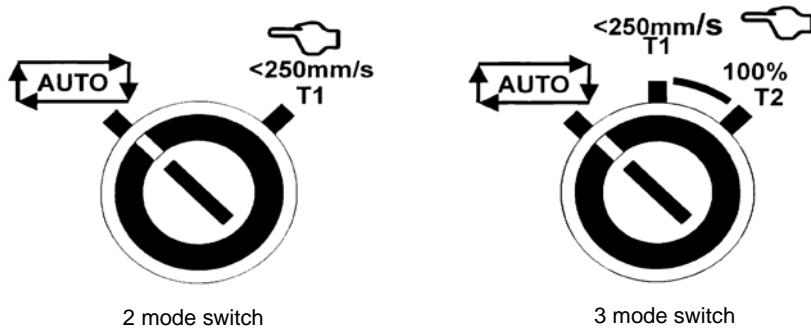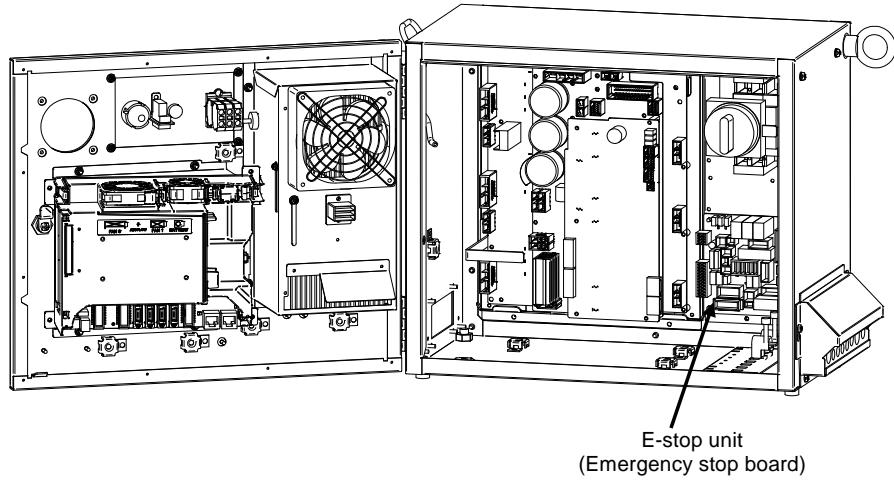

(Mode switch)

Fig.3.5 (ad)

- SRVO-274 NTED1 status abnormal
 SRVO-275 NTED2 status abnormal
 SRVO-277 Panel E-stop (SVEMG abnormal)
 SRVO-278 TP E-stop (SVEMG abnormal)

SRVO-291 IPM over heat (G:i A:j)

- (Explanation) IPM on the servo amplifier is overheated.
- (Action 1) Check whether the vent hole is clogged. If necessary, clean them.
- (Action 2) If SRVO-291 is issued when the robot operating condition is severe, check the robot operating condition then relax the condition when possible.
- (Action 3) If SRVO-291 is issued frequently, replace the servo amplifier.

SRVO- 295 SVM COM alarm(G:i A:j)

- (Explanation) A communication error occurred in the 6-axis servo amplifier.
- (Action 1) Replace the 6-axis servo amplifier.

SRVO- 297 Improper input power (G:i A:j)

- (Explanation) The 6-axis servo amplifier has detected the input voltage phase lack.
- (Action 1) Check the input voltage of the controller whether phase is not lack.
- (Action 2) Measure the secondary voltage between each phase at the main breaker, if phase lack is detected, replace the main breaker.
- (Action 3) Replace the E-stop unit.
- (Action 4) Replace the 6-axis servo amplifier.

SRVO-300 Hand broken/HBK disabled**SRVO-302 Set Hand broken to ENABLE**

- (Explanation) Although HBK was disabled, the HBK signal was input.
- (Action 1) Press RESET on the teach pendant to release the alarm.
- (Action 2) Check whether the hand broken signal is connected to the robot. When the hand broken signal circuit is connected, enable hand broken.
(See Subsection 5.6.3 in CONNECTIONS)

SRVO-335 DCS OFFCHK alarm a, b

- (Explanation) A failure was detected in the safety signal input circuit.

Before executing the (Action 1), perform a complete controller back up to save all your programs and settings.

- (Action 1) Replace the main board.

SRVO-348 DCS MCC OFF alarm a, b

- (Explanation) A command was issued to turn off the magnetic contactor, but the magnetic contactor was not turned off.
- (Action 1) If a signal is connected to the E-stop unit CRMB8, check whether there is a problem in the connection destination.
- (Action 2) Replace the E-stop unit.

Before executing the (Action 3), perform a complete controller back up to save all your programs and settings.

- (Action 3) Replace the main board.
- (Action 4) Replace the 6-Axis servo amplifier.

SRVO-349 DCS MCC ON alarm a, b

- (Explanation) A command was issued to turn on the magnetic contactor, but the magnetic contactor was not turned on.
- (Action 1) Replace the E-stop unit.

Before executing the (Action 2), perform a complete controller back up to save all your programs and settings.

- (Action 2) Replace the main board.

(Action 3) Replace the 6-Axis servo amplifier.

SRVO-370 SVON1 status abnormal

SRVO-371 SVON2 status abnormal

(Explanation) A chain alarm was detected with the main board internal signal (SVON).

Before executing the (Action 1), perform a complete controller back up to save all your programs and settings.

(Action 1) Replace the main board.

(Action 2) Replace the 6-Axis servo amplifier.

(Action 3) Replace the emergency stop board.

⚠ WARNING

If this alarm is issued, do not reset the chain error alarm until the failure is identified and repaired. If robot use is continued with one of the duplicate circuits being faulty, safety may not be guaranteed when the other circuit fails.

NOTE

For the procedure of recovery from this alarm, see the descriptions of SRVO-230 and SRVO-231.

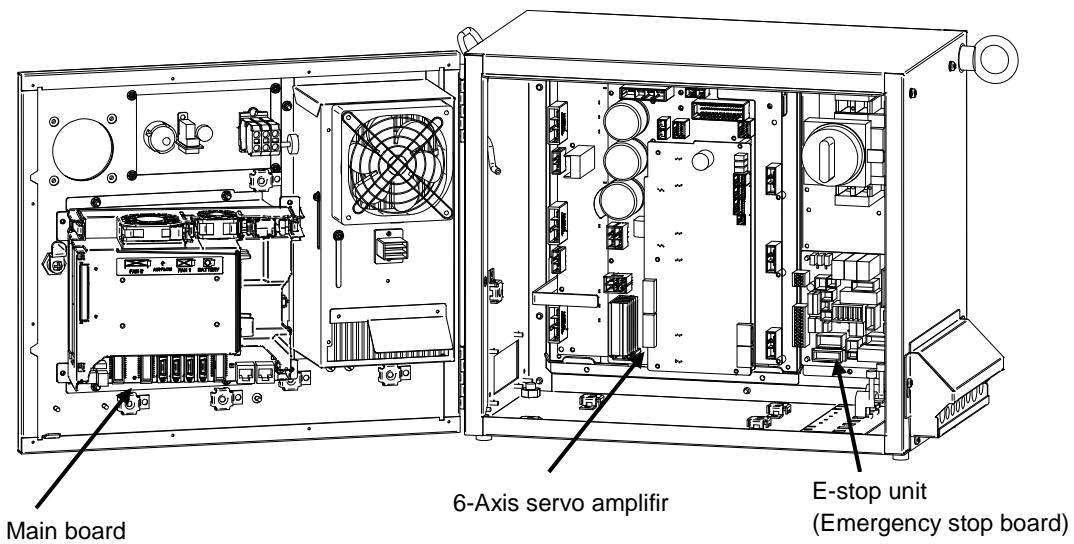


Fig.3.5 (ae)

- SRVO-291 IPM over heat
- SRVO-295 SVM COM alarm
- SRVO-297 Improper input power
- SRVO-335 DCS OFFCHK alarm a, b
- SRVO-348 DCS MCC OFF alarm a, b
- SRVO-349 DCS MCC ON alarm a, b
- SRVO-370 SVON1 status abnormal a, b
- SRVO-371 SVON2 status abnormal a, b

SRVO-372 OPEMG1 status abnormal**SRVO-373 OPEMG2 status abnormal**

(Explanation) A chain alarm was detected with the emergency stop button on the operator's panel.

(Action 1) Replace the emergency stop board.

(Action 2) Replace the teach pendant cable.

(Action 3) Replace the teach pendant.

(Action 4) Replace the emergency stop button on the operator's panel.

Before executing the (Action 5), perform a complete controller back up to save all your programs and settings.

(Action 5) Replace the main board.

⚠ WARNING

If this alarm is issued, do not reset the chain error alarm until the failure is identified and repaired. If robot use is continued with one of the duplicate circuits being faulty, safety may not be guaranteed when the other circuit fails.

NOTE

For the procedure of recovery from this alarm, see the descriptions of SRVO-230 and SRVO-231.

SRVO-374 MODE11 status abnormal**SRVO-375 MODE12 status abnormal****SRVO-376 MODE21 status abnormal****SRVO-377 MODE22 status abnormal**

(Explanation) A chain alarm was detected with the mode switch signal.

(Action 1) Check the mode switch and its cable. Replace them if a defect is found.

(Action 2) Replace the emergency stop board.

Before executing the (Action 3), perform a complete controller back up to save all your programs and settings.



(Action 3) Replace the main board.

⚠ WARNING


If this alarm is issued, do not reset the chain error alarm until the failure is identified and repaired. If robot use is continued with one of the duplicate circuits being faulty, safety may not be guaranteed when the other circuit fails.

NOTE

For the procedure of recovery from this alarm, see the descriptions of SRVO-230 and SRVO-231.

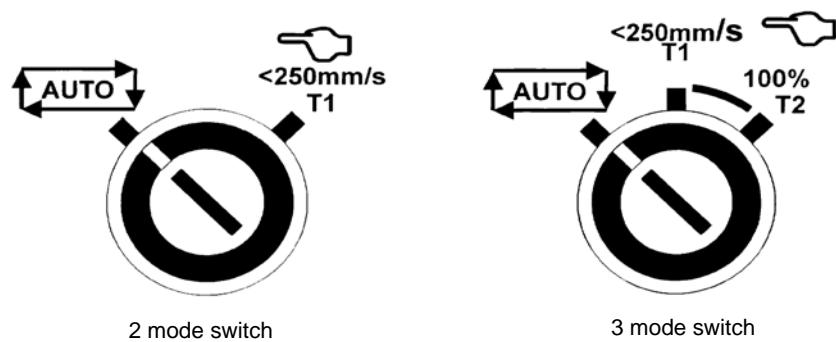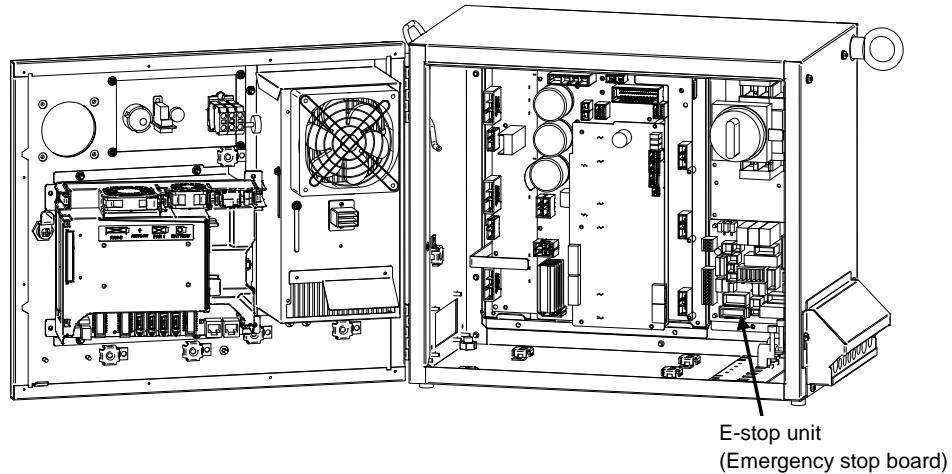

(Mode switch)

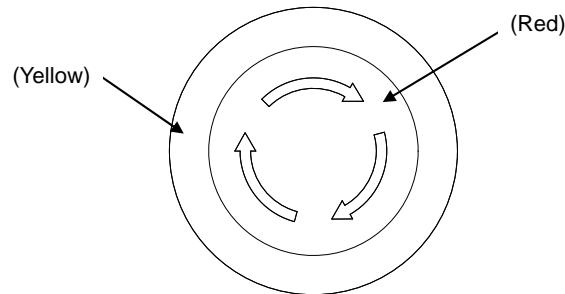

(Emergency stop button)

Fig.3.5 (af)

SRVO-372 OPEMG1 status abnormal a, b
SRVO-373 OPEMG2 status abnormal a, b
SRVO-374 MODE11 status abnormal a, b
SRVO-375 MODE12 status abnormal a, b
SRVO-376 MODE21 status abnormal a, b
SRVO-377 MODE22 status abnormal a, b

SRVO-378 SFDIxx status abnormal

- (Explanation) A chain alarm was detected with the SFDI signal. xx shows signal name.
 (Action 1) Check whether the circuitry connected to the dual input signal (SFDI) is faulty.
 (Action 2) Check whether the timing of the dual input signal (SFDI) satisfies the timing specification. (See Subsection 3.3.4, Fig 3.3.4(c) in CONNECTIONS).

⚠ WARNING

If this alarm is issued, do not reset the chain error alarm until the failure is identified and repaired. If robot use is continued with one of the duplicate circuits being faulty, safety may not be guaranteed when the other circuit fails.

NOTE

For the procedure of recovery from this alarm, see the descriptions of SRVO-230 and SRVO-231.

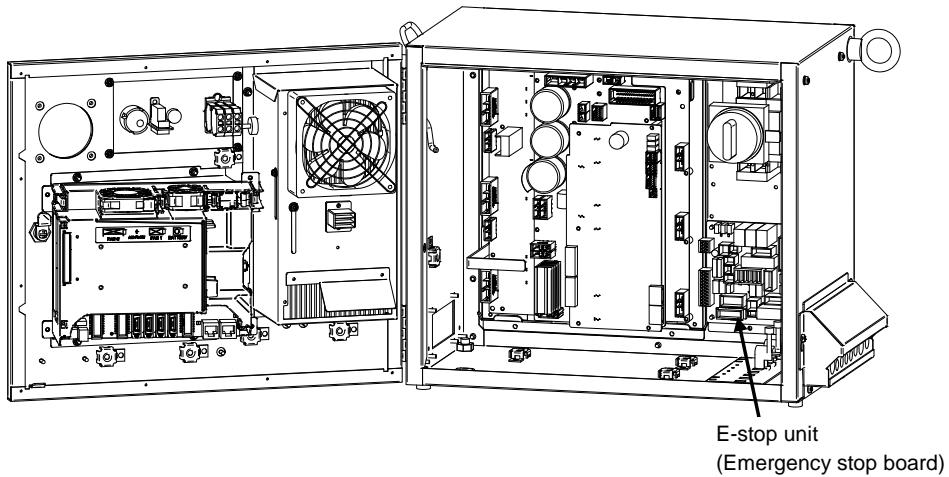


Fig.3.5 (ag)

SRVO-378 SFDIxx status abnormal

SRVO-450 Drvoff circuit fail(G:i A:j)

- (Explanation) The two drive off inputs are not in the same status.

- (Action 1) Check the line of the two drive off inputs.
 (Action 2) Replace the servo amplifier.

SRVO-451 Internal S-BUS fail(G:i A:j)

- (Explanation) An error is found in the serial bus communication in the servo amplifier.

- (Action 1) Replace the servo amplifier.

SRVO-452 ROM data failure (G:i A:j)

- (Explanation) An error is found in the ROM data in the servo amplifier.
 (Action 1) Replace the servo amplifier.

SRVO-453 Low volt driver (G:i A:j)

- (Explanation) Driver supply voltage in the servo amplifier is low.
 (Action 1) Replace the servo amplifier.

SRVO-454 CPU BUS failure (G:i A:j)

- (Explanation) An error was found in CPU bus data in the amplifier.
 (Action 1) Replace the servo amplifier.

SRVO-455 CPU watch dog (G:i A:j)

(Explanation) An error occurred in CPU operation in the amplifier.

(Action 1) Replace the servo amplifier.

SRVO-456 Ground fault (G:i A:j)

(Explanation) An error is found in the motor current detection data in the servo amplifier.

(Action 1) Replace the servo amplifier.

SRVO-459 Excess regeneration2%^s (G:i A:j)

(Explanation) An error is found in the discharge circuit in the servo amplifier.

(Action 1) Replace the servo amplifier.

SRVO-460 Illegal parameter%^s (G:i A:j)

(Explanation) An error is found in the setting of the parameters in the servo amplifier.

(Action 1) Replace the servo amplifier.

SRVO-461 Hardware error%^s (G:i A:j)

(Explanation) An error is found in the circuit in the servo amplifier.

(Action 1) Replace the servo amplifier.


PRI0-095 Overload <Connector>

(Explanation) The DO of the specified connector might be grounded.

(Action 1) Check the connection of the DO of the specified connector.

Before executing the (Action 2), perform a complete controller back-up to save all your programs and settings.

(Action 2) Replace the main board.

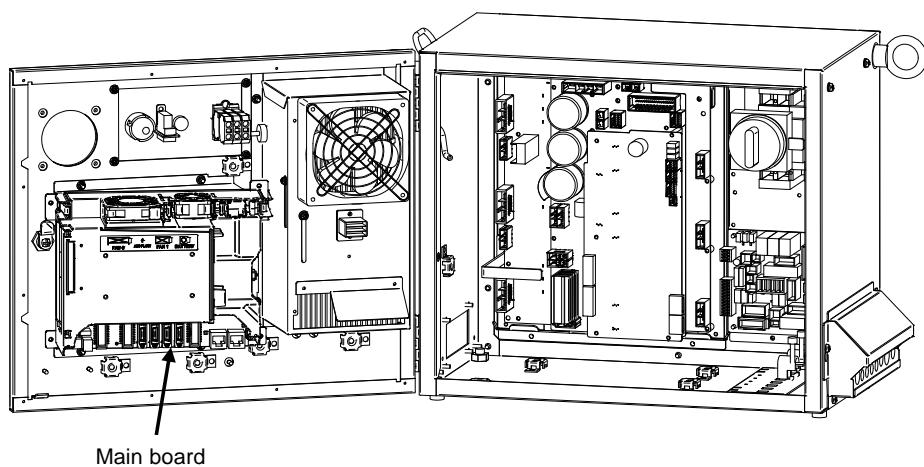**Fig.3.5 (h) PRI0-095 Overload**

3.6 FUSE-BASED TROUBLESHOOTING

This section describes the alarms and symptoms generated and actions required when the fuses installed on the printed circuit boards and units have blown.

(1) Fuses on the main board

FUSE1: For protecting the +24 V output of the peripheral device interface

(A60L-0001-0290#LM10C)

Name	Symptom observed when fuse has blown	Action
FUSE1	An alarm (SRVO-220) is displayed on the teach pendant.	<ol style="list-style-type: none"> 1. 24SDI and 0 V may be short-circuited. Check the peripheral device cable for any abnormality, and replace it if necessary. 2. Disconnect CRS40. If fuse (FUSE3) still blows, replace the main board. 3. Replace the cable between the emergency stop unit and the servo amplifier. 4. Replace the cable between the main board and the emergency stop unit. 5. Replace the emergency stop unit. 6. Replace the servo amplifier.

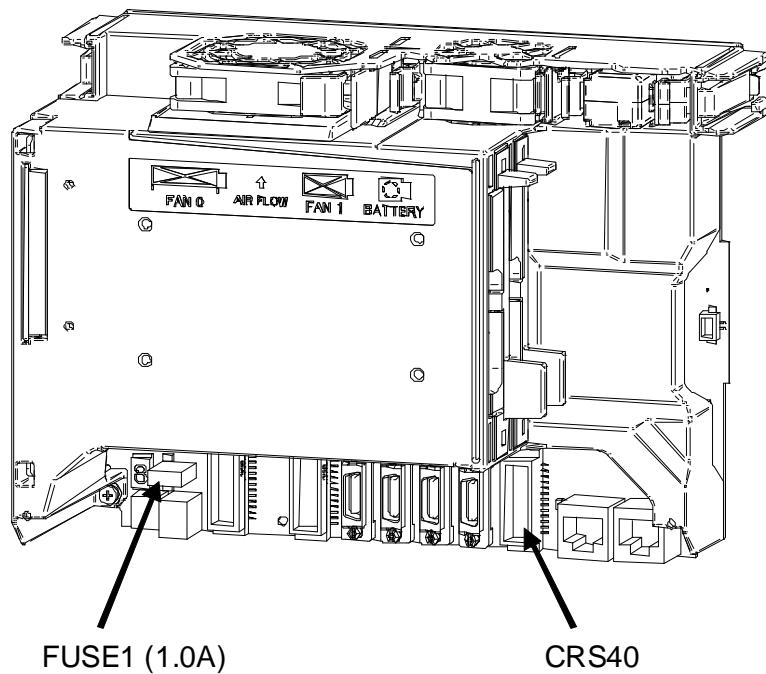


Fig.3.6(a) Fuse on the main board

(2) Servo amplifier fuse

FS1: For generation of the power to the amplifier control circuit (A60L-0001-0290#LM32C)

FS2: For protection of the 24V output to the end effector, XROT, XHBK, and the fan motor inside the robot (M-3iA, option). (A60L-0001-0290#LM32C)

FS3: For protection of the 24V output to the regenerative resister (A60L-0001-0290#LM32C)

Name	Symptom observed when fuse has blown	Action
FS1	All LEDs on the servo amplifier go out. The FSSB disconnection alarm (SRVO-057) or FSSB initialization alarm (SRVO-058) is displayed on the teach pendant.	Replace the 6-Axis servo amplifier.
FS2	The 6-Axis servo amplifier fuse blown (SRVO-214), Hand broken (SRVO-006), and Robot overtravel (SRVO-005) are displayed on the teach pendant.	<ol style="list-style-type: none"> 1 Check +24VF used by the end effector for a ground fault. 2 Check the robot connection cable and the robot's internal cable. 3 Replace the 6-Axis servo amplifier. 4 In case of M-3iA, check the fan motor inside the robot (option).
FS3	The 6-Axis servo amplifier fuse blown (SRVO-214), DCAL alarm (SRVO-043) are displayed on the teach pendant.	<ol style="list-style-type: none"> 1 Check the regenerative resister, and replace it if required. 2 Replace the 6-Axis servo amplifier.

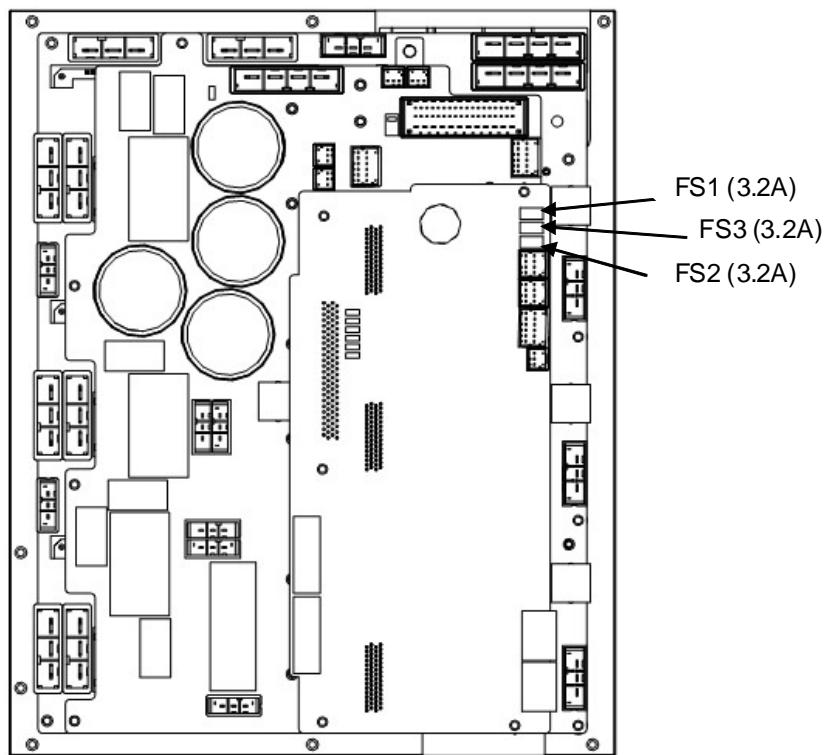


Fig.3.6(b) Fuse on the servo amplifier


(3) Emergency stop board fuses

FUSE2:	For emergency stop circuit	(A60L-0001-0290#LM10C)
FUSE3:	For teach pendant power supply circuit	(A60L-0001-0290#LM10C)
FUSE4:	For +24V protection	(A60L-0001-0290#LM20C)
FUSE5:	For +24V of mainboard protection	(A60L-0001-0290#LM50C)
FUSE6,FUSE7:	For AC200V of fans protection (door/rear)	(A60L-0001-0175#3.2A)

Name	Symptom observed when fuse has blown	Action
FUSE2	Alarm (SRVO-007) is displayed on the teach pendant, and the red LED (24EXT) on the emergency stop board lights.	<ol style="list-style-type: none"> Check the voltage between EXT24V and EXT0V (TBOP19). If no external power supply is used, check the jumper pin between EXT24V and INT24V or between EXT0V and INT0V. Check the 24EXT (emergency stop line) for a short circuit or connection to ground. Replace the emergency stop board. Check the teach pendant and replace it if necessary.
FUSE3	The display on the teach pendant disappears, and the red LED (24T) on the emergency stop board lights.	<ol style="list-style-type: none"> Check the teach pendant cable and replace it if necessary. Check the cable between the emergency stop board (CRS40) and the main board (CRS40), and replace it if necessary. Check the teach pendant and replace it if necessary. Replace the emergency stop board. Replace the main board. (*)
FUSE4	An alarm relating to an input signal that causes an emergency stop is issued, and the red LED (24V2) on the emergency stop board lights.	<ol style="list-style-type: none"> Check the connection on TROP20. Check the cable between the emergency stop board (CRS40) and the main board (CRS40), and replace it if necessary. Check the cable between the emergency stop board (CRMA92) and the 6-Axis servo amplifier (CRMA91), and replace it if necessary. If the cable between the emergency stop board (CRMB22) and the 6-Axis servo amplifier (CRMB16) exist. Check this cable and replace it if necessary. Replace the emergency stop board. Replace the E-stop unit. Replace the main board. (*) Replace the 6-Axis servo amplifier.
FUSE5	The teach pendant can not be operated and the red LED (24V3) on the emergency stop board lights.	<ol style="list-style-type: none"> Check the cable between the emergency stop board (CRS40) and the main board (CRS40), and replace it if necessary. Check the cable between the emergency stop board (CRMA92) and the 6-Axis servo amplifier (CRMA91), and replace it if necessary. Replace the back plane board. Replace the main board. (*) Replace the emergency stop board. Replace the 6-Axis servo amplifier.
FUSE6 FUSE7	The fan stops.	<ol style="list-style-type: none"> Check the fan cable and replace it if necessary. Replace the fan unit. Replace the emergency stop board.

* If the main board or FROM/SRAM module is replaced, the contents of memory (parameters, specified data, etc.) will be lost. Before you replace the unit, therefore, make a backup copy of the data.

If an alarm is issued, data backup may be disabled. So, back up the contents of memory routinely.


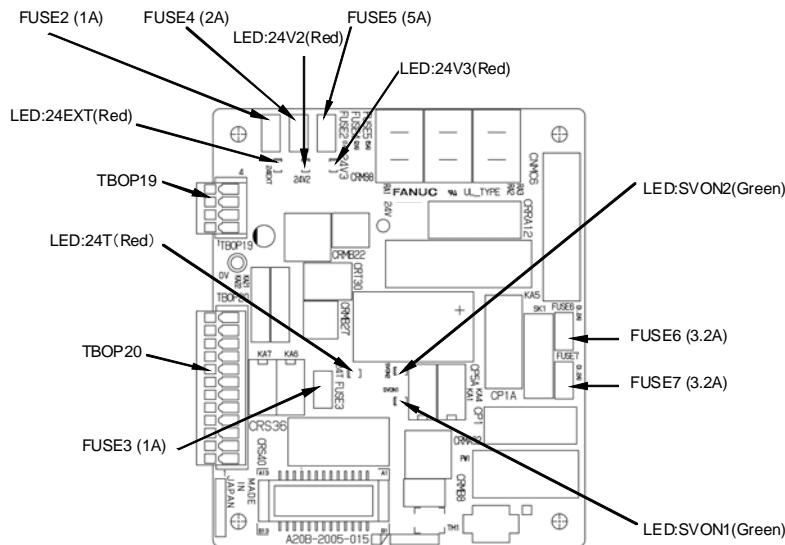
**Fig.3.6 (c) Fuse on the emergency stop board**

(4) Fuse on the process I/O MA,MB

FUSE1: Fuse for +24E

(A60L-0001-0046#1.0)

Name	Symptom observed when fuse has blown	Action
FUSE1	The LED (ALM1 or FALM) the process I/O board lights.	<ol style="list-style-type: none"> Check if the cables and peripheral devices connected to the process I/O board are normal. Replace the process I/O board.

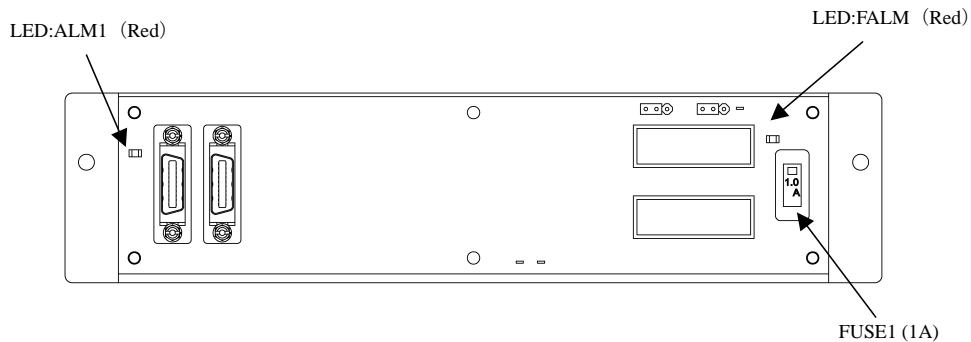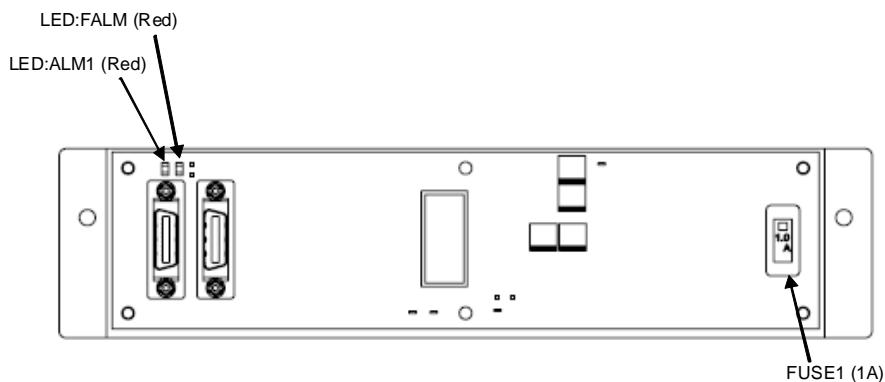**Fig.3.6 (d) Fuse on the process I/O board MA****Fig.3.6 (e) Fuse on the process I/O board MB**

3.7 TROUBLESHOOTING BASED ON LED INDICATIONS

The printed circuit boards and servo amplifier are provided with alarm LEDs and status LEDs. The LED status and corresponding troubleshooting procedures are described below.

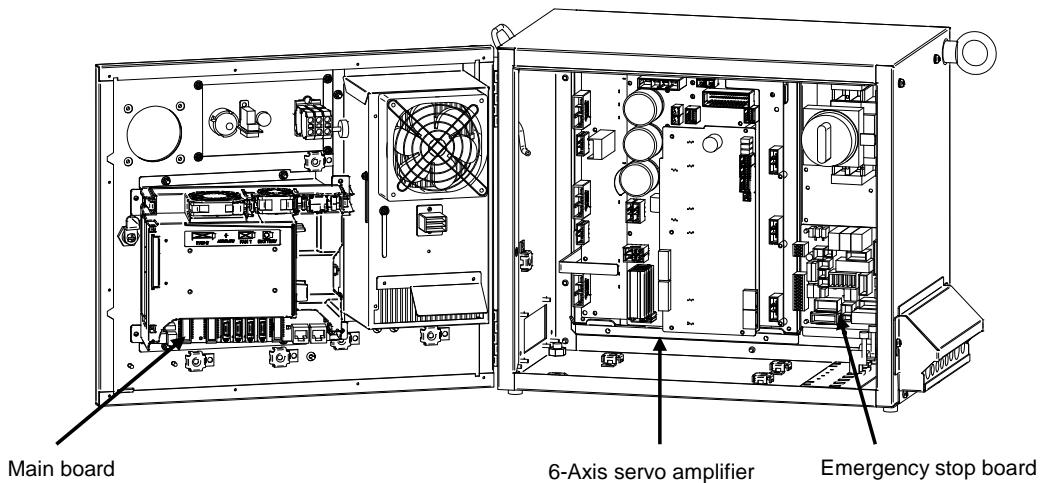


Fig.3.7 Troubleshooting based on LED indication

3.7.1 Troubleshooting Using the LEDs On the Main Board

(1) Troubleshooting using the status display LED

To troubleshoot an alarm that arises before the teach pendant is ready to display, check the status LEDs (green) on the main board at power-on. After power-on, the LEDs light as described in steps 1 to end, in the order described. If an alarm is detected, the step in which the alarm occurred can be determined from which LEDs are lit.

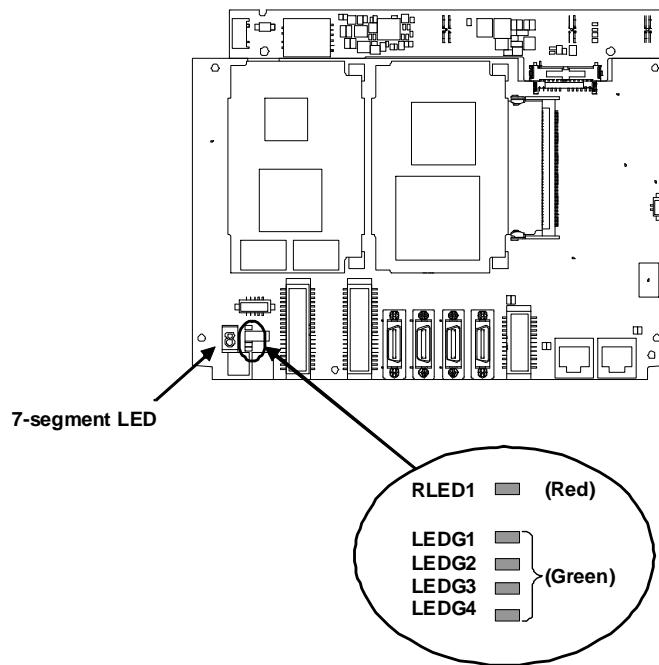


Fig. 3.7.1 Troubleshooting Using the LEDs On the Main Board

Step	LED	Action to be taken
1: After power-on, all LEDs are lit.	 	[Action 1] Replace the CPU card. * [Action 2] Replace the main board.
2: Software operation start-up.	 	[Action 1] Replace the CPU card. * [Action 2] Replace the main board.
3: The initialization of dram on the CPU card is completed.	 	[Action 1] Replace the CPU card. * [Action 2] Replace the main board.
4: The initialization of DPRAM on the communication IC is completed.	 	[Action 1] Replace the CPU card. * [Action 2] Replace the main board. * [Action 3] Replace the FROM/SRAM module.
5: The initialization of the communication IC is completed.	 	[Action 1] Replace the CPU card. * [Action 2] Replace the main board. * [Action 3] Replace the FROM/SRAM module.
6: The loading of the basic software is completed.	 	* [Action 1] Replace the main board. * [Action 2] Replace the FROM/SRAM module.
7: Basic software start-up.	 	* [Action 1] Replace the main board. * [Action 2] Replace the FROM/SRAM module.
8: Start-up of communication with the teach pendant.	 	* [Action 1] Replace the main board. [Action 2] Replace the FROM/SRAM module.
9: The loading of optional software is completed.	 	* [Action 1] Replace the main board. [Action 2] Replace the process I/O board.
10: DI/DO initialization	 	[Action 1] Replace the FROM/SRAM module. [Action 2] Replace the main board.

Step	LED	Action to be taken
11: The preparation of the SRAM module is completed.	LEDG1 LEDG2 LEDG3 LEDG4	[Action 1] Replace the axis control card. * [Action 2] Replace the main board. [Action 3] Replace the servo amplifier.
12: Axis control card initialization	LEDG1 LEDG2 LEDG3 LEDG4	[Action 1] Replace the axis control card. * [Action 2] Replace the main board. [Action 3] Replace the servo amplifier.
13: Calibration is completed.	LEDG1 LEDG2 LEDG3 LEDG4	[Action 1] Replace the axis control card. * [Action 2] Replace the main board. [Action 3] Replace the servo amplifier.
14: Start-up of power application for the servo system	LEDG1 LEDG2 LEDG3 LEDG4	* [Action 1] Replace the main board.
15: Program execution	LEDG1 LEDG2 LEDG3 LEDG4	* [Action 1] Replace the main board. [Action 2] Replace the process I/O board.
16: DI/DO output start-up.	LEDG1 LEDG2 LEDG3 LEDG4	* [Action 1] Replace the main board.
17: Initialization is terminated.	LEDG1 LEDG2 LEDG3 LEDG4	Initialization has ended normally.
18: Normal status	LEDG1 LEDG2 LEDG3 LEDG4	Status LEDs 1 and 2 blink when the system is operating normally.

* If the main board or FROM/SRAM module is replaced, the contents of memory (parameters, specified data, etc.) will be lost. Before you replace the unit, therefore, make a backup copy of the data.

If an alarm is issued, data backup may be disabled. So, back up the contents of memory routinely.

LED indication	Description
RLED1 (Red)	[Description] CPU card is not working. [Action 1] Replace the CPU card.

(2) TROUBLESHOOTING BY 7-SEGMENT LED INDICATOR

7-segment LED indicator	Description
	[Description] A parity alarm condition has occurred in DRAM on the CPU card installed on the main board. [Action1] Replace the CPU card.3.7 * [Action2] Replace the main board.
	[Description] A parity alarm condition has occurred in SRAM on the FROM/SRAM module installed on the main board. [Action1] Replace the FROM/SRAM module. * [Action2] Replace the main board.
	[Description] A bus error has occurred in the communication controller. * [Action] Replace the main board.
	[Description] A parity alarm condition has occurred in DRAM controlled by the communication controller. * [Action] Replace the main board.
	[Description] A servo alarm condition has occurred on the main board. [Action1] Replace the axis control card. * [Action2] Replace the main board. [Action3] If an option board is installed, replace the option board.
	[Description] The SYSEMG alarm has occurred. [Action1] Replace the axis control card. [Action2] Replace the CPU card. * [Action3] Replace the main board.
	[Description] The SYSFAIL alarm has occurred. [Action1] Replace the axis control card. [Action2] Replace the CPU card. * [Action3] Replace the main board. [Action4] If an option board is installed, replace the option board.
	[Description] 5V is supplied to Main board. Above alarms do not occur.

* If the main board or FROM/SRAM module is replaced, the contents of memory (parameters, specified data, etc.) will be lost. Before you replace the unit, therefore, make a backup copy of the data.

If an alarm is issued, data backup may be disabled. So, back up the contents of memory routinely.

3.7.2 Troubleshooting by LEDs on the 6-Axis Servo Amplifier

The 6-Axis servo amplifier has alarm LEDs. Troubleshoot the alarm indicated by the LEDs, referring also to the alarm indication on the teach pendant.

Check that the voltage is not higher than 50V.

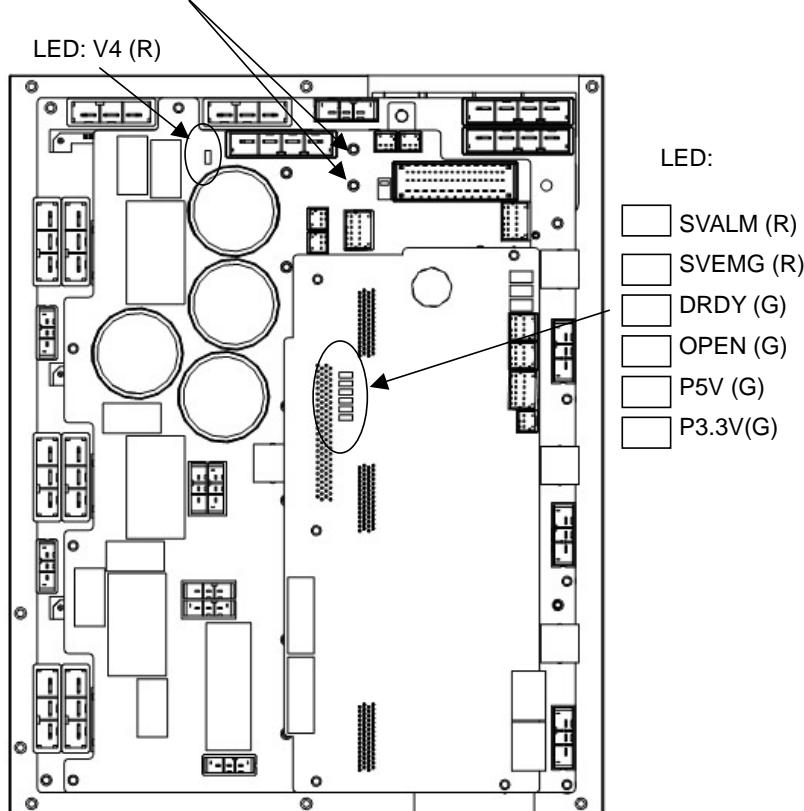


Fig.3.7.2 LEDs on the 6-Axis servo amplifier

⚠ WARNING

Before touching the 6-Axis servo amplifier, check the DC link voltage with the screws located above the LED "V4". By using a DC voltage tester, check that the voltage is 50 V or less.

LED	Color	Description
V4	Red	<p>Lights when the DCLINK circuit inside the servo amplifier is charged to reach the specified voltage.</p> <p>If the LED does not light after pre-charge is finished:</p> <ul style="list-style-type: none"> [Action 1] The DC Link may be short-circuited. Check for connection. [Action 2] The charge current control resistor may be defective. Replace the emergency stop unit. [Action 3] Replace the servo amplifier.
ALM	Red	<p>Lights when the servo amplifier detects an alarm.</p> <p>If the LED lights when there is no alarm condition in the machine:</p> <ul style="list-style-type: none"> [Action] Replace the servo amplifier. <p>If the LED does not light when there is an alarm condition in the machine:</p> <ul style="list-style-type: none"> [Action] Replace the servo amplifier.

LED	Color	Description
SVEMG	Red	<p>Lights when an emergency stop signal is input to the servo amplifier.</p> <p><u>If the LED lights when the machine is not at an emergency stop:</u></p> <p>[Action] Replace the servo amplifier.</p> <p><u>If the LED does light when the machine is at an emergency stop:</u></p> <p>[Action] Replace the servo amplifier.</p>
DRDY	Green	<p>Lights when the servo amplifier is ready to drive the servo motor.</p> <p><u>If the LED does not light when the motor is activated:</u></p> <p>[Action] Replace the servo amplifier.</p>
OPEN	Green	<p>Lights when the communication between the servo amplifier and the main board is normal.</p> <p><u>If the LED does not light:</u></p> <p>[Action 1] Check for the connection of the FSSB optical cable.</p> <p>[Action 2] Replace the servo card.</p> <p>[Action 3] Replace the servo amplifier.</p>
P5V	Green	<p>Lights when the power supply circuit inside the servo amplifier outputs a voltage of +5 V normally.</p> <p><u>If the LED does not light:</u></p> <p>[Action 1] Check the robot connection cable (RP1/RMP1) to see if there is a ground fault in the +5V wire.</p> <p>[Action 2] Replace the servo amplifier.</p>
P3.3V	Green	<p>Lights when the power supply circuit inside the servo amplifier outputs a voltage of +3.3 V normally.</p> <p><u>If the LED does not light:</u></p> <p>[Action] Replace the servo amplifier.</p>

3.7.3 Troubleshooting by LED on the Emergency Stop Board

LED indication	Failure description and required measure	
24EXT (Red)	<p>[Description] When the LED (red) turned on, the fuse (FUSE2) is brown. 24EXT for the emergency stop circuit is not supplied.</p> <p>[Action 1] If the fuse (FUSE2) has not brown in this state, check the voltage between EXT24V and EXT0V (TBOP19). If no external power supply is used, check the jumper pin between EXT24V and INT24V or between EXT0V and INTOV.</p> <p>[Action 2] Check the 24EXT (emergency stop line) for a short circuit or connection to ground.</p> <p>[Action 3] Replace the emergency stop board.</p> <p>[Action 4] Check the teach pendant, and replace it if required.</p>	
24T (Red)	<p>[Description] When the LED (red) turned on, the fuse (FUSE3) is brown. 24T for the teach pendant is not supplied.</p> <p>[Action 1] Check the teach pendant cable (CRS36), and replace it if required.</p> <p>[Action 2] Check the cable between the emergency stop board (CRS40) and the main board (CRS40), and replace it if necessary.</p> <p>[Action 3] Check the teach pendant, and replace it if required.</p> <p>[Action 4] Replace the emergency stop board.</p> <p>*[Action 5] Replace the main board.</p>	

LED indication	Failure description and required measure
24V2 (Red)	<p>[Description] When the LED (red) turned on, the fuse (FUSE4) is brown. 24V-2 for the emergency stop input signal is not supplied.</p> <p>[Action 1] Check the connection of TBOP20.</p> <p>[Action 2] Check the cable between the emergency stop board (CRS40) and the main board (CRS40), and replace it if necessary.</p> <p>[Action 3] Check the cable between the emergency stop board (CRMA92) and the 6-Axis servo amplifier (CRMA91), and replace it if necessary.</p> <p>[Action 4] If the cable between the emergency stop board (CRMB22) and the 6-Axis servo amplifier (CRMB16) exist. Check this cable and replace it if necessary.</p> <p>[Action 5] Replace the emergency stop board.</p> <p>[Action 6] Replace the E-stop unit.</p> <p>*[Action 7] Replace the main board.</p> <p>[Action 8] Replace the 6-Axis servo amplifier.</p>
24V3 (Red)	<p>[Description] When the LED (red) turned on, the fuse (FUSE5) is brown. 24V-3 for the main board is not supplied.</p> <p>[Action 1] Check the cable between the emergency stop board (CRS40) and the main board (CRS40), and replace it if necessary.</p> <p>[Action 2] Check the cable between the emergency stop board (CRMA92) and the 6-Axis servo amplifier (CRMA91), and replace it if necessary.</p> <p>[Action 3] Replace the backplane board.</p> <p>*[Action 4] Replace the main board.</p> <p>[Action 5] Replace the emergency stop board.</p> <p>[Action 6] Replace the 6-Axis servo amplifier.</p>
SVON1/SVON2 (Green)	<p>[Description] These LEDs (green) indicate the status of SVON1/SVON2 signals from the emergency stop board to the servo amplifier. When the SVON1 and SVON2 (green) turned on, the servo amplifier is ready to energize.</p>

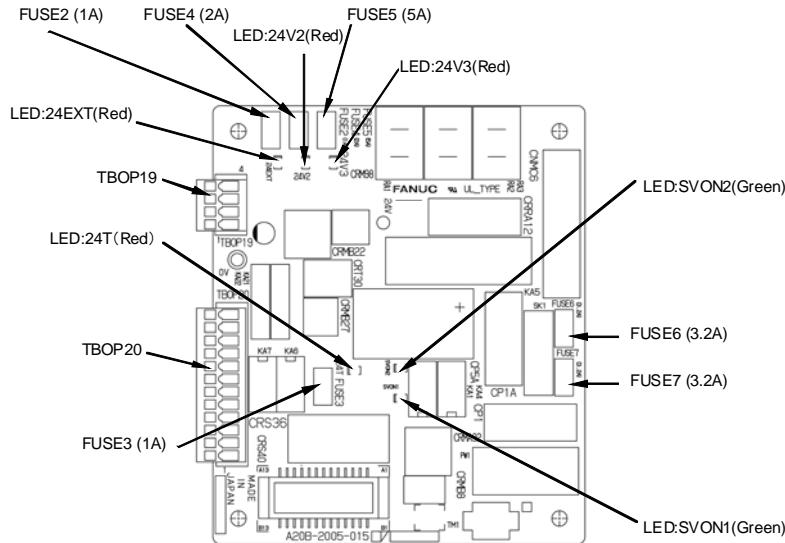


Fig.3.7.3 LEDs on the emergency stop board

3.7.4 Troubleshooting by Alarm LEDs on the Process I/O Board

Process I/O MA,MB

LED	Color	Description
ALM1	Red	<p>[Description] An alarm was issued during communication between the main board and the process I/O board.</p> <p>[Action 1] Replace the process I/O board.</p> <p>[Action 2] Replace the I/O link connection cable.</p> <p>[Action 3] Replace the main board.</p>
FALM	Red	<p>[Description] The fuse on the process I/O board was blown.</p> <p>[Action1] Replace the fuse on the process I/O board.</p> <p>[Action2] Check the cables and peripheral units connected to the process I/O board and replace the defective units.</p> <p>[Action3] Replace the process I/O board.</p>

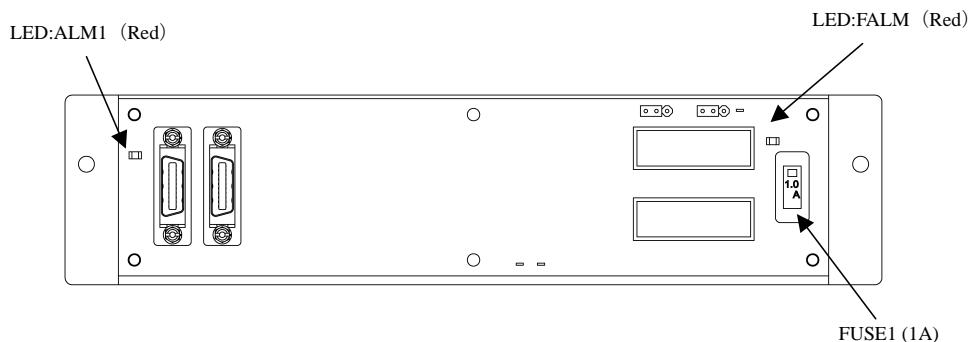


Fig.3.7.4 (a) LEDs on the process I/O board MA

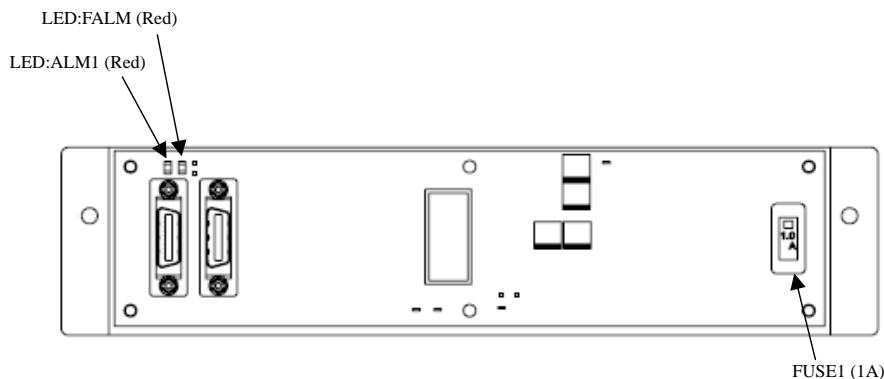


Fig.3.7.4 (b) LEDs on the process I/O board MB

3.8 MANUAL OPERATION IMPOSSIBLE

The following explains checking and corrective action required if the robot cannot be operated manually after the controller is turned on:

- (1) Check and corrective action to be made if manual operation is impossible
 - (Check 1) Check whether the teach pendant is enabled.
(Corrective action)
Turn on the teach pendant "enable".
 - (Check 2) Check whether the teach pendant is handled correctly.
(Corrective action)
To move an axis by manual operation, press the axis selection key and shift key at

- the same time.
Set the override for manual feed to a position other than the FINE and VFINE positions.
- (Check 3) Check whether the ENBL signal of the peripheral device control interface is set to on.
(Corrective action)
Place the peripheral device control interface in the ENBL status.
- (Check 4) Check whether the HOLD signal of the peripheral device control interface (hold status). (Check whether the hold lamp on the teach pendant is on.)
(Corrective action)
Turn off the HOLD signal of the peripheral device control interface.
- (Check 5) Check whether the previous manual operation has been completed.
(Corrective action)
If the robot cannot be placed in the effective area because of the offset of the speed command voltage preventing the previous operation from being completed, check the position deviation on the status screen, and change the setting.
- (Check 6) Check whether the controller is in the alarm status.
(Corrective action)
Release the alarm.
- (2) Check and corrective action to be taken if the program cannot be executed
- (Check 1) Check whether the ENBL signal for the peripheral-device control interface is on.
(Corrective action)
Put the peripheral-device control interface in the ENBL state.
- (Check 2) Check whether the HOLD signal for the peripheral-device control interface is on.
Also check whether the HOLD lamp on the teach pendant is on.
(Corrective action)
If the HOLD signal of the peripheral device control interface is on, turn it off.
- (Check 3) Check whether the previous manual operation has been completed.
(Corrective action)
If the robot cannot be placed in the effective area because of the offset of the speed command voltage, which prevents the previous operation from being completed, check the position deviation on the status screen, then change the setting.
- (Check 4) Check whether the controller is in the alarm status.
(Corrective action)
Release the alarm.

3.9 LEDS ON UNITS SUPPORTING I/O LINK *i*

3.9.1 Meanings of LEDs on Units Supporting I/O Link *i*

The standard I/O Link *i* incorporates three LEDs, “LINK” (green), “ALM” (red), and “FUSE” (red) for each unit separately. These LEDs indicate the states of the units.

The following table lists the ON/OFF states of the LEDs and their meanings.

LED ON/OFF state	ON and OFF duration
Steadily OFF	
Steadily ON	
Blink (1:1)	ON = approx. 0.5 sec, OFF = approx. 0.5 sec
Blink (3:1)	ON = approx. 1.5 sec, OFF = approx. 0.5 sec
Blink (1:3)	ON = approx. 0.5 sec, OFF = approx. 1.5 sec
Blink (1:1 at high speed)	ON = approx. 0.25 sec, OFF = approx. 0.25 sec

LED 「LINK」 (green)

The “LINK” (green) LED indicates the state of communication. The following table lists the meanings of LED states.

Operation mode	LED state	Meaning	Fault location and action
Common	OFF	Power OFF	
	ON	Power ON (before communication start)	
	Blink (1:1 at high speed)	Communication at halt	Communication is at halt because of an alarm. Identify the cause according to the states of the red LED stated below or information displayed on the CNC screen.
I/O Link	Blink (1:3)	Communication in progress	
I/O Link <i>i</i>	Blink (1:1)	Communication in progress	
	Blink (3:1)	Communication in progress (Dual check safety in use)	

LED 「ALM」 (red)

The “ALM” (red) LED indicates an alarm in the unit of interest or a unit subsequent to it. The following table lists the meanings of LED states.

Operation mode	LED state	Meaning	Fault location and action
Common	OFF	Normal state or power OFF	
I/O Link	ON	Alarm	It is likely that the hardware may be defective. Replace the unit.
I/O Link <i>i</i>	ON	Alarm	It is likely that the hardware may be defective. Replace the unit.
	Blink (1:1)	Broken wire between the unit of interest and a unit subsequent to it	Check for a defective cable or a poor cable connection between JD1A on the unit of interest and JD1B on a unit subsequent to that unit. Alternatively, it is likely that there may be noise. Check to see if there is noise around the cable.
	Blink (3:1)	Power failure (including instantaneous power failure) in a unit subsequent to the unit of interest	Identify and remove the cause of a power failure in a unit subsequent to the unit of interest.
	Blink (1:3)	Status alarm	A status alarm, such as a DO ground fault, has occurred. Identify and remove the cause of the alarm.

4 PRINTED CIRCUIT BOARDS

The printed circuit boards are factory-set for operation. Usually, you do not need to set or adjust them. This chapter describes the standard settings and adjustment required if a defective printed circuit board is replaced. It also describes the test pins and the LED indications.

The controller printed circuit board includes the main unit printed circuit board and one or more cards or modules installed horizontally to the main-unit printed-circuit board.

These PC boards have interface connectors, LED indicators, and a plastic panel at the front. At the rear, there is a backplane connector.

4.1 MAIN BOARD

Card and Modules


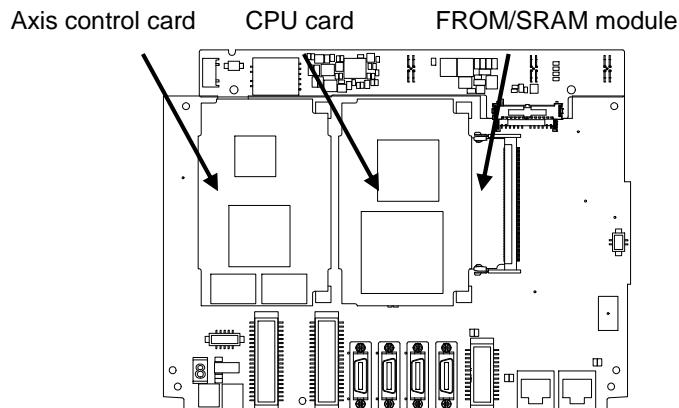


Fig.4.1 Main board

Name	Ordering Specification	Board Specification	Note
Main board	A05B-2650-H001	A20B-8200-0790	Standard Ethernet:1ch
	A05B-2650-H002	A20B-8200-0791	Ethernet:2ch With Vision I/F, Force sensor I/F
	A05B-2650-H003	A20B-8200-0792	Ethernet:2ch With Vision I/F, Force sensor I/F, PMC, HDI
CPU card	A05B-2600-H020	A20B-3300-0686	Standard / SDRAM 32Mbyte
	A05B-2600-H021	A20B-3300-0687	Standard / SDRAM 64Mbyte
	A05B-2600-H022	A20B-3300-0688	Standard / SDRAM 128Mbyte
Axis control card	A05B-2600-H040	A20B-3300-0664	6-axis
	A05B-2600-H041	A20B-3300-0663	12-axis
	A05B-2600-H042	A20B-3300-0662	18-axis
	A05B-2600-H043	A20B-3300-0661	24-axis
FROM/SRAM module	A05B-2600-H060	A20B-3900-0283	FROM 32M/ SRAM 1M
	A05B-2600-H061	A20B-3900-0284	FROM 32M/ SRAM 2M
	A05B-2600-H062	A20B-3900-0285	FROM 32M/ SRAM 3M
	A05B-2600-H063	A20B-3900-0286	FROM 64M/ SRAM 1M
	A05B-2600-H064	A20B-3900-0287	FROM 64M/ SRAM 2M
	A05B-2600-H065	A20B-3900-0288	FROM 64M/ SRAM 3M

Name	Ordering Specification	Board Specification	Note
FROM/SRAM module	A05B-2600-H066	A20B-3900-0280	FROM 128M/ SRAM 1M
	A05B-2600-H067	A20B-3900-0281	FROM 128M/ SRAM 2M
	A05B-2600-H068	A20B-3900-0282	FROM 128M/ SRAM 3M
Fan board	A05B-2650-H001	A20B-8200-0669	
	A05B-2650-H002		
	A05B-2650-H003		

LEDs

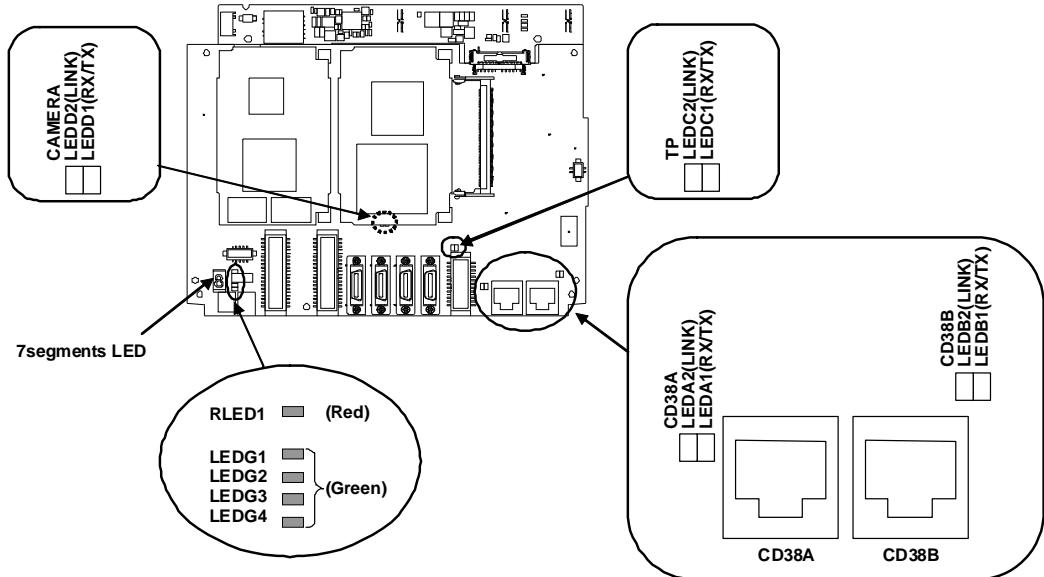

Seven segment LED	Description
	When the alarm condition has occurred in the main board, this LED is turned on. Please see the Section 3.7.TROUBLESHOOTING BASED ON LED INDICATIONS.

ALARM LED	Color	Description
RLED1	Red	When the alarm condition has occurred in the CPU card, this LED is turned on. Please see the Section 3.7.TROUBLESHOOTING BASED ON LED INDICATIONS.

STATUS LED	Color	Description
LEDG1	Green	These LEDs show the operating status of the system. Please see the Section 3.7.TROUBLESHOOTING BASED ON LED INDICATIONS.
LEDG2	Green	
LEDG3	Green	
LEDG4	Green	

ETHERNET LED	Color	Description
RX/TX	Green	Blink during data transmission of Ethernet TP
LINK	Green	Light when a link of Ethernet is established

Note. TP:For Ethernet TP, CAMERA: For camera

4.2 EMERGENCY STOP BOARD:A20B-2005-0150

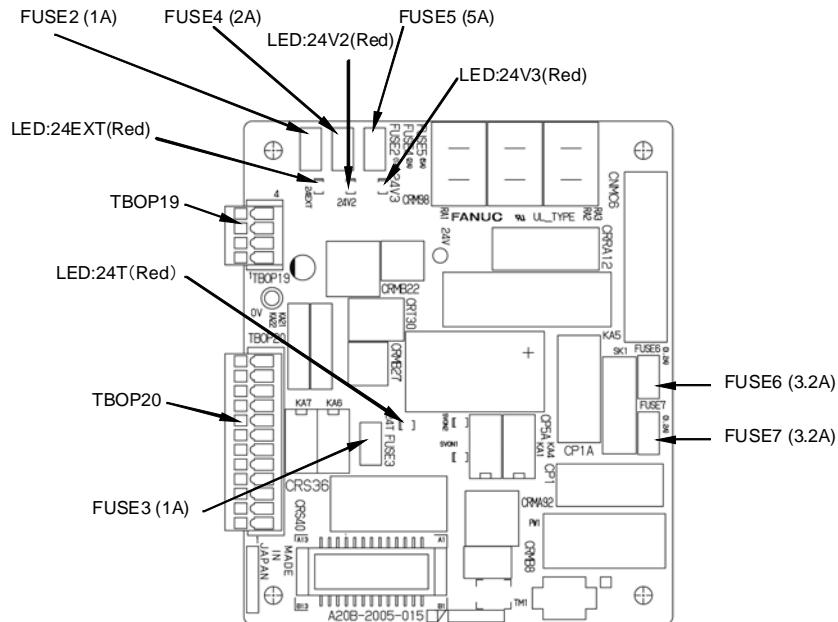


Fig.4.2 Emergency stop board

4.3 BACKPLANE

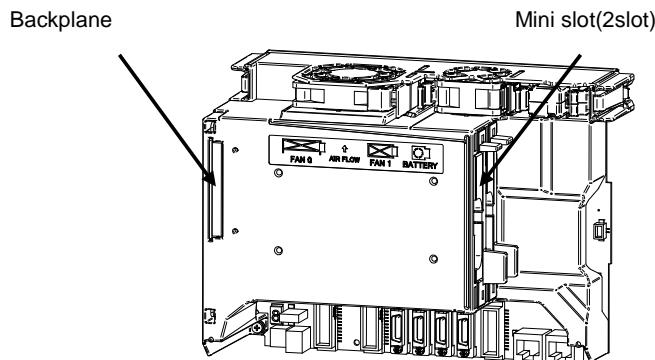


Fig.4.3 Backplane

Name	Ordering Specification	Parts number	Board specification
2 slot backplane	A05B-2650-H080	A05B-2650-C040	A20B-8200-0680

4.4 PROCESS I/O BOARD MA (A20B-2004-0381)

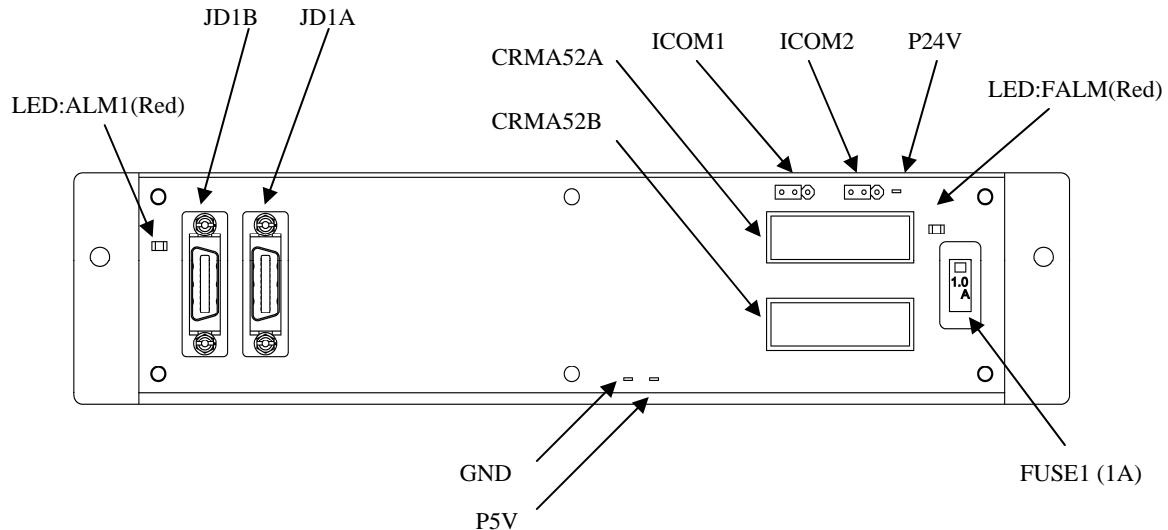


Fig.4.4 Process I/O board MA

(1) Test pins

Name		Use
P24V	+24V	
P5V	+5V	
GND	GND	For measuring the DC supply voltage

(2) Settings

Name		Standard setting	Description
ICOM1	UDI1- 10 (Connector CRMA52A)	Side A	For common voltage setting Side A: +24V common
ICOM2	UDI11- 20 (Connector CRMA52B)		Side B: 0V common

(3) LEDs

Name	Color	Description
ALM1	Red	A communication alarm occurred between the main board and process I/O board.
FALM	Red	The fuse (FUSE1) on the process I/O board has blown.

4.5 PROCESS I/O BOARD MB (A20B-2101-0731)

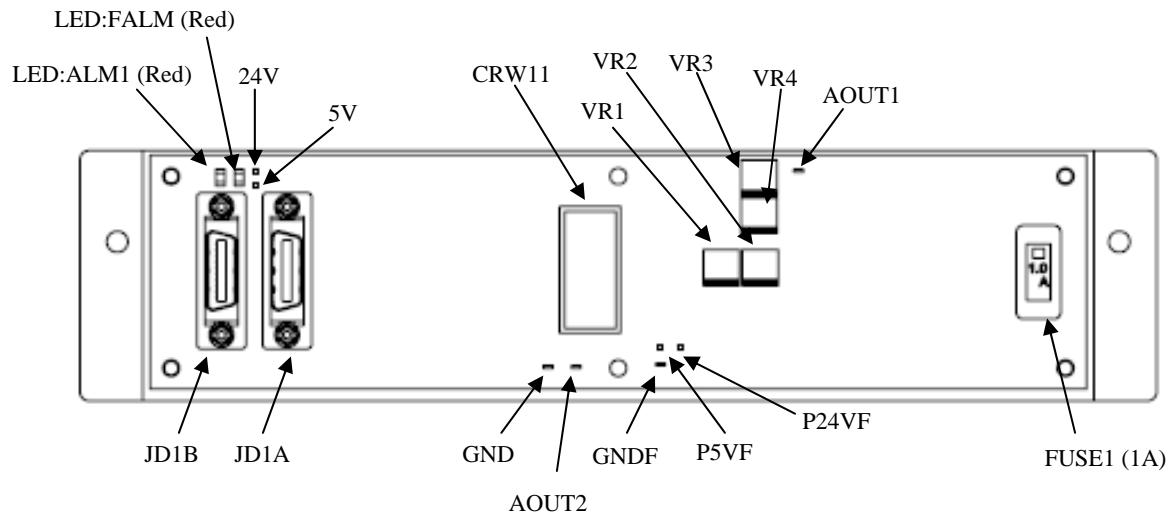


Fig.4.5 Process I/O board MB

(1) Test pins and pads

Name		Use
24V	+24V	
5V	+5V	For measuring the DC supply voltage
GND	GND	
P24VF	+24V	
P5VF	+5V	D/A converter power supply
GNDF	GND	
AOUT1	Channel 1	For analog output signal (D/A) voltage measurement
AOUT2	Channel 2	

(2) Adjustment

VR1/VR2 Channel 1 gain and offset adjustment

Connect the “+” and “-” terminals of a digital voltmeter, respectively, to the AOUT1 check pin and the GNDF check pin (not a general ground point). From the teach pendant, execute AOUT[1]=3413, using a robot program. While observing the voltage at the AOUT1 check pin with the digital voltmeter, adjust potentiometers VR1 and VR2 for 15.0V.


VR3/VR4 Channel 2 gain and offset adjustment

Connect the “+” and “-” terminals of a digital voltmeter, respectively, to the AOUT2 check pin and the GNDF check pin (not a general ground point). From the teach pendant, execute AOUT[2]=3413, using a robot program. While observing the voltage at the AOUT2 check pin with the digital voltmeter, adjust potentiometers VR3 and VR4 for 15.0V.

(3) LEDs


Name	Color	Description
ALM1	Red	A communication alarm occurred between the main CPU and process I/O board.
FALM	Red	The fuse (FUSE1) on the process I/O board has blown.

4.6 CONNECTOR CONVERTER BOARD (A20B-2004-0411)

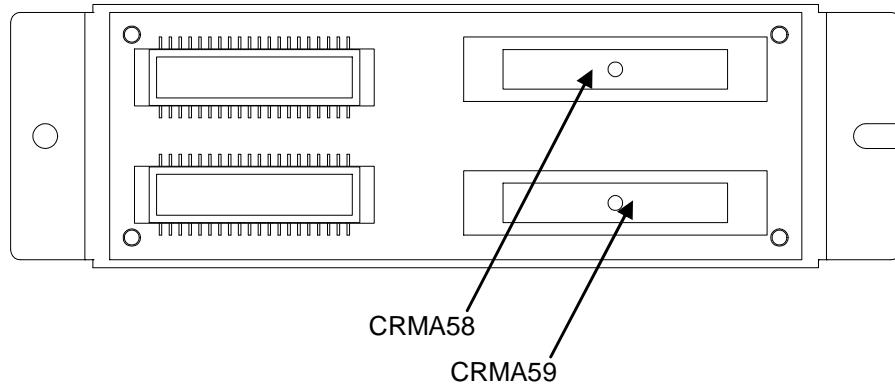

(Connector converter board)

4.7 TERMINAL CONVERTER BOARD (A20B-1009-0690)

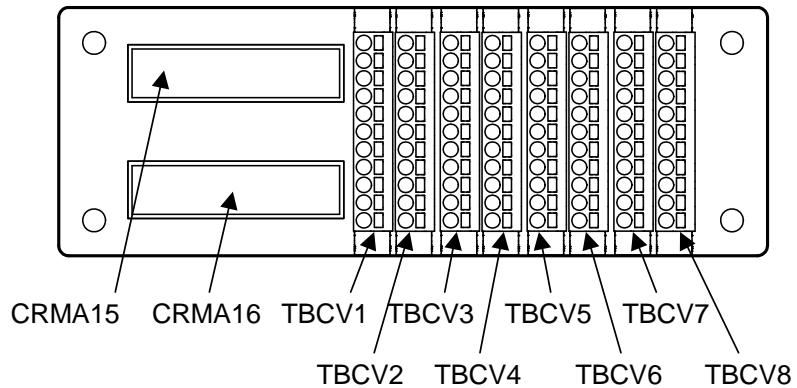

(Terminal converter board)

5 SERVO AMPLIFIERS


The servo amplifiers are factory-set for operation. Usually, you do not need to set or adjust them. This chapter describes the standard settings and adjustment required if a defective servo amplifier is replaced. It also describes the use of test pins and meanings of the LED indications.

Table 5 Servo amplifier specification (Power supply regeneration)

ROBOT	SERVO AMPLIFIER	REGENERATIVE RESISTOR
ARC Mate 120iC, M-20iA M-710iC, R-1000 iA	A06B-6400-H102	A05B-2650-C101
R-2000 iC, M-2iA, M-3iA	A06B-6400-H002	A05B-2650-C101
ARC Mate 100iC M-10iA	A06B-6400-H003	A05B-2650-C101
ARC Mate 50iD	A06B-6400-H005	A05B-2650-C101
LR Mate 200iD, M-1iA ARC Mate 50iD (Limited type)	A06B-6400-H005	A05B-2650-C100

Check that the voltage is not higher than 50V.


LED : V4 (red)

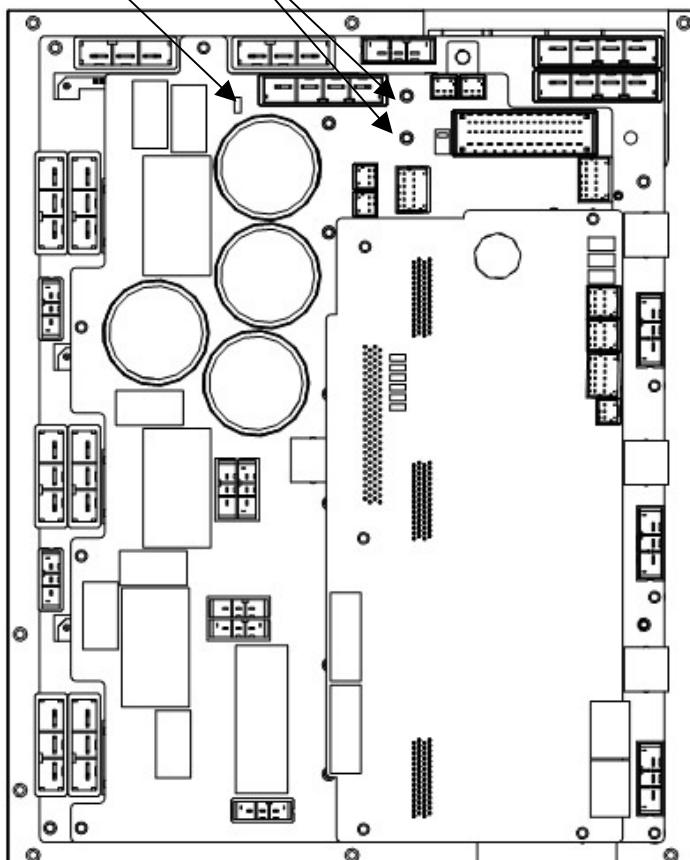

⚠️ WARNING

Before touching the servo amplifier, for example, for maintenance purposes, check the voltage at the screw above the LED "V4" with a DC voltage tester to see if the remaining voltage is not higher than 50V.

5.1 LEDS OF SERVO AMPLIFIER

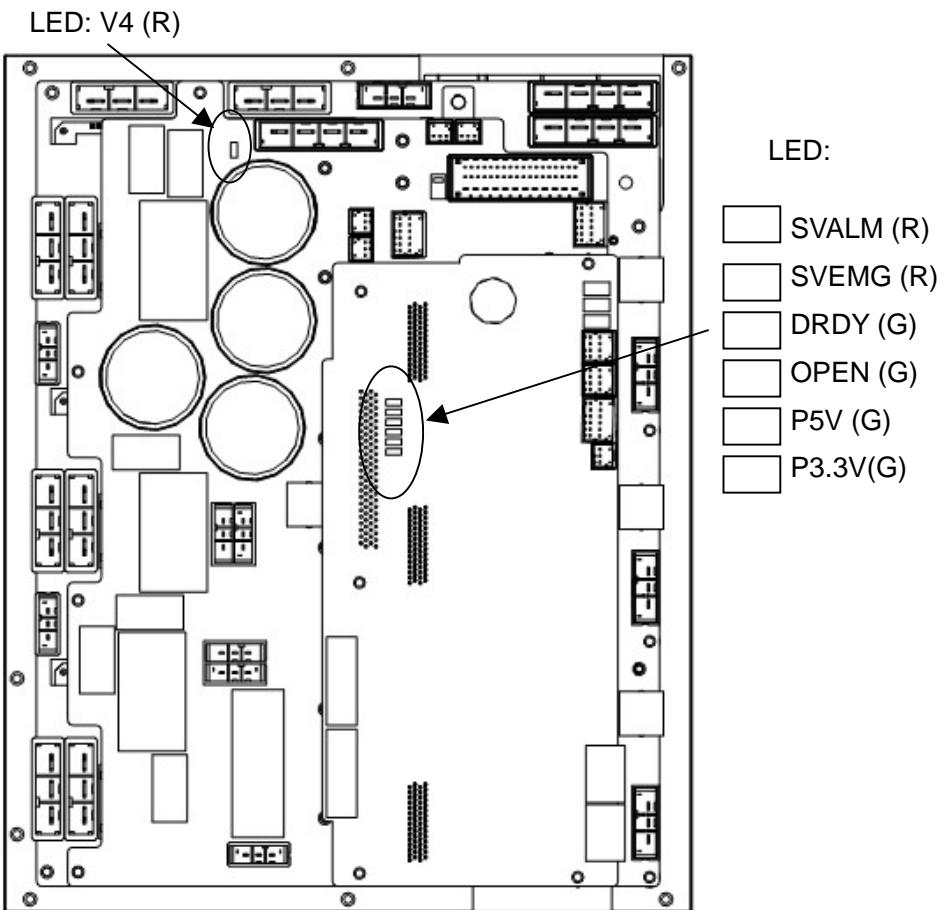

LED	Color	Description
V4	Red	Lights when the DCLINK circuit inside the servo amplifier is charged to reach a specific voltage.
SVALM	Red	Lights when the servo amplifier detects an alarm.
SVEMG	Red	Lights when an emergency stop signal is input to the servo amplifier.
DRDY	Green	Lights when the servo amplifier is ready to drive the servo motor.
OPEN	Green	Lights when the communication between the servo amplifier and the main board is normal.
P5V	Green	Lights when the power supply circuit inside the servo amplifier outputs a voltage of +5 V normally.
P3.3V	Green	Lights when the power supply circuit inside the servo amplifier outputs a voltage of +3.3 V normally.

5.2 SETTING OF SERVO AMPLIFIER

Table 5.2 Settings

Name	Standard setting	Description
COM1	Side A	Robot Digital Input (RI) device common voltage. Side A: +24V common Side B: 0V common

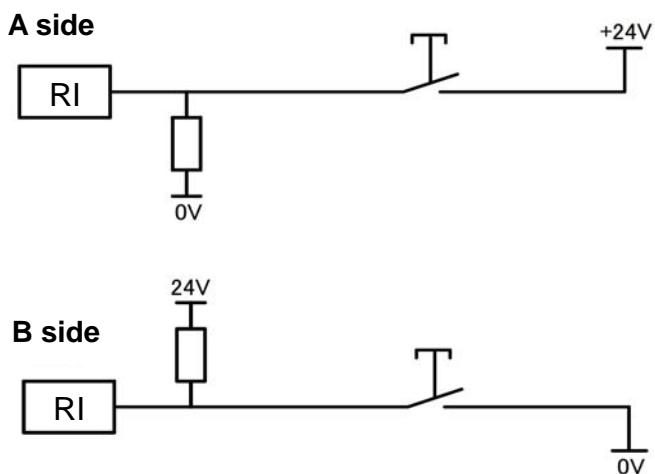
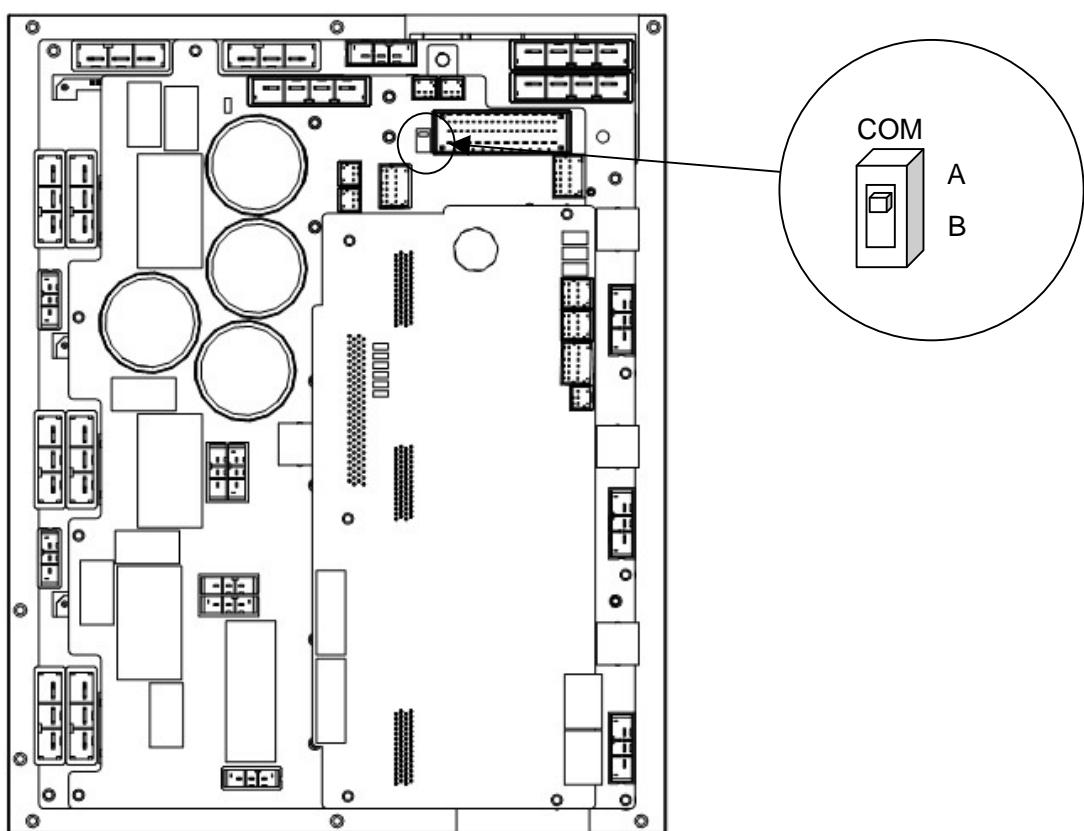


Fig.5.2 Circuit based on jumper pin location or setting of switch

5.3 6-AXIS SERVO AMPLIFIER SPECIFICATIONS

SPECIFICATIONS TABLE : (A06B-6400-H***)

UNIT		A06B-6400-H102	A06B-6400-H002	A06B-6400-H003	
INPUT RATING	VOLTAGE	AC200~AC240V (+10% / -15%), 50/60Hz, 3phase			
RATINGS	POWER CAPACITY	5.1KVA	5.1KVA	2.7KVA	
OUTPUT RATING	MAXIMUM OUTPUT	240V ~			
	CURRENT : J1	80Ap / 23.0Arms	80Ap / 23.0Arms	40Ap / 13.4Arms	
	CURRENT : J2	80Ap / 23.0Arms	80Ap / 23.0Arms	40Ap / 13.4Arms	
	CURRENT : J3	80Ap / 23.0Arms	80Ap / 23.0Arms	20Ap / 6.5Arms	
	CURRENT : J4	40Ap / 13.4Arms	40Ap / 13.4Arms	20Ap / 6.5Arms	
	CURRENT : J5	40Ap / 13.4Arms	40Ap / 13.4Arms	20Ap / 6.5Arms	
	CURRENT : J6	40Ap / 13.4Arms	40Ap / 13.4Arms	20Ap / 6.5Arms	
	TOTAL CURRENT	70Arms	70Arms	30Arms	

UNIT		A06B-6400-H005
INPUT RATING	VOLTAGE	AC200~AC240V (+10% / -15%), 50/60Hz, 3/1phase
RATINGS	POWER CAPACITY	1.3/1.4 (3/1phase)
OUTPUT RATING	MAXIMUM OUTPUT	240V ~
	CURRENT : J1	20Ap / 3.6Arms
	CURRENT : J2	20Ap / 3.6Arms
	CURRENT : J3	20Ap / 3.6Arms
	CURRENT : J4	20Ap / 3.6Arms
	CURRENT : J5	10Ap / 2.0Arms
	CURRENT : J6	10Ap / 2.0Arms
	TOTAL CURRENT	18.4Arms

6 POWER SUPPLY

Setting and adjustment of the power supply is factory-set for operation. Usually, you do not need to set or adjust it.

6.1 BLOCK DIAGRAM OF THE POWER SUPPLY

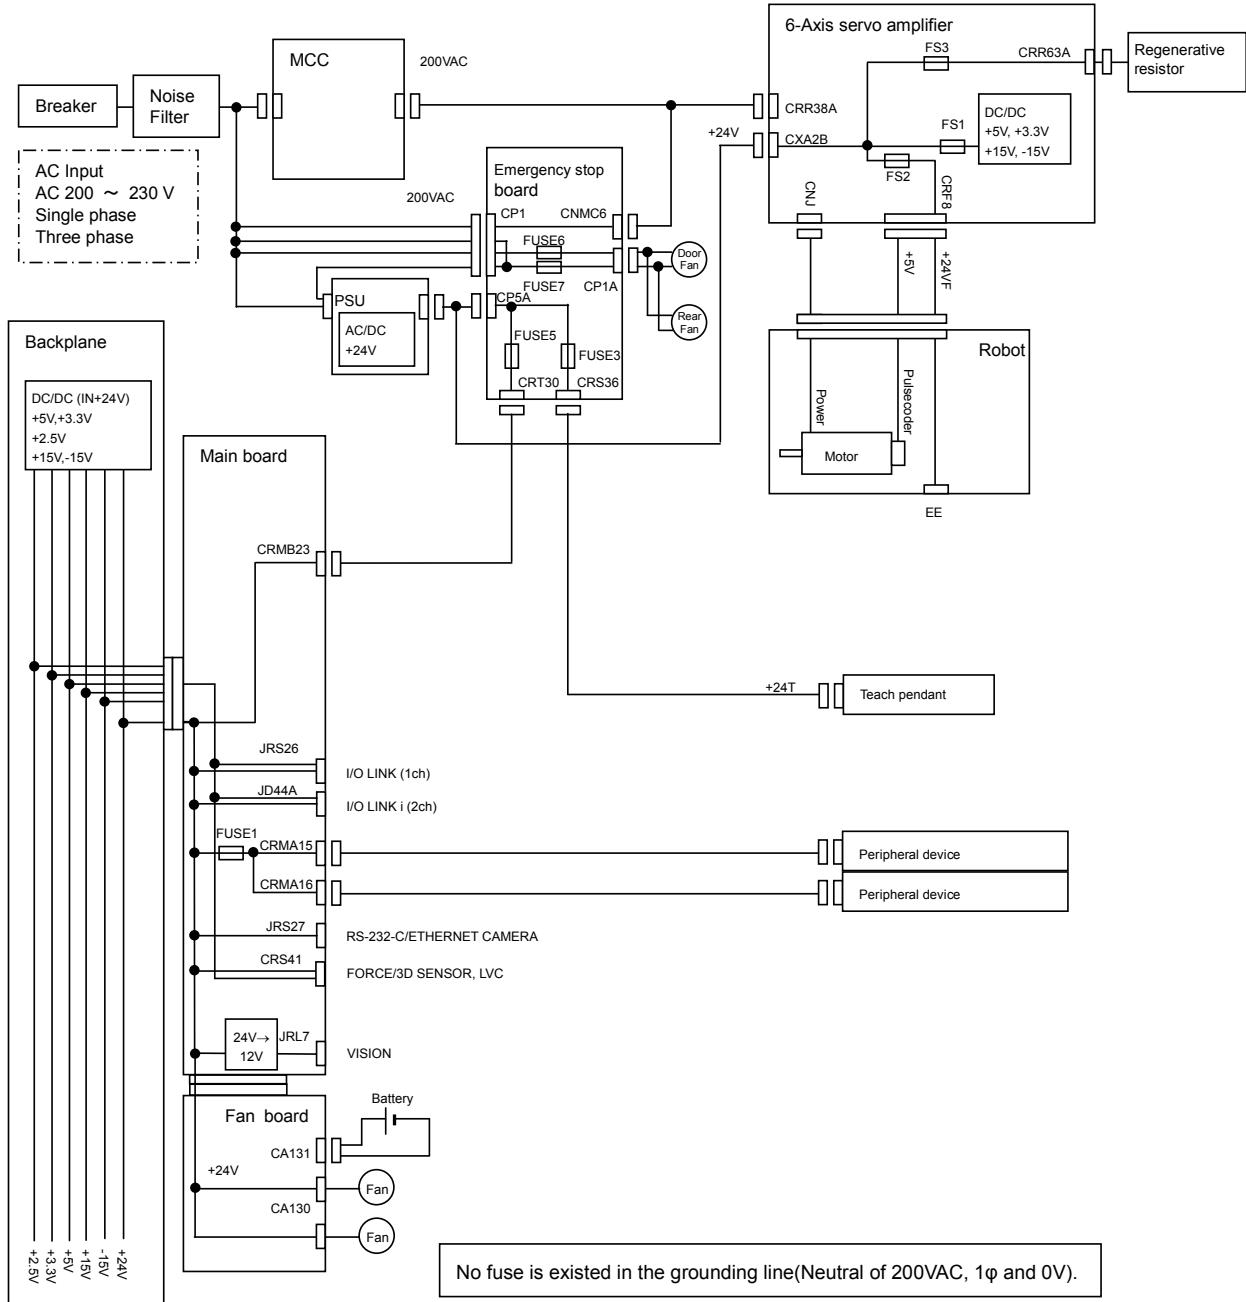


Fig.6.1 Block diagram of the power supply

7 REPLACING UNITS

This section explains how to replace each unit in the control section.

⚠ WARNING

Before you start to replace a unit, turn off the controller main power. Also keep all machines in the area of the controller switched. Otherwise, you could injure personnel or damage equipment.

⚠ WARNING

Before replacing components, read the maintenance manual to understand the replacement procedure. Performing an incorrect replacement procedure can lead to an unpredictable accident, resulting in breakage in the robot or personal injury.

⚠ WARNING

When a heavy component or unit is to be handled, support the workers with a crane or the like not to apply excessive loads to the workers. Note that incorrect handling can cause serious injury to the workers.

⚠ CAUTION

Components in the controller heat up, so care should be taken. When you have to touch a heated component, prepare a protector such as heat-resistant gloves.

7.1 REPLACING THE PRINTED-CIRCUIT BOARDS

⚠ CAUTION


When you replace printed-circuit boards, observe the following cautions:

- 1 Keep the controller power switched off.
- 2 When you remove a printed-circuit board, do not touch the semiconductor devices on the board with your hand or make them touch other components.
- 3 Make sure that the replacement printed-circuit board has been set up appropriately. (Setting plug etc.)
- 4 After replacing a printed-circuit board, make adjustments correctly if the board needs to be adjusted.
- 5 If the backplane board, power supply unit, or main board (including cards and modules) is replaced, it is likely that robot parameters and taught data are lost. Before you start to replace these components, save a backup copy of the robot parameters and taught data to an external memory device.
- 6 Before you disconnect a cable, note its location. If a cable is detached for replacement, reconnect it exactly as before.

7.1.1 Replacing the Backplane Board (Unit)

Replace the backplane board together with the plastic case.

- (1) Remove the (2) screws fastening the case. (When cables are connected to option boards, detach the cables.)
- (2) Release the latches in the upper part on each side of the case from the base metal plate, and pull out the case. The case can be pulled out with the backplane board, fan, and battery installed in the case.

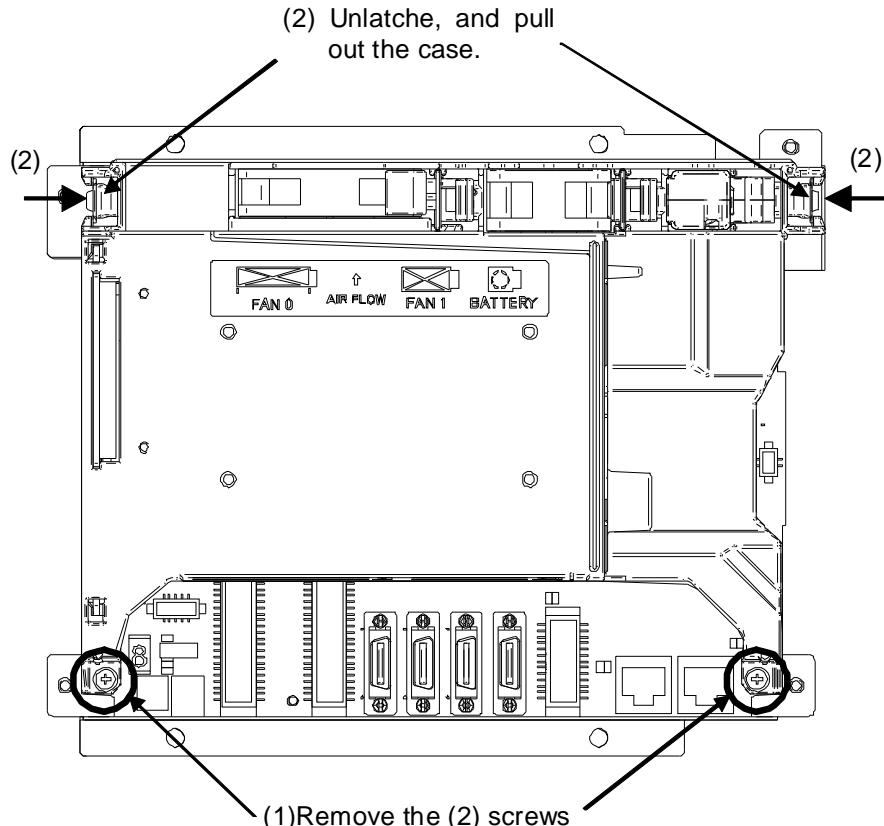

- (3) Replace the backplane unit with a new one.
- (4) Confirm that the screw and latch positions of the case are in place, and slowly set the case. When the case is attached, the backplane board installed in the case is connected to the main board with the connectors. When setting the case, check that the connectors are connected properly, and be careful not to apply excessive force.
- (5) After confirming that the case is surely latched, tighten the (2) screws of the case. Lightly press the fan and battery, and make sure that the connectors are connected securely. (If the cables of option boards have been detached, connect the cables again.)

CAUTION

When you remove the backplane unit, be sure that the battery is good (3.1-3.3VDC) and it is installed correctly. USE STATIC PROTECTION.


7.1.2 Replacing the Main Board

The backplane unit incorporates the backplane board, main board, and option boards.

CAUTION

Before starting replacement, turn off the main power of the controller. The main board is equipped with battery-backed memory devices for holding robot parameters and taught data. When the main board is replaced, the memory contents are lost.

- (1) Remove the case. (See Subsection 7.1.1.)
- (2) Detach cables from the connectors on the main board, and remove the (3) screws fastening the main board. The main board and fan board are connected directly with connector CA132. Detach the main board by sliding the main board downward.

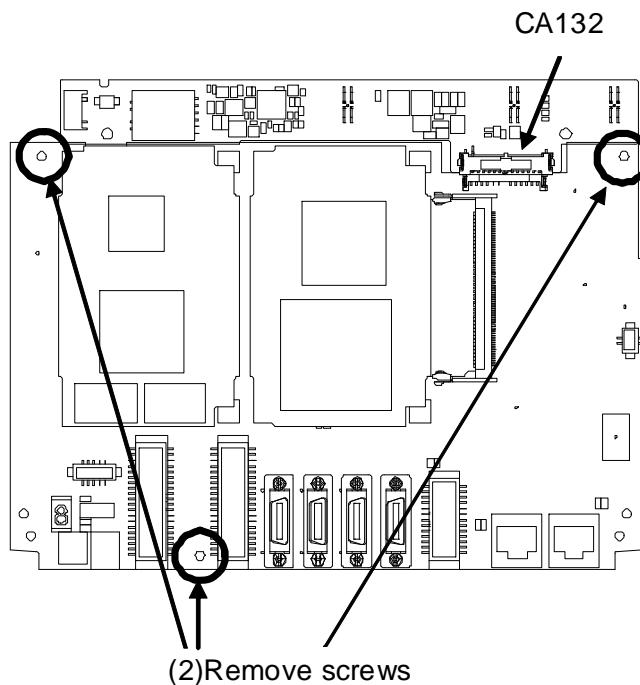

- (3) Replace the main board with a new one.
- (4) Install the case. (See Subsection 7.1.1.)

7.2 REPLACING CARDS AND MODULES ON THE MAIN BOARD

CAUTION

Before you start to replace a card or module, make a backup copy of robot parameters and programs. If the FROM/SRAM module is replaced, SRAM memory contents are lost.

Demounting a Card

1. Pull up the spacer metal fitting. (Fig. 7.2 (a))
2. Insert a finger into the rear of the card and pull up the card slowly in the arrow direction. (Fig. 7.2 (b))
(Note: At this time, hold the neighborhood of the main board on the opposite side with the other hand whenever possible. A force of 7 to 8 kgf is required for extraction.)

3. When one side of the card board is raised slightly by pulling up, do not fully extract the card board, but push back the card softly.
4. When the card board is pushed back to be parallel with the main board, pinch two sides of the card board and pull up the card board. This completes the extraction of the card board.

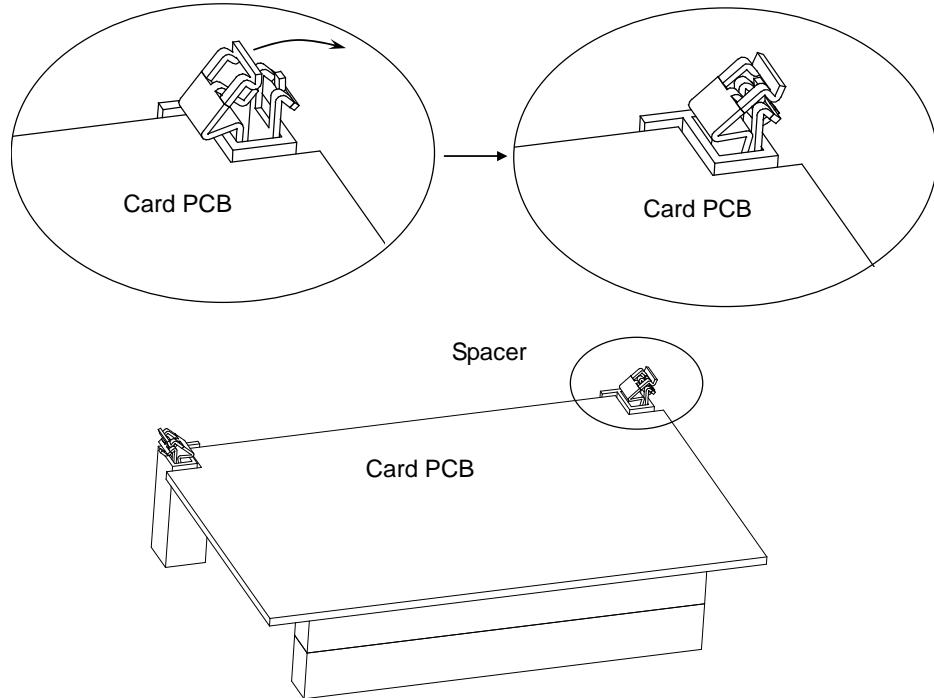


Fig.7.2 (a) Demounting a card

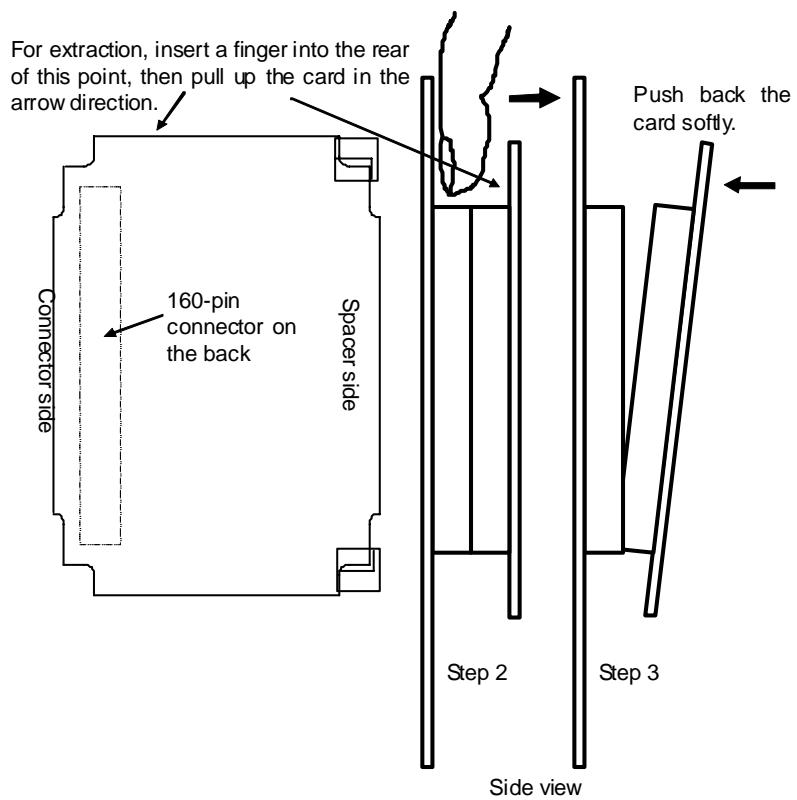


Fig.7.2 (b) Demounting a card

Mounting a Card

1. Check that the metal fittings of the spacers are raised. (Fig.7.2 (c))
2. To align the board insertion position, touch the spacer end faces of the board with the spacer. (Fig. 7.2 (d)) (At this time, the board is touching the spacers only.)
3. While aligning the board with the spacers, lower the connector side slowly until the connectors touch each other. (Fig.7.2 (d)) (do not press until aligned.)
4. The mating position can be determined more easily by moving the card back and forth until the alignment "nubs" and "holes" are aligned on the connectors. The board must be turned to view the board connectors on the side. (Fig.7.2 (d))
5. At this time, push on the back of the board over the connector. The force required for connector insertion is about 10 kgf. If the connector will not insert easily, re-check the alignment of the connector to prevent damaging the connector(s). In case that CPU CARD is standard, do not press the radiation fin installed on the CPU and LSI chip. Otherwise, the CPU or LSI chip can be damaged. (Fig.7.2 (e))
6. Push in the spacer metal fitting to lock the board in place. (Fig.7.2 (f))

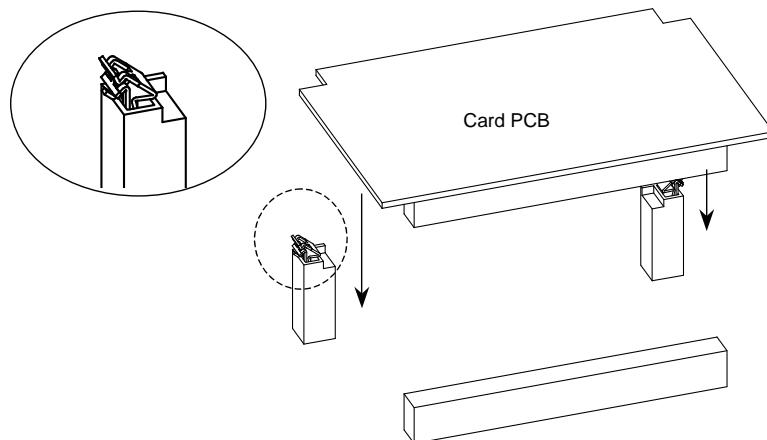


Fig.7.2 (c) Mounting a card


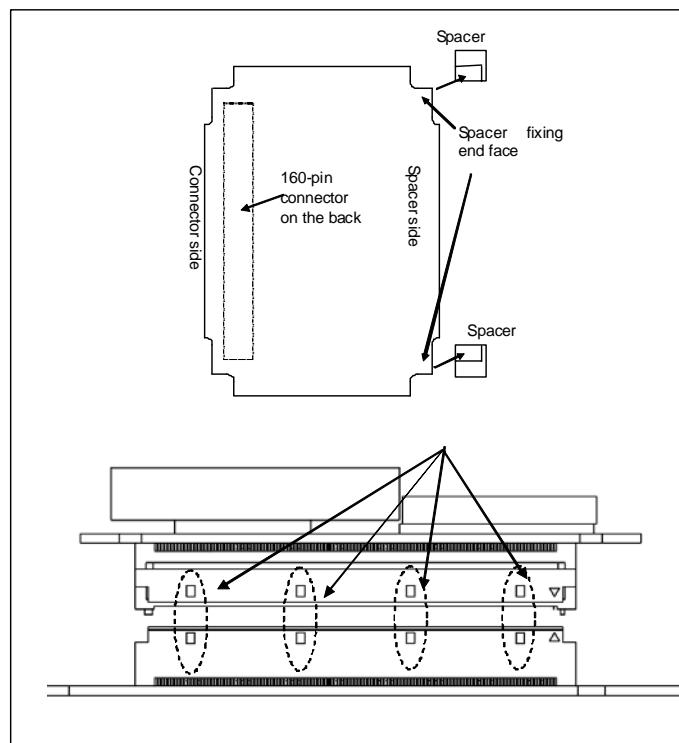


Fig.7.2 (d) Mounting a card

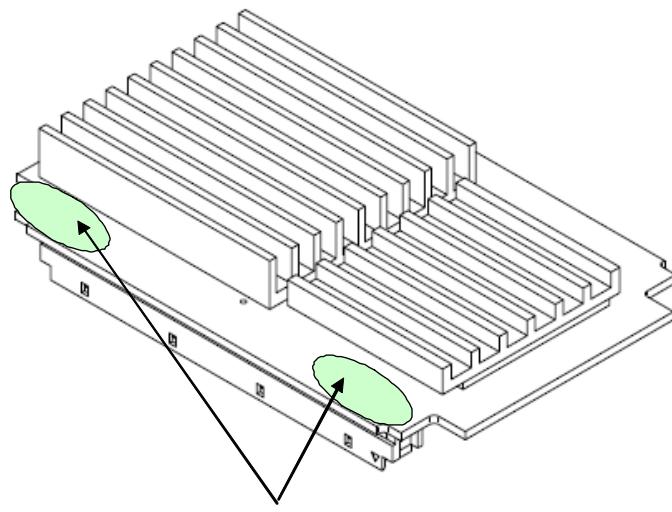

Press here only for insertion.
(Standard)

Fig.7.2 (e) Mounting a card

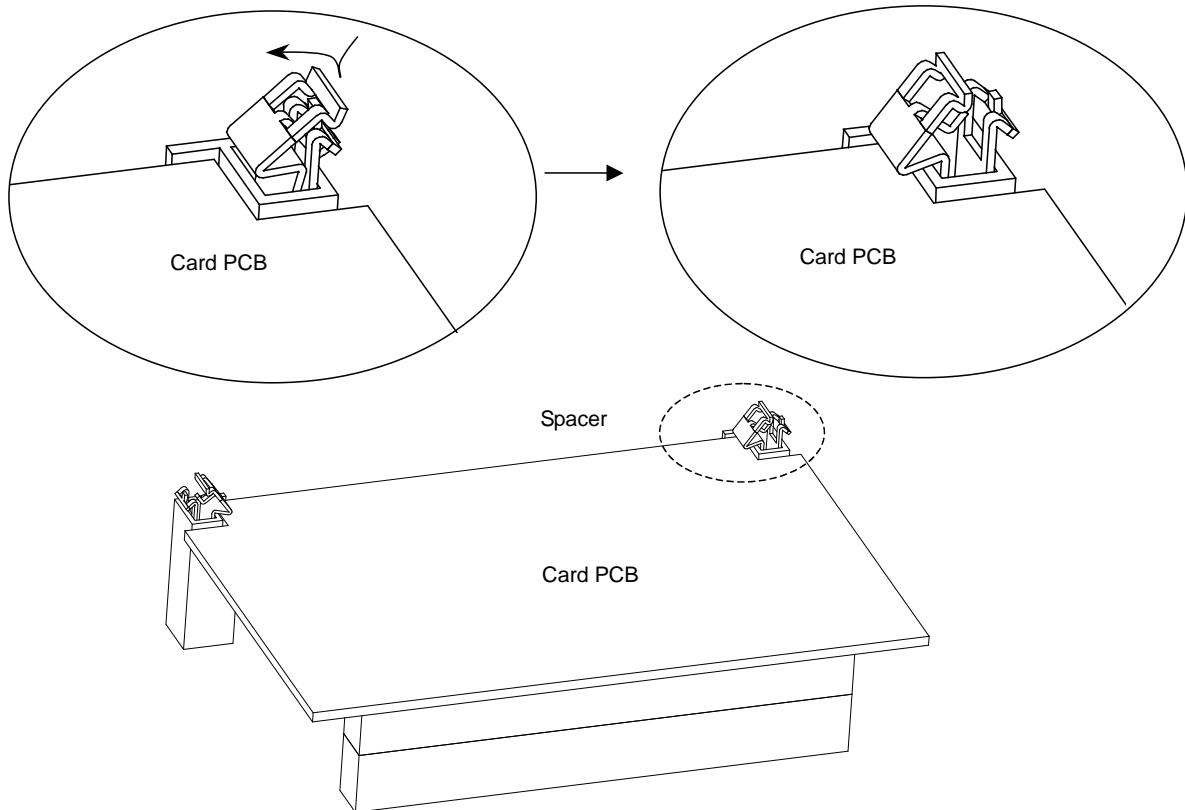


Fig.7.2 (f) Mounting a card

Demounting a module


⚠ CAUTION

When replacing the module, be careful not to touch the module contact. If you touch the contact inadvertently, wipe out dirt on the contact with a clean cloth.


- (1) Move the clip of the socket outward. (a)
- (2) Extract the module by raising it at a 30 degree slant and pulling outward.

Mounting a module

- (1) Insert the module at a 30 degree slant into the module socket, with side B facing upward. (b)
- (2) Push the module inward and downward until it is locked. (c)
- (a)

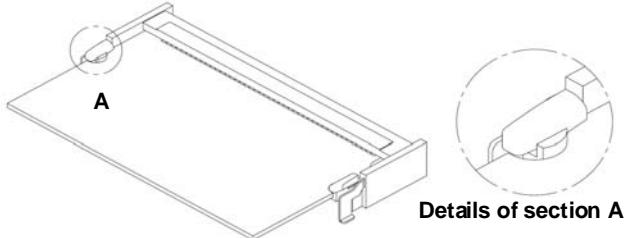

(b)

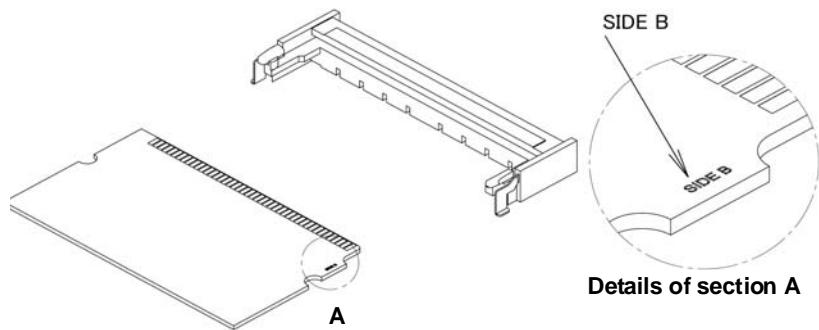

(c)

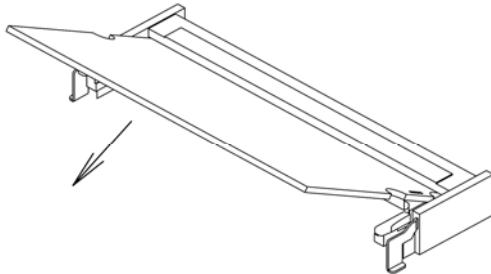


Fig.7.2 (g) Demounting/mounting a module

Figure 7.3 (d) shows the locations of the cards and modules.

Axis control card CPU card FROM/SRAM module


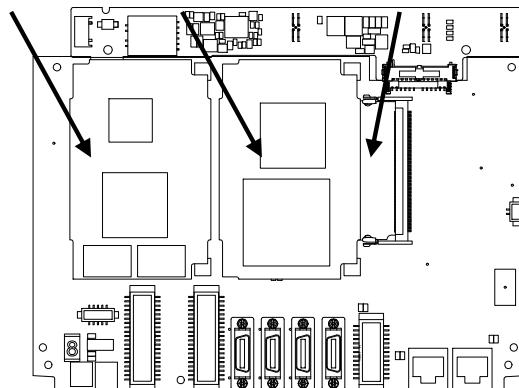


Fig.7.2 (h) Locations of cards and modules

7.3 REPLACING THE E-STOP UNIT

- (1) Detach the cables from the E-stop unit.
- (2) Remove (4(small size), 2(middle/large size)) screws, and replace the E-stop unit.
- (3) Reconnect the cables.

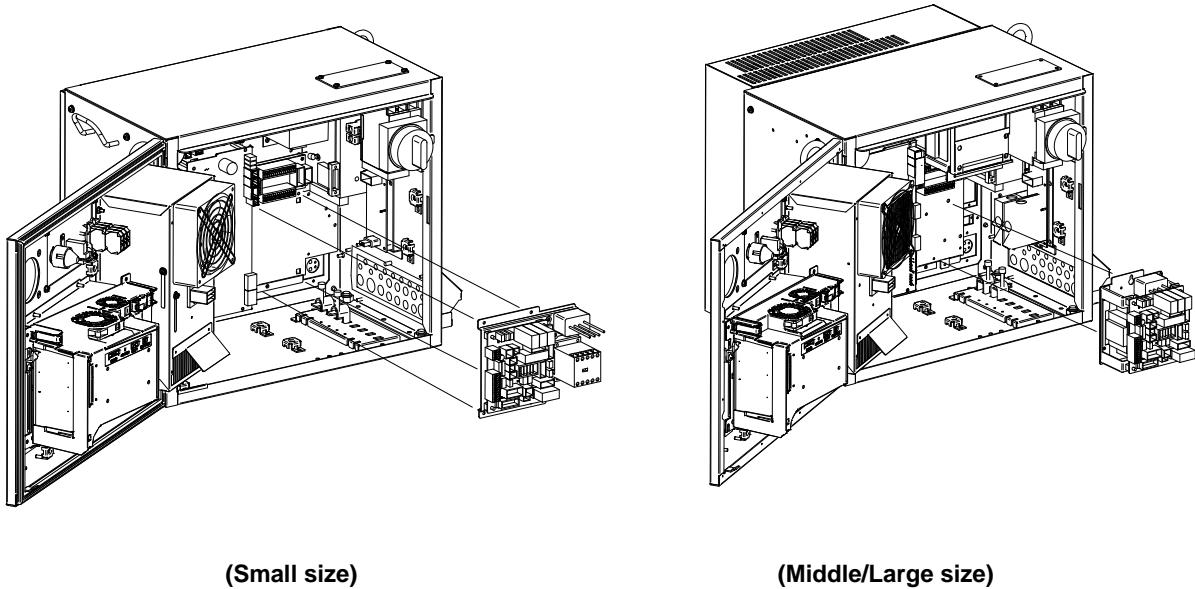


(Small size)

(Middle/Large size)




7.4 REPLACING THE EMERGENCY STOP BOARD

- (1) Detach the cables from the emergency stop board unit.
- (2) Unlock the nylon latches (4 places) holding the board, and replace the board.
- (3) Reconnect the cables.

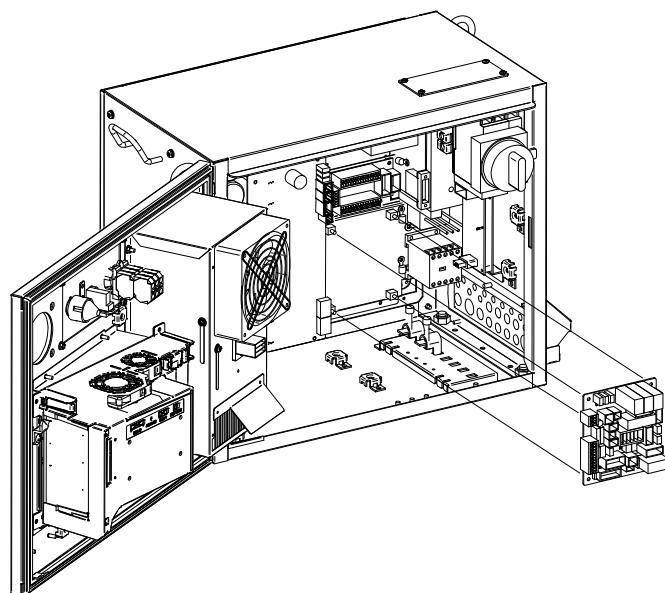

7.5 REPLACING THE POWER SUPPLY UNIT

- (1) Detach the cable from the power supply unit.
- (2) Remove the (2) screws, and remove the power supply unit.
- (3) Install a replacement power supply unit by reversing above steps.

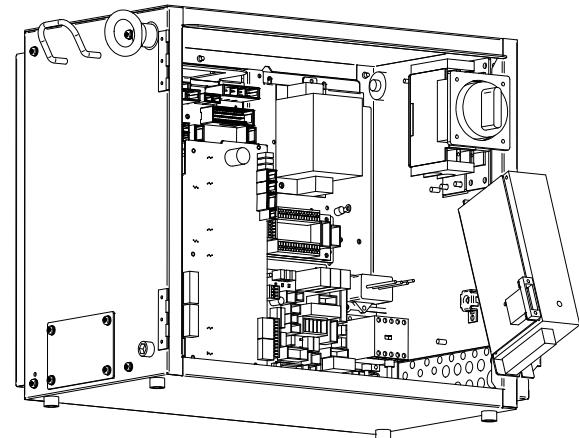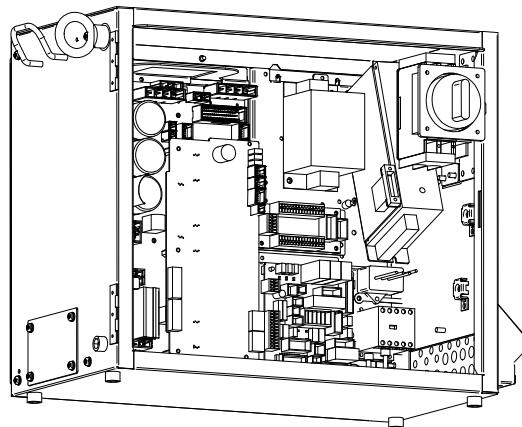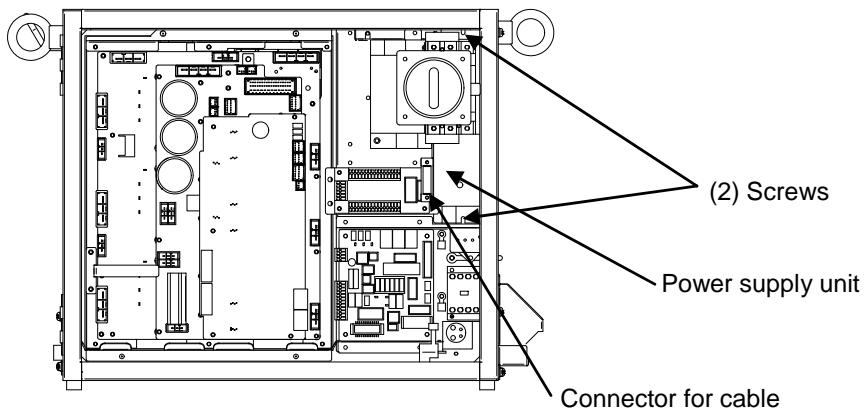


7.6 REPLACING THE REGENERATIVE RESISTOR UNIT


⚠ WARNING

Before you start, turn off the controller main power. Be careful not to get burned, because the regenerative resistor unit is very hot immediately after operation.


- (1) Remove the (4) screws fastening the rear plate of the cabinet, and remove the rear plate.
- (2) Unplug connector CRR63 and CRR11 at the 6-Axis servo amplifier.
- (3) Remove the (4) screws on the regenerative resistor unit and remove it.
- (4) Install the replacement unit by reversing above steps.

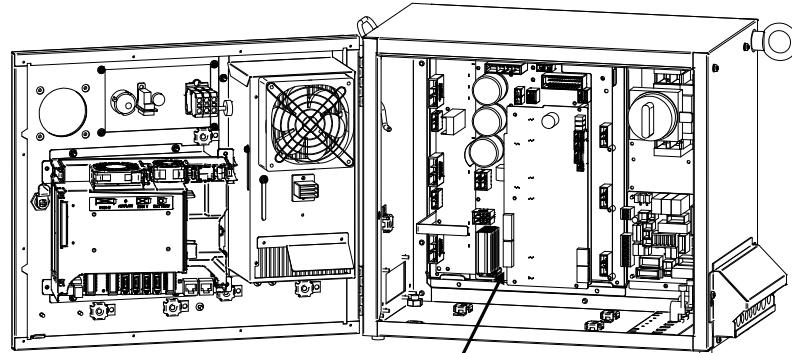

6-Axis servo amplifier

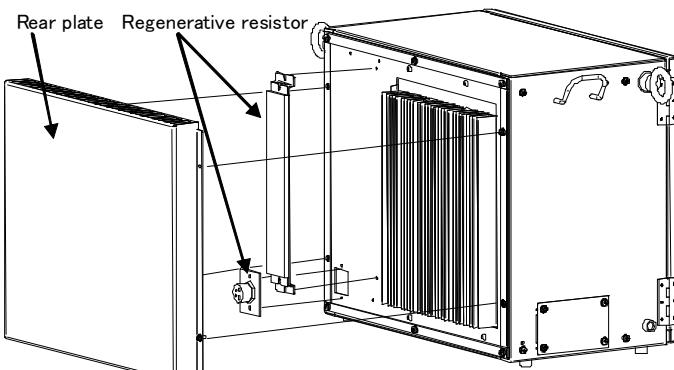

(Small size)

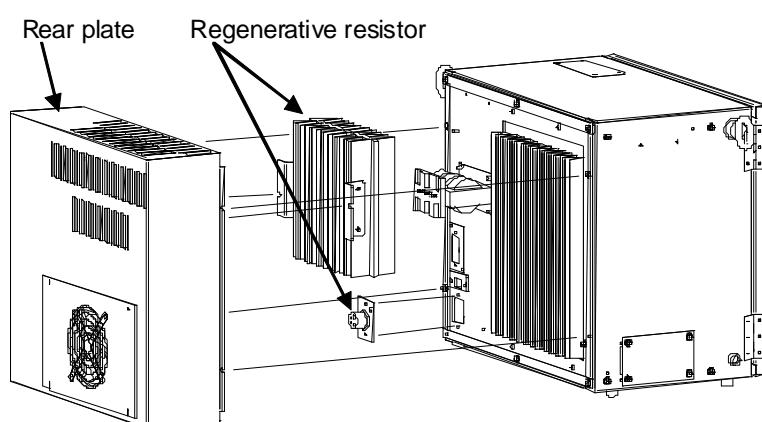

(Middle/Large size)

Fig. 7.6 Regenerative resistor

7.7 REPLACING THE 6-AXIS SERVO AMPLIFIER

⚠ WARNING

Before touching the 6-Axis servo amplifier, for example, for maintenance purposes, check the voltage at the screw above the LED "V4" with a DC voltage tester to see if the remaining voltage is not higher than 50V.


⚠ CAUTION

Because the 6-Axis servo amplifier is heated immediately after operation, leave the 6-Axis servo amplifier until it cools down thoroughly, before replacing it.

- (1) Check the voltage at the screw above the LED "V4" with a DC voltage tester to see if the remaining voltage is not higher than 50V.

Check that the voltage is not higher than 50V.

LED : V4 (red)

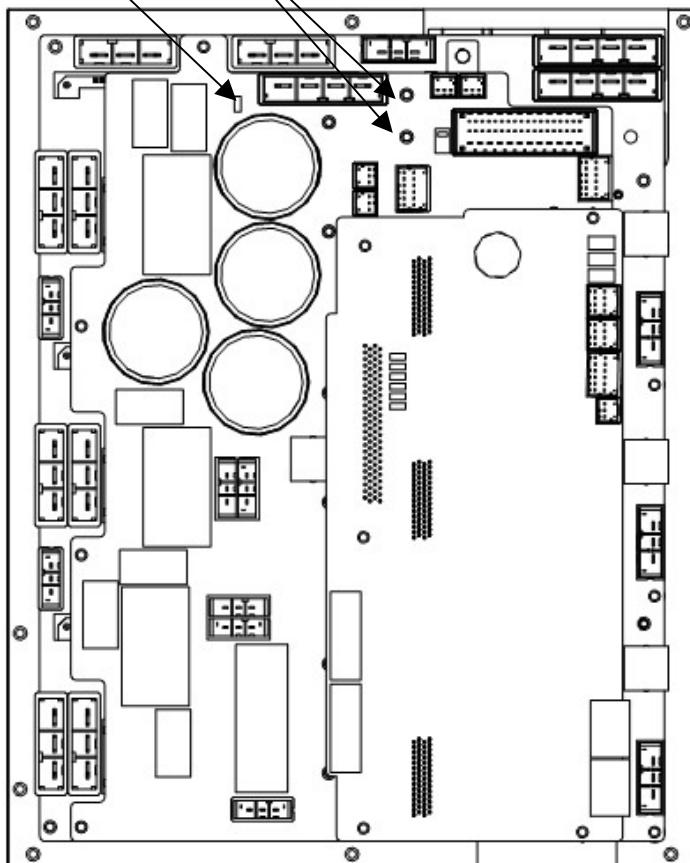

- (2) Detach the cables from the 6-Axis servo amplifier.
- (3) Remove (2) screws fastening the 6-Axis servo amplifier.

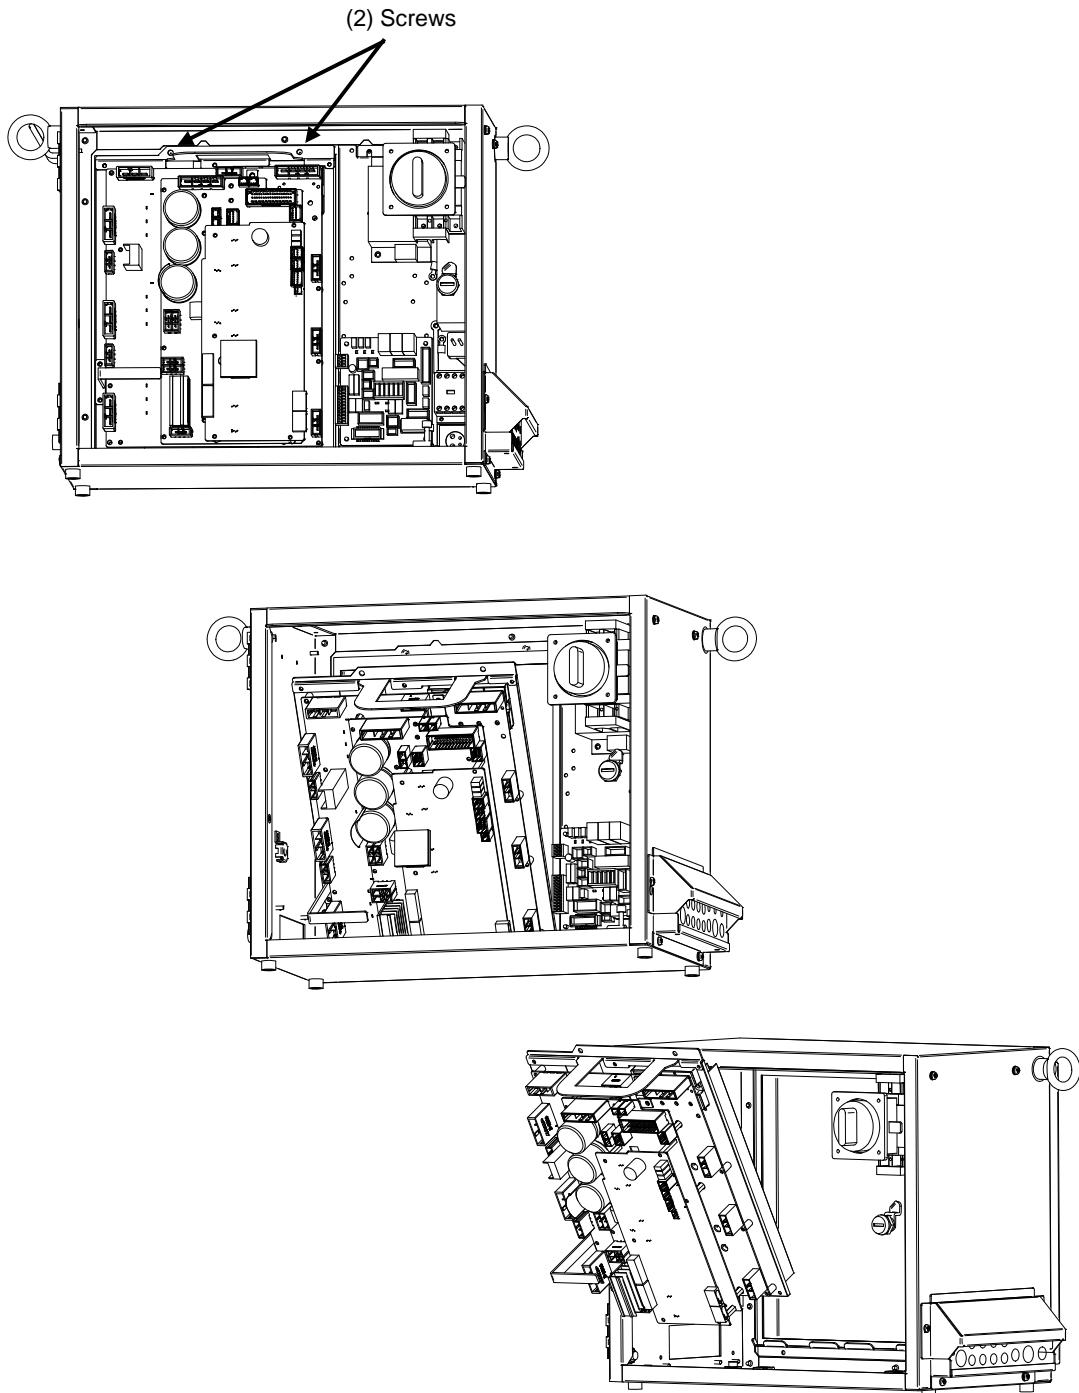


Fig.7.7 Replacing the servo amplifier

- (4) Hold the handle at the upper side of the amplifier and remove 6-Axis servo amplifier.
- (5) Install a replacement amplifier by reversing above procedure.

⚠ CAUTION

If the controller is not fixed on the floor, the controller falls down when the 6-Axis servo amplifier is removed.

7.8 REPLACING THE TEACH PENDANT

The specifications of the teach pendant vary with its use. When you replace the teach pendant, check its specifications carefully.

- (1) Be sure that the power of a robot controller is off.
- (2) Detach the cable from the teach pendant.
- (3) Replace the teach pendant.


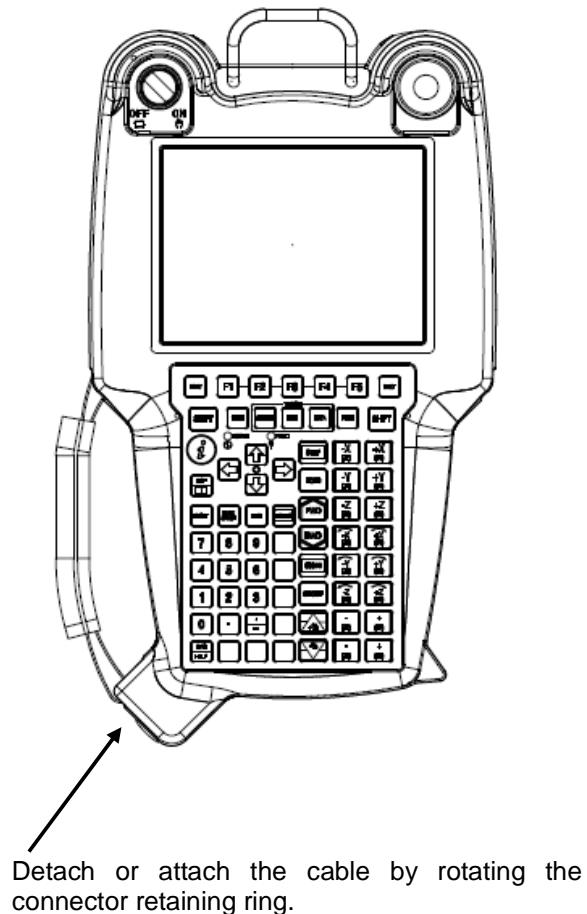


Fig.7.8 Replacing the teach pendant

7.9 REPLACING THE CONTROL SECTION FAN MOTOR

The control section fan motor can be replaced without using a tool. The fan motor is mounted on the backplane unit.

- (1) Be sure that the power to the robot controller is turned off.
- (2) Pull out the fan motor to be replaced. (When pulling out the fan motor, hold the latch of the fan unit, and unlatch the unit from the case.)

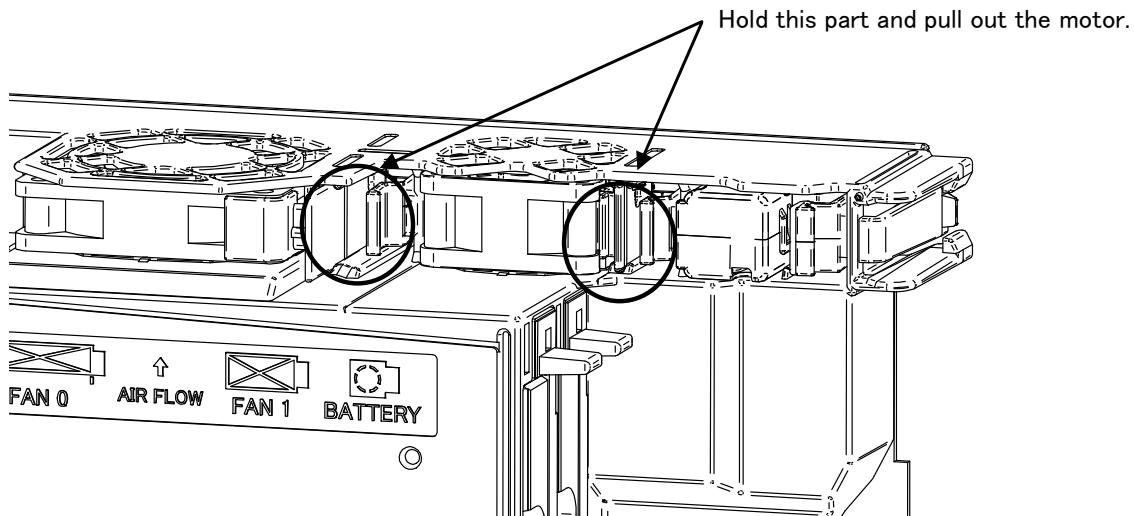

- (3) Install a new fan unit. (Insert the unit until the latch of the unit snaps into the case.)

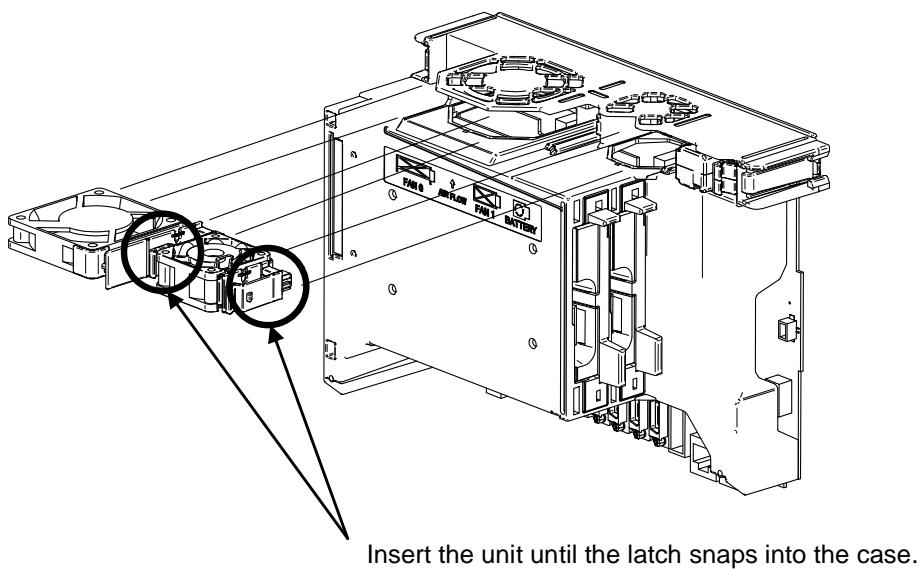


Fig.7.9 Replacing the control section fan motor

7.10 REPLACING THE AC FAN MOTOR

⚠️ WARNING

Do not touch the fan motor when it is rotating, or you could be injured.

7.10.1 Replacing the Heat Exchanger and Door Fan Unit (A-cabinet)

The heat exchanger of the A-cabinet is inside its door. To replace the heat exchanger, it is necessary to remove the door fan unit in advance.

Door fan unit

- (1) Remove (4) M4 screws.
- (2) Disconnect the connector at the FAN.
- (3) Mount the replacement fan unit by reversing above procedure. Be careful not to let the cable get caught in the fan.

Heat exchanger

- (1) Dismount the door fan unit. (See the above procedure.)
- (2) Open the cabinet door, and detach cables.
- (3) Remove retaining (4) M5 nuts, and dismount the unit.
- (4) Mount the replacement unit by reversing above procedure.

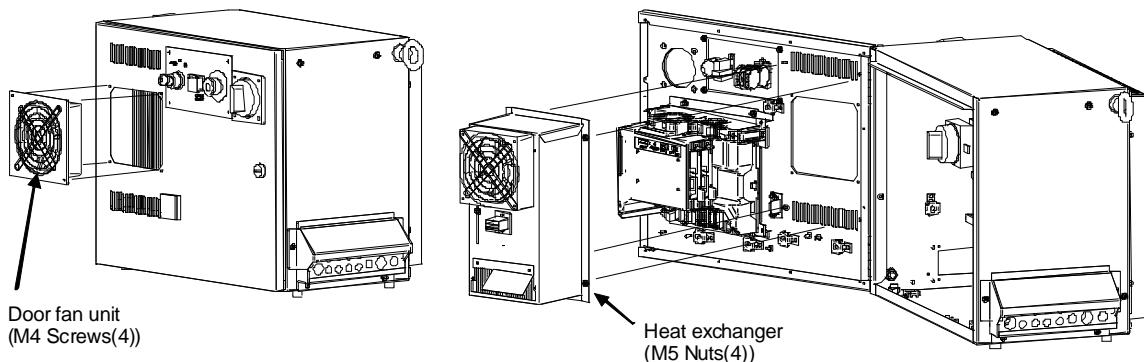


Fig.7.10.1(a) Replacing the heat exchanger and door fan unit

Rear fan unit

- (1) Remove (4) M4 screws.
- (2) Dismount the rear fan unit and disconnect the connector.
- (3) Mount the replacement fan unit by reversing above procedure. Be careful not to let the cable get caught in the fan.

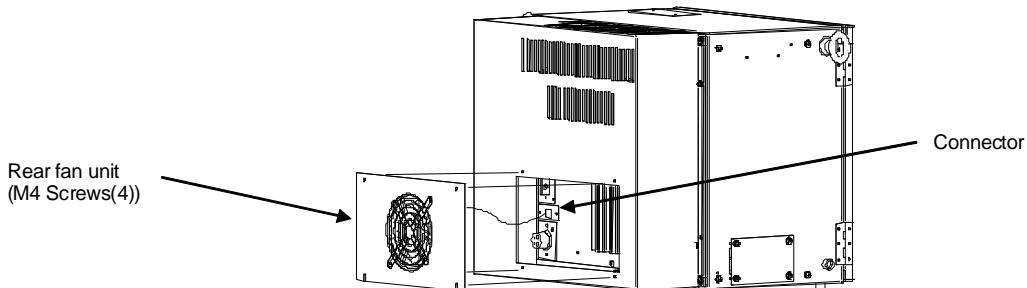


Fig.7.10.1(b) Replacing the rear fan unit

7.11 REPLACING THE BATTERY

7.11.1 Battery for Memory Backup (3 VDC)

The programs and system variables are stored in the SRAM in the main board. The power to the SRAM memory is backed up by a lithium battery mounted on the front panel of the main board. The above data is not lost even when the main power of controller is turned off. A new battery can maintain the contents of memory for about 4 years (Note).

When the voltage of the battery becomes low, the low-voltage battery alarm (system-035) is displayed on the teach pendant. When this alarm is displayed, replace the battery as soon as possible. In general, the battery can be replaced within one or two weeks, however, this depends on the system configuration.


If the battery voltage gets lower, it becomes impossible to back up the content of the SRAM. Cycling power to the controller in this state causes the system not to start, and the seven segment LED located on the main board displays “1” because the contents of memory have been lost. Clear the entire SRAM memory and reenter data after replacing the battery. Important data should be saved to the memory card or other external device beforehand in case of emergency.

NOTE


In a newly introduced robot, the battery is factory-installed. Battery replacement may, therefore, be needed within 4 years after the introduction of the robot.

Replacing the lithium battery

- (1) Prepare a new lithium battery (ordering drawing number: A05B-2650-K030).
- (2) Turn the robot controller on for about 30 seconds.
- (3) Turn the robot controller off.
- (4) Pull out the battery unit located in the lower right part of the backplane unit. (Hold the latch of the battery unit, unlatch the battery unit from the case, and pull out the unit.).

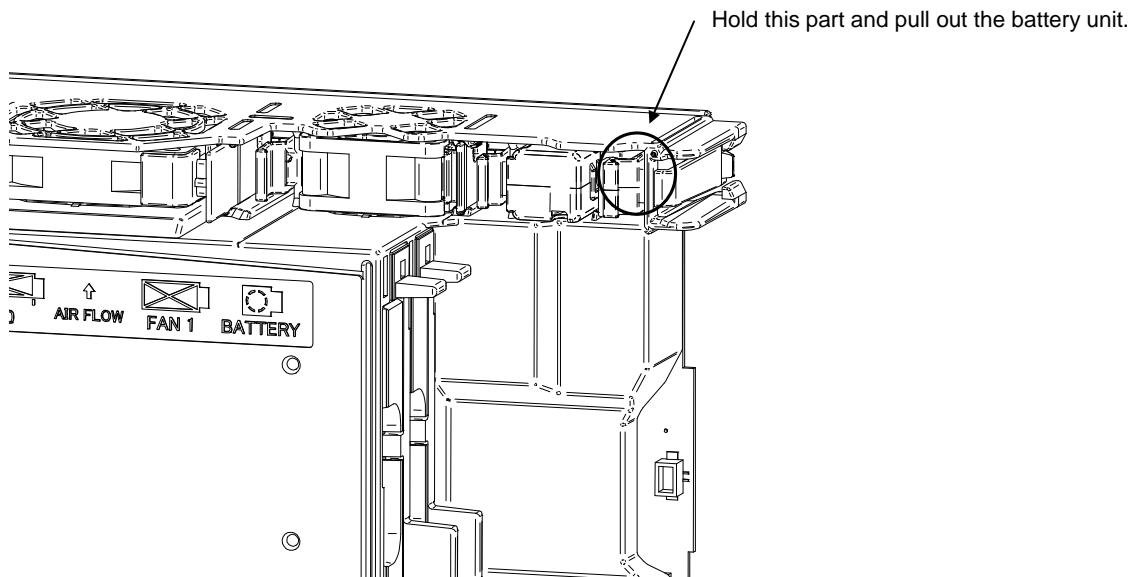

- (5) Install a new battery unit. (Insert the battery unit until the latch of the unit snaps into the case.) Check that the battery unit is latched securely.

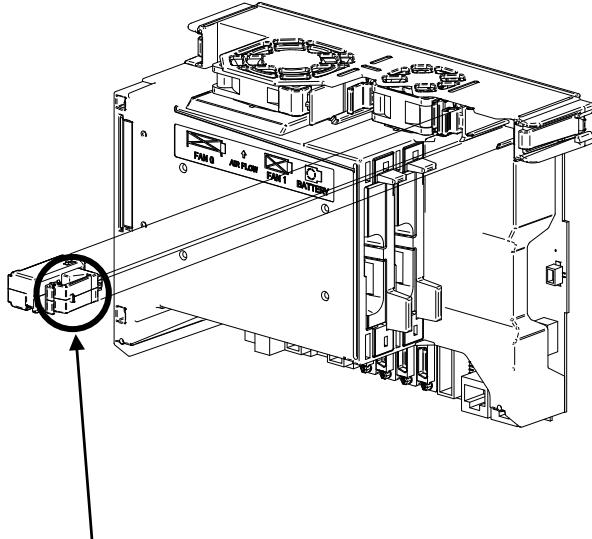

Insert the unit until the latch snaps into the case.

⚠ CAUTION

Execute steps (3) to (5) within 30 minutes.

Note that keeping the control unit unconnected to a battery for a long period of time may result in the memory contents being lost.

For a rainy day, you should make a backup copy of the robot programs and system variables before replacing the battery.

⚠ WARNING

Using other than the recommended battery may result in the battery explosion.
Replace the battery only with the specified battery (A05B-2650-K030).

Dispose of the replaced battery as an industrial waste, according to the laws and other rules in the country where the controller is installed and those established by the municipality and other organizations that have jurisdiction over the area where the controller is installed.


II. CONNECTIONS

1 GENERAL

This section describes the electrical interface connections in the R-30*i*B Mate. It also includes information about installation of the R-30*i*B Mate.

2 BLOCK DIAGRAM

Fig.2 is a block diagram of electrical interface connections with the R-30iB Mate.

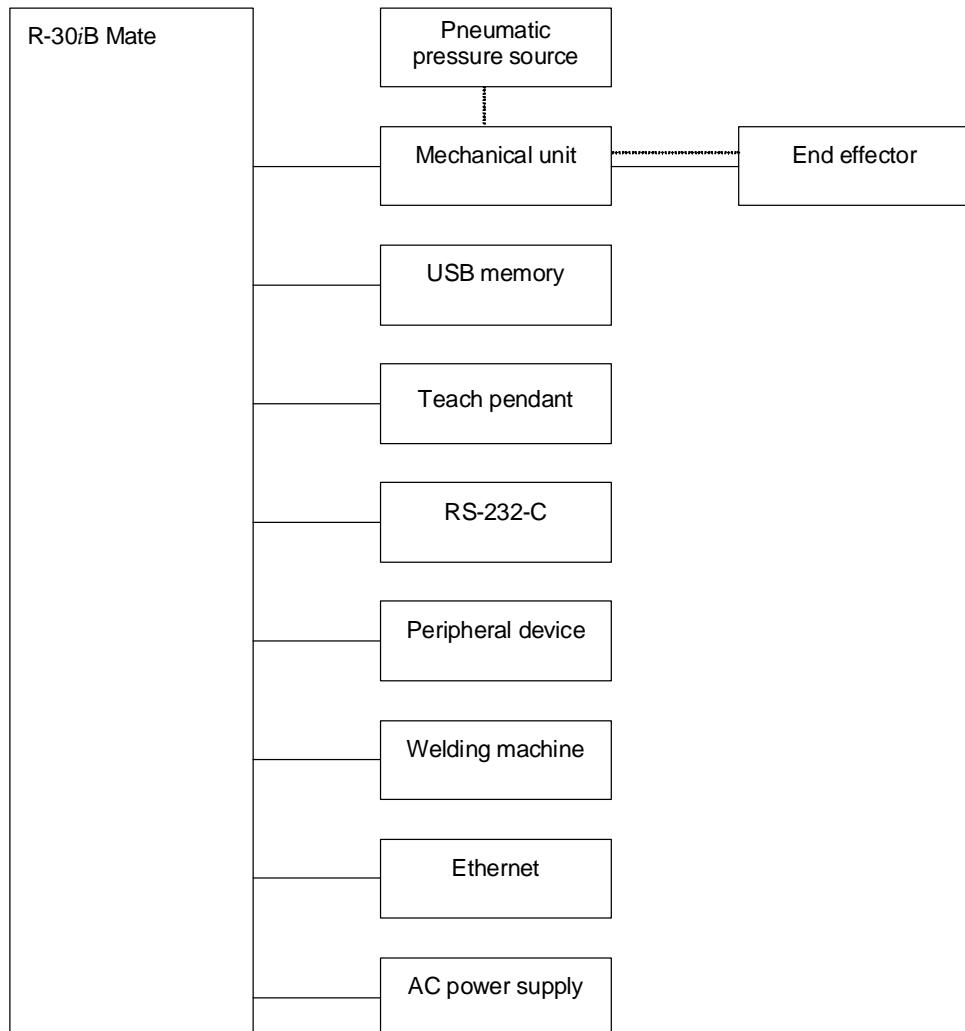**NOTE**

- : Indicates electrical connection.
- - - - : Indicates mechanical connection.

Fig.2 Block diagram of electrical interface connection

3 ELECTRICAL CONNECTIONS

3.1 CONNECTION DIAGRAM BETWEEN MECHANICAL UNITS

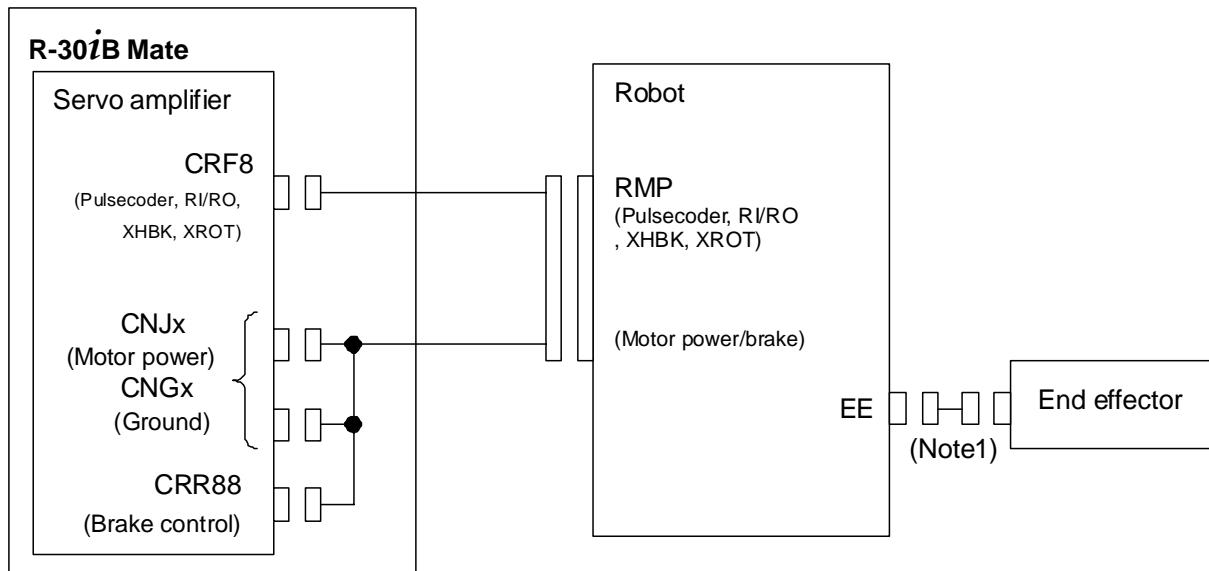
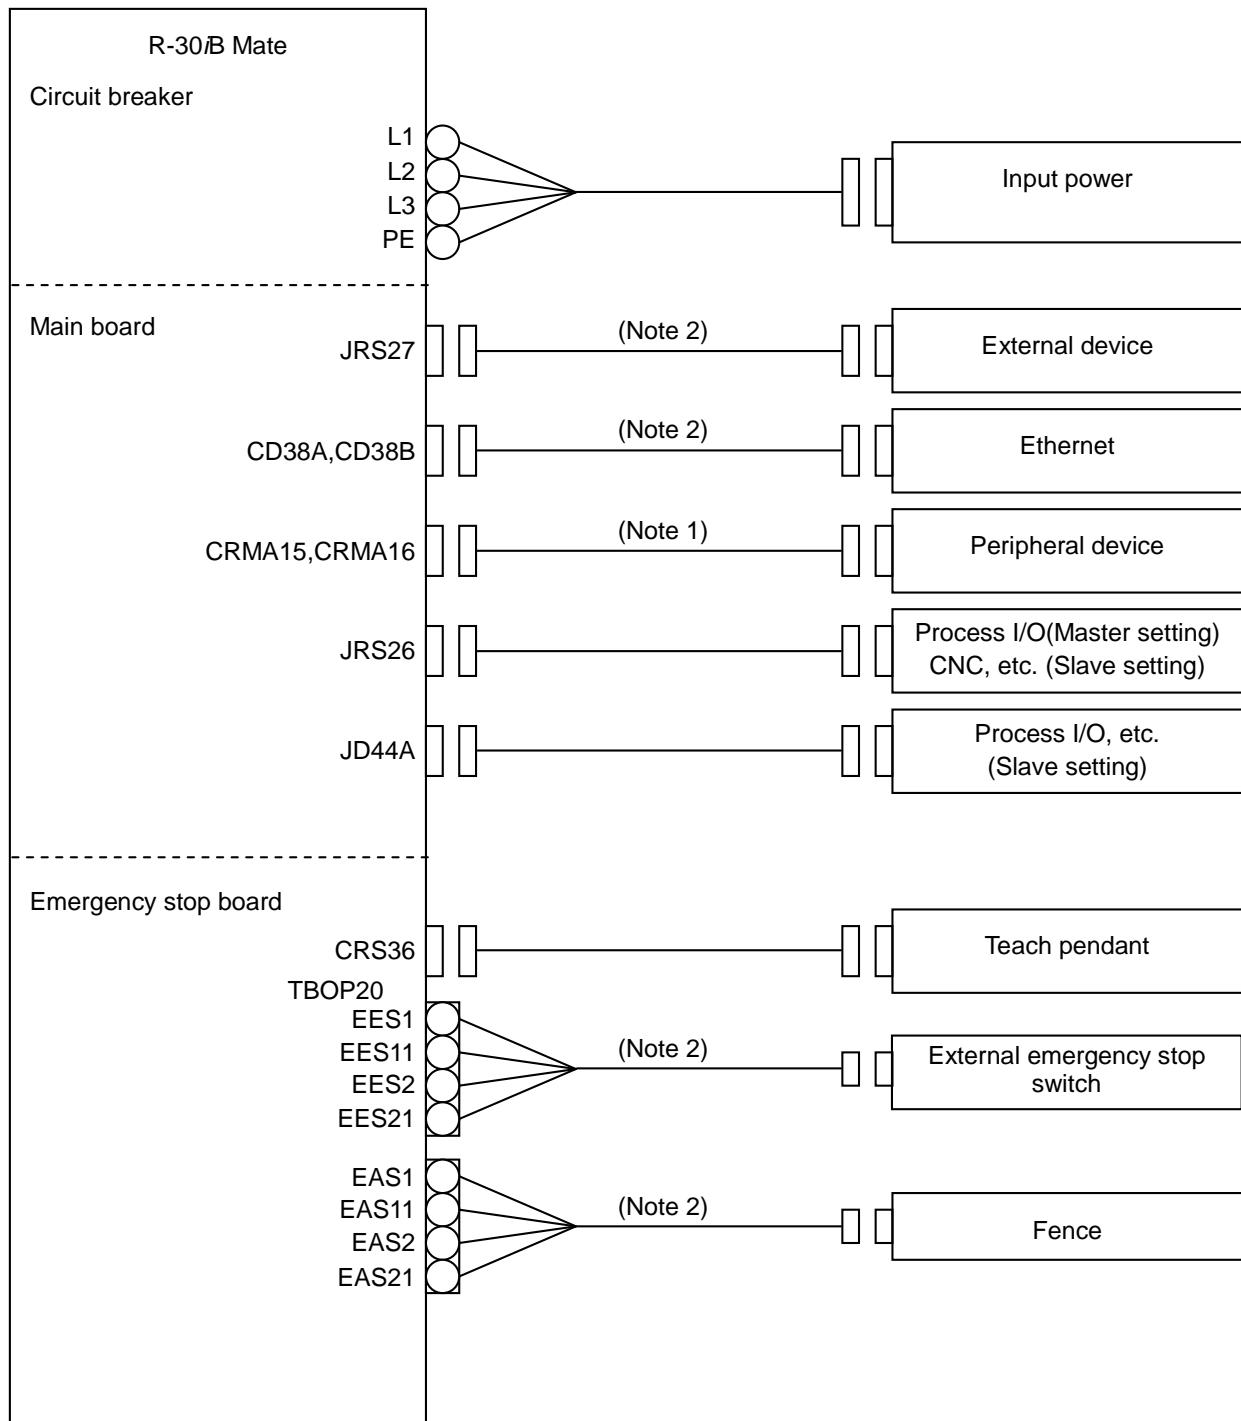


Fig.3.1 (a) Mechanical connection diagram

NOTE

- 1 This cable is not included. It must be supplied by the customer.

**NOTE**

- 1 For detail of the peripheral device connection, see the section of Peripheral device interface.
- 2 This cable is not included. It must be supplied by the customer.

Fig.3.1 (b) Unit-to-unit connection diagram


3.2 FANUC I/O LINK

3.2.1 Connection of I/O Link


The connection of I/O links in the R-30iB Mate is shown below.

- When the R-30iB Mate controller is used as the I/O link master (default)

(When the R-30iB Mate controller controls the process I/O board etc.)

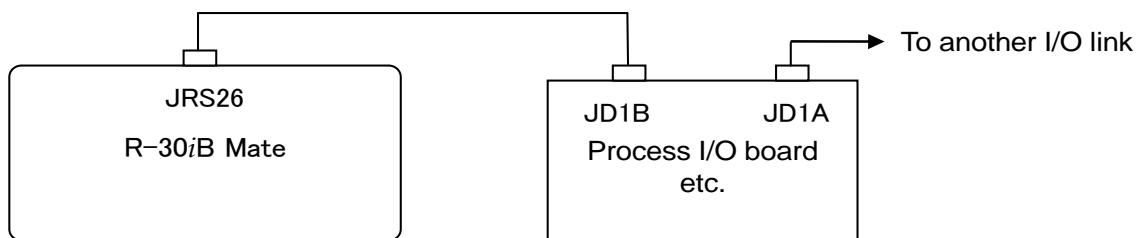

- When the R-30iB Mate controller is connected to a CNC etc. via the I/O link

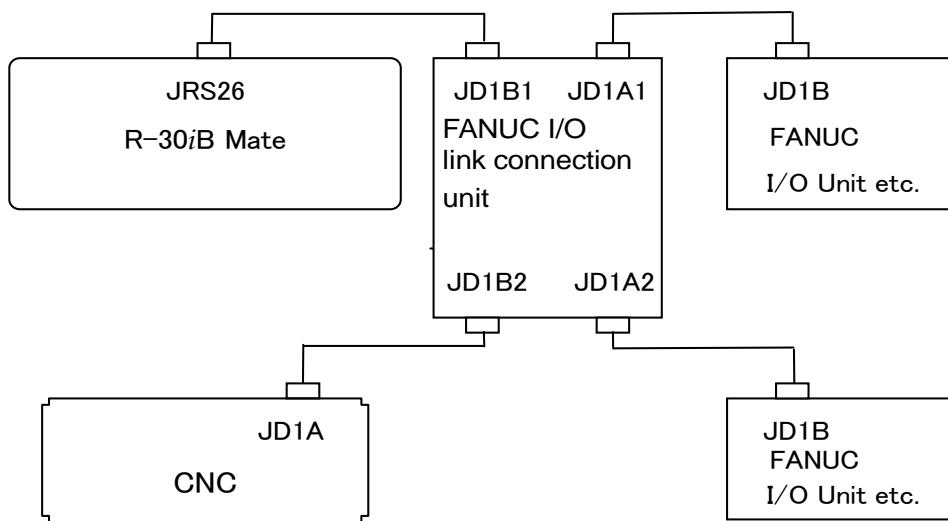

- When the R-30iB Mate controller is used as an I/O link slave

(When a CNC is the I/O link master)

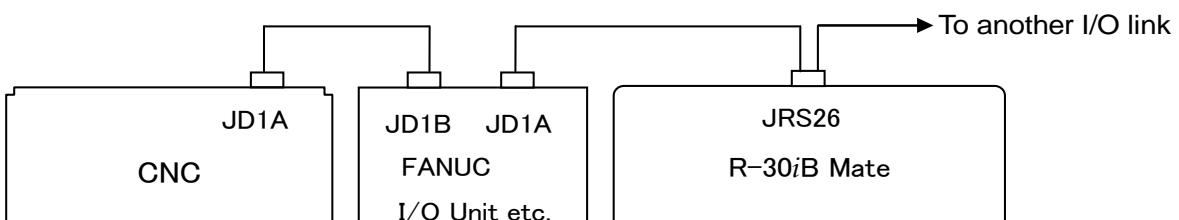


Fig.3.2.1 Connection of I/O links

3.2.2 Connection of the I/O Link Cable

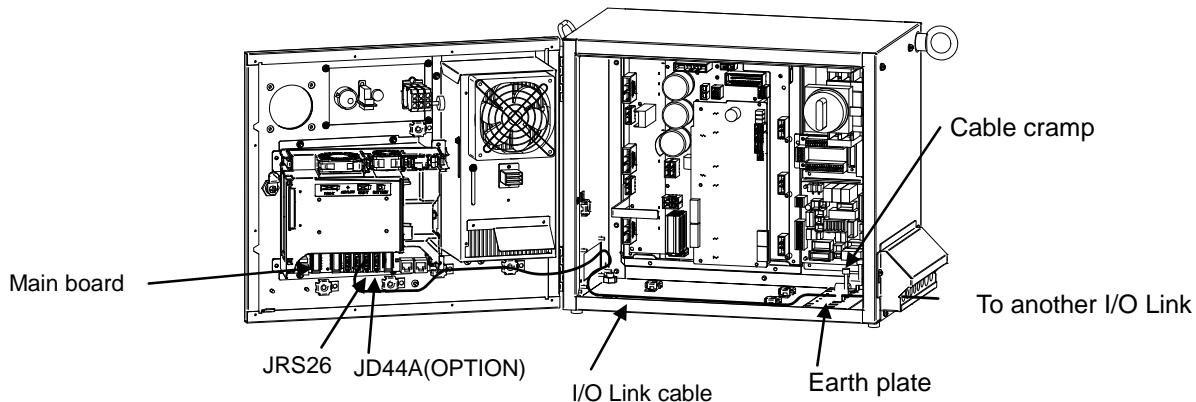


Fig.3.2.2 (a) Path of the I/O link cable

1. Connect the cable according to the system. Be sure to perform shielding.
2. Before connection turn off the power.

NOTE

For connection with the CNC with I/O links, turn on or off the power of the CNC and the robot controller at the following timing.

- a) Slave units and the master must be powered on at the same time.
- b) If the CNC or robot controller is powered off after startup of the system, an I/O link error occurs. To successfully make connection with I/O links again, power off all of the units and then power them on at the timing indicated in a).

JRS26
interface

11	0V	01	RXSLC1
12	0V	02	*RXSLC1
13	0V	03	TXSLC1
14	0V	04	*TXSLC1
15	0V	05	RXSLC2
16	0V	06	*RXSLC2
17		07	TXSLC2
18	(+5V)	08	*TXSLC2
19	(24V)	09	(+5V)
20	(+5V)	10	(24V)

Note: +5V is connected when the optical I/O link adapter is used.

JD44A (Option)
interface


11	0V	01	(Reserve)
12	0V	02	(Reserve)
13	0V	03	(Reserve)
14	0V	04	(Reserve)
15	0V	05	RXSLCS
16	0V	06	*RXSLCS
17		07	TXSLCS
18	(+5V)	08	*TXSLCS
19	(24V)	09	(+5V)
20	(+5V)	10	(24V)

Note: +5V is connected when the optical I/O link adapter is used.

- (1) Use a twisted-pair cable in which wires 1 and 2 are paired and wires 3 and 4 are paired.
- (2) Shield the cable collectively and ground the shield on the CNC side.

- JRS26

JRS26 can be used as master interface or slave interface.

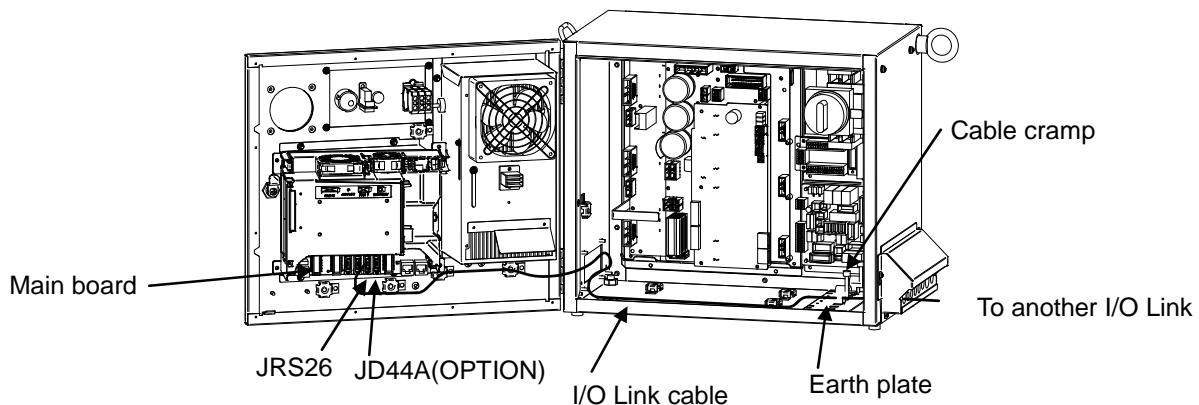

When used as master interface

**JRS26
interface**

11	0V	01	RXSLC1
12	0V	02	*RXSLC1
13	0V	03	TXSLC1
14	0V	04	*TXSLC1
15	0V	05	RXSLC2
16	0V	06	*RXSLC2
17		07	TXSLC2
18	(+5V)	08	*TXSLC2
19	(24V)	09	(+5V)
20	(+5V)	10	(24V)

Note: +5V is connected when the optical I/O link adapter is used.

Master
interface

When used as slave interface

**JRS26
Interface**

Refer to item 3 of Fig. 3.2.1

11	0V	01	RXSLC1
12	0V	02	*RXSLC1
13	0V	03	TXSLC1
14	0V	04	*TXSLC1
15	0V	05	RXSLC2
16	0V	06	*RXSLC2
17		07	TXSLC2
18	(+5V)	08	*TXSLC2
19	(24V)	09	(+5V)
20	(+5V)	10	(24V)


Note: +5V is connected when the optical I/O link adapter is used.

From
Master
controller

To the next
I/O
link
device

- JD44A

JD44A is used to connect the Additional safety I/O board (Mini slot)

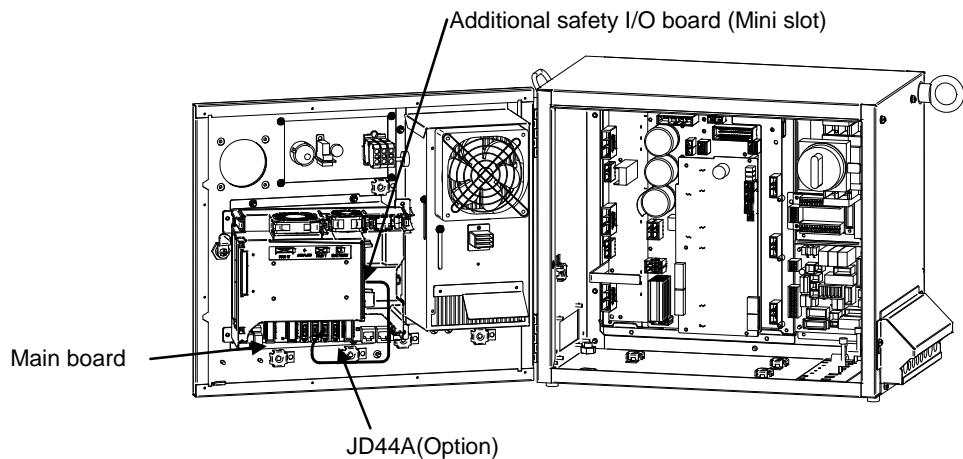


**JD44A
Interface**

11	0V	01	(Reserve)
12	0V	02	(Reserve)
13	0V	03	(Reserve)
14	0V	04	(Reserve)
15	0V	05	RXSLCS
16	0V	06	*RXSLCS
17		07	TXSLCS
18	(+5V)	08	*TXSLCS
19	(24V)	09	(+5V)
20	(+5V)	10	(24V)

Note: +5V is connected when the optical I/O link adapter is used.

Example

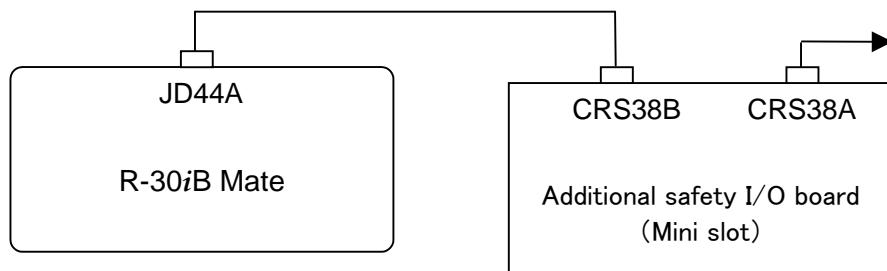

Cable connection diagram

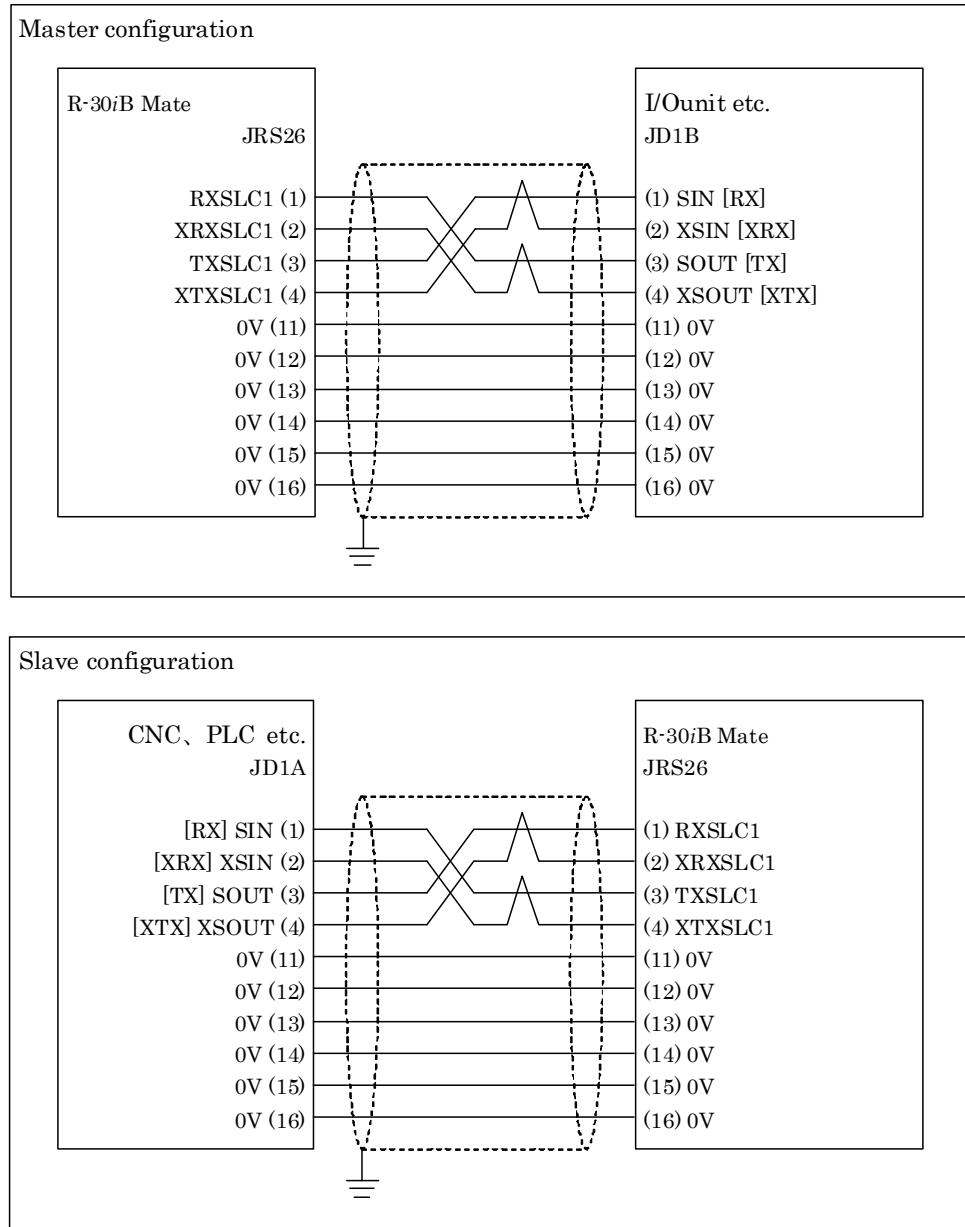


Fig.3.2.2 (b) Connection diagram of I/O Link cable

3.3 EXTERNAL CABLE WIRING DIAGRAM

3.3.1 Robot Connection Cables

⚠ CAUTION

Before operating the robot, uncoil the interconnection cables from their shipping position to prevent excessive heat, which may damage the cables.
(Coiled part should be shorter than 10 meter.)

There are two types of the robot connection cable;

Non-flex type: usage is restricted to fixed laying

Flex type: possible to use in the cable track

Specification of cable


	Robot	Non-flex type			Flex type		
		Diameter (mm)	Weight (kg/m)	Minimum bending radius (mm)	Diameter (mm)	Weight (kg/m)	Minimum bending radius (mm)
RP1	Group 1 Group 11	16.0	0.45	200	20.5	0.71	200
RM1	Group 1 Group 11	26.1	1.22	200	25.4	1.2	200
RMP	RP	Group 8	16.0	0.45	200	20.5	0.71
	RM		20.0	0.7	200	18.4	0.7
RMP	RP	Group 12	14.2	0.31	200	20.5	0.71
	RM		15.5	0.3	200	15.5	0.49
EARTH	All models	4.7	0.065	200	4.7	0.065	200

Group 1	M-710iC, R-1000iA, R-2000iC
Group 8	ARC Mate 100iC, ARC Mate 120iC, M-10iA, M-20iA, ARC Mate 0iB, R-0iB
Group 11	M-2iA, M-3iA
Group 12	LR Mate 200iD, M-1iA, ARC Mate 50iD

Using condition of flex type cable

- (1) When routing cables in movable places, use a cable bearer.
- (2) The bending radius (R) of the cable track is more than 200mm.
- (3) The cable should be fixed to the cable track by using the clamp. (e.g. foam rubber)
- (4) The size of the hole to support a cable in the cable track should be more than 110% of the cable size and should have the gap more than 3mm.
- (5) When cables are laid in the cable track, pay attention for the cable not to be twisted.

Cable Route

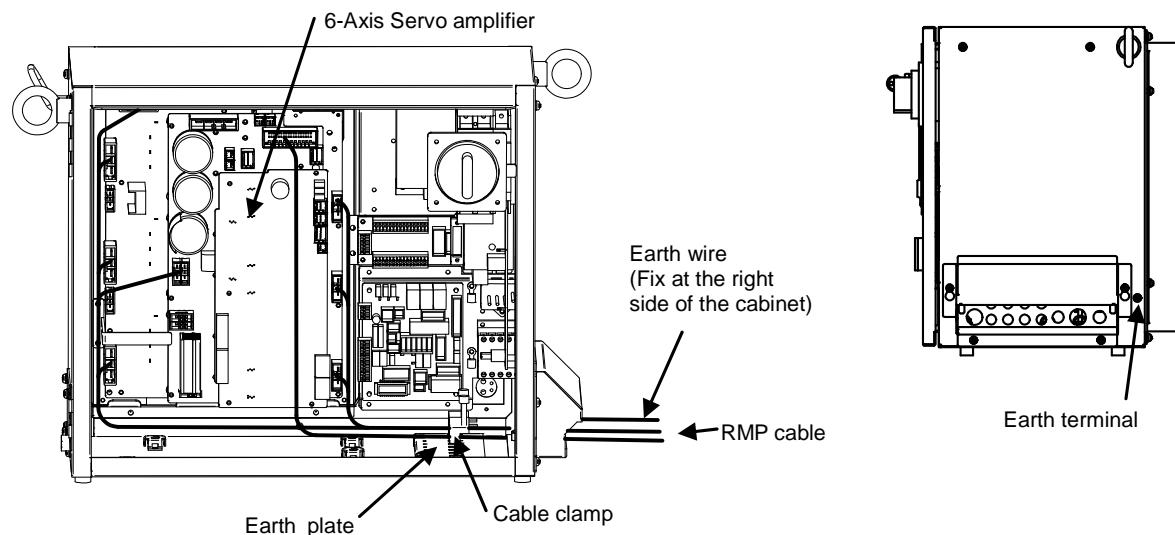

CAUTION

Signal cable should be clamped to Earth plate by cable clamp.

In case of CE controller, Power/Brake cable should be clamped to Earth plate by cable clamp.

**Robot Model:LR Mate 200iD, M-1iA, ARC Mate 50iD, ARC Mate 100iC,
ARC Mate 120iC, M-10iA, M-20iA, ARC Mate 0iB, R-0iB**

Detail of cable connection to servo amplifier

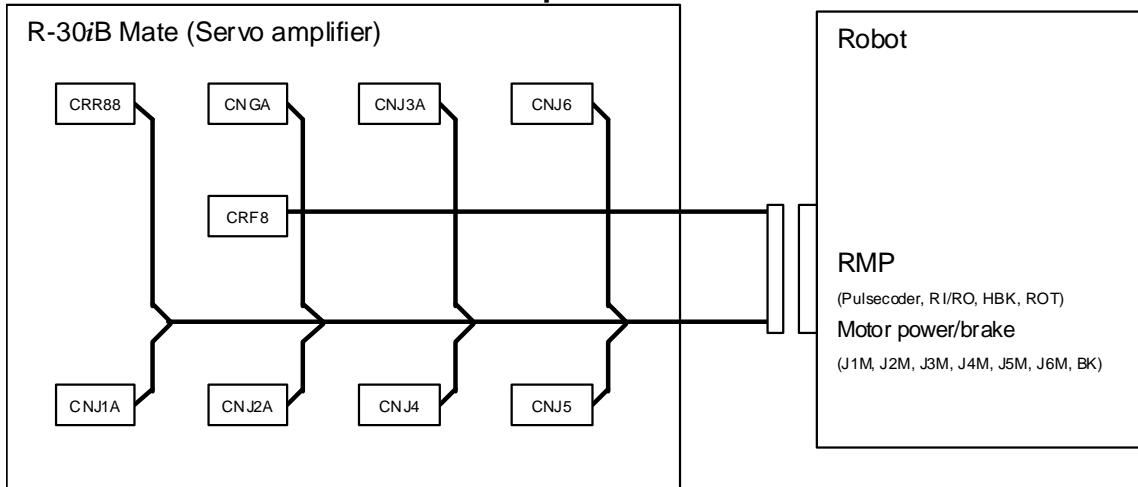


Fig.3.3.1 (a) Robot connection cable

Robot Model: M-2iA, M-3iA, R-1000iA, M-710iC, R-2000iC

Detail of cable connection to servo amplifier

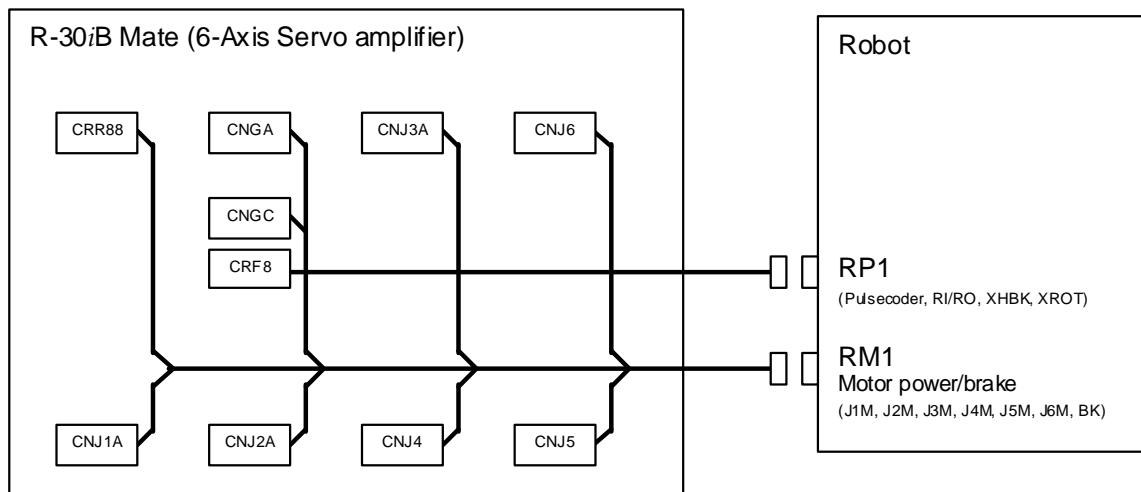


Fig.3.3.1 (b) Robot connection cable

3.3.2 Teach Pendant Cable

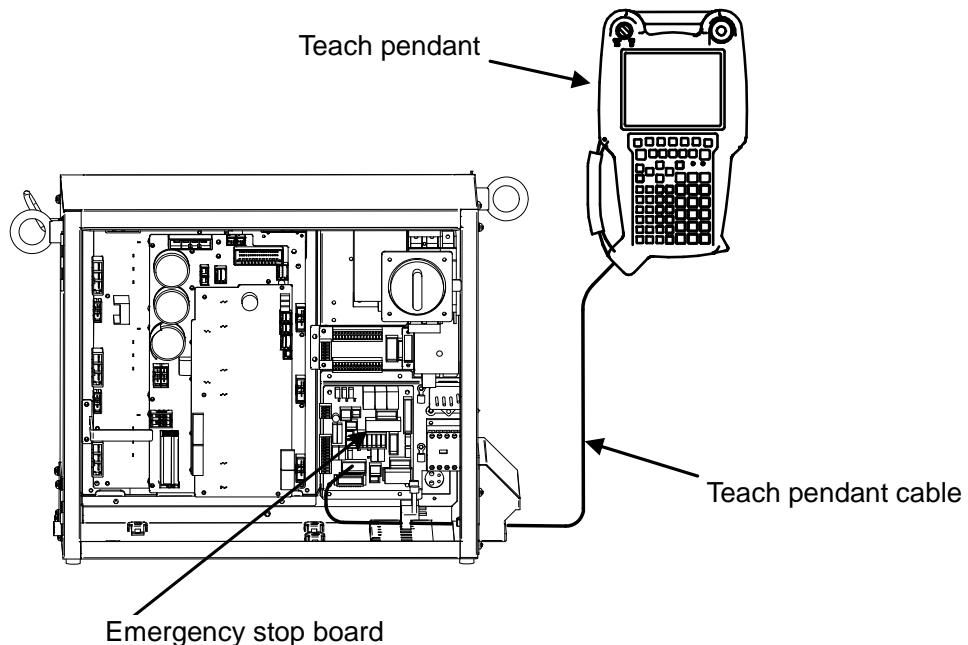


Fig.3.3.2 Teach pendant cable

3.3.3 Connecting the Input Power

3.3.3.1 Connecting the input power cable

- (1) Fig3.2.3.1 shows the method of connecting the input power supply cable.
- (2) Use the input power cable according to the following Table 3.2.3.1. However, the input power cable according to the breaker or the fuse of the input power supply (power distribution panel) connected to the robot controller must be used.
- (3) Provide a class-D or better ground.
There shall be no switches or disconnects in the grounding conductor.
The resistance to the ground must not exceed 100Ω .
Use a thick wire to withstand the maximum current used.

Table 3.3.3.1 Conductor size and terminal size of AC power supply

Input Voltage	Input power source capacity (Refer to CONNECTIONS 5.3)	Conductor size of AC Power supply cable	Terminal size of AC power supply cable	Conductor size of earth cable	Terminal size of earth cable
200V	<12kVA	AWG14 to AWG10 (Note 1)	M5	WARNING 2	M5
200V	12kVA≤	AWG10≤ (Note 1)	M5	WARNING 2	M5

⚠ WARNING

- 1 The input power cable according to the breaker or the fuse of the input power supply (power distribution panel) connected to the robot controller must be used.
- 2 Use conductor of earth cable size is as well as the AC power supply cable size.
- 3 Disconnection of protective earth ground may impair the protection provided by the system.

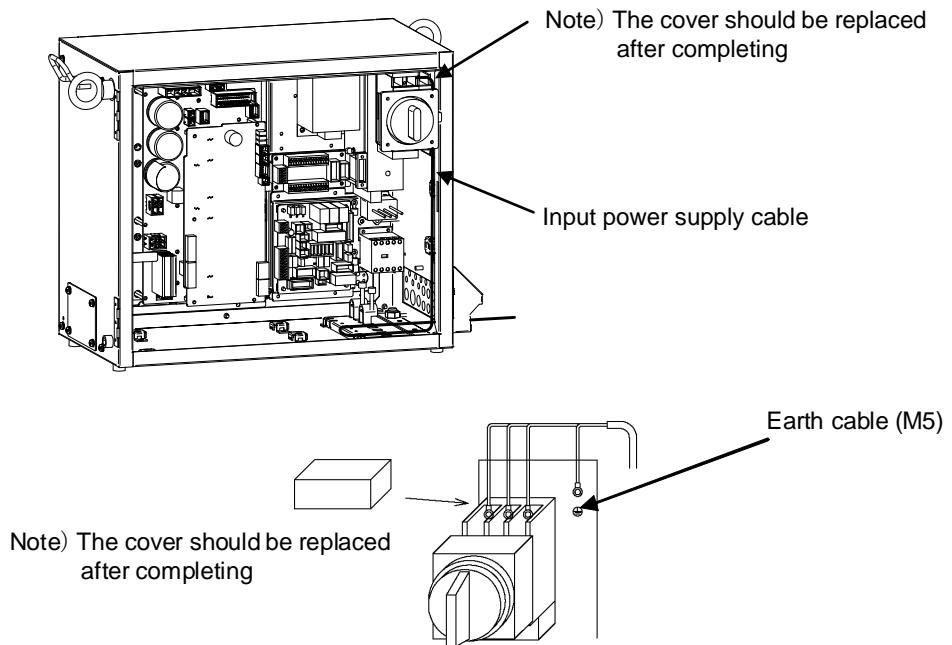


Fig.3.3.3.1 Connecting the input power cable

WARNING


The cover for primly terminal of main breaker should be replaced after completing.

3.3.3.2 Isolated transformer

- (1) According to the voltage of the input power source, an isolated transformer should be required. Refer to table 3.3.3.2. If required, set up isolated transformer between input power source and controller.
- (2) The output of transformer should be the star connection with neutral grounding.

Table 3.3.3.2 Isolated transformer

Input power source	BASIC	NRTL	CE
200-230VAC single phase	No	No	No
200-230VAC three phase	No	No	Yes
others	Yes	Yes	Yes

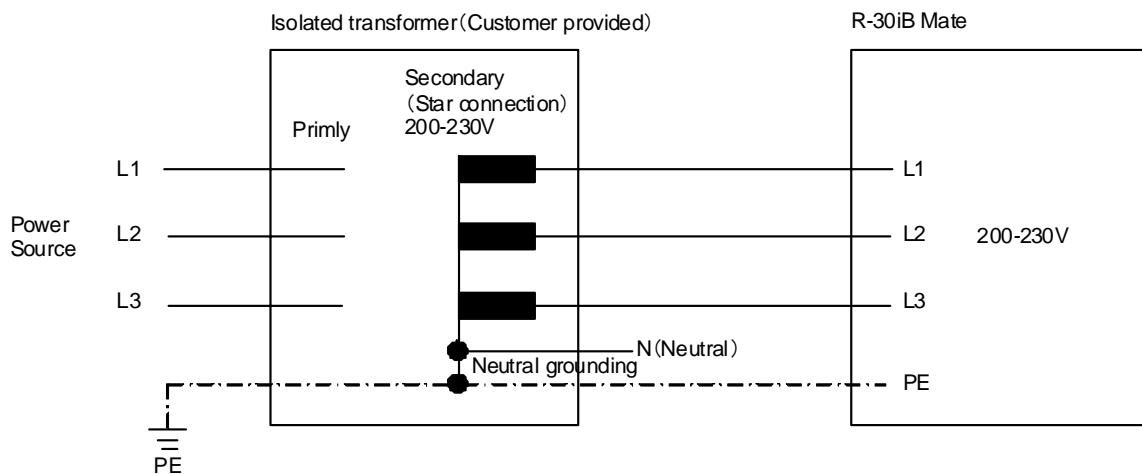

WARNING

The output of transformer should be the star connection with neutral grounding.

NOTE

Isolated transformer is provided by customer.

Choose the appropriate transformer according the required power source capacity of the robot.

Example of Isolated transformer

Manufacture RIST Transformatorenbau GmbH

Specification 25065LK

Capacity 3kVA

Output AC200V

3.3.3.3 Leakage breaker

- (1) The motor is driven by the PWM inverter system using a power transistor bridge. A high-frequency leakage current flows through the stray capacitance between the ground and the motor coils, power cable, and amplifier. This might cause the leakage-current circuit breaker or leakage-protection relay installed in the path of the power supply to cut out.
Use the following leakage current circuit breaker for inverters to prevent incorrect operation.
- (2) Leakage breaker using robot controller has sensitive electric current of 30mA.

Table 3.3.3.3 Example of leakage current circuit breaker for inverters

Manufacture	Type
Fuji Electric Co., Ltd.	EG A series or later SG A series or later
Hitachi, Ltd.	ES100C type or later ES225C type or later
Matsushita Electric Works, Ltd.	Leakage current circuit breaker, C type or later Leakage current circuit breaker, KC type or later

3.3.4 Connecting the External Emergency Stop

After connecting the safety signals like external emergency stop signal and/or safety fence signal, verify that,

- All safety signals stop the robot as intended.
- There is no mistake in connection of safety signals.

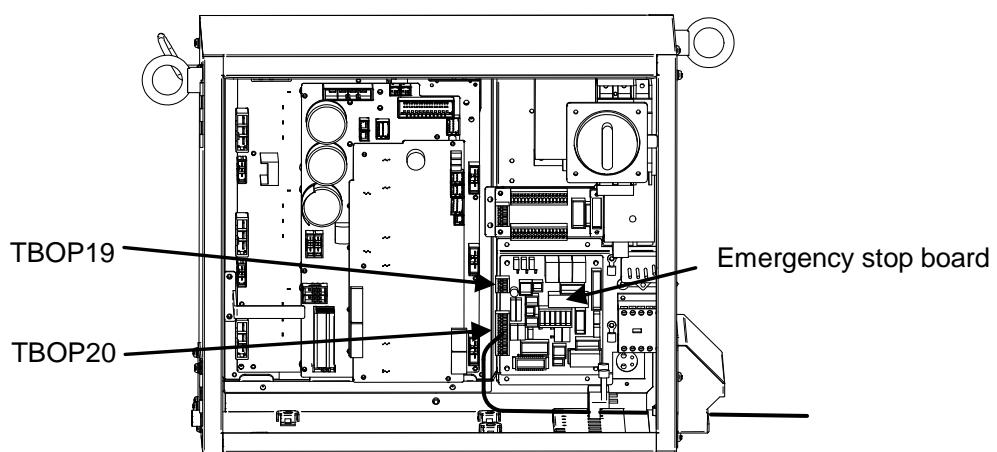


Fig.3.3.4 (a) Connecting the external emergency stop

NOTE

For protection against the noise, the shielded cable is recommended for the connection cable.

Cut part of the jacket of the cable to expose the shield , and fasten this part to the earth plate with the cable clamp.

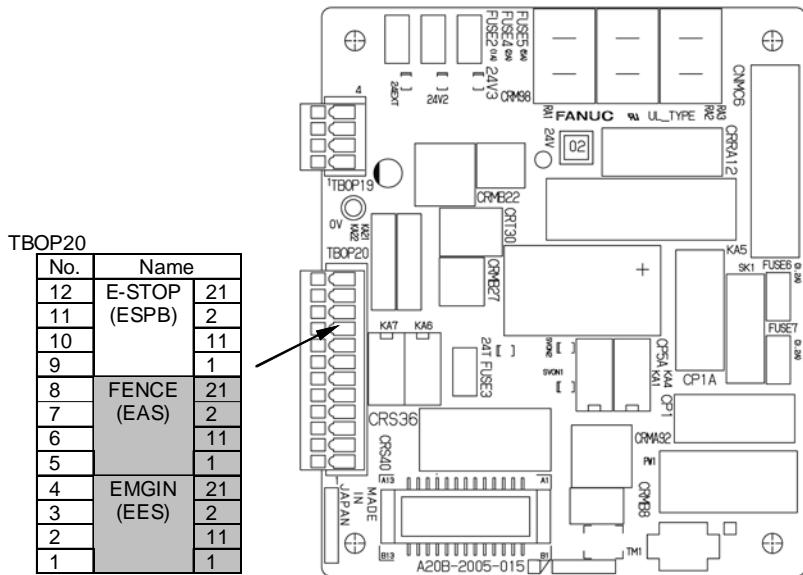
External emergency stop output

Fig.3.3.4 (b) Emergency stop board


For the circuit, see Fig. A (e) in Appendix A, "TOTAL CONNECTION DIAGRAM".

Signal	Description	Current, voltage	Min. load
ESPB1 — ESPB11 ESPB2 — ESPB21	The contact is open when one of the TP emergency stop button or the Operator panel emergency stop button is pressed. The contact is also open while the controller is powered off regardless of status of emergency stop buttons. By connecting external power supply to the emergency stop circuit, the contact works even while the robot controller is powered off. (See "External power connection" of this section) The contact is closed during normal operation.	Rated contact: 30 VDC, 5 A resistor load	(Reference value) DC5V 10mA


NOTE

For protection against the noise, the shielded cable is recommended for the connection cable.


Cut part of the jacket of the cable to expose the shield , and fasten this part to the earth plate with the cable clamp.

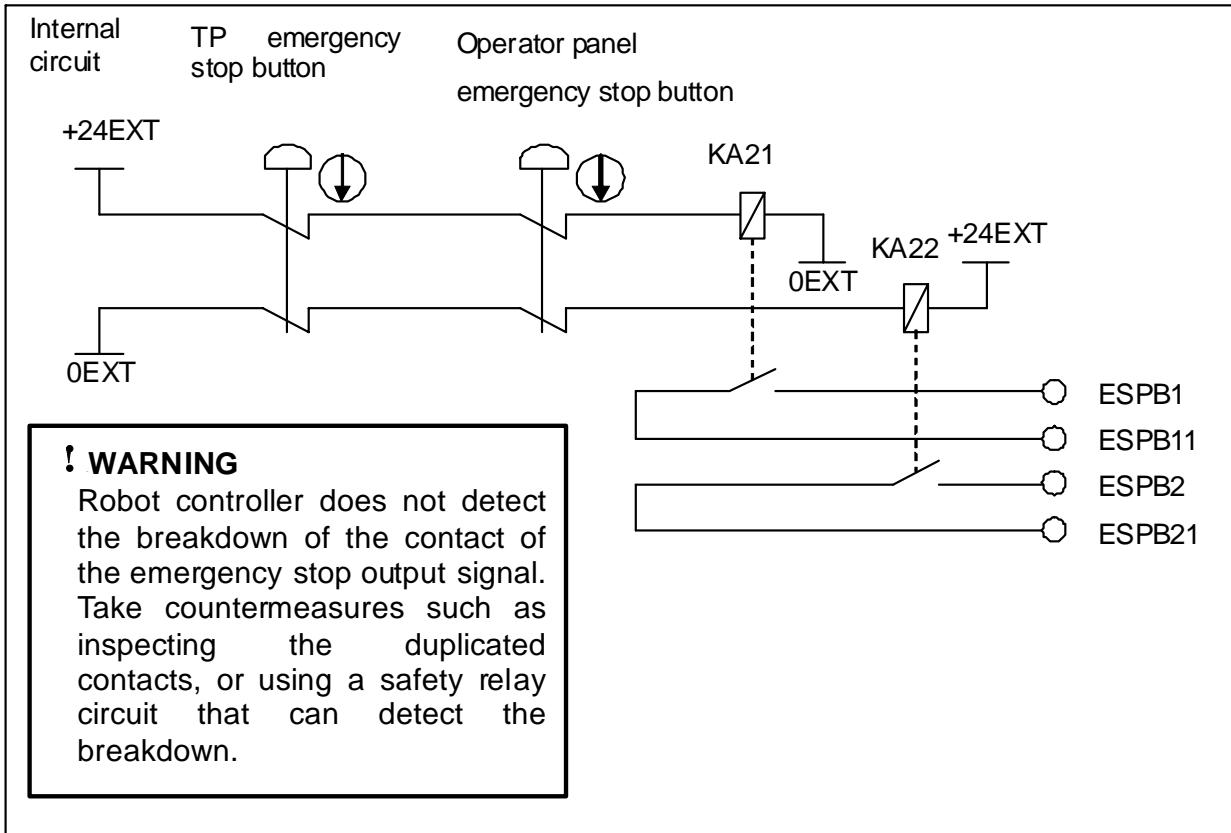

Example of the connection with the safety relay unit

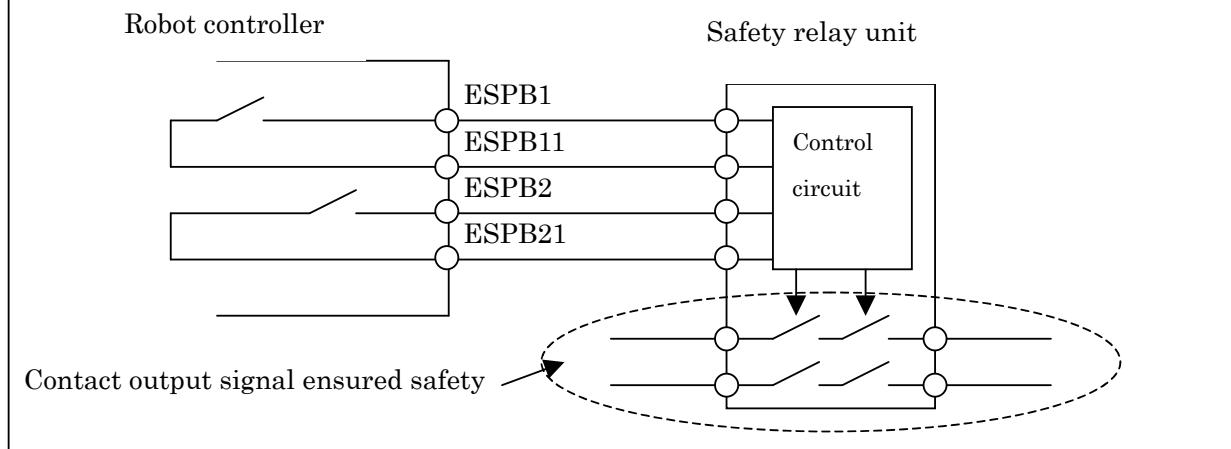

External power connection

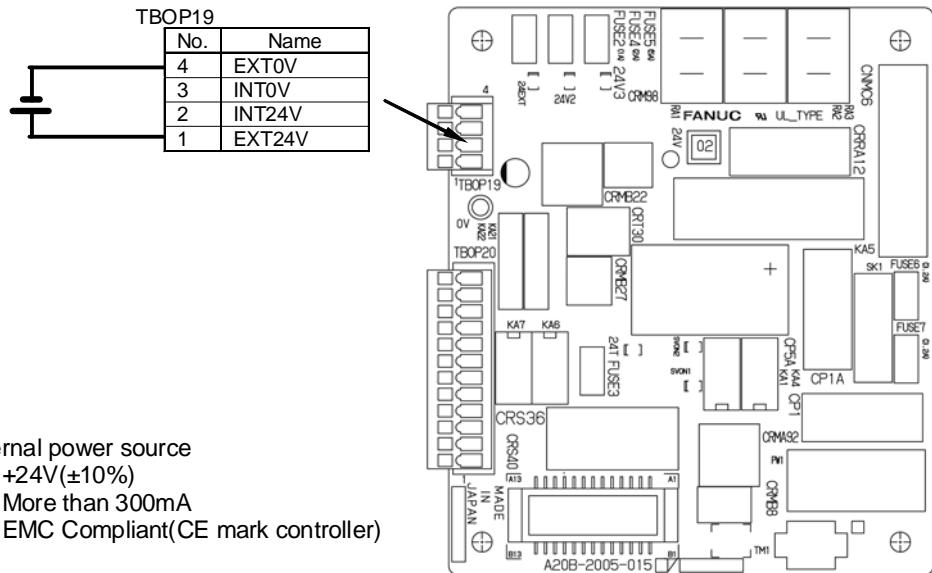

External power source


- +24V($\pm 10\%$)
- More than 300mA
- EMC Compliant(CE mark controller)

Emergency stop board

The relays for emergency stop input and output can be separated from controller's power. Please connect external +24V instead of internal +24V, if emergency stop output must not be effected controller's power.


Example of the connection

In case of not using the external power source

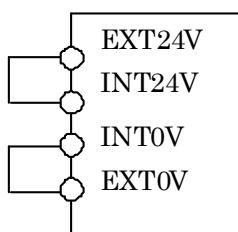

In case of using the external power source

External power source

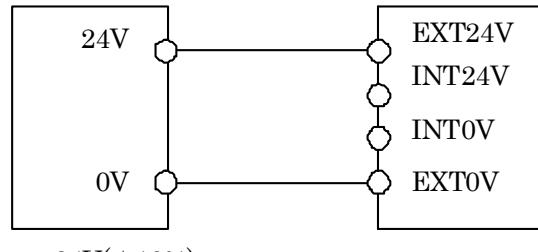

+24V($\pm 10\%$)


more than 300mA

NOTE

For protection against the noise, the shielded cable is recommended for the connection cable.

Cut part of the jacket of the cable to expose the shield, and fasten this part to the earth plate with the cable clamp.

External emergency stop input

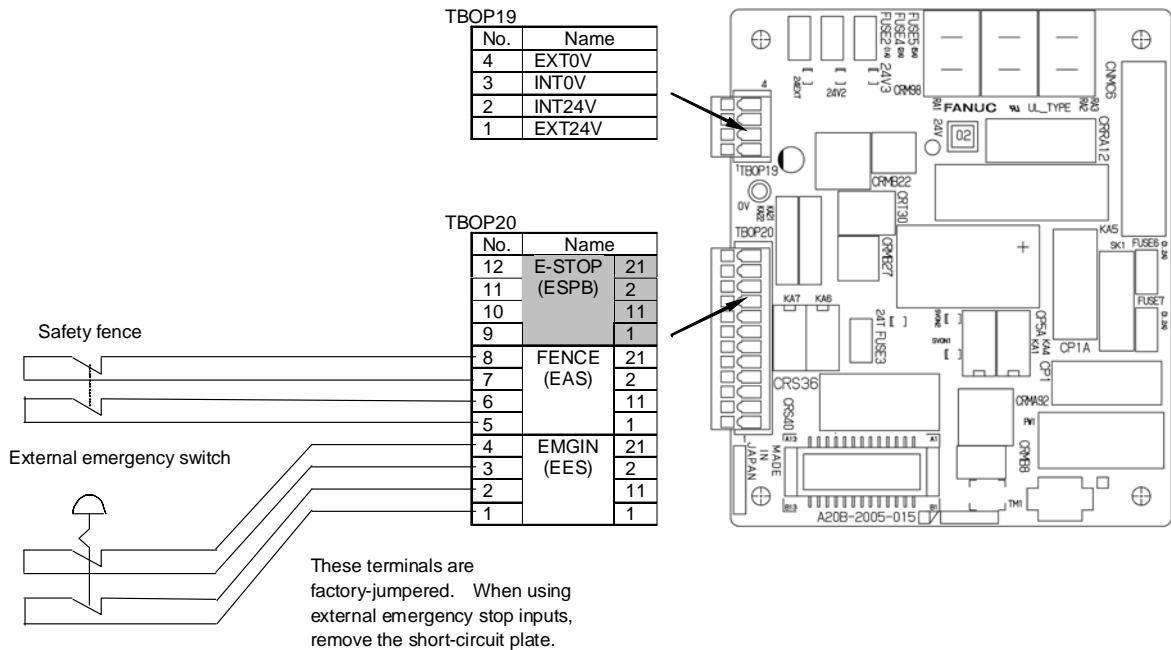

Emergency stop board

Emergency stop board (B-cabinet)

Signal	Description	Current, voltage
EES1 EES11 EES2 EES21	Connect the contacts of the external emergency stop switch to these terminals. When the contacts are open, the robot stops according to predetermined stop pattern. (Note 2) When using the contacts of a relay or contactor instead of the switch, connect a spark killer to the coil of the relay or contactor, to suppress noise. When these terminals are not used, jumper them.	Open and close of 24VDC 0.1A (Note 1)
EAS1 EAS11 EAS2 EAS21	These signals are used to stop the robot safely when the safety fence gate is opened during operation in the AUTO mode. When the contacts are open in the AUTO mode, the robot stops according to predetermined stop pattern. (Note 2) In the T1 or T2 mode and the DEADMAN switch is held correct position, the robot can be operated even when the safety fence gate is open. When using the contacts of a relay or contactor instead of the switch, connect a spark killer to the coil of the relay or contactor, to suppress noise. When these terminals are not used, jumper them.	Open and close of 24VDC 0.1A (Note 1)

NOTE

1. Use a contact which minimum load is 5 mA less.
2. See Chapter 7 in SAFETY PRECAUTIONS.

NOTE


For protection against the noise, the shielded cable is recommended for the connection cable.

Cut part of the jacket of the cable to expose the shield, and fasten this part to the earth plate with the cable clamp.

Examples of connection of duplicate safety signals


Correct connection

External emergency stop switch

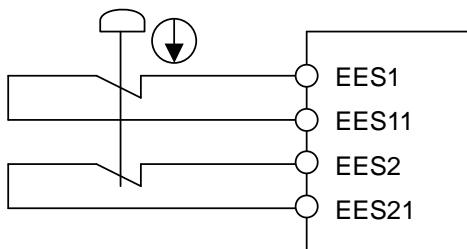

Wrong connection

External emergency stop switch

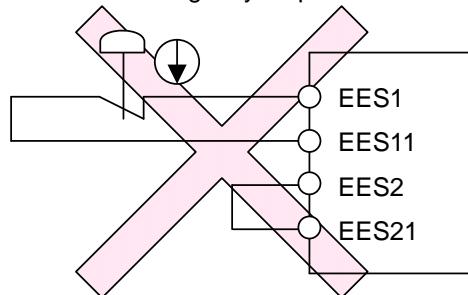

Discrepancy in duplicate inputs results in an alarm.

Input timing of duplicate safety signals

Duplicate inputs are used for signals such as the external emergency stop signal, safety fence signal, and servo off signal so that a response is made even when a single failure occurs. The statuses of these duplicate input signals must always be changed at the same timing according to the timing specifications provided in this section. The robot controller always checks that the statuses of the duplicate inputs are the same, and if the controller finds a discrepancy, it issues an alarm. If the timing specifications are not satisfied, an alarm may be issued because of a signal discrepancy.

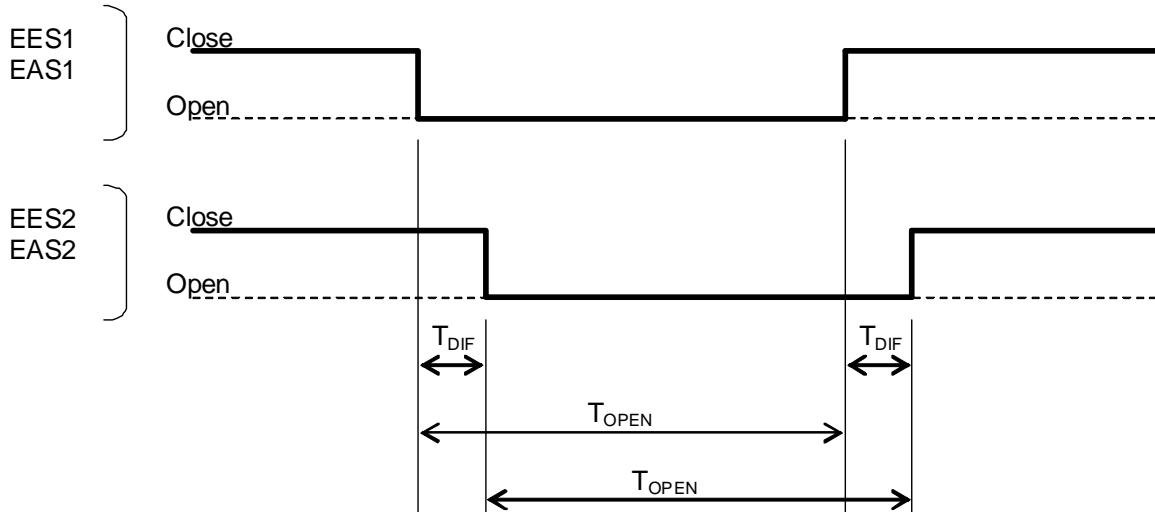


Fig.3.3.4(c) Input timing of duplicate safety signals

Connecting external on/off and external emergency stop signal input/output wires


	FANUC's specification	Manufacturer's specification (WAGO)	Remark
4-pole terminal block (TBOP19)	A63L-0002-0154#104	734-104	
12-pole terminal block (TBOP20)	A63L-0002-0154#112	734-112	
Jumper pin	A63L-0002-0154#402F	734-402F	
Operation lever	A63L-0002-0154#230-M	734-230	2 pieces of 734-230 and operation manual are included in FANUC's specification

1. Detach the plug connector block from the emergency stop board.
2. Insert the tip of a flat-blade screwdriver into the manipulation slot and push down its handle.
3. Insert the end of the signal wire into the wire slot.
4. Pull out the screwdriver.
5. Attach the plug connector block to the emergency stop board.

⚠ CAUTION

Do not insert a wire into the wire hole of a plug connector or pull it out with the plug connector block mounted on the emergency stop board; otherwise, the emergency stop board may be damaged.

FANUC recommends the lever (A05B-2600-K030) for connecting the signal wire to the plug connector block instead of Flat-blade screwdriver.

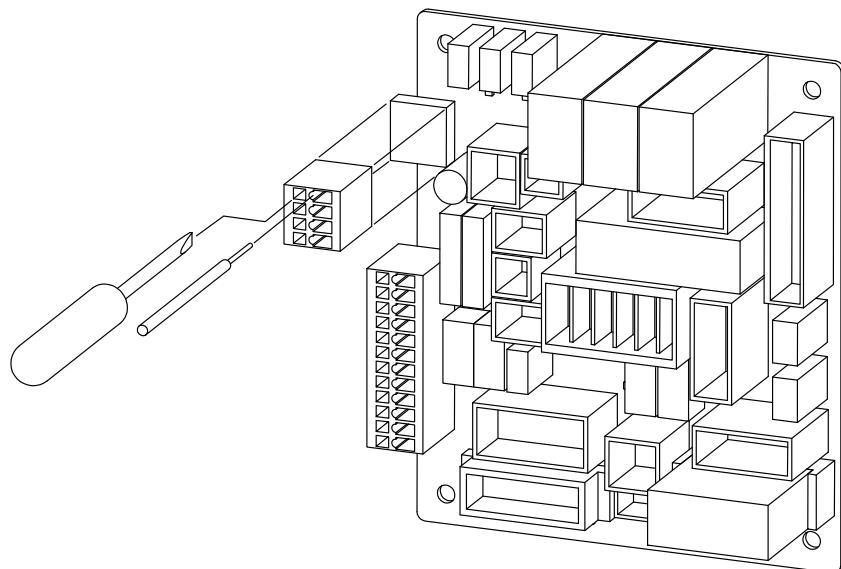

3.3.5 Connecting the Auxiliary Axis Brake (CRR65 A/B)

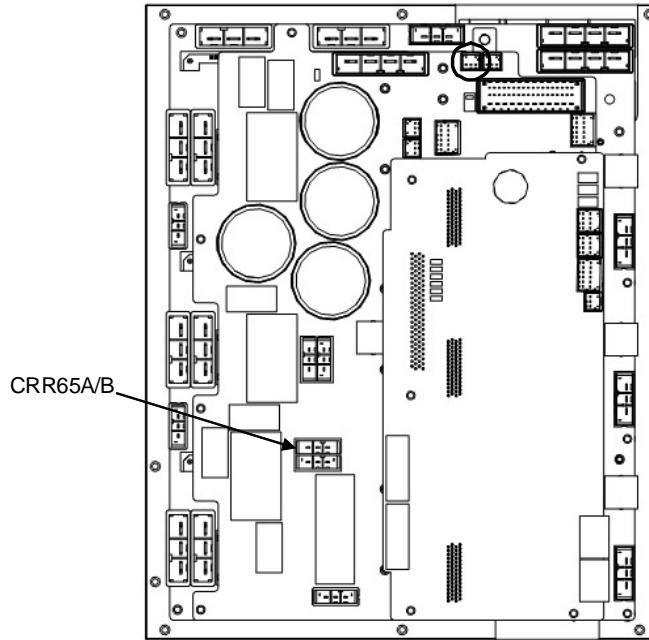


Fig.3.3.5 6-axis servo amplifier

CRR65 A/B

A1	BKA1	B1	BKA2
A2		B2	
A3	COMMON	B3	COMMON

Specification

	TE Connectivity Specification	FANUC Specification
Rece-housing	1-178128-3	A63L-0001-0460#032KSX
Rece-contact	175218-2	A63L-0001-0456#ASL

3.3.6 Connecting the Auxiliary Axis Over Travel (CRM68)

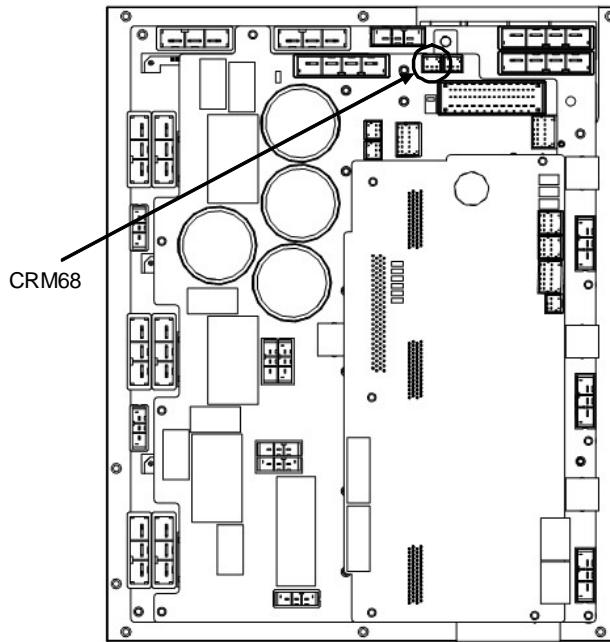


Fig.3.3.6 6-axis servo amplifier

CRM68

A1	AUXOT1
A2	AUXOT2
A3	

Specification

	TE Connectivity Specification	FANUC Specification
Rece-housing	1-1318120-3	A63L-0001-0812#R03SX
Rece-contact	1318107-1	A63L-0001-0812#CRM

4 PERIPHERAL DEVICE, ARC WELDING, AND EE INTERFACES

R-30iB Mate I/O peripheral device interfaces include printed circuit boards and a unit selected according to the applications. Table 4 lists details of the printed-circuit boards and units. Figure 4 shows the locations of these boards and units.

Table 4 Peripheral device interface types

No.	Name	Drawing number	Peripheral device interface				Remarks	
			CRMA15		CRMA16			
			DI	DO	DI	DO		
1a	Main board A	A05B-2650-H001	20	8 (Source)	8	16 (Source)	Standard	
1b	Main board B	A05B-2650-H002	20	8 (Source)	8	16 (Source)	Vision, Force sensor I/F	
1c	Main board C	A05B-2650-H003	20	8 (Source)	8	16 (Source)	Vision, Force sensor I/F PMC, HDI	

No.	Name	Drawing number	Peripheral device interface				Remarks	
			CRMA52A		CRMA52B			
			DI	DO	DI	DO		
2	Process I/O board MA	A05B-2650-J060	10	8 (Source)	10	8 (Source)	Option	

No.	Name	Drawing number	Peripheral device interface				Remarks	
			CRW11					
			WI	WO	D/A	A/D		
3	Process I/O board MB	A05B-2650-J061	5	4(Sink)	2	0	Option	

No.	Name	Drawing number	Remarks
4	Connector converter board	A05B-2650-J070	This option board converts peripheral device interfaces CRMA15 and CRMA16 of the main board to the MR connector manufactured by Honda Tsushin Kogyo Co., LTD.
5	Terminal converter board	A05B-2650-J071	This option board converts peripheral device interfaces CRMA15 and CRMA16 of the main board to the terminal blocks manufactured by Phoenix Contact GmbH & Co. KG.


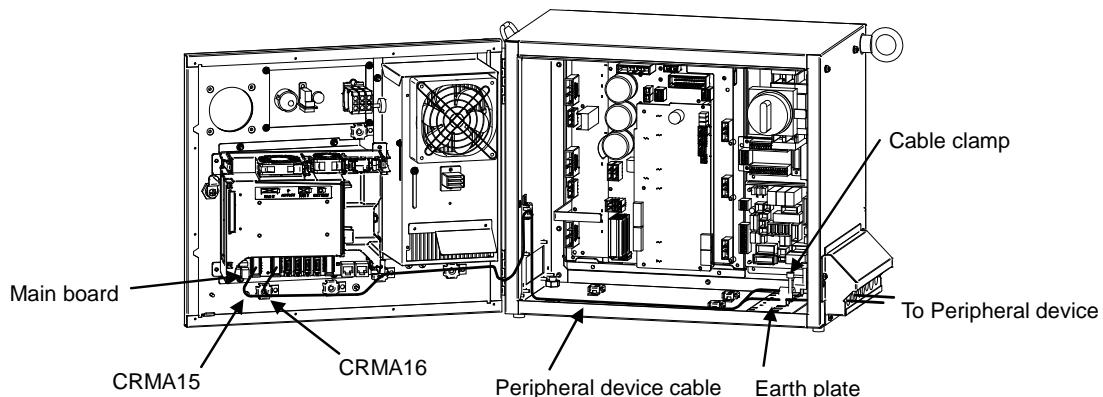


Fig.4(a) Connecting the peripheral device cable (CRMA15, CRMA16)

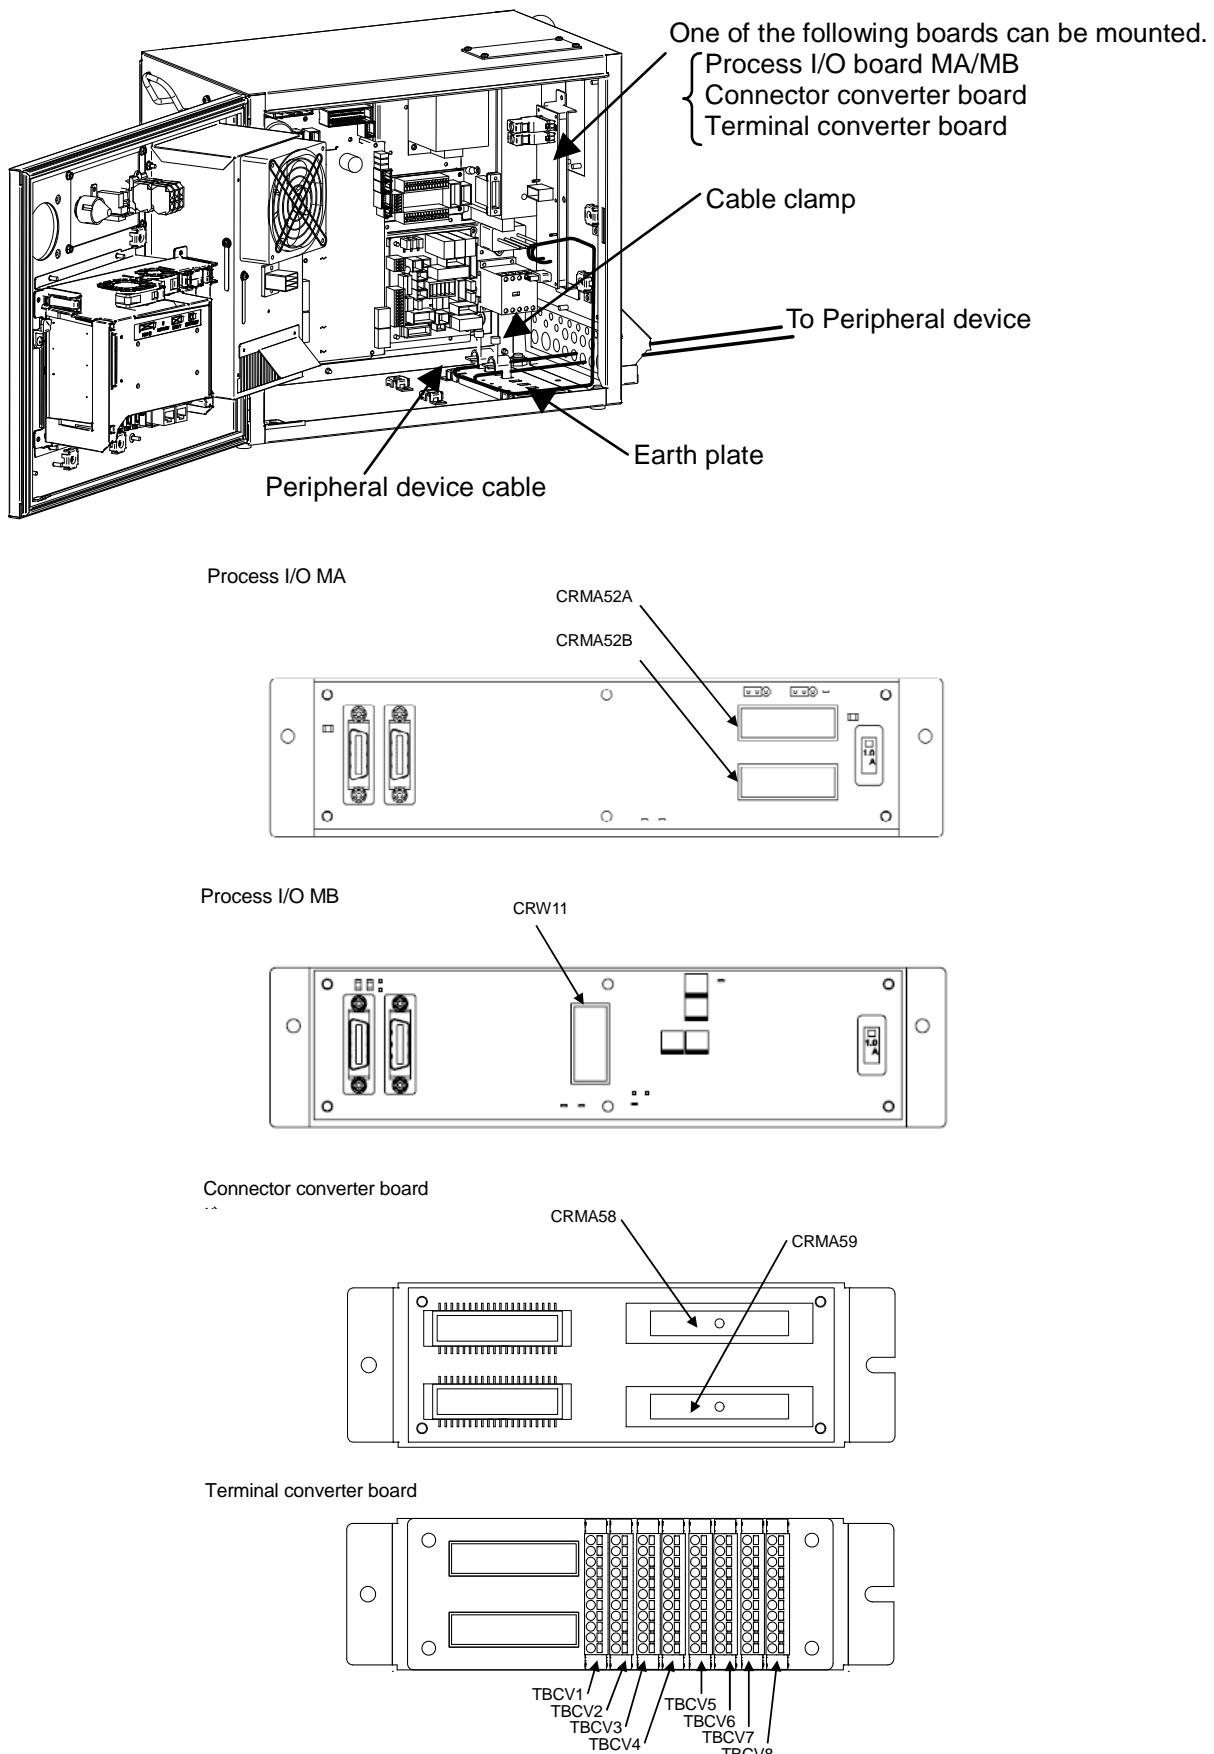

**Fig.4(b) Connecting the peripheral device cable
(Process I/O board MA/MB, Connector converter board, Terminal converter board)**

4.1 PERIPHERAL DEVICE INTERFACE BLOCK DIAGRAM

Following are a block diagram of the peripheral device interface and the specifications.

4.1.1 In Case of Main Board (CRMA15, CRMA16)


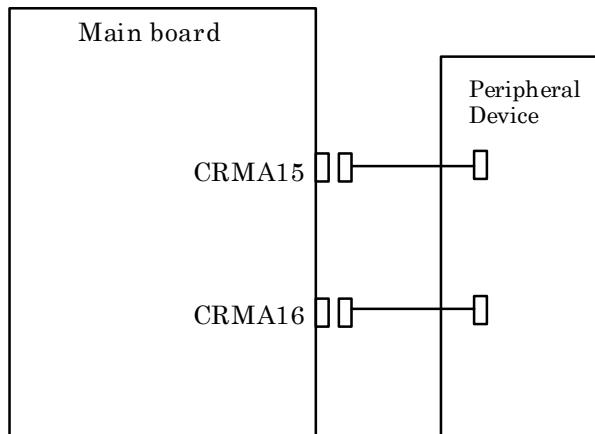


Fig.4.1.1 Block diagram of connecting peripheral device cable

Name	Drawing number	Remarks
Peripheral device connection cable (For main board)	A05B-2650-J100	Length: 10m (CRMA15) Length: 10m (CRMA16)
	A05B-2650-J101	Length: 20m (CRMA15) Length: 20m (CRMA16)

4.1.2 In the Case of the Process I/O Board MA

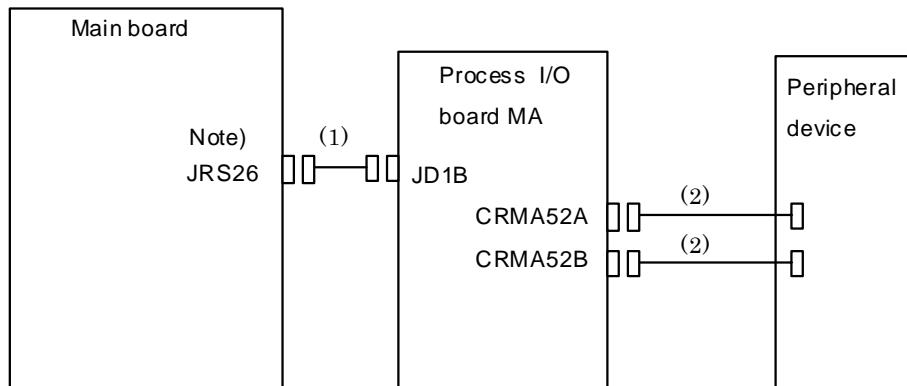


NOTE

The connection depends on whether the R-30iB Mate is the I/O link master or an I/O link slave. For details, see Section 3.2.1

Fig.4.1.2 Block diagram of the process I/O MA

Component	Drawing number	Remark
(1) I/O link cable	-	Included in the process I/O board MA
(2) Peripheral device cable (For process I/O MA)	A05B-2650-J150	Connection length 10m (one): CRMA52
	A05B-2650-J151	Connection length 20m (one): CRMA52

4.1.3 In the Case of the Process I/O Board MB

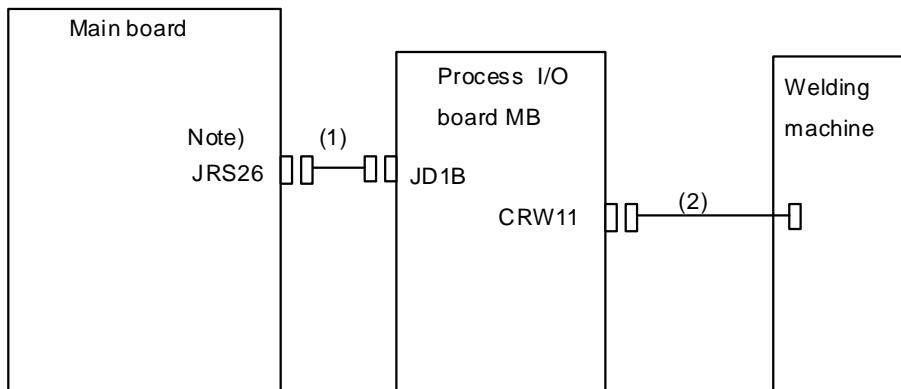

NOTE

The connection depends on whether the R-30iB Mate is the I/O link master or an I/O link slave. For details, see Section 3.2.1

Fig.4.1.3 Block diagram of the process I/O MB

Component	Drawing number	Remark
(1) I/O link cable	-	Included in the process I/O board MB
(2) Welding machine connection cable (For process I/O MB) (FANUC interface/elbow type)	A05B-2650-J160 A05B-2650-J161 A05B-2650-J162	Connection length 3m (one): CRW11 Connection length 7m (one): CRW11 Connection length 14m (one): CRW11

4.1.4 In the Case of the Connector Conversion Board

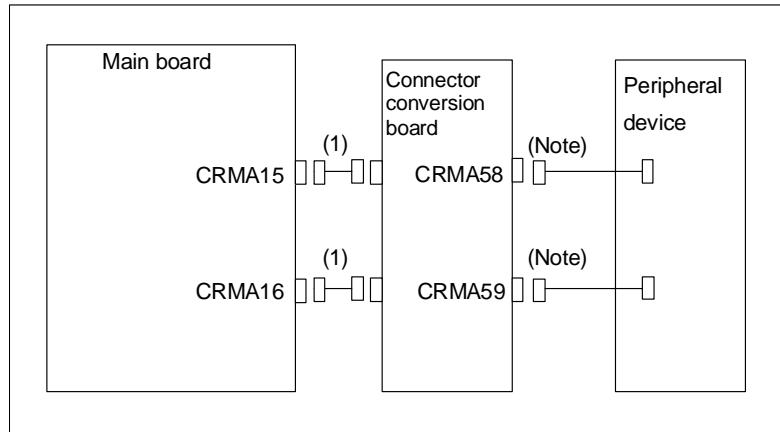

NOTE

This cable is not provided by FANUC. The customer needs to make it. For details on the connection method, see "4.3.2. Connection between the Connector Converter Board and Peripheral Devices".

Fig.4.1.4 Connection diagram of the connector conversion board

Component	Drawing number	Remark
(1) Connection cable	-	Included in the I/O connector conversion board.

4.1.5 In the Case of the Terminal Converter Board

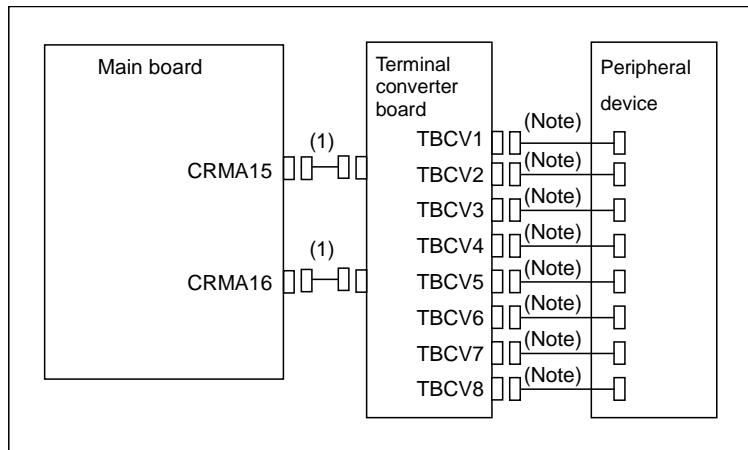

NOTE

This cable is not provided by FANUC. The customer needs to make it. For details on the connection method, see "Connection between the Terminal Converter Board and Peripheral Devices".

Fig.4.1.5 Connection diagram of the terminal converter board

Component	Drawing number	Remark
(1) Connection cable	-	Included in the terminal converter board.

4.2 I/O SIGNALS OF MAIN BOARD

There are 28 data inputs (DI) and 24 data outputs (DO) on main board.
Table 4.2 shows I/O signals of main board.

Table 4.2 I/O Signals of main board (1/2)

Connector number	Signal name	Description	Remarks
CRMA15-A5	DI101	Peripheral device status	General signal
CRMA15-B5	DI102		
CRMA15-A6	DI103		
CRMA15-B6	DI104		
CRMA15-A7	DI105		
CRMA15-B7	DI106		
CRMA15-A8	DI107		
CRMA15-B8	DI108		
CRMA15-A9	DI109		
CRMA15-B9	DI110		
CRMA15-A10	DI111		
CRMA15-B10	DI112		
CRMA15-A11	DI113		
CRMA15-B11	DI114		
CRMA15-A12	DI115		
CRMA15-B12	DI116		
CRMA15-A13	DI117		
CRMA15-B13	DI118		
CRMA15-A14	DI119		
CRMA15-B14	DI120		
CRMA16-A5	XHOLD	Temporary stop	
CRMA16-B5	RESET	External reset	
CRMA16-A6	START	Start	
CRMA16-B6	ENBL	Operation enabled	
CRMA16-A7	PNS1	Program number	
CRMA16-B7	PNS2		
CRMA16-A8	PNS3		
CRMA16-B8	PNS4		

Table 4.2 I/O Signals of main board (2/2)

Connector number	Signal name	Description	Remarks
CRMA15-A15	DO101	Peripheral device status	General signal
CRMA15-B15	DO102		
CRMA15-A16	DO103		
CRMA15-B16	DO104		
CRMA15-A17	DO105		
CRMA15-B17	DO106		
CRMA15-A18	DO107		
CRMA15-B18	DO108		
CRMA16-A10	DO109		
CRMA16-B10	DO110		
CRMA16-A11	DO111		
CRMA16-B11	DO112		
CRMA16-A12	DO113		
CRMA16-B12	DO114		
CRMA16-A13	DO115		
CRMA16-B13	DO116		
CRMA16-A14	DO117		
CRMA16-B14	DO118		
CRMA16-A15	DO119		
CRMA16-B15	DO120		
CRMA16-A16	CMDENBL	During automatic operation	
CRMA16-B16	FAULT	Alarm	
CRMA16-A17	BATALM	Battery voltage drop	
CRMA16-B17	BUSY	During operation	


4.3 INTERFACE FOR PERIPHERAL DEVICES

4.3.1 Connection between the Main Board (CRMA15, CRMA16) and Peripheral Devices

Peripheral device control interface A1 (source type DO)

CRMA15


	A	B
01	24F	24F
02	24F	24F
03	SDICOM1	SDICOM2
04	0V	0V
05	DI101	DI102
06	DI103	DI104
07	DI105	DI106
08	DI107	DI108
09	DI109	DI110
10	DI111	DI112
11	DI113	DI114
12	DI115	DI116
13	DI117	DI118
14	DI119	DI120
15	DO101	DO102
16	DO103	DO104
17	DO105	DO106
18	DO107	DO108
19	0V	0V
20	DOSRC1	DOSRC1

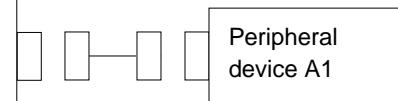

Peripheral device control interface A2 (source type DO)

CRMA16

	A	B
01	24F	24F
02	24F	24F
03	SDICOM3	
04	0V	0V
05	XHOLD	RESET
06	START	ENBL
07	PNS1	PNS2
08	PNS3	PNS4
09		
10	DO109	DO110
11	DO111	DO112
12	DO113	DO114
13	DO115	DO116
14	DO117	DO118
15	DO119	DO120
16	CMDENBL	FAULT
17	BATALM	BUSY
18		
19	0V	0V
20	DOSRC2	DOSRC2

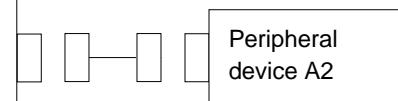

SDICOM1~3 signal are common selection signal for SDI.

When +24F common is used, connect to 0V.

When 0V common is used, connect to +24F.


SDICOM1 → Selects a common for DI101~DI108.

SDICOM2 → Selects a common for DI109~DI120.


SDICOM3 → Selects a common for XHOLD、RESET、START、ENBL、PNS1～PNS4.


NOTE

- 1 The peripheral device connection cables are optional.
- 2 The DOSRC1 and DOSRC2 pins of the CRMA15 and CRMA16 are pins for supplying power to drivers. (None of these pins can be left open.)

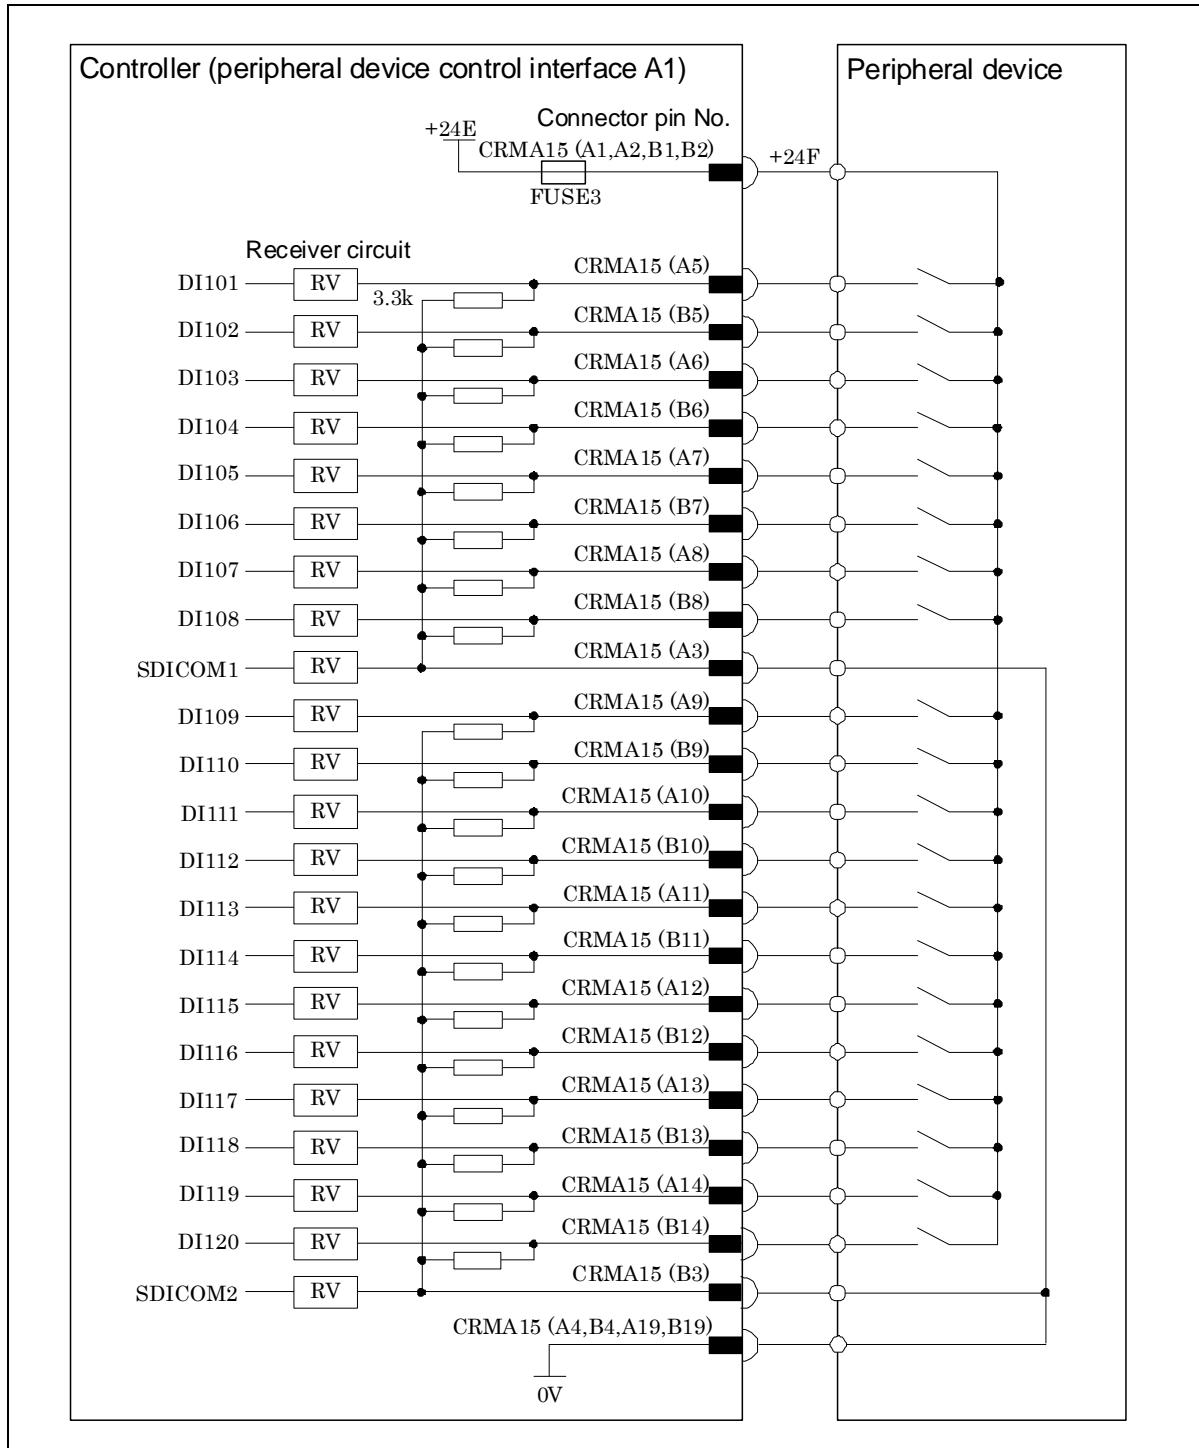
NOTE


In this diagram, common voltage of input devices is +24V.

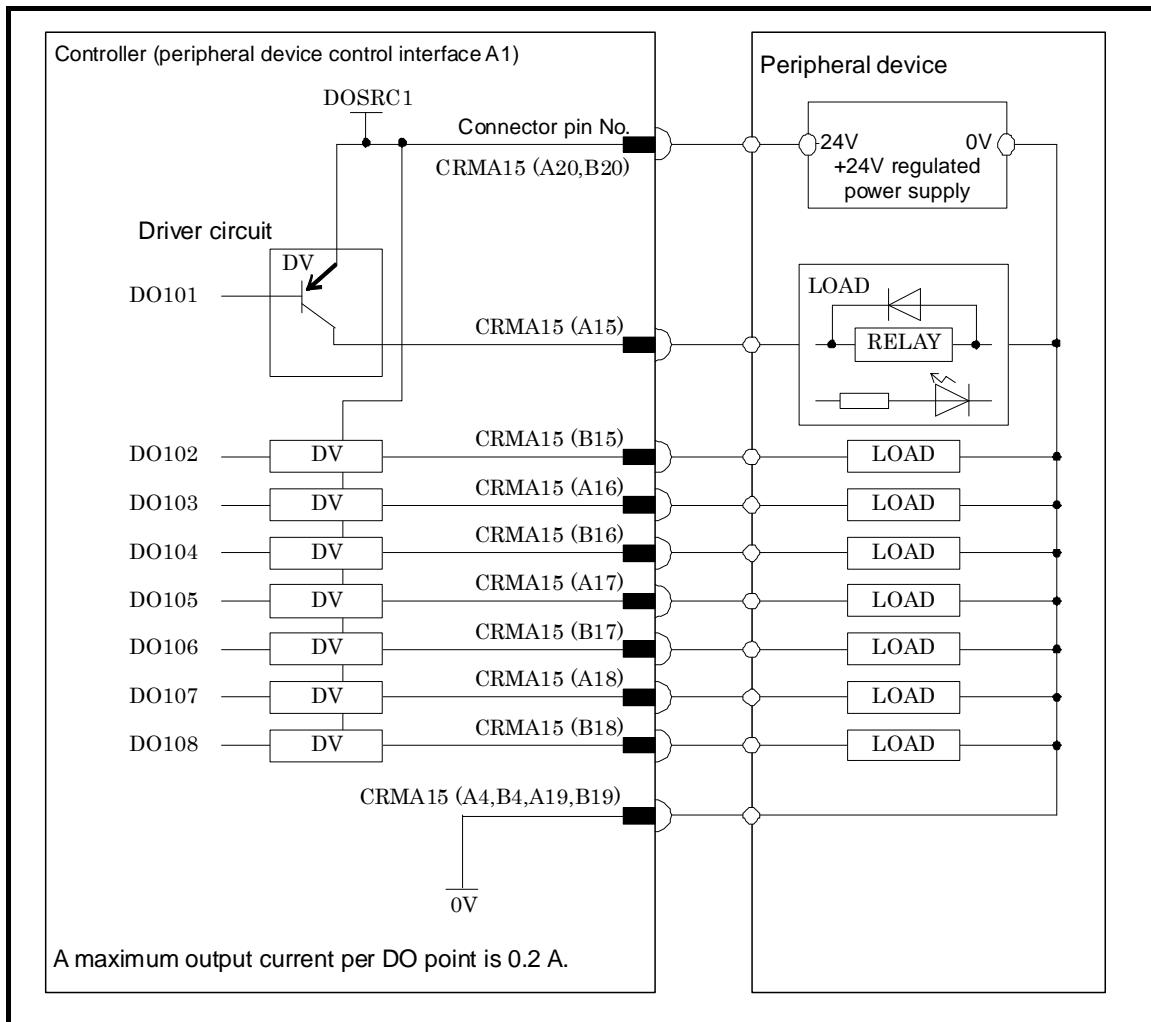

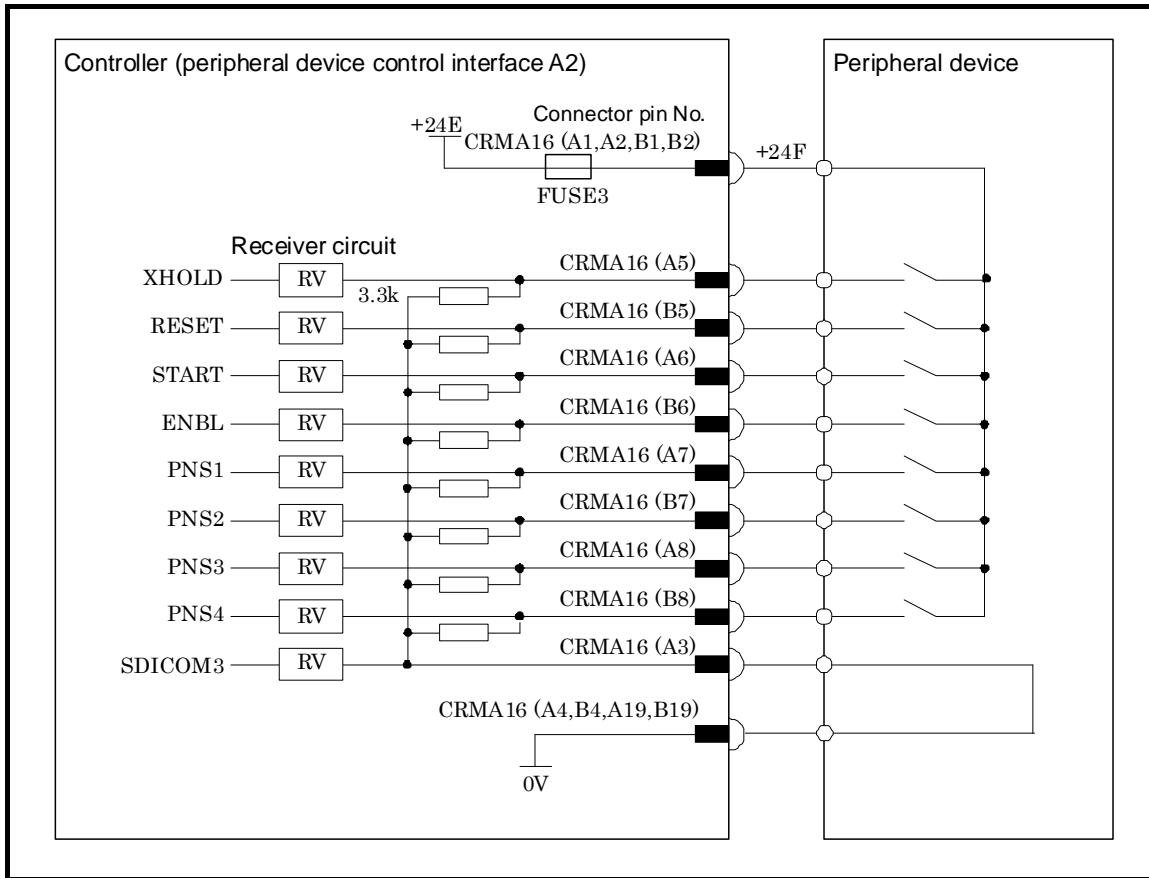


NOTE

In this diagram, common voltage of input devices is +24V.

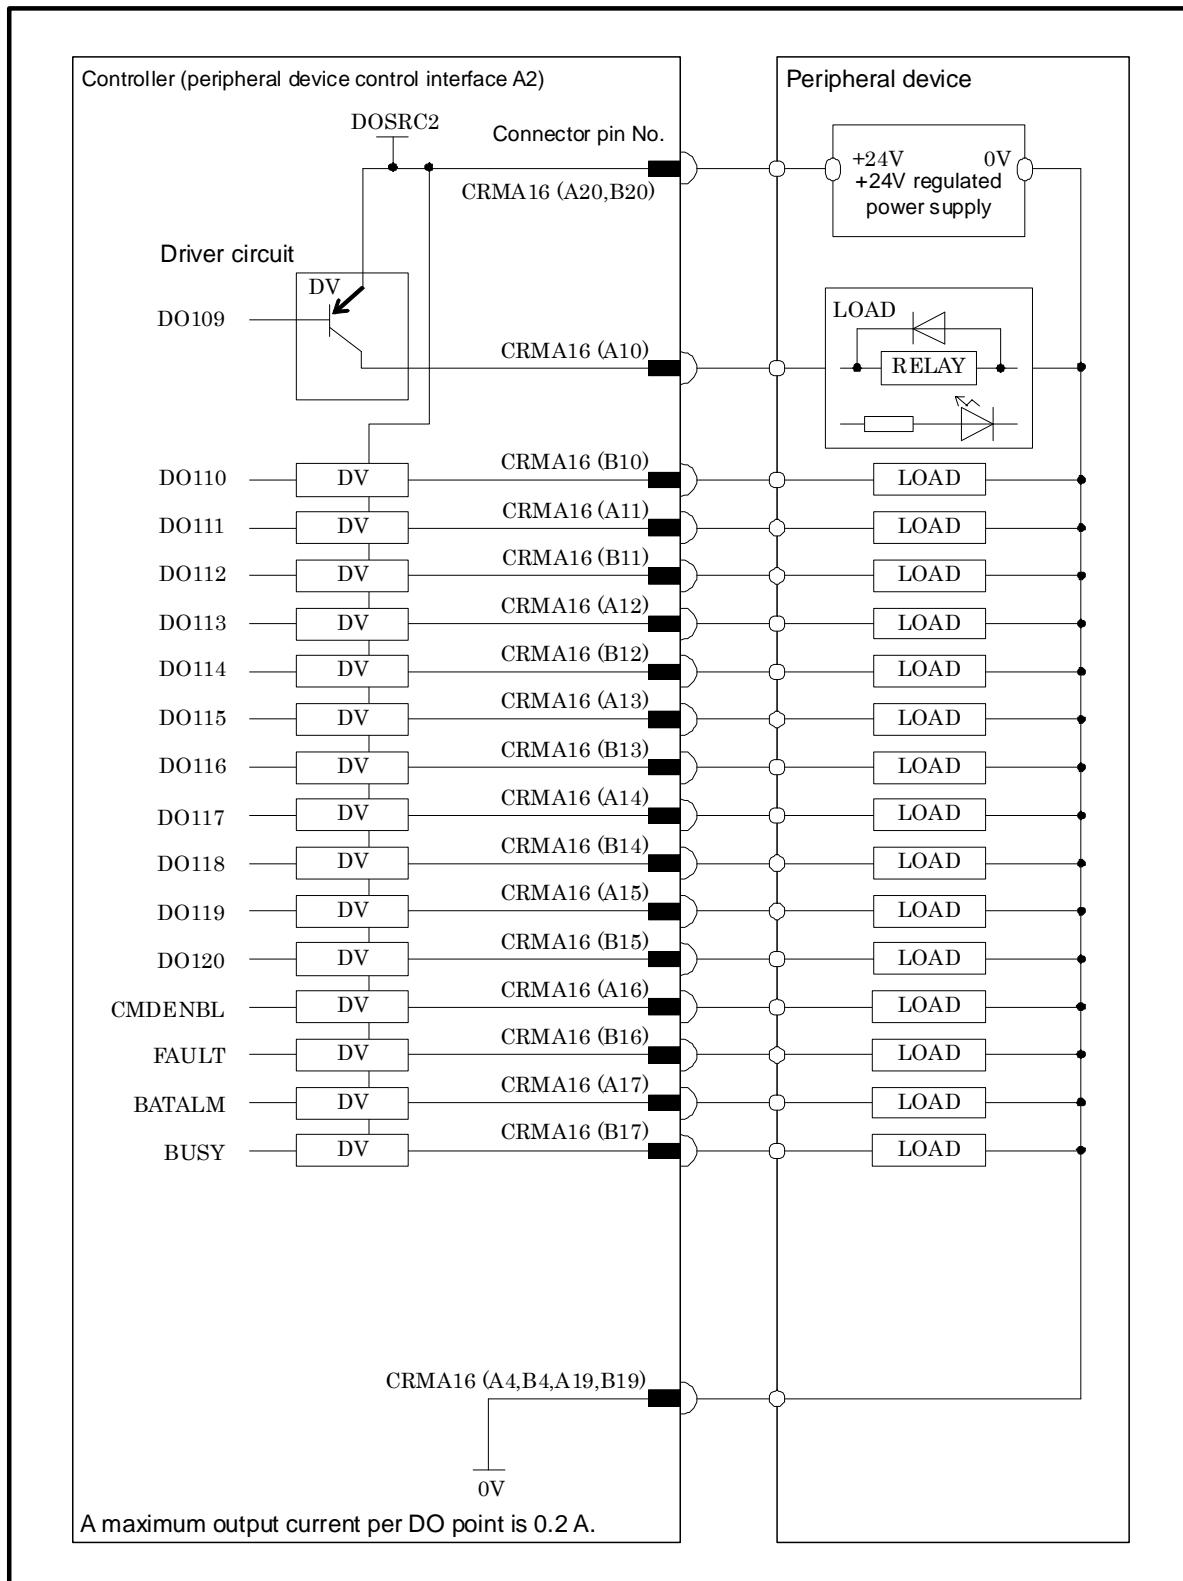

The following shows the connector interface of the optional peripheral device cables on the peripheral device side.

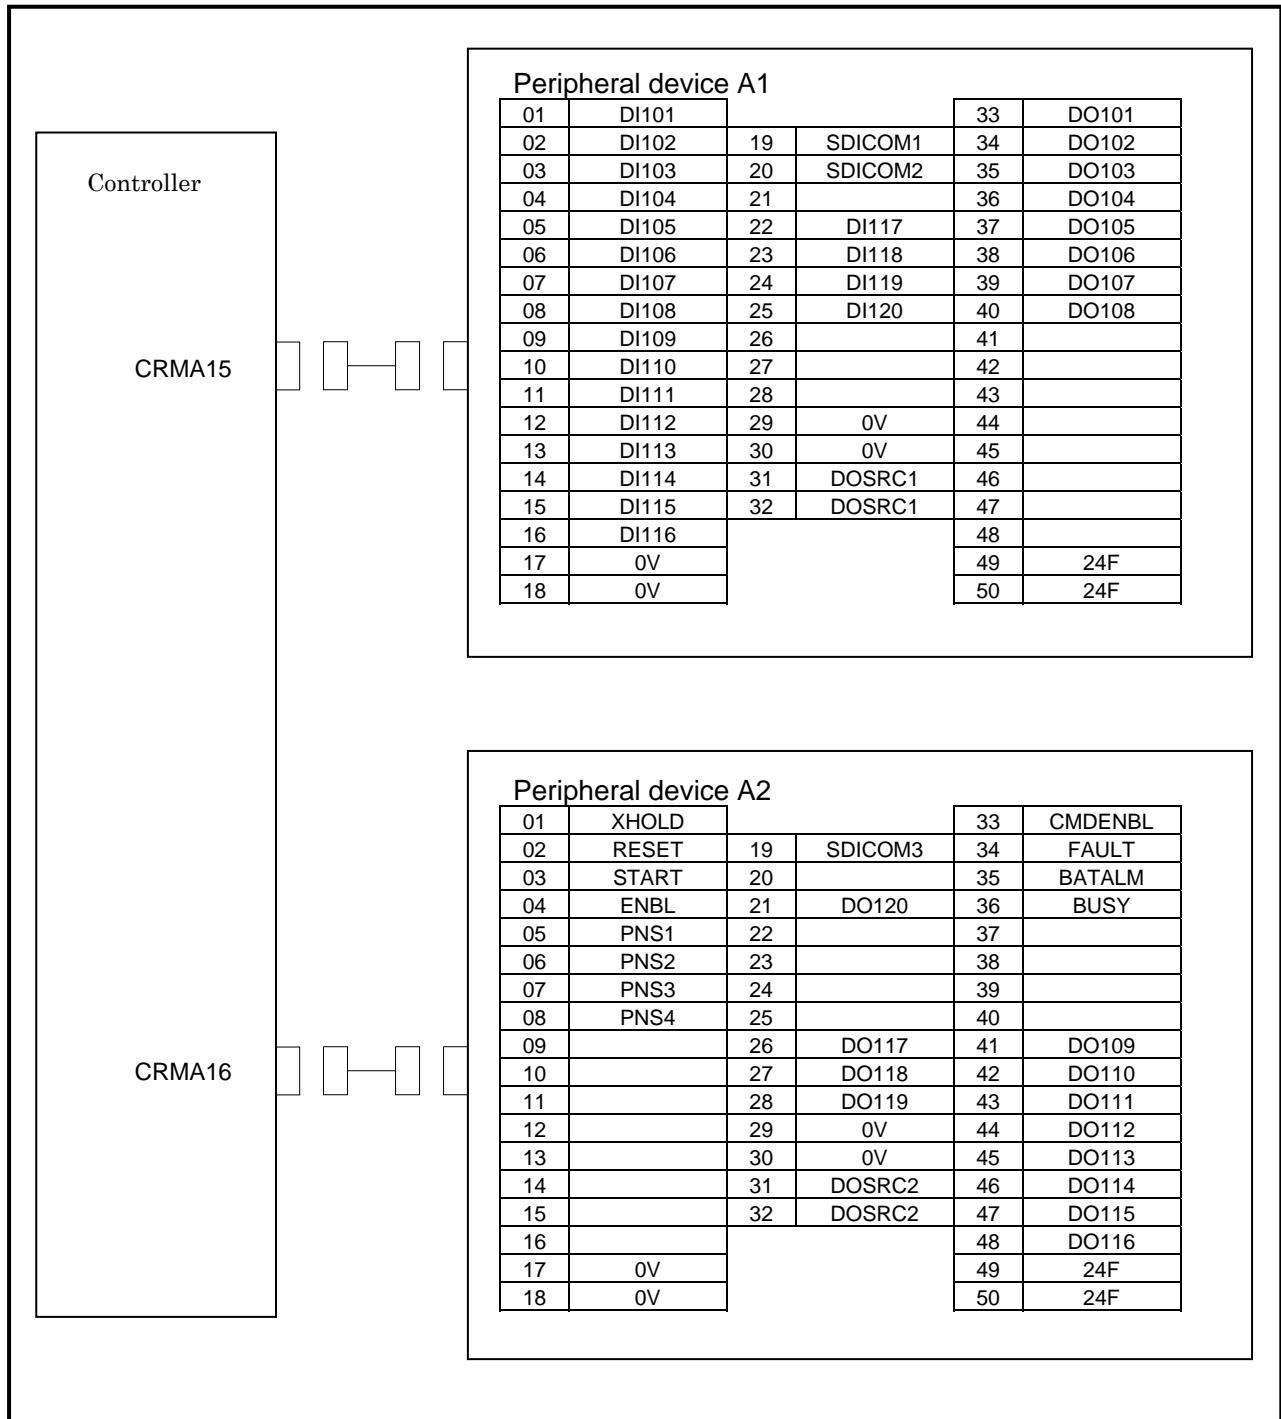

4.3.2 Connection between the Connector Converter Board and Peripheral Devices

The connector interface of the optional connector conversion board is shown below. For electrical connection, see Section 4.3.1.

Controller		Peripheral device control interface C1 (Honda Tsushin Kogyo MR-50/Femaile) CRMA58			
01	DI101		33	DO101	
02	DI102	19	34	DO102	
03	DI103	20	35	DO103	
04	DI104	21	36	DO104	
05	DI105	22	37	DO105	
06	DI106	23	38	DO106	
07	DI107	24	39	DO107	
08	DI108	25	40	DO108	
09	DI109	26	41		
10	DI110	27	42		
11	DI111	28	43		
12	DI112	29	0V	44	
13	DI113	30	0V	45	
14	DI114	31	DOSRC1	46	
15	DI115	32	DOSRC1	47	
16	DI116			48	
17	0V			49	24F
18	0V			50	24F


Peripheral device control interface C2 (Honda Tsushin Kogyo MR-50/Femaile) CRMA59					
01	XHOLD		33	CMDENBL	
02	RESET	19	34	FAULT	
03	START	20	35	BATALM	
04	ENBL	21	DO120	36	BUSY
05	PNS1	22		37	
06	PNS2	23		38	
07	PNS3	24		39	
08	PNS4	25		40	
09		26	DO117	41	DO109
10		27	DO118	42	DO110
11		28	DO119	43	DO111
12		29	0V	44	DO112
13		30	0V	45	DO113
14		31	DOSRC2	46	DO114
15		32	DOSRC2	47	DO115
16				48	DO116
17	0V			49	24F
18	0V			50	24F

Diagram illustrating the connection between the Controller and Peripheral devices:

- Peripheral device C1 is connected to the Controller via a series of four connection points (represented by small rectangles).
- Peripheral device C2 is connected to the Controller via a series of four connection points (represented by small rectangles).

4.3.3 Connection between the Terminal Converter Board and Peripheral Devices

The terminal block interface of the optional terminal converter board is shown below. For electrical connection, see Section 4.3.1.

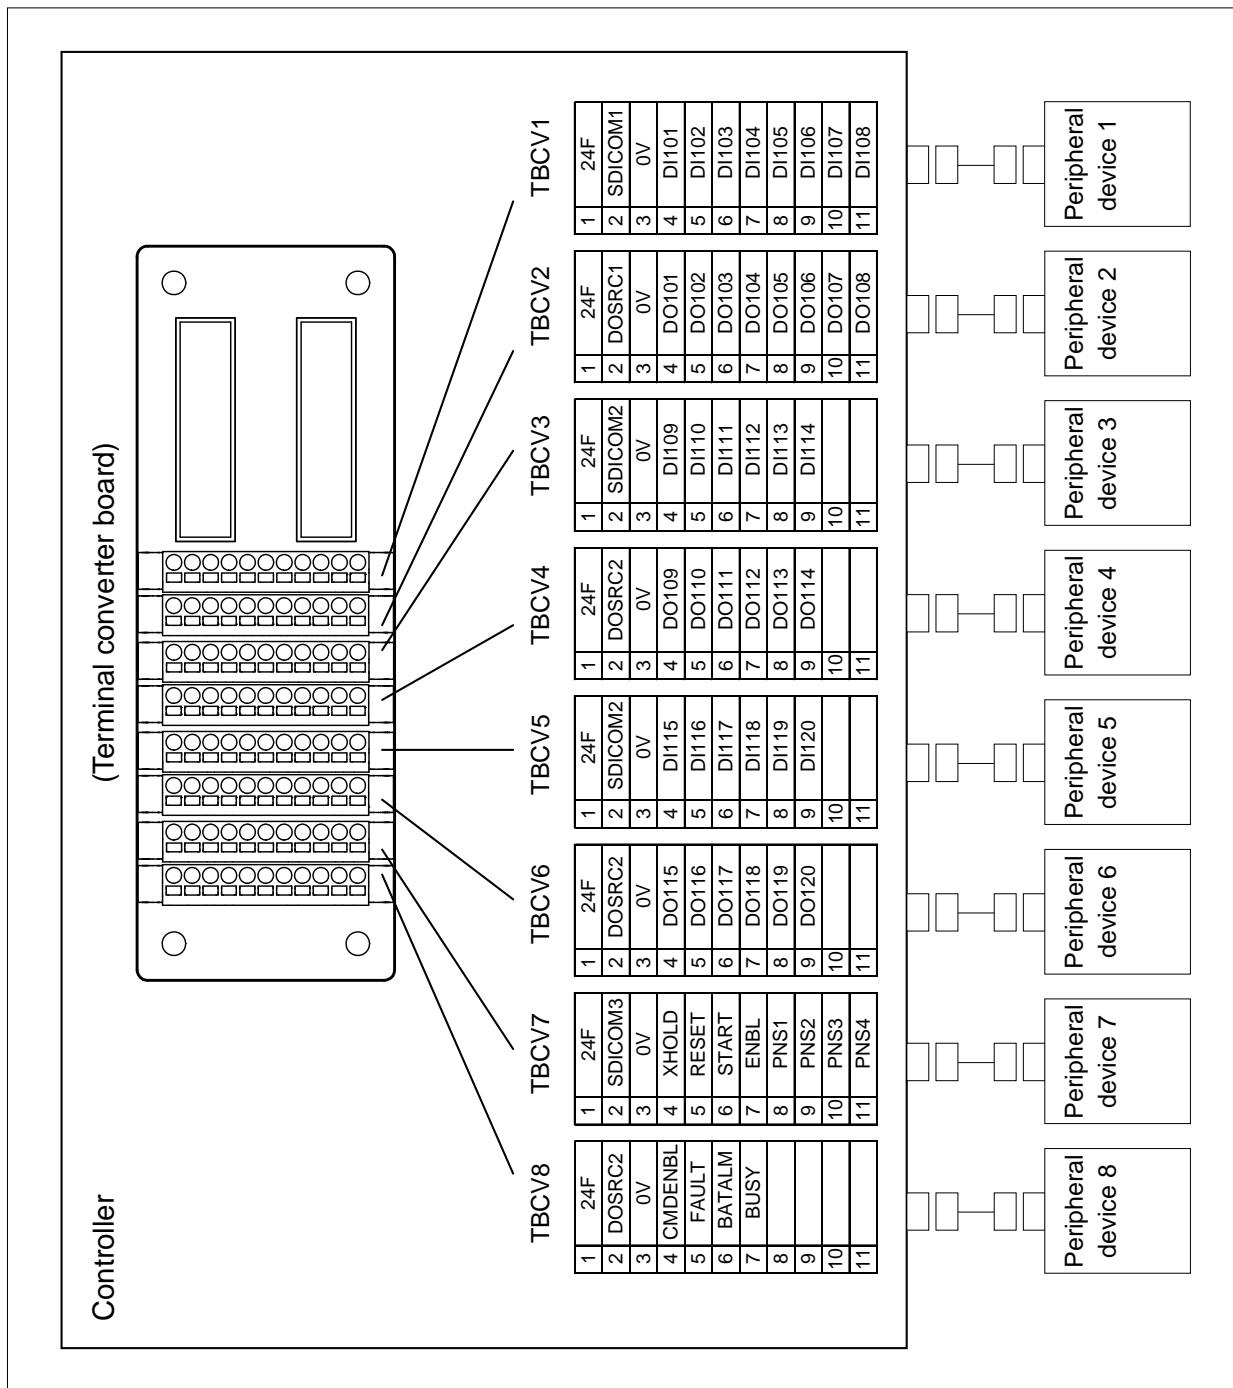

	Manufacturer	Manufacturer's specification	Remark
11-pole terminal block (TBCV1-8)	Phoenix Contact	FMC 1,5/11-ST-3,5-RF AU	Refer to appendix F


4.3.4 Connection between the Process I/O Board MA and Peripheral Devices

Controller

Peripheral device control interface B1 (source type DO)

CRMA52A

	A	B
01	24F	24F
02	DI121	DI122
03	DI123	DI124
04	DI125	DI126
05	DI127	DI128
06	DI129	DI130
07		
08	DO121	DO122
09	DO123	DO124
10	DO125	DO126
11	DO127	DO128
12		
13	0V	0V
14	0V	0V
15	DOSRC3	DOSRC3

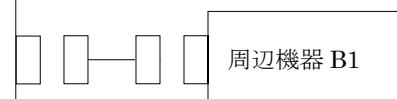


Peripheral device control interface B2 (source type DO)

CRMA52B


	A	B
01	24F	24F
02	DI131	DI132
03	DI133	DI134
04	DI135	DI136
05	DI137	DI138
06	DI139	DI140
07		
08	DO129	DO130
09	DO131	DO132
10	DO133	DO134
11	DO135	DO136
12		
13	0V	0V
14	0V	0V
15	DOSRC3	DOSRC3

**NOTE**

- 1 The peripheral device connection cable is optional.
- 2 The DOSRC3 pin of CRMA52A and CRMA52B supply power to the drivers (connect all pins).

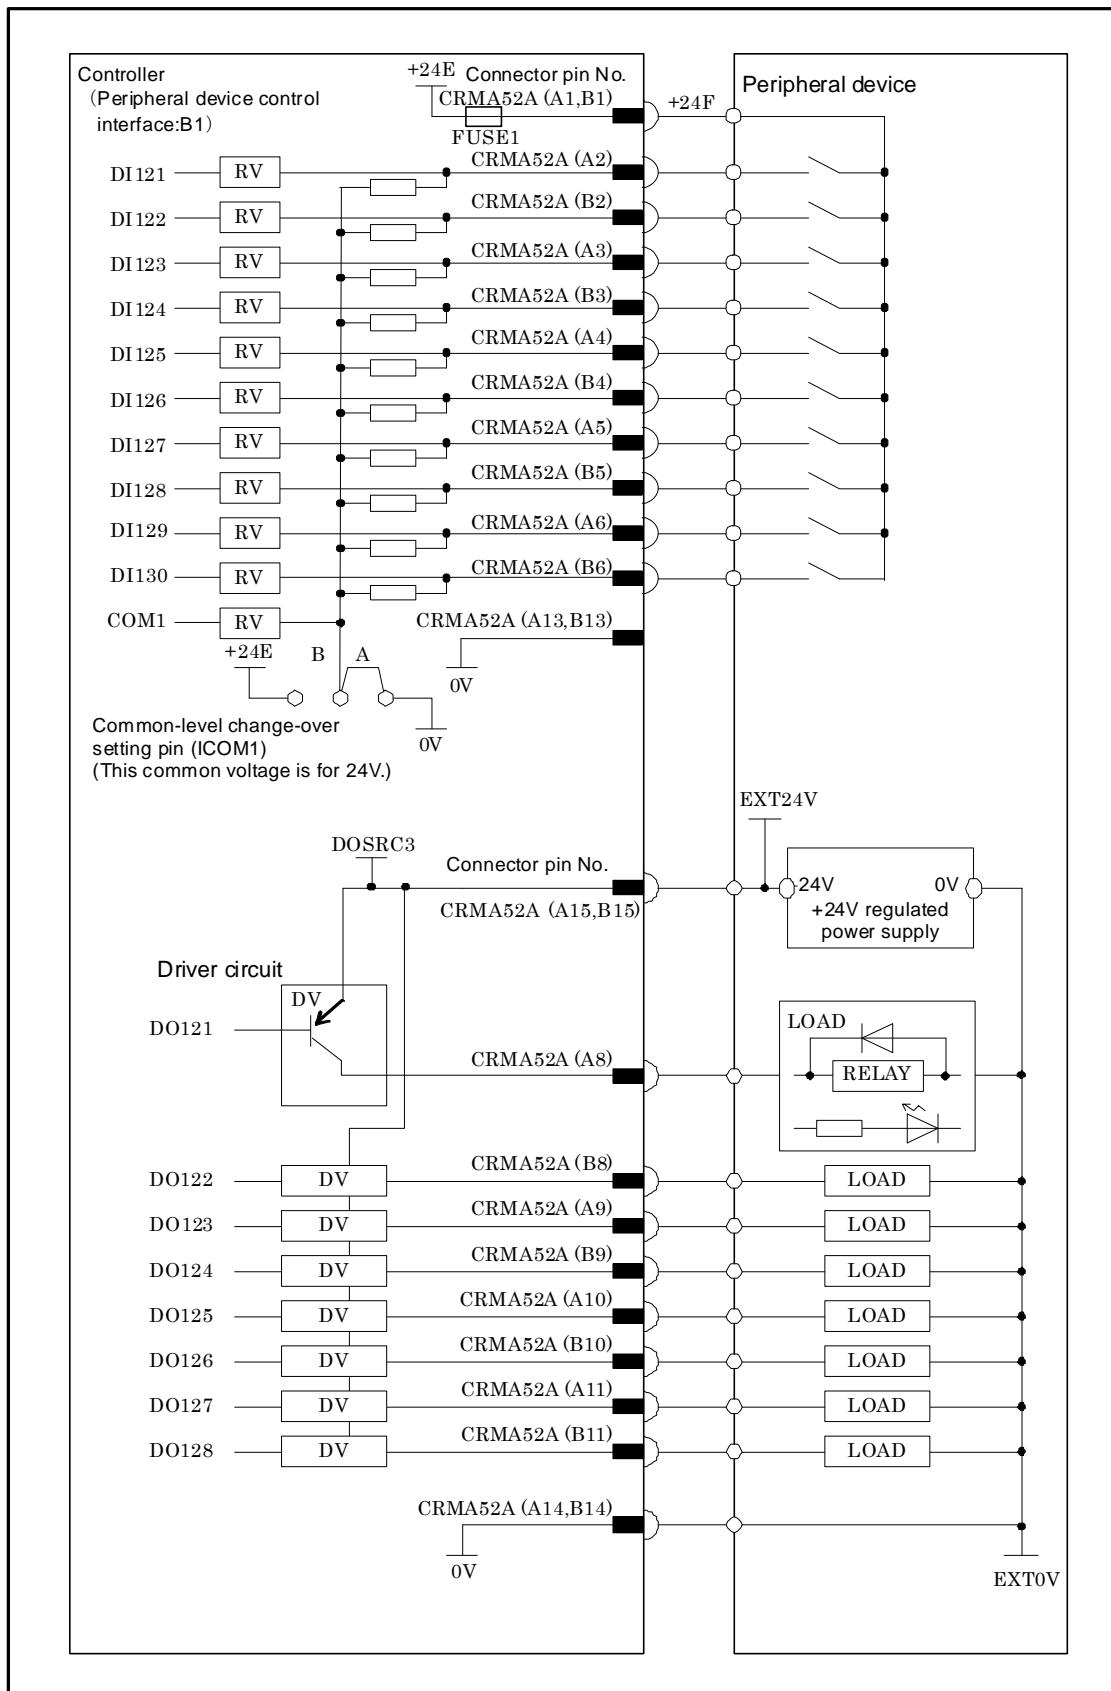**NOTE**


In this diagram, common voltage of input device is 24V.

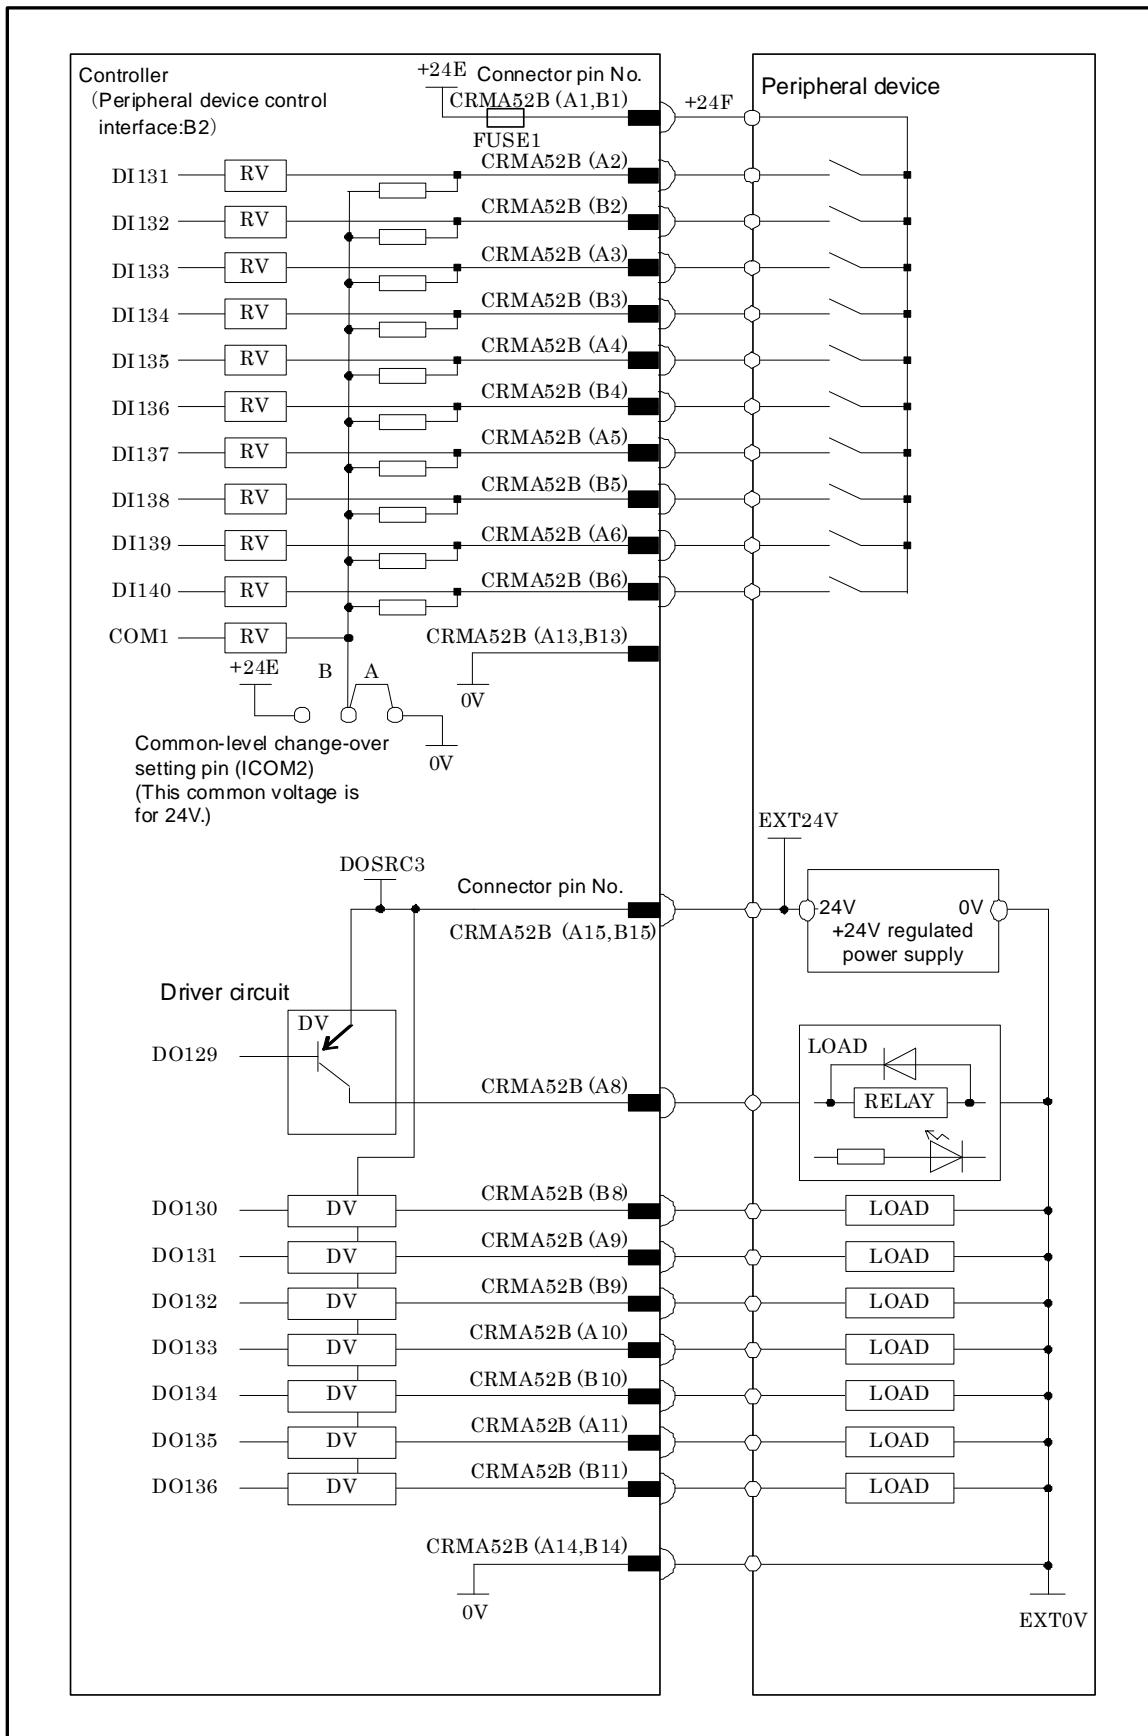

NOTE


In this diagram, common voltage of input device is 24V.

The following shows the connector interface of the optional peripheral device cables on the peripheral device side.

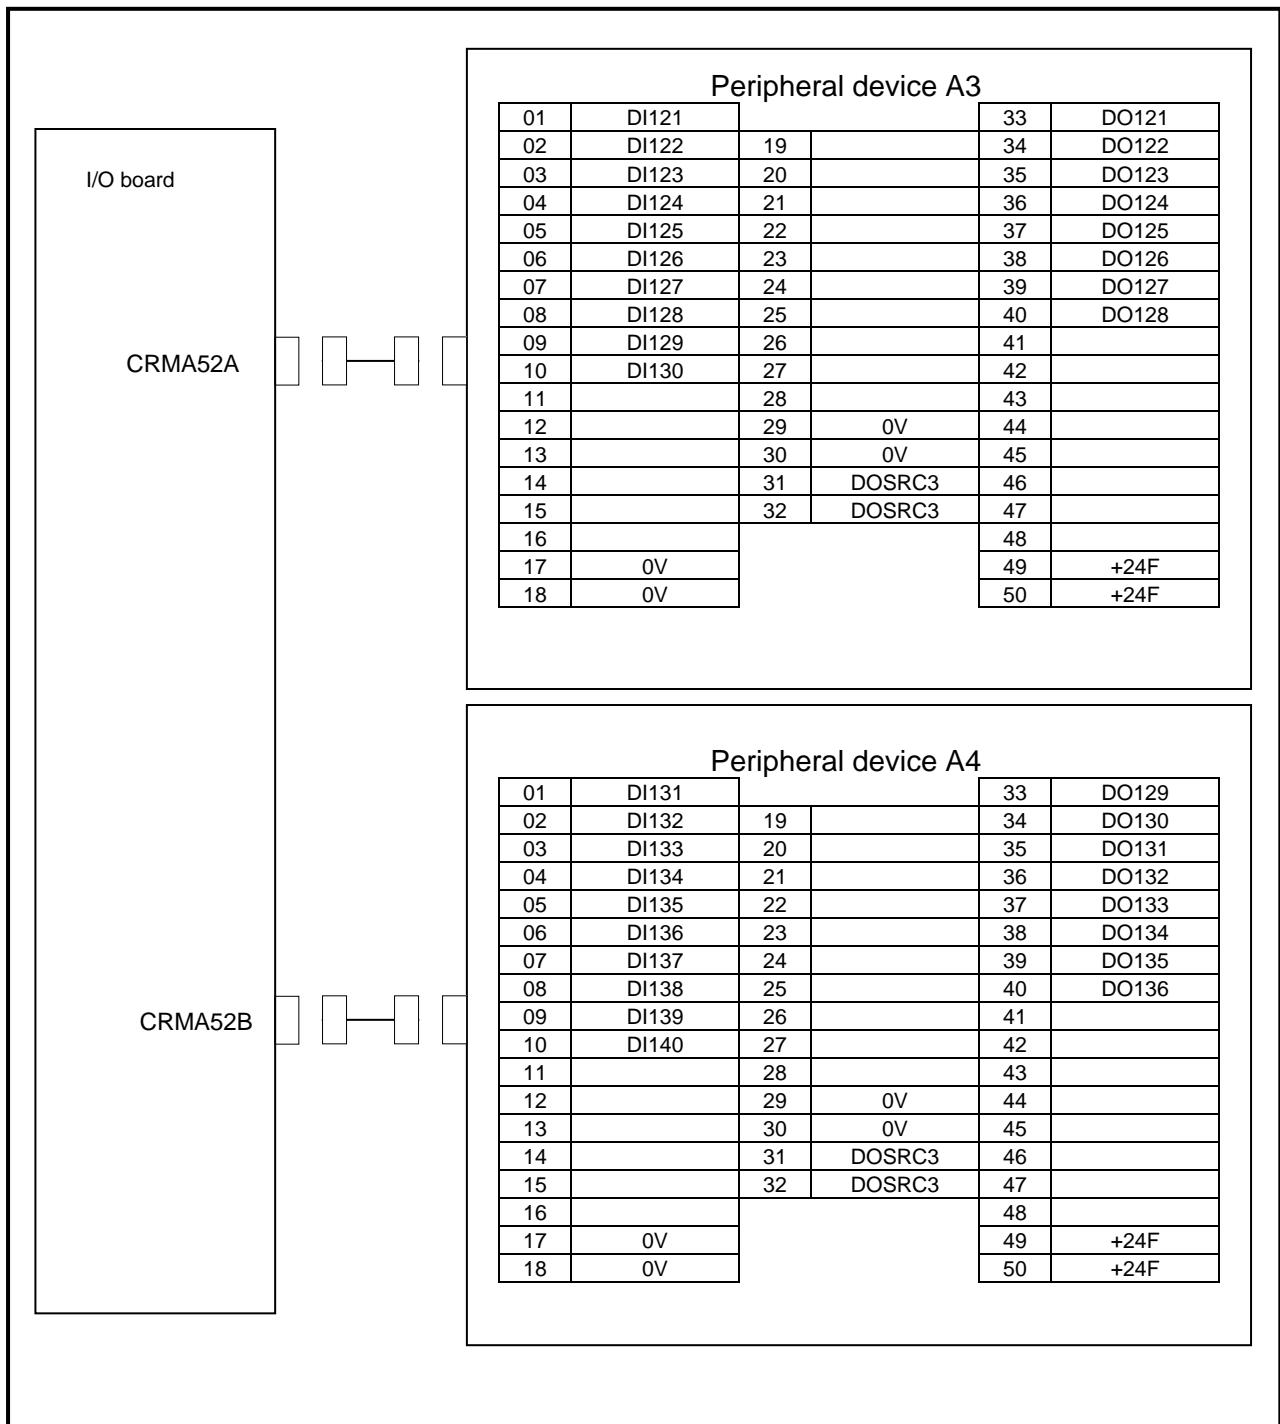


4.4 INTERFACE FOR WELDING MACHINES

4.4.1 Connection between the Process I/O Board MB and Welding Machines

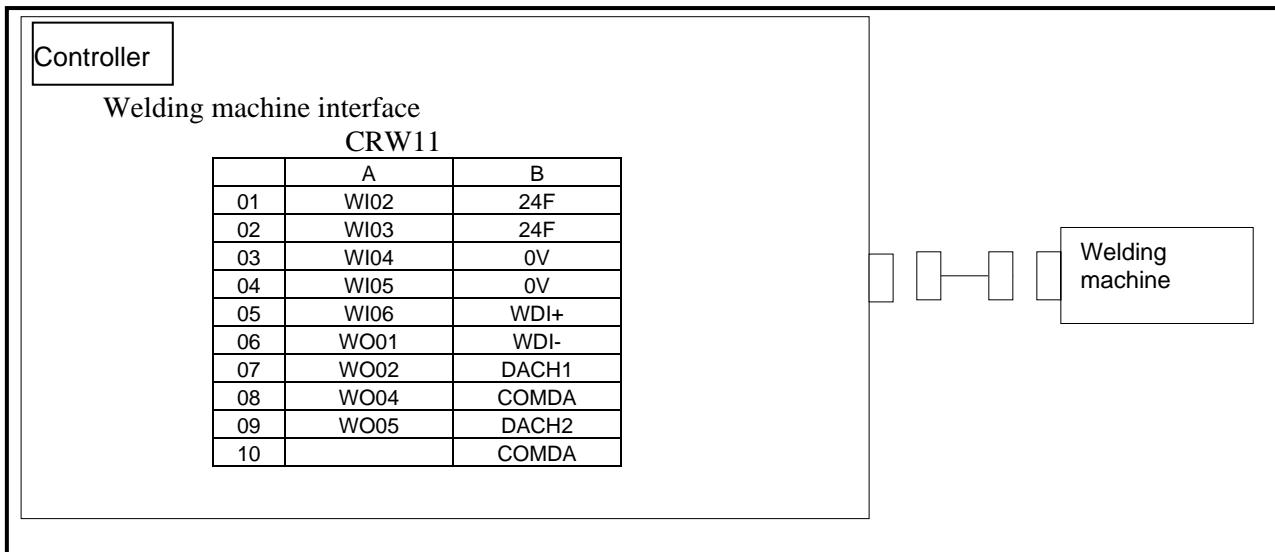**NOTE**

- 1 The welding machine connection cable is optional.

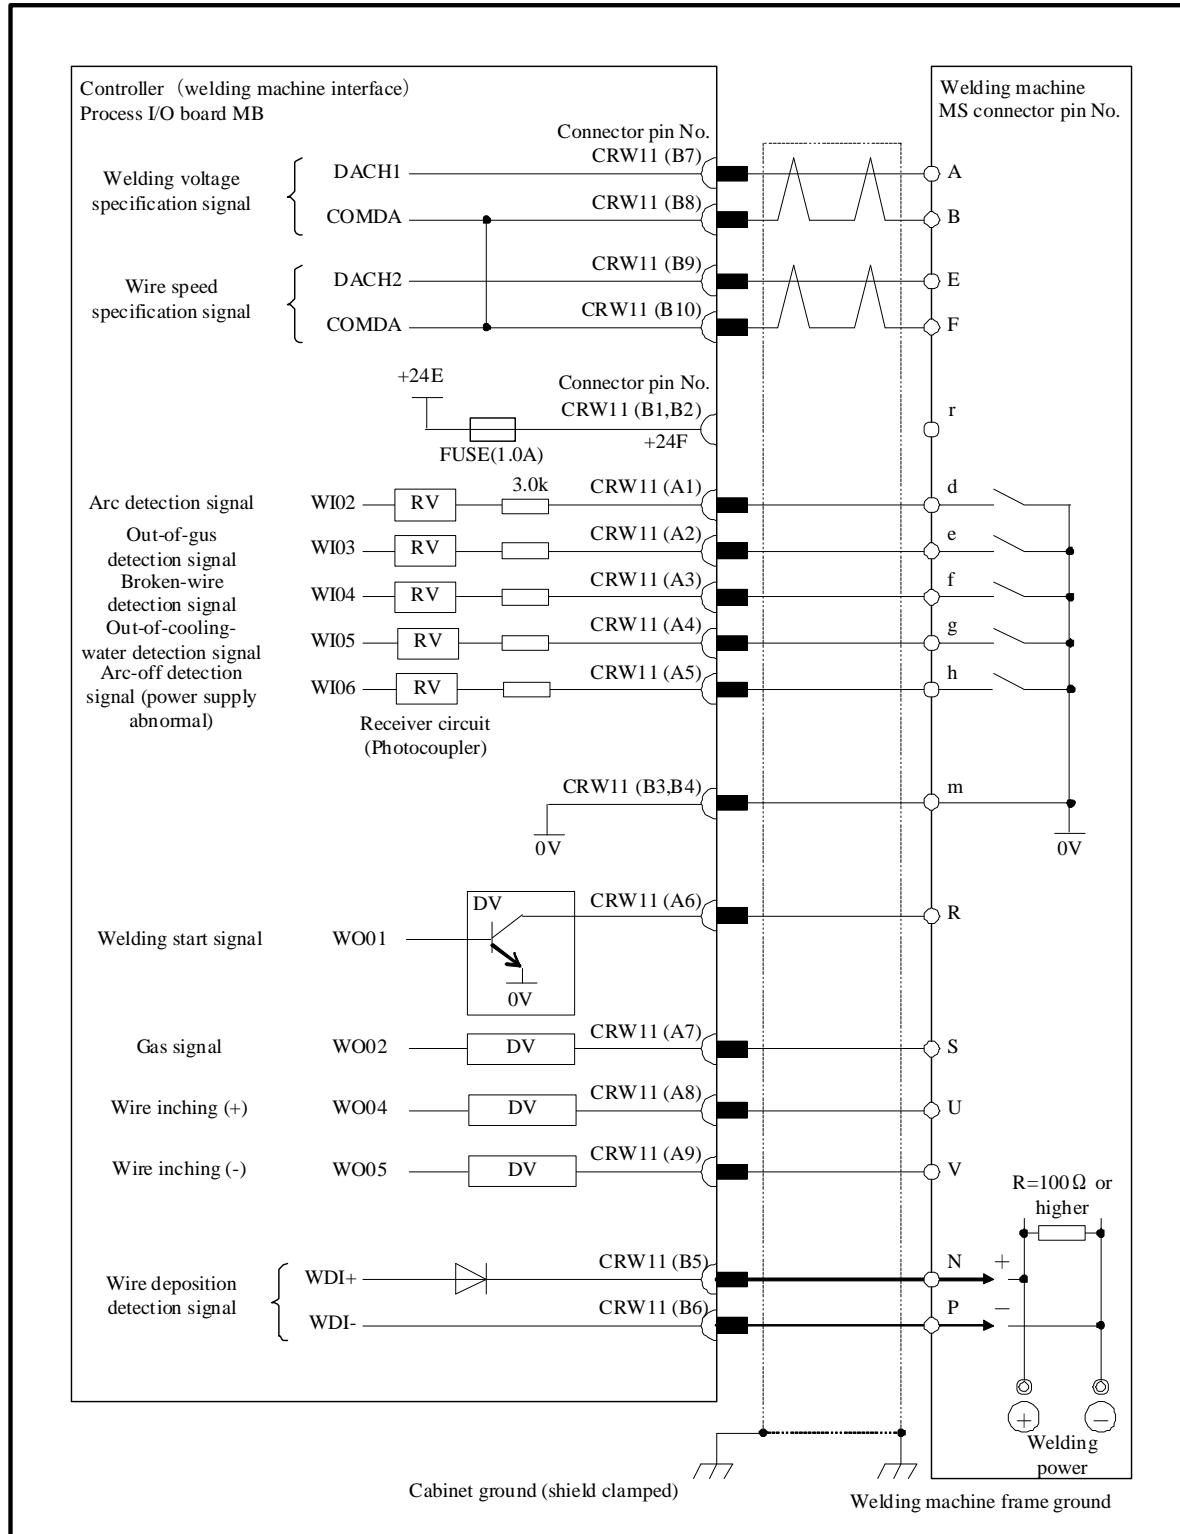

Pin-to-pin connection between CRW11 connector and welding machine connector (FANUC interface)
(analog output, welding wire deposition detection, WI/WO connection)

4.5 EE INTERFACE

4.5.1 Connection between the Robot and End Effector

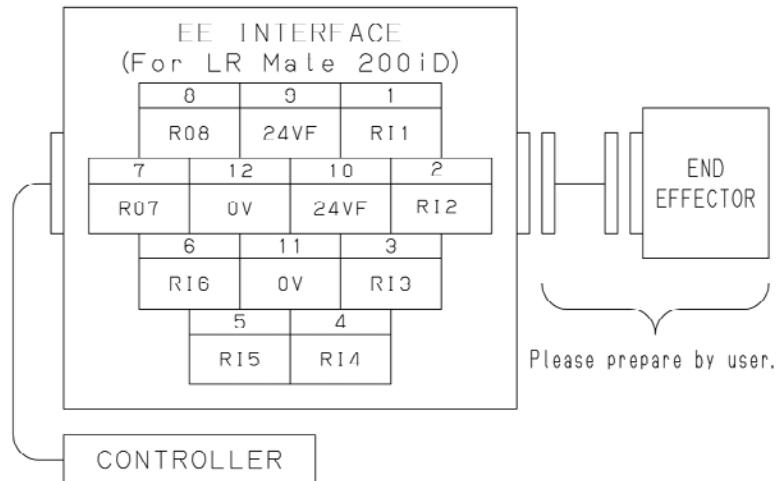


Fig.4.5.1(a) Connection of End effector (In case of LR Mate 200iD)

NOTE

RDO1 to RDO6 are used as the on/off signals of the solenoid valve option.
For details, refer to the operator's manual of each robot.

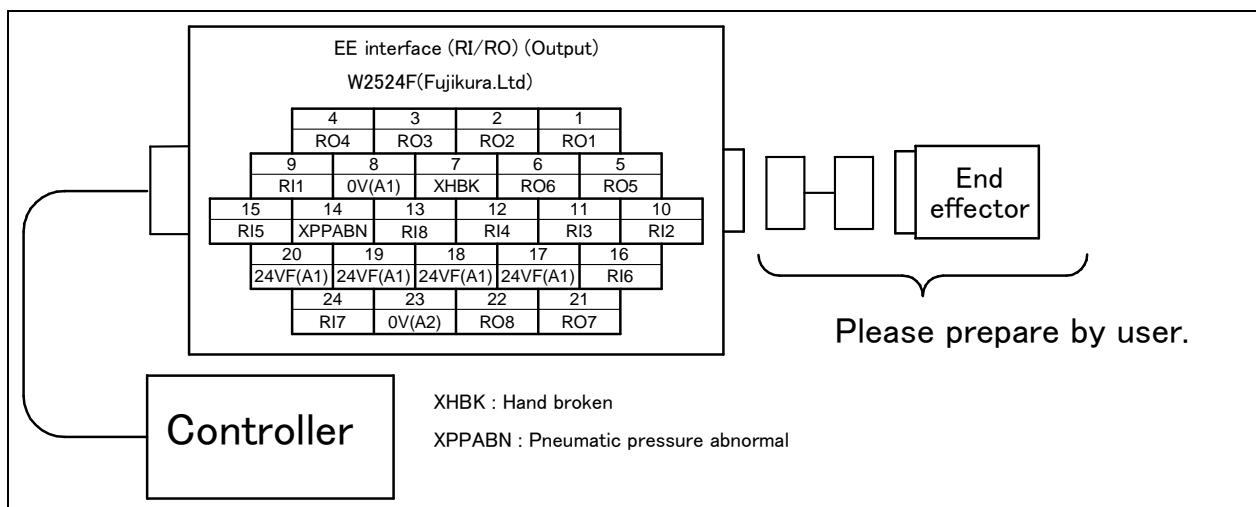
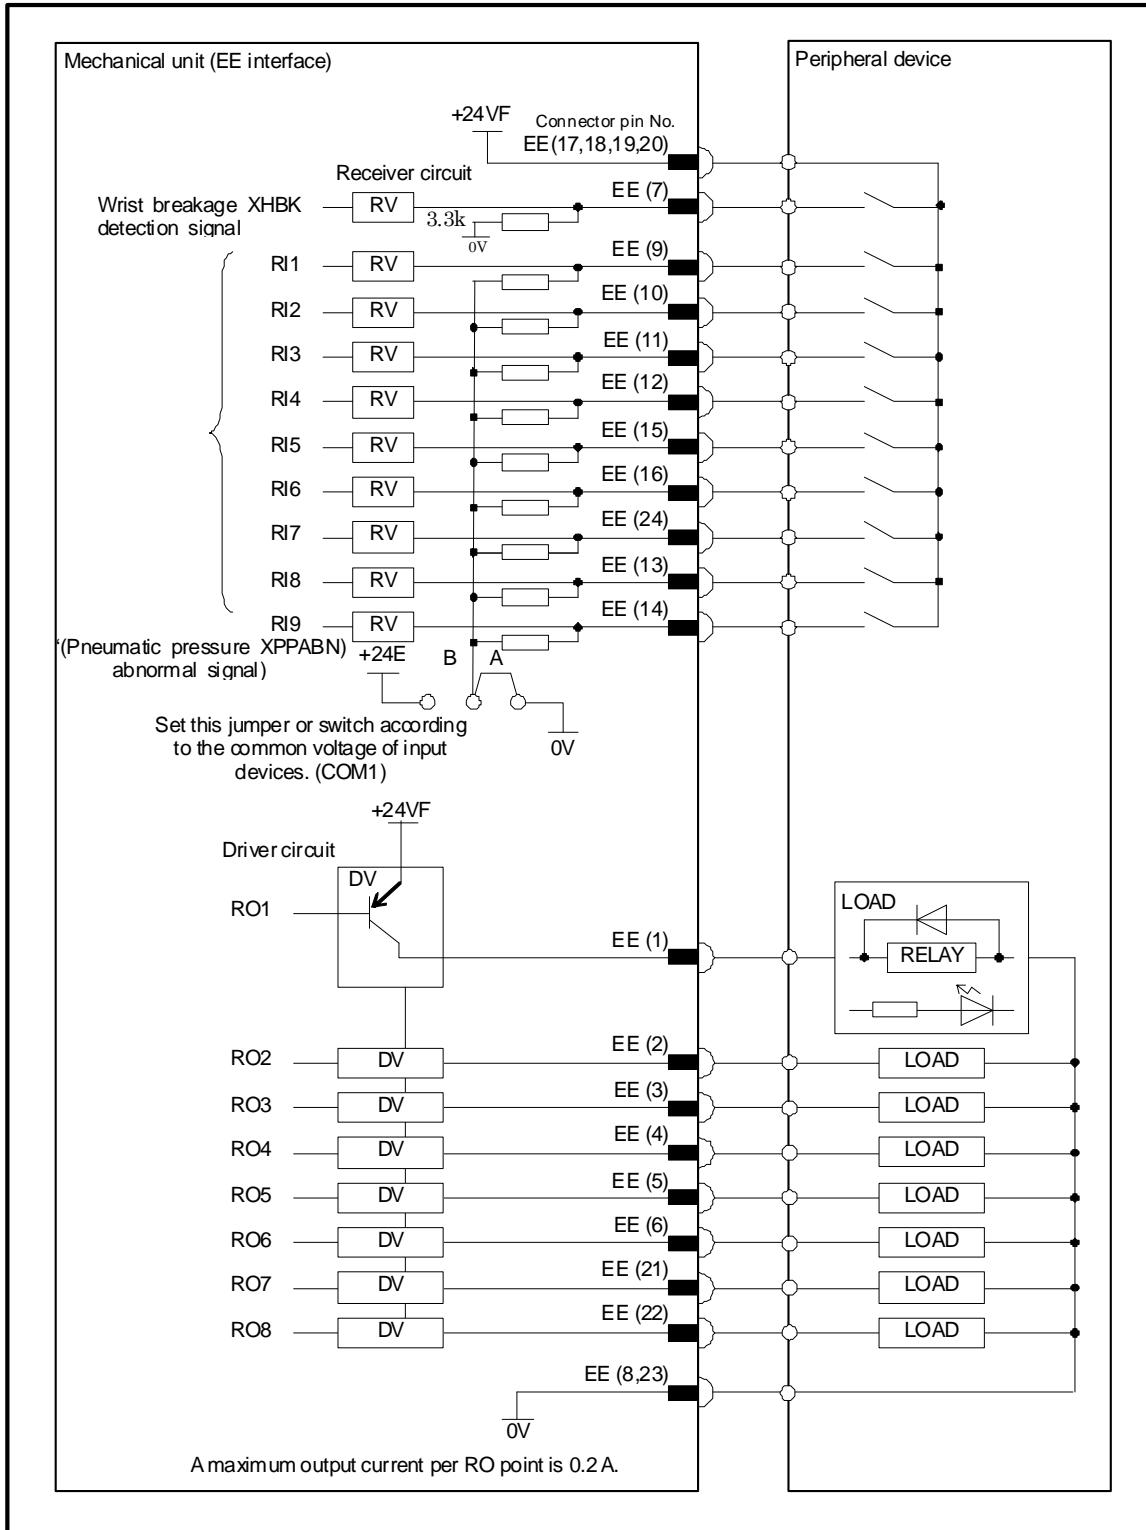


Fig.4.5.1(b) Connection of End effector (In case of R-2000iB)

NOTE

EE interface depends on the option of the robot. Refer to the operator's manual of each robot.

**NOTE**


- 1 In this diagram, common voltage of input devices is +24V.
- 2 The common-level change-over setting pin or switch (COM1) is in the 6-axis servo amplifier.

4.6 DIGITAL I/O SIGNAL SPECIFICATIONS

This section describes the specifications of the digital I/O signals interfaced with the peripheral device, end effector, and arc welder.

4.6.1 Peripheral Device Interface A

- (1) Output signals in peripheral device interface A (Source type DO)
(a) Example of connection

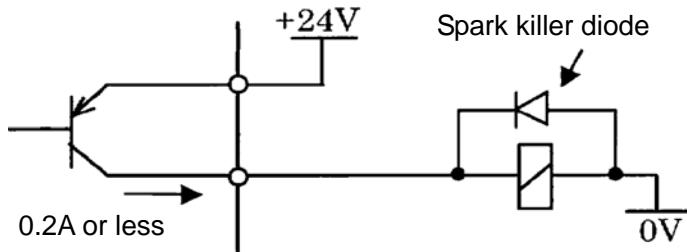

- (b) Electrical specifications

Maximum load current when driver is on: 200mA (including momentary level)

Saturation voltage when driver is on: 1.0V max.

Dielectric strength: 24V \pm 20% (including momentary level)

Leakage current when driver is off: 100 μ A

- (c) The external power supply to output signals must satisfy the following:

Power supply voltage: +24V \pm 10%

Power supply current: For each printed circuit board of this type
(Total sum of maximum load currents including momentary levels + 100mA or more)

Power-on timing:

At the same time when the controller is turned on or earlier

Power-off timing:

At the same time when the controller unit is turned off or later

- (d) Spark killer diode

Rated peak reverse voltage: 100V or more

Rated effective forward current: 1A or more

- (e) Driver for output signals

In the driver device, the current of each output signal is monitored, and when an overcurrent is detected, the relevant output is turned off. After an output has been turned off by overcurrent, the overcurrent state is released because the output is off, so the output on state is restored. Therefore, in the ground fault or overcurrent state, the output is turned on and off repeatedly. Such a condition is found also when a load with a high surge current is connected.

The driver device also includes an overheat detection circuit, which turns off all outputs of the device when the internal temperature of the device has increased as a result of a continued overcurrent state due to a ground fault of an output and so on. The outputs are held off, but their normal states can be restored by turning the power to the controller on and off after the internal temperature of the device has lowered.

- (f) Note on use

Do not use the +24V power supply of the robot.

When adding a relay, solenoid, or the like directly to the circuit, connect a diode for counter electromotive voltage protection in parallel to the load.

When using a load, such as a lamp, that generates surge current when it is turned on, install a protection resistor.


(g) Applicable signals

Output signals of main board I/O board CRMA15 and CRMA16
CMDENBL, FAULT, BATALM, BUSY, DO101 to DO120

Output signals of Process I/O board CRMA52A and CRMA52B
DO01 to DO16

(2) Input signals in peripheral device interface A

(a) Example of connection

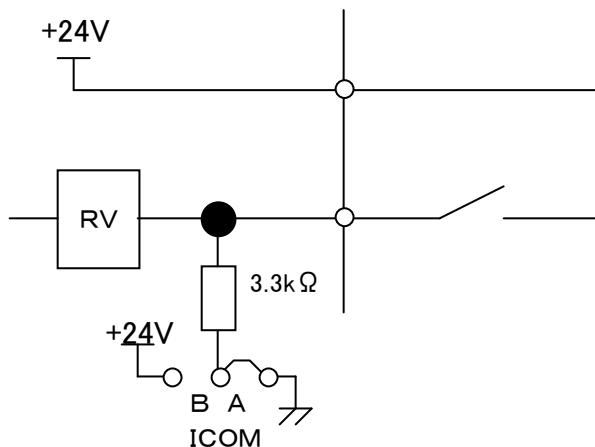

(b) Electrical specifications of the receiver

Type: Grounded voltage receiver

Rated input voltage: Contact close : +20V to +28V

Contact open : 0V to +4V

Maximum applied input voltage: +28VDC

Input impedance: 3.3kΩ (approx.)

Response time: 5ms to 20ms

(c) Specifications of the peripheral device contact

Voltage and Current: DC24V, 0.1A


(Use a contact which minimum load is 5mA or less.)

Input signal width: 200ms or more (on/off)

Chattering time: 5ms or less

Closed circuit resistance: 100Ω or less


Opened circuit resistance: 100kΩ or more

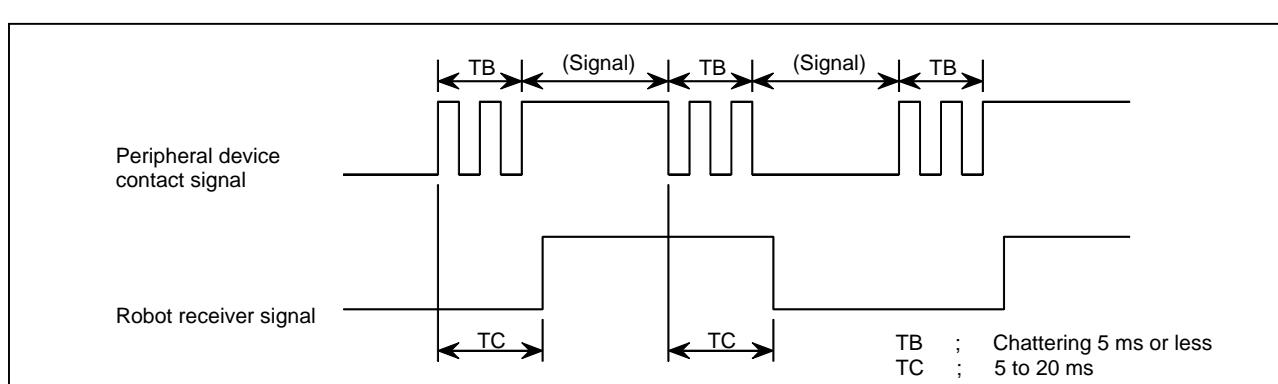

- (d) Note on use
Apply the +24 V power at the robot to the receiver.
However, the above signal specifications must be satisfied at the robot receiver.
- (e) Applicable signals
Input signals of main board CRMA15 and CRMA16
XHOLD, FAULT RESET, START, HOME, ENBL
DI101 to DI120
Input signals of Process I/O board CRMA52A and CRMA52B
DI01 to DI20

4.6.2 EE Interface

- (1) Output signals in EE interface
(a) Example of connection

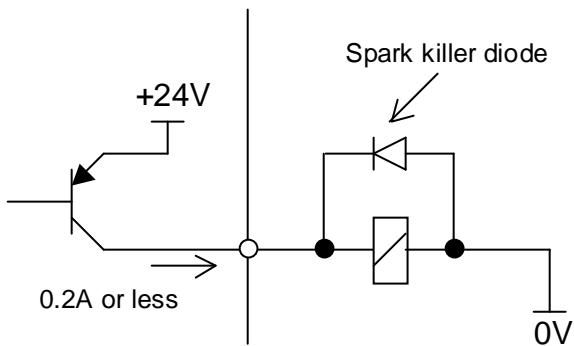


- (b) Electrical specifications
Maximum load current when driver is on: 200mA (including momentary level)
Saturation voltage when driver is on: 1.0V max.
Dielectric strength: 24V ±20% (including momentary level)
Leakage current when driver is off: 100µA
- (c) Power supply to output signals
The +24V power supply on the robot side can be used if the total current level, including the current of the welding interface, is 0.7A or less.
- (d) Driver for output signals
In the driver device, the current of each output signal is monitored, and when an overcurrent is detected, the relevant output is turned off. After an output has been turned off by overcurrent, the overcurrent state is released because the output is off, so the output on state is restored. Therefore, in the ground fault or overcurrent state, the output is turned on and off repeatedly. Such a condition is found also when a load with a high surge current is connected.
The driver device also includes an overheating detection circuit, which turns off all outputs of the device when the internal temperature of the device has increased as a result of a continued overcurrent state due to a ground fault of an output and so on. The outputs are held off, but their normal states can be restored by turning the power to the controller on and off after the internal temperature of the device has lowered.
- (e) Note on use
When adding a relay, solenoid, or the like directly to the circuit, connect a diode for counter electromotive voltage protection in parallel to the load.
When using a load, such as a lamp, that generates surge current when it is turned on, install a protection resistor.

- (f) Applicable signals
RO1 to RO8
- (2) Input signal in peripheral device interface
The input signals are the same as those of other I/O boards. (Refer to Subsection 4.5.1 in CONNECTIONS.)
- (a) Applicable signals
RI1 to RI8, XHBK, XPPABN

4.6.3 I/O Signal Specifications for ARC-Welding Interface (A-cabinet/Process I/O Board MB)

- (1) Specification for arc welding machine interface digital output signals
- (a) Example of connection

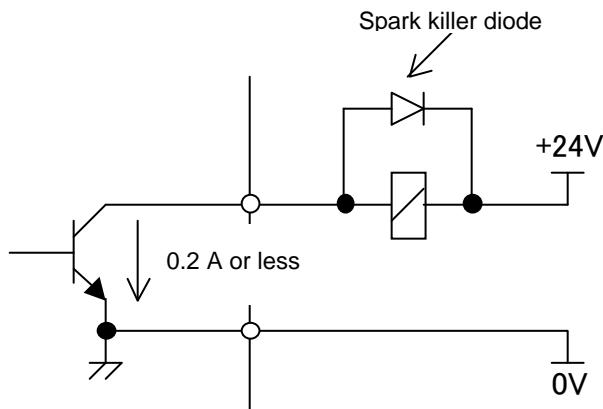

- (b) Electrical specifications


Rated voltage:	24VDC
Maximum applicable voltage:	30VDC
Maximum load current:	200mA (including momentary level)
Transistor type:	Open-collector NPN
Saturation voltage when the circuit is on:	Approximately 1.0V
- (c) Spark killer diode

Rated peak-to-peak reverse withstand voltage:	100V or higher
Rated effective forward current:	1A or more
- (d) Caution for use

The arc welding machine interface can use the +24V power supply of the robot unless the sum of its sink current and that of the EE interface exceeds 0.7A. When using a relay or solenoid directly as a load, connect the load and a back electromotive force voltage prevention diode in parallel.

When using a load, such as a lamp, that generates surge current when it is turned on, install a protection resistor.
- (e) Applicable signals
Arc welding machine interface output signals
[WO1, 2,4,5]

- (2) Specification for arc welding machine interface digital input signals
 (a) Example of connection

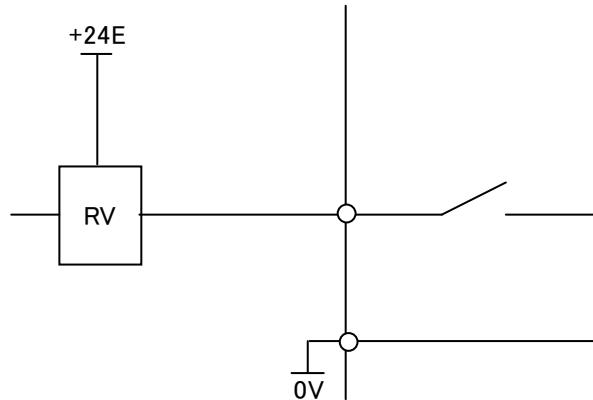


- (b) Electrical specifications of the receiver

Type:	Grounded voltage receiver
Rated input voltage:	Contact close +20V to +28V Contact open 0V to +4V
Maximum applied input voltage:	+28VDC
Input impedance:	3.0k Ω (approx.)
Response time:	5ms to 20ms

- (c) Specifications of the peripheral device contact

Voltage and Current:	DC24V, 0.1A (Use a contact which minimum load is 5mA less.)
Input signal width:	200ms or more (on/off)
Chattering time:	5ms or less
Closed circuit resistance:	100Ω or less
Opened circuit resistance:	100k Ω or more

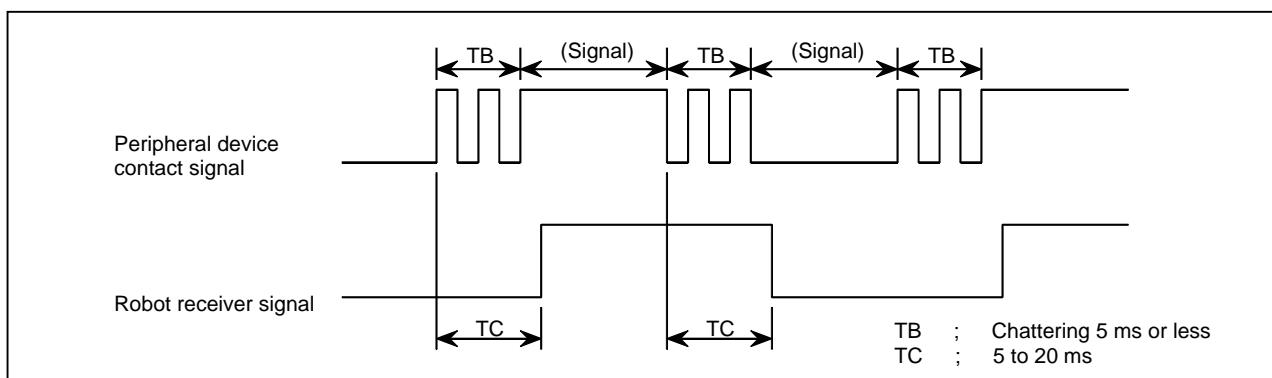

- (d) Note on use


Apply the +24 V power at the robot to the receiver.

However, the above signal specifications must be satisfied at the robot receiver.

- (e) Applicable signals

Arc welding machine interface input signals
[WI2~6]


- (3) Specification for arc welding machine interface analog output signals (welding voltage and wire feed speed specification signals)
- (a) Example of connection

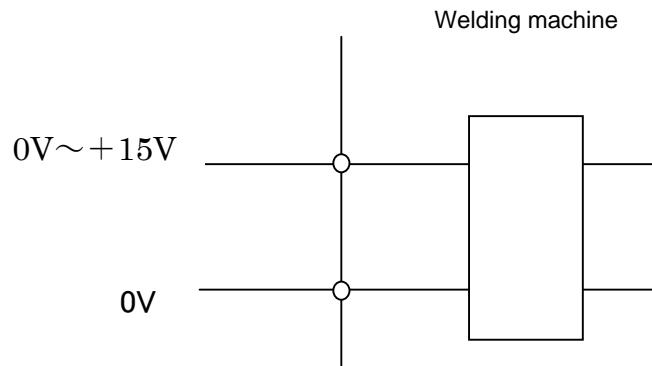

- (b) Caution for use
- Input impedance: $3.3k\Omega$ or higher
Install a high-frequency filter.

(Wire deposit detection: WDI+ and WDI-)

- (a) Example of connection

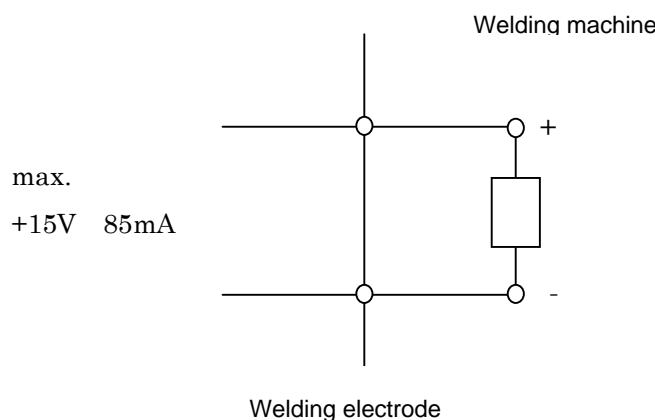

(Wire deposition detection: WDI+, WDI-)


- (b) Caution for use
- The resistance between the + and - terminals of the welding machine must be 100Ω or higher.
The TIG welding deposition detection circuit must be isolated from the welding circuit (high frequency).
This circuit can withstand up to 80 V.

4.7 SPECIFICATIONS OF THE CABLES USED FOR PERIPHERAL DEVICES AND WELDERS


If the customer manufactures cables, make sure they conform to the FANUC standard cables described in this section.

(See the description in "Peripheral Device Interface" in this manual for the specifications of the FANUC standard cables.)


4.7.1 Peripheral Device Interface A1 Cable (CRMA15: Tyco Electronics AMP, 40 pins)

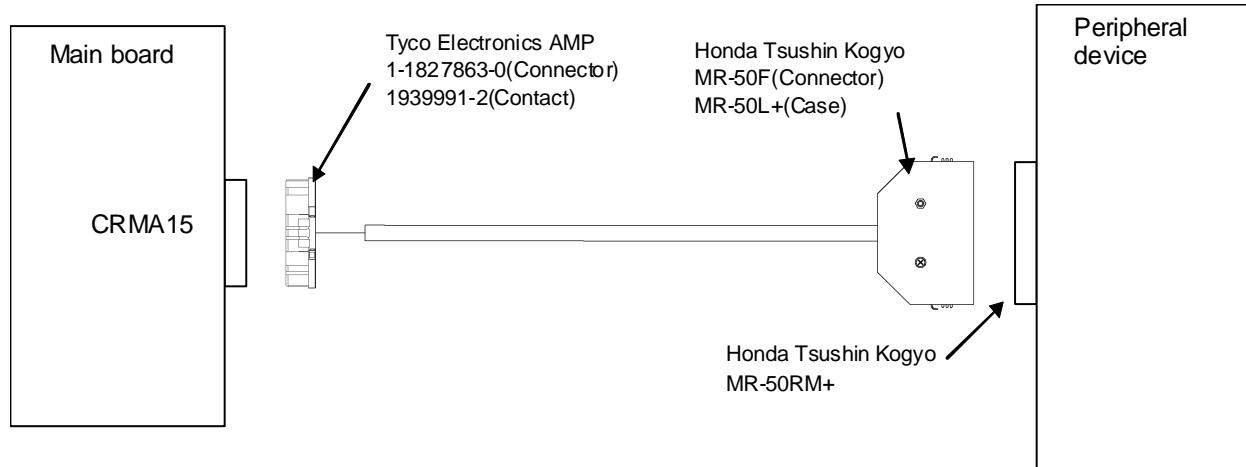


4.7.2 Peripheral Device Interface A2 Cable (CRMA16: Tyco Electronics AMP, 40 pins)

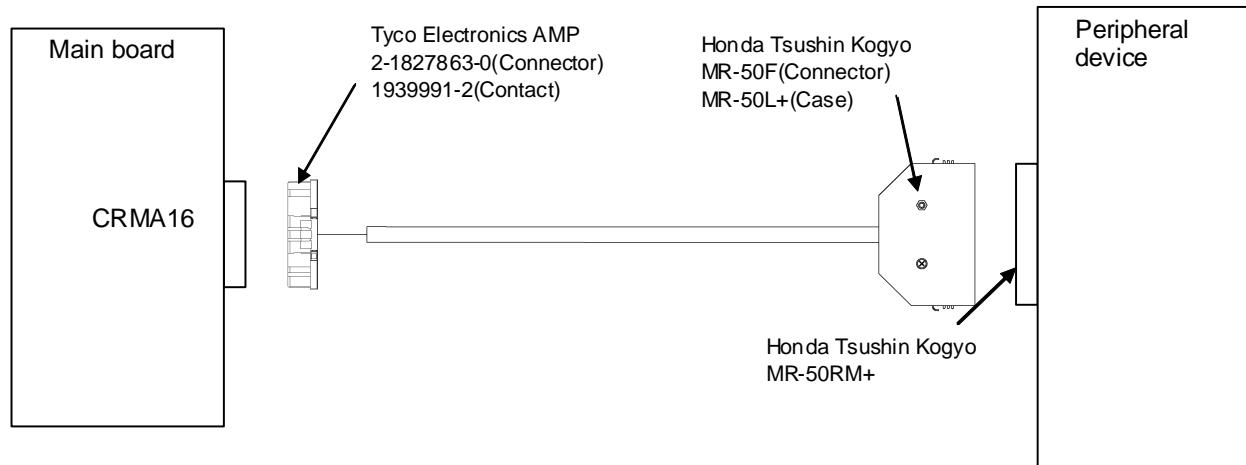

4.7.3 Peripheral Device Interface B1 and B2 Cables (CRMA52; Tyco Electronics AMP, 30 pin)

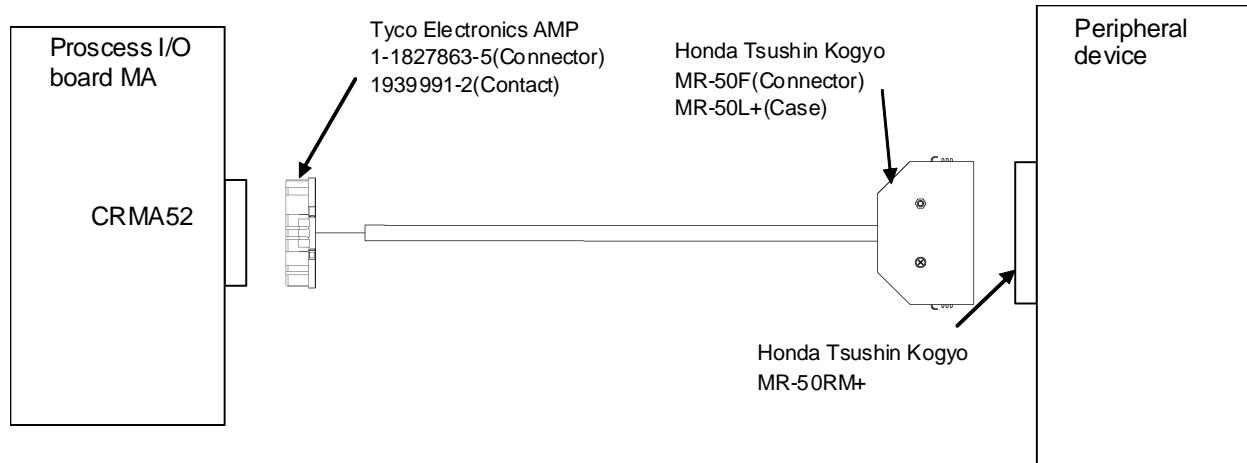


4.7.4 ARC Weld Connection Cables (CRW11; Tyco Electronics AMP, 20 pin)

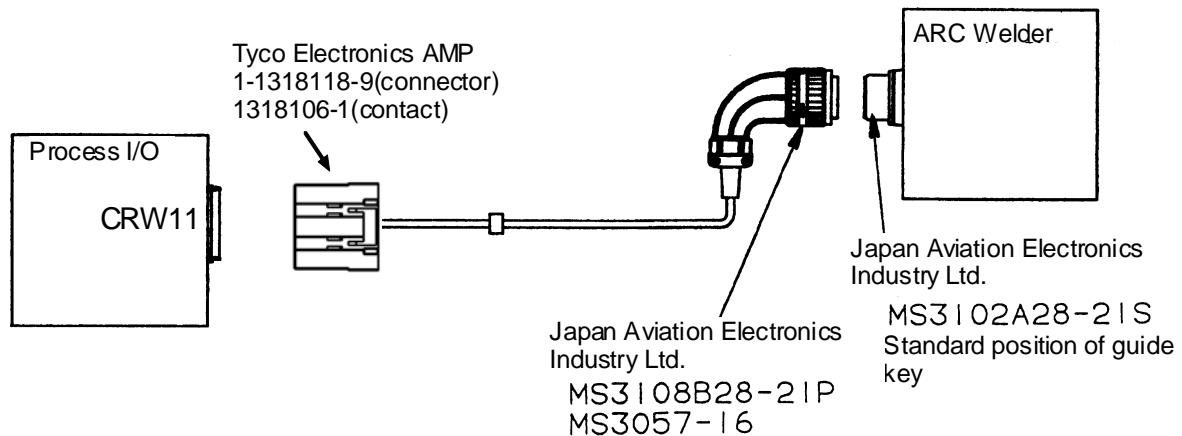

4.8 CABLE CONNECTION FOR THE PERIPHERAL DEVICES, END EFFECTORS, AND ARC WELDERS

4.8.1 Peripheral Device Connection Cable

Fig.4.8.1 shows the connection of the peripheral device cable in the cabinet.

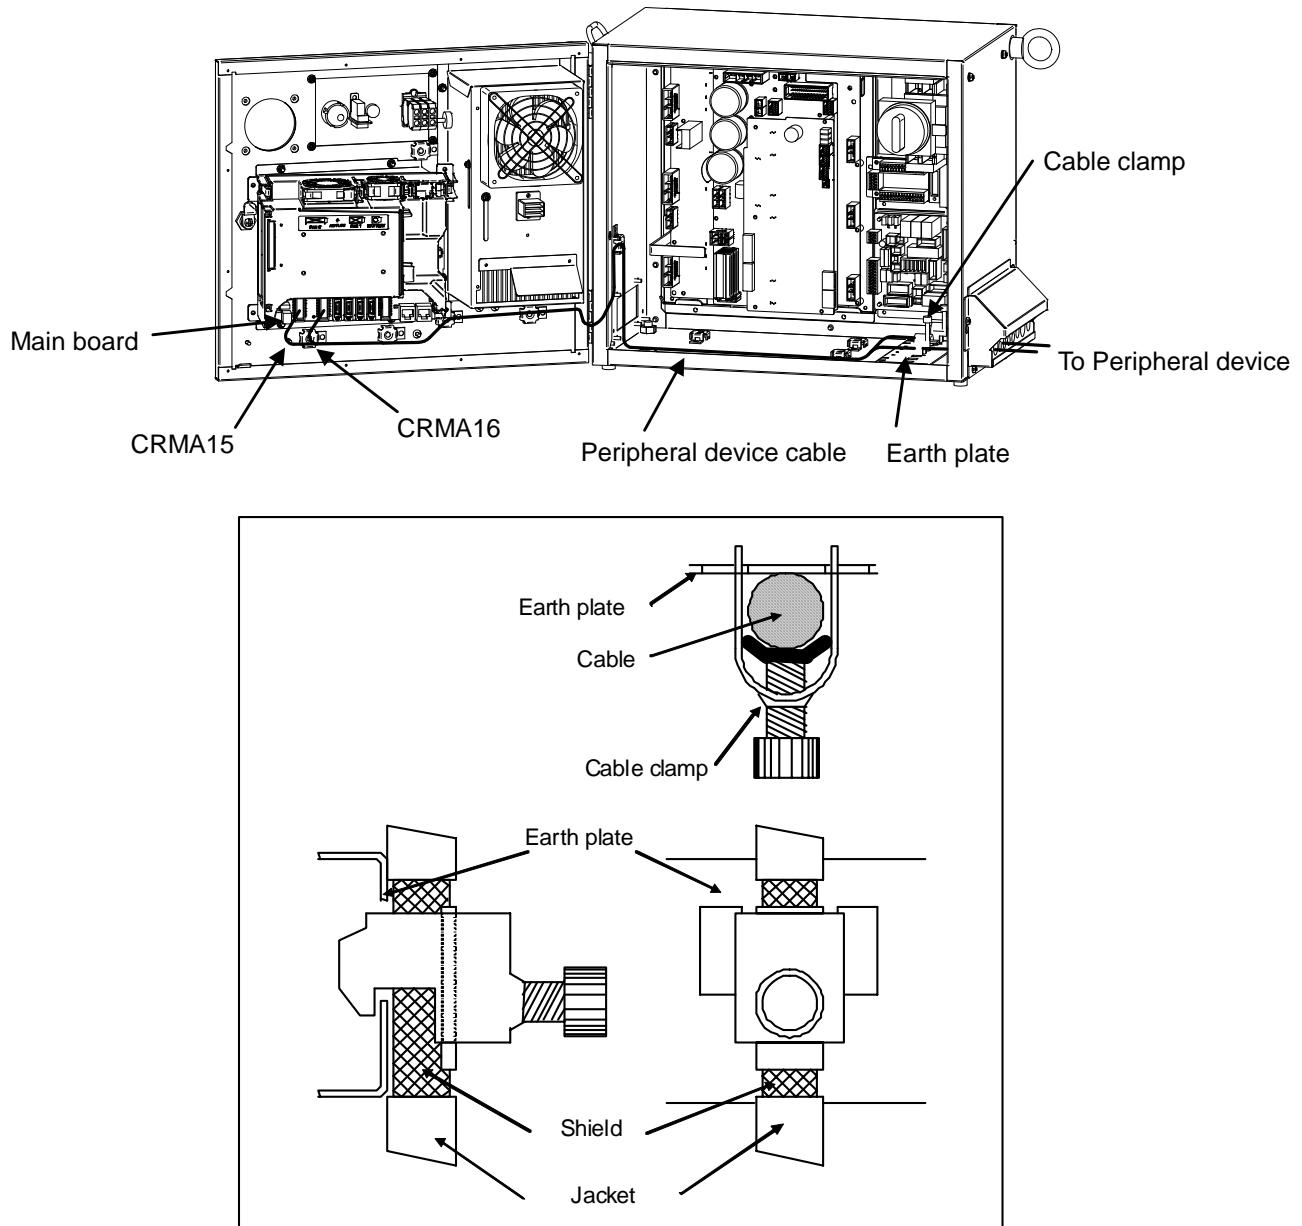
**NOTE**

For protection against the noise, cut part of the jacket of the connection cable to expose the shield, and fasten this part to the earth plate with the cable clamp.

Fig.4.8.1 Peripheral Device Cable Connection

4.8.2 Peripheral Device Cable Connector

- (1) The connector for peripheral device cables (Robot controller side).

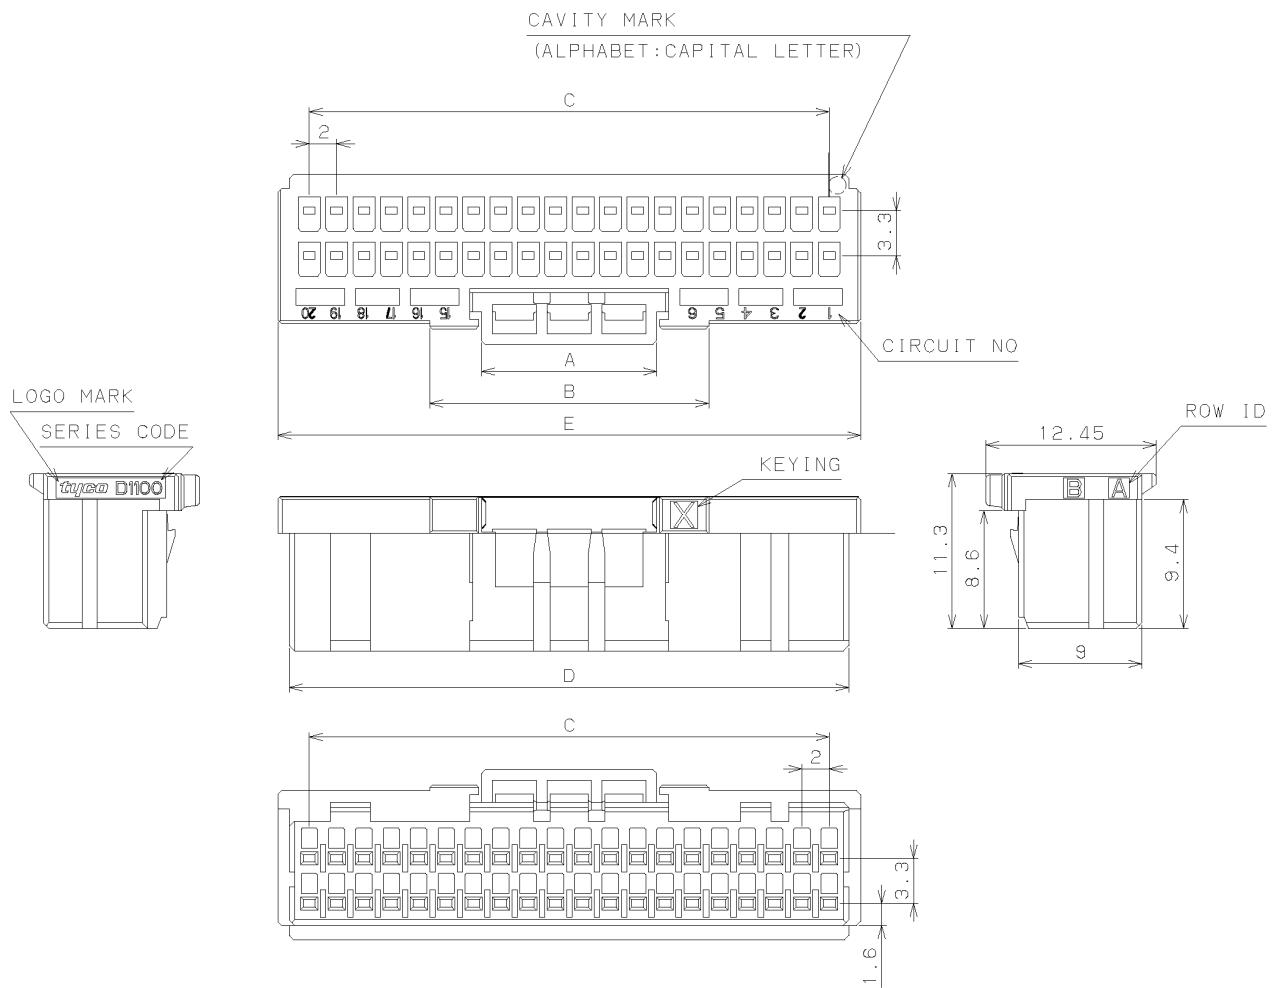


Connector specifications	Applicable interface	Dimensions					Remark
		A	B	C	D	E	
1-1827863-0 (Connector)	CRMA15						Tyco Electronics AMP 40 pins (X-key)
2-1827863-0 (Connector)	CRMA16	12.8	20.4	38.0	40.9	42.6	Tyco Electronics AMP 40 pins (Y-key)
1939991-2 (Contact)	CRMA15 CRMA16						Tyco Electronics AMP

Maintenance tool

Hand tool (for crimping contact) 2119141-1:A05B-2550-K064
Extraction tool 1891526-1:A05B-2550-K061

Fig.4.8.2 (a) Peripheral device cable connector

(2) The connector for peripheral device cables (Peripheral device side).

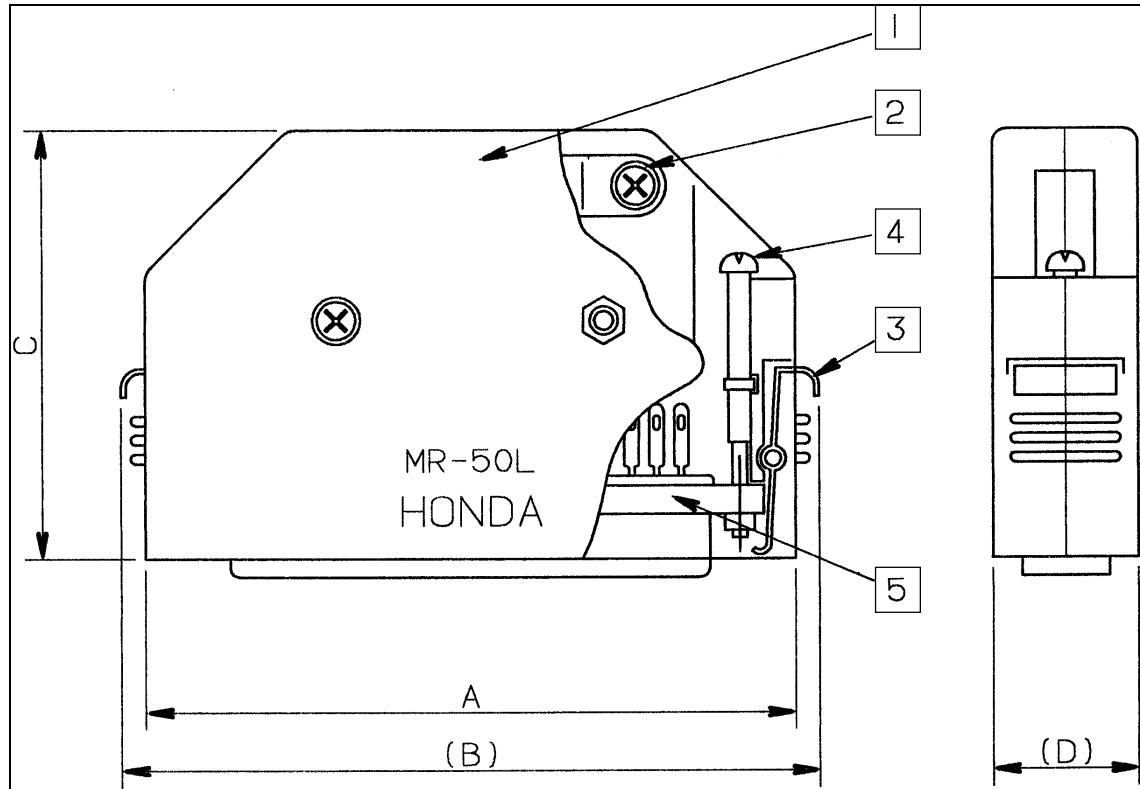


Connector specifications	Applicable interface	Dimensions				Remark
		A	(B)	C	(D)	
MR-50F(Connector) MR-50L+(Case)	Peripheral Device	67.9	73.5	44.8	18	Honda Tsushin Kogyo, 50 pins (F) Solder type

Symbol	Name
1	Connector cover
2	Cable clamp screw
3	Connector clamp spring
4	Connector clamp screw
5	Connector

Fig.4.8.2 (b) Peripheral device cable connector

(3) Peripheral device connector

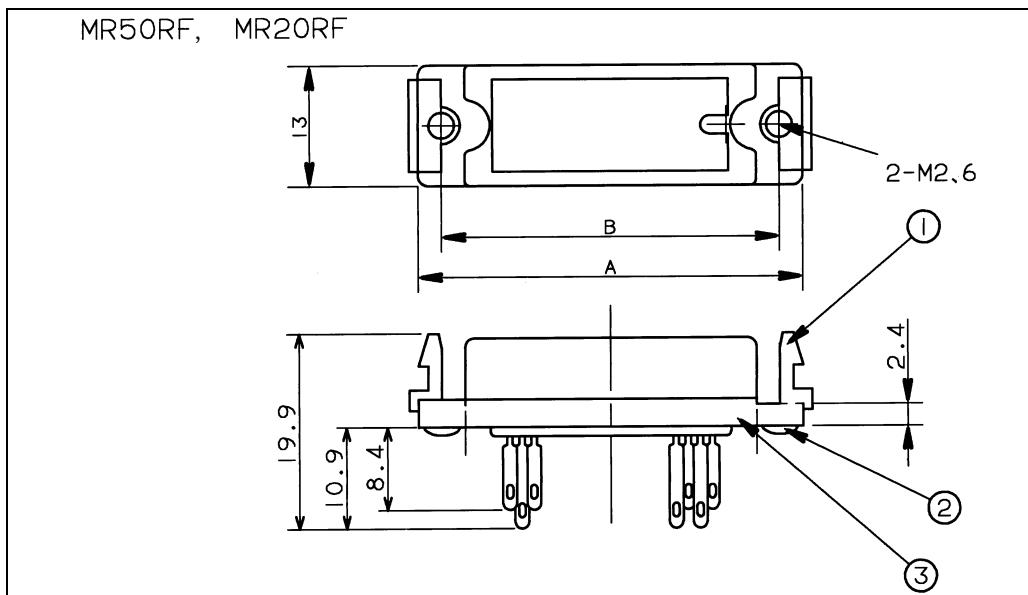

Connector specifications	Applicable device	Dimensions		Remark
		A	B	
MR-50RM+	Peripheral Device	61.4	56.4	Honda Tsushin Kogyo, 50 pins (F) Solder type

Symbol	Name
(1)	Connector clamp screw
(2)	Screw M2.6 x 8
(3)	Connector

Fig.4.8.2 (c) Peripheral device connector

4.8.3 Recommended Cables

(1) Peripheral device connection cable

Connect a peripheral device using a completely shielded, heavily protected cable conforming to the specifications in Table 4.8.3 (a).

Allow an extra 50 cm for routing the cable in the controller.

The maximum cable length is 30 m.

Table 4.8.3 (a) Recommended Cable (for Peripheral Device Connection)

Number of wires	Wire specifications (FANUC specifications)	Conductor		Sheath thickness (mm)	Effective outside diameter (mm)	Electrical characteristics	
		Diameter (mm)	Configuration			Conductor resistance (Ω/km)	Allowable current (A)
50	A66L-0001-0042	φ1.05	7/0.18 AWG24	1.5	φ12.5	106	1.6A
20	A66L-0001-0041	φ1.05	7/0.18 AWG24	1.5	φ10.5	106	1.6A

(2) End effector connection cable

Connect an end effector using a heavily protected cable with a movable wire conforming to the specifications in Table 4.8.3 (b).

The cable length is determined so that the cable will not interfere with the end effector and the wrist can move through its full stroke.

Table 4.8.3 (b) Recommended Cable (for End Effector Connection)

Number of wires	Wire specifications (FANUC specifications)	Conductor		Sheath thicknes s (mm)	Effective outside diameter (mm)	Electrical characteristics	
		Diameter (mm)	Configuration			Conductor resistance (Ω/km)	Allowable current (A)
6	A66L-0001-0143	φ1.1	40/0.08 AWG24	1.0	φ5.3	91	3.7
20	A66L-0001-0144	φ1.1	40/0.08 AWG24	1.0	φ8.6	91	2.3
24	A66L-0001-0459	φ0.58	40/0.08 AWG24	1.0	φ8.3	93	2.3



NOTE


For protection against the noise, cut part of the jacket of the connection cable to expose the shield, and fasten this part to the earth plate with the cable clamp.

4.9 CONNECTION OF HDI


4.9.1 Connecting HDI

The HDI signals are used in combination with special application software. The HDI signals cannot be used as general-purpose DIs.

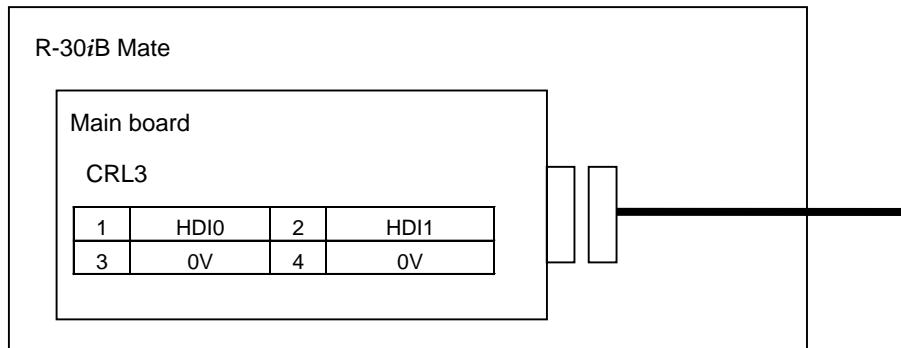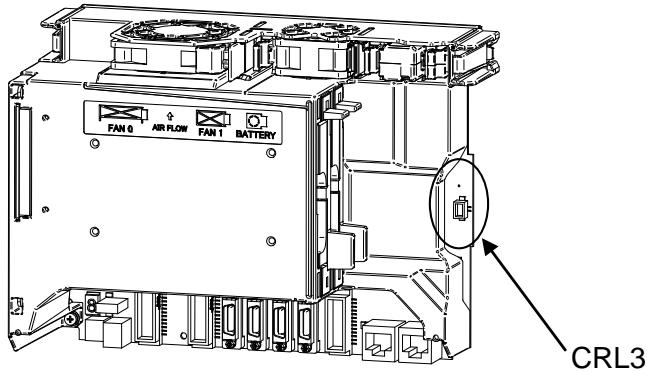

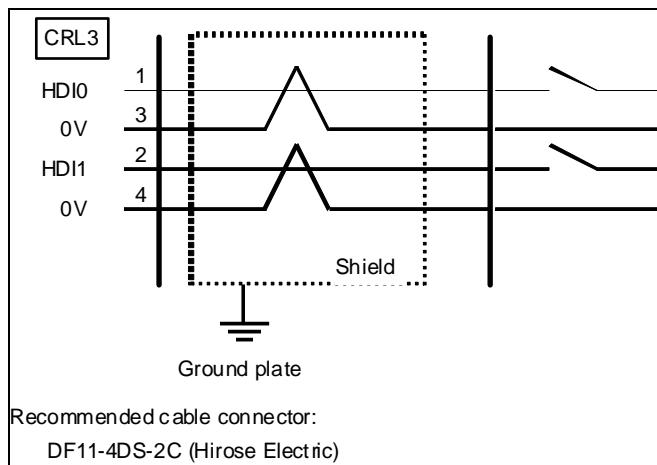Cable connections**NOTE**

For protection against the noise, cut part of the jacket of the connection cable to expose the shield, and fasten this part to the earth plate with the cable clamp.

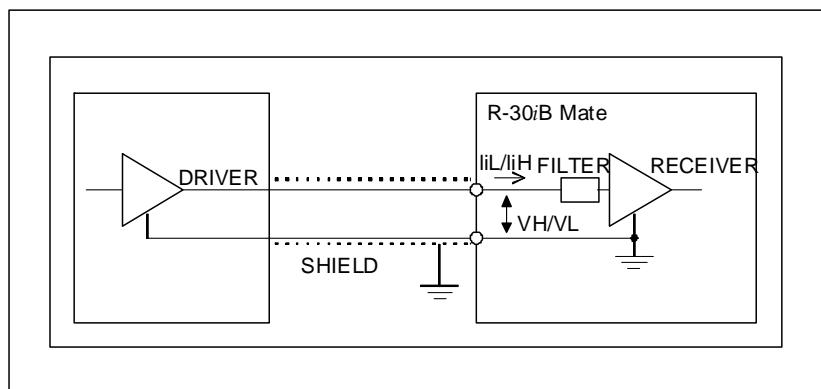4.9.2 Input Signal Rules for the High-speed Skip (HDI)**Circuit configuration****Absolute maximum rating**

Input voltage range Vin: -3.6 to +10 V

Input characteristics

Unit	Symbol	Specification	Unit	Remark
High level input voltage	VH	3.6 to 11.6	V	
Low level input voltage	VL	0 to 1.0	V	
High level input current	iil	2 (max)	mA	Vin=5 V
		11 (max)	mA	Vin = 10 V
Low level input current	liL	-8.0 (max)	mA	Vin = 0 V
Input signal pulse duration		20 (min)	μ s	
Input signal delay or variations		20 (max)	μ s	


NOTE

- 1 The plus (+) sign of liH/liL represents the direction of flow into the receiver. The minus (-) sign of liH/liL represents the direction of flow out of the receiver.
- 2 The high-speed skip signal is assumed to be 1 when the input voltage is at the low level and 0 when it is at the high level.

4.10 CONNECTING THE COMMUNICATION UNIT

4.10.1 RS-232-C Interface

4.10.1.1 Interface

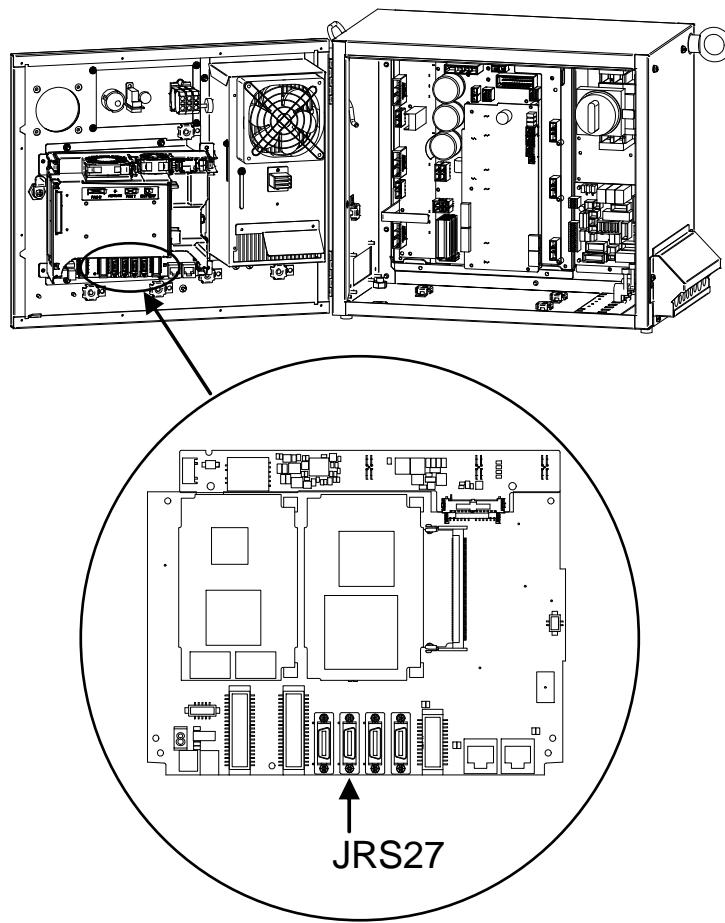

JRS27

1	RD (RXDA)	11	SD (TXDA)	Honda Tsushin Kogyo CONNECTOR: PCR-E20FS COVER: PCR-V20LA, or compatible connector
2	SG (0V)	12	SG (0V)	
3	DR (DSRA)	13	ER (DTRA)	
4	SG (0V)	14	SG (0V)	
5	CS (CTSA)	15	RS (RTSA)	
6	SG (0V)	16	SG (0V)	
7		17		
8		18		
9		19	+24V (24V-3)	
10	+24V (24V-3)	20		

NOTE

- 1 +24 V can be used as the power supply for FANUC RS-232-C equipment.
- 2 Do not connect anything to those pins for which signal names are not indicated.

4.10.1.2 RS-232-C interface signals

Generally signals as follows are used in RS-232-C interface.


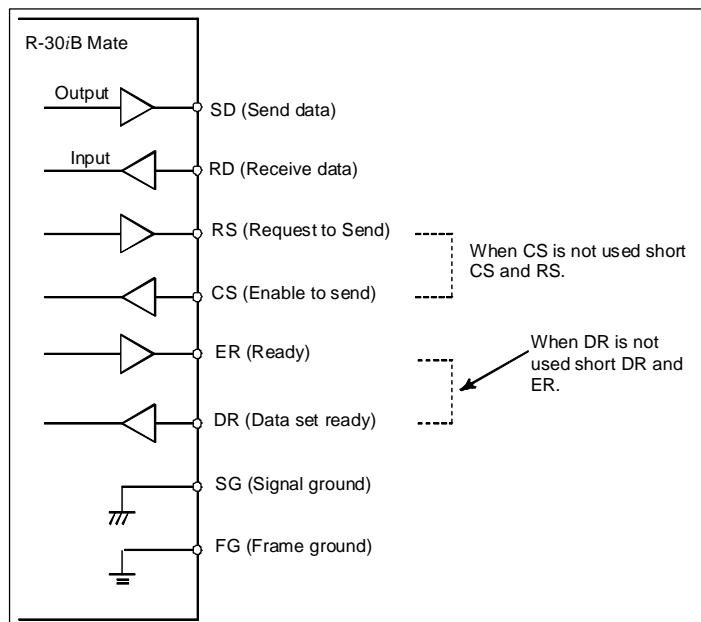



Fig.4.10.1.2 RS-232-C interface

4.10.1.3 Connection between RS-232-C interface and I/O device


The figure below shows a connection with the handshaking of the ER/DR, RS/CS signals.

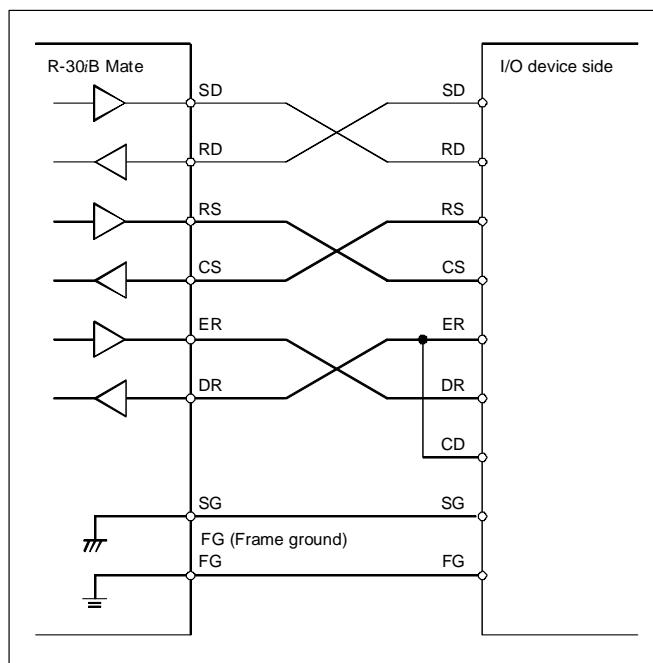

- The figure below shows a connection without the handshaking of the RS/CS, ER/DR signals.

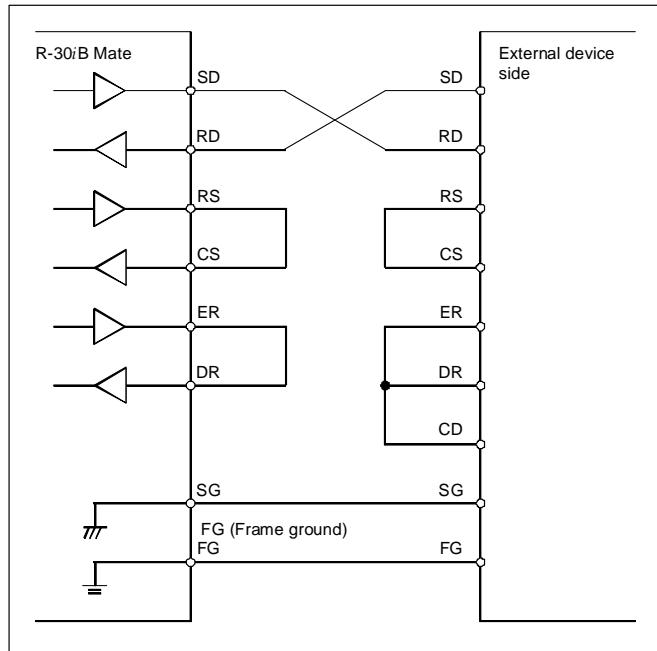

Cable connection

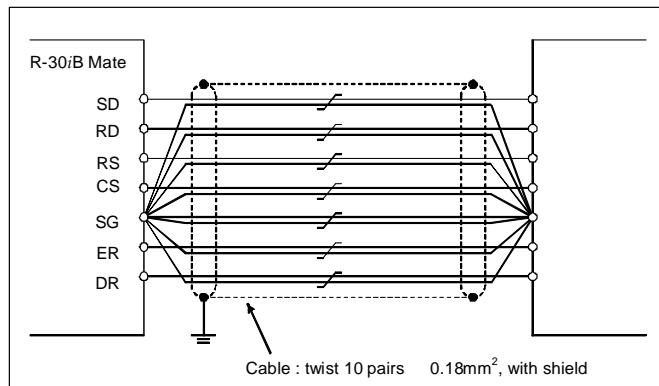

Pair each signal with SG.

NOTE

For protection against the noise, cut part of the jacket of the connection cable to expose the shield, and fasten this part to the earth plate with the cable clamp.

4.10.2 Ethernet Interface

This section describes information relating to the physical Ethernet connection.

⚠ CAUTION


- 1 Before connecting or disconnecting the Ethernet cable, make sure that the power to the robot controller is turned off.
- 2 Please inquire of each manufacturer (of hub, transceiver, cable etc.) about the construction of network or the condition of using the equipment. When configuring your network, you must take other sources of electrical noise into consideration to prevent your network from being influenced by electrical noise. Make sure that network wiring is sufficiently separated from power lines and other sources of electrical noise such as motors, and ground each of the devices as necessary. In addition, high and insufficient ground impedance may cause interference during communications. After installing the robot, conduct a communications test before you actually start operating the robot. We cannot ensure operation that is influenced by network trouble caused by a device other than the robot controller.

4.10.2.1 Connection to Ethernet


The robot controller is provided with a 100BASE-TX interface.

Prepare a hub for connecting the controller to the Ethernet trunk. The following shows an example of a general connection.

Some devices (hub, transceiver, etc.) that are needed for building a network do not come in a dust-proof construction. Using such devices in an atmosphere where they are subjected to dust or oil mist will interfere with communications or damage the robot controller. Be sure to install such devices in a dust-proof cabinet.

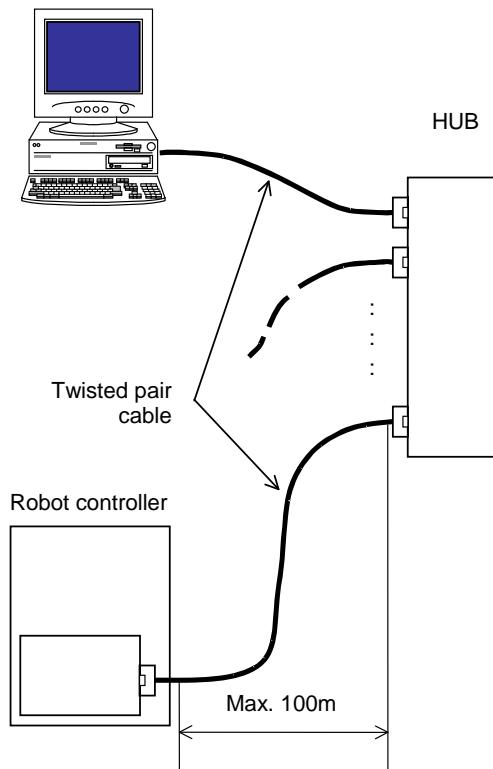

4.10.2.2 Routing of the Ethernet cable

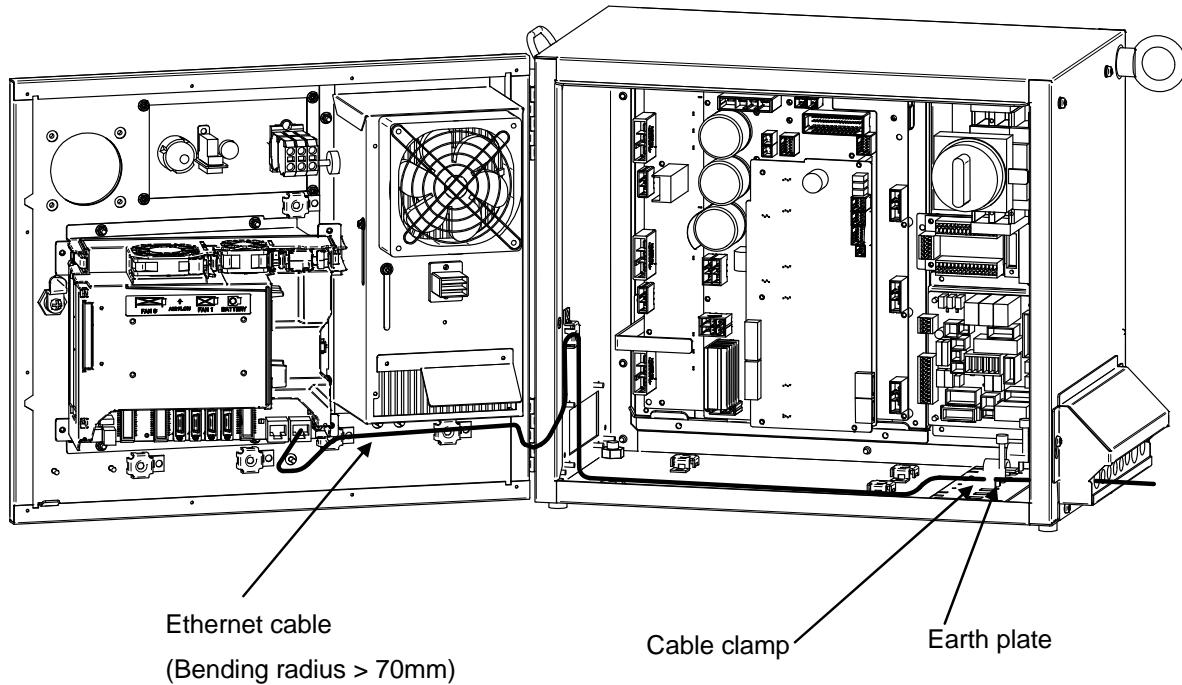

The Ethernet cable must be fastened by a cable clamp to prevent tension being applied to the modular connector (RJ-45) that connects the cable to the controller even if the Ethernet cable is pulled directly. This clamp is also used to ground the cable shield.

4.10.2.3 100BASE-TX connector (CD38A, CD38B) pin assignments


CD38A,CD38B

Pin No.	Signal name	Description
1	TX+	Send +
2	TX-	Send -
3	RX+	Receive +
4		Not used
5		Not used
6	RX-	Receive -
7		Not used
8		Not used


4.10.2.4 Twisted-pair cable specification

Cable Connection

The cable used for connection between the 100BASE-TX interface, CD38, of the controller and the hub is connected as follows:

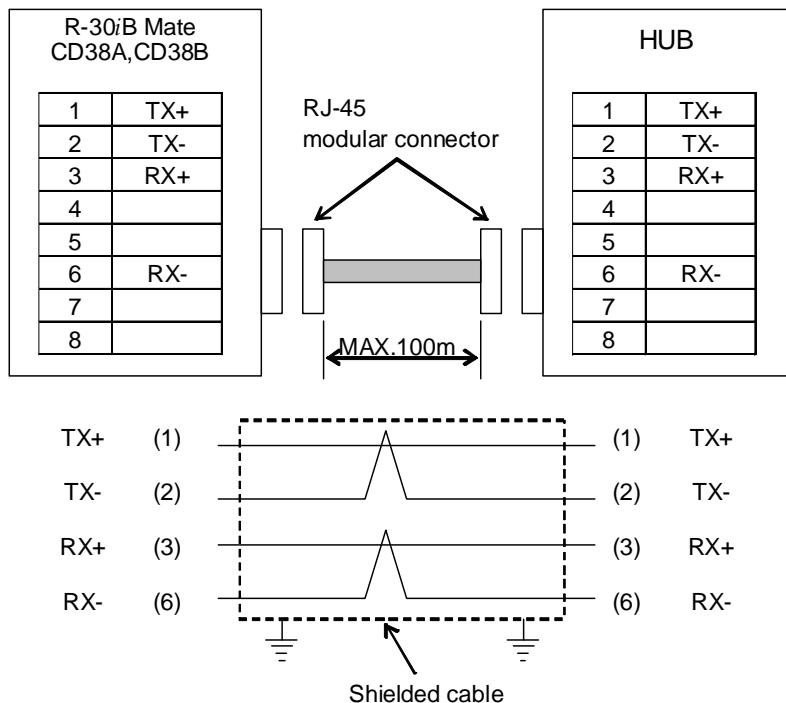

- Keep the total cable length within 100 m.
Do not extend the cable more than is necessary.
- The figure above shows the cable connection when cables are crossed in the hub.
"X" is usually indicated at the port of the hub to signify that cables are crossed in the hub.

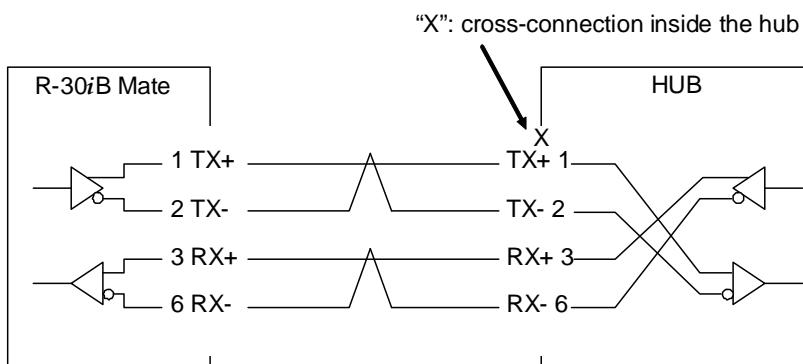

(1) Cable Materials



CAUTION

Unshielded cable (UTP cable) is commercially available as 100BASE-TX twisted-pair cable: You should, however, use shielded Category 5 twisted-pair cable (STP cable) to improve the resistance to electrical noise in an FA environment.

Recommended Cables (Non-flexible cable)

Manufacturer	Specification	Remarks
FURUKAWA ELECTRIC CO., LTD.	DTS5087C-4P	Twisted-pair cable
NISSEI ELECTRIC CO., LTD.	F-4PFWMF	Single-conductor cable

Inquiries

Manufacturer	Contact address	
FURUKAWA ELECTRIC CO., LTD. Sales Headquarters	2-6-1 Marunouchi, Chiyoda-ku. Tokyo 100-8322 TEL: 03-3286-3126 FAX: 03-3286-3979	
NISSEI ELECTRIC CO., LTD. Machida Branch	3F MU Bldg., 1-9-1 Minami-narise, Machida City, Tokyo 194-0045 TEL: 0427-29-2531 FAX: 0427-29-3375	
	Overseas Sales Office	IWATANI International Corporation Tokyo Head Office 21-8 Nishi-shinbashi 3-chome, Minato-ku, TOKYO, 105-8458, JAPAN TEL: 03-5405-5810 FAX: 03-5405-5666 Telex: 2524256 IWATYO J
Remarks		A finished cable with connectors at both ends can be offered.

NOTE

The recommended cables cannot be used for moving parts.

Recommended cable (Flexible cable)

Manufacturer	Specification	Remarks
Oki Electric Cable Co., Ltd.	AWG26 4P TPMC-C5-F (SB)	Dedicated to
Shinko Electric Industrial Co., Ltd.	FNC-118	FANUC

Inquiries

Manufacturer	Contact address
Oki Electric Cable Co., Ltd.	Nagano Sales Office TEL:0266-27-1597
Shinko Electric Industrial Co., Ltd.	Tokyo Sales Office TEL:03-3492-0073

Specification

- Electric characteristics:
Conforms to EIA/TIA 568A Category 3 and Category 5.
From the viewpoint of attenuation performance, ensure that the length to the hub is 50 m or less.
- Structure:
Group shielded (braided shield). A drain wire is available.
The conductor is an AWG26 annealed copper twisted wire, with a sheath thickness of 0.8 mm and an outer diameter of 6.7 mm ± 0.3 mm.
- Fire retardancy
UL1581 VW-1
- Oil resistance
Conforms to the FANUC internal standards (equivalent to the conventional oil-resistant electric cables).
- Flexing resistance:
1,000,000 times or more with a bending radius of 50 mm (U-shaped flex test)
- UL style No.
AWM 20276 (80°C/30V/VW-1)

NOTE

Be sure to use the connector TM21CP-88P (03) manufactured by HIROSE ELECTRIC CO., LTD. for this cable.

Cable assembly

Oki Electric Cable Co., Ltd. can also supply the cable assembly mentioned above.

Contact Oki Electric directly to determine the specifications (length, factory test, packing, and so forth) for purchase.

(2) Connector Specification

Use an 8-pin modular connector (RJ-45) with the twisted-pair cable for the Ethernet connection. The following connectors or equivalents must be used.

Non-Flex	Specification	Manufacturer	Remarks
Solid wire	5-569530-3	TE Connectivity	
Solid wire	MS8-RS2T-EMC	SK KOHKI CO., LTD.	Special tools required
Twisted-pair cable	5-569552-3	TE Connectivity	
Twisted-pair cable	TM11AP-88P	HIROSE ELECTRIC CO., LTD.	Special tools required

Flex	Specification	Manufacturer	Remarks
For cable AWG26 4P TPMC-C5-F (SB) or FNC-118	TM21CP-88P (03)	HIROSE ELECTRIC CO., LTD.	Note

NOTE

Information about TM21CP-88P (03):

Connector (standard product of the manufacturer)

Drawing number: A63L-0001-0823#P

Manufacturer: HIROSE ELECTRIC CO., LTD.

Manufacturer type number: TM21CP-88P (03)

Conforms to EIA/TIA 568A Category 3 and Category 5.

For assembly with a cable, contact HIROSE ELECTRIC CO., LTD. directly.

(From HIROSE ELECTRIC CO., LTD., "TM21CP-88P (03) Connection

Procedure Manual (Technical Specification No. ATAD-E2367)" is available as a technical document.)


4.10.2.5 Electrical noise countermeasures

Clamping and Shielding Cables

Clamp an Ethernet twisted pair cable according to the method described below, as with cables that need to be shielded. Clamping cables provides support and shielding and is extremely important to the safe operation of the system. Never overlook cable clamping.

Peel off part of the jacket as shown in the figure to expose the outer coating of the shield, and press this outer coating against the earth plate with the cable clamp.

The machine manufacturer must prepare the ground plate and install it as follows:

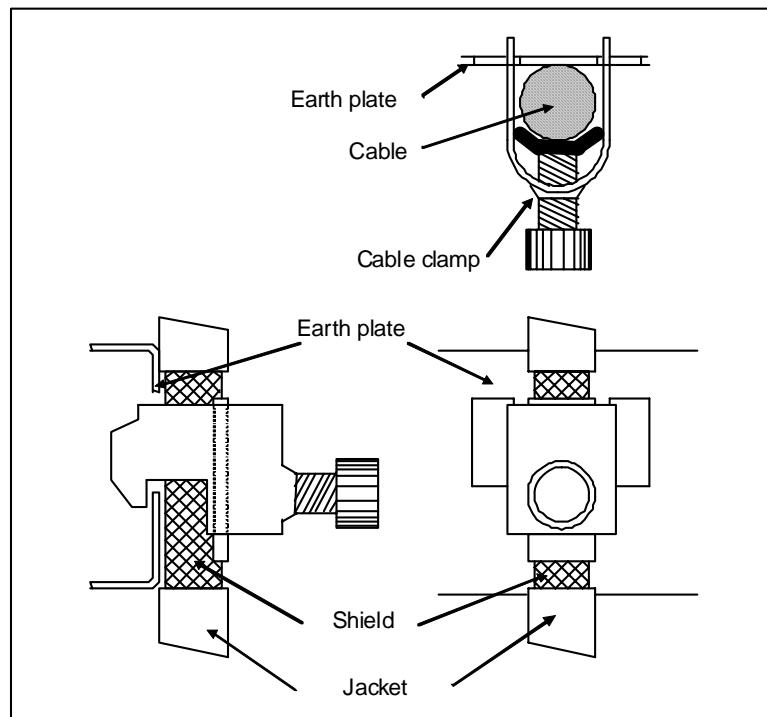**NOTE**


To ensure the safe operation of the system, clamp and shield the cables.

NOTE


- 1 To secure fast response, FL-net communication is not provided with a retransmission process at intervals of several seconds, unlike normal Ethernet communication. It is, therefore, necessary to provide more noise resistance than that provided by general Ethernet wiring work.
- 2 After the laying of cables, conduct satisfactory communication tests not only before system operation but after system operation from the viewpoint of noise prevention measures.

Grounding the Network

Even if the grounding condition on the machine side is satisfied, the communication line can pick up noise from the machine, depending on the machine installation condition and environment, thus resulting in a communication error. To protect against such noise, the machine should be separated and insulated from the Ethernet trunk cable and personal computer. Examples of connection are given below.

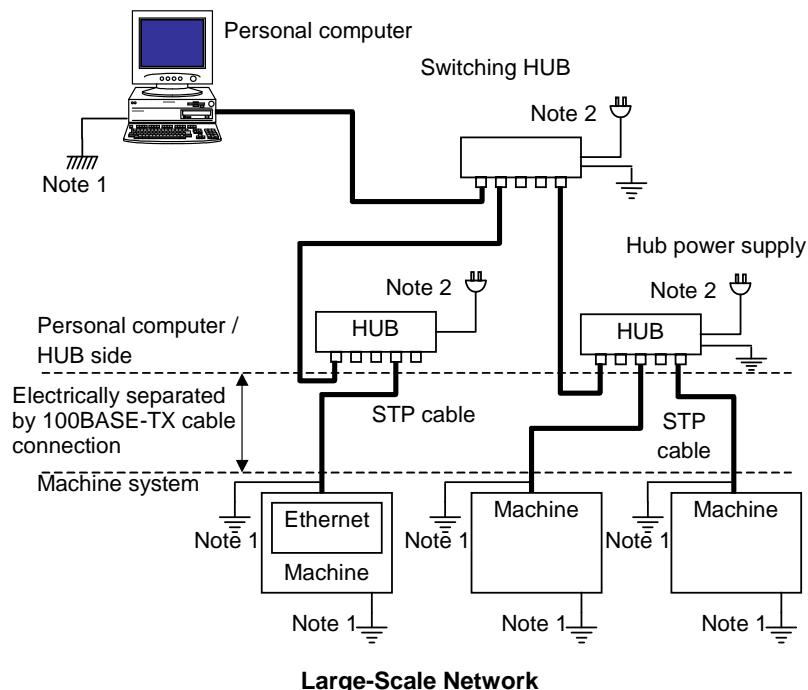


Large-Scale Network

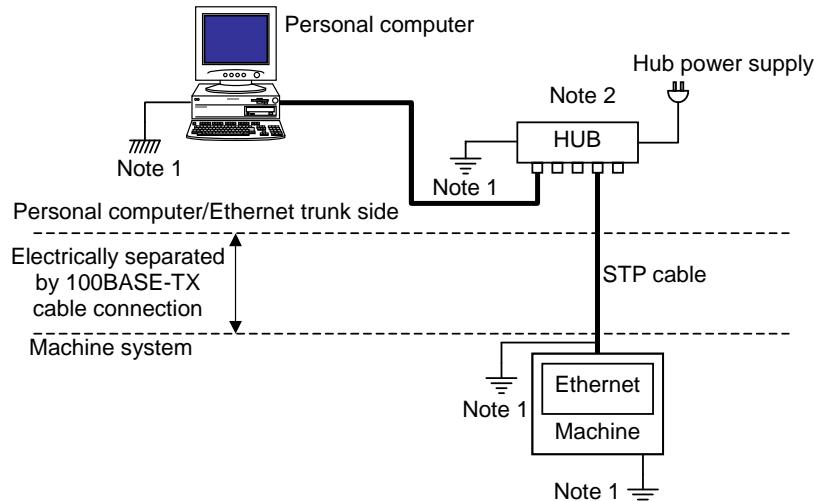

Small-Scale Network

NOTE

- 1 The ground between PC/HUB side and machine system side must be separated. If it is impossible to separate the ground because there is only one grounding point, connect the ground cable for each system to the grounding point independently. (See figure below.)
The resistance for grounding must be less than 100-ohm (Class D). The thickness of the ground cable is the same as the thickness of AC power cable or more. At least thickness of 5.5mm² is necessary.
- 2 Note that the number of allowable hub-to-hub connections depends on the type of hub.
- 3 There is possibility that noise makes the obstacle of communication even if the ground is separated using the 100BASE-TX. In the case of using the FAST Ethernet/FAST Data Server under the worst environment, please separate between the PC/Trunk line side and machine system side completely using the 100BASE-FX (Optical fiber media).

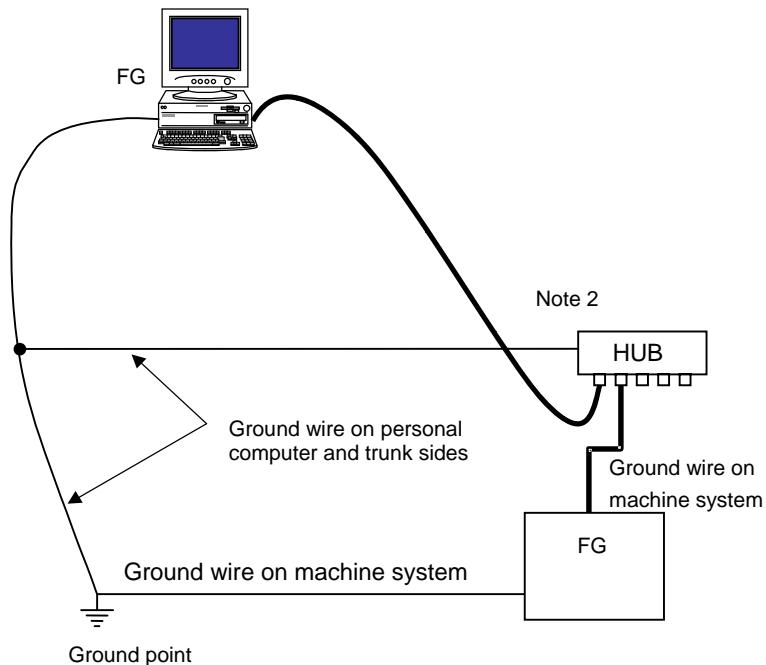**Wiring on a single ground point**

4.10.2.6 Check items at installation

The following table lists check items at installation.

Check item	Description	Check
Ethernet cable	Use cables which satisfies all the following conditions: 1) With shielding 2) Twisted-pair cable 3) Category 5	
	Length	The cable length shall be within 100 m (50 m for a movable cable recommended by FANUC).
	Connection	For a twisted-pair cable, the following pins shall be paired: 1) Pin No. 1 (TX+) – pin No. 2 (TX-) 2) Pin No. 3 (RX+) – pin No. 6 (RX-)
	Separation	The Ethernet cables shall be bound separately from the following cables or covered with an electromagnetic shield: 1) Group A: AC power lines, power lines for motors, and others 2) Group B: Current DC (24 VDC) and others
	Shielding	For a shielded cable, the part of which outer coating is peeled off and exposed shall be fixed to the ground plate with a clamp fixture.
	Clamping	The ground plate shall be located as nearest to the CNC as possible (to make the cable between the ground plate and CNC hard to be affected by noise).
	Connectors	Any cable connector shall not be pulled (to prevent poor contact of the connector).
	Wiring	No cable shall be laid under a heavy object.
	Bending radius	The bending radius shall be at least four times as long as the diameter of the cable.
	For movable part	For a movable part, a cable for a movable part shall be used.
HUB	Use conditions	The "cautions on use" of the hub shall be observed (A terminating resistor shall be mounted properly if required).
	Grounding	The hub shall be grounded.
	Cabinet	The hub shall be installed in an enclosed cabinet.
	Vibration	The hub shall be installed so that it is not affected by vibration.
	Bending radius	The bending radius shall be at least four times as long as the diameter of the cable.

5 TRANSPORTATION AND INSTALLATION

This chapter describes the transportation and installation for the controller.

5.1 TRANSPORTATION

The controller is transported by a crane. Attach a strap to eyebolts at the top of the controller.

Crane capacity: Minimum 150kg
Sling capacity: Minimum 150kg

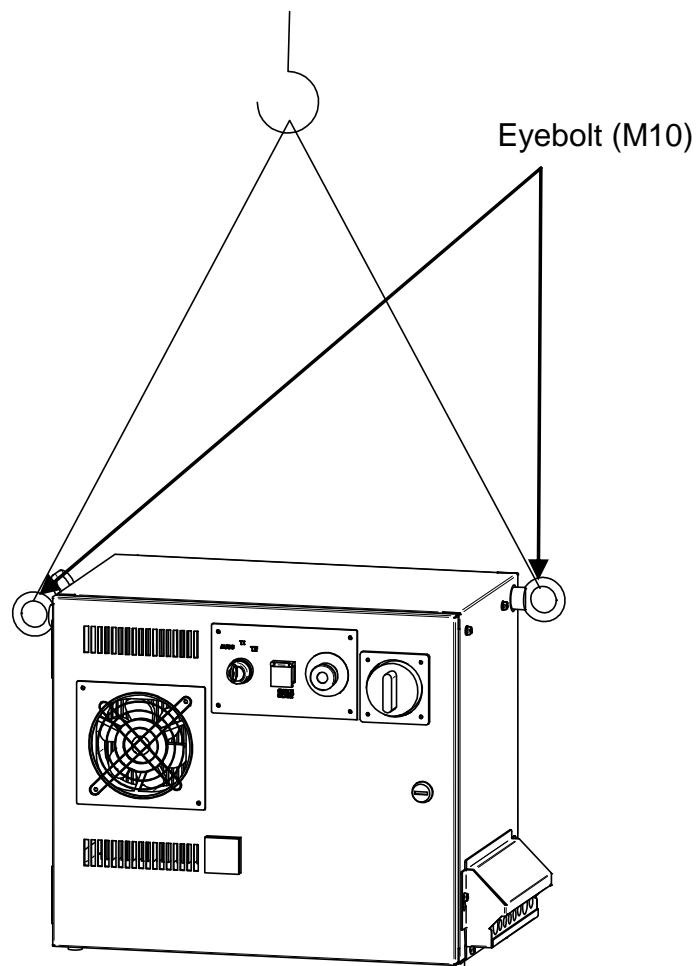


Fig.5.1 Transportation

5.2 INSTALLATION

5.2.1 Installation Method

Following is the installation method for cabinet.

When installing the controller, allow the space for maintenance shown in the following figure.

	Munsell	Color
Body	5GY3.5/0.5	Gray
Door	3.0GY8.2/0.9	White
Op. panel	N1.5	Black

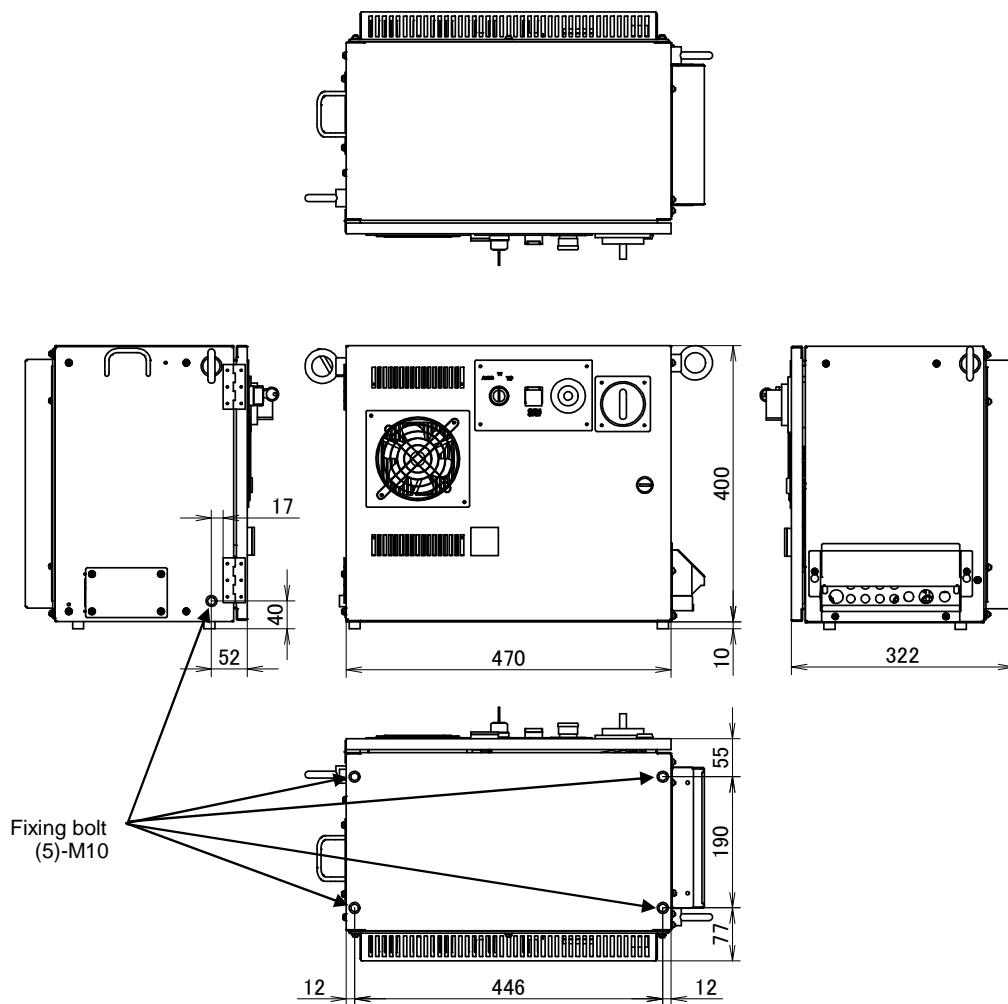


Fig.5.2.1(a) External dimension (Small size)

	Munsell	Color
Body	5GY3.5/0.5	Gray
Door	3.0GY8.2/0.9	White
Op. panel	N1.5	Black

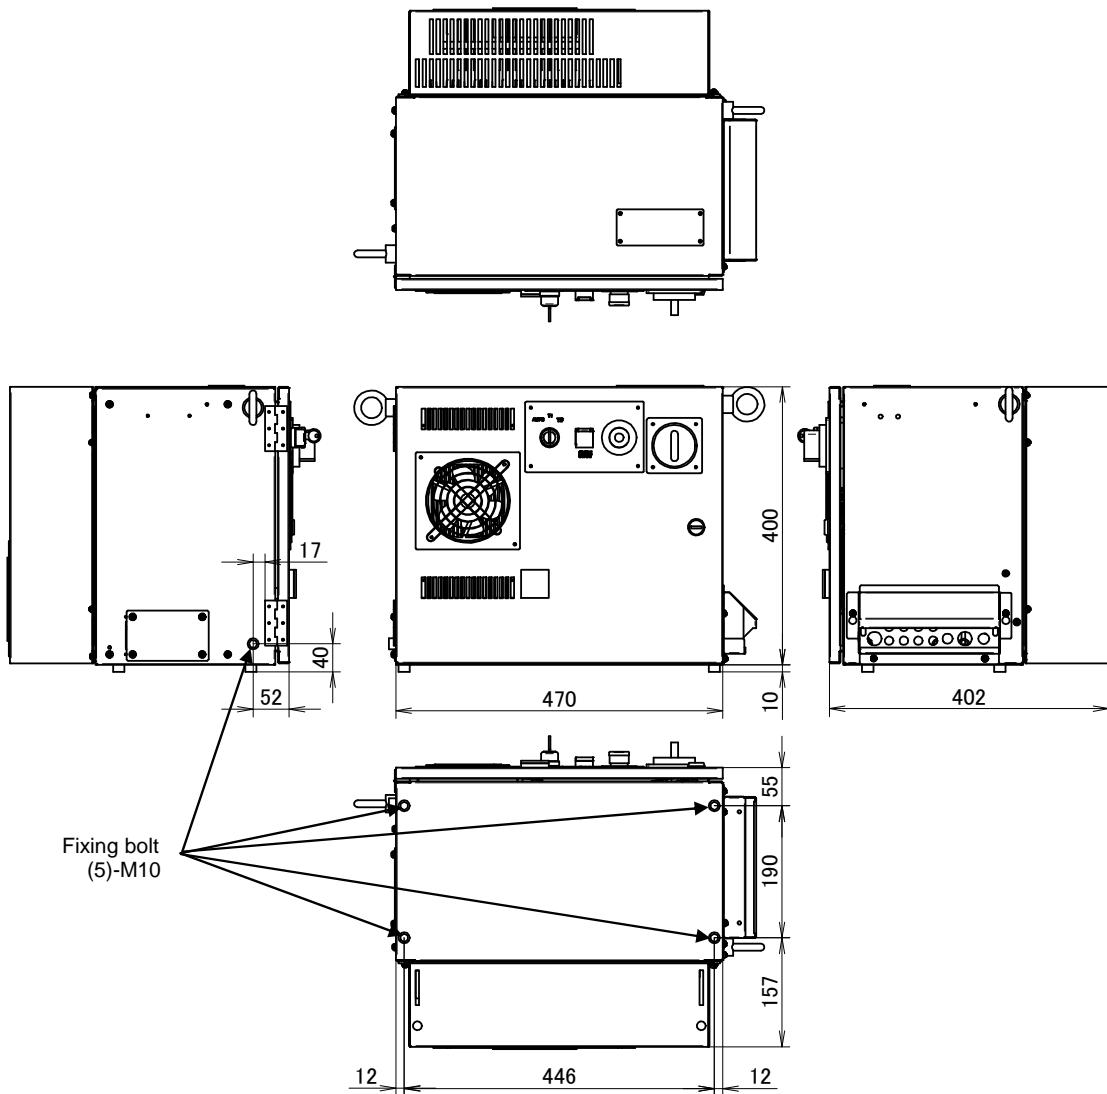


Fig.5.2.1(b) External dimension (Medium / Large size)

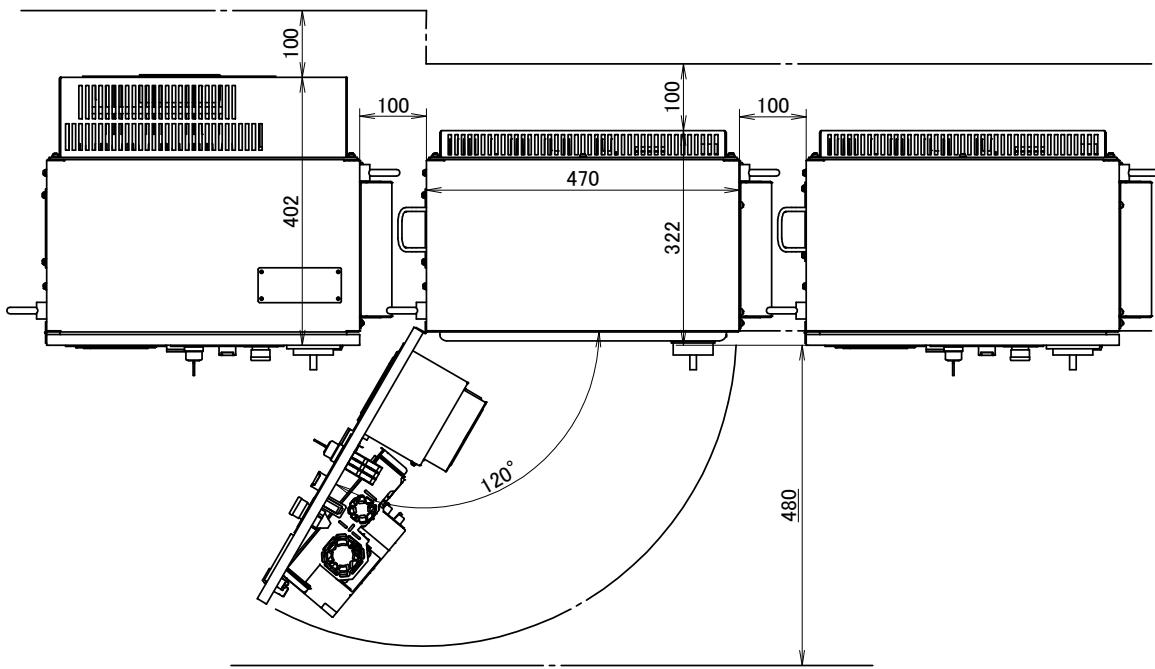


Fig.5.2.1 (c) Installation dimension

NOTE

Keep this area for maintenance and the radiation of heat.

5.2.2 Assemble at Installation


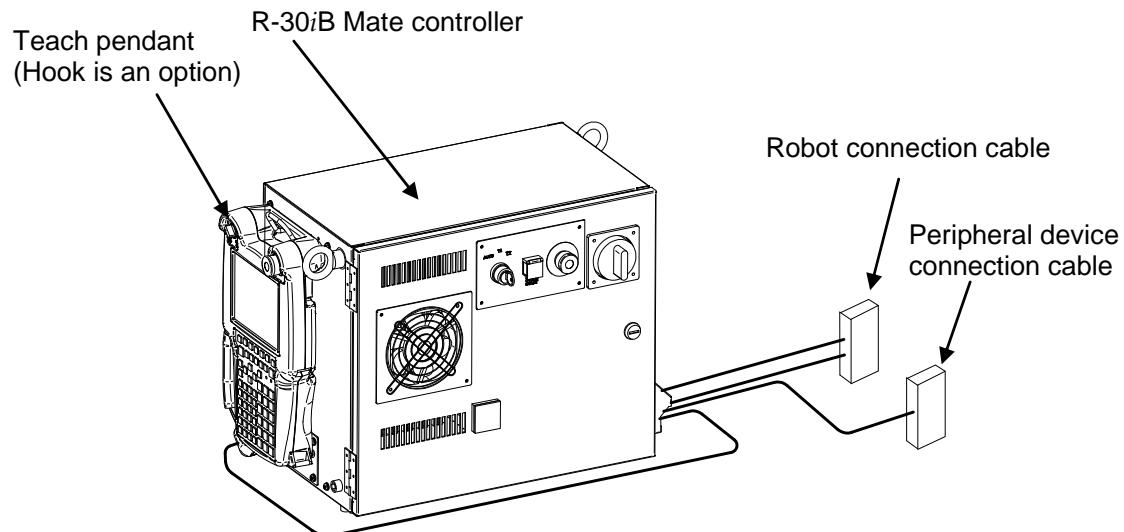


Fig.5.2.2 Assemble at installation

5.3 INSTALLATION OF TEACH PENDANT HOOK (Option)

Following is external dimension for Teach Pendant HOOK (Ordering specification: A05B-2650-K050).

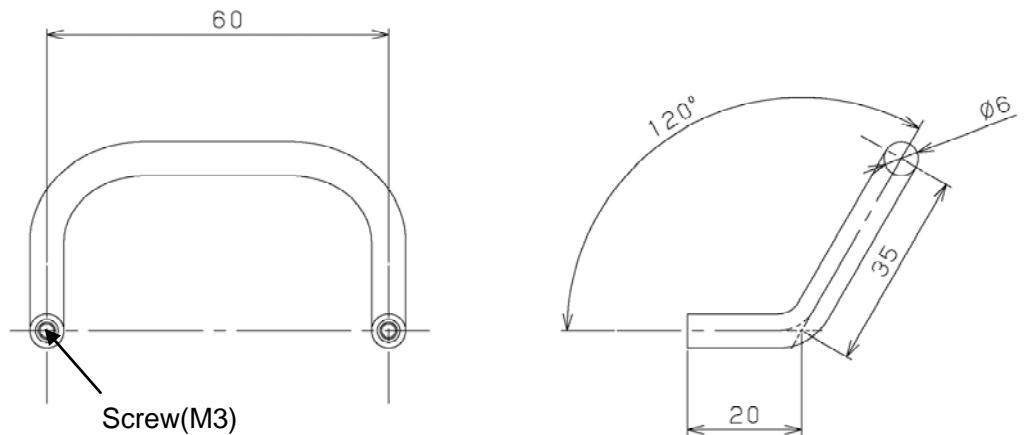

Mounting hole

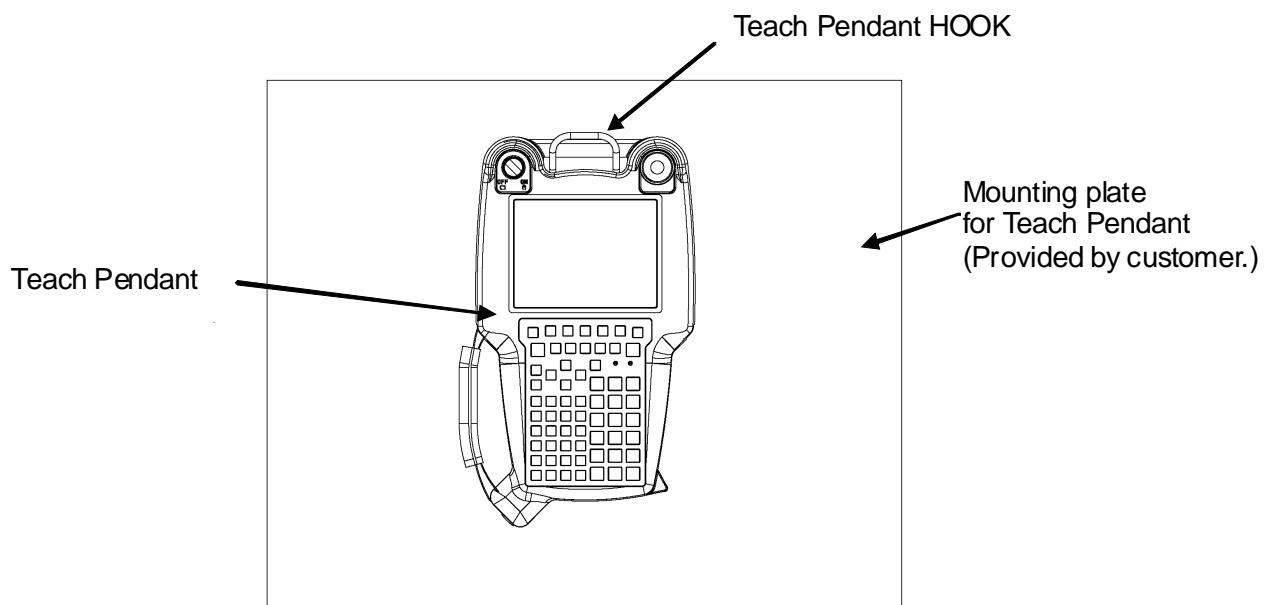
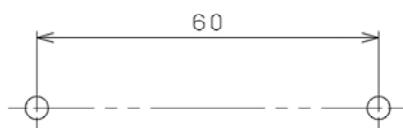


Fig.5.3 External dimension of Teach Pendant HOOK

5.4 INSTALLATION CONDITION

Item	Model	Specification/condition
Rated Voltage	All models	200-230VAC 50/60Hz Single phase
		200-230VAC 50/60Hz 3 phase
Tolerant fluctuation	All models	Tolerant voltage fluctuation: +10% -15% Tolerant frequency fluctuation: ±1Hz
Input power source capacity	R-2000iC, R-1000iA, M-710iC, M-3iA	12kVA
	ARC Mate 120iC, M-20iA	3kVA
	ARC Mate 100iC, M-10iA	2kVA
	ARC Mate 0iB, R-0iB	
	LR Mate 200iD	1.2kVA
	ARC Mate 50iD	
	M-1iA	1kVA
Average power consumption	R-2000iC, R-1000iA, M-710iC, M-3iA	2.5kW
	ARC Mate100iC ARC Mate 120iC M-10iA,M-20iA ARC Mate 0iB, R-0iB	1kW
	LR Mate 200iD	0.5kW
	ARC Mate 50iD	
	M-1iA	0.2kW
Permissible ambient temperature	All models	Operating 0°C to 45°C Storage, Transport -20°C to 60°C Temperature change 0.3°C/minute or less
Permissible ambient humidity	All models	Normal: 75%RH or less, no condensation Short period (less than 1 month): 95%RH or less, no condensation
Surrounding gas	All models	An additional protective provision is necessary if the machine is installed in an environment in which there are relatively large amounts of contaminants (dust, dielectric fluid, organic solvent, acid, corrosive gas, salt, etc.).
Installation Category	All models	Installation Category III, Pollution Degree 3, IEC60664-1 and IEC61010-1
Vibration	All models	0.5G or less When using the robot in a location subject to serious vibration, consult with your FANUC sales representative.
Altitude	All models	Operating: Up to 1000m Non-operating: Up to 12000m
Ionized and non-ionized radiation	All models	A shielding provision is necessary if the machine is installed in an environment in which it is exposed to radiation (microwave, ultraviolet rays, laser beams, and/or X-rays).
Mass of controller	All models	40kg
Degree of protection	All models	IP54

NOTE

The power rating indicated above is sufficient as the continuous rating. However, when the robot is rapidly accelerating, the instantaneous requirement may increase to several times the continuous rating.

If the acceleration/deceleration override (ACC) greater than 100% is set in the robot program, the extreme current may flow to the robot controller instantaneously and the input voltage of robot controller will drop.

In this case, if the supply voltage is decreased 10% or more per rated voltage, Power supply alarm, Move error excess alarm, DCLV alarm of servo amplifier may occur.

NOTE**In case of CE controller**

R-30iB Mate controller is a group 1, class A product according to IEC55011.

This means that this product does not generate and/or use intentionally radio-frequency energy, in the form of electromagnetic radiation, inductive and/or capacitive coupling, for the treatment of material or inspection / analysis purpose and that it is suitable for use in all establishments other than domestic and those directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

There may be potential difficulties in ensuring electromagnetic compatibility in environments other than industrial, due to conducted as well as radiated disturbances.

This product must not be used in residual areas.

This product may cause interference if used in residential areas. Such use must be avoided unless the user takes special measures to reduce electromagnetic emissions to prevent interference to the reception of radio and television broadcasts.

In case that an earth leakage breaker in the power panel tripped (CE/3 phase)


A noise filter is installed in the R-30iB Mate controller (CE/3 phase). The noise filter is designed to connect to star connection / neutral grounding power system (TN-power system, NOTE.1). In case that the controller is connected to delta connection / single-phase grounding power system (TT-power system NOTE.1), there is a possibility that small leakage current flows via noise filter.

Therefore, if leakage breaker (Rated leakage current: less than 30mA) is installed in a power panel of the building and many controllers are connected to one leakage breaker, the leakage breaker may trip by amount of the leakage current.


In this case, following countermeasures will be effective.

- (1) Use leakage breaker that has large rated leakage current. Or reduce the number of controllers that are connected to one leakage breaker.
- (2) Install isolated transformer between input power and controller.
- (3) It is possible to reduce the leakage current by turning off a switch at the noise filter. (NOTE.2)
If the controller used in region where CE mark is required, this switch should be ON because European power system is star connection / neutral grounding.

NOTE.1) The TN-power system and TT-power system are based on the AC power distribution system standard IEC60364.

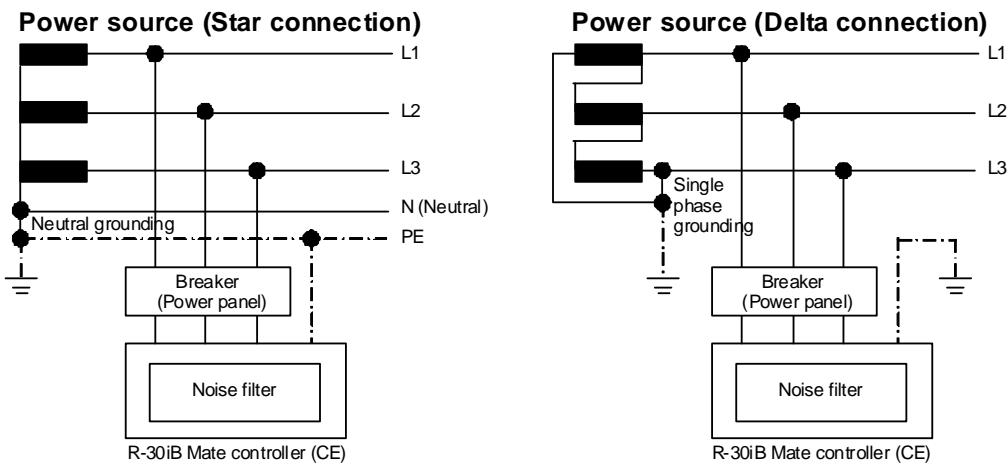

NOTE.2) R-30iB Mate controller (CE) has a noise filter with switch that connect/disconnect the internal capacitor to the ground. In case that the controller connected to delta connection / single-phase grounding power system (TT-power system), it is possible to reduce the leakage current to less than 10mA by turning off (O-side) the switch at the noise filter.

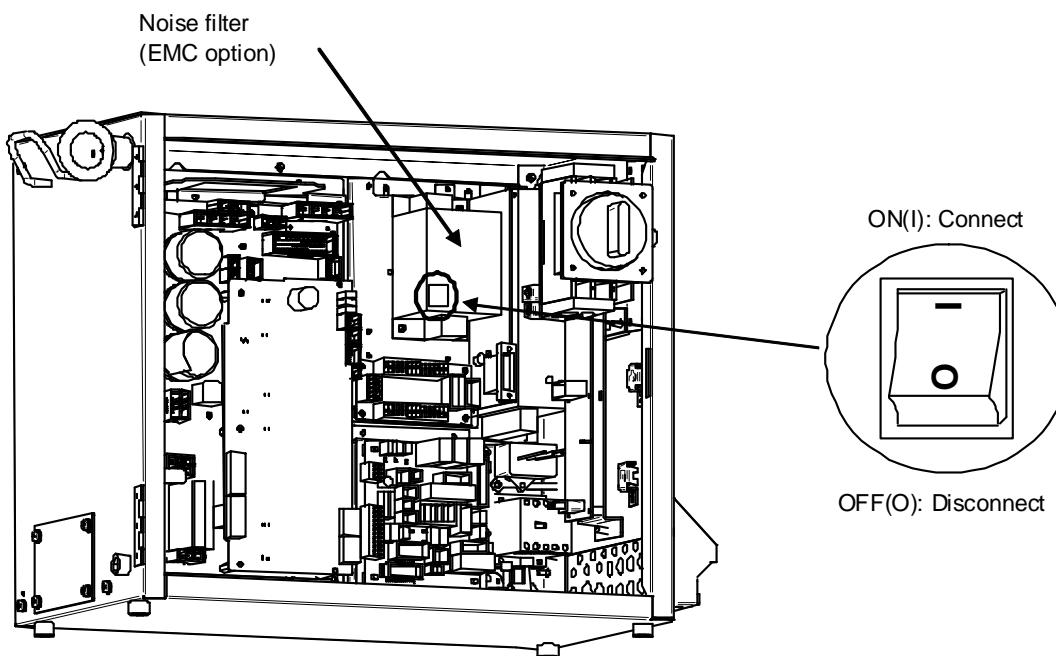

5.5 ADJUSTMENT AND CHECKS AT INSTALLATION

Adjust the robot according to the following procedure at installation.

No.	Description
1	Visually check the inside and outside of the controller.
2	Check the screw terminals for proper connection.
3	Check that the connectors and printed circuit boards are firmly connected.
4	Connect controller and mechanical unit cables.
5	The breaker off and connect the input power cable.
6	Check the input power voltage.
7	Press the EMERGENCY STOP button on the operator panel and turn on the controller.
8	Check the interface signals between controller and robot mechanical unit.
9	Check the parameters. If necessary, set them.
10	Release the EMERGENCY STOP button on the operator panel.
11	Check the movement along each axis in manual jog mode.
12	Check the signals of EE interface.
13	Check the peripheral device control interface signals.

5.6 RESETTING OVERTRAVEL AND EMERGENCY STOP AT INSTALLATION

An overtravel and emergency stop occur when the robot is operated for the first time after it is installed and the mechanical and controllers are wired. This section describes how to reset the overtravel and emergency stop.


Remove the red plate fastening the swiveling axis beforehand.

The J2 and J3 axes are pressed against the hard stops at shipment. Therefore, an overtravel alarm occurs when the power is turned on after installation.

The robot can also be in an emergency stop state if the peripheral device control interface is not connected.

5.6.1 Peripheral Device Interface Processing

If signals XHOLD and ENBL are not used, connect these signals as follows.

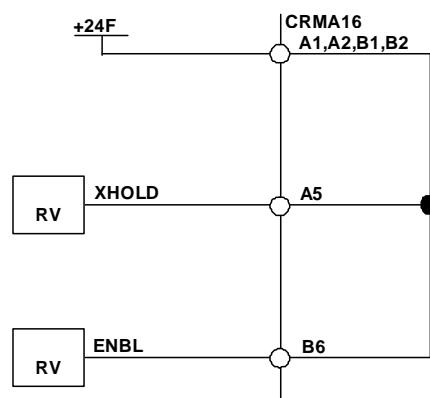

5.6.2 Resetting Overtravel

- 1) Select [OT release] on the overtravel release screen to release each robot axis from the overtravel state.
- 2) Hold down the shift key, and press the alarm release button to reset the alarm condition.
- 3) Still hold down the shift key, and jog to bring all axes into the movable range.


5.6.3 How to Disable/Enable HBK

- 1) Press [MENU] on the teach pendant.
- 2) Select [NEXT].
- 3) Select [SYSTEM].
- 4) Press "F1" (TYPE) on the teach pendant.
- 5) Select "Config" to disable/enable HBK.

Status	Hand Broken enable/disable setting	HBK (*1)	HBK detection	Robot operation	Message
1	Enable	CLOSE	Yes	Possible	None
2	Enable	OPEN	Yes	Impossible	SRVO-006
3	Disable	CLOSE	Yes (*2)	Possible	None
4	Disable	OPEN	No	Possible	At cold start, SRVO-300

NOTE

- 1 Robot EE connector

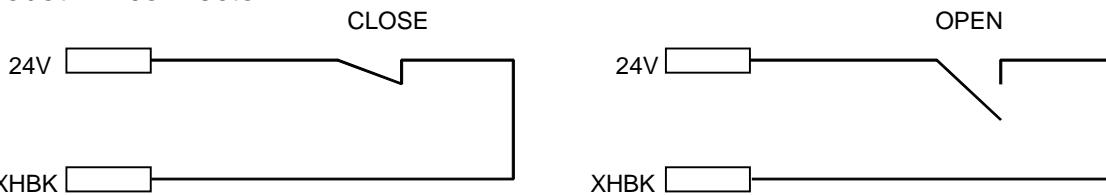


- 2 The moment the HBK circuit is closed, HBK detection becomes enabled. When the HBK circuit is opened again, alarm "Servo 300" or "Servo 302" occurs, causing the robot to stop.
- 3 If the power is turned off and on again under the condition stated in *2, status 4 is entered, so the alarm condition is removed.

5.6.4 How to Disable/Enable Pneumatic Pressure Alarm (PPABN)

- 1) Press [MENU] on the teach pendant.
- 2) Select [NEXT].
- 3) Select [SYSTEM].
- 4) Press "F1" (TYPE) on the teach pendant.
- 5) Select "Config" to disable/enable PPABN.

APPENDIX

A TOTAL CONNECTION DIAGRAM

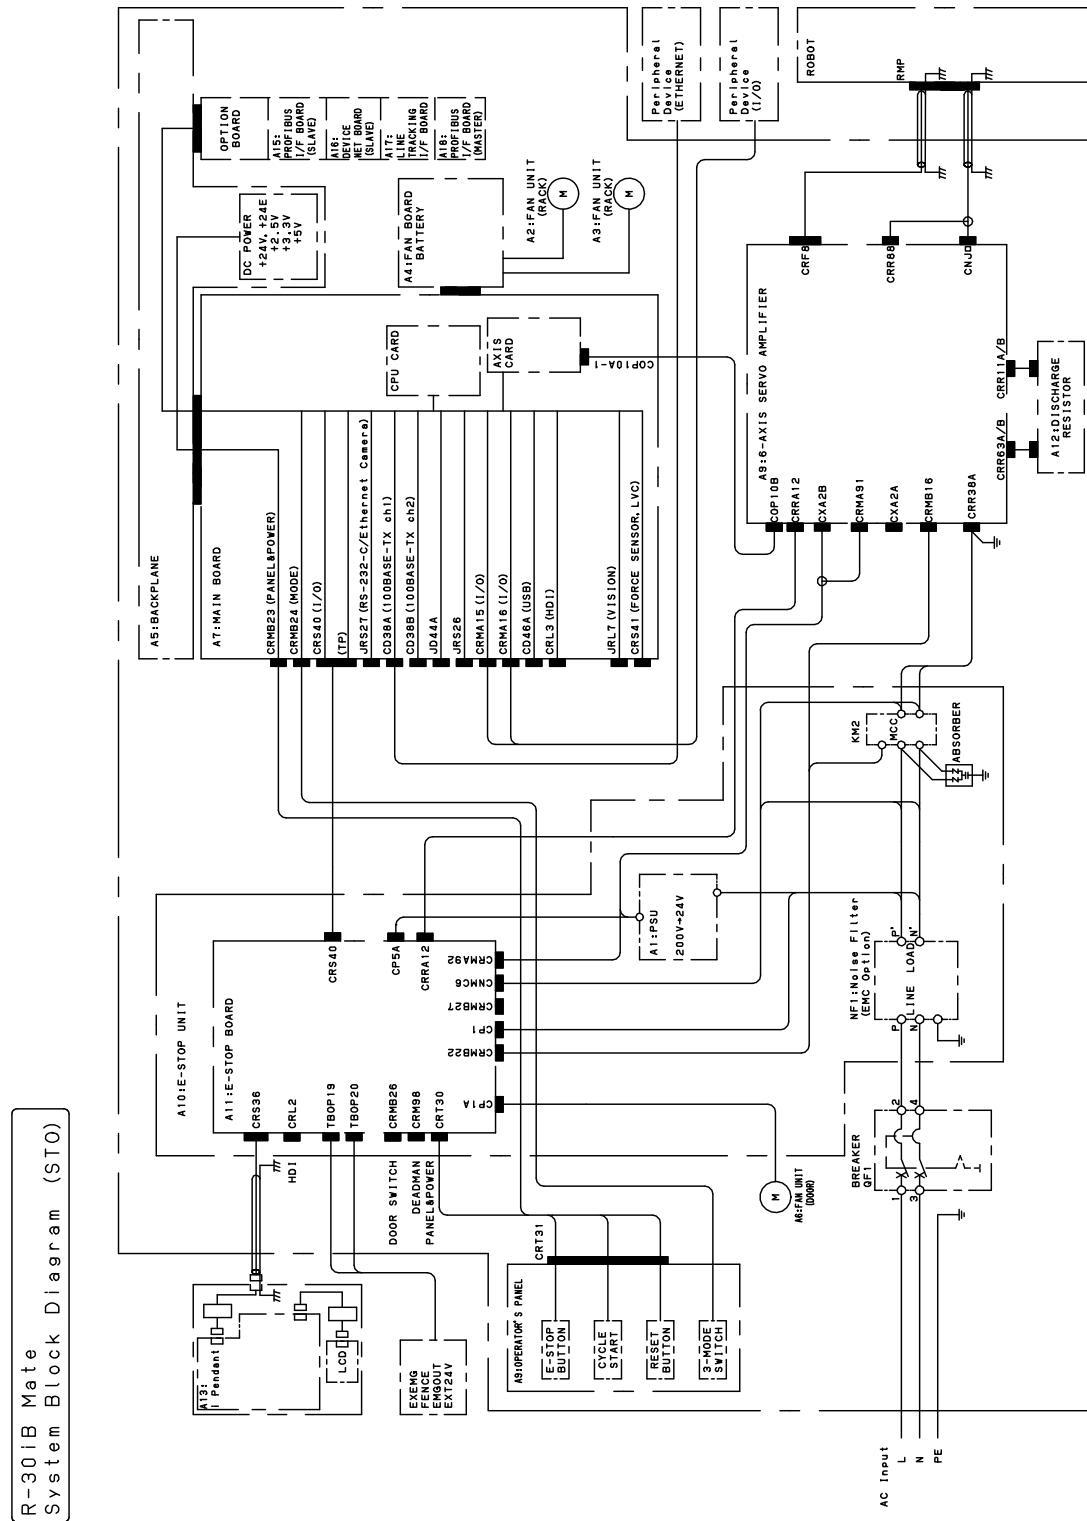**Fig.A (a) System block diagram**

(This diagram shows the single phase input circuit. In case of three phase input, See the Fig.A(b))

THREE PHASE POWER SOURCE

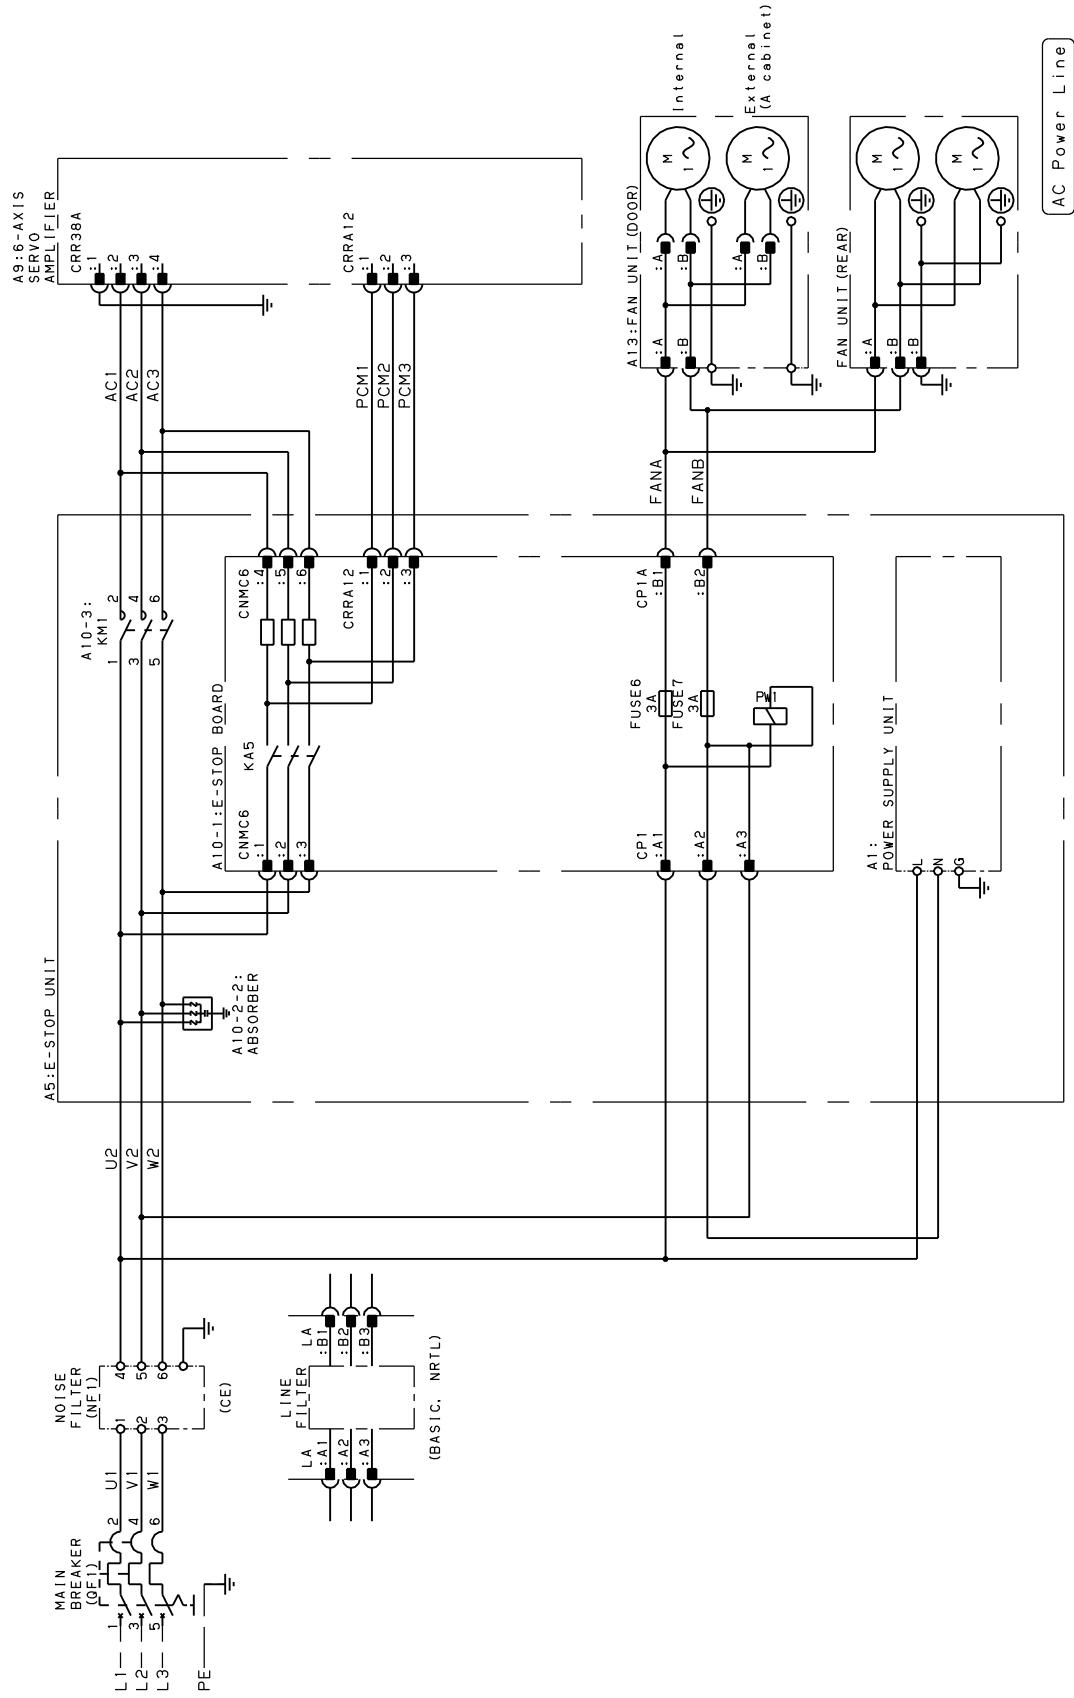


Fig.A(b) AC power line connection diagram (in case of three phase input)

SINGLE PHASE POWER SOURCE

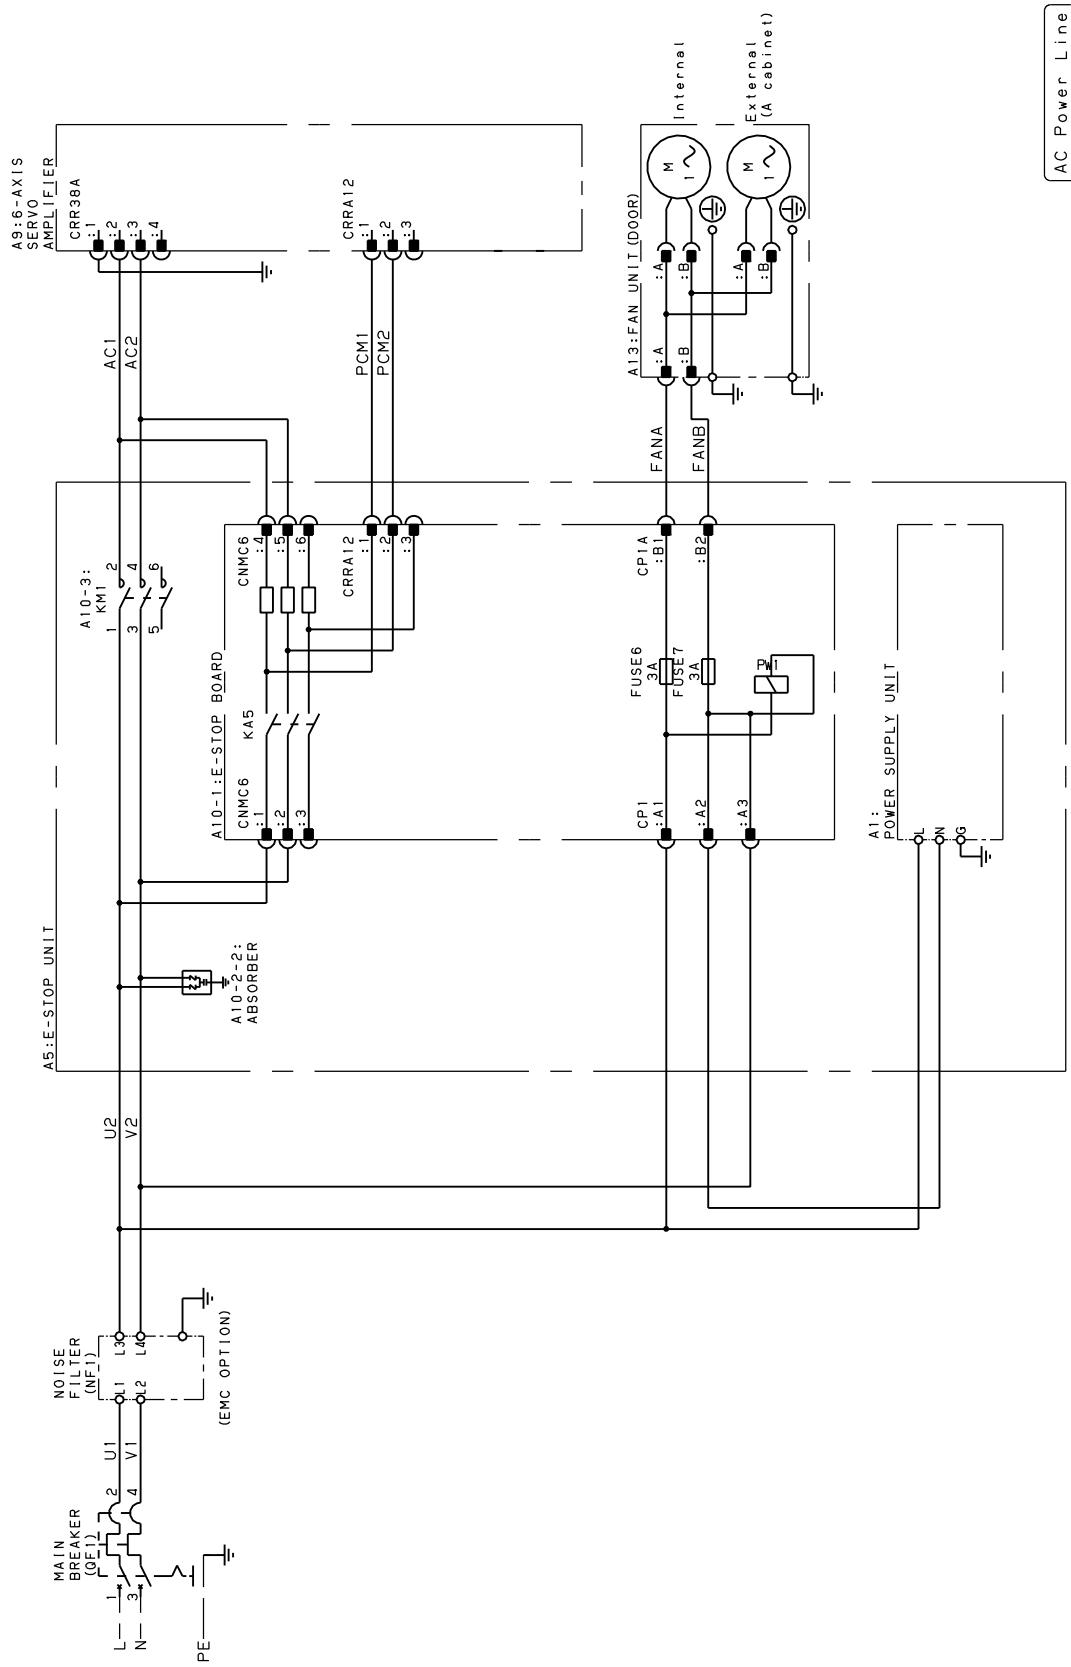


Fig.A(c) AC power line connection diagram (in case of single phase input)

R - 30 iB Mate DC POWER CIRCUIT

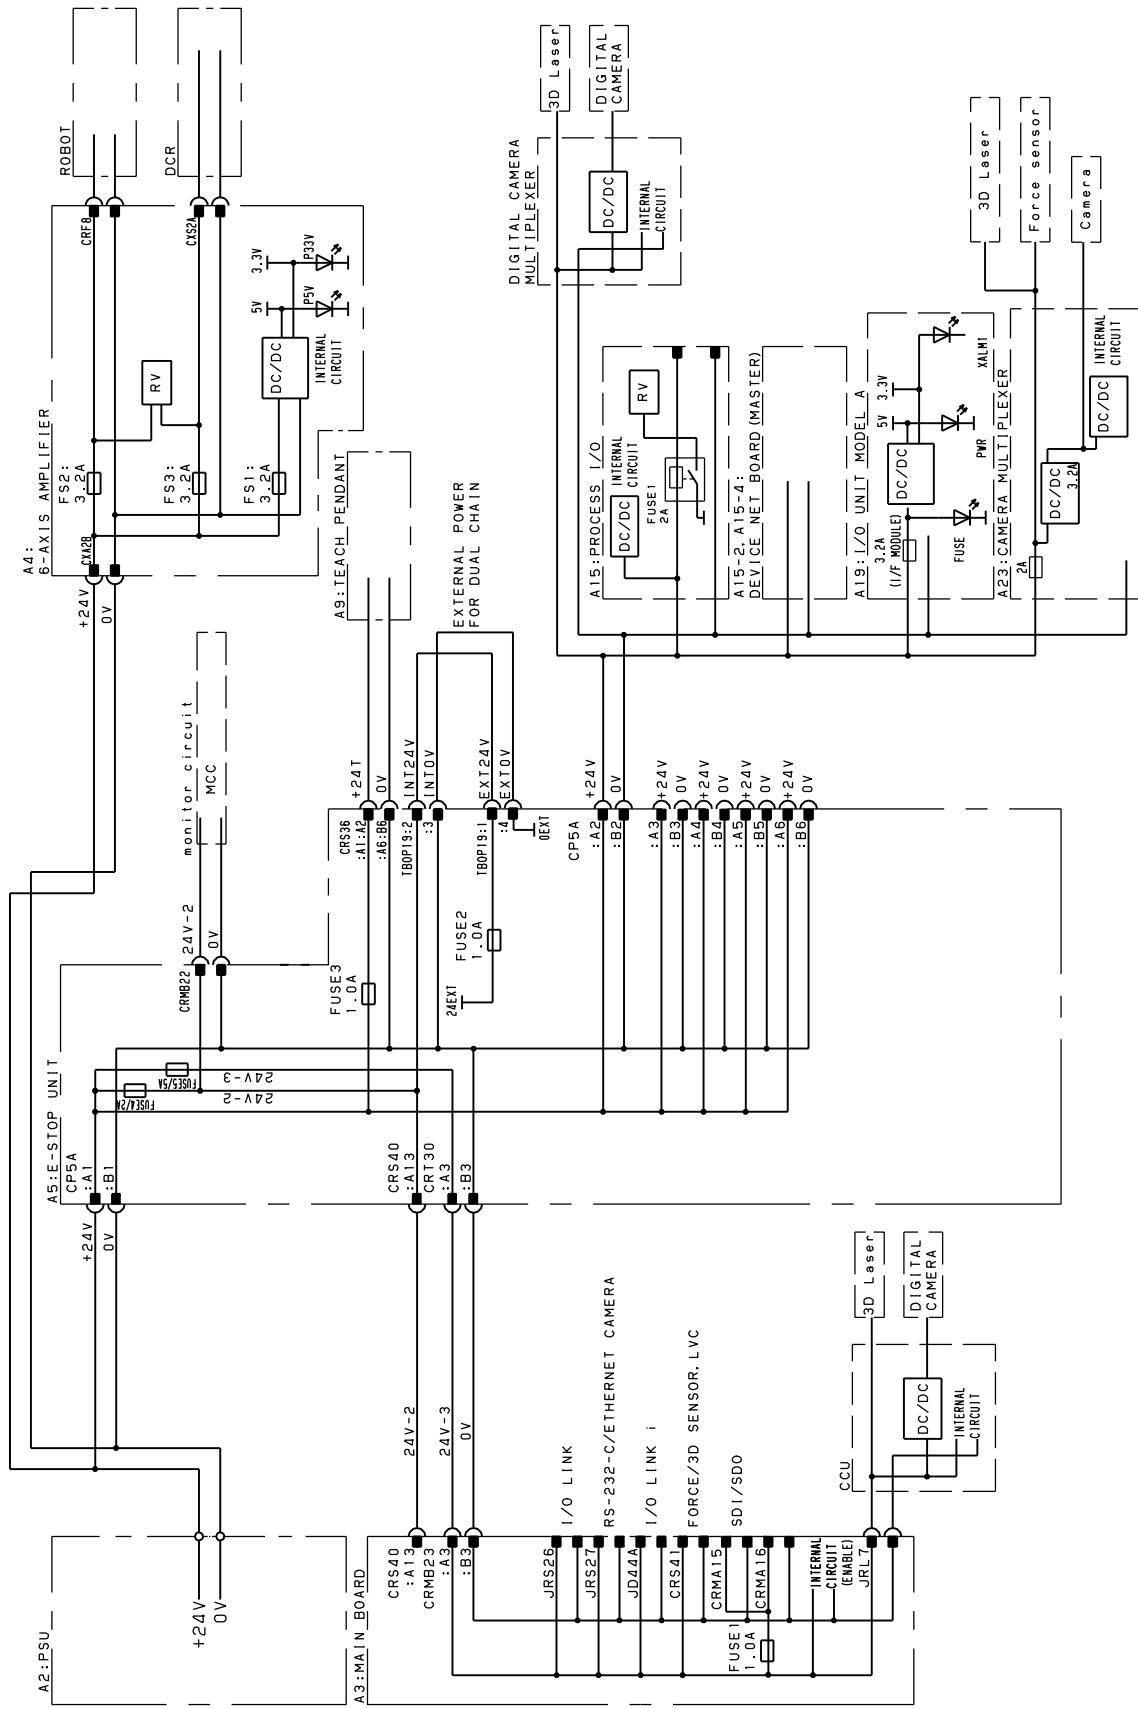


Fig.A(d) DC power line connection diagram

E-STOP CIRCUIT <R-30iB Mate>
 Dual check safety
 Single MCC with STO (Single Phase)

DI : Simple DI

PI : Photo coupler DI

Not showing the diodes to protect from reverse electric power.


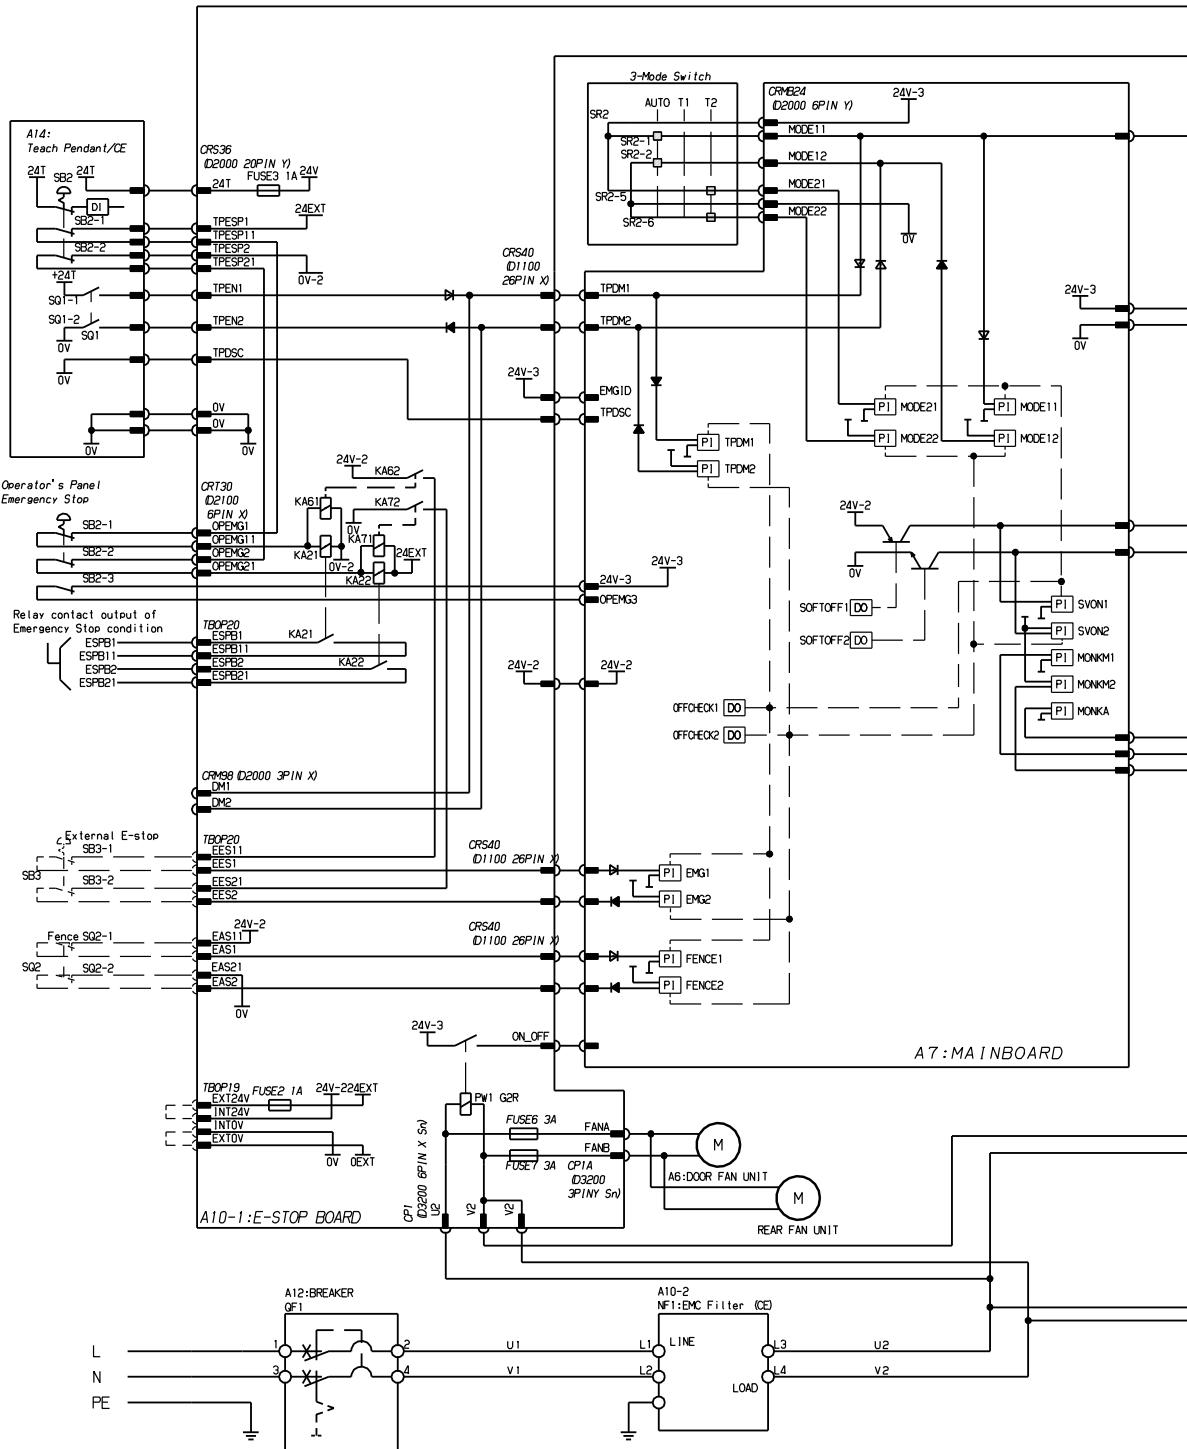


Fig.A(e) Emergency stop circuit connection diagram

(This diagram shows the single phase input circuit. In case of three phase input, See the Fig.A(b))

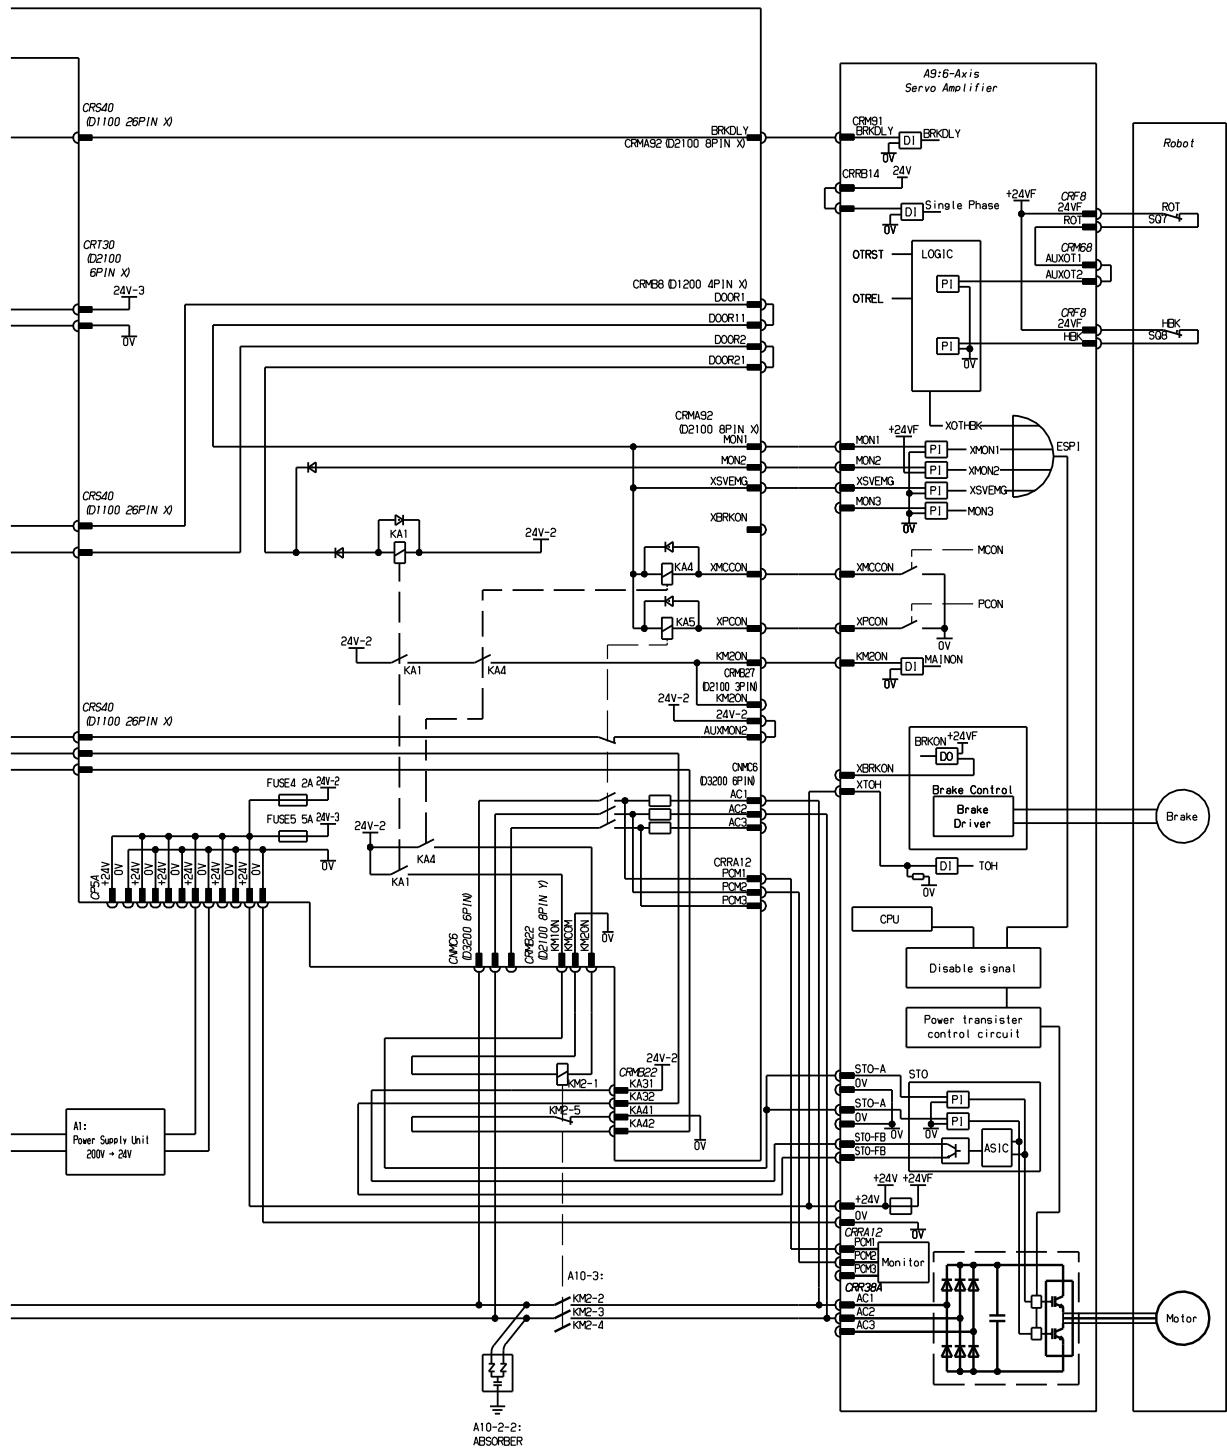

R-30iB Mate E-STOP Board
Connector Table

CRS36	D2100D (Y)	TEACH PENDANT	CRMB8	D1200D (X)	DOOR SWITCH	CP5A	D3500	DC24V	TBOP19	EXTERNAL DC24V
A1	+24T	B1	TPESP21	A1	SVON1	B1	SVON11		1 EXT24V	
A2	+24T	B2	TPESP22	A2	SVON2	B2	SVON21		2 INT24V	
A3	TPEN2	B3	TPESP11	A3	24V	B3	0V		3 INT0V	
A4	TPEN1	B4	TPESP1	A4	24V	B4	0V		4 EXT0V	
A5	TPDSC	B5	0V	A5	24V	B5	0V			
A6	0V	B6	0V	A6	24V	B6	0V			
A7	TXXTP	B7	TXN_TP	A1	KA31	B1	KA32			
A8	TXTP	B8	TXP_TP	A2	KA41	B2	KA42			
A9	XRXTP	B9	RXN_TP	A3	0V	B3	0V			
A10	RXTP	B10	RXP_TP	A4	KM10N	B4	KM20N			
CRS40	D1100D (X)	MAIN BOARD I/F	CRMB27	D2100D (Y)	MULTI ARM/AUX. AXIS	CRR412	D3200 (Z)	AC200V MONITOR	TBOP20	EXTERNAL E-STOP/FENCE
A1	RXTP	B1	TXTP	1	AUXMON2				1 EES1	
A2	XRXTP	B2	XXTXP	2	24V-2				2 EES11	
A3	RXP_TP	B3	TXP_TP	3	KM20N_D0				3 EES2	
A4	RXN_TP	B4	TXN_TP	CRM98	D2100D (X)	DEADMAN SW.	OUTPUT		4 EES21	
A5	0V	B5	0V	D2100D (X)					5 EAS1	
A6	MODE 11	B6	MONKMI	DEADMAN SW.	OUTPUT				6 EAS11	
A7	TPDM1	B7	MONK12	1	DM1				7 EAS2	
A8	TPDM2	B8	MONKMA	2	DM2				8 EAS21	
A9	EAS1	B9	TPDSC	3					9 ESPB1	
A10	EAS2	B10	EMGID	4	AC1				10 ESPB11	
A11	EES1	B11	SVON1	CP1	D3200 (X)				11 ESPB2	
A12	EES2	B12	SVON2	D3200 (X)	AC200V INPUT				12 ESPB21	
A13	24V-2	B13	ON_OFF	1	V2IN					
				2	V2OUT					
				3	U2					
CRT30	D2100D (X)	E-STOP BUTTON	CP1A	D3200 (Y)	FANU UNIT POWER					
A1	OPENG1	B1	OPENG11	1	FANA					
A2	OPENG2	B2	OPENG21	2	FANB					
A3	2AV-3	B3	0V	3						
CRM492	D2100D (X)	6-AXIS SERVO AMPLIFIER								
A1	MON2	B1	BRCON							
A2	XSVENG	B2	BKDLY							
A3	XMCCON	B3	MON1							
A4	XFCON	B4	KH20N							

Fig.A(f) Emergency stop board connector table


MAIN BOARD

JRS227	PCR20	D1100D (X)	E-STOP BOARD I/F	
		A1	TXDA	
		A2	0V	2
		A3	DTRA	3
		A4	0V	4
		A5	RTSA	5
		A6	0V	6
		A7	CAMRX+	7
		A8	CAMRX-	8
		A9	24V -3	9
		A10	EAS1	B9
		A11	EAS2	B10
		A12	EE52	B11
		A13	24V -2	B13

JD44A	PCR20	D2100D (X)	OP. PANEL SWITCH	CRMA16 D1/DO
		A1	BUSY	A
		A2	START	B
		A3	24V -3	INDV
				SDICOM3
				4
				0V
				5
				D1101
				D1102
				6
				D1103
				D1104
				7
				D1105
				8
				D1107
				9
				D1109
				10
				D0110
				11
				D1111
				D1112
				12
				D1115
				D1116
				13
				D1117
				D1118
				14
				D1119
				D1120
				15
				D0101
				D0102
				16
				D0103
				D0104
				17
				D0105
				D0106
				18
				D0107
				D0108
				19
				0V
				0V
				20
				DOSRC1
				DOSRC2

CRS41	DF11-10DS-2C (HIROSE) HDI	CRL3 DF11-4DS-2C (HIROSE) HDI	CD38A Ethernet 100Base-TX	CD38B Ethernet 100Base-TX
		1 XHD10	1 TXA+	1 TXB+
		2 XHD11	2 TXA-	2 TXB-
		3 0V	3 RXA+	3 RXB+
		4 0V	4 RXA-	4 RXB-
			5	5
			6 RXA-	6 RXB-
			7	7
			8	8

Fig.A(g) Main board connector table

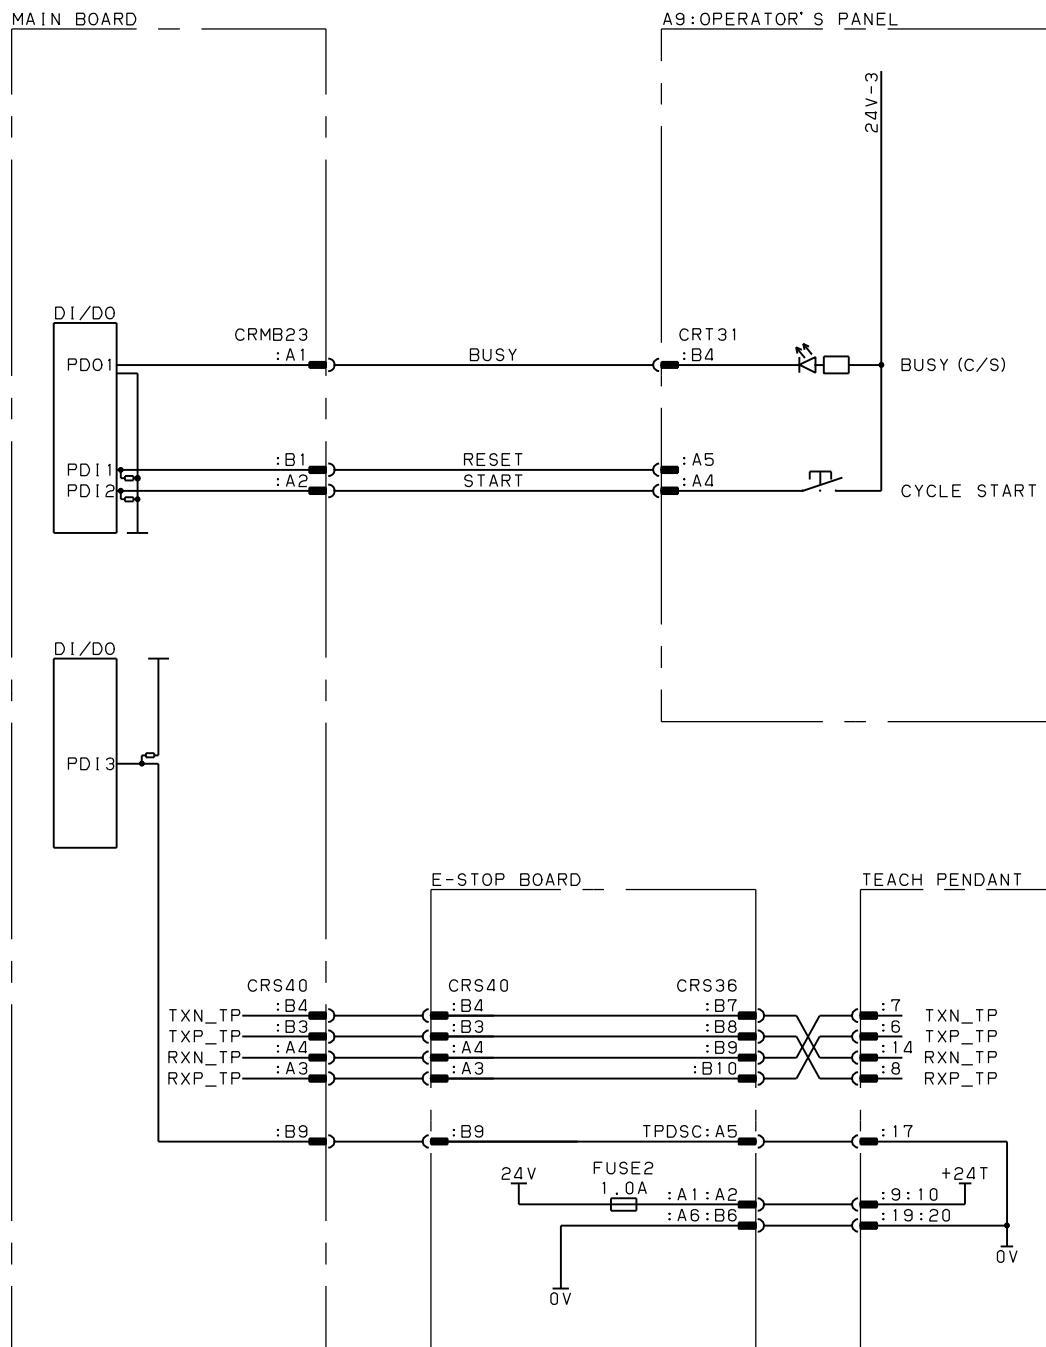

A8:
Operator's Panel

Fig.A(h) Operator's panel connection diagram

Line filter
Connector Table

LA D5200 (XX)	
A1	U1
A2	V1
A3	W1
	U2
	V2
	W2

Teach pendant
Connector Table


CONNECTOR ON THE TEACH PENDANT											
4	3	2	1								
10	+24T	9	+24T	8	RXP	TP	7	TXN	TP	6	TXP
16	TPESP21	15	TPSSP2	14	RXN	TP	13	TPESP11	12	TPESP1	11
20	0v	19	0v	18	TPEN2	17	TPDSC				

Operator's panel
Connector Table


CRT31	
D2100D (X)	
O.P.	PANEL SWITCH
A1	OPFMG1 B1 OPFMG11
A2	OPENG2 B2 OPENG21
A3	24V-3 B3 OPENG3
A4	START B4 BUSY
A5	RESET B5
A6	B6

Fig.A(i) Operator's panel/Teach pendant connector table


CRF8 D-2600	CRR A11A D3200 (Y)	CRM A91 D2100D (X)	CRM97 D2100D (Y)	CXA2B D2100D (X)	CXA2A D2100D (Y)	CRR63B D2100 (X)	CRR63A D2100 (X)	CRM B16 D2100D (Z)	CRM A13 D5200 (Y)	CRR88 D3200M (Y)	CRR A12 D3200 (Z)	CRR68 D2100 (X)	COP10A D4200 (X)	CNR4 D4200 (X)	CNR5 D4200 (X)	CNR3A D5200 (X)
1 A 1 XPRQ1 2 XPRQ2 3 XPRQ3 4 XPRQ4 5 XPRQ5 6 XPRQ6 7 S+ 8 R11 9 R13 10 R15 11 R17 12 R19 13 R02 14 R04 15 R05 16 R08 17 24V 18 24V IN	1 B 1 PRQ1 2 PRQ2 3 PRQ3 4 PRQ4 5 PRQ5 6 PRQ6 7 S- 8 R12 9 R14 10 R16 11 R18 12 R01 13 R03 14 R05 15 R07 16 R08 17 24V 18 24V IN	1 C 1 PRQ1 2 PRQ2 3 PRQ3 4 PRQ4 5 PRQ5 6 PRQ6 7 OV 8 OV 9 OV 10 OV 11 OV 12 OV 13 OV 14 OV 15 OV 16 XHBK 17 XFO1 18 0V	1 B1 1 XBRKRLS2 2 B2 3 B3 4 B4 5 B5 6 B6 7 XOTHBK 8 DCPASC 9 MON1 10 XGUNCHG 11 XSVENG 12 KM3ON 13 XTOM 14 XTOM 15 XMCCON 16 XTOM 17 XFBST01 18 XTOA1 19 XTOA2 20 XTOB1 21 XTOB2 22 STOABNML 23 XTOM 24 XFBST02 25 XTOA1 26 XTOA2 27 XTOB1 28 XTOB2 29 XTOM 30 XTOM 31 XFBST03 32 XTOA1 33 XTOA2 34 XTOB1 35 XTOB2 36 XTOM 37 XTOM 38 XFBST04 39 XTOA1 40 XTOA2 41 XTOB1 42 XTOB2 43 XTOM 44 XTOM 45 XFBST05 46 XTOA1 47 XTOA2 48 XTOB1 49 XTOB2 50 XTOM 51 XTOM 52 XFBST06 53 XTOA1 54 XTOA2 55 XTOB1 56 XTOB2 57 XTOM 58 XTOM 59 XFBST07 60 XTOA1 61 XTOA2 62 XTOB1 63 XTOB2 64 XTOM 65 XTOM 66 XFBST08 67 XTOA1 68 XTOA2 69 XTOB1 70 XTOB2 71 XTOM 72 XTOM 73 XFBST09 74 XTOA1 75 XTOA2 76 XTOB1 77 XTOB2 78 XTOM 79 XTOM 80 XFBST10 81 XTOA1 82 XTOA2 83 XTOB1 84 XTOB2 85 XTOM 86 XTOM 87 XFBST11 88 XTOA1 89 XTOA2 90 XTOB1 91 XTOB2 92 XTOM 93 XTOM 94 XFBST12 95 XTOA1 96 XTOA2 97 XTOB1 98 XTOB2 99 XTOM 100 XTOM 101 XFBST13 102 XTOA1 103 XTOA2 104 XTOB1 105 XTOB2 106 XTOM 107 XTOM 108 XFBST14 109 XTOA1 110 XTOA2 111 XTOB1 112 XTOB2 113 XTOM 114 XTOM 115 XFBST15 116 XTOA1 117 XTOA2 118 XTOB1 119 XTOB2 120 XTOM 121 XTOM 122 XFBST16 123 XTOA1 124 XTOA2 125 XTOB1 126 XTOB2 127 XTOM 128 XTOM 129 XFBST17 130 XTOA1 131 XTOA2 132 XTOB1 133 XTOB2 134 XTOM 135 XTOM 136 XFBST18 137 XTOA1 138 XTOA2 139 XTOB1 140 XTOB2 141 XTOM 142 XTOM 143 XFBST19 144 XTOA1 145 XTOA2 146 XTOB1 147 XTOB2 148 XTOM 149 XTOM 150 XFBST20 151 XTOA1 152 XTOA2 153 XTOB1 154 XTOB2 155 XTOM 156 XTOM 157 XFBST21 158 XTOA1 159 XTOA2 160 XTOB1 161 XTOB2 162 XTOM 163 XTOM 164 XFBST22 165 XTOA1 166 XTOA2 167 XTOB1 168 XTOB2 169 XTOM 170 XTOM 171 XFBST23 172 XTOA1 173 XTOA2 174 XTOB1 175 XTOB2 176 XTOM 177 XTOM 178 XFBST24 179 XTOA1 180 XTOA2 181 XTOB1 182 XTOB2 183 XTOM 184 XTOM 185 XFBST25 186 XTOA1 187 XTOA2 188 XTOB1 189 XTOB2 190 XTOM 191 XTOM 192 XFBST26 193 XTOA1 194 XTOA2 195 XTOB1 196 XTOB2 197 XTOM 198 XTOM 199 XFBST27 200 XTOA1 201 XTOA2 202 XTOB1 203 XTOB2 204 XTOM 205 XTOM 206 XFBST28 207 XTOA1 208 XTOA2 209 XTOB1 210 XTOB2 211 XTOM 212 XTOM 213 XFBST29 214 XTOA1 215 XTOA2 216 XTOB1 217 XTOB2 218 XTOM 219 XTOM 220 XFBST30 221 XTOA1 222 XTOA2 223 XTOB1 224 XTOB2 225 XTOM 226 XTOM 227 XFBST31 228 XTOA1 229 XTOA2 230 XTOB1 231 XTOB2 232 XTOM 233 XTOM 234 XFBST32 235 XTOA1 236 XTOA2 237 XTOB1 238 XTOB2 239 XTOM 240 XTOM 241 XFBST33 242 XTOA1 243 XTOA2 244 XTOB1 245 XTOB2 246 XTOM 247 XTOM 248 XFBST34 249 XTOA1 250 XTOA2 251 XTOB1 252 XTOB2 253 XTOM 254 XTOM 255 XFBST35 256 XTOA1 257 XTOA2 258 XTOB1 259 XTOB2 260 XTOM 261 XTOM 262 XFBST36 263 XTOA1 264 XTOA2 265 XTOB1 266 XTOB2 267 XTOM 268 XTOM 269 XFBST37 270 XTOA1 271 XTOA2 272 XTOB1 273 XTOB2 274 XTOM 275 XTOM 276 XFBST38 277 XTOA1 278 XTOA2 279 XTOB1 280 XTOB2 281 XTOM 282 XTOM 283 XFBST39 284 XTOA1 285 XTOA2 286 XTOB1 287 XTOB2 288 XTOM 289 XTOM 290 XFBST40 291 XTOA1 292 XTOA2 293 XTOB1 294 XTOB2 295 XTOM 296 XTOM 297 XFBST41 298 XTOA1 299 XTOA2 300 XTOB1 301 XTOB2 302 XTOM 303 XTOM 304 XFBST42 305 XTOA1 306 XTOA2 307 XTOB1 308 XTOB2 309 XTOM 310 XTOM 311 XFBST43 312 XTOA1 313 XTOA2 314 XTOB1 315 XTOB2 316 XTOM 317 XTOM 318 XFBST44 319 XTOA1 320 XTOA2 321 XTOB1 322 XTOB2 323 XTOM 324 XTOM 325 XFBST45 326 XTOA1 327 XTOA2 328 XTOB1 329 XTOB2 330 XTOM 331 XTOM 332 XFBST46 333 XTOA1 334 XTOA2 335 XTOB1 336 XTOB2 337 XTOM 338 XTOM 339 XFBST47 340 XTOA1 341 XTOA2 342 XTOB1 343 XTOB2 344 XTOM 345 XTOM 346 XFBST48 347 XTOA1 348 XTOA2 349 XTOB1 350 XTOB2 351 XTOM 352 XTOM 353 XFBST49 354 XTOA1 355 XTOA2 356 XTOB1 357 XTOB2 358 XTOM 359 XTOM 360 XFBST50 361 XTOA1 362 XTOA2 363 XTOB1 364 XTOB2 365 XTOM 366 XTOM 367 XFBST51 368 XTOA1 369 XTOA2 370 XTOB1 371 XTOB2 372 XTOM 373 XTOM 374 XFBST52 375 XTOA1 376 XTOA2 377 XTOB1 378 XTOB2 379 XTOM 380 XTOM 381 XFBST53 382 XTOA1 383 XTOA2 384 XTOB1 385 XTOB2 386 XTOM 387 XTOM 388 XFBST54 389 XTOA1 390 XTOA2 391 XTOB1 392 XTOB2 393 XTOM 394 XTOM 395 XFBST55 396 XTOA1 397 XTOA2 398 XTOB1 399 XTOB2 400 XTOM 401 XTOM 402 XFBST56 403 XTOA1 404 XTOA2 405 XTOB1 406 XTOB2 407 XTOM 408 XTOM 409 XFBST57 410 XTOA1 411 XTOA2 412 XTOB1 413 XTOB2 414 XTOM 415 XTOM 416 XFBST58 417 XTOA1 418 XTOA2 419 XTOB1 420 XTOB2 421 XTOM 422 XTOM 423 XFBST59 424 XTOA1 425 XTOA2 426 XTOB1 427 XTOB2 428 XTOM 429 XTOM 430 XFBST60 431 XTOA1 432 XTOA2 433 XTOB1 434 XTOB2 435 XTOM 436 XTOM 437 XFBST61 438 XTOA1 439 XTOA2 440 XTOB1 441 XTOB2 442 XTOM 443 XTOM 444 XFBST62 445 XTOA1 446 XTOA2 447 XTOB1 448 XTOB2 449 XTOM 450 XTOM 451 XFBST63 452 XTOA1 453 XTOA2 454 XTOB1 455 XTOB2 456 XTOM 457 XTOM 458 XFBST64 459 XTOA1 460 XTOA2 461 XTOB1 462 XTOB2 463 XTOM 464 XTOM 465 XFBST65 466 XTOA1 467 XTOA2 468 XTOB1 469 XTOB2 470 XTOM 471 XTOM 472 XFBST66 473 XTOA1 474 XTOA2 475 XTOB1 476 XTOB2 477 XTOM 478 XTOM 479 XFBST67 480 XTOA1 481 XTOA2 482 XTOB1 483 XTOB2 484 XTOM 485 XTOM 486 XFBST68 487 XTOA1 488 XTOA2 489 XTOB1 490 XTOB2 491 XTOM 492 XTOM 493 XFBST69 494 XTOA1 495 XTOA2 496 XTOB1 497 XTOB2 498 XTOM 499 XTOM 500 XFBST70 501 XTOA1 502 XTOA2 503 XTOB1 504 XTOB2 505 XTOM 506 XTOM 507 XFBST71 508 XTOA1 509 XTOA2 510 XTOB1 511 XTOB2 512 XTOM 513 XTOM 514 XFBST72 515 XTOA1 516 XTOA2 517 XTOB1 518 XTOB2 519 XTOM 520 XTOM 521 XFBST73 522 XTOA1 523 XTOA2 524 XTOB1 525 XTOB2 526 XTOM 527 XTOM 528 XFBST74 529 XTOA1 530 XTOA2 531 XTOB1 532 XTOB2 533 XTOM 534 XTOM 535 XFBST75 536 XTOA1 537 XTOA2 538 XTOB1 539 XTOB2 540 XTOM 541 XTOM 542 XFBST76 543 XTOA1 544 XTOA2 545 XTOB1 546 XTOB2 547 XTOM 548 XTOM 549 XFBST77 550 XTOA1 551 XTOA2 552 XTOB1 553 XTOB2 554 XTOM 555 XTOM 556 XFBST78 557 XTOA1 558 XTOA2 559 XTOB1 560 XTOB2 561 XTOM 562 XTOM 563 XFBST79 564 XTOA1 565 XTOA2 566 XTOB1 567 XTOB2 568 XTOM 569 XTOM 570 XFBST80 571 XTOA1 572 XTOA2 573 XTOB1 574 XTOB2 575 XTOM 576 XTOM 577 XFBST81 578 XTOA1 579 XTOA2 580 XTOB1 581 XTOB2 582 XTOM 583 XTOM 584 XFBST82 585 XTOA1 586 XTOA2 587 XTOB1 588 XTOB2 589 XTOM 590 XTOM 591 XFBST83 592 XTOA1 593 XTOA2 594 XTOB1 595 XTOB2 596 XTOM 597 XTOM 598 XFBST84 599 XTOA1 600 XTOA2 601 XTOB1 602 XTOB2 603 XTOM 604 XTOM 605 XFBST85 606 XTOA1 607 XTOA2 608 XTOB1 609 XTOB2 610 XTOM 611 XTOM 612 XFBST86 613 XTOA1 614 XTOA2 615 XTOB1 616 XTOB2 617 XTOM 618 XTOM 619 XFBST87 620 XTOA1 621 XTOA2 622 XTOB1 623 XTOB2 624 XTOM 625 XTOM 626 XFBST88 627 XTOA1 628 XTOA2 629 XTOB1 630 XTOB2 631 XTOM 632 XTOM 633 XFBST89 634 XTOA1 635 XTOA2 636 XTOB1 637 XTOB2 638 XTOM 639 XTOM 640 XFBST90 641 XTOA1 642 XTOA2 643 XTOB1 644 XTOB2 645 XTOM 646 XTOM 647 XFBST91 648 XTOA1 649 XTOA2 650 XTOB1 651 XTOB2 652 XTOM 653 XTOM 654 XFBST92 655 XTOA1 656 XTOA2 657 XTOB1 658 XTOB2 659 XTOM 660 XTOM 661 XFBST93 662 XTOA1 663 XTOA2 664 XTOB1 665 XTOB2 666 XTOM 667 XTOM 668 XFBST94 669 XTOA1 670 XTOA2 671 XTOB1 672 XTOB2 673 XTOM 674 XTOM 675 XFBST95 676 XTOA1 677 XTOA2 678 XTOB1 679 XTOB2 680 XTOM 681 XTOM 682 XFBST96 683 XTOA1 684 XTOA2 685 XTOB1 686 XTOB2 687 XTOM 688 XTOM 689 XFBST97 690 XTOA1 691 XTOA2 692 XTOB1 693 XTOB2 694 XTOM 695 XTOM 696 XFBST98 697 XTOA1 698 XTOA2 699 XTOB1 700 XTOB2 701 XTOM 702 XTOM 703 XFBST99 704 XTOA1 705 XTOA2 706 XTOB1 707 XTOB2 708 XTOM 709 XTOM 710 XFBST100 711 XTOA1 712 XTOA2 713 XTOB1 714 XTOB2 715 XTOM 716 XTOM 717 XFBST101 718 XTOA1 719 XTOA2 720 XTOB1 721 XTOB2 722 XTOM 723 XTOM 724 XFBST102 725 XTOA1 726 XTOA2 727 XTOB1 728 XTOB2 729 XTOM 730 XTOM 731 XFBST103 732 XTOA1 733 XTOA2 734 XTOB1 735 XTOB2 736 XTOM 737 XTOM 738 XFBST104 739 XTOA1 740 XTOA2 741 XTOB1 742 XTOB2 743 XTOM 744 XTOM 745 XFBST105 746 XTOA1 747 XTOA2 748 XTOB1 749 XTOB2 750 XTOM 751 XTOM 752 XFBST106 753 XTOA1 754 XTOA2 755 XTOB1 756 XTOB2 757 XTOM 758 XTOM 759 XFBST107 760 XTOA1 761 XTOA2 762 XTOB1 763 XTOB2 764 XTOM 765 XTOM 766 XFBST108 767 XTOA1 768 XTOA2 769 XTOB1 770 XTOB2 771 XTOM 772 XTOM 773 XFBST109 774 XTOA1 775 XTOA2 776 XTOB1 777 XTOB2 778 XTOM 779 XTOM 780 XFBST110 781 XTOA1 782 XTOA2 783 XTOB1 784 XTOB2 785 XTOM 786 XTOM 787 XFBST111 788 XTOA1 789 XTOA2 790 XTOB1 791 XTOB2 792 XTOM 793 XTOM 794 XFBST112 795 XTOA1 796 XTOA2 797 XTOB1 798 XTOB2 799 XTOM 800 XTOM 801 XFBST113 802 XTOA1 803 XTOA2 804 XTOB1 805 XTOB2 806 XTOM 807 XTOM 808 XFBST114 809 XTOA1 810 XTOA2 811 XTOB1 812 XTOB2 813 XTOM 814 XTOM 815 XFBST115 816 XTOA1 817 XTOA2 818 XTOB1 819 XTOB2 820 XTOM 821 XTOM 822 XFBST116 823 XTOA1 824 XTOA2 825 XTOB1 826 XTOB2 827 XTOM 828 XTOM 829 XFBST117 830 XTOA1 831 XTOA2 832 XTOB1 833 XTOB2 834 XTOM 835 XTOM 836 XFBST118 837 XTOA1 838 XTOA2 839 XTOB1 840 XTOB2 841 XTOM 842 XTOM 843 XFBST119 844 XTOA1 845 XTOA2 846 XTOB1 847 XTOB2 848 XTOM 849 XTOM 850 XFBST120 851 XTOA1 852 XTOA2 853 XTOB1 854 XTOB2 855 XTOM 856 XTOM 857 XFBST121 858 XTOA1 859 XTOA2 860 XTOB1 861 XTOB2 862 XTOM 863 XTOM 864 XFBST122 865 XTOA1 866 XTOA2 867 XTOB1 868 XTOB2 869 XTOM 870 XTOM 871 XFBST123 872 XTOA1 873 XTOA2 874 XTOB1 875 XTOB2 876 XTOM 877 XTOM 878 XFBST124 879 XTOA1 880 XTOA2 881 XTOB1 882 XTOB2 883 XTOM 884 XTOM 885 XFBST125 886 XTOA1 887 XTOA2 888 XTOB1 889 XTOB2 890 XTOM 891 XTOM 892 XFBST126 893 XTOA1 894 XTOA2 895 XTOB1 896 XTOB2 897 XTOM 898 XTOM 899 XFBST127 900 XTOA1 901 XTOA2 902 XTOB1 903 XTOB2 904 XTOM 905 XTOM 906 XFBST128 907 XTOA1 908 XTOA2 909 XTOB1 910 XTOB2 911 XTOM 912 XTOM 913 XFBST129 914 XTOA1 915 XTOA2 916 XTOB1 917 XTOB2 918 XTOM 919 XTOM 920 XFBST130 921 XTOA1 922 XTOA2 923 XTOB1 924 XTOB2 925 XTOM 926 XTOM 927 XFBST131 928 XTOA1 929 XTOA2 930 XTOB1 931 XTOB2 932 XTOM 933 XTOM 934 XFBST132 935 XTOA1 936 XTOA2 937 XTOB1 938 XTOB2 939 XTOM 940 XTOM 941 XFBST133 942 XTOA1 943 XTOA2 944 XTOB1 945 XTOB2 946 XTOM 947 XTOM 948 XFBST134 949 XTOA1 950 XTOA2 951 XTOB1 952 XTOB2 953 XTOM 954 XTOM 955 XFBST135 956 XTOA1 957 XTOA2 958 XTOB1 959 XTOB2 960 XTOM 961 XTOM 962 XFBST136 963 XTOA1 964 XTOA2 965 XTOB1 966 XTOB2 967 XTOM 968 XTOM 969 XFBST137 970 XTOA1 971 XTOA2 972 XTOB1 973 XTOB2 974 XTOM 975 XTOM 976 XFBST138 977 XTOA1 978 XTOA2 979 XTOB1 980 XTOB2 981 XTOM 982 XTOM 983 XFBST139 984 XTOA1 985 XTOA2 986 XTOB1 987 XTOB2 988 XTOM 989 XTOM 990 XFBST140 991 XTOA1 992 XTOA2 993 XTOB1 994 XTOB2 995 XTOM 996 XTOM 997 XFBST141 998 XTOA1 999 XTOA2 1000 XTOB1 1001 XTOB2 1002 XTOM 1003 XTOM 1004 XFBST142 1005 XTOA1 1006 XTOA2 1007 XTOB1 1008 XTOB2 1009 XTOM 1010 XTOM 1011 XFBST143 1012 XTOA1 1013 XTOA2 1014 XTOB1 1015 XTOB2 1016 XTOM 1017 XTOM 1018 XFBST144 1019 XTOA1 1020 XTOA2 1021 XTOB1 1022 XTOB2 1023 XTOM 1024 XTOM 1025 XFBST145 1026 XTOA1 1027 XTOA2 1028 XTOB1 1029 XTOB2 1030 XTOM 1031 XTOM 1032 XFBST146 1033 XTOA1 1034 XTOA2 1035 XTOB1 1036 XTOB2 1037 XTOM 1038 XTOM 1039 XFBST147 1040 XTOA1 1041 XTOA2 1042 XTOB1 1043 XTOB2 1044 XTOM 1045 XTOM 1046 XFBST148 1047 XTOA1 1048 XTOA2 1049 XTOB1 1050 XTOB2 1051 XTOM 1052 XTOM 1053 XFBST149 1054 XTOA1 1055 XTOA2 1056 XTOB1 1057 XTOB2 1058 XTOM 1059 XTOM 1060 XFBST150 1061 XTOA1 1062 XTOA2 1063 XTOB1 1064 XTOB2 1065 XTOM 1066 XTOM 1067 XFBST151 1068 XTOA1 1069 XTOA2 1070 XTOB1 1071 XTOB2 1072 XTOM 1073 XTOM 1074 XFBST152 1075 XTOA1 1076 XTOA2 1077 XTOB1 1078 XTOB2 1079 XTOM 1080 XTOM 1081 XFBST153 1082 XTOA1 1083 XTOA2 1084 XTOB1 1085 XTOB2 1086 XTOM 1087 XTOM 1088 XFBST154 1089 XTOA1 1090 XTOA2 1091 XTOB1 1092 XTOB2 1093 XTOM 1094 XTOM 1095 XFBST155 1096 XTOA1 1097 XTOA2 1098 XTOB1 1099 XTOB2 1100 XTOM 1101 XTOM 1102 XFBST156 1103 XTOA1 1104 XTOA2 1105 XTOB1 1106 XTOB2 1107 XTOM 1108 XTOM 1109 XFBST157 1110 XTOA1 1111 XTOA2 1112 XTOB1 1113 XTOB2 1114 XTOM 1115 XTOM 1116 XFBST158 1117 XTOA1 1118 XTOA2 1119 XTOB1 1120 XTOB2 1121 XTOM 1122 XTOM 1123 XFBST159 1124 XTOA1 1125 XTOA2 1126 XTOB1 1127 XTOB2 1128 XTOM 1129 XTOM 1130 XFBST160 1131 XTOA1 1132 XTOA2 1133 XTOB1 1134 XTOB2 1135 XTOM 1136 XTOM 1137 XFBST161 1138 XTOA1 1139 XTOA2 1140 XTOB1 1141 X													

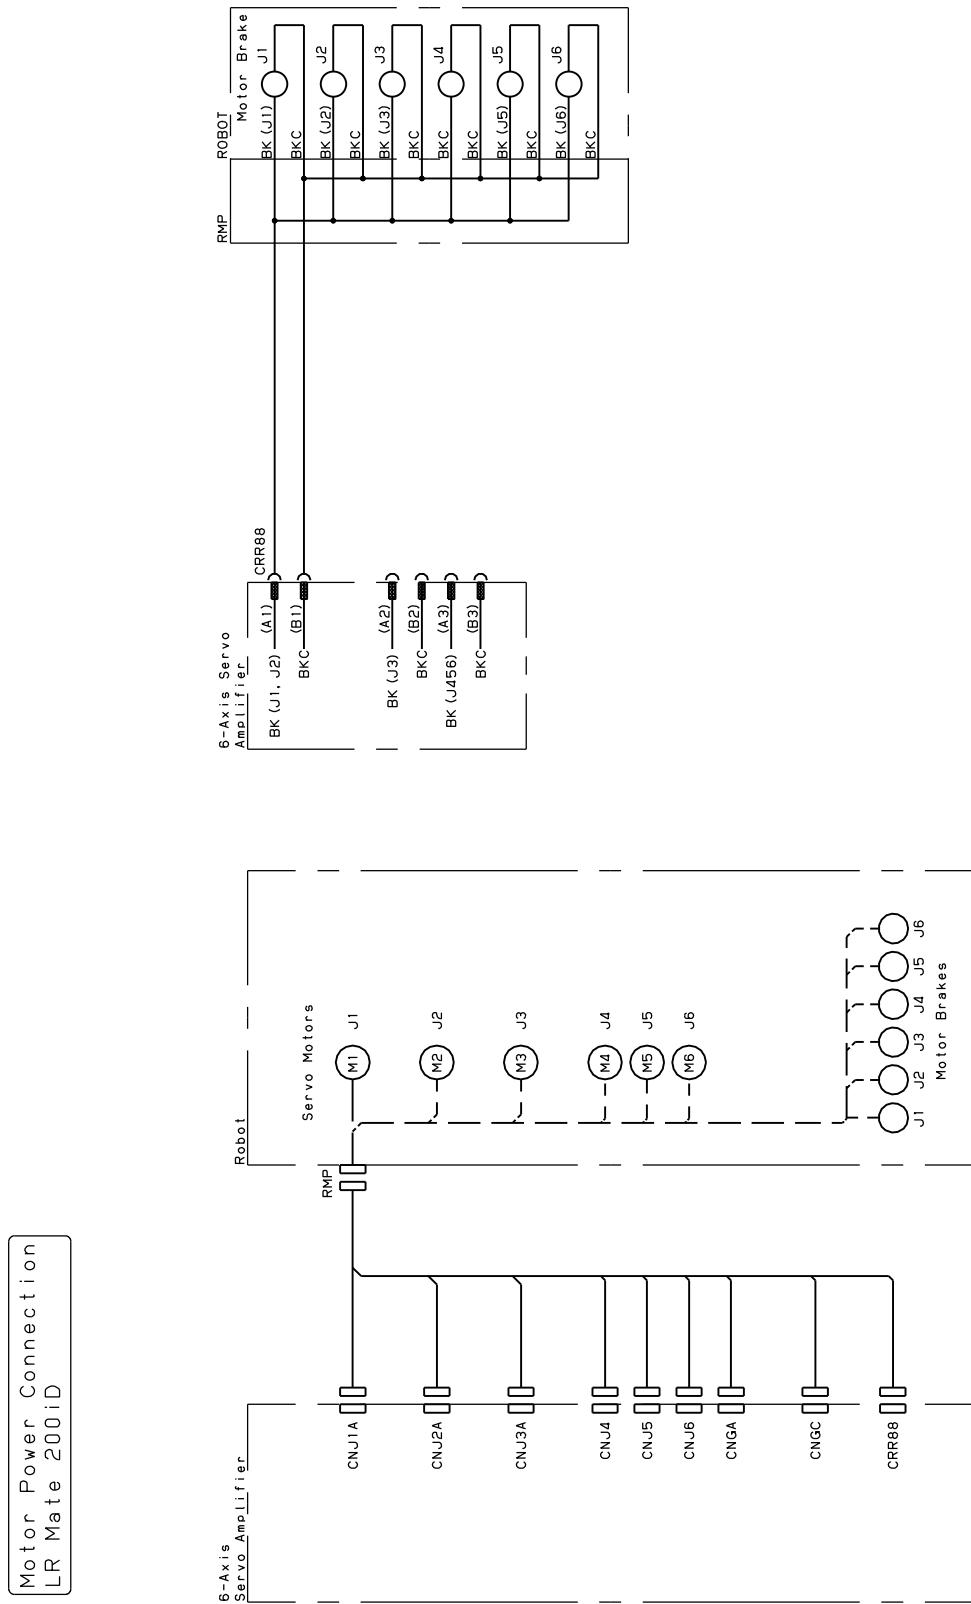

**Fig.A (k) Motor power connection
LR Mate 200iD (6-Axis) ARC Mate 50iD, M-1iA(6-Axis)**

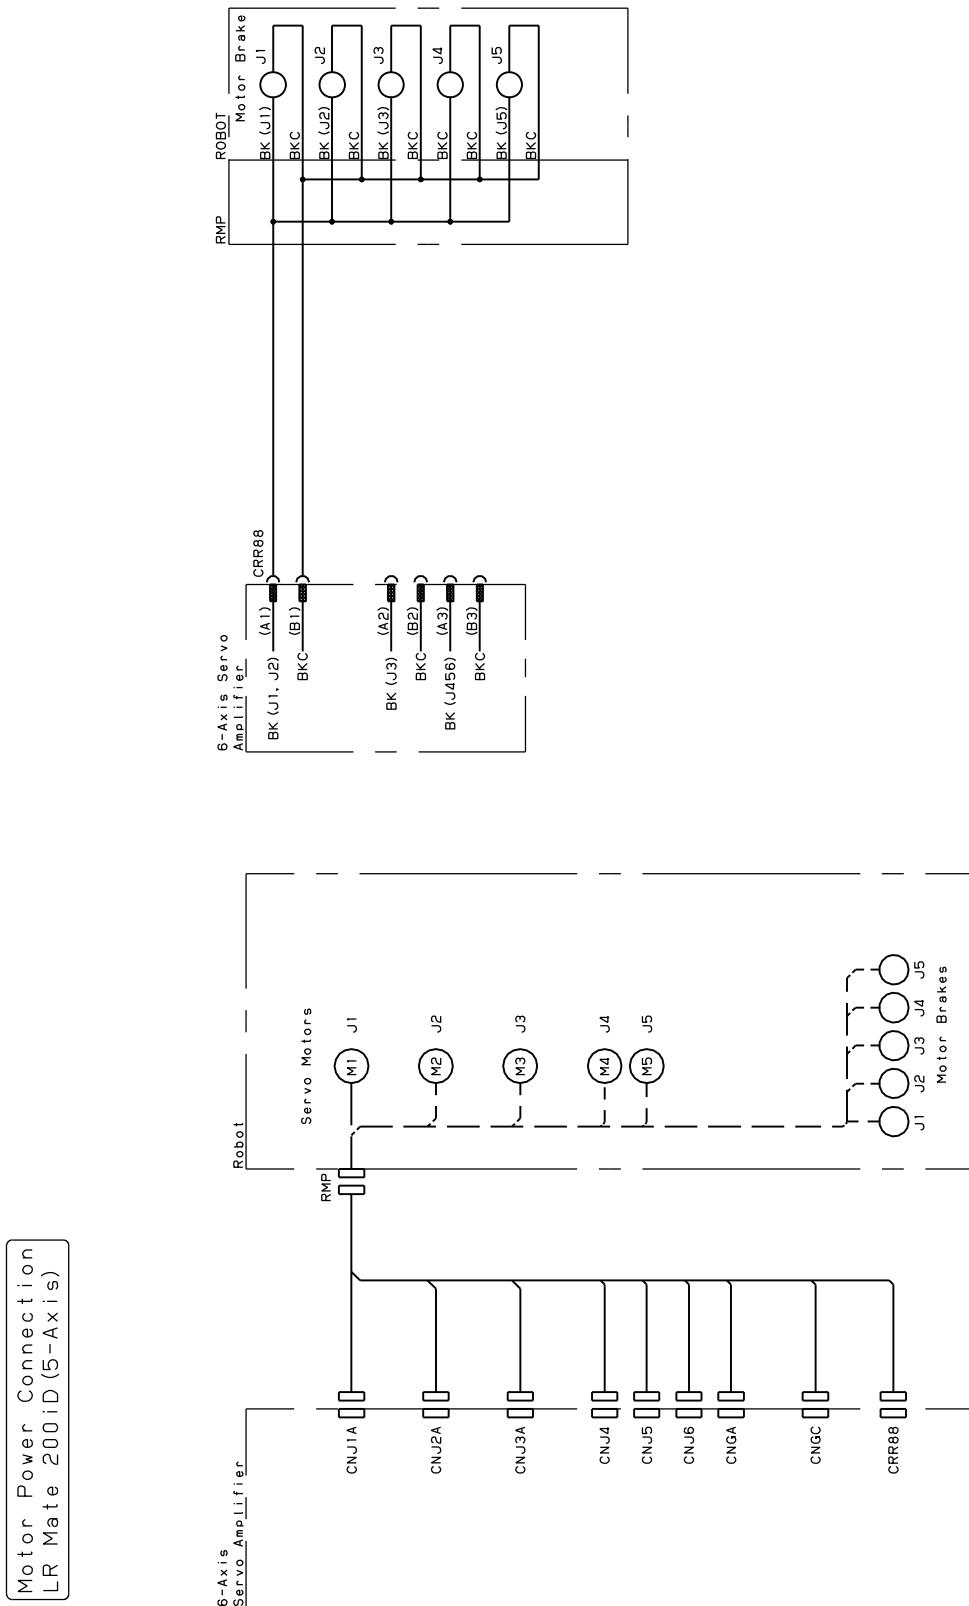

**Fig.A(I) Motor power connection
LR Mate 200iD (5-Axis)**

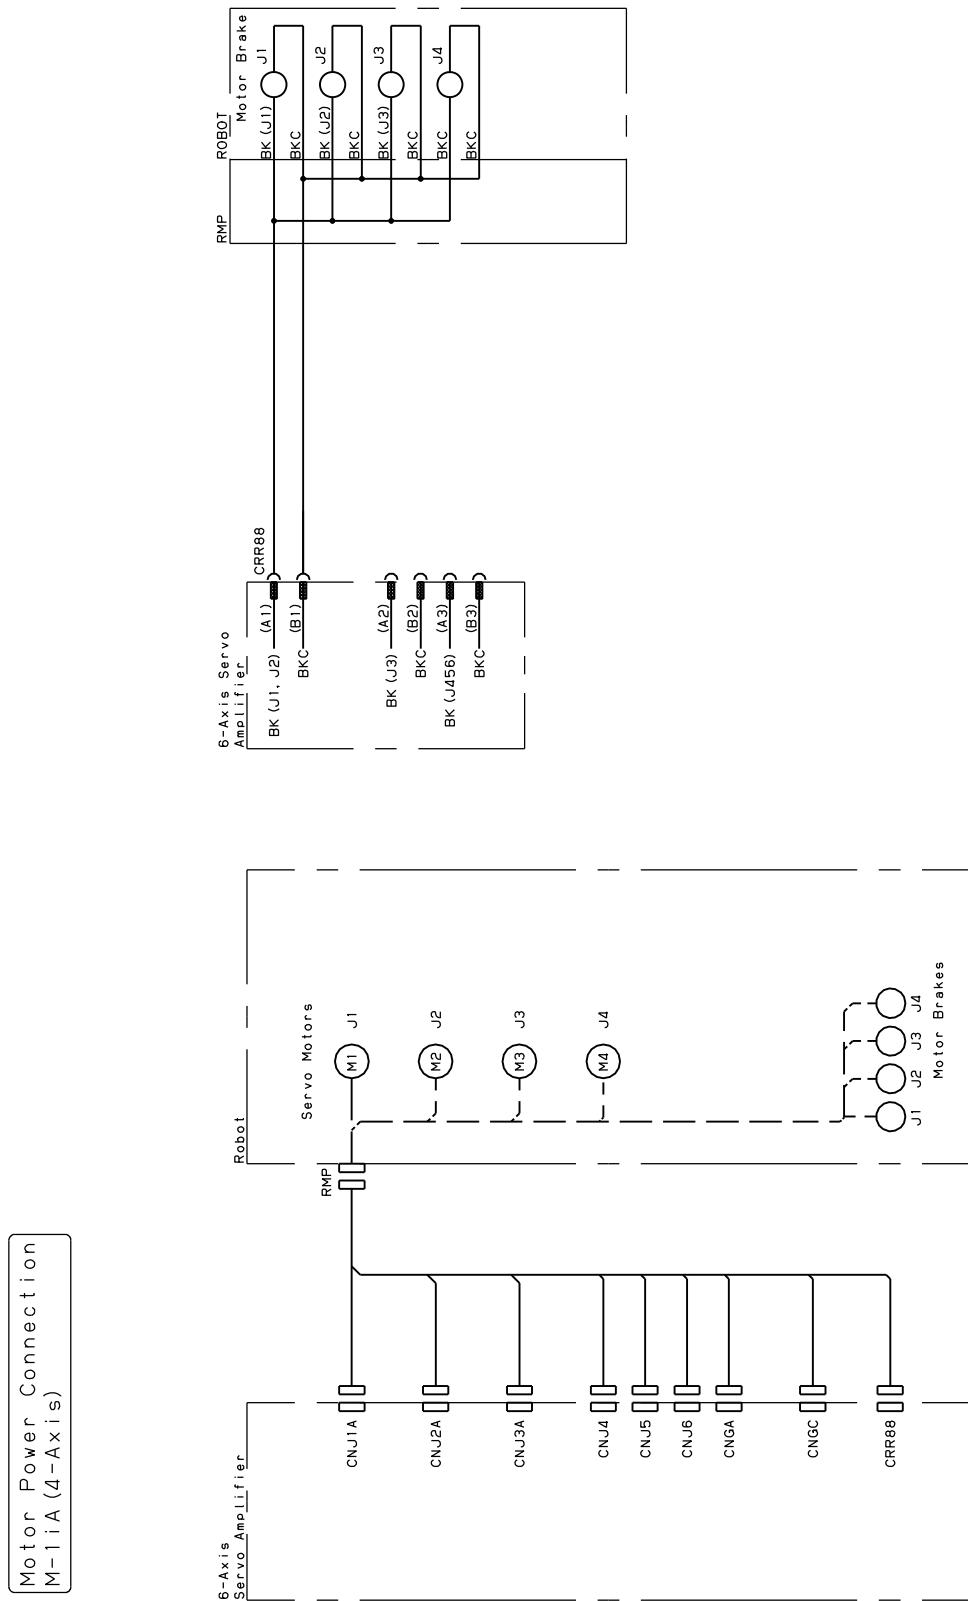

**Fig.A(m) Motor power connection
M-1iA (4-Axis)**

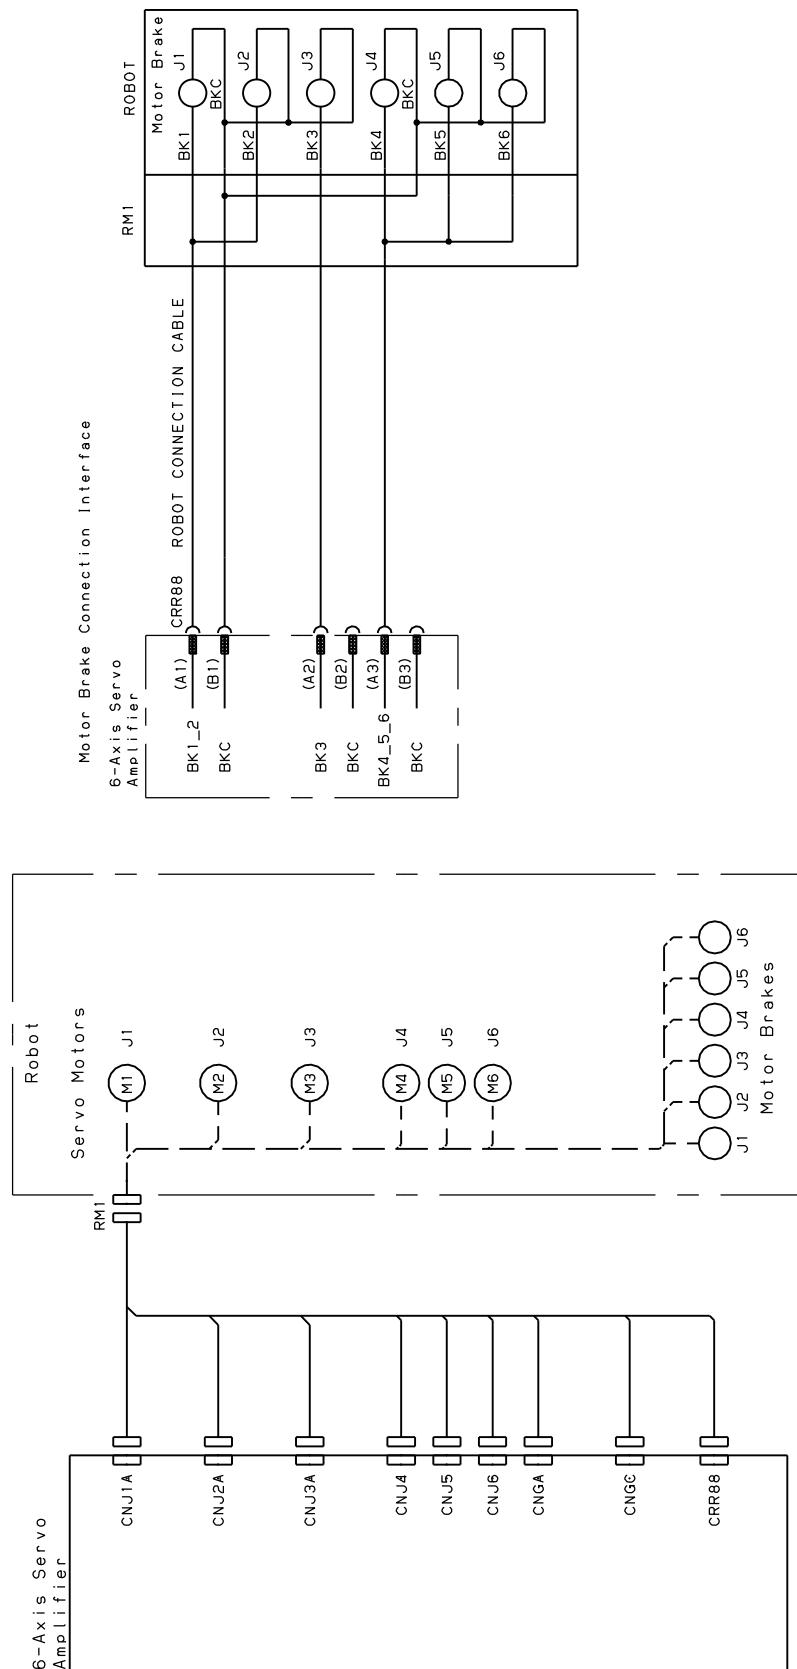


Fig.A(n) Motor power connection
R-2000iC, R-1000iA, M-710iC, M-2iA, M-3iA

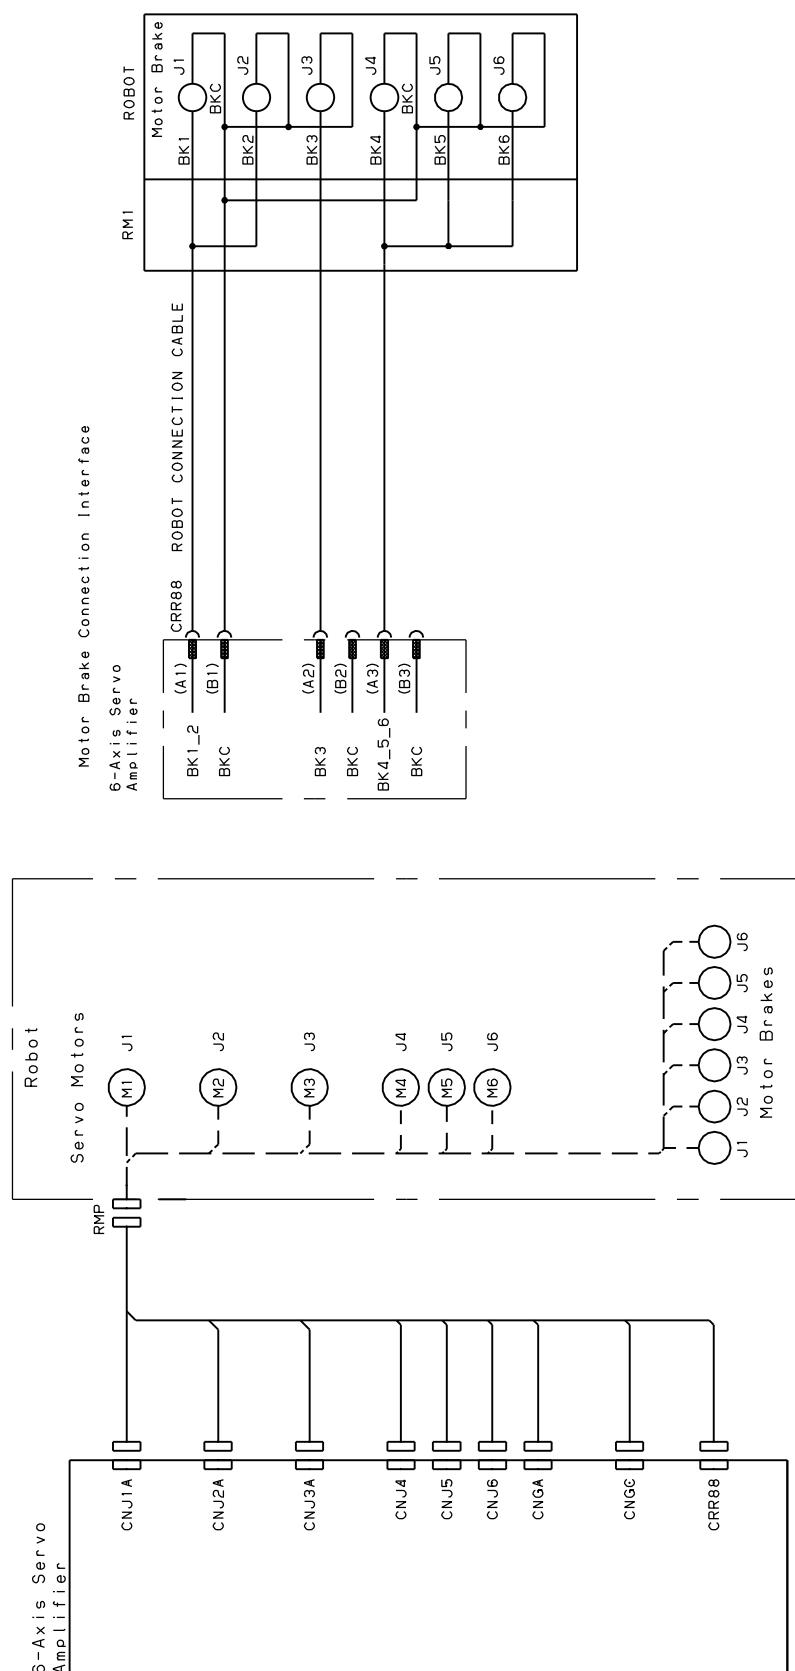


Fig.A(o) Motor power connection
ARC Mate 100iC, ARC Mate 120iC, M-10iA, M-20iA, ARC Mate 0iB, R-0iB

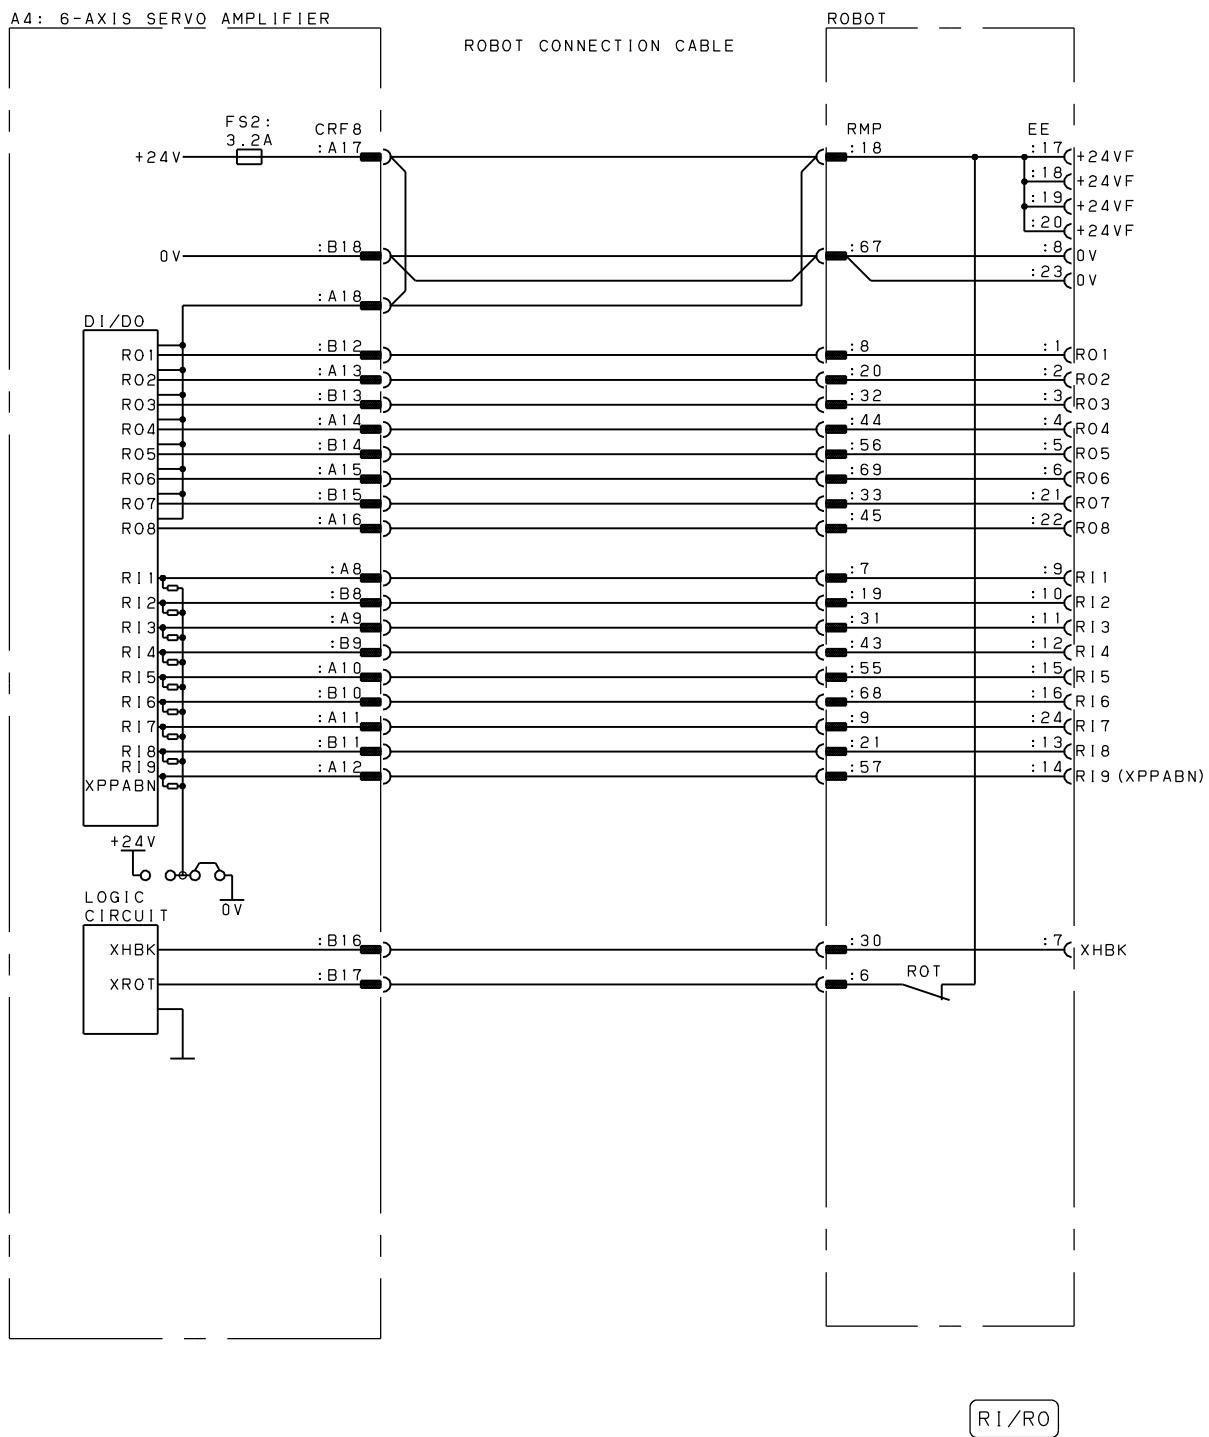


Fig.A(p) RI/RO connection diagram

(LR Mate 200iD, ARC Mate 50iD, ARC Mate 100iC, ARC Mate 120iC, M-10iA, M-20iA, ARC Mate 0iB, R-0iB)
 (There are many type EE connector of mechanical unit. The detail is shown on the mechanical unit manual.)

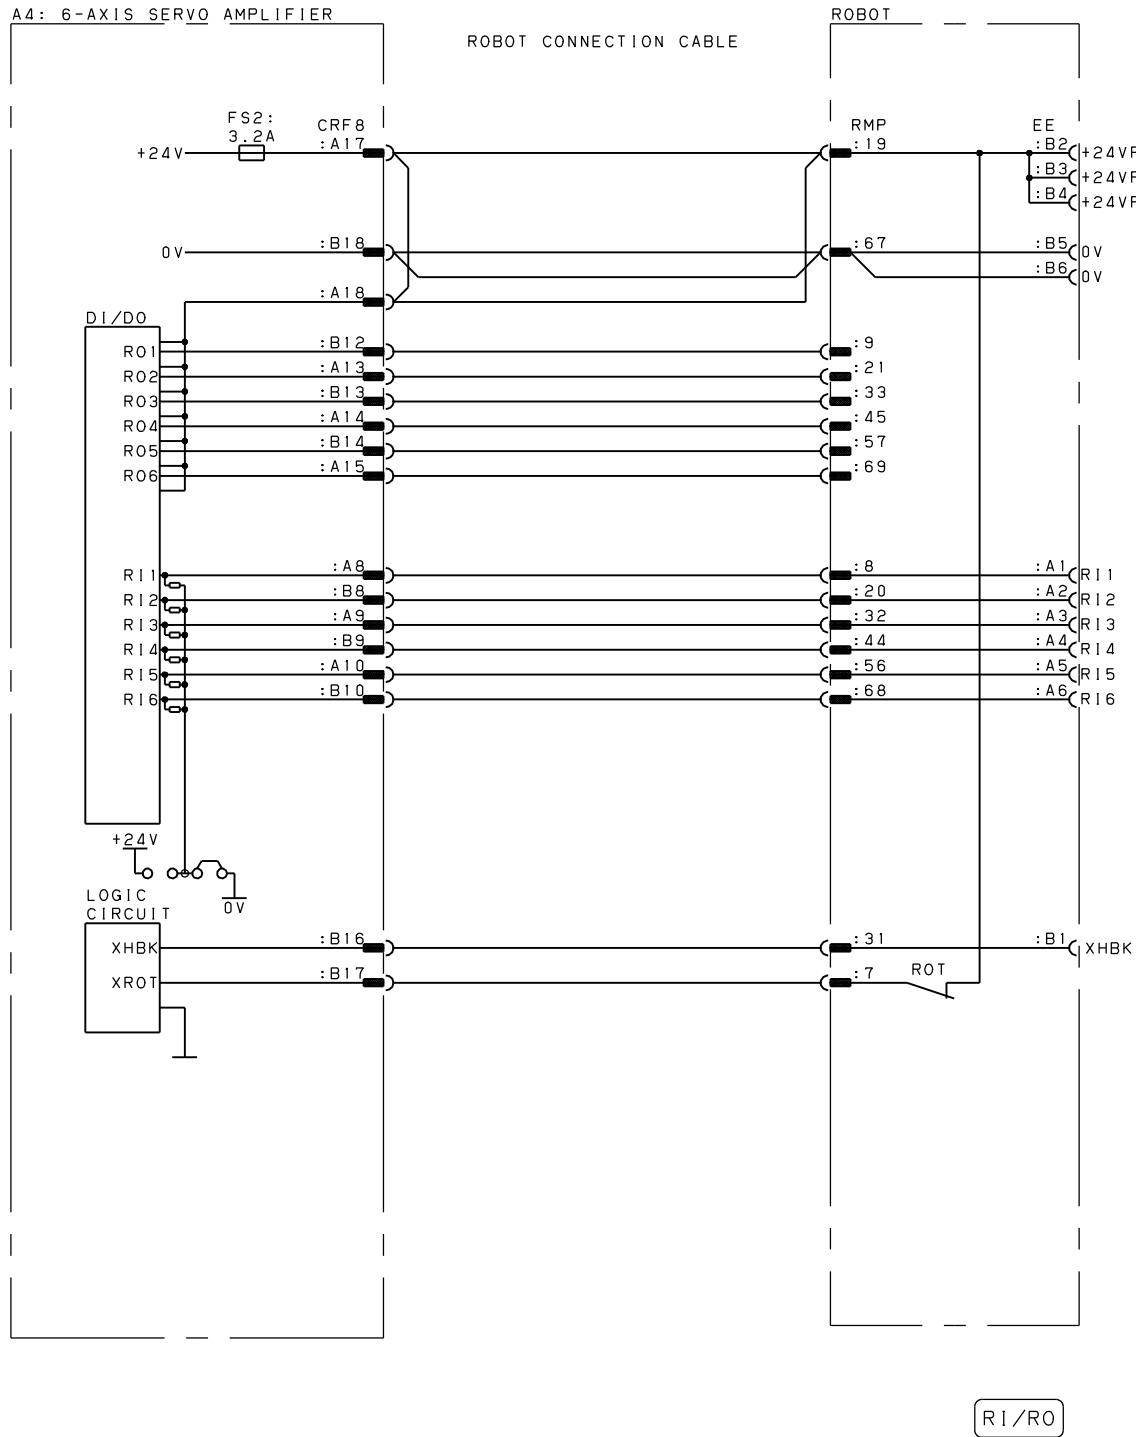


Fig.A(q) RI/RO connection diagram (M-1iA)

(There are many type EE connector of mechanical unit. The detail is shown on the mechanical unit manual.)

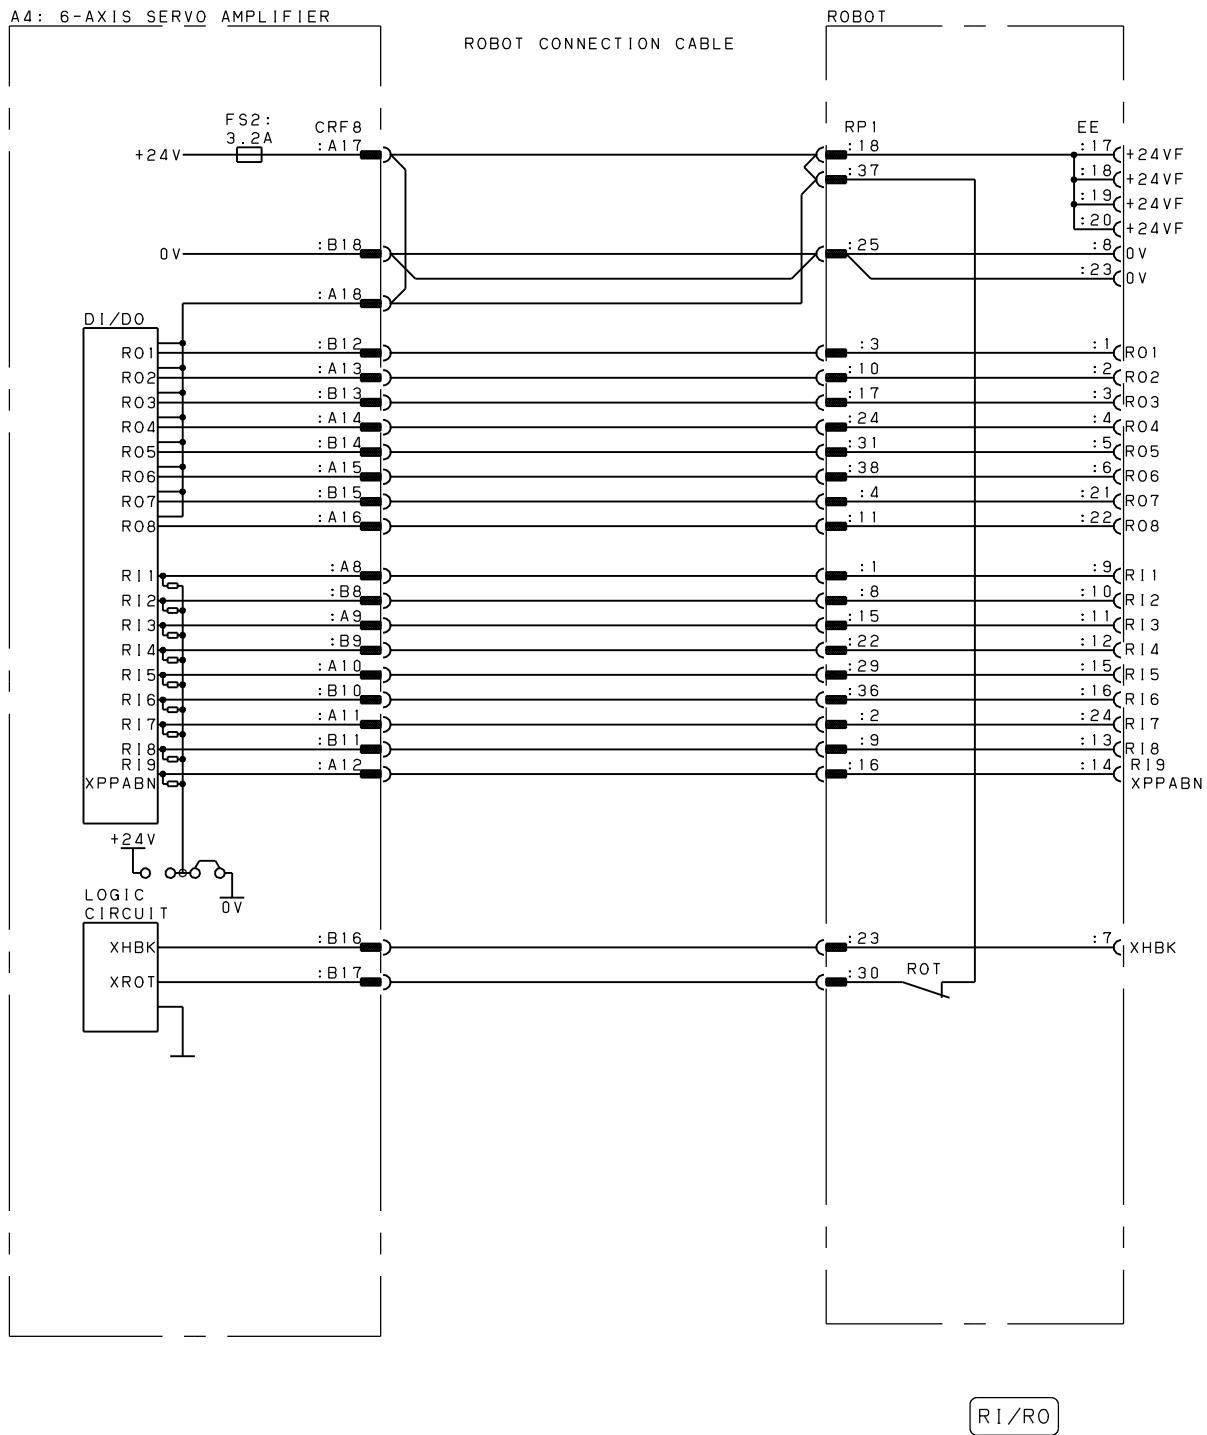


Fig.A(r) RI/RO connection diagram (R-2000iC, R-1000iA, M-710iC)
 (There are many type EE connector of mechanical unit. The detail is shown on the mechanical unit manual.)

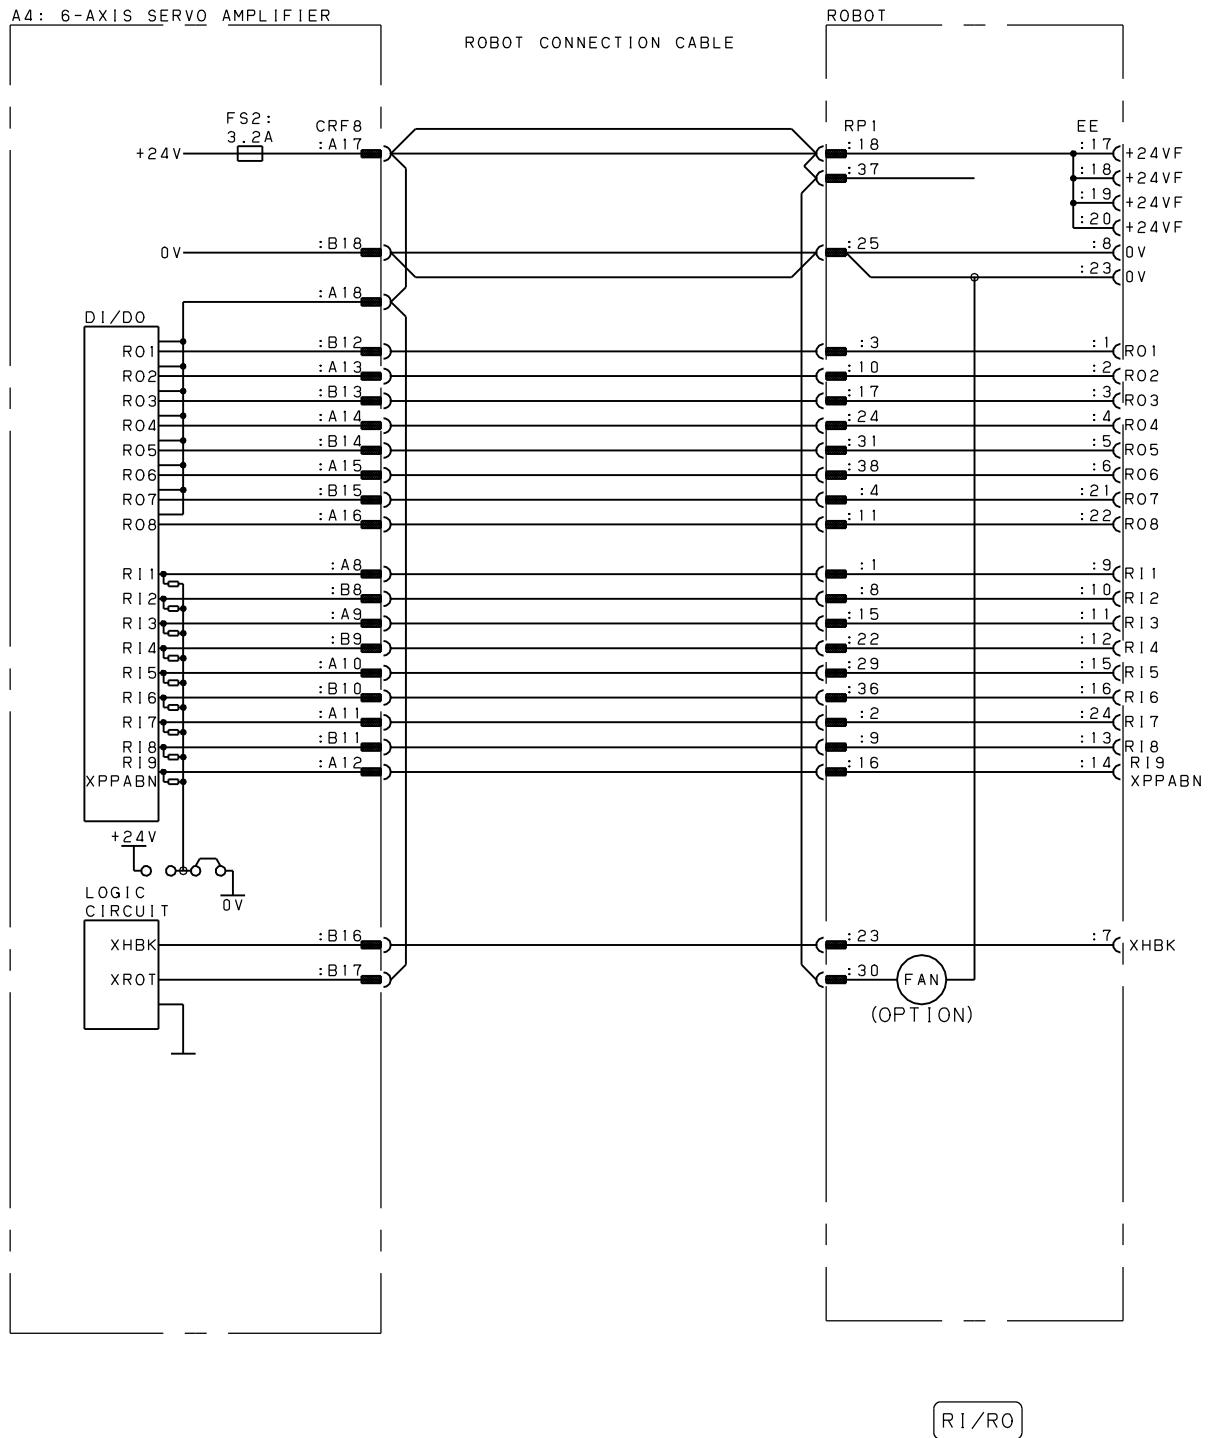


Fig.A(s) RI/RO connection diagram (M-2iA, M-3iA)
 (There are many type EE connector of mechanical unit. The detail is shown on the mechanical unit manual.)


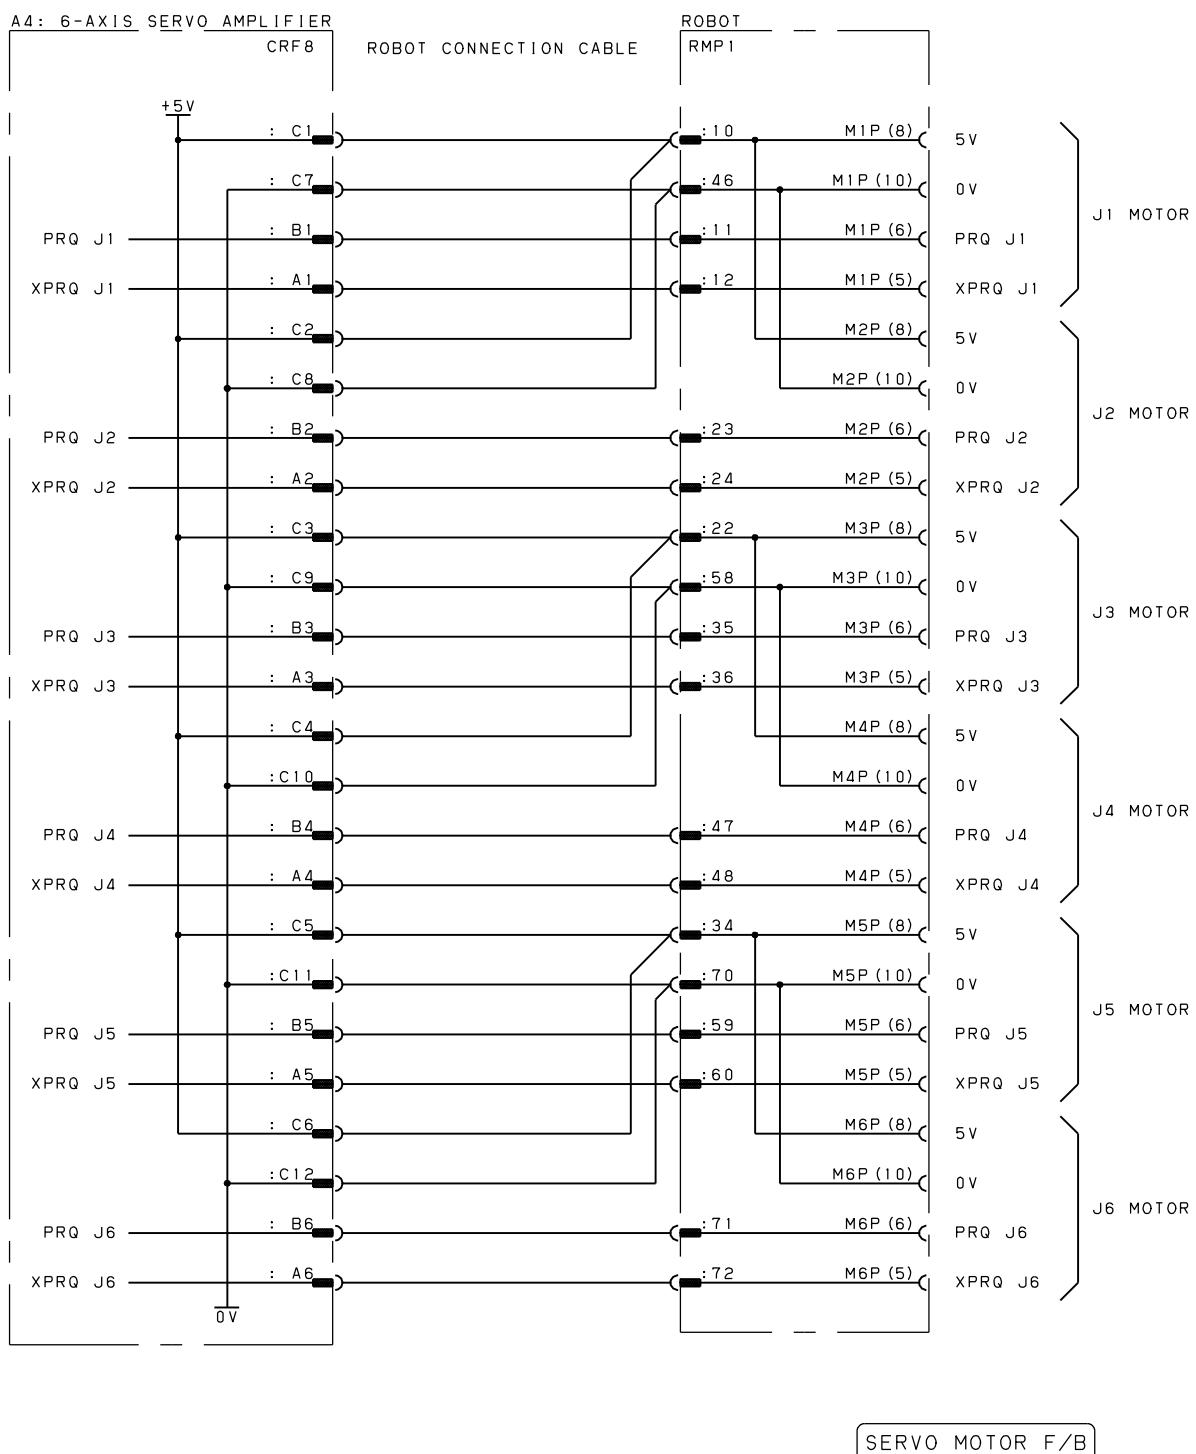


Fig.A(t) Pulsecoder signal connection diagram
(LR Mate 200iD, ARC Mate 50iD, ARC Mate 100iC, ARC Mate 120iC, M-10iA, M-20iA, ARC Mate 0iB, R-0iB)

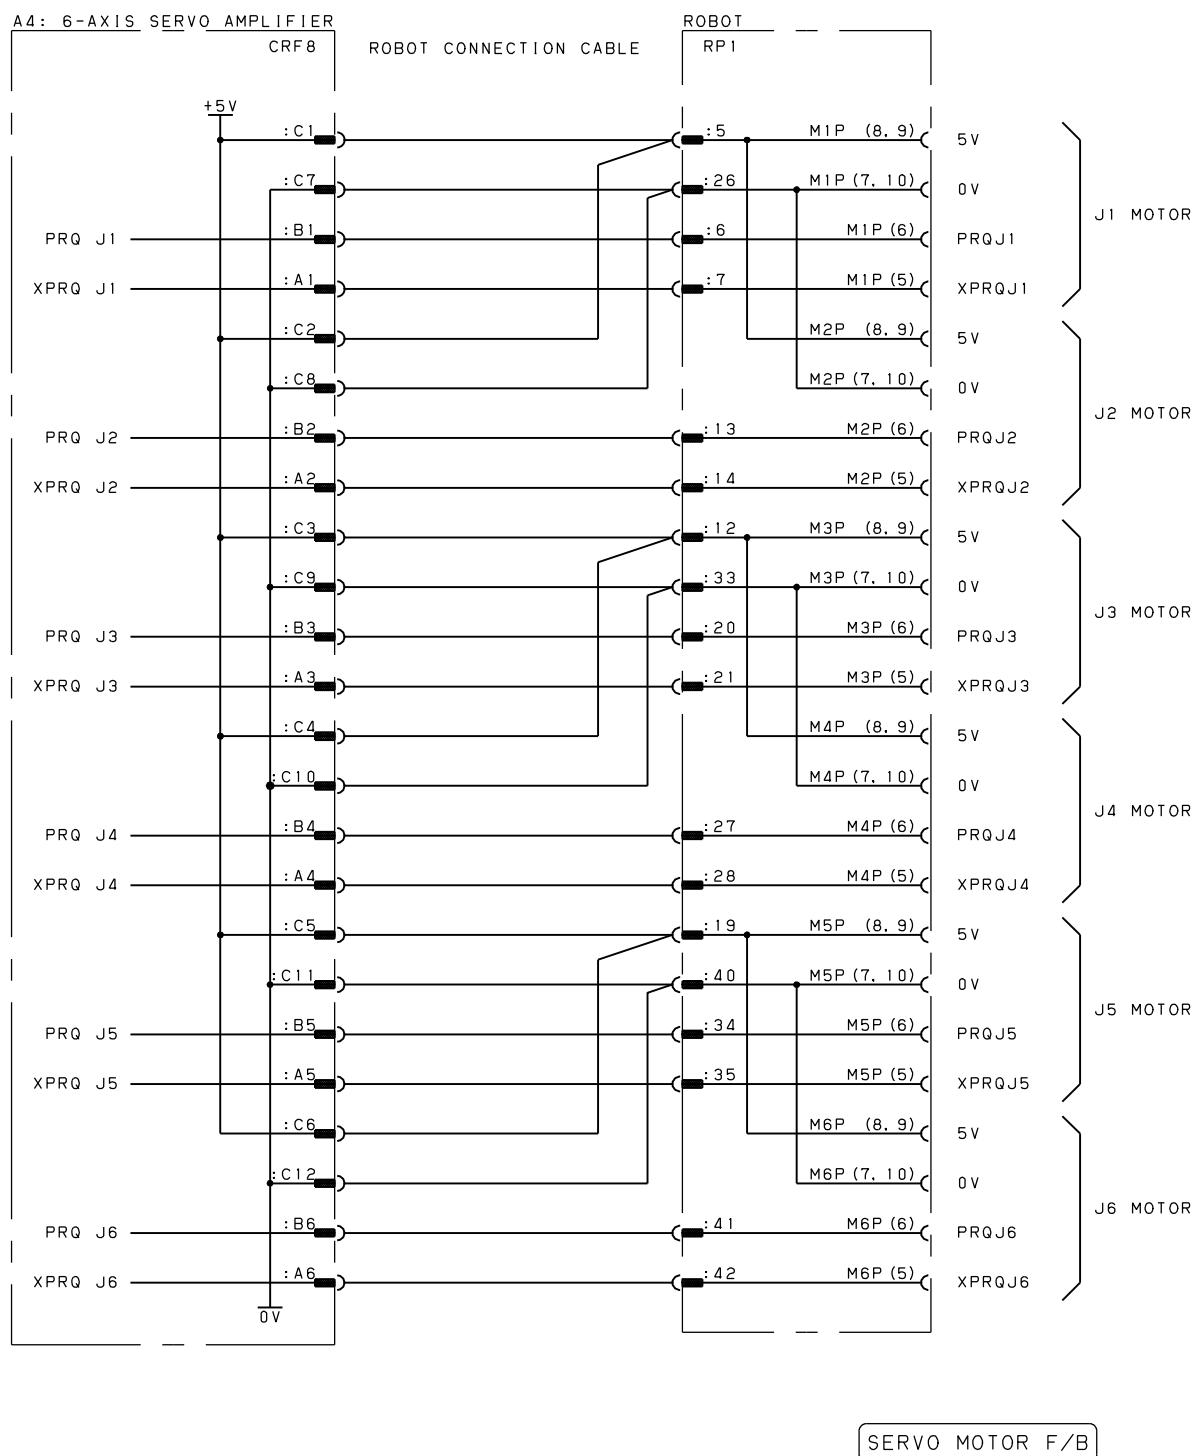

**Fig.A(u) Pulsecoder signal connection diagram
(R-2000iC, R-1000iA, M-710iC, M-2iA, M-3iA)**

RMP (Pulse/Encoder Feedback Signal & R/I/RO) (MOTOR Power & Brake)	
1 BK (J1)	13 BK (J2) 25 BK (J3) 37 BK (J4) 49 BK (J5) 61 BK (J6)
2 J1U1	14 J2U1 26 J3U1 38 50 62 BK C
3 J1V1	15 J2V1 27 J3V1 39 J4U1 51 J5U1 63 J6U1
4 J1W1	16 J2W1 28 J3W1 40 J4V1 52 J5V1 64 J6V1
5 J1G1	17 J2G1 29 J3G1 41 J4W1 53 J5W1 65 J6W1
6 XROT	18 24VF 30 XHBK 42 JAG1 54 J5G1 66 J6G1
7 R11	19 R12 31 R13 43 R14 55 R15 67 0V
8 R01	20 R02 32 R03 44 R04 56 R05 68 R16
9 R17	21 R18 33 R07 45 R08 57 R18 (WRAM) 69 R06
10 5V (J1, J2)	22 5V (J3, J4) 34 5V (J5, J6) 46 V (J1, J2) 58 V (J3, J4) 70 V (J5, J6)
11 PRQJ1	23 PRQJ2 35 PRQJ3 47 PRQJ4 59 PRQJ5 71 PRQJ6
12 XPRQJ1	24 XPRQJ2 36 XPRQJ3 48 XPRQJ4 60 XPRQJ5 72 XPRQJ6
13 XPRQJ1	24 XPRQJ2 36 XPRQJ3 48 XPRQJ4 60 XPRQJ5 72 XPRQJ6

Fig.A(v) Mechanical unit interface

Mechanical Unit Interface
(M-1iA)

Mechanical Unit Interface
(LR Mate 200iD, ARC Mate 50iD, ARC Mate 100iC,
ARC Mate 120iC, M-10iA, M-20iA, ARC Mate 0iB, R-0iB)

RP1 (Pulse encoder Feedback Signal & R/R0)		RM1 (MOTOR Power & Brake)		RM1 (Pulse encoder Feedback Signal & R/R0)	
1 R11	8 R12	15 R13	22 R14	29 R15	36 R16
2 R17	9 R18	16 R19	23 XHBK	30 XROT	37 24Vf-3
3 R01	10 R02	17 R03	24 R04	31 R05	38 R06
4 R07	11 R08	18 24Vf-1	25 0V-2	32 S2+	39 S2-
5 5V-1	12 5V-2	19 5V-5	26 0V-3	33 0V-5	40 0V-7
6 PROJ1	13 PROJ2	20 PROJ3	27 PROJ4	34 PROJ5	41 PROJ6
7 XPROJ1	14 XPROJ2	21 XPROJ3	28 XPROJ4	35 XPROJ5	42 XPROJ6
1 J1V1	14 J1W1	24 J1W1	34 J1G1	1 J1V1	24 J1W1
2 J1U1	15 J1V1	25 J1W1	35 J1G1	2 J1U1	15 J1V1
3 J1U1	16 J2V1	26 J2W1	36 J1G1	3 J1U1	16 J2V1
4 J2U1	17 J2V1	27 J2W1	37 J2G1	4 J2U1	16 J2V1
5 J2U1	18 J3V1	28 J3W1	38 J2G1	5 J2U1	17 J2V1
6 J3U1	19 J3V1	29 J3W1	39 J3G1	6 J3U1	18 J3V1
7 J3U1	20 J4V1	30 J4W	40 J4G1	7 J3U1	19 J3V1
8 J4U	21 J5V1	41 J5G1	42 J5G1	8 J4U1	20 J4V1
9 J5U	22 J6V1	43 J6G1	43 J6G1	9 J5U1	21 J5V1
10 J6U	23 J6V1	44 BK4	44 BK4	10 J6U1	21 J5V1
11 BK1	22 J6V1	45 BK5	45 BK5	11 BK1-2	22 J6V1
12 BKC	23 BK2	33 BK3	46 BK6	12 (J1,J2,J3)	23 BK1-2
13 BKC				13 (J4,J5,J6)	33 BK3
					46 BK4-5-6 (J6)

Fig.A(w) Mechanical unit interface

Mechanical Unit Interface
(R-2000iC, R-1000iA, M-710iC)

Mechanical Unit Interface
M-2iA, M-3iA

B SPECIFICATIONS OF PERIPHERAL DEVICE INTERFACE

B.1 SIGNAL

The following table lists the I/O signals used for the peripheral device interface in the R-30iB Mate controller.

Input signals (Refer to B.3.1)	
Signal	Description
*IMSTP	Instantaneous stop signal
*HOLD	Hold signal
*SFSPD	Safety speed signal
CSTOP1	Cycle stop signal
FAULT_RESET	Alarm release signal
START	Cycle start signal
HOME	Robot service request/program number select signal (*1)
ENBL	Enabling signal
RSR1/PNS1	Robot service request/program number select signal (*1)
RSR2/PNS2	Robot service request/program number select signal (*1)
RSR3/PNS3	Robot service request/program number select signal (*1)
RSR4/PNS4	Robot service request/program number select signal (*1)
RSR5/PNS5	Robot service request/program number select signal (*1)
RSR6/PNS6	Robot service request/program number select signal (*1)
RSR7/PNS7	Robot service request/program number select signal (*1)
RSR8/PNS8	Robot service request/program number select signal (*1)
PNSTROBE	PNS strobe signal
PROD_START	Automatic operation start signal
DI01	General-purpose input signal
DI02	General-purpose input signal
DI03	General-purpose input signal
DI04	General-purpose input signal
DI05	General-purpose input signal
DI06	General-purpose input signal
DI07	General-purpose input signal
DI08	General-purpose input signal
DI09	General-purpose input signal
DI10	General-purpose input signal
DI11	General-purpose input signal
DI12	General-purpose input signal
DI13	General-purpose input signal
DI14	General-purpose input signal
DI15	General-purpose input signal
DI16	General-purpose input signal
DI17	General-purpose input signal
DI18	General-purpose input signal
DI19	General-purpose input signal
DI20	General-purpose input signal
DI21	General-purpose input signal
DI22	General-purpose input signal

NOTE

*1: RSR: Robot Service Request (RSR5 to RSR8 are optional)
 PNS: Program Number Select Input (optional)
 Whether RSR is used or PNS is used can be preset.

Output signals (Refer to B.3.2)

Signal	Description
CMDENBL	Command acceptance enabled signal
SYSRDY	System ready signal
PROGRUN	Program run signal
PAUSED	Program paused signal
HELD	Held signal
FAULT	Alarm signal
ATPERCH	Reference point signal
TPENBL	Teach pendant enabled signal
BATALM	Battery alarm signal
BUSY	Operating signal
ACK1/SNO1	RSR acknowledge/Selected program number signal
ACK2/SNO2	RSR acknowledge/Selected program number signal
ACK3/SNO3	RSR acknowledge/Selected program number signal
ACK4/SNO4	RSR acknowledge/Selected program number signal
ACK5/SNO5	RSR acknowledge/Selected program number signal
ACK6/SNO6	RSR acknowledge/Selected program number signal
ACK7/SNO7	RSR acknowledge/Selected program number signal
ACK8/SNO8	RSR acknowledge/Selected program number signal
SNACK	PNS acknowledge signal
_____	Not used (for future expansion)
DO01	General-purpose output signal
DO02	General-purpose output signal
DO03	General-purpose output signal
DO04	General-purpose output signal
DO05	General-purpose output signal
DO06	General-purpose output signal
DO07	General-purpose output signal
DO08	General-purpose output signal
DO09	General-purpose output signal
DO10	General-purpose output signal
DO11	General-purpose output signal
DO12	General-purpose output signal
DO13	General-purpose output signal
DO14	General-purpose output signal
DO15	General-purpose output signal
DO16	General-purpose output signal
DO17	General-purpose output signal
DO18	General-purpose output signal
DO19	General-purpose output signal
DO20	General-purpose output signal

B.2 SETTING COMMON VOLTAGE

All process I/O boards have a jumper to set the common voltage of input signals to 0 V or 24 V. The system automatically adjusts the polarity by software according to the status of this pin. Therefore, you can operate the system without being concerned about the setting of the common voltage.

To ensure safety, the common reference voltage of the following four signals, is remains at +24V.

*IMSTP
*HOLD
*SFSPD
CSTOPI

B.3 I/O SIGNALS

B.3.1 Input Signals

This section describes the specifications of each input signal.

- (1) Instantaneous stop signal (input) *IMSTP
Effective: At any time
Function: Use the normally closed switch because it is a reverse signal. The system turns off power to the servo unit when the *IMSTP is open (turned off). Do not use *IMSTP as safety relevant signal. For safety purpose, use the external emergency stop signal.
- (2) Alarm release signal (input) FAULT RESET
Effective: In the alarm status
Function: The FAULT RESET signal releases the alarm status. If the servo unit has been turned off, it also turns on the unit. At the same time, the alarm display on the teach pendant (the top line) is cleared.
Description: This signal releases only the alarm status. It does not re-start execution of the program. The robot will keep running if the signal is triggered "ON" during operation.
- (3) Hold signal (input) *HOLD
Effective: At any time
Function: Use the normally-closed switch because it is a reverse signal. The *HOLD signal has the same function as the hold button on the teach pendant. It halts the current program and stops the operation of the robot. While this signal is being input, the held signal (output) HELD is turned on and the robot cannot be operated.
- (4) Start signal (input) START
Effective: When the command acceptance enabled signal (output) CMDENBL is turned on. See the description of CMDENBL in Section B.3.2 (1) for details.
Function: This input signal starts the selected program at the falling edge when the signal is turned off after being turned on. Its function differs according to the setting of parameter \$SHELL_CFG.\$CONT_ONLY.
 - If parameter \$SHELL_CFG.\$CONT_ONLY is set to DISABLED, the START signal starts the program which has been selected from the teach pendant. By default, the program starts from the current cursor position.
 - If parameter \$SHELL_CFG.\$CONT_ONLY is set to ENABLED, the START signal only resumes the execution of the temporarily held program. To execute an inactivated program from the start, input the PROD_START signal.

(5) Cycle stop signal (input) CSTOPI

Effective: At any time

Function:

- If parameter \$SHELL_CFG.\$USE_ABORT is set to DISABLED, the CSTOPI signal releases the program from the wait status caused by an RSR. It does not stop the execution of the current program and allows it to continue processing (by default).
- If parameter \$SHELL_CFG.\$USE_ABORT is set to ENABLED, the CSTOPI signal immediately cancels the execution of the current program. The program returns to the status in which it was before execution, and the information for the subprogram to return to the main program is lost. At the same time, this signal also releases the program from the wait status caused by RSR.

(6) Enabling signal (input) ENBL

Effective: At any time

Function: If the ENBL signal is turned off, the operation of the robot or the activation of a program is inhibited, and the execution of the current program is suspended.

(7) Safety speed signal (input) *SFSPD

Effective: At any time

Function:

- Use the normally-closed switch because it is a reverse signal. Usually this switch should be connected to safety fence. It must be set normally on.
- Since the *SFSPD signal is counted as a remote condition, such input signals as RSR and START to the peripheral device interface cannot take effect unless this signal is turned on.
- If this signal is turned from on to off during robot operation, the execution of the current program is suspended. At the same time, the overriding value is switched to a preset value (parameter \$SCR. \$FENCEOVER.)
- As long as this signal is off, the overriding value cannot be increased beyond the preset value (\$SCR.\$SFJOGOVLIM: For jog, \$SCR. \$SFRUNOVLIM : For test execution.)

(8) Robot service request signal (input) RSR1/RSR2/RSR3/RSR4

Effective: When the command acceptance enabled signal (output) CMDENBL is turned on. See the description of CMDENBL in Section B.3.2 (1) for details.

Function:

- The user can choose between RSR and PNS (optional), although they cannot be used simultaneously.
- Four input signals, RSR1 to RSR4, are used.
- If a signal is input to an RSR input, a specified program is started. The program number can be set by a menu.
- If another program has already started processing, the newly activated program enters the wait status. As soon as the current program terminates, the waiting program starts processing.
- By using an RSR instruction, each RSR in a program can be enabled or disabled.
- A menu is provided to register the program number of a specified program when each RSR is input. (Refer to the application manual for details of the menu).

1/8		
1 Job selection:	RSR	RSR or PNS
2 RSR1 program number:	12	0..9999
3 RSR2 program number:	23	0..9999
4 RSR3 program number:	5	0..9999
5 RSR4 program number:	64	0..9999
6 Base number:	100	0..9999
7 Acknowledge:	Enabled	Enabled or disabled
8 Acknowledge pulse width:	250 msec	0..9999msec
=		
[TYPE]		

- When an RSR is input, the program whose program name consists of the specified program number plus a base value is started. For example, if a signal is input to RSR2 when program number 23 is registered in RSR2, the program to be started is the one with the program name calculated from the expression RSR + (RSR2 program number + base number), i.e., RSR0123. The base number is stored in parameter \$SHELL_CFG.\$JOB_BASE, and can be changed in a program with a parameter instruction. (For example, \$SHELL_CFG. \$JOB_BASE =100). In this way, the combination of programs which can be started by RSRs can be changed.
- Whether the system should output an acknowledge signal to an RSR can be selected from the menu. If so specified, a pulse is output from the signal corresponding to the RSR, one of signals ACK1 to ACK4, when the input of the RSR is accepted. From the same menu, the width of the pulse can also be specified. It is possible to accept other RSRs while outputting an acknowledge signal.
- Input of a CSTOPIT signal can clear the program queue waiting for execution after acceptance of RSRs.

(9) PNS/PNSTROBE (input)

Signal name: PNS: Program number select

PNSTROBE: Strobe input for PNS

Effective: When the command acceptance enabled signal (output) CMDENBL is turned on. See the description of CMDENBL in Section B.3.2 (1) for details.

Function:

- The PNS/PNSTROBE signal selects whether the RSR function is used or the PNS function (optional) is used. If the PNS function is enabled, the RSR function cannot be used.
- The eight signals PNS1 to PNS8 are used to specify a program at the instant the strobe signal PNSTROBE rises.
- A menu is provided to specify the information about PNS.

<pre> </pre> <p style="text-align: center;">1/3</p> <table border="0"> <tr><td>1 Job selection:</td><td>PNS</td><td>RSR or PNS</td></tr> <tr><td>2 Base number:</td><td>100</td><td>0..9999</td></tr> <tr><td>3 Acknowledge pulse width:</td><td>250 msec</td><td>0..9999msec</td></tr> </table> <p style="text-align: center;">[TYPE]</p>	1 Job selection:	PNS	RSR or PNS	2 Base number:	100	0..9999	3 Acknowledge pulse width:	250 msec	0..9999msec		
1 Job selection:	PNS	RSR or PNS									
2 Base number:	100	0..9999									
3 Acknowledge pulse width:	250 msec	0..9999msec									

If a number other than zero is entered to PNS input, a program is selected whose program number is the entered value plus the base number. For example, if the PNS value is 23, the program to be started has the program name calculated from the expression

PNS + (entered PNS value + base number), i.e., PNS0123.

If zero is entered to PNS input, it is cleared as if no selection has been made.

- A PNS signal, which can only select a program, cannot execute the selected program. The execution of the selected program can only be started after input of automatic operation start signal PROD_START.
- For safety, the selected program cannot be changed from the teach pendant unless PNSTROBE is turned off.
- If a program is selected by PNS, the program number is output to selected program number signal (output) SNO, and a pulse is output to program selection acknowledge signal SNACK. Using these signals, peripheral devices can confirm the correct program has been selected. For the timing of these signals, see the sections describing SNO and SNACK.
- The following operations are effective for the program selected by PNS. You can:
 - Start up a program by input of automatic operation start signal PROD_START
 - Restart the program that has been suspended.
 Inputting the START signal restarts the program selected by PNS when \$SHELL_CFG.\$CONT_ONLY is set to ENABLED.
- Input of CSTOPI cancels execution of the programs selected by PNS when \$SHELL_CFG.\$USE_ABORT is set to ENABLED.

(10) Automatic operation start signal (input) PROD_START

Effective: When the command acceptance enabled signal (output) CMDENBL is turned on. See the description of CMDENBL in Section B.3.2 (1) for details.

Function: This input signal executes the selected program at the falling edge when the signal is turned off after being turned on.

B.3.2 Output Signals

This section describes the specifications of output signals for the peripheral device interface.

(1) Command acceptance enabled signal (output) CMDENBL

Turned on: When the remote conditions are satisfied and the system is not in the alarm status.

Turned off: When the remote conditions are not satisfied or the system is in the alarm status. The remote conditions are satisfied when all of the following are satisfied.

- The teach pendant is in the DISABLED status.
- The remote/local setting is set to REMOTE.
- Parameter \$RMT_MASTER is set to 0 (external interface).

- Signal *SFSPD is set to on, or in the normal status.
- (2) System ready signal (output) SYSRDY
Turned on: When power is applied to the motor of the robot.
Turned off: When power is not applied to the motor of the robot.
- (3) Program run signal (output) PROGRUN
Turned on: When the program is being executed.
Turned off: When the program is not being executed.
- (4) Held signal (output) HELD
This signal is used to check the status of the hold input.
Turned on: When the hold button on the teach pendant (or input) is being pressed down (or turned on).
Turned off: When the hold button on the teach pendant (or input) is not being pressed down (or is turned off).
- (5) Program paused signal (output) PAUSED
This signal is used together with output signal PROGRUN to determine whether a program can be restarted while it is being held.
Turned on: When a program is held and has not been restarted yet. While this signal is on, the program can be restarted and retains information such as that to return from a subprogram to the main program.
Turned off: When a program is being executed or is ready to start. If signal PROGRUN is on, the program is being executed. If signal PROGRUN is off, the program has not been executed and can be started from this status.
- (6) Alarm status signal (output) FAULT
Turned on: When the system is in the alarm status (or an alarm which can stop a program execution is detected.) The indicator lamp does not go on in warning.
Turned off: When the alarm status is released by an alarm release operation.
- (7) Reference point signal (output) ATPERCH
Turned on: When the robot is in the reference position specified in the parameter. (The reference point No.1 in reference point setup screen.)
Turned off: When the robot is not in the reference position specified in the parameter. (The reference point No.1 in reference point setup screen.) Up to three reference positions can be specified, but this signal is output when the robot is in the first reference position. For the other two reference positions, general-purpose signals can be assigned to output as such. (They can be set from the setup screen.)
- (8) Teach pendant enabled signal (output) TPENBL
Turned on: When the teach pendant is enabled.
Turned off: When the teach pendant is disabled.
- (9) Battery alarm signal (output) BATALM
Turned on: When the voltage of the battery for the CMOS memory backup drops below the reference.
Turned off: When the voltage of the battery for the CMOS memory backup is at the normal level.
- (10) Operating signal (output) BUSY
Turned on: When a program is being executed or is being processed from operation panels such as the teach pendant. (This has the same function as that of the BUSY lamp on the teach pendant.)

Turned off: When a program is not being executed nor is being processed from operation panels such as the teach pendant.


(11) RSR acknowledge signals (output) ACK1/ACK2/ACK3/ACK4

These signals are used together with the RSR function. They can be specified to be enabled or disabled from the RSR setup menu.

Turned on: When one of the signals from RSR1 to RSR4 is input and accepted. A pulse whose width is specified from the menu is output to acknowledge the signal.

Turned off: Normally. Since these signals are always output as pulses, they are normally in the off status.

The following chart shows the timing of the RSR input and ACK output.

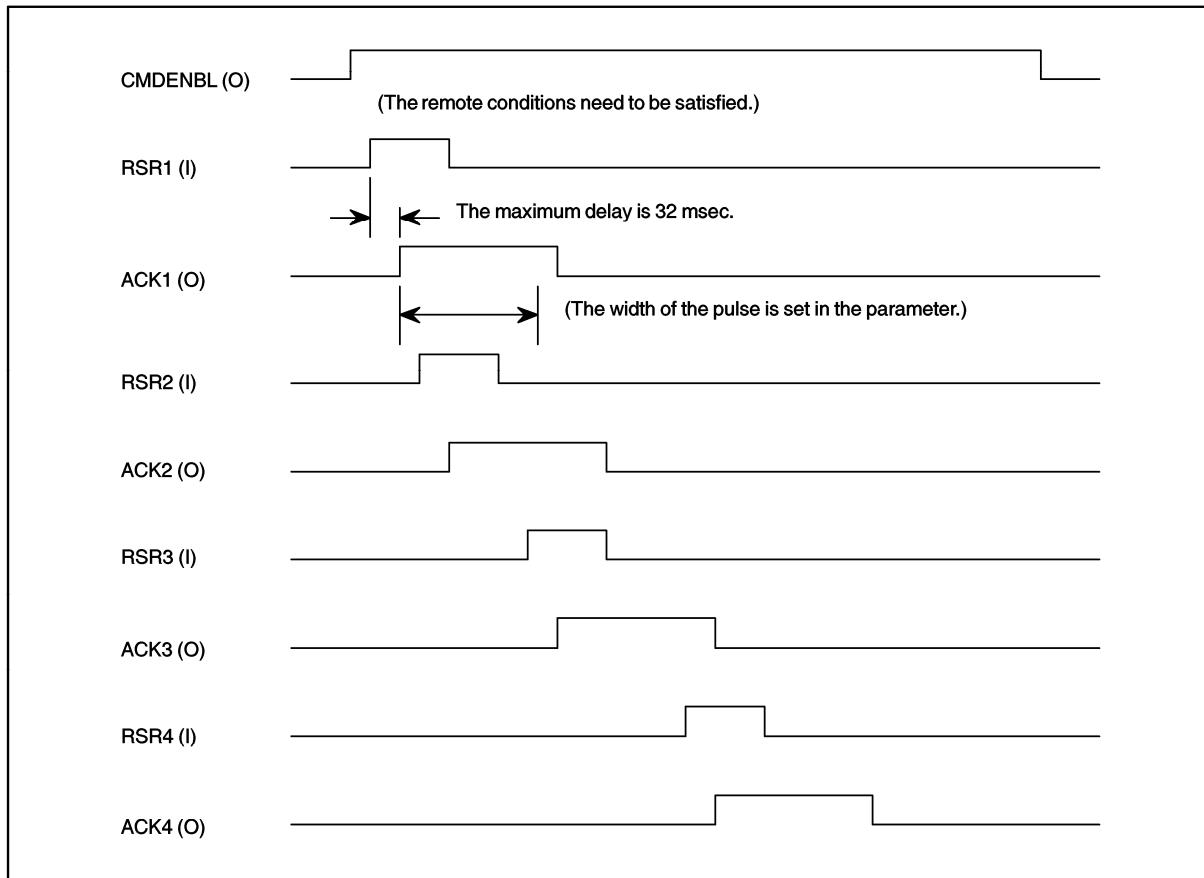


* Other RSR signals can be accepted even when the ACK signal is being output.

(12) PNS acknowledge signal (output) SNO/SNACK

These signals are used together with the PNS function.

Turned on: Whenever the PNS function is enabled. The selected program number is displayed in binary code (SN01 to SN08) on the teach pendant. If the number cannot be represented as an eight-bit number, it becomes zero. After selecting a program by PNS, a pulse is output from signal SNACK as a part of the PNS operation. The width of the pulse can be specified from the menu. See the timing chart below.

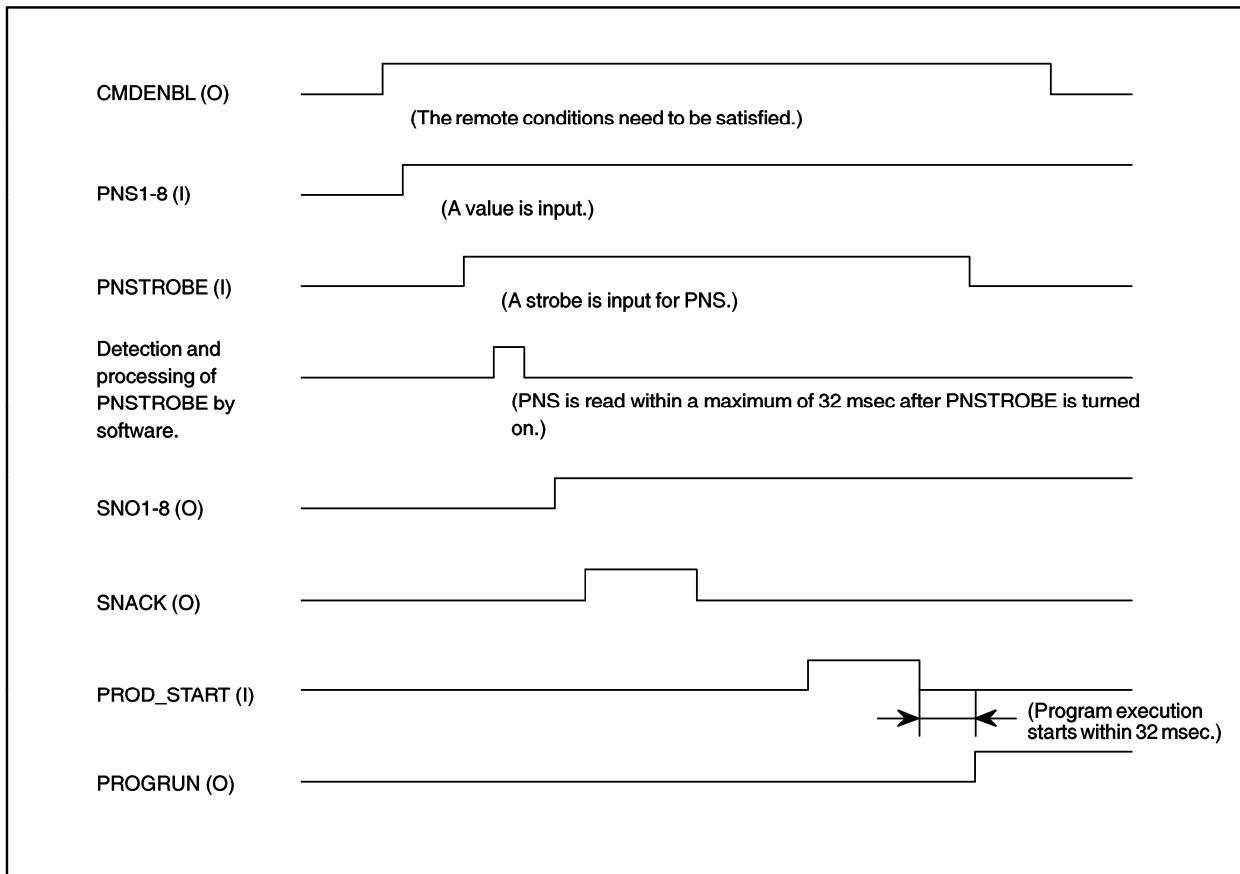

B.4 SPECIFICATIONS OF DIGITAL INPUT/OUTPUT

B.4.1 Overview

This section describes the external specifications of digital and analog input/output in the R-30iB controller.

B.4.2 Input/Output Hardware Usable in the R-30iB Mate Controller

The R-30iB Mate controller can use up to 512 digital input and output points or an equivalent number of analog input and output points. One analog input/output point uses the resources equivalent to those used by 16 digital I/O points.

The R-30iB can use a total of up to 512 I/O points.

The R-30iB controller can use the following I/O hardware.

- Process I/O printed board
- I/O unit model A

The process I/O board and the I/O unit model A can be used together.

B.4.3 Software Specifications

(1) RI/RO

These are signals sent to the connector at the wrist of the robot.

They cannot be assigned (redefined) and are fixed.

The standard format is eight inputs and eight outputs. The number of points that can be used for the connector at the wrist depends on the individual robot.

(2) DI/DO

The signal No. that is determined at hardware can be changed by software operation.

(3) Analog I/O

An analog I/O signal can access the analog I/O port (optional) on the process I/O board or the I/O port on the analog I/O module (used together with the I/O unit model A).

It reads and writes the digital value converted from the analog value of the I/O voltage. It means that the value does not always represent the real I/O voltage.

(4) Group I/O

Group I/O is a function, which can input or output multiple DI/DO signals as binary codes. Any number of continuous signals of up to 16 bits can be set for its use. It can be set in the menu DETAILS on the group I/O screen.

C OPTICAL FIBER CABLE

The R-30iB Mate uses fiber optic cables for communication between the main board and servo amplifiers. Observe the following cautions when handling these fiber optic cables. Handle fiber optic cables with utmost care, especially when installing the unit.

(1) Protection during storage

When the electrical/optical conversion module (mounted on the printed) circuit board and the fiber optic cable are not in use, their mating surfaces must be protected with the lid and caps with which they are supplied. If left uncovered, the mating surfaces are likely to become dirty, possibly resulting in a poor cable connection.

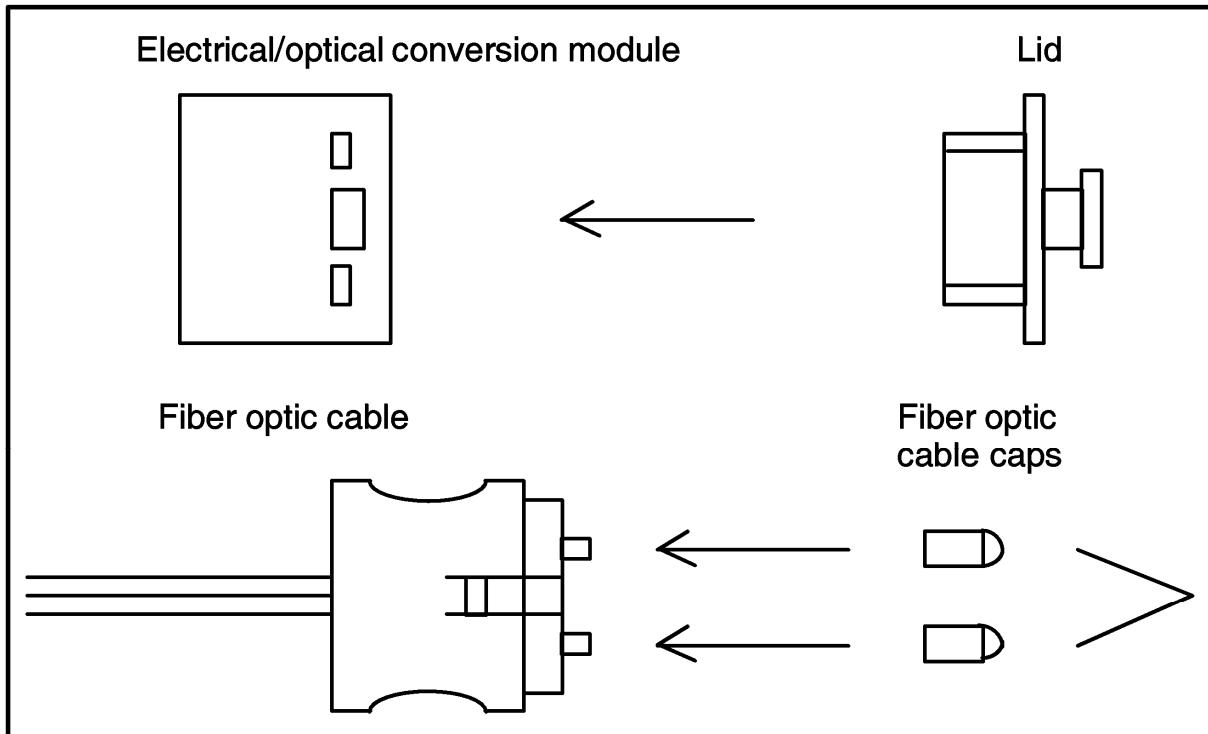


Fig.C (a) Protection of electrical/optical conversion module and fiber optic cable (when not in use)

(2) Fiber optic cable

External type

Fiber optic cord diameter:	ϕ 2.2 mm×2 cords
Diameter of cable with reinforced cover:	ϕ 7.6 mm
Tensile strength:	
Cable with reinforced cover:	75 kg
Fiber optic cord:	7 kg per cord
Between fiber optic cord and connector:	2 kg
Minimum bending radius of fiber optic cord:	25 mm
Minimum bending radius of cable with reinforced cover:	50 mm
Bending resistance (cable with reinforced cover):	10 million bending cycles at room temperature (when the bending radius is 100 mm)
Flame resistance:	Equivalent to UL VW-1
Operating temperature:	-20 to 70°C

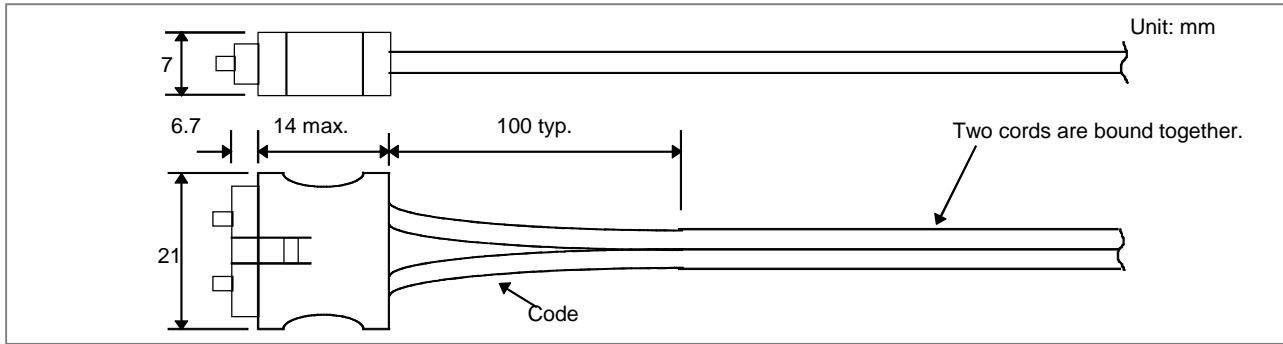


Fig.C (b) External dimensions of external optical cable Unit: mm

Internal type

Fiber optic cord diameter: $\phi 2.2 \text{ mm} \times 2 \text{ cords}$

Tensile strength:

Fiber optic cord: 7 kg per cord

Between fiber optic cord and connector: 2 kg

Minimum bending radius of fiber optic cord: 25 mm

Flame resistance: Equivalent to UL VW-1

Operating temperature: -20 to 70°C

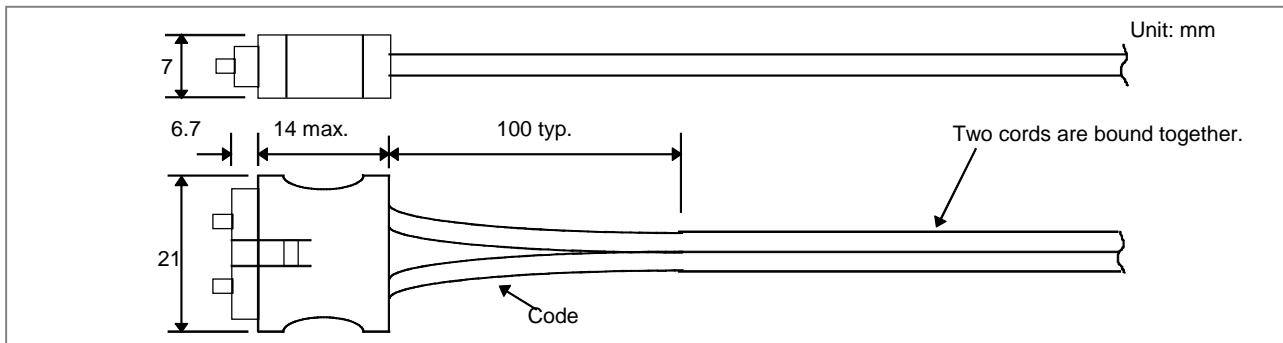
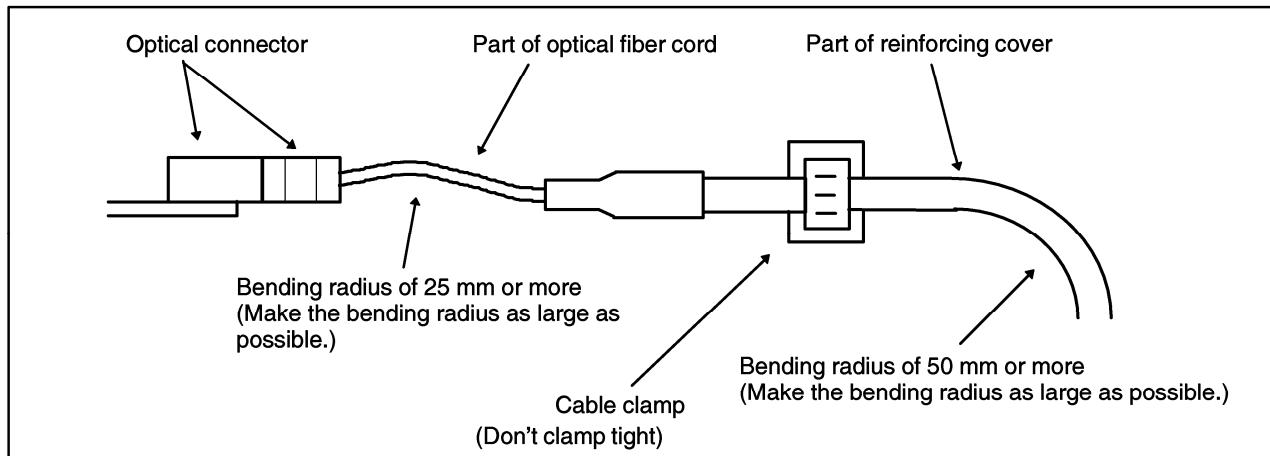


Fig.C (c) External dimensions of internal optical cable Unit: mm

- After it is connected, the optical connector is automatically locked by the lock levers on its top. To remove the connector, release the lock levers and pull the connector. (Do not pull on the fiber optic cord itself.)
- Although optical connectors cannot be connected in other than the correct orientation, always take note of the connector's orientation before making the connection.
- Take care to keep both parts of the optical connector (cable side and PCB side) clean. If they become dirty, wipe them with tissue paper or absorbent cotton to remove dirt. The tissue paper or absorbent cotton may be moistened with ethyl alcohol. Do not use any organic solvent other than ethyl alcohol.
- Fix the reinforcing cover by using a cable clamp, as shown in Fig. C(d), to prevent the weight of the fiber optic cable from being applied directly to the connecting part of the optical connector.
- Although the reinforcing cover of the external optical cable has sufficient mechanical strength, be careful not to drop heavy objects on the cable.

**Fig.C (d) Fixing the cable with a clamp**

- Any superfluous portion of the cable might be wound into loops. Should this prove necessary, make sure the diameter of each loop is at least 150 mm (for an external cable). Winding the cable into smaller loops can produce sharp curves that exceed the specified bend radius limit. Such bending can result in transmission loss, ultimately leading to a communication failure.
- When using a nylon band (cable tie) as a cable clamp, follow the instructions given below. Also, take care not to apply a bending force to one particular part of the cable when fixing it with a clamp. Failing to clamp the cable correctly might cut or damage it.

External cable:

Do not clamp the uncovered portion of the cable with a nylon band. When clamping the cable by the reinforcing cover, the clamping force is not an important factor to consider. However, ensure that the clamping force is as small as possible to ensure that the reinforcing cover is not deformed by the clamping.

If possible, the clamping force should be 5kg (111bs) or less.

Internal cable:

Lightly clamp the optical cable with a nylon band so that the cable shield is not deformed. Desirable clamping force is 1 to 2 kg (make sure that no force is applied to the cable).

Optical fiber cable for FSSB

Type	Specification	Max. length
Outside of cabinet	A66L-6001-0026#L~	50m (Slave to Slave:40m)
Inside of cabinet	A66L-6001-0023#L~	10m

D BRAKE RELEASE UNIT

D.1 SAFETY PRECAUTIONS

⚠ WARNING

- Support the robot arm by mechanical means to prevent it from falling down or rising up when brake is released. Before using the brake release unit, read the Operator's manual of the robot that tries to release the brake.
- Confirm that the robot is fixed tightly to the floor to prevent the falling down and unexpected movement of robot.
- Confirm that the outlet with earth is used for the power supply of brake release unit and earth of brake release unit is surely connected to earth of power supply. There is danger of getting an electric shock if earth is not connected.

D.2 CONFIRMATIONS BEFORE OPERATION

Confirm the followings before operation.

- (1) Confirm the exterior of the brake release unit and the power cable. Do not use it when there are damages in the unit and the cable.
- (2) Confirm that the power supply of the robot controller is disconnected.
- (3) There are Two types of brake release units according to the input voltage as shown in Table D.2 (a). Confirm the input voltage of the unit to refer to the input voltage label put to the unit (Fig.D.4).
- (4) Confirm that the voltage of power supply before connecting the power supply to the brake release unit. There is possibility to give the damaging to the brake or the brake release unit when the incorrect power supply is connected to the unit.

Table D.2 (a) Specification of Brake release unit

Brake release unit	Remarks
Brake release unit (AC 100V)	Input voltage AC100-115V, single phase
Brake release unit (AC 200V)	Input voltage AC200-240V, single phase

- (5) The brake release unit connection cable is different in each robot. Confirm the cable specification corresponding to the robot referring to Table D.2 (b).

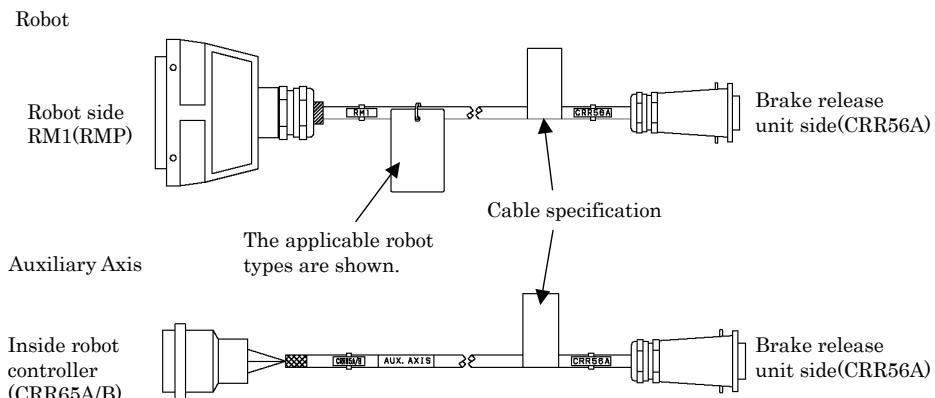


Fig.D.2 Brake release unit connection cable

Table D.2 (b) Specification of brake release unit connection cable

Controller	Applicable robot types	Specification of cable
R-30iB Mate	M-710iC, R-1000iA, R-2000iC, M-2iA, M-3iA,	A660-2005-T559
	M-10iA, M-20iA, ARC Mate 100iC, ARC Mate 120iC	A660-2006-T881
	ARC Mate 0iB, R-0iB, M-1iA	
	LR Mate 200iD, ARC Mate 50iD	A660-2006-T474
	Aux. Axis	A660-2005-T711

D.3 OPERATION

D.3.1 In case of operating to the robot

Operate the brake release unit according to the following procedures.

- (1) Support the robot arm by mechanical means to prevent it from falling down or rising up when brake is released. Refer to the Operator's manual for each robot.
- (2) Connect the Brake Release Unit connection cable to Brake Release Unit.
- (3) Disconnect the RM1 connector from Robot, and connect the Brake Release Unit connection cable to the Robot. Keep the connection of Robot connection cable except RM1 cable.
- (4) Connect the power cable of Brake release unit to power supply.
- (5) Press and hold the deadman switch in the middle position.
- (6) Press the brake switch '1'..'6' according to the axis that tries to release the brake, then brake will be released. (Refer to Table D.3.1) Two axes or more cannot be operated at the same time.

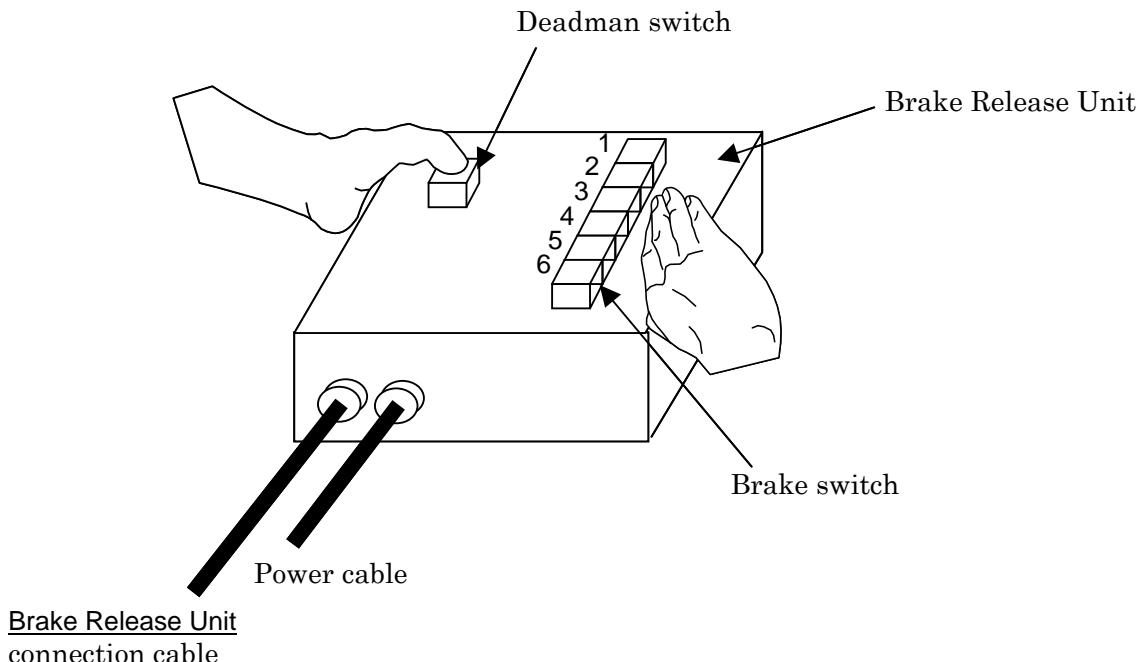
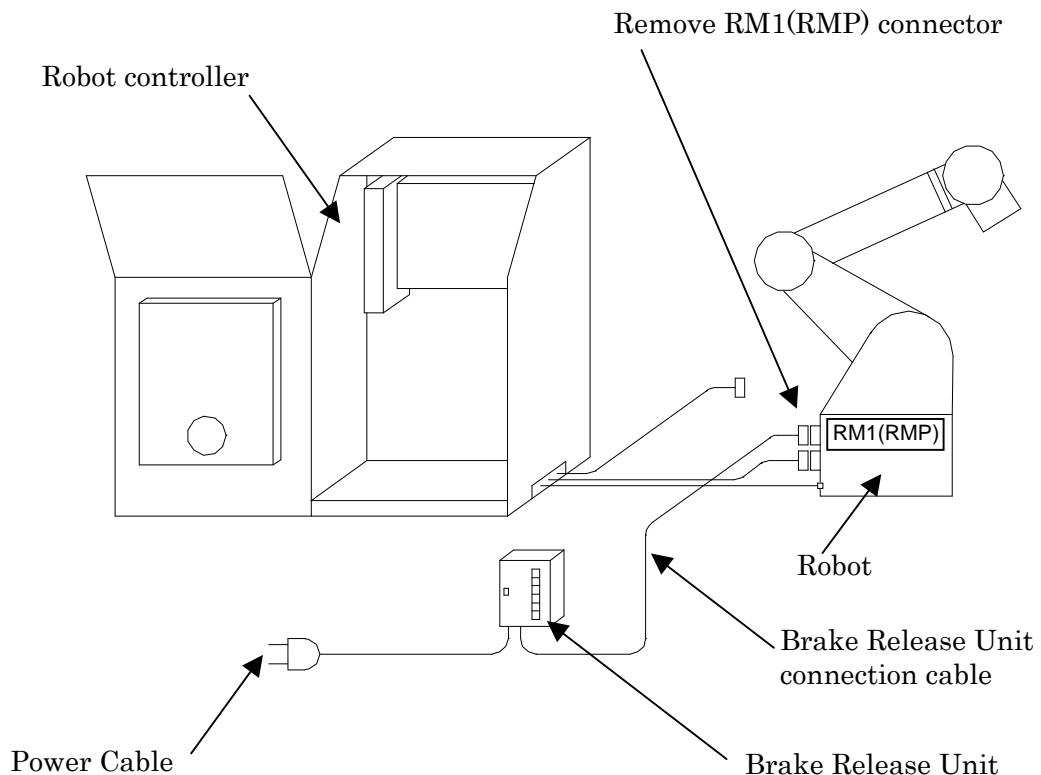
**Fig.D.3.1 (a) Brake Release Unit**

Table D.3.1 The relation between brake switch and robot axis

Robot Type	Brake Unit Button					
	1	2	3	4	5	6
Robots except below	J1	J2	J3	J4	J5	J6
LR Mate 200iD (5-Axis)	J1	J2	J3	-	J4	J5
In case of the auxiliary Axis	J1	-	-	-	-	-

- Refer to Fig.D.3.2 for the auxiliary axis.

**Fig.D.3.1 (b) How to connect Brake Release Unit**

D.3.2 In case of operating to the auxiliary Axis

Operate the brake release unit according to the following procedures.

- (1) Support the auxiliary Axis by mechanical means to prevent it from falling down or rising up when the brake is released.
- (2) Connect the Brake Release Unit connection cable to Brake Release Unit.
- (3) Disconnect the aux. axis brake connector (CRR65A/B), and connect the CRR65A/B connector to the Brake Release Unit connection cable. Keep the connection of all cables of aux. axis motor (power, Pulsecoder, brake).
- (4) Connect the power cable of Brake release unit to power supply.
- (5) Press and hold the deadman switch in the middle position.
- (6) Press the brake switch '1', then brake will be released.

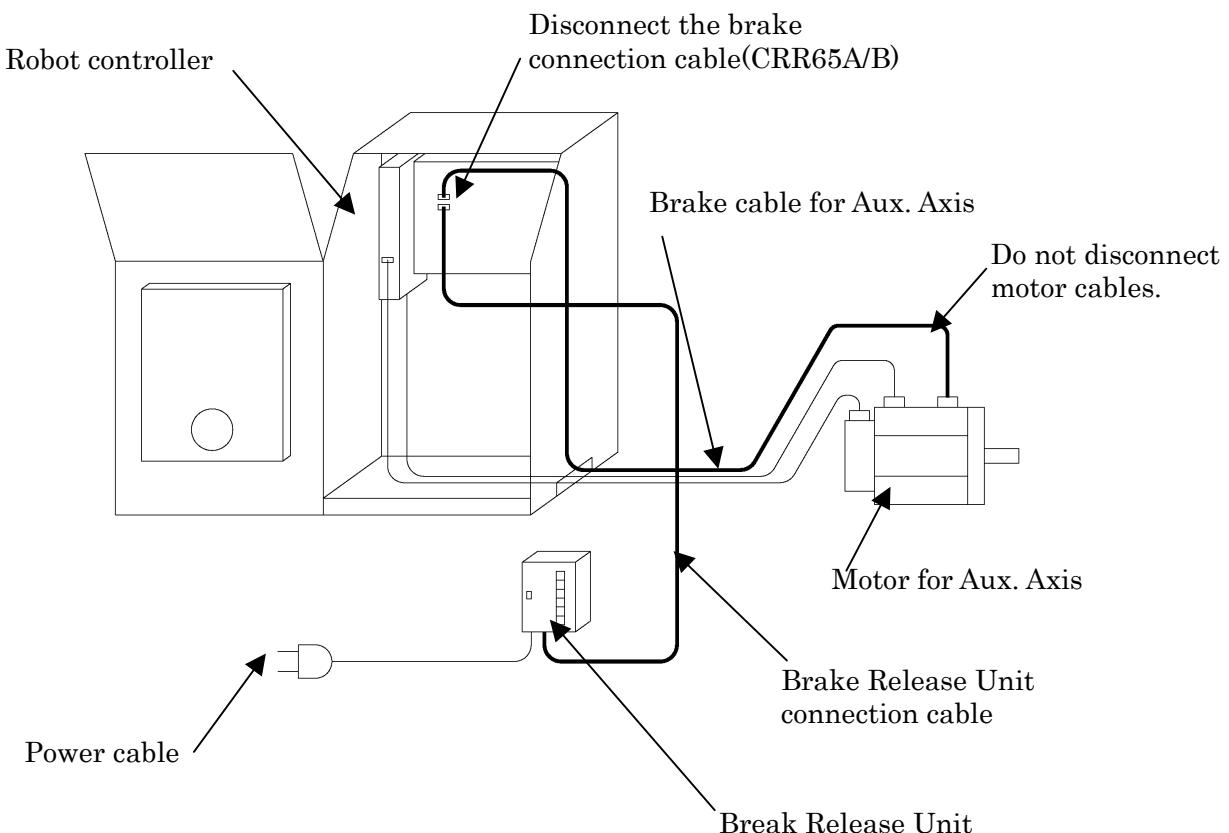


Fig.D.3.2 How to connect Brake Release Unit (In case of operating to the Aux. Axis)

D.4 HOW TO CONNECT THE PLUG TO THE POWER CABLE (IN CASE OF NO POWER PLUG)

Connect the plug to the power cable as follows. This plug is provided by customer.

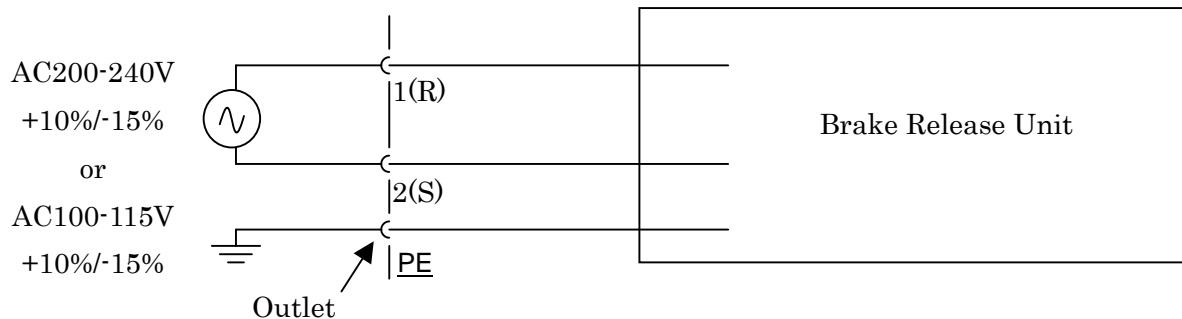
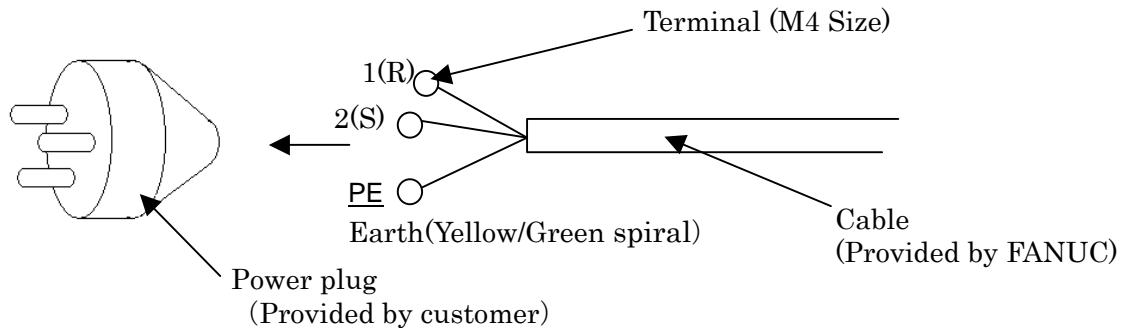


Fig.D.4 How to connect the plug to the power cable

⚠ WARNING

- Only a specialist having the relevant expertise knowledge is permitted to connect the plug to the power cable.
- In the EU area, only plug complying with the relevant European product standard can be used.
- Do not install the plugs without protective earth pin.

D.5 DIMENSION

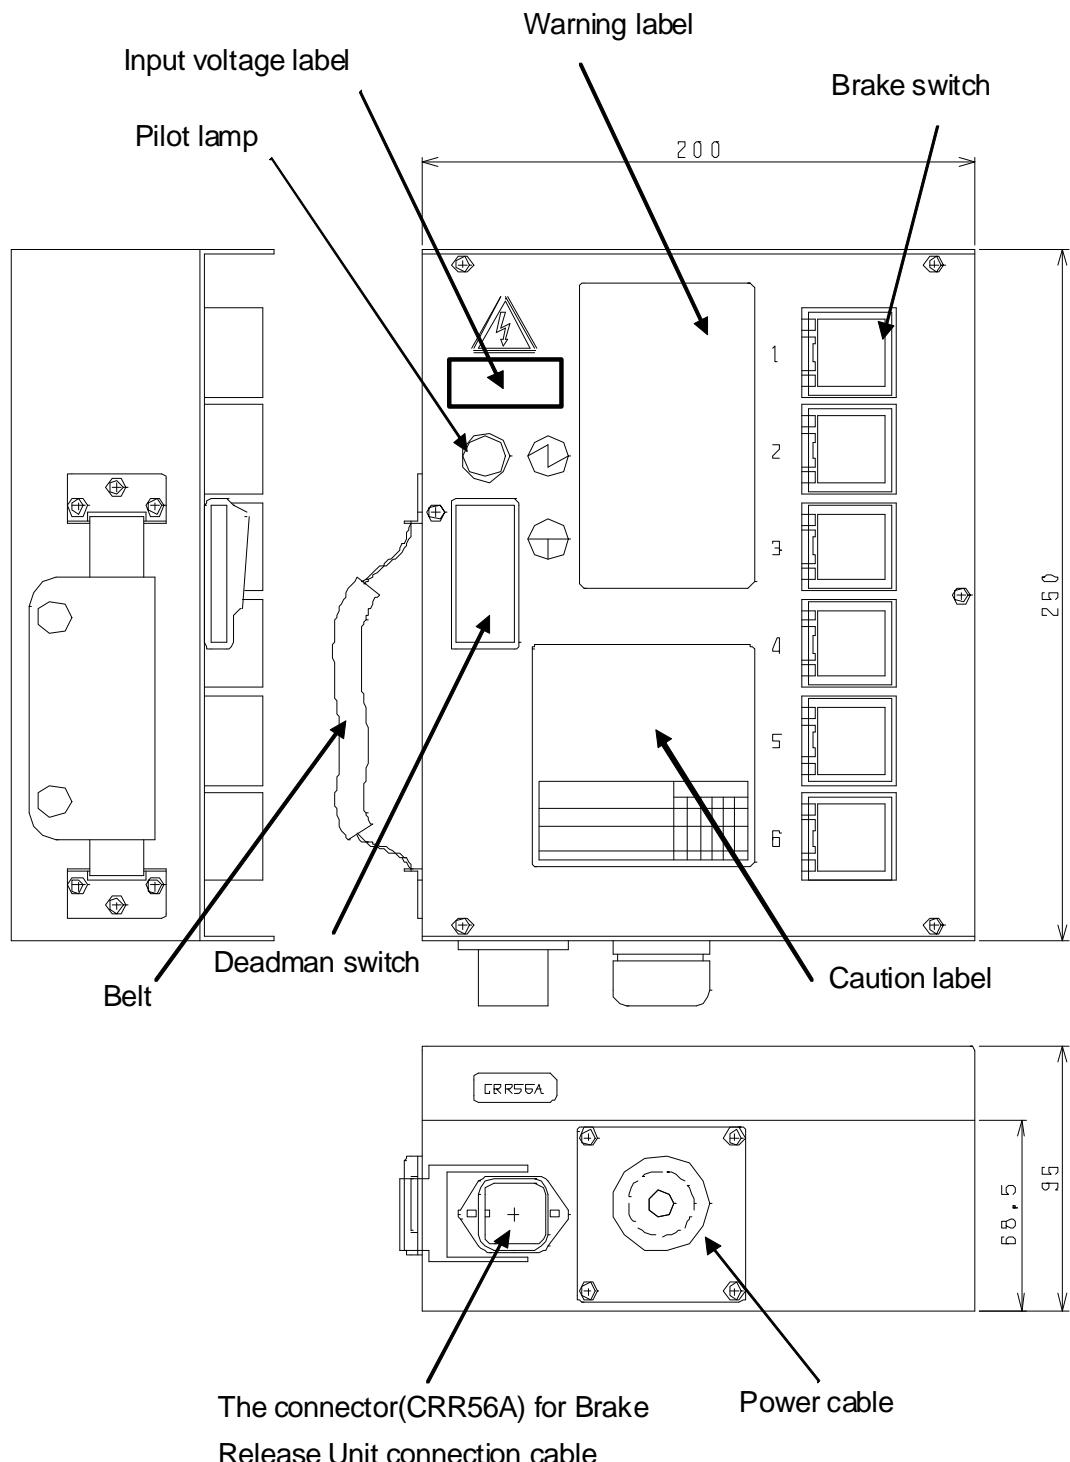


Fig.D.5 (a) Dimension of Brake Release Unit (Front view)

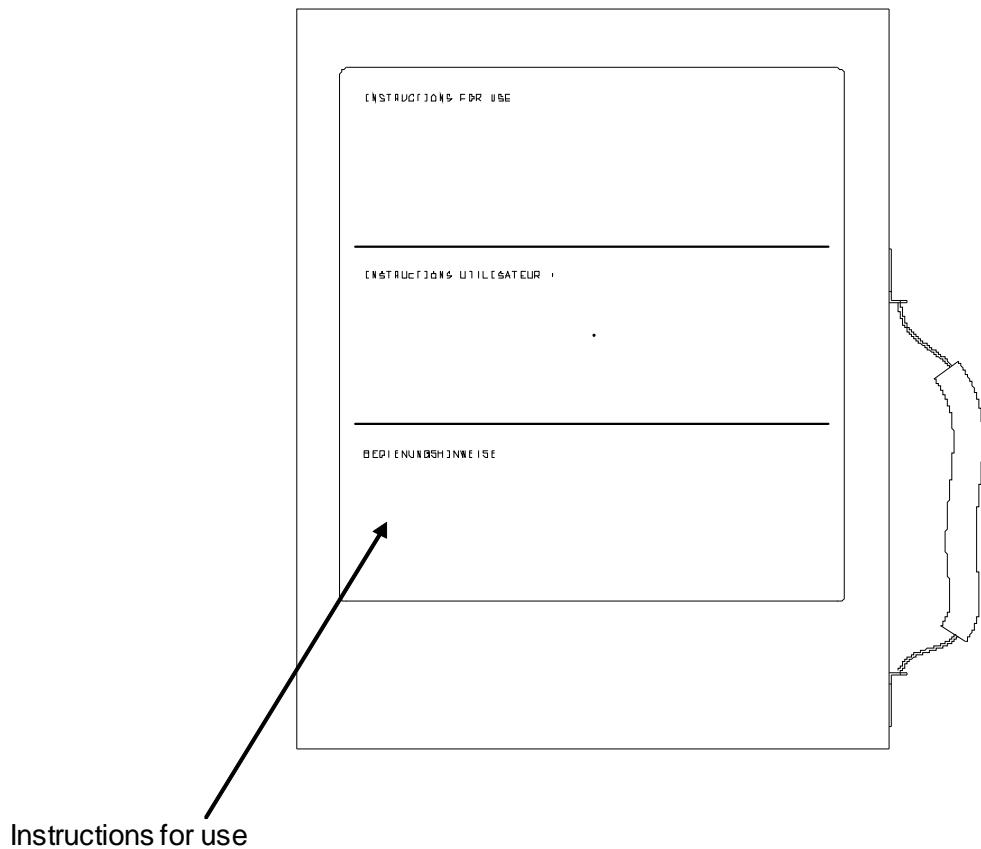


Fig.D.5 (b) Dimension of Brake Release Unit (Rear view)

D.6 FUSE

The fuses are mounted inside this unit. Please check the fuse when the pilot lamp doesn't light even if deadman switch is pressed. When the fuse is blown, exchange the fuse after finding the root cause of failure, and taking the appropriate countermeasures.

Manufacturer: Daito Communication Co.

Specification: P420H

Rating: 2A



WARNING

When the fuse is replaced, the power cable of brake release unit must be disconnected.

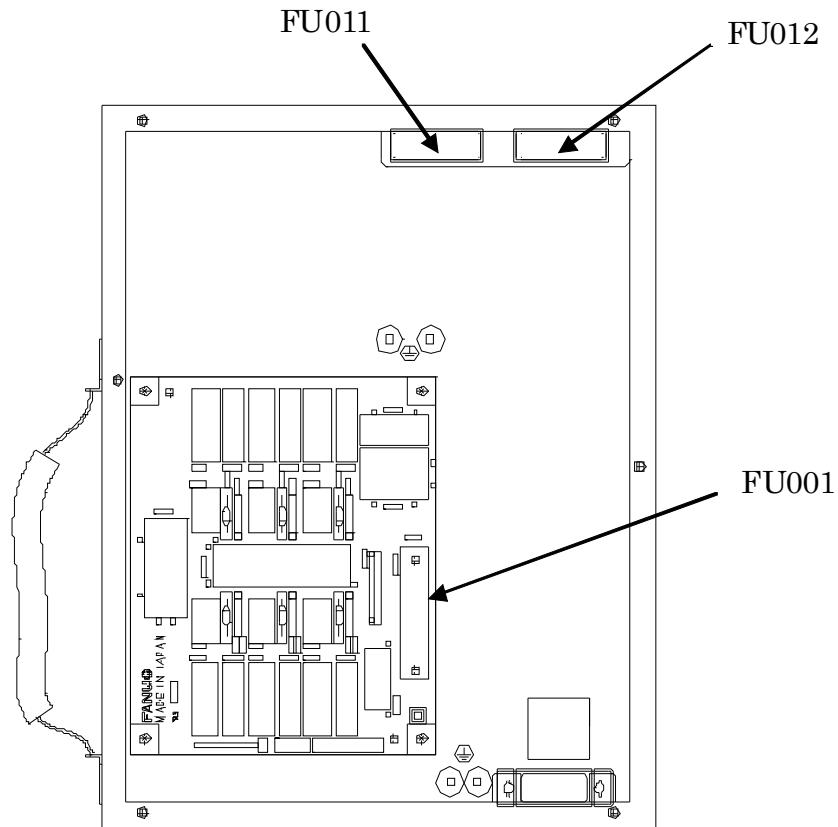


Fig.D.6 The location of fuses

D.7 SPECIFICATIONS

Input power supply

AC100-115V, 50/60Hz±1Hz, single phase, +10%/-15%, 1A

AC200-240V, 50/60Hz±1Hz, single phase, +10%/-15%, 1A

Weight

Brake Release Unit (AC 100V): 2.3 kg

Brake Release Unit (AC 200V): 3.5 kg

E TEACH PENDANT DISCONNECT FUNCTION (OPTION)

This appendix shows an instruction for Teach pendant disconnect function (Option).

E.1 CONFIGURATION

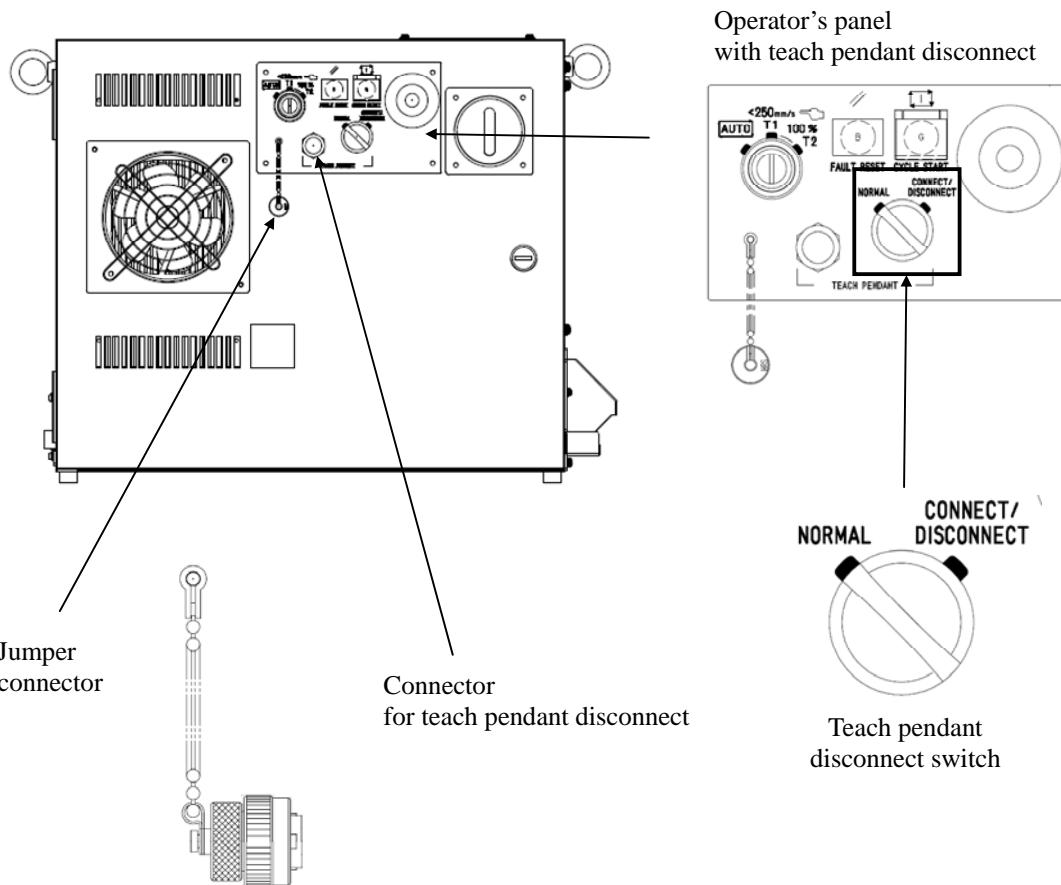


Fig.E.1 Teach pendant disconnect function

E.2 PROCEDURE OF TEACH PENDANT DISCONNECT

E.2.1 Teach Pendant Disconnect

- (1) Set AUTO mode.
- (2) Turn the disconnect switch to “Connect/Disconnect” position. (Robot stops because Operator’s panel E-stop Alarm occurs and Power LED of the teach pendant is OFF.)
- (3) Disconnect the teach pendant cable.
- (4) Connect the jumper connector.
- (5) Turn the disconnect switch to “Normal” position.
- (6) Administrator should store the teach pendant and the teach pendant cable in the storage in order to avoid incorrect operation.


E.2.2 Teach Pendant Connect


- (1) Set AUTO mode.
- (2) Turn the disconnect switch to “Connect/Disconnect” position. (Robot stops because Operator’s panel E-stop Alarm occurs.)
- (3) Disconnect the jumper connector.
- (4) Connect the teach pendant cable with the teach pendant.
- (5) Turn the disconnect switch to “Normal” position.

⚠ WARNING


When the LED (POWER) on the teach pendant turned on, this teach pendant is connected to the robot controller and emergency stop button of the teach pendant is active.

When the LED (POWER) on the teach pendant turned off, This teach pendant is not connected to robot controller and emergency stop button of the teach pendant is not active.

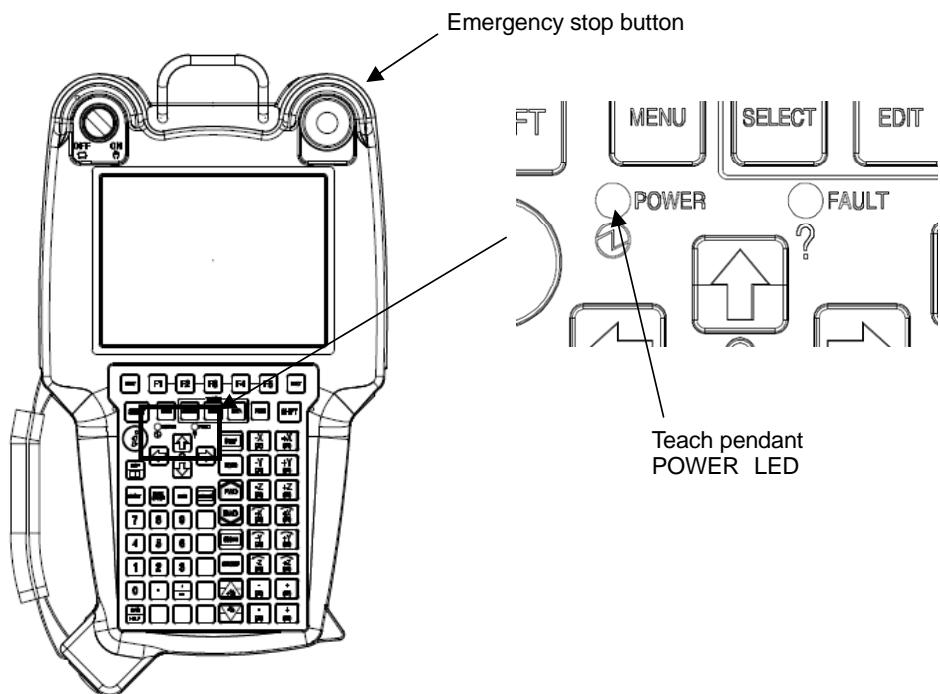

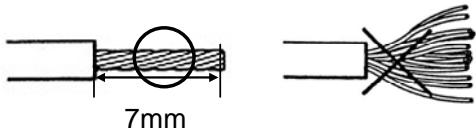F**INSTRUCTION FOR TERMINAL BLOCK****F.1 EXTERNAL EMERGENCY STOP SIGNAL INPUT/OUTPUT TERMINAL BLOCK****Stripping of Wire**Available wire size AWG 28 -14 (0.08 - 1.5mm²)

- Please check a strip length carefully.
- Please readjust a loose end.

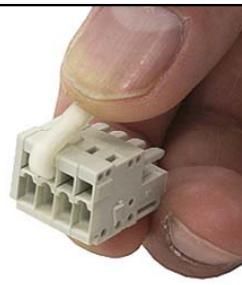Handling of the lever


- Hold the connector, and push down the lever by finger.
- Don't handle the lever after fit the connector into PCB, otherwise PCB will be damaged by handling stress.




Operating Lever
Item No. 734-230

Wiring

1. Push down the lever.



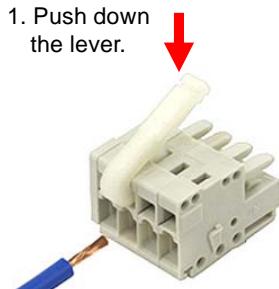


2. Insert a wire into the wire hole with holding the lever.

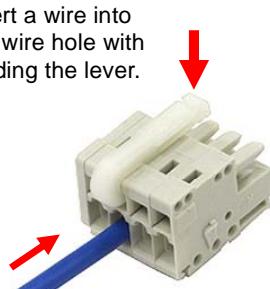

3. Release an operating tool.
Pull a wire slightly to check if connecting has been done completely.

★ Don't pull strongly.

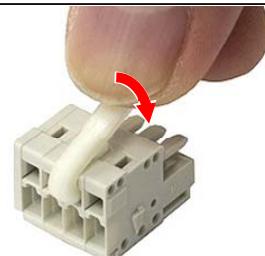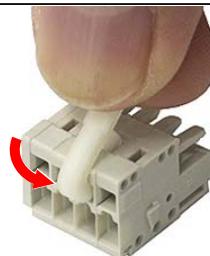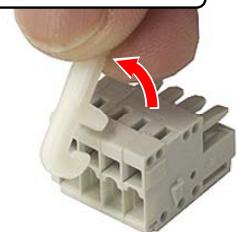**Replace the lever**


1. Pull off the lever.

2. Hook the lever to the rectangle hole.


3. Push down the lever until click in.

Fit to header


1. Push in the connector to the header.

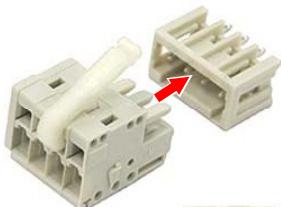


★ Be careful to fit the shape of each other.

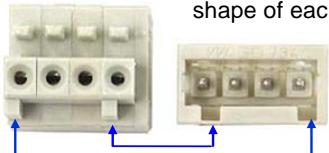

2. Please check if the latch is hooked to header.

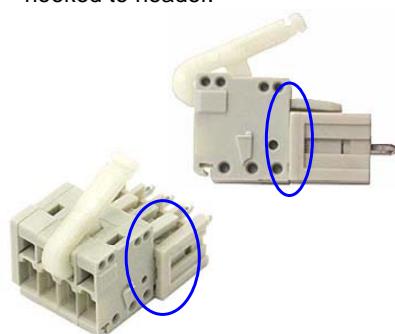

Installation of Jumper

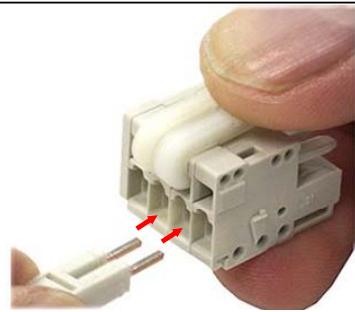


1. Attach two levers to the connector.

2. Hold down levers at the same time, then put the jumper into the connector.

★ Please confirm that the jumper is fully inserted.


Availability of wires

Without jumpers

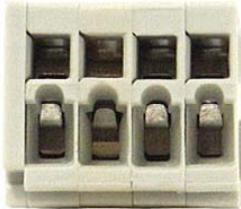

Max wire size 1.0mm² (AWG18)
(with Ferrule)

With jumpers

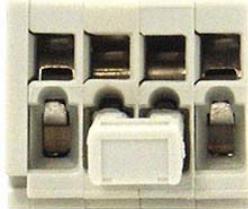


The wire cannot connect, when attached the jumper.

Installation of Ferrules



1.Put a wire through the hole of ferrules.

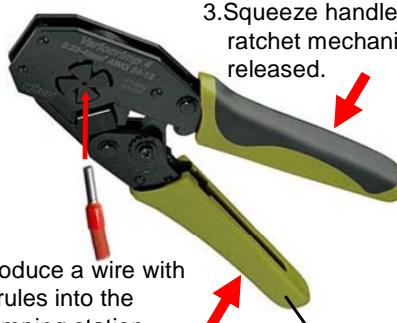

2.Introduce a wire with ferrules into the cramping station.



3.Squeeze handles until ratchet mechanism is released.
4.Please check if the wire crimped correctly.

Specifications of Ferrules



WAGO Item No.	Sleeve for mm ² (AWG)	Color	Stripped length(mm)	L (mm)	L1	D (mm)	D1	D2
216-301	0.25 (24)	Yellow	9.5	12.5	8.0	2.5	2.0	0.8
216-302	0.34 (24)	Turquoise	9.5	12.5	8.0	2.5	2.0	0.8
216-201	0.5 (22)	White	9.5	13.5	8.0	3.0	2.5	1.1
216-202	0.75 (20)	Gray	10.0	14.0	8.0	3.3	2.8	1.3
216-203	1.0 (18)	Red	10.0	14.5	8.0	3.6	3.0	1.5

★ CAUTION! Please make sure to use WAGO 206-204 to crimp the ferrules.

Pack-unit 100

F.2 TERMINAL CONVERTER BOARD TERMINAL BLOCK

Available wire

Solid conductor	0.2-1.5mm ²
Stranded conductor	0.2-1.5mm ²
Stripping length:	10(±0.5) mm


Ferrule is preferable to prevent breaking of wire and short of terminals.

Stranded conductor with ferrule: 0.25-0.75 mm²


Wiring

There are two ways of wiring.

1. Insert a wire into wire hole with the opening button pushed by a flat-blade screwdriver.
Release the screwdriver.

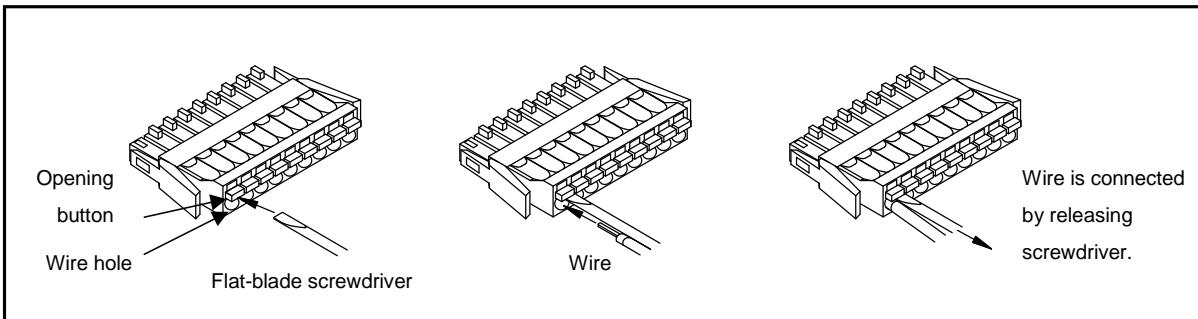

2. Push a wire into wire hole.

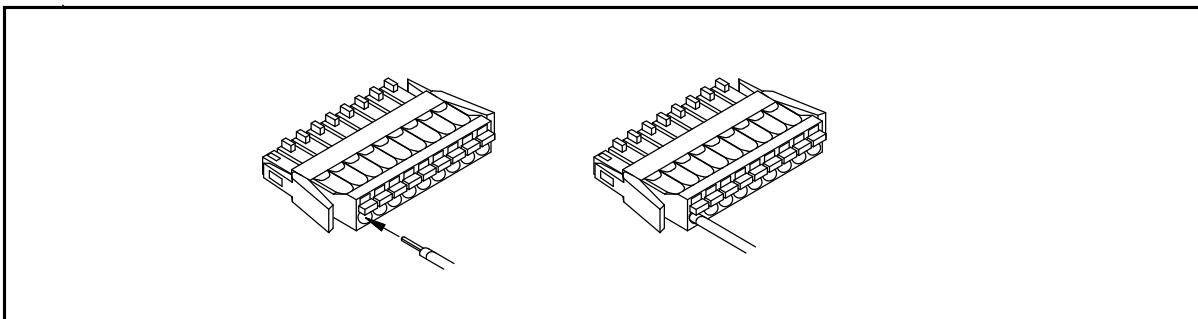

Disconnection


Pull out a wire from wire hole with the opening button pushed by a flat-blade screwdriver.

G REPLACING THE PROTECTION SHEET

This appendix shows an instruction for replacing the protection sheet of the iPendant with touch panel.

Replacement procedure


1. Remove old protect sheet.
2. Peel clear sheets pasted on both side of the new protect sheet.
3. Paste the protect sheet so that the cutout part is placed on the lower right portion.

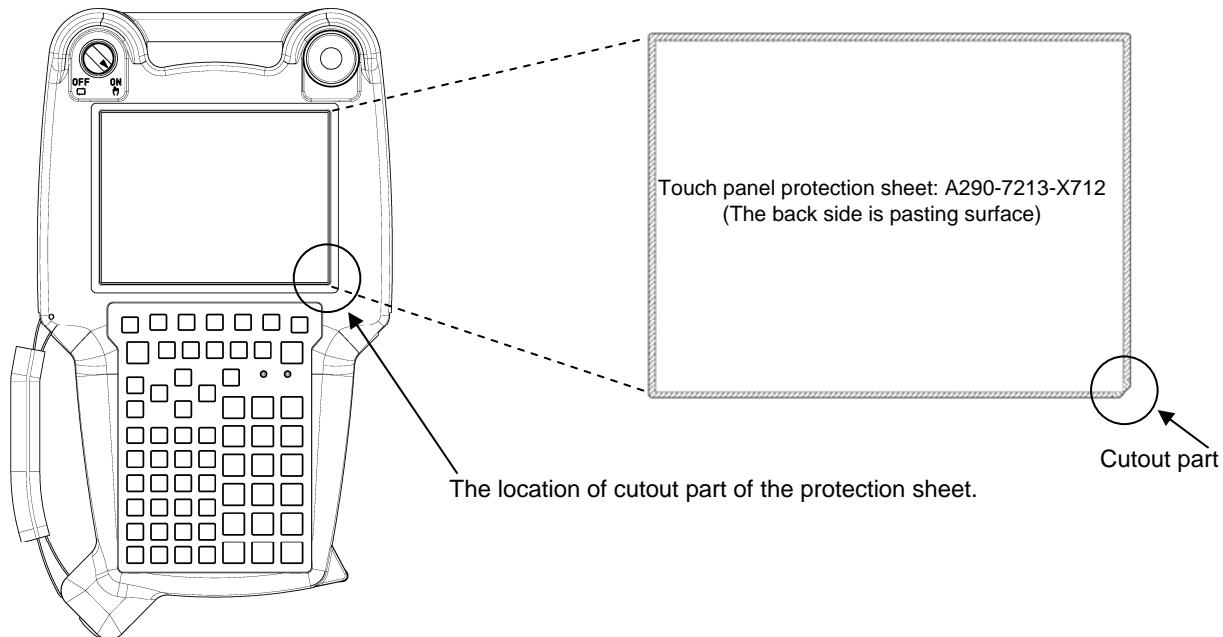

H SEALING OF THE CABLE ENTRANCE OF THE CABINET

H.1 CABLE ENTRANCE FOR A-CABINET

The external cables are connected through the cable entrance located on the rear surface of controller. The cable entrance consists of a hood, frame and Cable Seal Block with multiple circular shaped holes for cable sealing. There are different types of Cable Seal Block; the type used is determined by the controller and robot configuration. When all customer supplied cables are connected through the cable entrance, it may be necessary to increase the cable diameter of some cables to maintain an adequate seal at the cable entrance. It is also necessary to confirm Cable Seal Block has enough holes for all system and option cables. The number of available sealing holes for customer supplied cables varies depending on robot type and options. Reference the following illustrations.

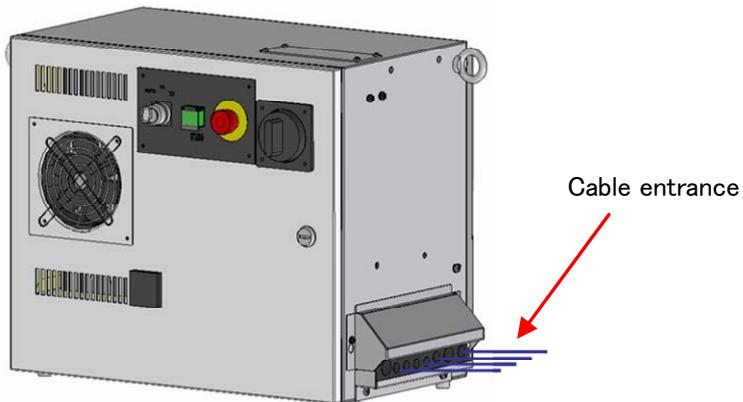

⚠ CAUTION

If the cable diameter is not suitable for the hole size of Cable Seal Block, controller problems may occur because of insufficient environmental sealing of controller.

Without proper cable entrance sealing, airborne contaminates, both non-conductive and conductive may enter the interior of the controller. Foreign particulate entering the controller can have an impact on controller operation and reliability.


When customer supplied cables are connected through the cable seal entrance, the diameter of these cables should be adjusted to a suitable cable diameter to ensure proper controller cabinet sealing. Reference the following illustrations.

H.2 HOLES OF CABLE SEAL BLOCK FOR CABLE ENTRANCE

The cutout of Cable Seal block at the cable Entrance is shown as follows (Rear side view) .


Cable Seal Block Type A (A230-0659-X013#A) :

LR Mate 200iD, M-1iA

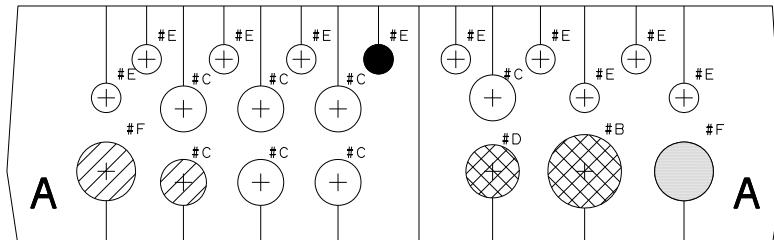


Cable Seal Block Type B (A230-0659-X013#B) :

ARC Mate 100iC, ARC Mate 120iC, M-10iA, M-20iA ARC Mate 0iB

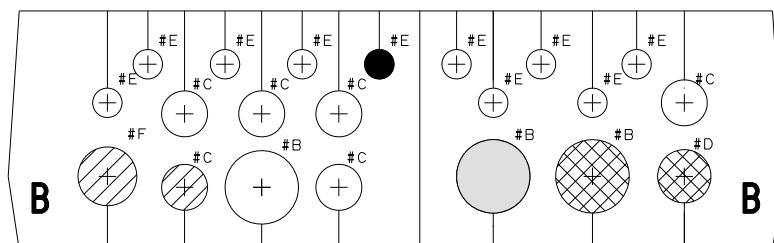



Cable Seal Block Type C (A230-0659-X013#C) :

ARC Mate50iD

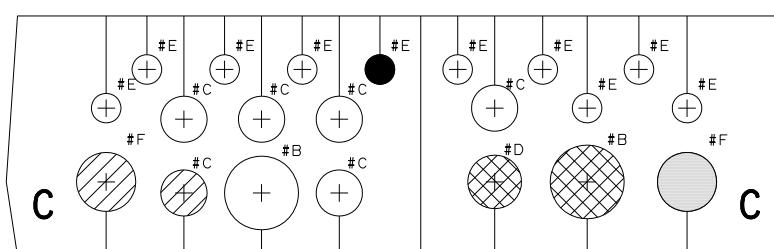

Cable Seal Block Type D (A230-0659-X013#D) :

R-2000iC, R-1000iA, M-710iC

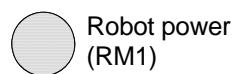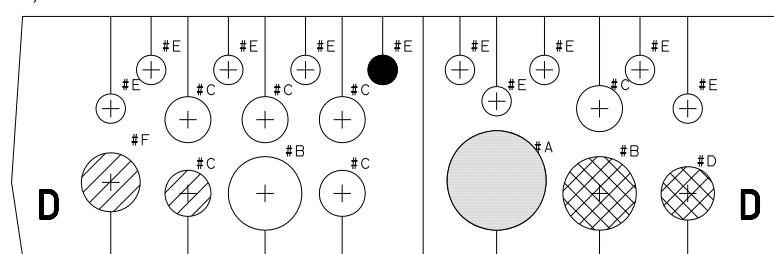

Robot power
(RM1)



Robot plusencoder
(RP1)



Teach pendant cable



Power cable

Hole type	Diameter (mm)	Cable Seal Block type								Application (Include options)	
		Type A		Type B		Type C		Type D			
		Qty	For Options	Qty	For Options	Qty	For Options	Qty	For Options		
#A	φ 27	0	0	0	0	0	0	1	0	Power Cable(RM1)	
#B	φ 20	1	0	3	1	2	1	2	1	Pulse coder cable Thick, Flex(RP1) Power cable(RM1) Aux. cabinet connection cable(AC)	
#C	φ 12.5	7	6	6	5	6	5	6	5	I/O, Power cable Link tracking, DeviceNet Thick cable Aux. cabinet connection cable(DC)	
#D	φ 14.5	1	0	1	0	1	0	1	0	Pulse coder cable STD/Non-Flex(RP1)	
#E	φ 8.5	10	9	10	9	10	9	10	9	Camera, EtherNet DeviceNet Thin cable Teach pendant cable Aux. cabinet connection cable(Optical)	

H.3 SUITABLE CABLE DIAMETER

The suitable cable diameter for option cables are shown on the following table.


Hole type	Nominal (mm)	Tolerance (mm)	Suitable diameter (mm)	Qty			
				Cable Seal Block Type A	Cable Seal Block Type B	Cable Seal Block Type C	Cable Seal Block Type D
#B	φ 20	±1	φ 19–φ 21	0	1	1	1
#C	φ 12.5	±1	φ 11.5–φ 13.5	6	5	5	5
#E	φ 8.5	±1	φ 7.5–φ 9.5	9	9	9	9

NOTE

The holes for options(#B,#C,#E) are used for all options(Aux. axis, I/O, Network, Sensor). So confirm that the available holes are enough for all option cables.

H.4 ADJUST THE CABLE DIAMETER

To maintain proper sealing of controller enclosure, it may be necessary to adjust some cable diameters to work with an available cable port diameter. If the diameter of any cable is smaller than an available sealing port in the Cable Seal Block, increase the cable diameter to an appropriate diameter by applying acetate tape, adhesive sealing tape or heat shrink tubing over the cable jacket. If a foam type sealing tape is used, adjust the diameter to the compression state of foam for a particular cable diameter. The finished diameter of all cables should maintain an interference fit with Cable Seal Block. All unused cable ports must be plugged to ensure controller is sealed against contaminants. Sealing frame and hood must also be properly installed.

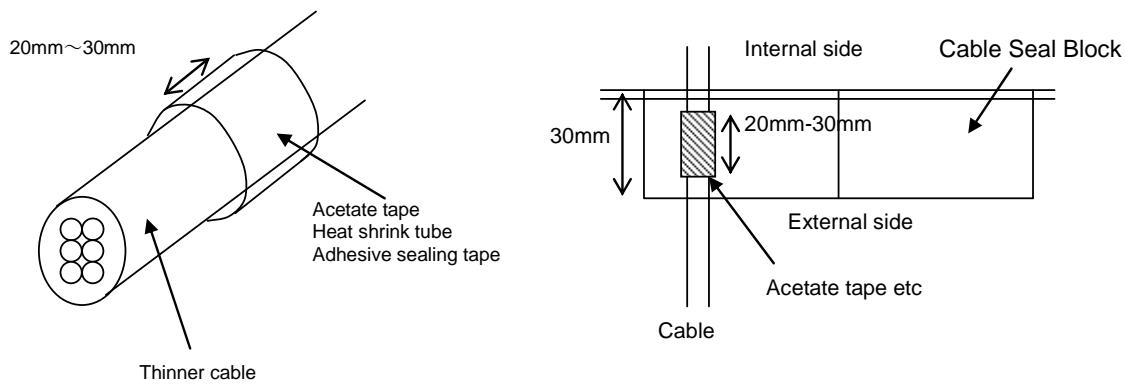

INDEX

<Number>

100BASE-TX connector (CD38A, CD38B) pin assignments	172
6-Axis SERVO AMPLIFIER SPECIFICATIONS	87

<A>

ADJUST THE CABLE DIAMETER.....	248
ADJUSTMENT AND CHECKS AT INSTALLATION.....	188
ALARM OCCURRENCE SCREEN.....	14
ARC Weld Connection Cables (CRW11; Tyco Electronics AMP, 20 pin)	161
Assemble at Installation	183

BACKPLANE.....	80
Battery for Memory Backup (3 VDC)	104
BLOCK DIAGRAM	110
BLOCK DIAGRAM OF THE POWER SUPPLY	88
BRAKE RELEASE UNIT	231

<C>

CABLE CONNECTION FOR THE PERIPHERAL DEVICES, END EFFECTORS, AND ARC WELDERS	162
CABLE ENTRANCE FOR A-CABINET	245
Check items at installation	179
COMPONENT FUNCTIONS.....	9
CONFIGURATION	4,239
CONFIRMATIONS BEFORE OPERATION.....	231
Connecting HDI	166
Connecting the Auxiliary Axis Brake (CRR65 A/B)	129
Connecting the Auxiliary Axis Over Travel (CRM68)	130
CONNECTING THE COMMUNICATION UNIT	168
Connecting the External Emergency Stop.....	122
Connecting the Input Power	120
Connecting the input power cable	120
Connection between RS-232-C interface and I/O device	169
Connection between the Connector Converter Board and Peripheral Devices	144
Connection between the Main Board (CRMA15, CRMA16) and Peripheral Devices	138
Connection between the Process I/O Board MA and Peripheral Devices.....	146
Connection between the Process I/O Board MB and Welding Machines.....	150
Connection between the Robot and End Effector	152
Connection between the Terminal Converter Board and Peripheral Devices.....	145
CONNECTION DIAGRAM BETWEEN MECHANICAL UNITS.....	111
CONNECTION OF HDI.....	166
Connection of I/O Link	113
Connection of the I/O Link Cable	114

Connection to Ethernet.....	171
CONNECTOR CONVERTER BOARD (A20B-2004-0411)	83

<D>

DIGITAL I/O SIGNAL SPECIFICATIONS	154
DIMENSION	236

<E>

EE INTERFACE.....	152, 156
ELECTRICAL CONNECTIONS	111
Electrical noise countermeasures	176
EMERGENCY STOP BOARD:A20B-2005-0150	80
Ethernet Interface.....	171
EXTERNAL CABLE WIRING DIAGRAM	117
EXTERNAL EMERGENCY STOP SIGNAL INPUT/OUTPUT TERMINAL BLOCK.....	241
EXTERNAL VIEW OF THE CONTROLLER	4

<F>

FANUC I/O LINK	113
FUSE	237
FUSE-BASED TROUBLESHOOTING	64

<G>

GENERAL	109
---------------	-----

<H>

HOLES OF CABLE SEAL BLOCK FOR CABLE ENTRANCE.....	246
HOW TO CONNECT THE PLUG TO THE POWER CABLE (IN CASE OF NO POWER PLUG)	235
How to Disable/Enable HBK	189
How to Disable/Enable Pneumatic Pressure Alarm (PPABN)	189

<I>

I/O Signal Specifications for ARC-Welding Interface (A-cabinet/Process I/O Board MB)	157
I/O SIGNALS	220
I/O SIGNALS OF MAIN BOARD	136
In Case of Main Board (CRMA15, CRMA16)	133
In case of operating to the auxiliary Axis	234
In case of operating to the robot.....	232
In the Case of the Connector Conversion Board	134
In the Case of the Process I/O Board MA	133
In the Case of the Process I/O Board MB	134
In the Case of the Terminal Converter Board	135
Input Signal Rules for the High-speed Skip (HDI)	167
Input Signals	220
Input/Output Hardware Usable in the R-30iB Mate Controller	226
INSTALLATION	181
INSTALLATION CONDITION	185
Installation Method	181

INSTALLATION OF TEACH PENDANT HOOK (Option)	184
INSTRUCTION FOR TERMINAL BLOCK	241
Interface	168
INTERFACE FOR PERIPHERAL DEVICES	138
INTERFACE FOR WELDING MACHINES	150
Isolated transformer	121
 <L>	
Leakage breaker	122
LEDS OF SERVO AMPLIFIER	85
LEDS ON UNITS SUPPORTING I/O LINK <i>i</i>	76
 <M>	
MAIN BOARD	78
MANUAL OPERATION IMPOSSIBLE	75
MASTERING	17
Meanings of LEDs on Units Supporting I/O Link <i>i</i>	76
 <O>	
OPERATION	232
OPTICAL FIBER CABLE	228
Output Signals	223
OVERVIEW	3, 226
 <P>	
Peripheral Device Cable Connector	163
Peripheral Device Connection Cable	162
Peripheral Device Interface A	154
Peripheral Device Interface A1 Cable (CRMA15: Tyco Electronics AMP, 40 pins)	160
Peripheral Device Interface A2 Cable (CRMA16: Tyco Electronics AMP, 40 pins)	160
Peripheral Device Interface B1 and B2 Cables (CRMA52; Tyco Electronics AMP, 30 pin)	161
PERIPHERAL DEVICE INTERFACE BLOCK DIAGRAM	133
Peripheral Device Interface Processing	188
PERIPHERAL DEVICE, ARC WELDING, AND EE INTERFACES	131
POWER CANNOT BE TURNED ON	12
POWER SUPPLY	88
PREFACE	p-1
PREVENTIVE MAINTENANCE	10
PRINTED CIRCUIT BOARDS	78
PROCEDURE OF TEACH PENDANT DISCONNECT	239
PROCESS I/O BOARD MA (A20B-2004-0381)	81
PROCESS I/O BOARD MB (A20B-2101-0731)	82
 <R>	
Recommended Cables	165
REPLACING CARDS AND MODULES ON THE MAIN BOARD	91
REPLACING THE 6-AXIS SERVO AMPLIFIER	99
REPLACING THE AC FAN MOTOR	103
Replacing the Backplane Board (Unit)	90
REPLACING THE BATTERY	104
REPLACING THE CONTROL SECTION FAN MOTOR	102
REPLACING THE EMERGENCY STOP BOARD	96
REPLACING THE E-STOP UNIT	96
Replacing the Heat Exchanger and Door Fan Unit (A-cabinet)	103
Replacing the Main Board	91
REPLACING THE POWER SUPPLY UNIT	97
REPLACING THE PRINTED-CIRCUIT BOARDS	89
REPLACING THE PROTECTION SHEET	244
REPLACING THE REGENERATIVE RESISTOR UNIT	98
REPLACING THE TEACH PENDANT	101
REPLACING UNITS	89
Resetting Overtravel	189
RESETTING OVERTRAVEL AND EMERGENCY STOP AT INSTALLATION	188
Robot Connection Cables	117
Routing of the Ethernet cable	172
RS-232-C Interface	168
RS-232-C interface signals	169
 <S>	
SAFETY PRECAUTIONS	s-1, 231
SEALING OF THE CABLE ENTRANCE OF THE CABINET	245
SERVO AMPLIFIERS	84
SETTING COMMON VOLTAGE	220
SETTING OF SERVO AMPLIFIER	86
SIGNAL	218
Software Specifications	227
SPECIFICATIONS	238
SPECIFICATIONS OF DIGITAL INPUT/OUTPUT ..	226
SPECIFICATIONS OF PERIPHERAL DEVICE INTERFACE	218
SPECIFICATIONS OF THE CABLES USED FOR PERIPHERAL DEVICES AND WELDERS	160
STOP SIGNALS	16
SUITABLE CABLE DIAMETER	247
 <T>	
Teach Pendant Cable	120
Teach Pendant Connect	240
Teach Pendant Disconnect	239
TEACH PENDANT DISCONNECT FUNCTION (OPTION)	239
TERMINAL CONVERTER BOARD (A20B-1009-0690)	83
TERMINAL CONVERTER BOARD TERMINAL BLOCK	243
TOTAL CONNECTION DIAGRAM	193
TRANSPORTATION	180
TRANSPORTATION AND INSTALLATION	180
TROUBLESHOOTING	12
TROUBLESHOOTING BASED ON LED INDICATIONS	68
Troubleshooting by Alarm LEDs on the Process I/O Board	75

Troubleshooting by LED on the Emergency Stop Board	73
Troubleshooting by LEDs on the 6-Axis Servo	
Amplifier	72
TROUBLESHOOTING USING THE ERROR CODE	19
Troubleshooting Using the LEDS On the Main Board	68
Twisted-pair cable specification.....	173

<W>

When the Teach Pendant Cannot be Powered on.....	12
When the Teach Pendant Does not Change from the Initial Screen	13

REVISION RECORD

Edition	Date	Contents
03	Dec.,2013	Addition of R-2000iC
02	Sep.,2013	Addition of M-1 <i>i</i> A, M-2 <i>i</i> A, M-3 <i>i</i> A, M-10 <i>i</i> A, M-20 <i>i</i> A, ARC Mate 50 <i>i</i> D, ARC Mate 100 <i>i</i> C, ARC Mate 120 <i>i</i> C, ARC Mate 0 <i>i</i> B, R-0 <i>i</i> B, R-1000 <i>i</i> A, M-710 <i>i</i> C
01	Dec.,2012	

B-83525EN/03



* B - 8 3 5 2 5 E N / 0 3 *