


BENCHVOLT PD - User Manual & Safety Instructions



<https://github.com/sydundar/BenchVolt-PD>

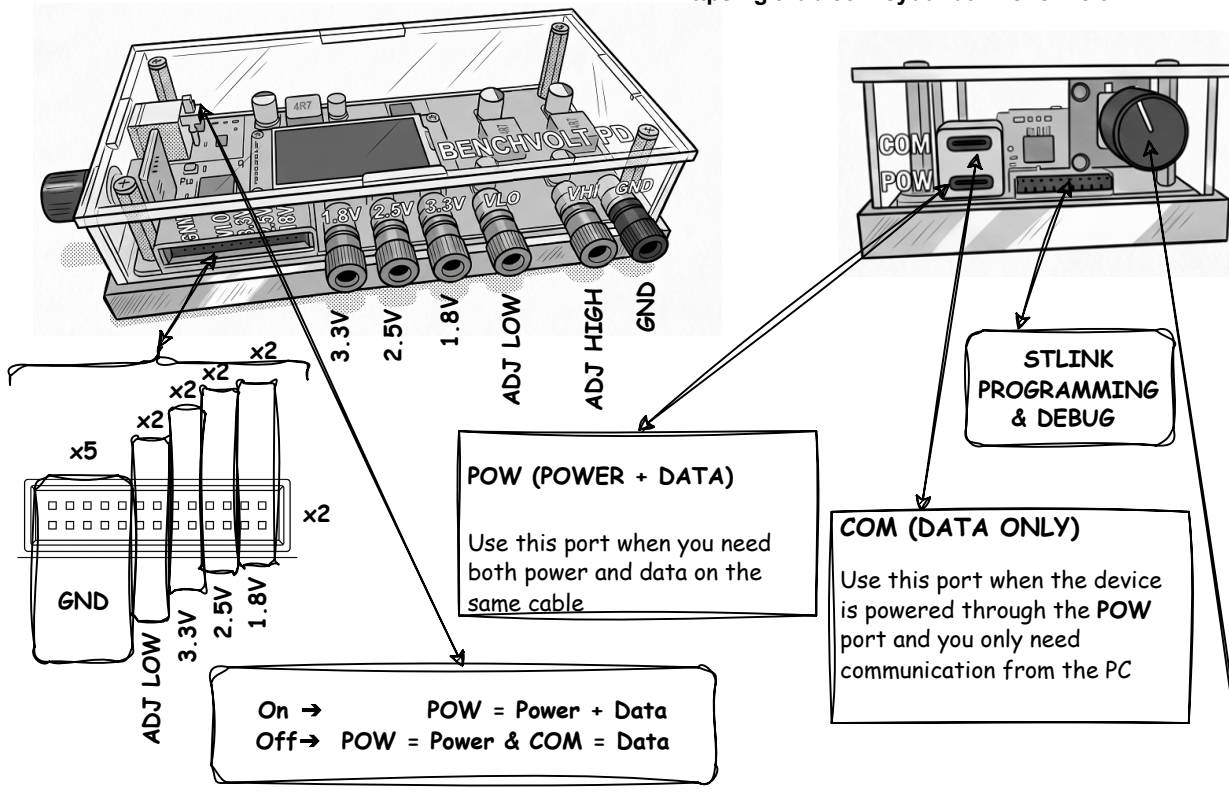

The **rotary encoder** is used to navigate through two menus: **Main Menu** and **Limits Menu**. Rotate the encoder clockwise or counterclockwise to navigate between options, and press the center button to select or edit settings. To exit the Limits Menu, navigate to the **Exit** option in the upper-left corner and press the center button. The interface is designed to be simple and intuitive, allowing users to learn the navigation quickly.

Accessories

5 alligator-to-banana cables

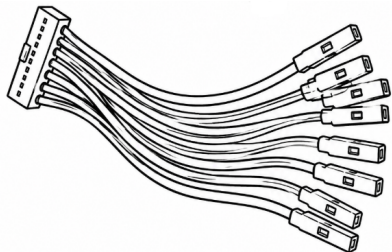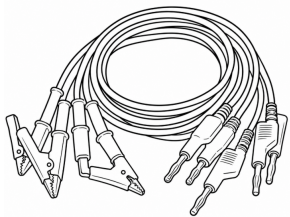

2.54 mm Multi-wire Female Jumper Cable

Safety Instructions




BenchVolt PD complies with the applicable CE and UKCA requirements, including the RoHS (Restriction of Hazardous Substances) and EMC (Electromagnetic Compatibility) directives.

Warnings

- Use only USB Power Delivery (USB-PD) compliant power adapters and cables.
- Verify output voltage and current settings before connecting external hardware.
- Incorrect voltage settings may permanently damage connected devices.
- Do not exceed the maximum rated input or output limits.
- Do not short-circuit the outputs intentionally.
- All output channels share the same common ground. Do not connect one output channel directly to another output channel.
- Turn off the output before connecting or disconnecting external devices.
- The aluminum base may become warm during prolonged high-power operation.
- Additional cooling may be required during continuous high-power usage.
- Follow proper ESD precautions when touching the input or output connectors.
- Do not operate the device in wet, humid, or conductive environments.
- Disconnect power before opening the enclosure or servicing the device.
- Ensure adequate ventilation during operation.
- Do not use damaged USB cables or accessories.
- This product is intended for laboratory, engineering, and development use only.
- Keep away from children and unattended operation.
- This product is not certified for medical, automotive safety-critical, or life-support applications.

BENCHVOLT PD – Benutzerhandbuch & Sicherheitshinweise

<https://github.com/sydundar/BenchVolt-PD>

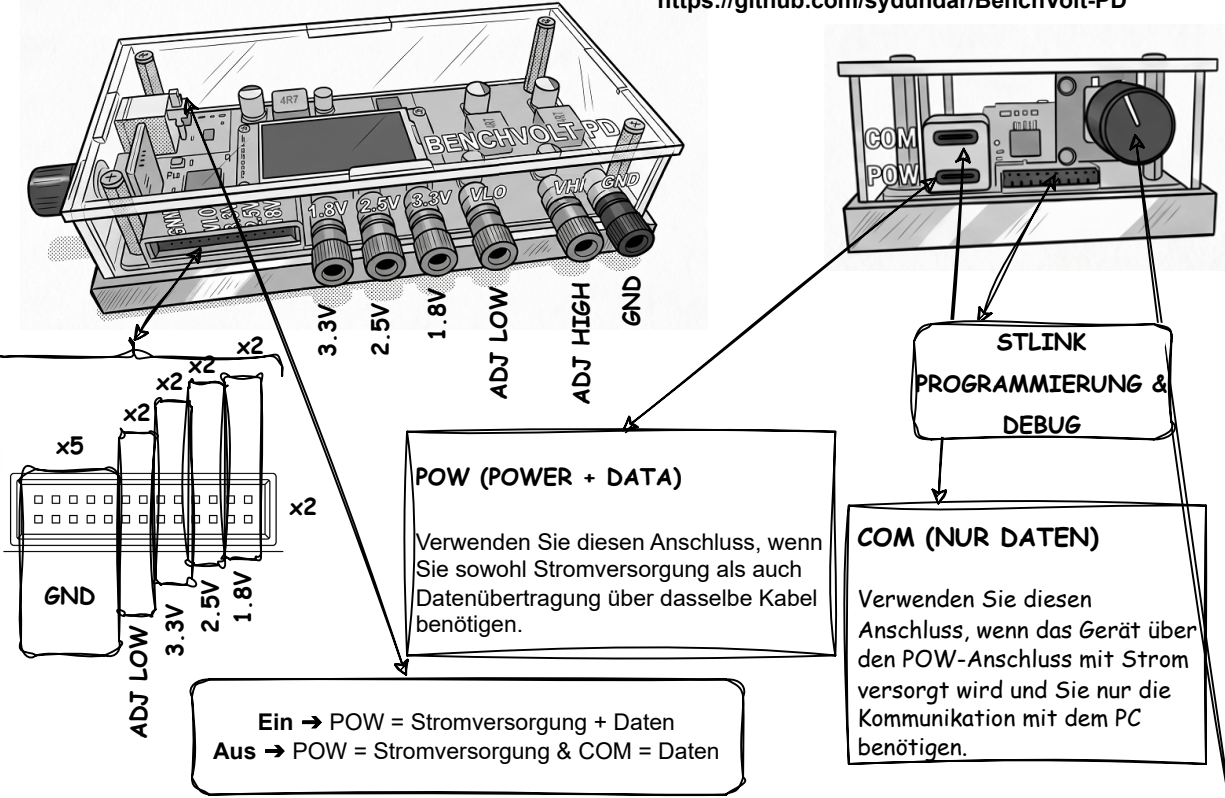

Der Drehencoder wird verwendet, um durch zwei Menüs zu navigieren: Hauptmenü und Grenzwerte-Menü. Drehen Sie den Encoder im oder gegen den Uhrzeigersinn, um zwischen den Optionen zu wechseln, und drücken Sie die mittlere Taste, um Einstellungen auszuwählen oder zu bearbeiten. Um das Grenzwerte-Menü zu verlassen, navigieren Sie zur Option „Exit“ oben links und drücken Sie die mittlere Taste. Die Benutzeroberfläche wurde einfach und intuitiv gestaltet, damit sich Benutzer schnell mit der Navigation vertraut machen können.

Zubehör

5 Krokodilklemmen-zu-Bananenstecker-Kabel



2,54-mm Mehrdraht-Female-Jumper-Kabel

Sicherheitshinweise



BenchVolt PD erfüllt die geltenden CE- und UKCA-Anforderungen, einschließlich der RoHS-Richtlinie (Beschränkung gefährlicher Stoffe) sowie der EMC-Richtlinie (Elektromagnetische Verträglichkeit).

Warnhinweise

- Verwenden Sie ausschließlich USB Power Delivery (USB-PD)-kompatible Netzteile und Kabel.
- Überprüfen Sie vor dem Anschließen externer Hardware die Ausgangsspannung und Stromeinstellungen.
- Falsche Spannungseinstellungen können angeschlossene Geräte dauerhaft beschädigen.
- Überschreiten Sie nicht die maximal zulässigen Ein- oder Ausgangsgrenzen.
- Schließen Sie die Ausgänge nicht absichtlich kurz.
- Alle Ausgangskanäle verwenden dieselbe gemeinsame Masse (GND). Verbinden Sie niemals einen Ausgangskanal direkt mit einem anderen Ausgangskanal.
- Schalten Sie den Ausgang aus, bevor Sie externe Geräte anschließen oder trennen.
- Die Aluminium-Basis kann sich bei längerem Betrieb mit hoher Leistung erwärmen.
- Bei dauerhaftem Hochleistungsbetrieb kann zusätzliche Kühlung erforderlich sein.
- Beachten Sie geeignete ESD-Schutzmaßnahmen beim Berühren der Ein- oder Ausgangsanschlüsse.
- Betreiben Sie das Gerät nicht in feuchten, nassen oder leitfähigen Umgebungen.
- Trennen Sie die Stromversorgung, bevor Sie das Gehäuse öffnen oder Wartungsarbeiten durchführen.
- Sorgen Sie während des Betriebs für ausreichende Belüftung.
- Verwenden Sie keine beschädigten USB-Kabel oder Zubehöerteile.
- Dieses Produkt ist ausschließlich für Labor-, Entwicklungs- und Engineering-Anwendungen vorgesehen.
- Von Kindern fernhalten und nicht unbeaufsichtigt betreiben.
- Dieses Produkt ist nicht für medizinische Anwendungen, sicherheitskritische Automotive-Systeme oder lebenserhaltende Systeme zertifiziert.