


# HOT TUB INSTRUCTIONS

Premium Leisure / Go Spas control panel  
Please read before use

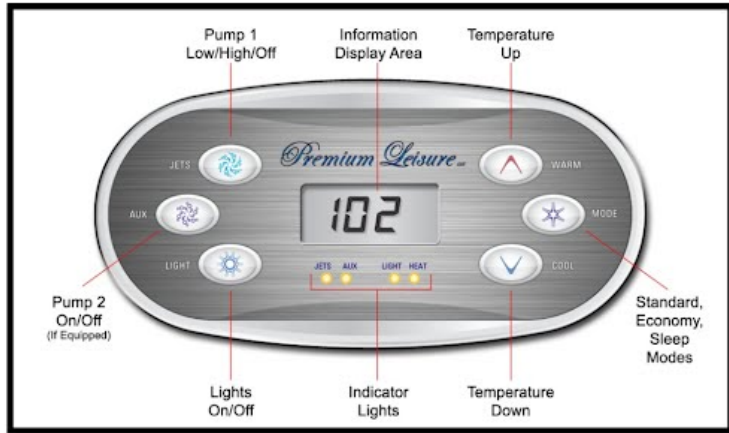

## The one rule

Use only **WARM ▲** and **COOL ▼** to set the temperature.

While the display is **flashing**, press nothing else. Wait for it to stop flashing and show the water temperature again. The only exception is switching modes (green box below).

## Setting the water temperature **WARM ▲** **COOL ▼**

### 1. Press an arrow once

The display flashes and shows the current *set* temperature (not the water temperature).

### 2. Press again while flashing

Each press of **WARM** raises the setting by 1°. Each press of **COOL** lowers it by 1°.

### 3. Stop pressing

After 5 seconds the display goes solid and shows the actual water temperature again. Done.

Range 80°F to 104°F (maximum). Heating is slow, so set it early and keep the cover on while it warms up.

## Not heating? Check the mode **WARM ▲** or **COOL ▼** then **MODE**

**How to tell:** in Standard mode the display shows only the temperature. If it alternates between the temperature and **Ecn** or **SLP**, the tub only heats during filter cycles and the water will stay cool.

1. Press **WARM** or **COOL** once. The display starts flashing.
2. While it is flashing, press **MODE**. The mode advances one step: Standard → Economy → Sleep → Standard.
3. Repeat steps 1 and 2 until **Std** appears for a moment. The tub is now in Standard mode and will heat.

## Jets **JETS** **AUX**

- Press **JETS** **once** for **LOW** jets.
- Press **JETS** **twice** for **HIGH** jets.
- Press a **third time** to turn the jets off.
- **AUX** runs the other jets: press **once** for on, **again** for off.

High and AUX shut off after 15 minutes. Low may run by itself now and then to heat the water. That is normal.

## Lights **LIGHT**

- Press **LIGHT** **once** to turn on the LED lights.
- Press again to cycle through the color patterns.
- Keep pressing until the lights turn off.

Lights shut off by themselves after 4 hours.

## Please do not

- **Hold any button down.** Short presses only, under 2 seconds. Holding a button can open settings menus.
- Press **MODE** except as shown in the green box above.
- Leave the cover off. Cover and latch the tub after every use.
- Turn off the breaker or unplug the tub.
- Bring glass into or near the tub.

## Safety and display messages

- Supervise children at all times. Limit soaks to 15 minutes at 104°F.
- **Pr** on the display: the tub is restarting. Wait 5 minutes.
- **OH, OHS, HH, OHH:** too hot. Do not enter. Remove the cover and let us know.
- **Ecn** or **SLP** alternating with the temperature: the tub is not in Standard mode. See the green box above.

Questions or anything not working? Contact your host: \_\_\_\_\_

Thank you and enjoy your stay!