


HOT TUB INSTRUCTIONS

Premium Leisure / Go Spas control panel
Please read before use

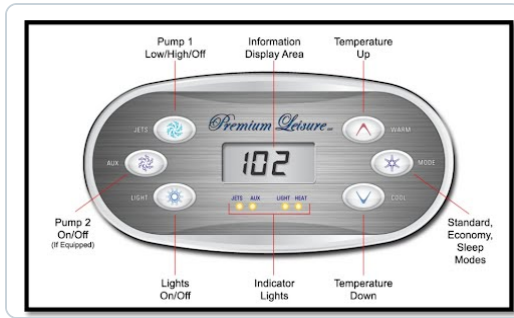

The one rule

To change the temperature, use **ONLY** the **WARM ▲** and **COOL ▼** arrows.

Do not press any other button before or after setting it. **JETS** or **LIGHT** right after an arrow opens the filter menu. **MODE** after an arrow changes the heating mode (green box).

When you press an arrow, the **set point** temperature **flashes**. Keep pressing while it flashes to change it. After 5 seconds the display goes back to **solid**, showing the **current water temperature**. That is normal. Your setting is saved.

Setting the water temperature **WARM ▲** **COOL ▼**

1. Press an arrow once

The display flashes and shows the current **set** temperature (not the water temperature).

2. Press again while flashing

Each press of **WARM** raises the setting by 1°. Each press of **COOL** lowers it by 1°.

3. Stop pressing

After 5 seconds the display goes solid and shows the actual water temperature again. Done.

Range 80°F to 104°F (maximum). Heating is slow, so set it early and keep the cover on while it warms up. The reading is only accurate after the pump has run a couple of minutes.

Not heating? Check the mode **WARM ▲** or **COOL ▼** then **MODE**

How to tell: in Standard mode the display shows only the temperature. If it alternates between the temperature and **Ecn** (Economy) or **SLP** (Sleep), the tub is only heating during filter cycles and the water will stay cool.

1. Press **WARM** or **COOL** once. The display starts flashing.
2. While it is flashing, press **MODE**. The mode advances one step: Standard → Economy → Sleep → Standard.
3. Repeat step 1 and 2 until **Std** appears on the display for a moment. The tub is now in Standard mode and will heat to the set temperature.

Jets **JETS** **AUX**

- Press **JETS** **once** for **LOW** jets.
- Press **JETS** **twice** for **HIGH** jets.
- Press a **third time** to turn the jets off.
- **AUX** runs the other jets: press **once** for on, **again** for off.

High and AUX shut off after 15 minutes. Low may run by itself now and then to heat the water. That is normal.

Lights **LIGHT**

- Press **LIGHT** **once** to turn on the LED lights.
- Press again to cycle through the color patterns.
- Keep pressing until the lights turn off.

Lights shut off by themselves after 4 hours.

Please do not

- **Hold any button down.** Short presses only, under 2 seconds. Holding a button can open settings menus.
- Press **MODE** except as shown in the green box above.
- Leave the cover off. Cover and latch the tub after every use.
- Turn off the breaker or unplug the tub.
- Bring glass into or near the tub.

Safety and display messages

- Supervise children at all times. Limit soaks to 15 minutes at 104°F.
- **Pr** on the display: the tub is restarting. Wait 5 minutes.
- **OH, OHS, HH, OHH:** too hot. Do not enter. Remove the cover and let us know.
- **Ecn** or **SLP** alternating with the temperature: the tub is not in Standard mode. See the green box above.

Questions or anything not working? Contact your host: _____

Thank you and enjoy your stay!