


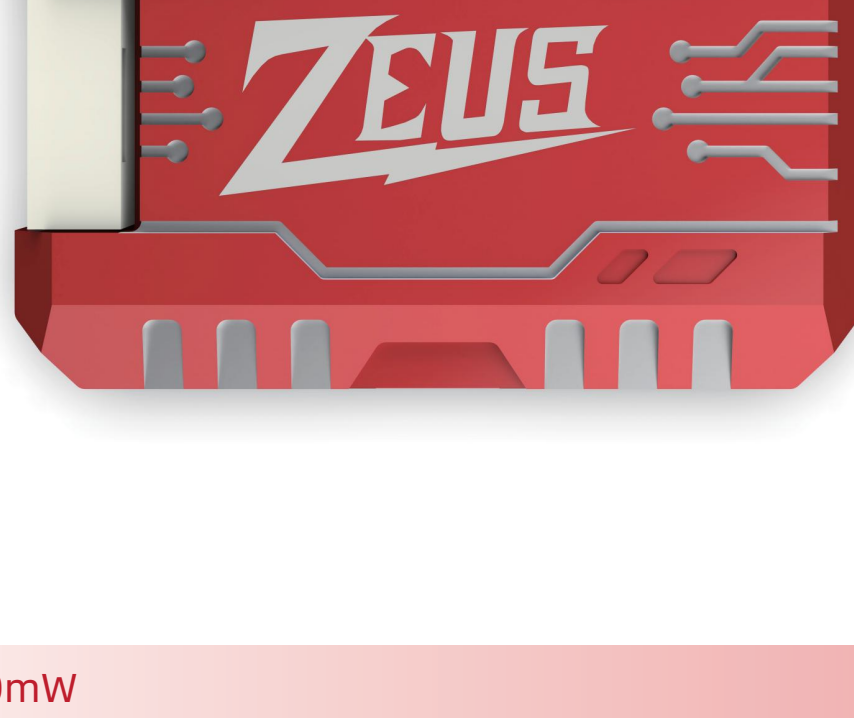

Zeus VTX PRO 1600mW

图传说明书



产品参数

内置麦克风

支持电压:7-36V

BEC:5V/500mA

PIT

25mW/13.95dBm

400mW/26.02dBm

800mW/29.03dBm

1600mW/32.04dBm

天线接口:MMCX

输出功率:PIT/25/400/800/1600mW

标准40频道.A/B/E/F/R频组

图传协议: IRC tramp

安装孔位:20X20.M2

尺寸:25mm x 37mm x 6.5mm

重量:13g

产品清单

1 x Zeus VTX PRO 1600mW

1 x MMCX 80mm 铜管天线


1 x MMCX转SMA 100mm 转接头

1 x GH1.25 6Pin 100mm 连接线

接口定义



接线图

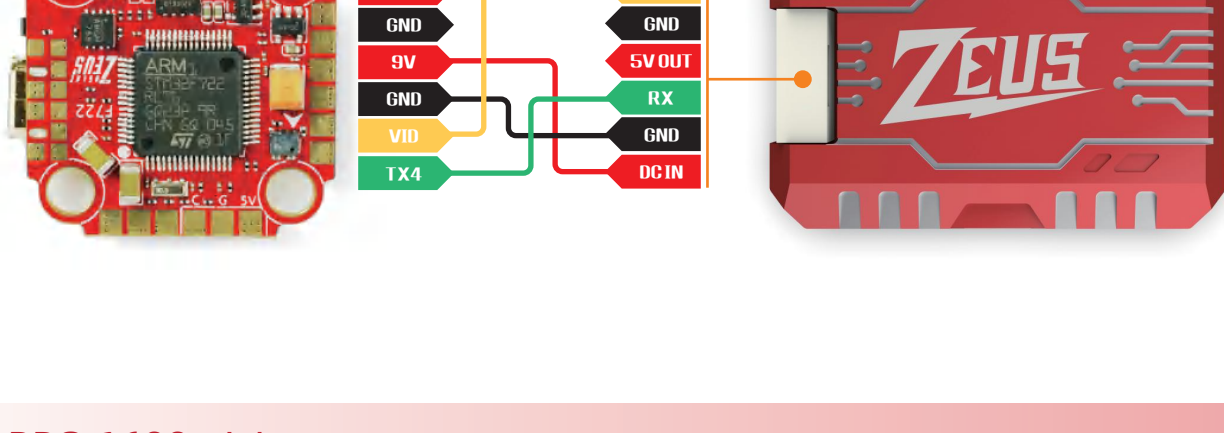

功能及应用说明

1.图传参数设置方式为飞控OSD控制和按键控制

2.飞控OSD控制所使用的协议为:

IRC tramp "PIT/25/400/800/1600 MW"

对应参数表数值为 "TR PIT/25/400/800/1600"

功率级别数量				
1	2	3	4	值
25	400	800	1600	
25	400	800	MAX	标签

3.按键控制定义

按键 "A" : 短按改变图传CH

"A→B→E→F→R→A" 循环

长按(3S以上)后, 图传功率跳至下一级

"PIT→25→...1600→PIT" 循环

按键 "B" : 短按改变图传BAND

"1→2→3→...→8→1" 循环

4.上电前长按 "A" 键, 通电后进入PIT模式

松开A键后, 按键A/B短按可以改变图传CH/BAND

长按无效; 需重新上电, 长按 "A" 键才能进行调整功率

功率指示灯状态

指示灯: 红色	常态	闪1下	闪2下	闪3下	闪4下
频率	PIT	25mw	400mw	800mw	1600mw

频率表

频段(蓝灯)	频道(绿灯)							
	1	2	3	4	5	6	7	8
A	5865	5845	5825	5805	5785	5765	5745	5725
B	5733	5752	5771	5790	5809	5825	5847	5866
E	5705	5685	5665	5665	5885	5905	5905	5905
F	5740	5760	5780	5800	5820	5840	5860	5880
R	5658	5695	5732	5769	5806	5843	5880	5917

使用注意事项

- 通电前确定输出端已安装天线, 以免损坏内部元件。
- 注意输入电压在规定范围内且正确无误, 以免损坏内部元件。
- 图传在大功率工作下, 外表面温度较高, 严禁用手直接触摸, 以免受伤。

公司信息

衷心感谢飞友的信任! 欢迎选择化骨龙的产品

公司名称: 广东化骨龙科技有限公司

技术电话: 18033023851 (微信同号)


官网网址: <https://hglrc.taobao.com>

地址: 东莞市大朗镇银英路28号泓鑫泰产业园B1栋



Zeus VTX PRO 1600mW

VTX manual

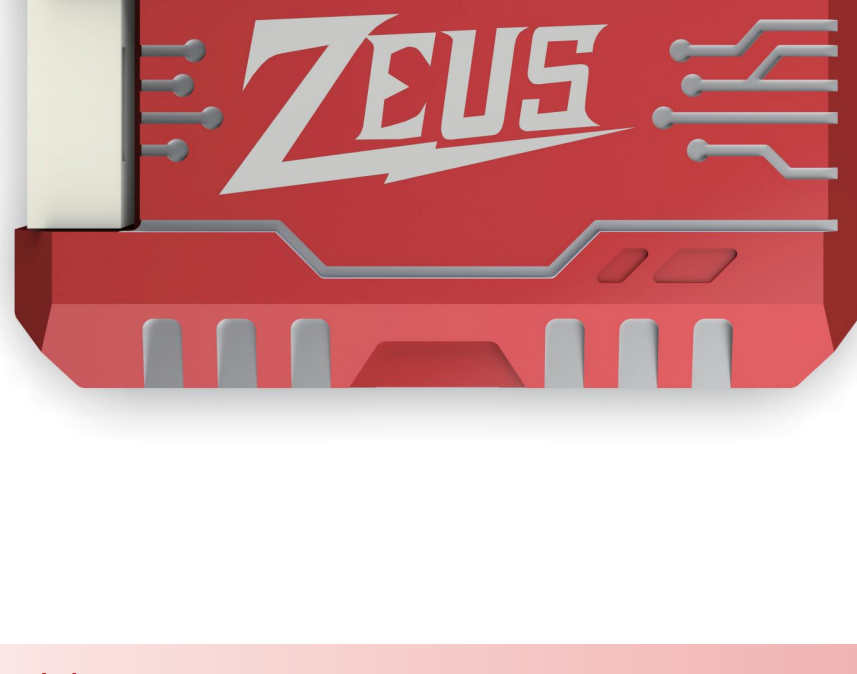

VTX PRO 1600mW instruction manual



Product parameters

Built-in microphone

Support voltage:7-36V

BEC:5V/500mA

PIT

25mW/13.95dBm

400mW/26.02dBm

800mW/29.03dBm

1600mW/32.04dBm

Antenna interface:MMCX

Output power:PIT/25/400/800/1600mW

standard 40 channel.A/B/E/F/R FR

VTX protocol: IRC tramp

install hole:20X20.M2

Size:25mm x 37mm x 6.5mm

Weight:13g

Product include

1 x Zeus VTX PRO 1600mW

1 x MMCX 80mm copper tube antenna


1 x MMCX To SMA 100mm Adapter

1 x GH1.25 6Pin 100mm connect cable

VTX PRO 1600mW Operating instructions




Interface definition

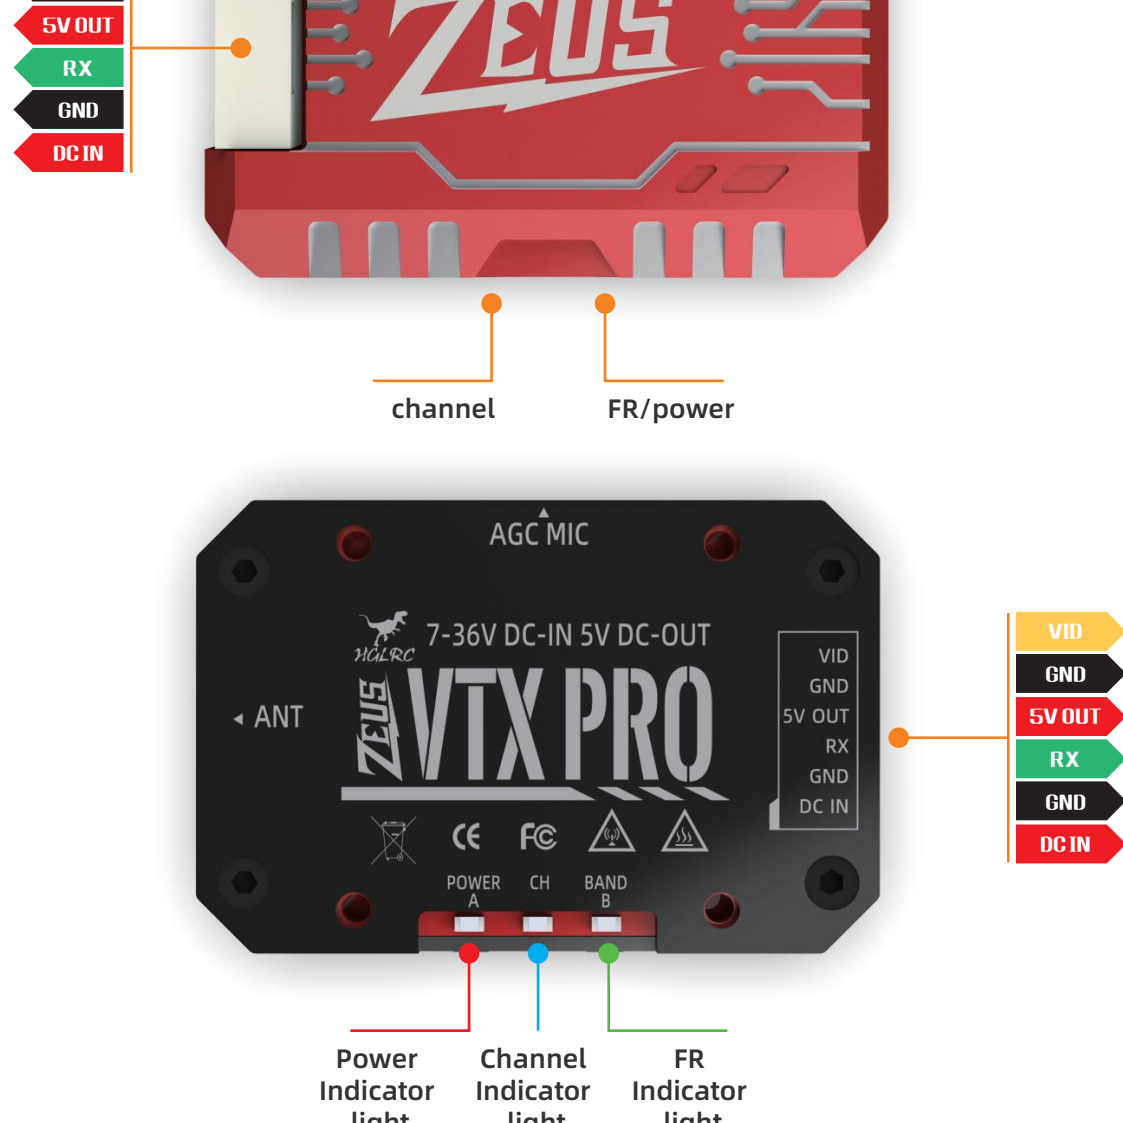

VTX PRO 1600mW Operating instructions



wiring diagram

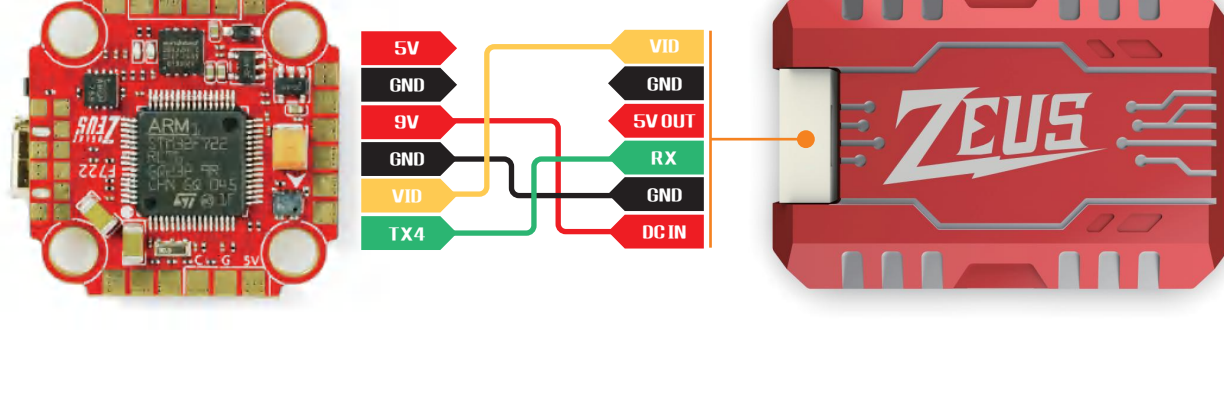

VTX PRO 1600mW Operating instructions



Function and application description

1. VTX parameter setting method is flight control OSD control and button control
2. The protocol used in the flight control OSD control is:

IRC tramp "PIT/25/400/800/1600 MW"

The values in the corresponding parameter form are "TR PIT/25/400/800/1600"

4	功率级别数量			
1	2	3	4	
25	400	800	1600	值
25	400	800	MAX	标签

3.Definition of key control

Button "A": Short press to change VTX CH

"A→B→E→F→R→A" cycle

After a long press (3S or more), the power of the VTX moves to the next level

"PIT→25→...1600→PIT" cycle

Key "B": short press to change the VTX BAND

"1→2→3→...→8→1" cycle

4.Press and hold the "A" button before powering up, then enter PIT mode after powering up

After releasing the "A" button, press the "A/B" button briefly to change the VTX CH/BAND

Long presses are not valid; you need to re-power the unit and press and hold the "A" key to adjust the power

VTX PRO 1600mW Operating instructions



Power indicator status

Indicator:RED	Normal	The first blink	Second blink	Third blink	Fourth blink
Frequency	PIT	25mw	400mw	800mw	1600mw

VTX PRO 1600mW Operating instructions



Frequency form

Frequency band (blue light)	channel (green light)							
	1	2	3	4	5	6	7	8
A	5865	5845	5825	5805	5785	5765	5745	5725
B	5733	5752	5771	5790	5809	5825	5847	5866
E	5705	5685	5665	5665	5885	5905	5905	5905
F	5740	5760	5780	5800	5820	5840	5860	5880
R	5658	5695	5732	5769	5806	5843	5880	5917

Precautions for use

1. Make sure that the antenna is installed at the output before powering up to avoid damage to the internal components.
- 2.Make sure that the input voltage is within the specified range and is correct to avoid damage to the internal components.
- 3.When VTX is working at high power, the temperature of the external surface is high, it is strictly forbidden to touch it directly with hands to avoid injury.

Company information

Sincerely thanks for everyone trust! Welcome to choose HGLRC products



Company name: Guangdong Huagulong Technology Co., Ltd.

After sales email: hglrc@support.com

Official website: www.hglrc.com

A d d r e s s : Building B1,Hongxintai Industrial Park,No. 28 Yinying Road,Dalang Town,
Dongguan city,523771,China