


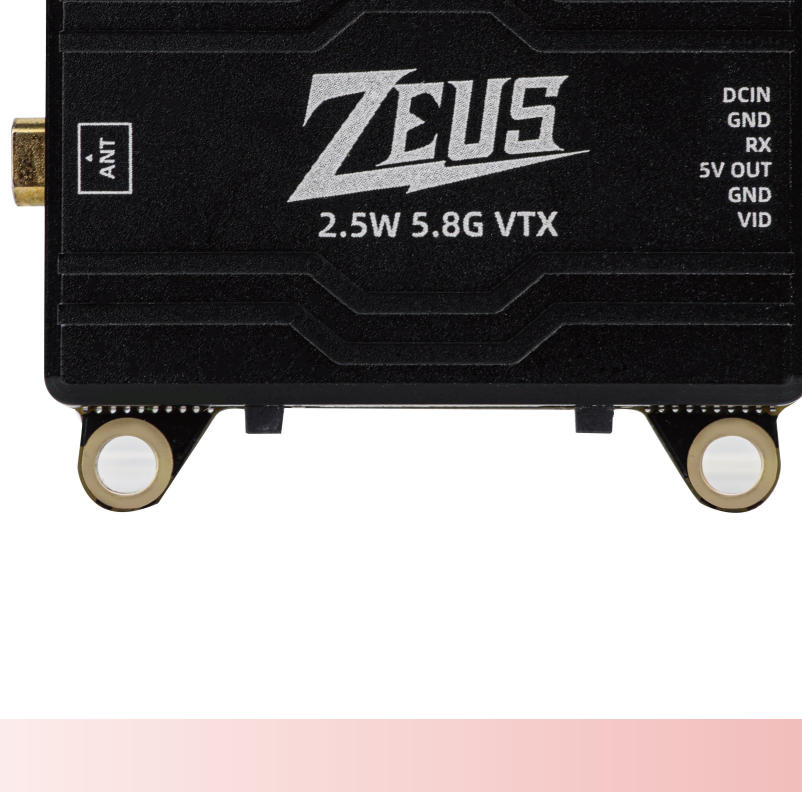

ZEUS VTX 2.5W

图传说明书



Zeus VTX 2.5W 使用指南



产品参数

产品名称：Zeus VTX 2.5W

支持电压：DC 7-26V

BEC：5V/800mA

天线接口：MMCX

排线接口：GH1.25 6P

视频格式：PAL/NTSC

标准40频道.A/B/E/F/R频组

协议：IRC Tramp

输出功率:PIT/25/200/800/1.6W/2.5W

PIT/O

25mW/13.95dBm

200mW/23.01dBm

800mW/29.03dBm

1.6W/32.04dBm

2.5W/33.98dBm

安装孔位:30.5*30.5*M3


尺寸(L*W*H):40mm x 35mm x 11.8mm

重量:19.6g

Zeus VTX 2.5W 使用指南




接口定义

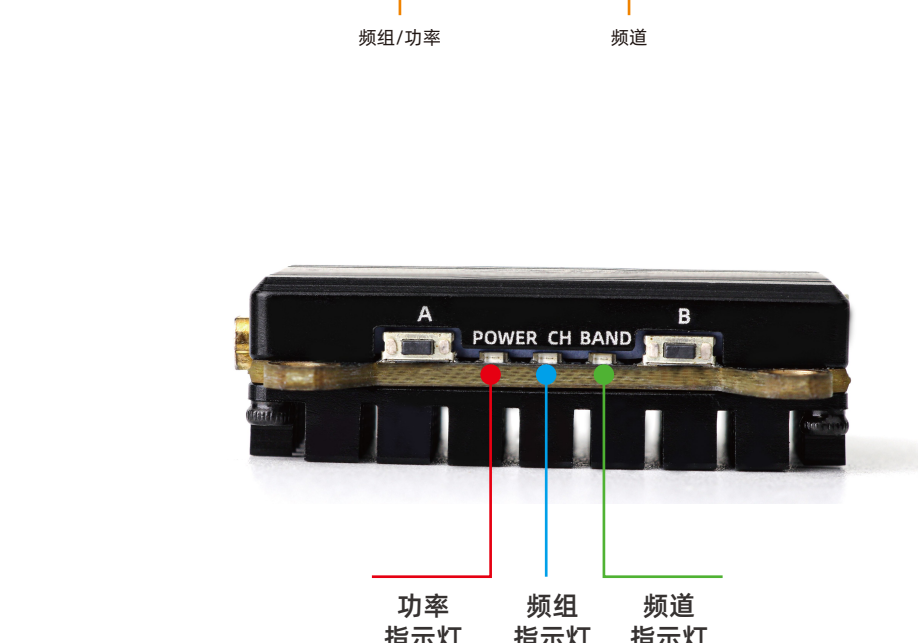

Zeus VTX 2.5W 使用指南



接线图

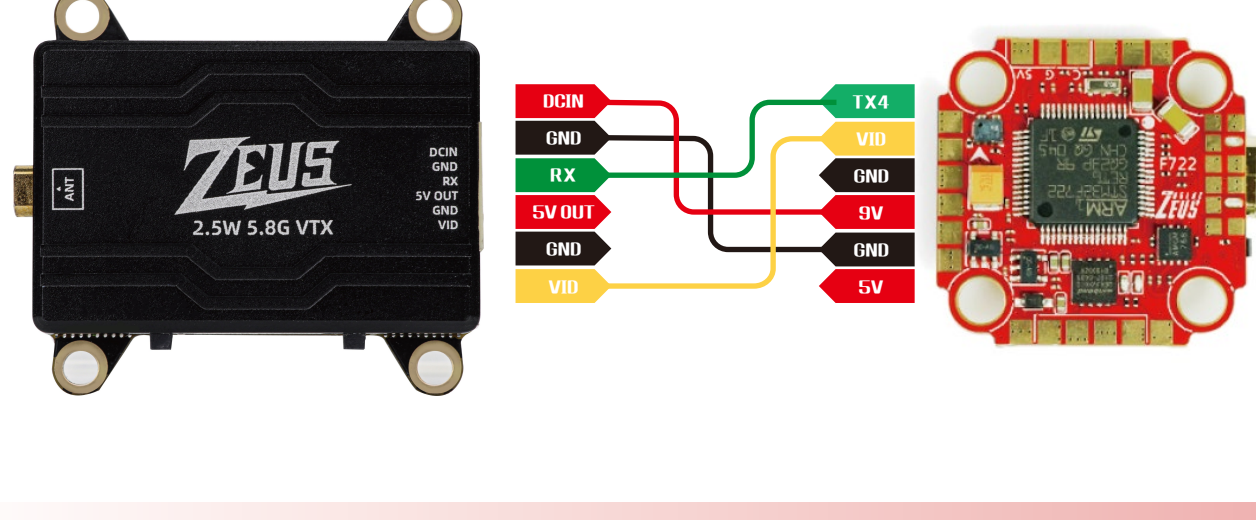

Zeus VTX 2.5W 使用指南



功能及应用说明

1.图传参数设置方式为飞控OSD控制和按键控制

2.飞控OSD控制所使用的协议为：IRC Tramp

IRC tramp “PIT/25/200/800/1600mW2500mW”

对应参数表数值为 “TR PIT/25/200/800/1W6/2W5”

功率级别数量	1	2	3	4	5	值	标签
25	200	800	1600	2500			
25	200	800	1W6	2W5			

3.按键控制定义

按键“A”：短按改变图传CH

“A→B→E→F→R→A”循环

长按(3S以上)后，图传功率跳至下一级

“PIT→25→...800→2.5W→PIT”循环

按键“B”：短按改变图传BAND

“1→2→3→...→8→1”循环

4.上电前长按“A”键，通电后进入PIT模式

松开A键后，按键A/B短按可以改变图传CH/BAND

长按无效；需重新上电，长按“A”键才能进行调整功率

Zeus VTX 2.5W 使用指南



功率指示灯状态

指示灯：红色	常态	闪1下	闪2下	闪3下	闪4下	闪5下
频率	PIT	25mw	400mw	800mw	1600mw	2500mw

Zeus VTX 2.5W 使用指南



频率表

图传表											
5	频段数量	8	频段内的频道数								
名称	字母	工厂模式	1	2	3	4	5	6	7	8	
BOSCAM_A	A	☐	5865	5845	5825	5805	5785	5765	5745	5725	频段 1
BOSCAM_B	B	☐	5733	5752	5771	5790	5809	5828	5847	5866	频段 2
BOSCAM_E	E	☐	5705	5685	5665	5645	5885	5905	5925	5945	频段 3
FATSHARK	F	☐	5740	5760	5780	5800	5820	5840	5860	5880	频段 4
RACEBAND	R	☐	5658	5695	5732	5769	5806	5843	5880	5917	频段 5

Zeus VTX 2.5W 使用指南



使用注意事项

- 通电前确定输出端已安装天线，以免损坏内部元件。
- 注意输入电压在规定范围内且正确无误，以免损坏内部元件。
- 图传在大功率工作下，外表面温度较高，严禁用手直接触摸，以免受伤。

公司信息

衷心感谢飞友的信任！欢迎选择化骨龙的产品

公司名称：广东化骨龙科技有限公司

技术电话：18033023851（微信同号）

官网网址：https://hglrc.taobao.com

地址：东莞市大朗镇银英路28号泓鑫泰产业园B1栋



ZEUS VTX 2.5W

VTX manual



Zeus VTX 2.5W instruction manual



Product parameters

Product name: Zeus VTX 2.5W

Support voltage: DC 7-26V

BEC: 5V/800mA

Antenna interface: MMCX

Cable interface: GH1.25 6P

Video format: PAL/NTSC

Standard 40 channels.A/B/E/F/R frequency group

Protocol: IRC Tramp

Output power:PIT/25/200/800/1.6W/2.5W

PIT/0

25mW/13.95dBm

200mW/23.01dBm

800mW/29.03dBm

1.6W/32.04dBm

2.5W/33.98dBm

Installation hole position:30.5*30.5*M3


Dimensions (L*W*H): 40mm x 35mm x 11.8mm

Weight: 19.6g

Zeus VTX 2.5W Operating instructions




Interface definition

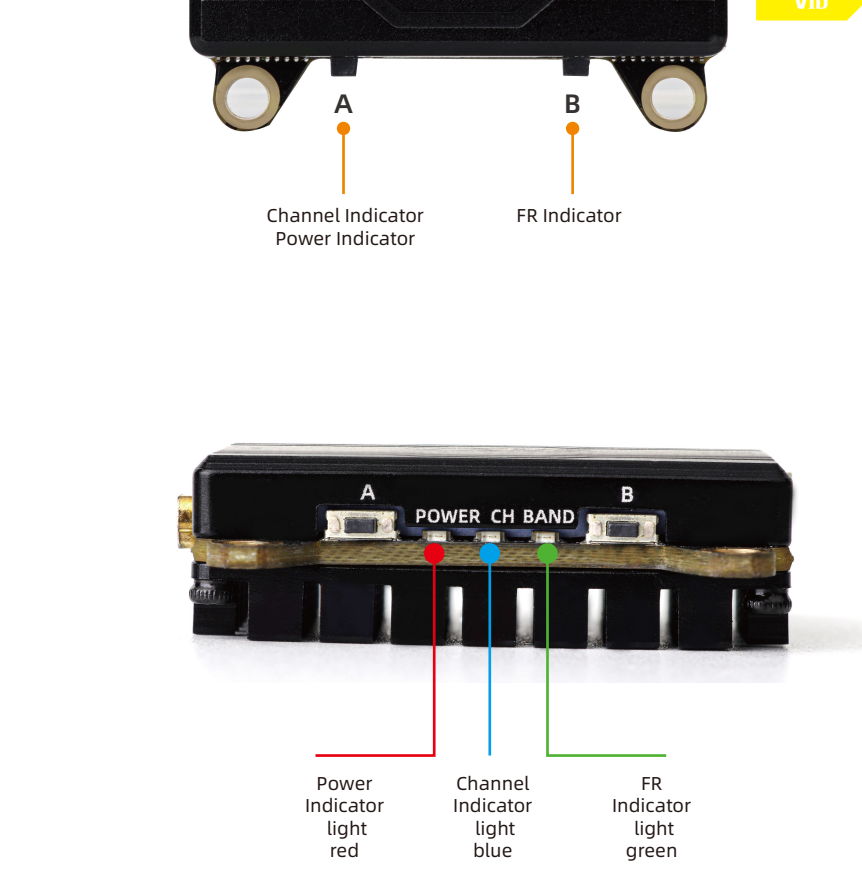

Zeus VTX 2.5W Operating instructions



wiring diagram

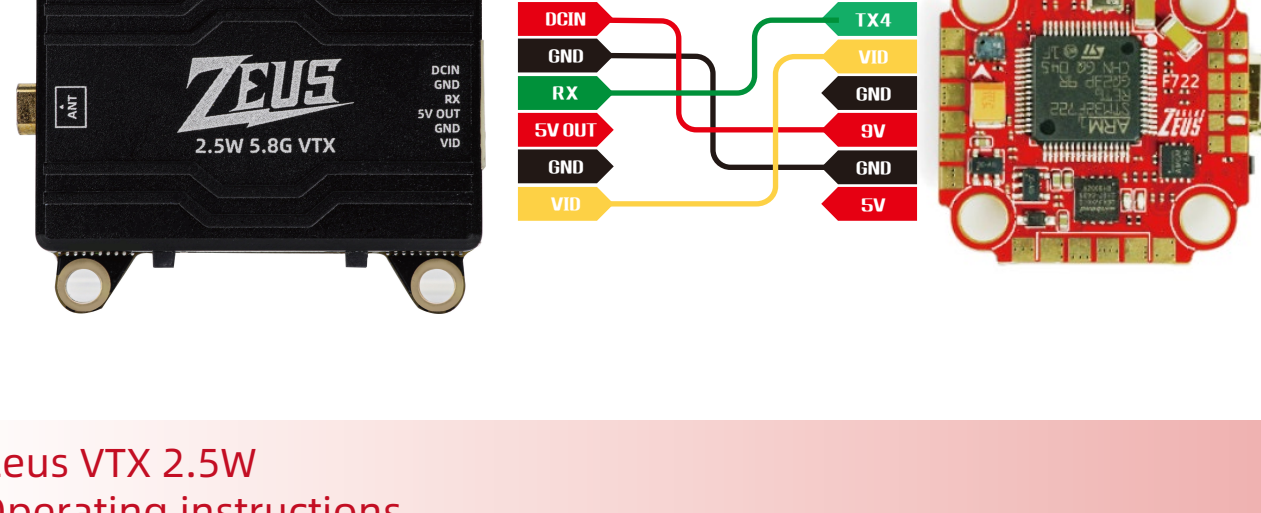

Zeus VTX 2.5W Operating instructions



Function and application description

- VTX parameter setting method is flight control OSD control and button control
- The protocol used in the flight control OSD control is:IRC Tramp

IRC tramp	"PIT/25/200/800/1600mW2500mW"
The values in the corresponding parameter form are	"TR PIT/25/200/800/1W6/2W5"

Number of power levels					
1	2	3	4	5	
25	200	800	1600	2500	Value
25	200	800	1W6	2W5	Label

3.Definition of key control

Button "A": Short press to change VTX CH

"A→B→E→F→R→A" cycle
After a long press (3S or more), the power of the VTX moves to the next level
"PIT→25→...800→2.5W→PIT" cycle

Key "B": short press to change the VTX BAND

"1→2→3→...→8→1" cycle
4.Press and hold the "A" button before powering up, then enter PIT mode after powering up
After releasing the "A" button, press the "A/B" button briefly to change the VTX CH/BAND
Long presses are not valid; you need to re-power the unit and press and hold the "A" key to adjust the power


Zeus VTX 2.5W Operating instructions



Power indicator status

Indicator:RED	Normal	The first blink	Second blink	Third blink	Fourth blink	Fifth blink
Frequency	PIT	25mw	400mw	800mw	1600mw	2500mw


Zeus VTX 2.5W Operating instructions



Frequency form

VTX Table																
5			Number of bands													
8			Number of channels by band													
Name	Letter	Factory	1	2	3	4	5	6	7	8						
BOSCAM_A	A		5865	5845	5825	5805	5785	5765	5745	5725	Band 1					
BOSCAM_B	B		5733	5752	5771	5790	5809	5828	5847	5866	Band 2					
BOSCAM_E	E		5705	5685	5665	5645	5885	5905	5925	5945	Band 3					
FATSHARK	F		5740	5760	5780	5880	5820	5840	5860	5880	Band 4					
RACEBAND	R		5658	5695	5732	5769	5806	5843	5880	5917	Band 5					

Zeus VTX 2.5W Operating instructions



Precautions for use

- Make sure that the antenna is installed at the output before powering up to avoid damage to the internal components.
- Make sure that the input voltage is within the specified range and is correct to avoid damage to the internal components.
- When VTX is working at high power, the temperature of the external surface is high, it is strictly forbidden to touch it directly with hands to avoid injury.

Company information

Sincerely thanks for everyone trust! Welcome to choose HGLRC products



Company name: Guangdong Huagulong Technology Co., Ltd.

After sales email: hglrc@support.com

Official website: www.hglrc.com

A d d r e s s : Building B1,Hongxintai Industrial Park,No. 28 Yinying Road,Dalang Town,

Dongguan city,523771,China