

TERK VTX-4W 1.2G PRODUCT MANUAL


Product Specifications >>>

Type:	TERK
Input voltage:	DC+7V-30V
Output voltage:	DC+5V
Video Transmission Protocol:	IRC TRAMP
Frequency band:	1080-1360MHz
Channel customer:	16
Modulation type:	FM
Frequency control:	PLL
Frequency Stability:	±100KHz (TyP.)
Frequency precision:	±200KHz (TyP.)
S/N (Fo±3MHz):	>55dBc
Antenna Port:	SMA 50 Ohms
Video input level:	1V±0.2Vp-p type
Operating Temperature:	-10°C~+60°C
Control Protocol:	IRC
Weight:	Approx:40g
Profile dimension:	48mm(L)*32mm(W)*19mm(H)
Channel Frequency:	A:1080/1120/1160/1200/1240/1280/1320/1360MHz B:1080/1120/1160/1200/1258/1280/1320/1360MHz



WARNING

Be sure to plug in the antenna
before powering up, or you will
burn this product!!!

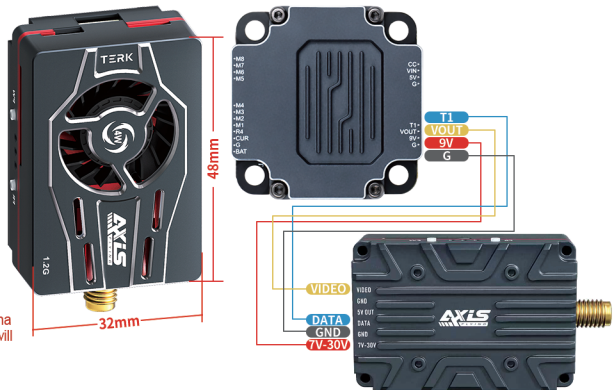

Basic Settings >>>

1.Open the VTX settings, click "Load from File" to select and import the corresponding VTX table, then save the configuration.

Selected Mode

Enter frequency directly

None

Band

None

Channel

None

Power

0

Pit Mode

Off

Pit Mode frequency

Low Power Disarm

Save Lua Script

Save to file

Load from file

Load from clipboard

Save

Current Values

Device ready

VTX Type

Band

Channel

Frequency

Power

Pit Mode

Pit Mode frequency

Low Power Disarm

3.Navigate to the "Video Transmission (VTX)" page and configure the following settings.

Selected Mode

Enter frequency directly

BAND_A

Band

Channel 1

Channel

5

Power

None

25

400

1

Pit Mode

5

Pit Mode frequency

Off

Low Power Disarm

2.Access the port interface, enable the "Peripheral" → "IRCTRAMP" function for the corresponding UART port.

Ports

Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	115200	Disabled	AUTO	Disabled	AUTO
UART1	115200	Disabled	AUTO	Disabled	AUTO
UART2	115200	Disabled	AUTO	Disabled	AUTO
UART3	115200	Disabled	AUTO	Disabled	AUTO
UART4	115200	Disabled	AUTO	Disabled	AUTO
UART5	115200	Disabled	AUTO	Disabled	AUTO
UART6	115200	Disabled	AUTO	Disabled	AUTO

VTX Table											
2		Number of bands		8		Number of channels by band					
Name	Letter	Factory	1	2	3	4	5	6	7	8	
BAND-1	1	☐	1080	1120	1160	1200	1240	1280	1320	1360	Band 1
BAND-2	2	☐	1080	1120	1160	1200	1258	1280	1320	1360	Band 2
4		Number of power levels		You can increase the number of power levels here; the default is 5 levels							
1	2	3	4	Value							
25	200	2000	4000	Label							
PA1	PA2	PA3	PA4								

Button Descriptions >>>

POWER Button:

The green light indicates power levels. Short press to cycle through power settings. The number of blinks corresponds to the power level: 1 blink for 25mW, 2 blinks for 400mW, 3 blinks for 600mW, 4 blinks for 1.6W, and 5 blinks for 3.0W. Long press for 2 seconds to switch to PIT mode, which is indicated by a solid light.

Band/CH Button:

The red light indicates the frequency group. Long press for 2 seconds to switch between frequency groups.

The number of blinks indicates the current frequency group: 1 blink for group A, 2 blinks for group B, 3 blinks for group E, 4 blinks for group F, 5 blinks for group R, 6 blinks for group L, and 7 blinks for group X.

The blue light indicates the frequency point. Short press to cycle through frequency points CH1 to CH8.

For more details please access:www.axisflying.com

