


## RSLinx Setup for FactoryTalk View SE



**Studio 5000 program must be downloaded and in RUN Mode.**

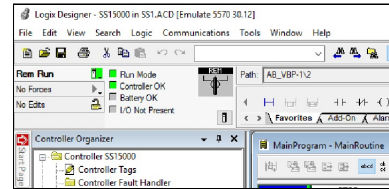


1. Double left click on **RSLinx Classic** icon.




2. Select the **RSWho** button.

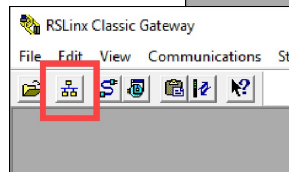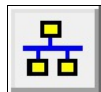


The RSWho dialog opens.

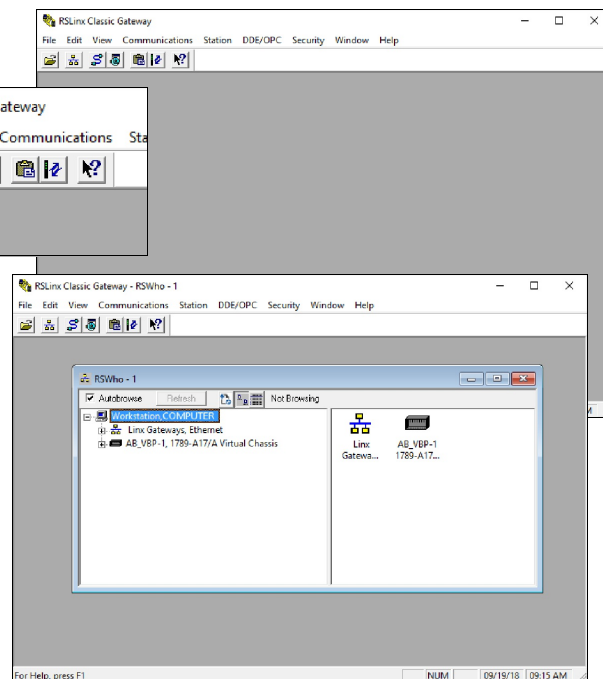


3. Expand **AB\_VBP\_1** backplane.





*Text after AB\_VBP\_1 may be different.*

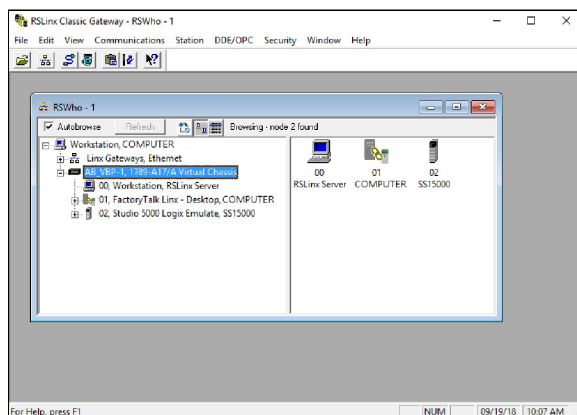

- 
4. Right click on **02**, text after 02 may be different.





- 
5. Select **Configure New DDE/OPC Topic**.

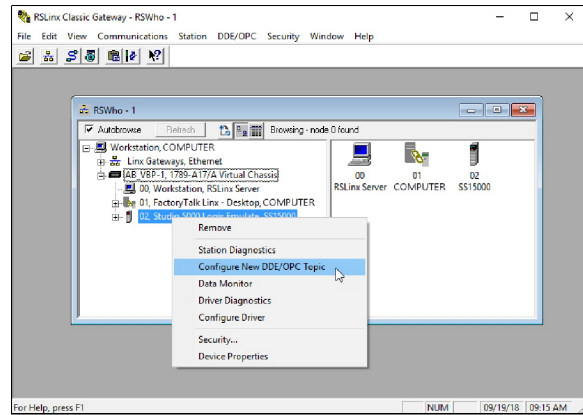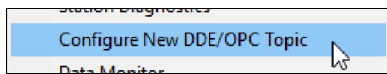


---

**DDE/OPC Topic Configuration dialog opens.**


- 
6. Select the **Done** button.

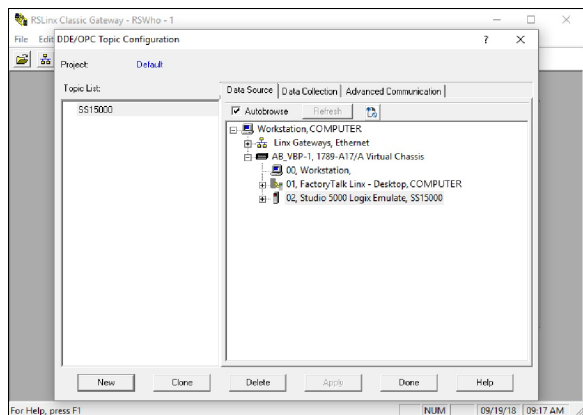

- 
7. Select the **Yes** button on the Update prompt.




*DDE/OPC Topic Configuration dialog closes.*

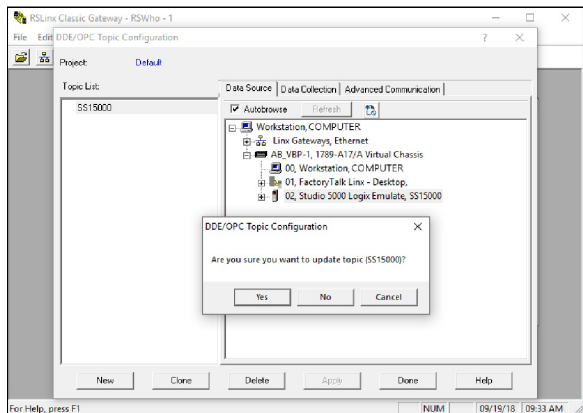

---

Minimize RSLinx Classic.

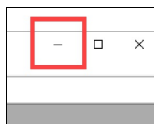


---


## START FactoryTalk View SE Client.

---


8. Double left click on **FactoryTalk SE Client** icon.

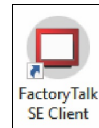

9. Select client file for the HMI.

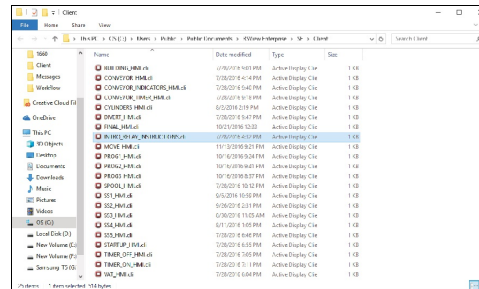

FactoryTalk View SE splash screen and then Loading Project progress bar appears.

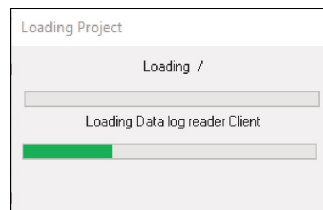

The HMI is displayed.

The HMI does not have focus. Left click on a blank area in the HMI.

**DO NOT** click quickly on HMI object with the mouse button. Allow time for the HMI to react.

