


Remove HMI RSLinx OPC Configurations

Clearing previous PLC Program and HMI Communications Configurations.

On the Desktop open **RSLinx Classic**





From the Menu select **DDE/OPC** and then **Topic Configuration**.

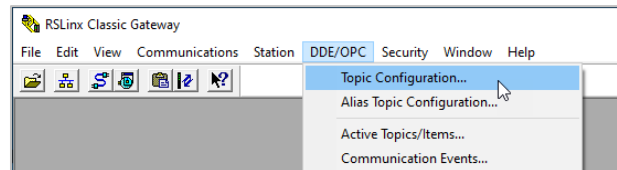



The DDE/OPC Topic Configuration dialog appears.

Select a PLC program from the **Topic List**.

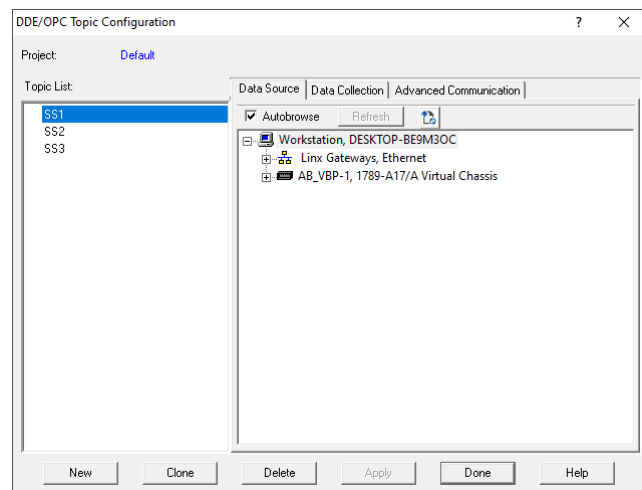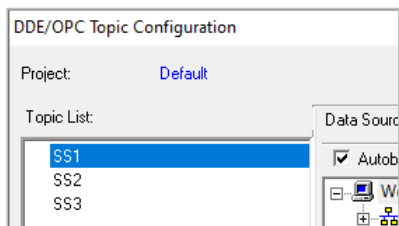



At the prompt for delete, select the **Yes** button.

The configuration is deleted.

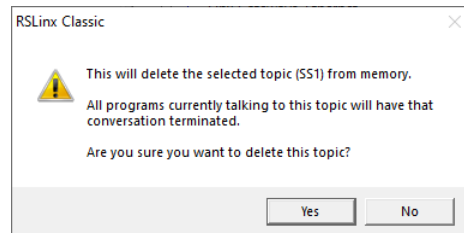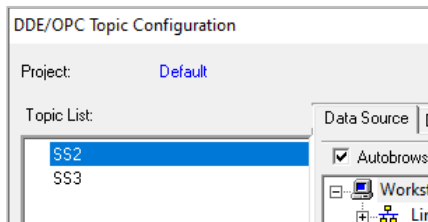

Repeat until all configurations in the Topic List are deleted.

When all configurations are deleted, select the **Done** Button.

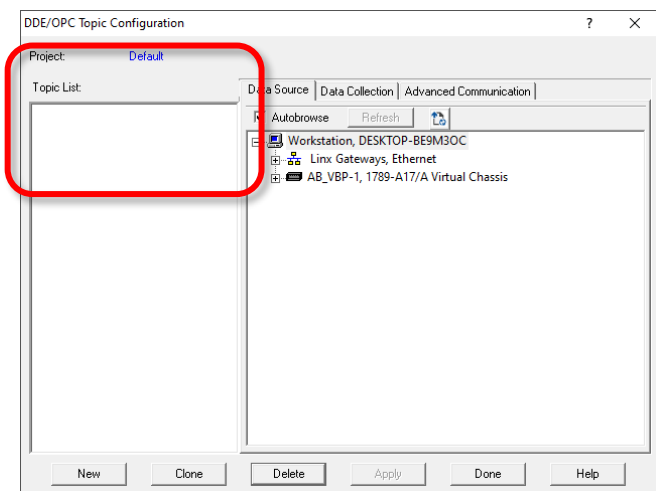

Either **Minimize** or **Exit** RSLink Gateway.

