# Taktile

Groovebox for Ableton Move (Schwung) – the manual




16 tracks · 456 sounds · 42 kits · Live FX

Version 1.0.0 · 25 October 2026

# Contents

The essentials at a glance – every chapter has its own page.


| | | |
|---|---|---|
| **1** | Welcome & installation | page 3 |
| **2** | Your first beat in 5 steps | page 4 |
| **3** | Operation: turn, click, back | page 5 |
| **4** | The 32 pads | page 6 |
| **5** | The tiles of a track | page 7 |
| **6** | Tiles in detail | page 8 |
| **7** | Sound and kit browser | page 9 |
| **8** | Shift + step: jumps and switches | page 10 |
| **9** | Live FX, granulator, undo | page 11 |
| **10** | Sampler, help | page 12 |
| **11** | The menu | page 13 |
| **12** | New in 1.0.0 | page 14 |
| **13** | New in 1.0.0 (continued) | page 15 |
| **14** | New in 1.0.0 (part 3) | page 16 |


> **Tip:** Three rules are enough to start: turn = scroll, click = go in, Back = go back.

# 1 Welcome

Taktile turns the Ableton Move into a full groovebox: step sequencer, synths, drum kits, effects and live performance in one module.

**Step sequencer**
Up to 128 steps per track, 8 clips per track. Per step: velocity, pitch, probability, ratchet, nudge, condition, length.

**456 sounds**
Analog, wavetable, FM, fold, string, pad – plus acoustic drums, effect sounds and samples.

**42 drum kits**
Techno, house, hip hop, jazz, lo-fi … load 16 matching sounds at once.

**Euclid lanes**
Four lanes per sound create lively rhythms: length, hits, rotation.

**Effects**
One shared delay and reverb bus for all tracks (a send per track; reverb HALL = Dattorro plate), 11 insert effects, 11 MIDI effects, a granulator per sound.

**Live FX**
16 performance effects on the pads: repeat, stutter, reverse, tape stop, sweeps, freeze …

**Sampler**
Load, trim and slice samples; tools for region, fit and reverse.

**Song by pads**
Song page: pads = tracks × clips, the 16 step buttons = song chain. Per step: clip per track, bars, transition, tempo.

## Installation

1. In the Schwung Manager choose “Install custom module” and load **taktile-module.tar.gz**.
2. On the Move open the **Overtake** list in the Tools menu and start Taktile.
3. Track 1 is a synth with the first sound right away – press a pad and play. Every further track asks the first time you select it: synth or drums?

## Leaving

**Back** on the top level asks: BACKGROUND (Taktile keeps running, the beat keeps playing, you use the Move normally) or CLOSE. Quit at once: **Shift** **Back**.

> Everything is saved automatically, including several projects (HOME → MORE → PROJ).

## Help on every page

**Shift** **Menu** shows a short help for the current page.

# 2 Your first beat in 5 steps

About a minute from start to groove.

**1 Start Taktile**

Overtake list → Taktile. Track 1 is a synth and plays right away on the pads.

**2 Create a drum track**

Press track button 2 → choose “Drums”. The browser now offers the kits (e.g. TECHNO), click the jog.

**3 Set steps**


Press step buttons, then Play. Tempo is knob 1.

**4 Refine a step**


Hold a step and turn knobs: 1 velocity, 2 pitch, 3 probability, 4 length, 5 ratchet, 6 nudge, 7 condition, 8 lock.

**5 More life**

Turn the jog to EUCLID, or Shift + step 4 for Live FX. Undo reverts anything.

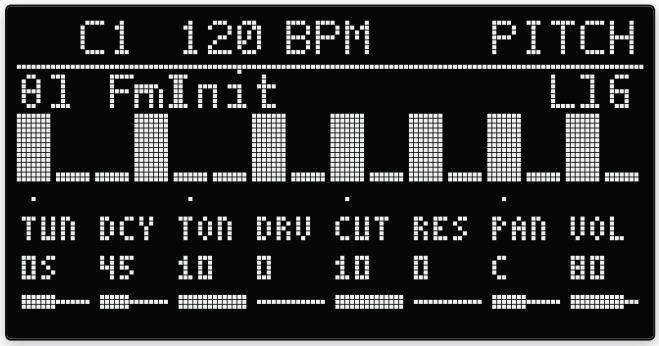


SEQ page with steps

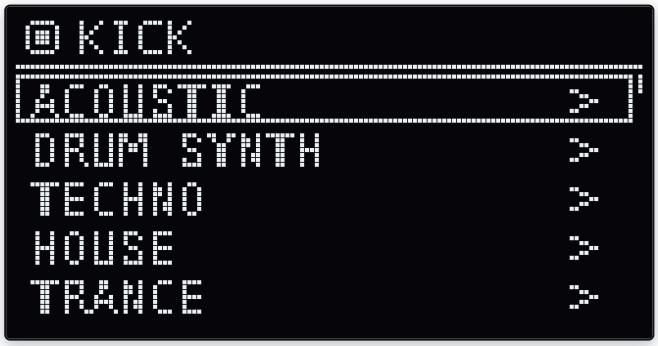



Kits and sounds in the browser

**Tip:** If you get lost press Back. It always goes one level back, and Shift + Menu shows help for the current page.

# 3 Turn, click, back

Taktile has three levels: the SEQ page (steps), the track pages (sound) and HOME (project, tempo, song). One rule applies everywhere:

| Turn = scroll · click = go in · Back = go back | |
|---|---|
| **Jog turn** | SEQ page: through the track pages; elsewhere lists and values |
| **Jog click** | Open the sound browser, confirm a choice, second page of a tile |
| **Back** | One step back; on the top level the Background / Close question |
| **Knobs 1–8** | The eight values of the current page. Names are on the display. A tile shows its value while you turn. |
| **Shift + knob** | bigger steps |
| **Master** | Volume. Hold a track button + master knob = that track's volume; hold a drum pad + master knob = that sound's volume |

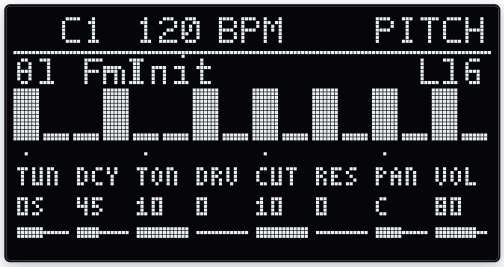

SEQ page: steps, BPM, length, clip

## Buttons at a glance

| Button | Function |
|---|---|
| **Play** | Start / stop. Stop lets sounds and effects ring out. |
| **Rec** | Arm recording (again = off), with count-in if switched on |
| **Loop + Jog** | Track length 1–128 steps |
| **Track buttons** | Select a track. The pad mode changes only with Shift + step 8. In the clip view a track button goes straight into that track. |
| **Left / Right** | Previous / next track (with Shift: step page). In lists and name entry they move the selection or the cursor. |
| **Up / Down** | Pad octave |
| **Mute** | Mute the track; hold Mute + track button / pad = mute that one |
| **Copy / Delete** | Hold + track button/pad = copy; Delete + step = clear step; Delete + track button (twice) = clear the track |
| **Undo** | Undoes the last step (Shift + Undo = redo) |
| **Sample / Capture** | Sample = random variation; Capture = keeps what you played in the last 2 bars |
| **Menu** | Clip / scene view on/off |

# 4 The 32 pads

What the pads do depends on the track type and the pad mode. The colour shows what you hit.

**Drum track**
Left 4 × 4 = the 16 drum sounds. Right 4 × 4 = a function for the selected sound, depending on the pad mode. Shift + pad selects a sound silently.

**Synth track**
“In key” scale keyboard: every row 3 degrees higher, violet = root note. Key and scale: Shift + step 9; quantize options and layout: Shift + step 3 (layout: KEY, SEQ, OCT, 4THS, 3RDS, ROW8). With KEY the 9th pad is lower than the 8th because every row starts only 3 degrees above the previous one.

## Pad modes

| Mode | What the pads do |
|---|---|
| **NOTE** | Normal playing: drum sounds or scale notes. |
| **REPEAT** | Note repeat: on a synth only the right 16 pads repeat, several at once; the left 16 play normally. On drum tracks you pick the sound on the left; every right pad repeats it at once at its speed while you hold it (and you hear it). The rate also sits on the REPEAT knob. |
| **STEPS** | The pads are steps: hold a pad + knobs = edit the step. |
| **LIVE FX** | Hold = effect on, release = gone (see the Live FX page). In Live FX mode (also on drum tracks, then over all 32 pads) all four rows are live effects (32 in total). The pads only play effects, never sounds or notes. Switching the track ends the mode; switch it on again when you need it. Switch on: Shift + step 4 (or Menu → SOUND → Live FX pads on/off). |

Shift + step 8 switches NOTE, REPEAT and STEPS on drum tracks and note layout and CHORD on synth tracks (Note Repeat exists on drum tracks only; with no mode on, the synth pads play normally). CHORD: the left 16 pads play single notes, the right 16 (other colour) the same notes as chords (through the track MIDI effect). Options: CHORD tile. Also in menu → SOUND → Chord pads on/off.

## Drum pads

Every pad is its own sound with its own knobs, steps and length.

| Action | How |
|---|---|
| **Copy a sound** | Copy + pad, then the target pad |
| **Clear steps / reset** | Delete + pad (twice = reset the sound) |
| **Volume of one sound** | Hold the pad + turn the master knob |

> Switch the track type: Shift + track button. Up to 4 drum tracks (16 sounds each). Taktile offers the drum kits (KITS) in the browser when you create a new drum track.


## Editing steps

Hold a step button and turn knobs 1–8: velocity, pitch, probability, length, ratchet, nudge, condition, lock. Hold a step and press a later step button to lengthen it – the steps it runs over light up white.


Recording: press Rec and play. With the arpeggiator on, Taktile stores how long you held the pad – the arp plays back like it did live. Held pads are recorded with their real length. When you record into an empty clip it grows with you: The length follows your second press of Rec: Rec off before step 16 = 16 steps, play on to step 18 and the clip becomes 32 steps long (then 48, 64 …). Like on the Move the clip begins at the bar where you started (“BAR n/N”). This works on synth and drum tracks. Clearing the clip sets the length back to 16. Hold a pad + press a step to set that step to the pad’s pitch and velocity.

# 5 The tiles of a track

On the SEQ page the jog wheel walks through the track’s tiles. Each has up to eight knobs. Tiles that belong together have a second page with a jog click. Every parameter lives in exactly one place.

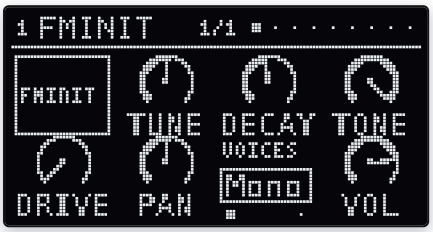



PRESET

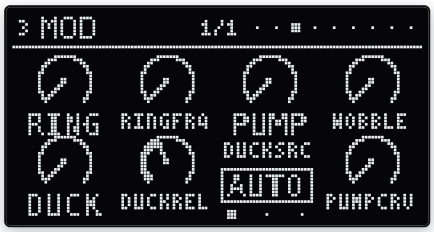



MOD





FILTER 1/2

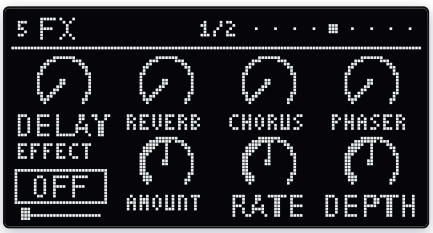


TRK FX 1/2

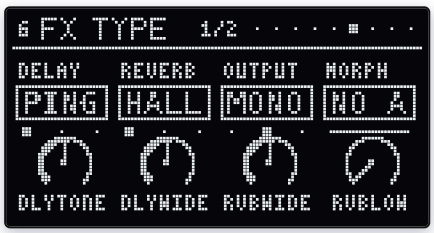


FX BUS 1/2

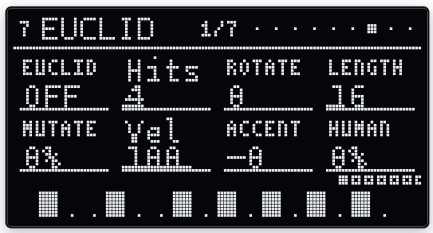


EUCLID 1/7

**Synth** PRESET › SYNTH › MOD › FILTER › TRK FX › FX BUS › EUCLID › MIDI FX

**Drums** PRESET › MOD › FILTER › TRK FX › FX BUS › EUCLID › MIDI FX › SAMPLE

> Top left always shows the tile (number and name), top right the page inside the tile (for example 2/2) followed by the dots of the tiles. The same page display applies to every tile.
> Order for synths: 1 PRESET · 2 SYNTH · 3 MOD · 4 FILTER (+ EQ) · 5 SENDS (+ BEADS) · 6 FX BUS (+ FX BUS 2) · 7 EUCLID · 8 MIDI FX · 9 SAMPLE.
> Order for drums: 1 PRESET · 2 MOD · 3 FILTER (+ EQ) · 4 SENDS (+ BEADS) · 5 FX BUS (+ FX BUS 2) · 6 EUCLID · 7 MIDI FX · 8 SAMPLE.

# 6 Tiles in detail

| Tile | Contents |
|---|---|
| **PRESET** | Engine, attack, decay, tone, tune, pan, voices, volume – the knobs for instant sound shaping. Drums have drive instead of attack and a delay send instead of voices. Turning the engine knob scrolls the presets. |
| **SYNTH** | Synth: engine with wave, sub, drive, filter; jog click = ENGINE 2 (noise, fold, chop, tremolo, auto-pan …). Drum sounds: sweep, sweep time, noise, click, drive, filter. |
| **MOD** | Top row: ring, ring frequency, pump, wobble (rumble instead of wobble on drums). Bottom row: duck (sidechain depth), duck release, duck source (PAD 1 = only the first pad of the first drum track, ALL = every hit, OFF), pump curve (rumble tail on drums). |
| **FILTER · EQ** | Low and high pass, resonance, filter envelope, decay, key tracking, mode, crush. Jog click = second page EQ: three bands with frequency, width and output, ±12 dB. |
| **FX · GRAIN** | Sends to the shared delay and reverb (Dly, Rvb), the insert effect, output (Out) and morph – per synth track and, on drum tracks, per pad sound (INIT sounds and new synth tracks start without delay and reverb; reverb fully off = Rvb knob at 0); jog click = second page GRAIN: the granulator (grain, size, spread, pitch …) per sound, with a grain display. |
| **FX BUS · FX BUS 2** | The shared FX bus: one delay (time, feedback, type PING/TAPE/DUB, tone) and one reverb (size, darkness, type HALL = Dattorro plate / ECHO / SHIM, return). It serves every track and saves a lot of CPU; each track only sends its send level into it. Jog click = second page FX BUS 2 (delay return, widths, reverb low cut and the master tape knobs Tape, Hiss and Wow: cassette saturation, hiss and pitch wobble, off by default; also under HOME → MORE → TAPE). |
| **EUCLID** | First page: Euclid switch (OFF, ON; OFF by default, the steps are then not overwritten), hits, rotate, length, mutate, velocity, accent, human. Then the pages Feel and Notes, then four lanes per sound (each starting with “N Length”). Jog click = next page (1/7 to 7/7). The pages are: Main, Feel, Notes and four lanes, each shown as tiles. |
| **MIDI FX** | MIDI effect (off by default; octaver, chord, arpeggio, strum, echo …), amount, param, track key; bottom row: arp, arp rate, track scale, probability. Jog click = second MIDI effect (with velocity bias). Multi-note effects (octave, chord, diatonic chord) share the level between their notes so nothing overloads. |
| **CHORD** | Synth tracks only, only in chord mode (Shift + step 8), first in the row. Switching it on jumps the screen here, switching it off returns. Page 1: mode, chord type, level, track key, track scale; jog click = page 2: layer FX with amount and param, prob, velocity bias. Track key / track scale apply to this track only (“Mstr” = follow the master); the key moves the pads. 28 scales, among them minor, major, modes, pentatonic, blues, whole tone, diminished, Hirajoshi. |
| **SAMPLE (Drums)** | Load your own samples (drum tracks only, last tile): file, start, end, gain, attack, release, stretch, mode. Jog click cycles SAMPLE → SLICE → ENV → TOOLS → MIC. |

# 7 Sound and kit browser

Open: jog click on SEQ/PRESET or on any page [Jog] [click]. Long names scroll by themselves on the highlighted line.


- **Turn**: scroll – you hear every sound as you go.
- **Click**: keep the sound. **Back**: cancel.
- **Shift + jog click**: set / remove a favourite.
- On drum tracks the browser opens directly in the category of the selected pad (kick pad → KICK). Knob 1 = main folders, each further knob opens the next level (the display shows only that one), knob 8 = preview. A pad plays the highlighted sound at once (Back undoes it), nothing is recorded. Everything is sorted A–Z.



Browser: KICK → CLASSIC

## Folders

| Folder | Contents |
|---|---|
| **SYNTHS** | Sound engines: analog, wavetable, FM, fold, string … (starting points for your own sounds, beginning with the plain FM init) |
| **SOUNDS** | 450 presets (10 per synth) in 6 groups: bass, lead, pluck + stabs, pads + chords, keys + bells, brass |
| **DRUMS** | Kits, by style and by type (kick, snare, hats, perc, FX), plus drum synths |
| **FAVORITES** | Your favourites |

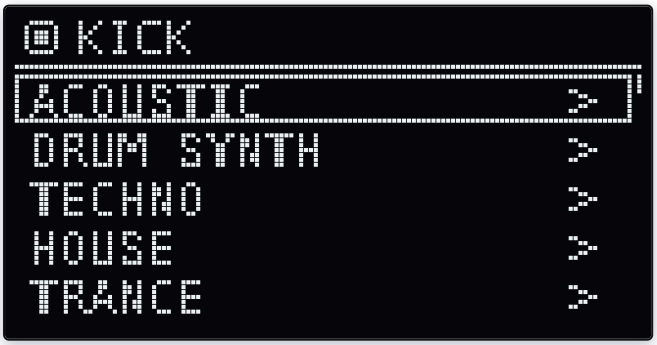

Drum track: sound by type




Euclid lanes

## Jog wheel directly on PRESET

On synth tracks scrolling stays with the synth sounds (BASS, LEAD, CHORD). You reach drum sounds only on purpose through the browser. Kits are offered while a newly created drum track has not chosen a sound yet.

# 8 Shift + step: jumps and switches

With Shift held the step buttons that have a function light up. LIVE FX, NOTE REPEAT and STEP GRID show their state (bright = on). The clips open with the Menu button. Shift + Step 11 opens the Note Repeat options (rate, repeat on/off, full velocity …) even when that mode is not open. Shift + Step 4 (Live FX), 8 and 12 also work in the clip view: they switch to the track's pads. Violet = newly arranged. Song (Shift + Step 1 in the clip view): the bottom shows every scene that has notes; steps 1–8 append a scene, steps 9–14 set the bars, every pad is a song step. Copy + pad picks a step, Copy + another pad pastes a copy there; hold Delete + pad deletes that step (a short tap on Delete deletes the selected one).

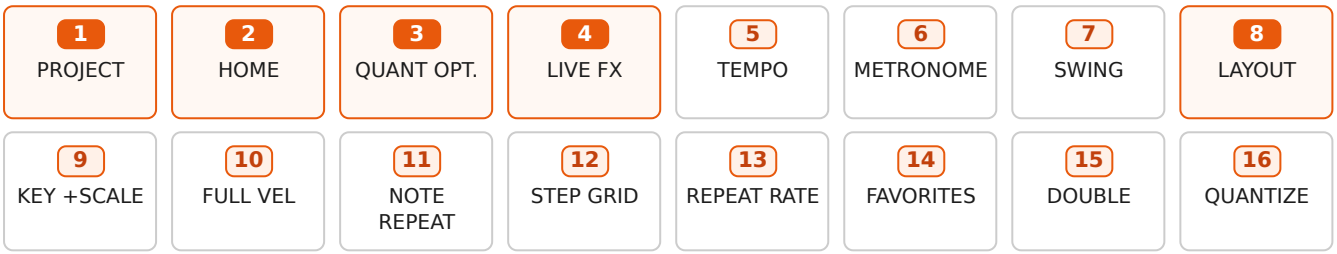


| Step | What happens |
|---|---|
| **1 PROJECT** | Project slots: LOAD, SAVE HERE, RENAME, NEW EMPTY, DELETE. In name entry Back deletes a character (Shift + Back cancels), left / right move the cursor. |
| **2 HOME** | Main menu: one long strip of tiles, just scroll with the jog (SOUND, TRACK, MIX, BUS, OPTIONS, SONG, PROJ, EQ, TAPE …). No MORE any more. |
| **3 QUANT OPT.** | Workflow settings like on the Move: Quantize (amount 5–100 %), grid (1/4, 1/8, 1/8T, 1/16, 1/16T, 1/32), Step Grid (1/16, 1/32, 1/16T, 1/8T, 1/8, per track; it only changes the resolution, existing notes sound the same; 1/32 = 2 pages per bar, triplets show 12 steps per page with every 4th button off), count-in (on/off), plus record snap and launch. Layout is on the track page, key and scale at Shift + step 9. While recording every note snaps to the grid; the remainder is kept as nudge. |
| **4 LIVE FX** | Live FX pads on / off (the step glows bright while they are on). |
| **8 LAYOUT** | Steps through the pad modes: drum track PITCH → REPEAT → STEPS, synth track CHORD → STEPS. |
| **12 STEP GRID** | Step grid pads on / off (the step glows bright while they are on). |
| **15 DOUBLE** | Doubles the clip length and copies the content. |
| **16 QUANTIZE** | Like on the Move, quantises the timing of all notes of the clip (on drum tracks all 16 sounds) to the chosen grid at once; set the amount with Quantize (Shift + step 3). Also: Menu → EDIT CLIP → Quantize now. Undo reverts it. |

## More Shift combinations

| Combination | Function |
|---|---|
| **Shift + Play** | Stop, rewind, all notes off (panic) |
| **Shift + Rec** | Metronome on / off |
| **Shift + Undo** | Redo |
| **Shift + Capture** | Fill: one bar of roll at the end, then everything returns by itself |
| **Shift + Sample** | Stronger random variation |
| **Shift + Jog** | Sound browser (on every sound page) |
| **Shift + Up / Down** | Track above / below |
| **Shift + Left / Right** | Step page A / B (tracks over 16 steps) |
| **Shift + Track** | Switch the track between drums and synth |
| **Shift + Mute** | Solo |
| **Shift + Copy + Track** | Copy the whole track |
| **Shift + Menu** | Help window |
| **Shift + Back** | Quit Taktile at once |

# 9 Live FX

Shift + step 4 (or Menu → SOUND → Live FX pads on/off). Hold a pad = effect on, release = back. The effects run on the master bus; the top two pad rows (on drums the right block) are the effect pads.

| The 16 effects | | | |
|---|---|---|---|
| **REPEAT 1/4** | REPEAT 1/8 | REPEAT 1/16 | REPEAT 1/32 |
| **ROLL** | TRIPLET | REVERSE | TAPE STOP |
| **GATE 1/8** | GATE 1/16 | LOW SWEEP | HIGH SWEEP |
| **CRUSH** | FREEZE | ECHO THROW | REVERB WASH |
| **HALF SPEED** | DOUBLE SPEED | WOBBLE | FLANGER |
| **RING MOD** | AUTO PAN | TREMOLO | WAH SWEEP |
| **BASS CUT** | TELEPHONE | UNDERWATER | DISTORT |
| **KILL** | REPEAT 3/16 | BRAKE | PUMP |

## Bottom rows


The bottom two pad rows are live effects too: half and double speed (an octave down/up), wobble, flanger, ring modulator, auto pan, tremolo, wah, bass cut, telephone, underwater, distortion, kill (everything silent), repeat 3/16, brake and pump (ducking on the beat). They only change the sound: no drum sounds are played any more.

## Granulator


On the SENDS tile (page 2) the BEADS granulator chops the sound into tiny grains. It belongs to each sound separately (on drums per pad). Beads = amount, size = grain length from 4 ms (short) to 1.2 s (long), spread = scatter, pitch = pitch, window = the grain window shape (RECT, TRI, SINE, GAUSS, HANN, smoothly blended). The page shows the buffer large: waveform of the last seconds, the reading area (spread) as a frame and every grain as a tick with a length bar; below it the 8 values with a bar each.

## Undo and redo

Undo reverts the last step wherever it was: steps, sounds, knobs, master, tempo and swing, mutes, track volume, song, scenes, follow actions, pad modes, sounds from the browser. Shift + Undo redoes it. Menu → EDIT CLIP → Undo history lists the latest changes.

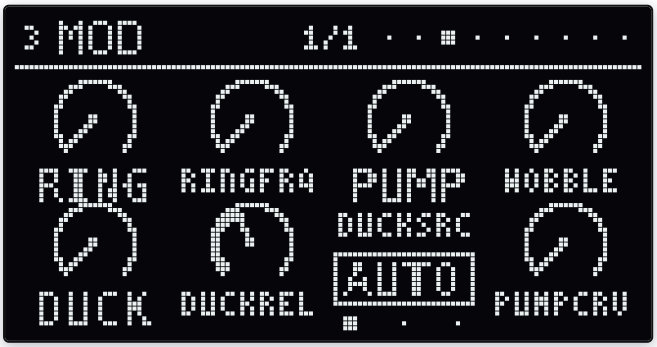


MOD

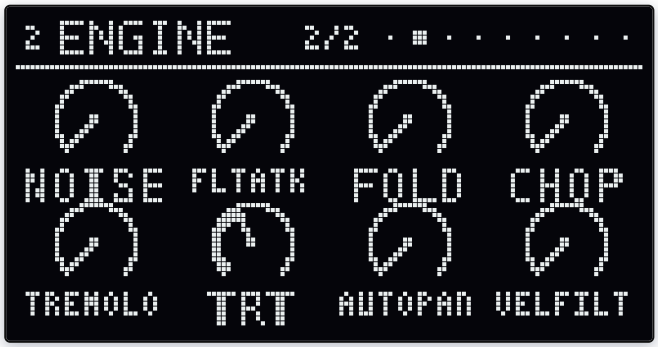


ENGINE 2

# 10 Sampler and slices

On the SAMPLE tile knob 1 picks the file; **Shift** **jog click** opens the file browser (Shift + click on a folder = kit from 16 WAVs).

| Page | What it does |
|---|---|
| **SAMPLE** | File, start, end, gain, attack, release, stretch, mode. While you turn start or end the waveform zooms in, so you can set it exactly. |
| **SLICE** | Set markers (add), delete (del), snap to transients (snap); Shift + jog click spreads the slices over the pads |
| **ENV** | Sample envelope |
| **TOOLS** | Halve / double / move the region, random region, reverse, normalise, reset and FIT (fits the region to whole beats at the current tempo) |
| **MIC** | Records and saves a new sample that is on the pad at once. Knob 1 = source (INPUT = microphone / line in of the Move, MASTER = everything you hear, TRK 1–16 = a single track), 2 = length (1–30 s), 3 = gain, 4 = wait for sound (INPUT only), 5 = effect (OFF, REVERB, DELAY, LOW CUT, DRIVE, LO-FI), 6 = effect amount, 7 = normalise, 8 = start / stop. Start / stop also works with the Sample button or Shift + jog click. Effects only run during the take and are baked into the sample, so they cost no CPU afterwards. REVERB and DELAY add a tail (2.5 s / 1.5 s longer) so the room and the echoes can ring out. The input is only read while this page is open or a take runs. |

## When something goes wrong

| Problem | Fix |
|---|---|
| **No sound** | Track muted? Master knob up? Press a pad on drum tracks, a key on synth tracks. |
| **Lost** | Back (one step back) or Shift + Menu (help). |
| **Wrong sound** | Undo. The browser remembers your last sound. |
| **Stuck note** | Shift + Play: stop + all notes off. |
| **Clear the beat** | Delete + track button, then the track button again. |

## The menu

Open the menu through HOME (Shift + step 2) → OPTIONS; it always starts at the top on QUICK. Groups: QUICK, FIND, LANGUAGE, DESIGN, GLOBAL, EXPERT, PLAY, EDIT CLIP, RANDOM + FEEL, SOUND, GO TO PAGE.

| Setting | Effect |
|---|---|
| **Button lights** | Bright buttons: Mute, copy, delete, undo, back, sample, loop glow even when idle |
| **Slow knobs** | Knobs at half speed |
| **Count-in** | One bar of count-in when recording |
| **Note repeat** | Allow / block note repeat |
| **CPU meter** | EXPERT: screen with CPU load, peak, history and the number of sounds / effects (also “Load info”) |
| **Scope** | EXPERT: waveform and bands; jog click cycles through 11 views: WAVE+BANDS, WAVE, BANDS, DANCE, STARS, RINGS, WAVE+16 (16 bands with peak caps), SPECTRUM, STEREO (with phase meter), WATERFALL and BEAT |
| **Quantize now** | EDIT CLIP: quantise the timing to the grid right now |

# 11 New in 1.0.0

## Groove

On the SWING page there are, next to Swing, the groove templates MPC, Shuffle, Laidback, Dilla, Drunk, Push, Funk, Ghost, Human and Roll. Groove Amt sets the amount; Swing still works on top.

## Nudge and buttons

Hold a step button and use the left / right arrow keys to set its nudge (fine steps, 0 to 70 % of a step). The buttons Mute, Copy (Double), Delete, Back, Sample, Loop and the arrow keys now glow softly; in the menu under Button lights you can switch back to NORMAL.

## Fast kicks

When a drum sound is retriggered very fast (for example kicks in sixteenths) the old tail was cut off hard and clicked. The old tail now fades out in 10 ms.

## Menus

The master pages (TEMPO, QUANT, OPTIONS, BUS, DELAY, REVERB, TRACK, SWING, KEY, REPEAT, DUCK, KIT, PROJECT, MIDI OUT ...) use the same tiles as the track pages instead of round knobs.

# 12 New in 1.0.0 (continued)

## Tape

Tape hiss is mono: left and right get the same noise.

## Safe start

If Taktile did not finish starting, the next start opens an empty project (SAFE START) and keeps the old project as a copy (taktile-state.before-safe-start.json).

## Sounds

Taktile has 450 clearly different sounds (was 1468; including 30 new sounds of the three new engines). Old projects still load: a removed sound is replaced by the most similar one of the same group. Sound levels are evened out. In the sound browser the melodic synths are grouped into 6 groups. All drum sounds share the same engine knobs: Sweep, SweepTime, Noise, Click.

## New engines

Three new synth engines with 10 sounds each: ACID 303 (acid bass with the 303 filter; knobs Cutoff, Squelch, EnvMod, FltDecay; a hard hit gives an accent), SWARM (a swarm of detuned saws, wide and fat; Spread, Density, Size, Sine) and DX 6-OP FM (six operators with the 32 algorithms of the DX7; Index, Detune, Feedback, OpDecay). You find them in the sound browser under SYNTHS and in the sound groups under NEW ENGINES.

# 13 New in 1.0.0 (part 3)

## LFO page

Every track has four LFOs as its last page (jog click = next LFO). Target: cutoff, reso, pitch, volume, pan, drive, tone, decay, detune, delay / reverb send, FX amount, FX rate, filter env, crush, ring. Shape: sine, tri, saw up / down, square, S&H, smooth, pluck. Rate free in Hz or synced (8 bars to 1/32). Depth and phase.

## Mixer

Shift + Menu opens the mixer (again = back). The mixer knobs are slower now. The help pages are no longer on Shift + Menu; there is the guide in the menu instead.

## Duplicate a track

Hold Copy and press the key of the selected track: the whole track (sounds, all clips, length) is copied to the next empty track of the same kind. Shift + Copy + another track key copies to that track as before.

## Guide in the menu

Menu → GUIDE: ten short topics (start, beat, record, sounds, LFO, chords, groove, mixer, song, problems) in German and English. Turn the jog = next page, Back = close.

## Recording and chords

The clip length while recording is counted from your first note (16 steps later = 16 steps, no longer 32). When you leave chord mode, a track with notes keeps its chord effect, so it plays what you played.

## Granular pitch

The Pitch knob on the GRAIN page now goes from -24 to +24 semitones (centre = original), so also down.