
Taktile

Groovebox for Ableton Move (Schwung) – the manual

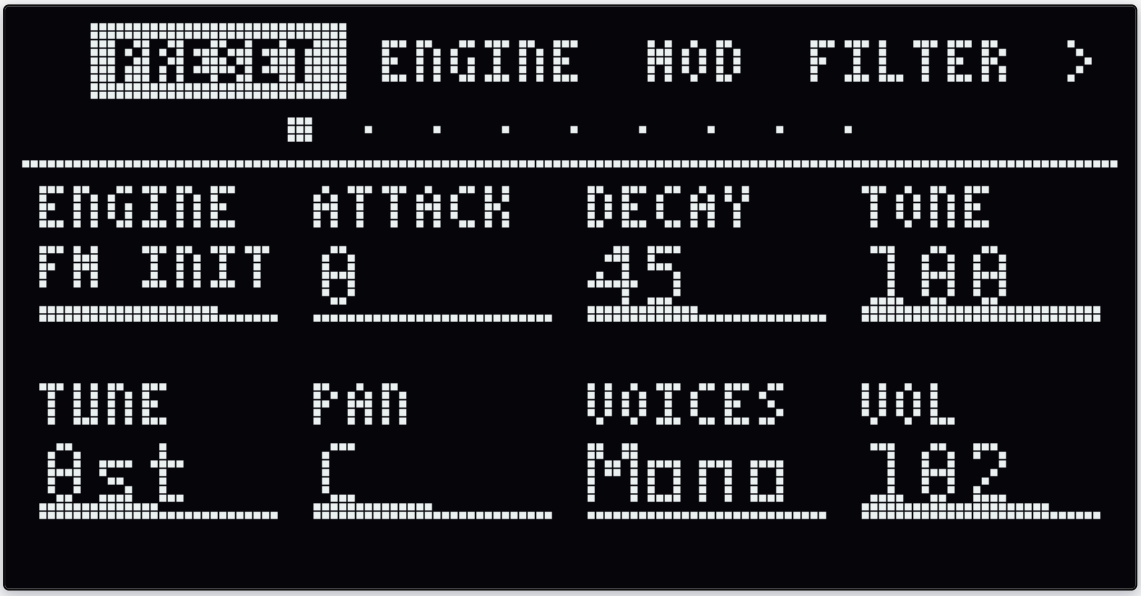

16 tracks · 704 sounds · Drum synth · Live FX

Version 1.0.0 · 26 October 2026

Contents

The essentials at a glance – every chapter has its own page.

1	Welcome & installation	page 3
2	Your first beat in 5 steps	page 4
3	Operation: turn, click, back	page 5
4	The 32 pads	page 6
5	The tiles of a track	page 7
6	Tiles in detail	page 8
7	Sound browser	page 9
8	Shift + step: jumps and switches	page 10
9	Live FX, granulator, undo	page 11
10	Sampler, help	page 12
11	The menu	page 13
12	Song mode	page 14
13	Song mode (2)	page 15
14	Sampler	page 16
15	Sampler (2)	page 17
16	Recording, groove, LFO	page 18
17	Sounds and tone	page 19
18	Display and safety	page 20

> **Tip:** Three rules are enough to start: turn = scroll, click = go in, Back = go back.

1 Welcome

Taktile turns the Ableton Move into a full groovebox: step sequencer, synths, drum synth, effects and live performance in one module.

Step sequencer
Up to 128 steps per track, 8 clips per track. Per step: velocity, pitch, probability, ratchet, nudge, condition, length.

704 sounds
Analog, wavetable, FM, fold, string, pad – plus drum sounds, effect sounds and samples. Every list starts with INIT.

Drum synth
Kicks, snares, hats, cymbals, claps, toms, rims and percussion – every sound can be edited like a synth.

Euclid lanes
Four lanes per sound create lively rhythms: length, hits, rotation.

Effects
One shared delay and reverb bus for all tracks (a send per track; reverb HALL = Dattorro plate), 11 insert effects, 11 MIDI effects, a granulator per sound.

Live FX
16 performance effects on the pads: repeat, stutter, reverse, tape stop, sweeps, freeze …

Sampler
Load, trim and slice samples; tools for region, fit and reverse.

Song by pads
Song page: pads = tracks × clips, the 16 step buttons = song chain. Per step: clip per track, bars, transition, tempo.

Installation

1. In the Schwung Manager choose “Install custom module” and load **taktile-module.tar.gz**.
2. On the Move open the **Overtake** list in the Tools menu and start Taktile.
3. Track 1 is a synth with the first sound right away – press a pad and play. Every further track asks the first time you select it: synth or drums?

Leaving

Back on the top level asks: BACKGROUND (Taktile keeps running, the beat keeps playing, you use the Move normally) or CLOSE. Quit at once: **Shift** **Back**.

> Everything is saved automatically, including several projects (HOME → MORE → PROJ).

Help on every page

Shift **Menu** shows a short help for the current page.

2 Your first beat in 5 steps

About a minute from start to groove.

1 **Start Taktile**

Overtake list → Taktile. Track 1 is a synth and plays right away on the pads.

2 **Create a drum track**

Press track button 2 → choose “Drums”. The browser opens the drum synth (e.g. KICKS), click the jog.

3 **Set steps**

Press step buttons, then Play. Tempo is knob 1.

4 **Refine a step**

Hold a step and turn knobs: 1 velocity, 2 pitch, 3 probability, 4 length, 5 ratchet, 6 nudge, 7 condition, 8 lock.

5 **More life**

Turn the jog to EUCLID, or Shift + step 4 for Live FX. Undo reverts anything.



SEQ page with steps




Drum synth in the browser

> **Tip:** If you get lost press Back. It always goes one level back, and Shift + Menu shows help for the current page.

3 Turn, click, back

Taktile has three levels: the SEQ page (steps), the track pages (sound) and HOME (project, tempo, song). One rule applies everywhere:

Turn = scroll · click = go in · Back = go back	
Jog turn	SEQ page: through the track pages; elsewhere lists and values
Jog click	Open the sound browser, confirm a choice, second page of a tile
Back	One step back; on the top level the Background / Close question
Knobs 1–8	The eight values of the current page. Names are on the display. A tile shows its value while you turn.
Shift + knob	bigger steps
Master	Volume. Hold a track button + master knob = that track's volume; hold a drum pad + master knob = that sound's volume

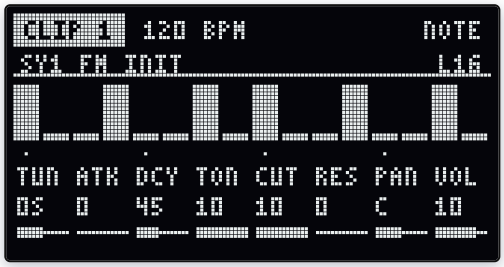

SEQ page: steps, BPM, length, clip

Buttons at a glance

Button	Function
Play	Start / stop. Stop lets sounds and effects ring out.
Rec	Arm recording (again = off), with count-in if switched on
Loop + Jog	Track length 1–128 steps. Hold Loop: the step buttons show the length (white = steps, green = bars). One step button = that many steps; two or more step buttons together = that many bars.
Track buttons	Select a track. The pad mode changes only with Shift + step 8. In the clip view a track button goes straight into that track.
Left / Right	Previous / next track (with Shift: step page). In lists and name entry they move the selection or the cursor.
Up / Down	Pad octave
Mute	Mute the track; hold Mute + track button / pad = mute that one
Copy / Delete	Hold + track button/pad = copy; Delete + step = clear step; Delete + track button (twice) = clear the track
Undo	Undoes the last step (Shift + Undo = redo)
Sample / Capture	Sample = random variation; Capture = keeps what you played in the last 2 bars
Menu	Clip / scene view on/off

4 The 32 pads

What the pads do depends on the track type and the pad mode. The colour shows what you hit.

Drum track
Left 4 × 4 = the 16 drum sounds. Right 4 × 4 = a function for the selected sound, depending on the pad mode. Shift + pad selects a sound silently.

Synth track
“In key” scale keyboard: every row 3 degrees higher, violet = root note. Key and scale: Shift + step 9; quantize options and layout: Shift + step 3 (layout: KEY, SEQ, OCT, 4THS, 3RDS, ROW8). With KEY the 9th pad is lower than the 8th because every row starts only 3 degrees above the previous one.

Pad modes

Mode	What the pads do
NOTE	Normal playing: drum sounds or scale notes.
REPEAT	Note repeat: on a synth only the right 16 pads repeat, several at once; the left 16 play normally. On drum tracks you pick the sound on the left; every right pad repeats it at once at its speed while you hold it (and you hear it). The rate also sits on the REPEAT knob.
STEPS	The pads are steps: hold a pad + knobs = edit the step.
LIVE FX	Hold = effect on, release = gone (see the Live FX page). In Live FX mode (also on drum tracks, then over all 32 pads) all four rows are live effects (32 in total). The pads only play effects, never sounds or notes. Switching the track ends the mode; switch it on again when you need it. Switch on: Shift + step 4 (or Menu → SOUND → Live FX pads on/off).

Shift + step 8 switches NOTE, REPEAT and STEPS on drum tracks and note layout and CHORD on synth tracks (Note Repeat exists on drum tracks only; with no mode on, the synth pads play normally). CHORD: the left 16 pads play single notes, the right 16 (other colour) the same notes as chords (through the track MIDI effect). Options: CHORD tile. Also in menu → SOUND → Chord pads on/off.

Drum pads

Every pad is its own sound with its own knobs, steps and length.

Action	How
Copy a sound	Copy + pad, then the target pad
Clear steps / reset	Delete + pad (twice = reset the sound)
Volume of one sound	Hold the pad + turn the master knob

> Switch the track type: Shift + track button. Up to 4 drum tracks (16 sounds each). Drum tracks use the drum synth: every list (kicks, snares, hats …) has its own sounds.


Editing steps

Hold a step button and turn knobs 1–8: velocity, pitch, probability, length, ratchet, nudge, condition, lock. Hold a step and press a later step button to lengthen it – the steps it runs over light up white.

Recording: press Rec and play. With the arpeggiator on, Taktile stores how long you held the pad – the arp plays back like it did live. Held pads are recorded with their real length. When you record into an empty clip it grows with you: The length follows your second press of Rec: Rec off before step 16 = 16 steps, play on to step 18 and the clip becomes 32 steps long (then 48, 64 …). Like on the Move the clip begins at the bar where you started (“BAR n/N”). This works on synth and drum tracks. Clearing the clip sets the length back to 16. Hold a pad + press a step to set that step to the pad’s pitch and velocity.

5 The tiles of a track

On the SEQ page the jog wheel walks through the track’s tiles. Each has up to eight knobs. Tiles that belong together have a second page with a jog click. Every parameter lives in exactly one place.

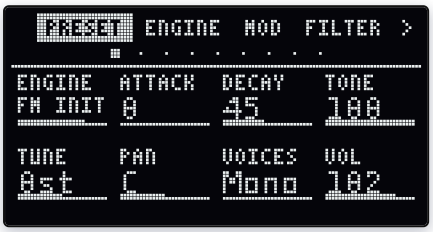


PRESET



MOD




FILTER 1/2

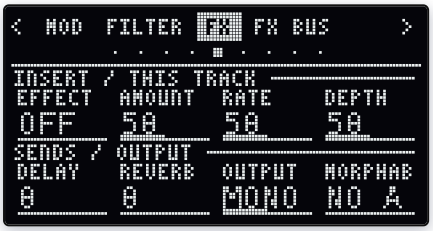

TRK FX 1/2



FX BUS 1/2

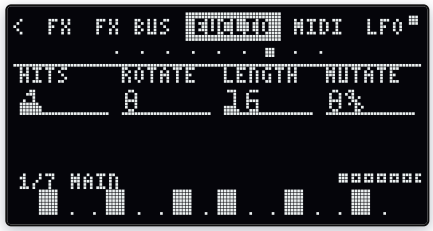

EUCLID 1/7

Synth PRESET › SYNTH › MOD › FILTER › TRK FX › FX BUS › EUCLID › MIDI FX

Drums PRESET › MOD › FILTER › TRK FX › FX BUS › EUCLID › MIDI FX › SAMPLE

> Top left always shows the tile (number and name), top right the page inside the tile (for example 2/2) followed by the dots of the tiles. The same page display applies to every tile.
> Order for synths: 1 PRESET · 2 SYNTH · 3 MOD · 4 FILTER (+ EQ) · 5 SENDS (+ BEADS) · 6 FX BUS (+ FX BUS 2) · 7 EUCLID · 8 MIDI FX · 9 SAMPLE.
> Order for drums: 1 PRESET · 2 MOD · 3 FILTER (+ EQ) · 4 SENDS (+ BEADS) · 5 FX BUS (+ FX BUS 2) · 6 EUCLID · 7 MIDI FX · 8 SAMPLE.


6 Tiles in detail

Tile	Contents
PRESET	Engine, attack, decay, tone, tune, pan, voices, volume – the knobs for instant sound shaping. Drums have drive instead of attack and a delay send instead of voices. Turning the engine knob scrolls the presets.
SYNTH	Synth: engine with wave, sub, drive, filter; jog click = ENGINE 2 (noise, fold, chop, tremolo, auto-pan …). Drum sounds: sweep, sweep time, noise, click, drive, filter.
MOD	Top row: ring, ring frequency, pump, wobble (rumble instead of wobble on drums). Bottom row: duck (sidechain depth), duck release, duck source (PAD 1 = only the first pad of the first drum track, ALL = every hit, OFF), pump curve (rumble tail on drums).
FILTER · EQ	Low and high pass, resonance, filter envelope, decay, key tracking, mode, crush. Jog click = second page EQ: three bands with frequency, width and output, ±12 dB.
FX · GRAIN	Sends to the shared delay and reverb (Dly, Rvb), the insert effect, output (Out) and morph – per synth track and, on drum tracks, per pad sound (INIT sounds and new synth tracks start without delay and reverb; reverb fully off = Rvb knob at 0); jog click = second page GRAIN: the granulator (grain, size, spread, pitch …) per sound, with a grain display.
FX BUS · FX BUS 2	The shared FX bus: one delay (time, feedback, type PING/TAPE/DUB, tone) and one reverb (size, darkness, type HALL = Dattorro plate / ECHO / SHIM, return). It serves every track and saves a lot of CPU; each track only sends its send level into it. Jog click = second page FX BUS 2 (delay return, widths, reverb low cut and the master tape knobs Tape, Hiss and Wow: cassette saturation, hiss and pitch wobble, off by default; also under HOME → MORE → TAPE).
EUCLID	First page: Euclid switch (OFF, ON; OFF by default, the steps are then not overwritten), hits, rotate, length, mutate, velocity, accent, human. Then the pages Feel and Notes, then four lanes per sound (each starting with “N Length”). Jog click = next page (1/7 to 7/7). The pages are: Main, Feel, Notes and four lanes, each shown as tiles.
MIDI FX	MIDI effect (off by default; octaver, chord, arpeggio, strum, echo …), amount, param, track key; bottom row: arp, arp rate (down to 1/1), track scale, probability. Jog click = second MIDI effect (with velocity bias). Multi-note effects (octave, chord, diatonic chord) share the level between their notes so nothing overloads.
CHORD	Synth tracks only, only in chord mode (Shift + step 8), first in the row. Switching it on jumps the screen here, switching it off returns. Page 1: mode, chord type, level, track key, track scale; jog click = page 2: layer FX with amount and param, prob, velocity bias. Track key / track scale apply to this track only (“Mstr” = follow the master); the key moves the pads. 28 scales, among them minor, major, modes, pentatonic, blues, whole tone, diminished, Hirajoshi.
SAMPLE (Drums)	Load your own samples (drum tracks only, last tile): file, start, end, gain, attack, release, stretch, mode. Jog click cycles SAMPLE → SLICE → ENV → TOOLS → MIC.

7 Sound browser

Open: jog click on SEQ/PRESET or on any page [Jog] [click]. Long names scroll by themselves on the highlighted line.

- **Turn**: scroll – you hear every sound as you go.
- **Click**: keep the sound. **Back**: cancel.
- **Shift + jog click**: set / remove a favourite.
- On drum tracks the browser opens directly in the category of the selected pad (kick pad → KICKS). Knob 1 = main folders, each further knob opens the next level (the display shows only that one), knob 8 = preview. A pad plays the highlighted sound at once (Back undoes it), nothing is recorded. Everything is sorted A–Z.

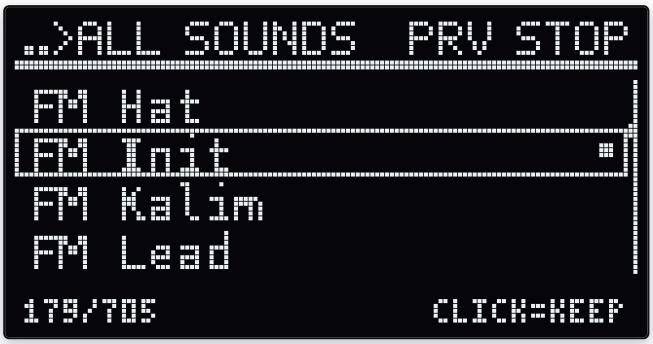


Browser: ALL SOUNDS

Folders

Folder	Contents
SYNTHS	Sound engines: analog, wavetable, FM, fold, string … (starting points for your own sounds, beginning with the plain FM init)
SOUNDS	Synth presets in 6 groups: bass, lead, pluck + stabs, pads + chords, keys + bells, brass. Every list starts with INIT.
DRUMS	Drum synth: lists for kicks, snares, hats, cymbals, claps, toms, rims and percussion (INIT first)
FAVORITES	Your favourites
MY PRESETS	Your own sounds (+ SAVE)



Drum track: KICKS list

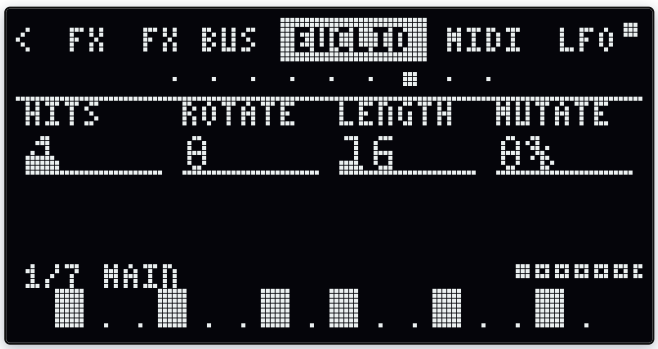


Euclid lanes

Jog wheel directly on PRESET

On synth tracks scrolling stays with the synth sounds. You reach drum sounds through the browser, which opens in the list of the sound you played last.

8 Shift + step: jumps and switches

With Shift held the step buttons that have a function light up. LIVE FX, NOTE REPEAT and STEP GRID show their state (bright = on). The clips open with the Menu button. Shift + Step 11 opens the Note Repeat options (rate, repeat on/off, full velocity …) even when that mode is not open. Shift + Step 4 (Live FX), 8 and 12 also work in the clip view: they switch to the track's pads. Violet = newly arranged. Song (Shift + Step 1 in the clip view): the bottom shows every scene that has notes; steps 1–8 append a scene, steps 9–14 set the bars, every pad is a song step. Copy + pad picks a step, Copy + another pad pastes a copy there; hold Delete + pad deletes that step (a short tap on Delete deletes the selected one).

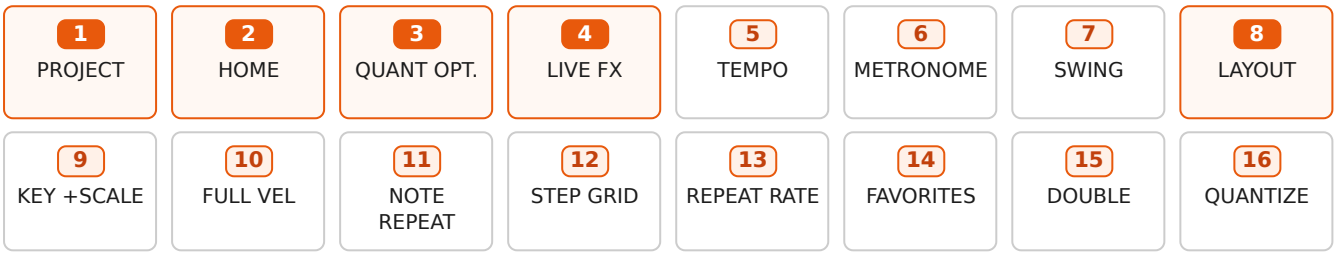

Step	What happens
1 PROJECT	Project slots: LOAD, SAVE HERE, RENAME, NEW EMPTY, DELETE. In name entry Back deletes a character (Shift + Back cancels), left / right move the cursor.
2 HOME	Main menu: one long strip of tiles, just scroll with the jog (SOUND, TRACK, MIX, BUS, OPTIONS, SONG, PROJ, EQ, TAPE …). No MORE any more.
3 QUANT OPT.	Workflow settings like on the Move: Quantize (amount 5–100 %), grid (1/4, 1/8, 1/8T, 1/16, 1/16T, 1/32), Step Grid (1/16, 1/32, 1/16T, 1/8T, 1/8, per track; it only changes the resolution, existing notes sound the same; 1/32 = 2 pages per bar, triplets show 12 steps per page with every 4th button off), count-in (on/off), plus record snap and launch. Layout is on the track page, key and scale at Shift + step 9. While recording every note snaps to the grid; the remainder is kept as nudge.
4 LIVE FX	Live FX pads on / off (the step glows bright while they are on).
8 LAYOUT	Steps through the pad modes: drum track PITCH → REPEAT → STEPS, synth track CHORD → STEPS.
12 STEP GRID	Step grid pads on / off (the step glows bright while they are on).
15 DOUBLE	Doubles the clip length and copies the content.
16 QUANTIZE	Like on the Move, quantises the timing of all notes of the clip (on drum tracks all 16 sounds) to the chosen grid at once; set the amount with Quantize (Shift + step 3). Also: Menu → EDIT CLIP → Quantize now. Undo reverts it.

More Shift combinations

Combination	Function
Shift + Play	Stop, rewind, all notes off (panic)
Shift + Rec	Metronome on / off
Shift + Undo	Redo
Shift + Capture	Fill: one bar of roll at the end, then everything returns by itself
Shift + Sample	Stronger random variation
Shift + Jog	Sound browser (on every sound page)
Shift + Up / Down	Track above / below
Shift + Left / Right	Step page A / B (tracks over 16 steps)
Shift + Track	Switch the track between drums and synth
Shift + Mute	Solo
Shift + Copy + Track	Copy the whole track
Shift + Menu	Help window
Shift + Back	Quit Taktile at once

9 Live FX

Shift + step 4 (or Menu → SOUND → Live FX pads on/off). Hold a pad = effect on, release = back. The effects run on the master bus; the top two pad rows (on drums the right block) are the effect pads.

The 16 effects			
REPEAT 1/4	REPEAT 1/8	REPEAT 1/16	REPEAT 1/32
ROLL	TRIPLET	REVERSE	TAPE STOP
GATE 1/8	GATE 1/16	LOW SWEEP	HIGH SWEEP
CRUSH	FREEZE	ECHO THROW	REVERB WASH
HALF SPEED	DOUBLE SPEED	WOBBLE	FLANGER
RING MOD	AUTO PAN	TREMOLO	WAH SWEEP
BASS CUT	TELEPHONE	UNDERWATER	DISTORT
KILL	REPEAT 3/16	BRAKE	PUMP

Bottom rows

The bottom two pad rows are live effects too: half and double speed (an octave down/up), wobble, flanger, ring modulator, auto pan, tremolo, wah, bass cut, telephone, underwater, distortion, kill (everything silent), repeat 3/16, brake and pump (ducking on the beat). They only change the sound: no drum sounds are played any more.

Granulator


On the SENDS tile (page 2) the BEADS granulator chops the sound into tiny grains. It belongs to each sound separately (on drums per pad). Beads = amount, size = grain length from 4 ms (short) to 1.2 s (long), spread = scatter, pitch = pitch, window = the grain window shape (RECT, TRI, SINE, GAUSS, HANN, smoothly blended). The page shows the buffer large: waveform of the last seconds, the reading area (spread) as a frame and every grain as a tick with a length bar; below it the 8 values with a bar each.

Undo and redo

Undo reverts the last step wherever it was: steps, sounds, knobs, master, tempo and swing, mutes, track volume, song, scenes, follow actions, pad modes, sounds from the browser. Shift + Undo redoes it. Menu → EDIT CLIP → Undo history lists the latest changes.



MOD

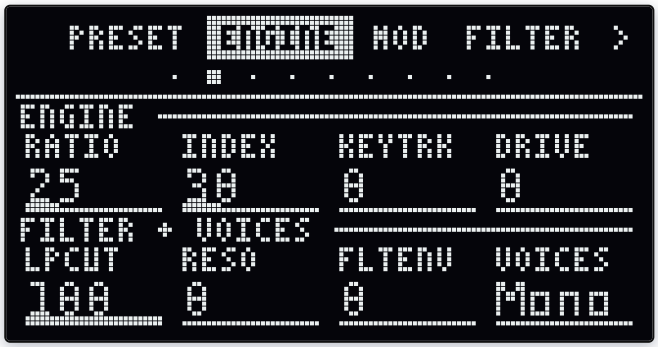

ENGINE 2

10 Sampler and slices

On the SAMPLE tile knob 1 picks the file; **Shift** **jog click** opens the file browser (Shift + click on a folder = kit from 16 WAVs).

Page	What it does
SAMPLE	File, start, end, gain, attack, release, stretch, mode (ONE, REV, LOOP, FWD-REV). While you turn start or end the waveform zooms in, so you can set it exactly.
SLICE	Set markers (add), delete (del), snap to transients (snap); Shift + jog click spreads the slices over the pads. Pads without a slice and without notes stay muted; the pad mute brings one back
ENV	Sample envelope
TOOLS	Halve / double / move the region, random region, reverse, normalise, reset and FIT (fits the region to whole beats at the current tempo)
MIC	Records and saves a new sample that is on the pad at once. Knob 1 = source (INPUT = microphone / line in of the Move, MASTER = everything you hear, TRK 1–16 = a single track), 2 = length (1–30 s), 3 = gain, 4 = wait for sound (INPUT only), 5 = effect (OFF, REVERB, DELAY, LOW CUT, DRIVE, LO-FI), 6 = effect amount, 7 = normalise, 8 = start / stop. Start / stop also works with the Sample button or Shift + jog click. Effects only run during the take and are baked into the sample, so they cost no CPU afterwards. REVERB and DELAY add a tail (2.5 s / 1.5 s longer) so the room and the echoes can ring out. The input is only read while this page is open or a take runs.

When something goes wrong


Problem	Fix
No sound	Track muted? Master knob up? Press a pad on drum tracks, a key on synth tracks.
Lost	Back (one step back) or Shift + Menu (help).
Wrong sound	Undo. The browser remembers your last sound.
Stuck note	Shift + Play: stop + all notes off.
Clear the beat	Delete + track button, then the track button again.

The menu


Open the menu through HOME (Shift + step 2) → OPTIONS; it always starts at the top on QUICK. Groups: QUICK, FIND, LANGUAGE, DESIGN, GLOBAL, EXPERT, PLAY, EDIT CLIP, RANDOM + FEEL, SOUND, GO TO PAGE.

Setting	Effect
Button lights	Bright buttons: Mute, copy, delete, undo, back, sample, loop glow even when idle
Slow knobs	Knobs at half speed
Count-in	One bar of count-in when recording
Note repeat	Allow / block note repeat
CPU meter	EXPERT: screen with CPU load, peak, history and the number of sounds / effects (also “Load info”)
Scope	EXPERT: waveform and bands; jog click cycles through 11 views: WAVE+BANDS, WAVE, BANDS, DANCE, STARS, RINGS, WAVE+16 (16 bands with peak caps), SPECTRUM, STEREO (with phase meter), WATERFALL and BEAT
Quantize now	EDIT CLIP: quantise the timing to the grid right now

11 Song mode

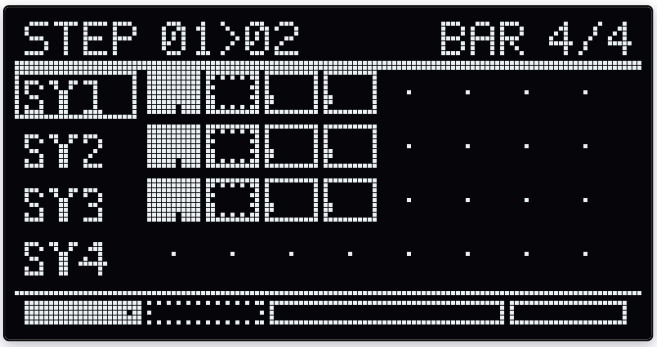

Song page

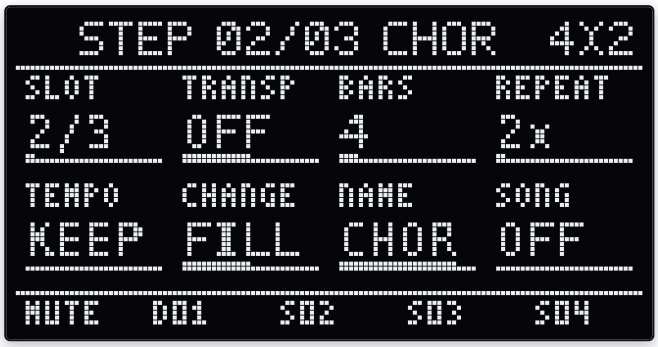

Options of a held step

Start and stop

Open the song page in the main menu (tile SONG). It plays right away, no extra Play. Back ends song mode. The Song knob sets OFF, LOOP or ONCE; LOOP and ONCE start the song. The page follows the playing step; while you hold a step or turn a knob it stays on your step.

Steps and clips

The 16 step keys are the song chain (up to 32 steps). Tap a key to pick the step; while the song runs the step starts at the end of the bar (it shows at the top, the key blinks). Tap it again to jump right away. The pads are tracks times clips: a pad picks the clip the track plays in this step, press again to make it silent. Delete + pad deletes, Copy + pad copies a step, Shift + pad inserts a step. Rec records the clips and mutes that are playing as a new step.

Options of a step

Hold a step key: after a moment the page shows the 8 options of the step (slot, transpose, bars, repeat, tempo, change, name, song); the knobs change them. While you turn, name and value are on top. Change is HARD, FILL or DRUMS 1ST; Shift + Change sets all steps at once. Hold a step and press a track key to mute that track in this step (MUTE with the four tracks is shown at the bottom).

12 Song mode (2)

Open a track

Shift + pad opens the track of that pad row with the clip of that column; the song plays on and SONG is shown at the top right. Back takes you to the song page again, another Back ends song mode.

While the song plays

Bars, repeat, insert, delete, move, copy and record scene do not stop the song: it keeps playing the same step at the same place, and the bar counter (BAR 2/4) is right. All clips change exactly on the bar line, whatever Launch is set to, and start at their first step. Display and pads change together. Tempo, mutes and transposition of the next step also change exactly on the bar line. While you hold the Loop key the song stays in the running step (STAY on top) until you let go. The top shows the running and the next step (STEP 02>03), dotted frames show the clips of the next step, and the timeline at the bottom shows the whole song.

13 Sampler



SAMPLE page

Simple sample mode

On every track the Sample key opens the pages SAMPLE and SLICE (plus PLAY and ENV): pick a file, set start and end, the mode (ONE, REV, FWD-REV, LOOP), tune, gain, pan and volume. Slices go to this track or to a new drum track (Shift + jog click on SLICE). When you pick another sample, filter, stretch and the other values go back to their defaults.

Sampler as an engine of its own

In the browser there is the entry SAMPLER next to SOUNDS, DRUMS and SYNTHS. It turns the track into a synth track that plays a sample instead of a synth, with default values and an open filter. If no sample is loaded yet, the file browser opens right away. The keys play the sample at different pitches, polyphonic, with filter, envelope, LFO and effects like any synth. Only here you also get the pages TOOLS (region, fit, reverse ...) and MIC (recording) and ENGINE 2 (scan, voices, spread, tape stop; jog click on the ENGINE page).

14 Sampler (2)

ENGINE page

The ENGINE page has two blocks: SAMPLE (file, start, end, mode) and SHAPE + FILTER (gain, stretch, WarpBars, voices). Knob 1 picks the file, jog click opens the file browser. The waveform with slice, ENV and tools is the last tab. The SOUND page has the attack and release of the sample.

Timewarp

WarpBars (OFF, 1/2, 1, 2, 4, 8, 16 bars) fits the region between start and end so that it lasts exactly that many bars; the pitch stays. It follows the tempo even if you change it later, so long loops run in sync. With the modes ONE and LOOP; with REV and FWD-REV timewarp is off. With a very strong stretch it sounds a little grainy.

Mode FWD-REV

FWD-REV (ping-pong) plays forward to the end and backward to the start, again and again while the key is held.

Sample folder

In the file browser Shift + click on a folder sets the sample folder (on drum tracks Shift + click is the kit from 16 WAVs). Loading a file also remembers its folder, even after a restart. Knob 1 on the ENGINE page walks through the WAV files of that folder (you hear them while turning, it loads when you stop). Shift + knob 1 jumps to the next or previous folder.

15 Recording, groove, LFO

Recording knobs

Arm Rec and press Play: everything you turn is recorded and repeated, list values such as the delay mode or time too. Master knobs (filter, delay, reverb, tape ...), tempo and swing loop over 4 bars. Hold Delete and turn the knob to clear the recording. Pure settings such as song, slice markers and Euclid are not recorded.

Recording pads

The clip length while recording is counted from your first note (16 steps later = 16 steps). When you leave chord mode, a track with notes keeps its chord effect, so it plays what you played. Note Repeat is recorded when you press Rec while Note Repeat is held.

Nudge

Hold a step button and use the left / right arrow keys to set its nudge (fine steps, 0 to 70 % of a step).

Groove

On the SWING page there are, next to Swing, the groove templates MPC, Shuffle, Laidback, Dilla, Drunk, Push, Funk, Ghost, Human and Roll. Groove Amt sets the amount; Swing works on top.

LFO page

Every track has four LFOs as its last page (jog click = next LFO). Target: cutoff, reso, pitch, volume, pan, drive, tone, decay, detune, delay / reverb send, FX amount, FX rate, filter env, crush, ring. Shape: sine, tri, saw up / down, square, random (a new random value every cycle), pluck. Rate free in Hz or synced (8 bars to 1/32). Depth and phase.

Mixer and copying tracks

Shift + Menu opens the mixer (again = back). Hold Copy and press the key of the selected track: the whole track (sounds, all clips, length) is copied to the next empty track of the same kind. Shift + Copy + another track key copies to that track.

16 Sounds and tone

Sounds

Taktile has 704 sounds; every list starts with INIT. Sound levels are evened out. In the sound browser the melodic synths are grouped into 6 groups; all sounds together are under MORE > ALL SOUNDS. All drum sounds share the same engine knobs: Sweep, SweepTime, Noise, Click.

Engines ACID 303, SWARM, DX 6-OP FM

ACID 303: acid bass with the 303 filter (cutoff, squelch, EnvMod, FltDecay; a hard hit gives an accent). SWARM: a swarm of detuned saws, wide and fat (spread, density, size, sine). DX 6-OP FM: six operators with the 32 algorithms of the DX7 (index, detune, feedback, OpDecay). Each engine has 10 sounds under SYNTHS.

Tape page

The tape page (HOME > TAPE) colours the whole master like a cassette recorder. Tape = warmth, saturation and a softer top end. Hiss = quiet noise (mono, deliberately very low). Wow = slow pitch sway. Flutter = fast, fine shake. Age = a worn tape: darker, with a less steady pitch. Dropout = now and then a short dip in level. Tone = brighter or darker top end (middle = neutral). Everything at 0 (Tone in the middle) is off.

Delay and reverb

Delay and reverb are sends: every track sends an amount to the shared delay and the shared reverb (delay: ping-pong, tape or dub; reverb: hall, echo or shimmer). The reverb has 16 ms pre-delay so the sound stays clear; the ping-pong delay keeps the repeats free of low rumble.

17 Display and safety

Granular pitch

The Pitch knob on the GRAIN page goes from -24 to +24 semitones (centre = original).

Page strip

On top is the page strip: whole names in small letters, the current page on white. Below it one dot per page shows where you are (the big dot). If not all pages fit, the strip scrolls with you; a small < or > shows more pages.

Volume 0 to 127

All volume displays (track, pad, mixer, step lock) show 0 to 127.

Master pages

The master pages (TEMPO, QUANT, OPTIONS, BUS, DELAY, REVERB, TRACK, SWING, KEY, REPEAT, DUCK, PROJECT, MIDI OUT …) use the same tiles as the track pages. Tape hiss is mono.

Safe start and buttons

If Taktile did not finish starting, the next start opens an empty project (SAFE START) and keeps the old project as a copy (taktile-state.before-safe-start.json). The buttons Mute, Copy (Double), Delete, Back, Sample, Loop and the arrow keys glow softly; in the menu under Button lights you can switch to NORMAL.

Guide in the menu

Menu → GUIDE: short topics (start, beat, record, sounds, LFO, chords, groove, mixer, song, problems) in German and English. Turn the jog = next page, Back = close.