Taktile

GROOVEBOX FOR ABLETON MOVE · SCHWUNG

The short manual.
From first click to your own beat.




16 tracks · 1457 sounds · 12 audio effects

Version 5.41.0 · 13 October 2026

The controls

These are the names of the controls used in this manual. The graphics show only the elements themselves, not a picture of the device.

The 8 rotary knobs sit in a row above the pads. We call them **knobs 1 to 8**, from left to right. What they do is always shown on the display.

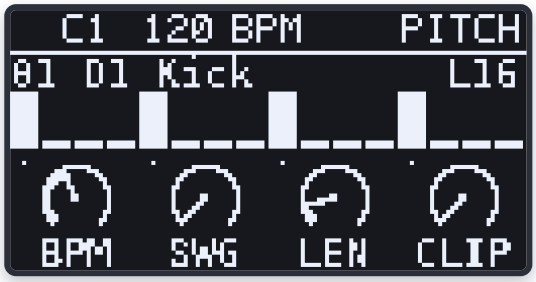

Display (128 × 64)



32 pads (4 rows × 8)



16 step buttons

Master	Master volume
Jog	Wheel with click: scroll and select
Knobs 1–8	The eight values of the current page
Track buttons	Track 1–4 of the bank. Up/Down for more tracks.
Pads	Play drums, play scales, launch clips
Step buttons	Pattern strip; with Shift the quick jumps
Function buttons	Mute, Copy, Delete, Undo, Sample, Capture, Loop, Rec, Play
Back · Menu · Shift	Back · clips view · second function

Taktile in 60 seconds

These are the most important functions. Everything else explains itself as you play.

Step sequencer

Up to 64 steps per track. Per step: velocity, pitch, probability, ratchet, nudge, condition.

1457 sounds

Analog, wavetable, FM, fold, string, pad – plus acoustic drums, effects and tone parts.

42 ready-made kits

Techno, house, hip hop, jazz, lo-fi, cinema … load 16 matching sounds at once.

Euclid lanes

Four lanes per sound create lively rhythms instantly: length, hits, rotation.

Device chain

MIDI effects → sound → audio effects in one place: Shift + step 4.

Shift jumps

Shift + step 1–16 jumps straight to pages like HOME, presets or tempo.

Three words: Jog = the big wheel with click · **Knobs 1–8** = the eight rotary knobs · **Shift** = second function of almost every button.

1 Getting started

1. In the **Schwung Manager** choose “Install custom module” and load **taktile-module.tar.gz**.
2. On the Move open the **Overtake list** in the Tools menu and start **Taktile**.
3. For every new track Taktile asks: **Drums or Synth?** Turn the jog, click the jog.

Leaving

Press **Back**. A question appears:



The leave question

BACKGROUND – Taktile keeps running in the background, the beat keeps playing, you use the Move normally.
CLOSE – Taktile is closed.


Quit at once: **Shift** + **Back**

Help on every page

Shift + **Menu** shows a short help for the current page. Any button closes it.

2 Finding your way around

Taktile has only **three levels**. You always start on the SEQ page.

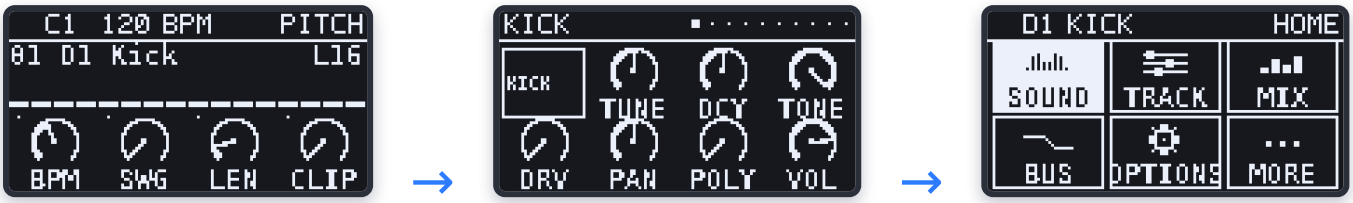

① SEQ page
Steps, BPM, length

② Track pages
Sound, filter, EQ, mod, FX …

③ HOME
Tempo, song, project …

How do I get there?	
Through the track pages	**Turn the jog** on the SEQ page: SOUND → FILTER → EQ → MOD → FX → FX 2 → EUCLID → MIDI → SYNTH. Dots at the top right show where you are.
Back to the SEQ page	**Back** – or turn the jog back.
Sound browser	Click the jog on SEQ/SOUND, or on any page **Shift** + **Step 8**.
HOME (main menu)	**Shift** + **Step 3**: SOUND, TRACK, MIX, BUS, OPTIONS, MORE.
MORE	In HOME “MORE”: TEMPO, SONG, PROJ, KIT, RESAMP, SYNC, OPTION, UNDO, EQ, SCOPE.
Clips / scenes	Button **Menu** (again = back).
Lost?	**Back** – always one step back.

> **Rule of thumb:** Turn = scroll, click = go in, Back = go back. Everywhere.


3 The pads

The 32 pads do different things depending on the track type. The colour shows what you hit.



Drum track

Left 4 × 4 = the 16 drum sounds (bottom left = sound 1). Right 4 × 4 = function for the selected sound (depends on the pad mode).

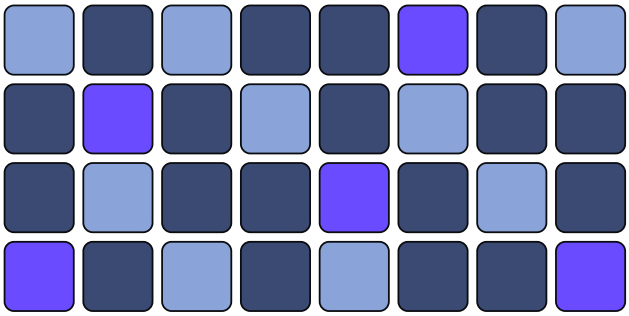

Synth track

“In key” scale keyboard: every row 3 degrees higher. Violet = root note. Key: Shift + step 9.

Pad modes (Left / Right)

Mode	What the pads do
PITCH	Normal playing: drum sounds or scale notes.
REPEAT	Note repeat: hold a pad = fast repeats. Rate: Shift + step 13.
STEPS	The pads are steps: 32 pads = 32 steps (step 1 top left). Hold a pad + knobs = edit the step.
LIVE FX	Hold a pad = performance effect, release = gone: stutter, reverse, flanger, tremolo, auto-pan, comb, wah, gate, lo-fi, DJ filter, granular.

Drum track: **Shift + pad** selects a sound silently. **Copy + pad** copies a sound, **Delete + pad** clears its steps (twice: reset). Switch the track type with **Shift + track button**.


4 Controls at a glance

Buttons always do the same thing. What **Shift** adds is on the next page.

Knobs and jog	
Knobs 1–8	The eight values of the page (names on the display). Shift + knob = bigger steps.
Jog turn	SEQ: through the track pages · elsewhere: lists and values
Jog click	SEQ/SOUND: sound browser · lists: select · Euclid: next page
Master knob	Master volume. Hold a track button + master knob = volume of that track.
Buttons	
Play	Start / stop
Rec	Arm recording (again = off), with count-in if switched on
Hold Loop + jog	Track length (1–64 steps)
Track buttons	Select a track. Press the selected one again = switch pad mode.
Left / Right	Pad mode: PITCH · REPEAT · STEPS · LIVE FX
Up / Down	Pad octave
Mute	Mute / unmute the track. Hold Mute + track button or pad: mute that one.
Copy	Hold + track button: copy the sound there. Hold + pad: copy the pad.
Delete	Hold + step: clear the step. Delete + track button (twice): clear the track.
Undo	Undo the last change
Sample	Random variation of the beat
Capture	Keeps what you played in the last 2 bars
Menu	Clips view on / off
Back	Back · top level: leave question
Steps and pads	
16 step buttons	Set / clear steps. **Hold a step + knobs 1–8**: velocity, pitch, probability, gate, ratchet, nudge, condition, lock.
Pads	Drum track: play the 16 drum sounds. Synth track: scale keyboard.


5 Knobs and menus

Every page shows up to eight values. Turn the knob below it – knob 1 on the far left, knob 8 on the far right.

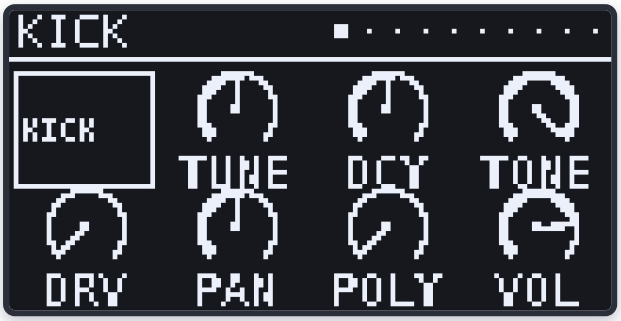


SOUND

1. **Turn a knob**: change the value, the name appears on the display.
2. **Shift + knob**: bigger steps.
3. **Turn the jog** (SEQ page): next track page.
4. **Click the jog** on SOUND: preset browser.

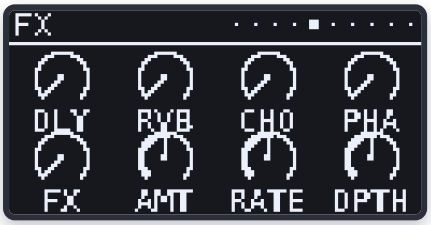

FX

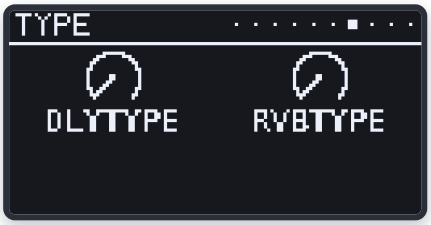

FX TYPE



FX 2

Order of pages: SOUND → FILTER → EQ → MOD → FX → FX 2 → **TYPE** → EUCLID → MIDI → SYNTH. Dots at the top right show where you are.

6 Shift – the second layer

Hold Shift + step button 1–16 to jump straight to the most important pages.

1 CLIPS	**2** OPTIONS	**3** HOME	**4** DEVICES
5 TEMPO	**6** METRONOME	**7** SWING	**8** PRESETS
9 KEY	**10** FULL VEL	**11** NOTE REPEAT	**12** STEP GRID
13 REPEAT RATE	**14** FAVORITES	**15** DOUBLE	**16** QUANTIZE

With Shift held, the step buttons with a function light up. METRONOME, FULL VEL, NOTE REPEAT and STEP GRID just toggle, DOUBLE doubles the pattern.

Shift + other buttons	
Shift + Play	Stop, rewind, all notes off (panic)
Shift + Rec	Metronome on / off
Shift + Undo	Redo
Shift + Capture	Fill: one bar of roll at the end, then everything returns by itself
Shift + Sample	Stronger random variation
Shift + jog turn	Sound browser (on every sound page)
Shift + jog click	In the browser: set / remove favorite · tempo page: tap tempo
Shift + Up / Down	Track above / below
Shift + Left / Right	Step page A / B (tracks longer than 16 steps)
Shift + track button	Switch the track between drums and synth
Shift + Mute	Solo
Shift + Copy + track button	Copy the whole track (with all effects)
Shift + Pad	Select a pad silently, without playing it
Shift + Loop + jog	Length of the whole track
Shift + Menu	Help window
Shift + Back	Quit Taktile at once

8 Effects: granulator, hall, echo, shimmer

Every track has delay and reverb as sends, plus up to two insert effects. New: a **granulator** and three types each for delay and reverb.



AUDIO FX

New: GRANULATOR



FX

Sends + insert



TYPE

Knob 1 delay type, knob 2 reverb type

Delay types

Type	Sound
PING	Classic: repeats bounce left ↔ right.
TAPE	Tape echo: slight wow/flutter, darker, saturates with high feedback.
DUB	Dub echo: dotted offset on the right, repeats thin out and vanish into the room.


Reverb types

Type	Sound
HALL	Dense, soft hall (as before).
ECHO	Long, separate reflections – audible single repeats instead of a wash.
SHIM	Shimmer: hall with an octave up in the feedback – glittering, floating tail.

> **Granulator** (insert effect): chops the sound into tiny “grains” and rebuilds it. Amount = mix, Rate = grain size, Depth = spray and pitch (1×, 2×, ½×, 1.5×). Also a **LIVE FX** pad.


9 The track pages

Each page has up to eight knobs – 1 to 8 from top left to bottom right. Names are on the display.

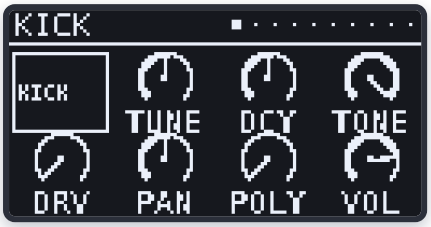

SOUND

Preset, tune, decay, tone, drive, pan, voices, volume

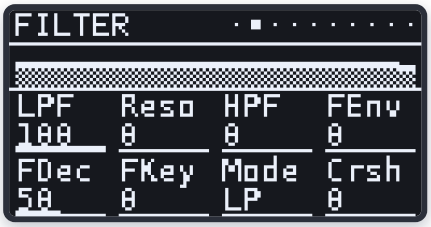


FILTER

Low/high-pass, resonance, filter envelope, crush




EQ

Low, mid, high for this track (± 12 dB)

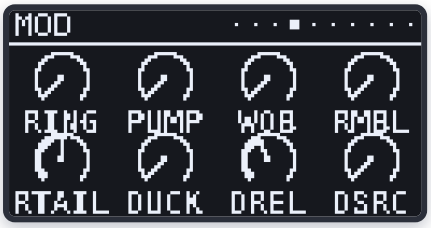

MOD

Ring, pump, wobble, arp/rate, sidechain duck

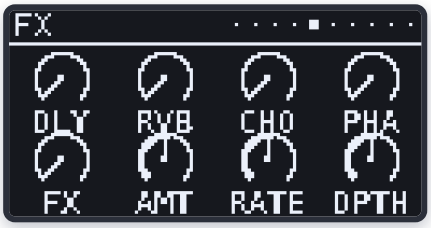

FX

Delay, reverb, chorus, phaser, insert effect




FX 2

Times and sizes of the effects



EUCLID

4 lanes: length, hits, rotation … jog click = next page

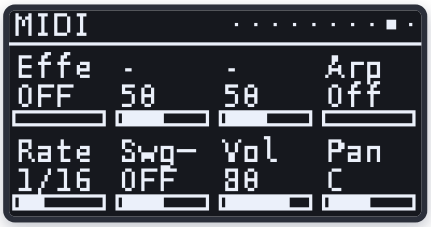

MIDI FX

Chords, arpeggio, strum, scale, transpose




HOME

Main menu: Shift + step 3

> On the SOUND page the small window at the top left shows the **preset name**. Turn it and the preset list opens.

10 Presets and finding sounds




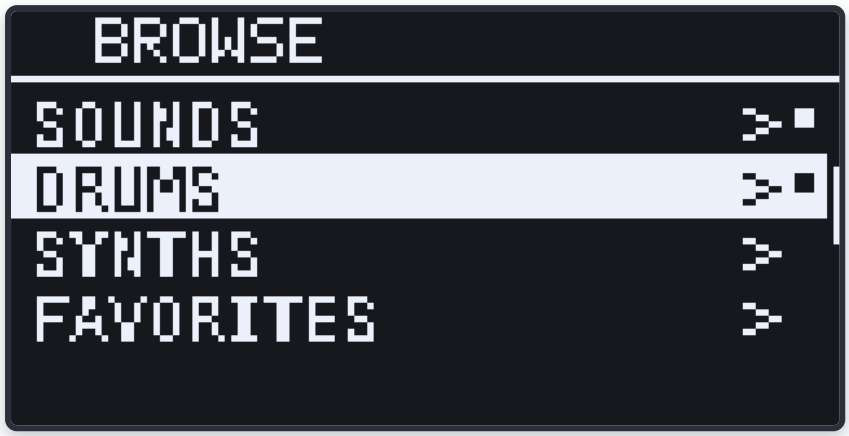


Browser start

1. **Open:** click the jog (SEQ/SOUND) or **Shift** + **Step 8** anywhere.
2. **Scroll:** turn the jog. You hear every sound as you turn.
3. **Keep:** click the jog. **Back:** Back.
4. **Favorite:** **Shift** + **Jog click**.


Order in the browser: **SOUNDS** (by type: bass, lead, pad …), **DRUMS** (kits, by style, by type), **SYNTHS** (sound engines), **FAVORITES**.

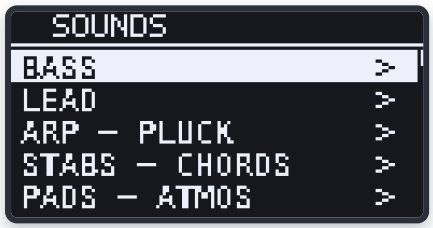

SOUNDS

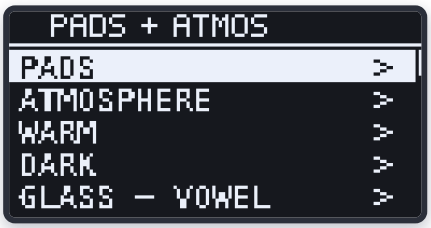

Pads → folders

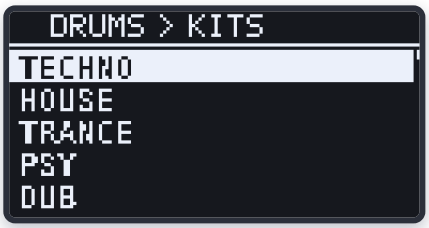


DRUMS → KITS

> On the SOUND page the small window at the top left shows the **preset name**. Turn it and the preset list opens. If you pick a sound of the “other kind” (e.g. a synth on a drum track), the track simply becomes that type.

11 Your first beat – in four pictures

A beat in about one minute: load a kit, set steps, play, refine.

1

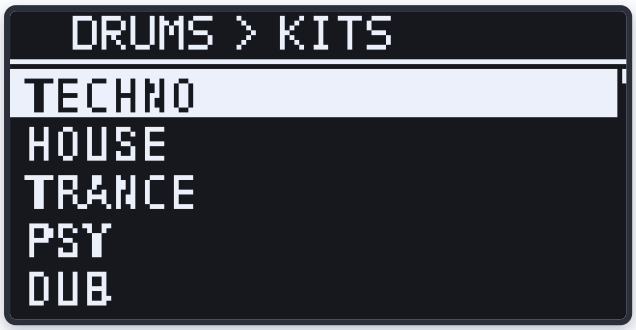

Load a kit

Shift + Step 8 → **DRUMS → KITS →** e.g. TECHNO. Click the jog. The pads now play 16 matching sounds.


2



Set steps

Press step buttons. Start with **Play**, BPM with knob 1.


3

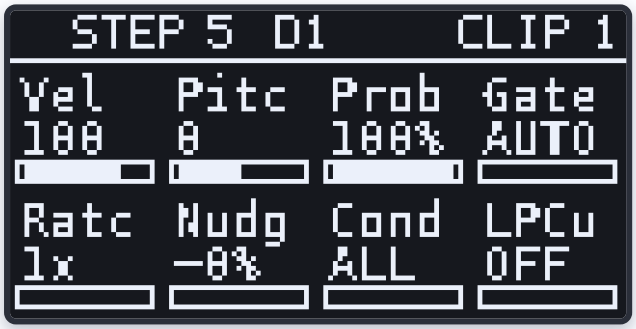

Refine a step

Hold a step and turn knobs: 1 velocity, 2 pitch, 3 probability, 4 gate, 5 ratchet, 6 nudge, 7 condition, 8 lock.

4

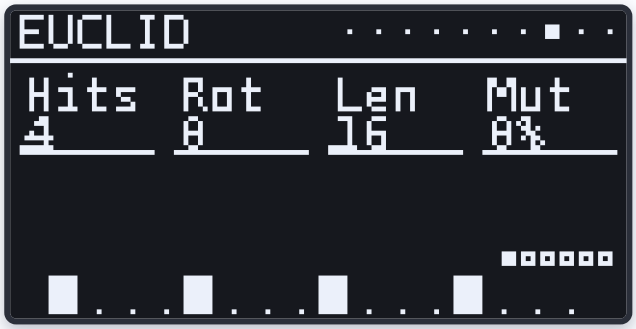

Add Euclid

Turn the jog to EUCLID: change hits and length – the rhythm spreads itself. Jog click = next page.

More life: Sample = random · Shift + Capture = fill at the end · Shift + Step 15 = double the pattern · Undo = undo.

12 Device chain



Device view

Shift + **Step 4** opens the track's **device view** – a chain from top to bottom:

MIDI effect (up to 2) → SOUND → audio effect (up to 2)

- Turn the jog: pick a device
- Click the jog: change the device, "ADD …" adds a new one
- Knobs 1–8: values of the device
- **Delete**: remove the device
- **Back**: leave

> This is a fixed chain (one sound, two MIDI and two audio effects) – not freely movable devices as in Ableton Live.

When something goes wrong

No sound	Track muted? Master knob up? On drum tracks press a pad, on synth tracks a key.
Lost	**Back** (one step back) or **Shift** + **Menu** (help).
Wrong sound	**Undo**. The browser remembers your last sound.
Stuck note	**Shift** + **Play**: stop + all notes off.
Clear the beat	**Delete** + track button, then the track button again.
Projects	Everything is saved automatically. Several projects: Shift + step 3 → MORE → PROJ.

Cheat sheet

Turn scroll	**Click** go in	**Back** back	**Shift + Step** direct jump
Shift + Step 3 HOME	**Shift + Step 4** Devices	**Shift + Step 8** Presets	**Shift + Menu** Help