# Taktile

Groovebox for Ableton Move (Schwung) – the manual




16 tracks · 1462 sounds · 42 kits · Live FX

Version 5.90.0 · 16 October 2026

# Contents

The essentials at a glance – every chapter has its own page.


| | | |
|---|---|---|
| **1** | Welcome & installation | page 3 |
| **2** | Your first beat in 5 steps | page 4 |
| **3** | Operation: turn, click, back | page 5 |
| **4** | The 32 pads | page 6 |
| **5** | The tiles of a track | page 7 |
| **6** | Tiles in detail | page 8 |
| **7** | Sound and kit browser | page 9 |
| **8** | Shift + step: jumps and switches | page 10 |
| **9** | Live FX, granulator, undo | page 11 |
| **10** | Sampler, help | page 12 |
| **11** | The menu | page 13 |


> **Tip:** Three rules are enough to start: turn = scroll, click = go in, Back = go back.

# 1 Welcome

Taktile turns the Ableton Move into a full groovebox: step sequencer, synths, drum kits, effects and live performance in one module.

**Step sequencer**
Up to 128 steps per track, 8 clips per track. Per step: velocity, pitch, probability, ratchet, nudge, condition, length.

**1462 sounds**
Analog, wavetable, FM, fold, string, pad – plus acoustic drums, effect sounds and samples.

**42 drum kits**
Techno, house, hip hop, jazz, lo-fi … load 16 matching sounds at once.

**Euclid lanes**
Four lanes per sound create lively rhythms: length, hits, rotation.

**Effects**
Delay, reverb, chorus, phaser, 11 insert effects, 11 MIDI effects, a granulator per sound.

**Live FX**
16 performance effects on the pads: repeat, stutter, reverse, tape stop, sweeps, freeze …

**Sampler**
Load, trim and slice samples; tools for region, fit and reverse.

**Undo everywhere**
Undo and redo cover almost everything: steps, sounds, knobs, tempo, mutes, song.

## Installation

1. In the Schwung Manager choose “Install custom module” and load **taktile-module.tar.gz**.
2. On the Move open the **Overtake** list in the Tools menu and start Taktile.
3. Track 1 is a synth with the first sound right away – press a pad and play. Every further track asks the first time you select it: synth or drums?

## Leaving

**Back** on the top level asks: BACKGROUND (Taktile keeps running, the beat keeps playing, you use the Move normally) or CLOSE. Quit at once: **Shift** **Back**.

> Everything is saved automatically, including several projects (HOME → MORE → PROJ).

## Help on every page

**Shift** **Menu** shows a short help for the current page.

# 2 Your first beat in 5 steps

About a minute from start to groove.


**1 Start Taktile**
Overtake list → Taktile. Track 1 is a synth and plays right away on the pads.

**2 Create a drum track**
Press track button 2 → choose “Drums”. The browser now offers the kits (e.g. TECHNO), click the jog.


**3 Set steps**
Press step buttons, then Play. Tempo is knob 1.

**4 Refine a step**
Hold a step and turn knobs: 1 velocity, 2 pitch, 3 probability, 4 length, 5 ratchet, 6 nudge, 7 condition, 8 lock.

**5 More life**
Turn the jog to EUCLID, or Shift + step 4 for Live FX. Undo reverts anything.

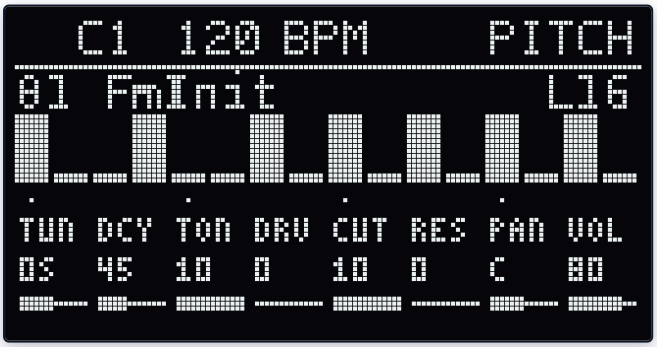

SEQ page with steps

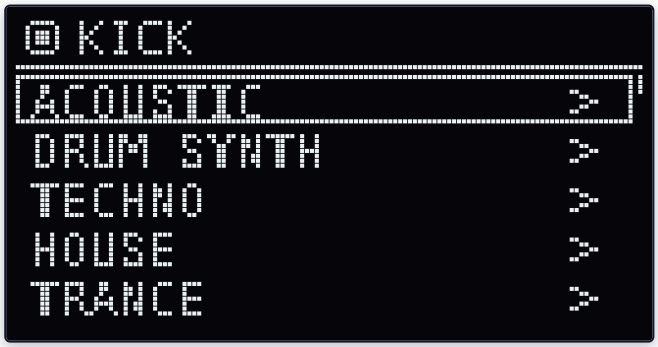


Kits and sounds in the browser

**Tip:** If you get lost press Back. It always goes one level back, and Shift + Menu shows help for the current page.

# 3 Turn, click, back

Taktile has three levels: the SEQ page (steps), the track pages (sound) and HOME (project, tempo, song). One rule applies everywhere:

| Turn = scroll · click = go in · Back = go back | |
|---|---|
| **Jog turn** | SEQ page: through the track pages; elsewhere lists and values |
| **Jog click** | Open the sound browser, confirm a choice, second page of a tile |
| **Back** | One step back; on the top level the Background / Close question |
| **Knobs 1–8** | The eight values of the current page. Names are on the display. A tile shows its value while you turn. |
| **Shift + knob** | bigger steps |
| **Master** | Volume. Hold a track button + master knob = that track's volume; hold a drum pad + master knob = that sound's volume |

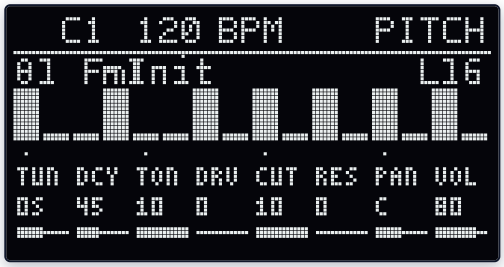

SEQ page: steps, BPM, length, clip

## Buttons at a glance

| Button | Function |
|---|---|
| **Play** | Start / stop. Stop lets sounds and effects ring out. |
| **Rec** | Arm recording (again = off), with count-in if switched on |
| **Loop + Jog** | Track length 1–128 steps |
| **Track buttons** | Select a track. Press the selected one again = change pad mode (PITCH → REPEAT → STEPS). In the clip view a track button goes straight into that track. |
| **Left / Right** | Previous / next track (with Shift: step page). In lists and name entry they move the selection or the cursor. |
| **Up / Down** | Pad octave |
| **Mute** | Mute the track; hold Mute + track button / pad = mute that one |
| **Copy / Delete** | Hold + track button/pad = copy; Delete + step = clear step; Delete + track button (twice) = clear the track |
| **Undo** | Undoes the last step (Shift + Undo = redo) |
| **Sample / Capture** | Sample = random variation; Capture = keeps what you played in the last 2 bars |
| **Menu** | Clip / scene view on/off |

# 4 The 32 pads

What the pads do depends on the track type and the pad mode. The colour shows what you hit.

**Drum track**
Left 4 × 4 = the 16 drum sounds. Right 4 × 4 = a function for the selected sound, depending on the pad mode. Shift + pad selects a sound silently.

**Synth track**
“In key” scale keyboard: every row 3 degrees higher, violet = root note. Key and scale: Shift + step 9; quantize options and layout: Shift + step 3 (layout: KEY, SEQ, OCT, 4THS, 3RDS, ROW8). With KEY the 9th pad is lower than the 8th because every row starts only 3 degrees above the previous one.

## Pad modes

| Mode | What the pads do |
|---|---|
| **PITCH** | Normal playing: drum sounds or scale notes. |
| **REPEAT** | Note repeat: on a synth only the right 16 pads repeat, several at once; the left 16 play normally. On drum tracks you pick the sound on the left; every right pad repeats it at once at its speed while you hold it (and you hear it). The rate also sits on the REPEAT knob. |
| **STEPS** | The pads are steps: hold a pad + knobs = edit the step. |
| **LIVE FX** | Hold = effect on, release = gone (see the Live FX page). In Live FX mode the pads only play effects (and the fill hits), never the notes of the synth. Switching the track ends the mode; switch it on again when you need it. Switch on: Shift + step 4 (or Menu → SOUND → Live FX pads on/off). |

The track button, Left/Right and Shift + step 8 switch only PITCH, REPEAT and STEPS.

## Drum pads

Every pad is its own sound with its own knobs, steps and length.

| Action | How |
|---|---|
| **Copy a sound** | Copy + pad, then the target pad |
| **Clear steps / reset** | Delete + pad (twice = reset the sound) |
| **Volume of one sound** | Hold the pad + turn the master knob |

> Switch the track type: Shift + track button. Up to 4 drum tracks (16 sounds each). Taktile offers the drum kits (KITS) in the browser when you create a new drum track.

## Editing steps

Hold a step button and turn knobs 1–8: velocity, pitch, probability, length, ratchet, nudge, condition, lock. Hold a step and press a later step button to lengthen it – the steps it runs over light up white.


Recording: press Rec and play. With the arpeggiator on, Taktile stores how long you held the pad – the arp plays back like it did live. Held pads are recorded with their real length. When you record into an empty clip it grows with you: The length follows your second press of Rec: Rec off before step 16 = 16 steps, play on to step 18 and the clip becomes 32 steps long (then 48, 64 …). This works on synth and drum tracks. Clearing the clip sets the length back to 16. Hold a pad + press a step to set that step to the pad’s pitch and velocity.

# 5 The tiles of a track

On the SEQ page the jog wheel walks through the track’s tiles. Each has up to eight knobs. Tiles that belong together have a second page with a jog click. Every parameter lives in exactly one place.





PRESET

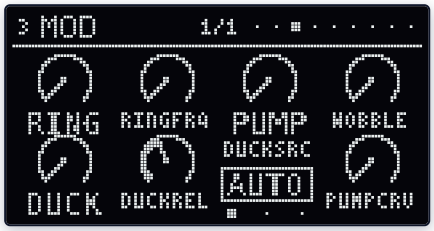



MOD





FILTER 1/2

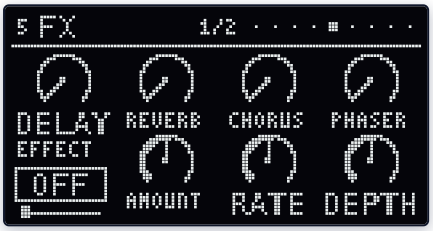


FX 1/2

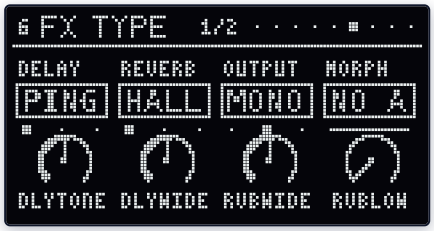


FX TYPE 1/2

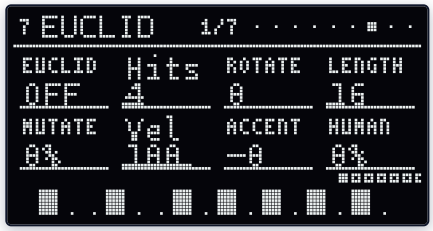


EUCLID 1/7

**Synth** PRESET › SYNTH › MOD › FILTER › FX › FX TYPE › EUCLID › MIDI FX

**Drums** PRESET › MOD › FILTER › FX › FX TYPE › EUCLID › MIDI FX › SAMPLE

Top left always shows the tile (number and name), top right the page inside the tile (for example 2/2) followed by the dots of the tiles. The same page display applies to every tile.
Order for synths: 1 PRESET · 2 SYNTH · 3 MOD · 4 FILTER (+ EQ) · 5 FX (+ GRAIN) · 6 FX TYPE (+ FX TIME) · 7 EUCLID · 8 MIDI FX · 9 SAMPLE.
Order for drums: 1 PRESET · 2 MOD · 3 FILTER (+ EQ) · 4 FX (+ GRAIN) · 5 FX TYPE (+ FX TIME) · 6 EUCLID · 7 MIDI FX · 8 SAMPLE.

# 6 Tiles in detail

| Tile | Contents |
|---|---|
| **PRESET** | Engine, attack, decay, tone, tune, pan, voices, volume – the knobs for instant sound shaping. Drums have drive instead of attack and a delay send instead of voices. Turning the engine knob scrolls the presets. |
| **SYNTH** | Synth tracks only. Engine with wave, sub, drive, filter; jog click = ENGINE 2 (noise, fold, chop, tremolo, auto-pan …). |
| **MOD** | Top row: ring, ring frequency, pump, wobble (rumble instead of wobble on drums). Bottom row: duck (sidechain depth), duck release, duck source, pump curve (rumble tail on drums). |
| **FILTER · EQ** | Low and high pass, resonance, filter envelope, decay, key tracking, mode, crush. Jog click = second page EQ: three bands with frequency, width and output, ±12 dB. |
| **FX · GRAIN** | Levels for delay, reverb, chorus, phaser and the insert effect – per synth track and, on drum tracks, per pad sound (INIT sounds and new synth tracks start without delay and reverb; reverb fully off = Reverb knob at 0 and RvbRet on the master); jog click = second page GRAIN: the granulator (grain, size, spread, pitch …) per sound, with a grain display. |
| **FX TYPE · FX TIME** | Delay type (PING, TAPE, DUB), reverb type (HALL, ECHO, SHIM), output, morph and the insert effect types. Effect types deliberately turn slowly. Jog click = second page FX TIME (times, size, darkness, rates). |
| **EUCLID** | First page: Euclid switch (OFF, ON, ADD; OFF by default, the steps are then not overwritten), hits, rotate, length, mutate, velocity, accent, human. Then two pages trigger + extra and note, then four lanes per sound (each starting with “N Length”). Jog click = next page (1/7 to 7/7). |
| **MIDI FX** | MIDI effect (off by default; octaver, chord, arpeggio, strum, echo …), amount, param, swing+; bottom row: arp, arp rate, probability, velocity bias. Jog click = second MIDI effect. |
| **SAMPLE (Drums)** | Load your own samples (drum tracks only, last tile): file, start, end, gain, attack, release, stretch, mode. Jog click cycles SAMPLE → SLICE → ENV → TOOLS. |

# 7 Sound and kit browser

Open: jog click on SEQ/PRESET or on any page **Jog** **click**. Long names scroll by themselves on the highlighted line.


- **Turn**: scroll – you hear every sound as you go.
- **Click**: keep the sound. **Back**: cancel.
- **Shift + jog click**: set / remove a favourite.
- On drum tracks the browser opens directly in the category of the selected pad (kick pad → KICK).





Browser: KICK → CLASSIC

## Folders

| Folder | Contents |
|---|---|
| **SYNTHS** | Sound engines: analog, wavetable, FM, fold, string … (starting points for your own sounds, beginning with the plain FM init) |
| **SOUNDS** | Ready-made presets by type: bass, lead, chord, pad … |
| **DRUMS** | Kits, by style and by type (kick, snare, hats, perc, FX), plus drum synths |
| **FAVORITES** | Your favourites |

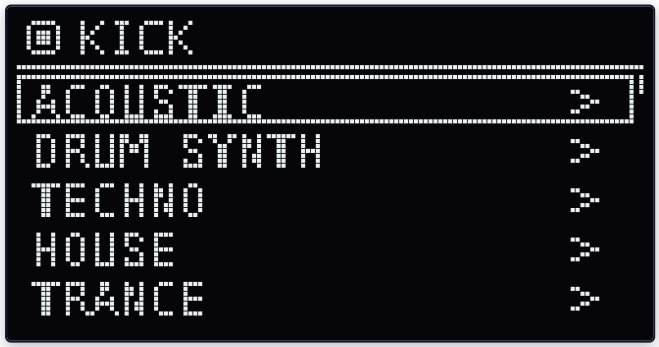


Drum track: sound by type

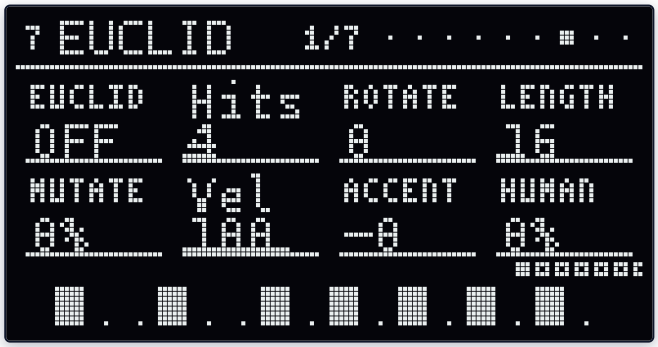


Euclid lanes

## Jog wheel directly on PRESET

On synth tracks scrolling stays with the synth sounds (BASS, LEAD, CHORD). You reach drum sounds only on purpose through the browser. Kits are offered while a newly created drum track has not chosen a sound yet.

# 8 Shift + step: jumps and switches

With Shift held the step buttons that have a function light up. LIVE FX, NOTE REPEAT and STEP GRID show their state (bright = on). The clips open with the Menu button. Shift + Step 11 opens the Note Repeat options (rate, repeat on/off, full velocity …) even when that mode is not open. Shift + Step 4 (Live FX), 8 and 12 also work in the clip view: they switch to the track's pads. Violet = newly arranged. Song (Shift + Step 1 in the clip view): the bottom shows every scene that has notes; steps 1–8 append a scene, steps 9–14 set the bars, every pad is a song step. Copy + pad picks a step, Copy + another pad pastes a copy there; hold Delete + pad deletes that step (a short tap on Delete deletes the selected one).




| Step | What happens |
|---|---|
| **1 PROJECT** | Project slots: LOAD, SAVE HERE, RENAME, NEW EMPTY, DELETE. In name entry Back deletes a character (Shift + Back cancels), left / right move the cursor. In the clip view step 1 goes to the SONG. |
| **2 HOME** | Main menu: SOUND (with the device chain), TRACK, MIX, BUS, OPTIONS, MORE. |
| **3 QUANT OPT.** | Quantize options: grid (1/4, 1/8, 1/8T, 1/16, 1/16T, 1/32), strength (25–100 %), record snap, launch, layout (KEY, SEQ, OCT, 4THS, 3RDS, ROW8), key, scale. While recording every note snaps to the grid; the remainder is kept as nudge. |
| **4 LIVE FX** | Live FX pads on / off (the step glows bright while they are on). |
| **8 LAYOUT** | Steps through the three pad modes: PITCH → REPEAT → STEPS. |
| **12 STEP GRID** | Step grid pads on / off (the step glows bright while they are on). |
| **15 DOUBLE** | Doubles the clip length and copies the content. |
| **16 QUANTIZE** | Quantises the timing of all notes of this sound to the chosen grid at once (strength sets the amount). Also: Menu → EDIT CLIP → Quantize now. Undo reverts it. |

## More Shift combinations

| Combination | Function |
|---|---|
| **Shift + Play** | Stop, rewind, all notes off (panic) |
| **Shift + Rec** | Metronome on / off |
| **Shift + Undo** | Redo |
| **Shift + Capture** | Fill: one bar of roll at the end, then everything returns by itself |
| **Shift + Sample** | Stronger random variation |
| **Shift + Jog** | Sound browser (on every sound page) |
| **Shift + Up / Down** | Track above / below |
| **Shift + Left / Right** | Step page A / B (tracks over 16 steps) |
| **Shift + Track** | Switch the track between drums and synth |
| **Shift + Mute** | Solo |
| **Shift + Copy + Track** | Copy the whole track |
| **Shift + Menu** | Help window |
| **Shift + Back** | Quit Taktile at once |

# 9 Live FX

Shift + step 4 (or Menu → SOUND → Live FX pads on/off). Hold a pad = effect on, release = back. The effects run on the master bus; the top two pad rows (on drums the right block) are the effect pads.

| The 16 effects | | | |
|---|---|---|---|
| **REPEAT 1/4** | REPEAT 1/8 | REPEAT 1/16 | REPEAT 1/32 |
| **ROLL** | TRIPLET | REVERSE | TAPE STOP |
| **GATE 1/8** | GATE 1/16 | LOW SWEEP | HIGH SWEEP |
| **CRUSH** | FREEZE | ECHO THROW | REVERB WASH |

## Fill pads


On a synth track in Live FX mode the bottom two pad rows play drum sounds of the first drum track, sorted hats, snare/clap, perc and kick: bottom row = single hits, row above = roll while held. That lets you build fills from only hats or other sounds.

## Granulator


On the FX TYPE tile the granulator chops the sound into tiny grains. It belongs to each sound separately (on drums per pad). Grain = amount, size = grain length, spread = scatter, pitch = pitch, window = the grain window shape (RECT, TRI, SINE, GAUSS, HANN, smoothly blended). The display shows the grains live, each in its window shape.

## Undo and redo

Undo reverts the last step wherever it was: steps, sounds, knobs, master, tempo and swing, mutes, track volume, song, scenes, follow actions, pad modes, sounds from the browser. Shift + Undo redoes it. Menu → EDIT CLIP → Undo history lists the latest changes.

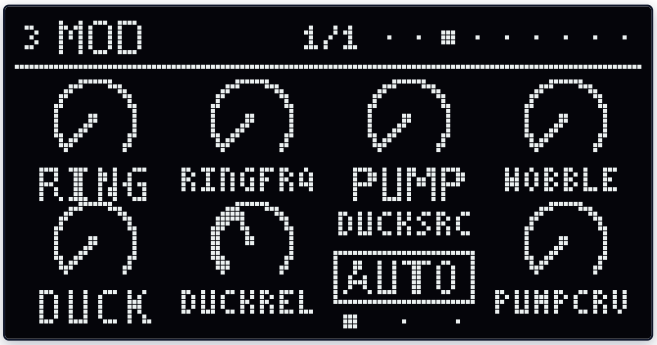

MOD

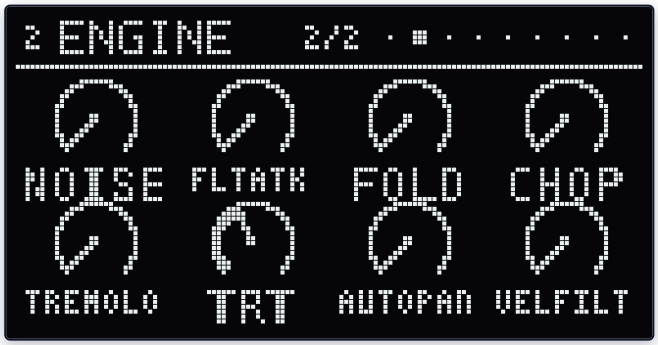

ENGINE 2

# 10 Sampler and slices

On the SAMPLE tile knob 1 picks the file; **Shift** **jog click** opens the file browser (Shift + click on a folder = kit from 16 WAVs).

| Page | What it does |
|---|---|
| **SAMPLE** | File, start, end, gain, attack, release, stretch, mode |
| **SLICE** | Set markers (add), delete (del), snap to transients (snap); Shift + jog click spreads the slices over the pads |
| **ENV** | Sample envelope |
| **TOOLS** | Halve / double / move the region, random region, reverse, normalise, reset and FIT (fits the region to whole beats at the current tempo) |

## When something goes wrong

| Problem | Fix |
|---|---|
| **No sound** | Track muted? Master knob up? Press a pad on drum tracks, a key on synth tracks. |
| **Lost** | Back (one step back) or Shift + Menu (help). |
| **Wrong sound** | Undo. The browser remembers your last sound. |
| **Stuck note** | Shift + Play: stop + all notes off. |
| **Clear the beat** | Delete + track button, then the track button again. |

## The menu

Open the menu through HOME (Shift + step 2) → OPTIONS; it always starts at the top on QUICK. Groups: QUICK, FIND, THEMES, DESIGN, GLOBAL, EXPERT, PLAY, EDIT CLIP, RANDOM + FEEL, SOUND, GO TO PAGE.

| Setting | Effect |
|---|---|
| **Design theme** | 10 designs for the display (Classic, Minimal, Symbols, Nature, Kids, Tech, Space, Retro, Analog, Knobs) |
| **Button lights** | Bright buttons: Mute, copy, delete, undo, back, sample, loop glow even when idle |
| **Slow knobs** | Knobs at half speed |
| **Count-in** | One bar of count-in when recording |
| **Note repeat** | Allow / block note repeat |
| **CPU meter** | EXPERT: screen with CPU load, peak, history and the number of sounds / effects (also “Load info”) |
| **Scope** | EXPERT: waveform and bands; jog click also switches to the animations DANCE (dancing animals), STARS and RINGS |
| **Quantize now** | EDIT CLIP: quantise the timing to the grid right now |