Taktile

Groovebox for Ableton Move (Schwung) – the manual



16 tracks · 1462 sounds · 42 kits · Live FX

Version 5.141.0 · 18 October 2026

Contents

The essentials at a glance – every chapter has its own page.

1	Welcome & installation	page 3
2	Your first beat in 5 steps	page 4
3	Operation: turn, click, back	page 5
4	The 32 pads	page 6
5	The tiles of a track	page 7
6	Tiles in detail	page 8
7	Sound and kit browser	page 9
8	Shift + step: jumps and switches	page 10
9	Live FX, granulator, undo	page 11
10	Sampler, help	page 12
11	The menu	page 13

> **Tip:** Three rules are enough to start: turn = scroll, click = go in, Back = go back.

1 Welcome

Taktile turns the Ableton Move into a full groovebox: step sequencer, synths, drum kits, effects and live performance in one module.

Step sequencer
Up to 128 steps per track, 8 clips per track. Per step: velocity, pitch, probability, ratchet, nudge, condition, length.

1462 sounds
Analog, wavetable, FM, fold, string, pad – plus acoustic drums, effect sounds and samples.

42 drum kits
Techno, house, hip hop, jazz, lo-fi … load 16 matching sounds at once.

Euclid lanes
Four lanes per sound create lively rhythms: length, hits, rotation.

Effects
One shared delay and reverb bus for all tracks (a send per track; reverb HALL = Dattorro plate), 11 insert effects, 11 MIDI effects, a granulator per sound.

Live FX
16 performance effects on the pads: repeat, stutter, reverse, tape stop, sweeps, freeze …

Sampler
Load, trim and slice samples; tools for region, fit and reverse.

Undo everywhere
Undo and redo cover almost everything: steps, sounds, knobs, tempo, mutes, song.

Installation

1. In the Schwung Manager choose “Install custom module” and load **taktile-module.tar.gz**.
2. On the Move open the **Overtake** list in the Tools menu and start Taktile.
3. Track 1 is a synth with the first sound right away – press a pad and play. Every further track asks the first time you select it: synth or drums?

Leaving

Back on the top level asks: BACKGROUND (Taktile keeps running, the beat keeps playing, you use the Move normally) or CLOSE. Quit at once: **Shift** **Back**.

> Everything is saved automatically, including several projects (HOME → MORE → PROJ).

Help on every page

Shift **Menu** shows a short help for the current page.

2 Your first beat in 5 steps

About a minute from start to groove.


1 Start Taktile
Overtake list → Taktile. Track 1 is a synth and plays right away on the pads.

2 Create a drum track
Press track button 2 → choose “Drums”. The browser now offers the kits (e.g. TECHNO), click the jog.


3 Set steps
Press step buttons, then Play. Tempo is knob 1.

4 Refine a step
Hold a step and turn knobs: 1 velocity, 2 pitch, 3 probability, 4 length, 5 ratchet, 6 nudge, 7 condition, 8 lock.

5 More life
Turn the jog to EUCLID, or Shift + step 4 for Live FX. Undo reverts anything.

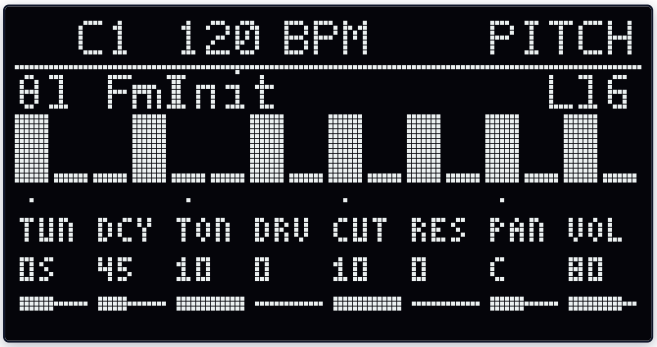

SEQ page with steps

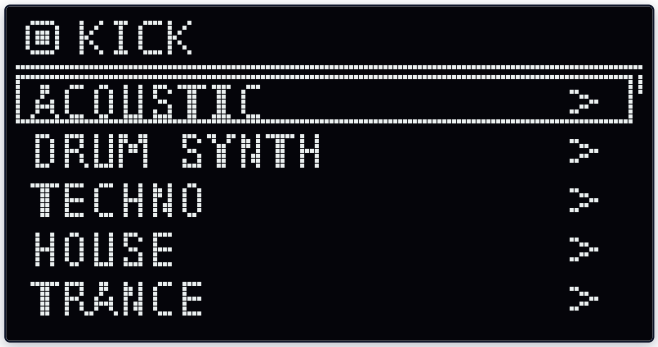


Kits and sounds in the browser

> **Tip:** If you get lost press Back. It always goes one level back, and Shift + Menu shows help for the current page.

3 Turn, click, back

Taktile has three levels: the SEQ page (steps), the track pages (sound) and HOME (project, tempo, song). One rule applies everywhere:

Turn = scroll · click = go in · Back = go back	
Jog turn	SEQ page: through the track pages; elsewhere lists and values
Jog click	Open the sound browser, confirm a choice, second page of a tile
Back	One step back; on the top level the Background / Close question
Knobs 1–8	The eight values of the current page. Names are on the display. A tile shows its value while you turn.
Shift + knob	bigger steps
Master	Volume. Hold a track button + master knob = that track's volume; hold a drum pad + master knob = that sound's volume

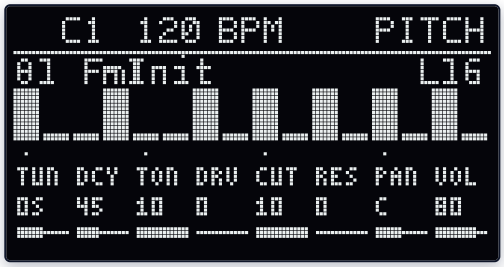

SEQ page: steps, BPM, length, clip

Buttons at a glance

Button	Function
Play	Start / stop. Stop lets sounds and effects ring out.
Rec	Arm recording (again = off), with count-in if switched on
Loop + Jog	Track length 1–128 steps
Track buttons	Select a track. The pad mode changes only with Shift + step 8. In the clip view a track button goes straight into that track.
Left / Right	Previous / next track (with Shift: step page). In lists and name entry they move the selection or the cursor.
Up / Down	Pad octave
Mute	Mute the track; hold Mute + track button / pad = mute that one
Copy / Delete	Hold + track button/pad = copy; Delete + step = clear step; Delete + track button (twice) = clear the track
Undo	Undoes the last step (Shift + Undo = redo)
Sample / Capture	Sample = random variation; Capture = keeps what you played in the last 2 bars
Menu	Clip / scene view on/off

4 The 32 pads

What the pads do depends on the track type and the pad mode. The colour shows what you hit.

Drum track
Left 4 × 4 = the 16 drum sounds. Right 4 × 4 = a function for the selected sound, depending on the pad mode. Shift + pad selects a sound silently.

Synth track
“In key” scale keyboard: every row 3 degrees higher, violet = root note. Key and scale: Shift + step 9; quantize options and layout: Shift + step 3 (layout: KEY, SEQ, OCT, 4THS, 3RDS, ROW8). With KEY the 9th pad is lower than the 8th because every row starts only 3 degrees above the previous one.

Pad modes

Mode	What the pads do
NOTE	Normal playing: drum sounds or scale notes.
REPEAT	Note repeat: on a synth only the right 16 pads repeat, several at once; the left 16 play normally. On drum tracks you pick the sound on the left; every right pad repeats it at once at its speed while you hold it (and you hear it). The rate also sits on the REPEAT knob.
STEPS	The pads are steps: hold a pad + knobs = edit the step.
LIVE FX	Hold = effect on, release = gone (see the Live FX page). In Live FX mode (also on drum tracks, then over all 32 pads) all four rows are live effects (32 in total). The pads only play effects, never sounds or notes. Switching the track ends the mode; switch it on again when you need it. Switch on: Shift + step 4 (or Menu → SOUND → Live FX pads on/off).

Shift + step 8 switches NOTE, REPEAT and STEPS on drum tracks and note layout and CHORD on synth tracks (Note Repeat exists on drum tracks only; with no mode on, the synth pads play normally). CHORD: the left 16 pads play single notes, the right 16 (other colour) the same notes as chords (through the track MIDI effect). Options: CHORD tile. Also in menu → SOUND → Chord pads on/off.

Drum pads

Every pad is its own sound with its own knobs, steps and length.

Action	How
Copy a sound	Copy + pad, then the target pad
Clear steps / reset	Delete + pad (twice = reset the sound)
Volume of one sound	Hold the pad + turn the master knob

> Switch the track type: Shift + track button. Up to 4 drum tracks (16 sounds each). Taktile offers the drum kits (KITS) in the browser when you create a new drum track.

Editing steps

Hold a step button and turn knobs 1–8: velocity, pitch, probability, length, ratchet, nudge, condition, lock. Hold a step and press a later step button to lengthen it – the steps it runs over light up white.


Recording: press Rec and play. With the arpeggiator on, Taktile stores how long you held the pad – the arp plays back like it did live. Held pads are recorded with their real length. When you record into an empty clip it grows with you: The length follows your second press of Rec: Rec off before step 16 = 16 steps, play on to step 18 and the clip becomes 32 steps long (then 48, 64 …). Like on the Move the clip begins at the bar where you started (“BAR n/N”). This works on synth and drum tracks. Clearing the clip sets the length back to 16. Hold a pad + press a step to set that step to the pad’s pitch and velocity.

5 The tiles of a track

On the SEQ page the jog wheel walks through the track’s tiles. Each has up to eight knobs. Tiles that belong together have a second page with a jog click. Every parameter lives in exactly one place.




PRESET

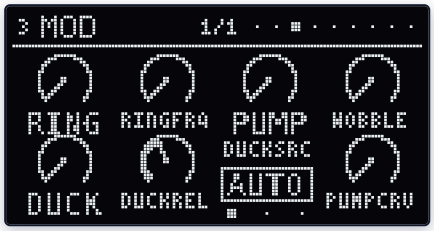


MOD




FILTER 1/2

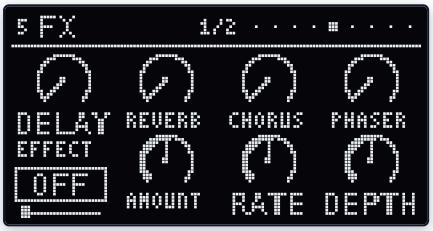

TRK FX 1/2

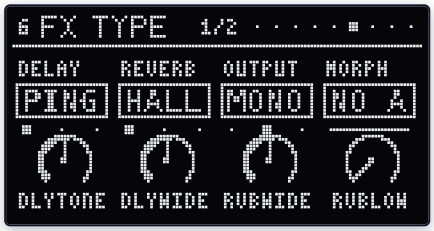

FX BUS 1/2

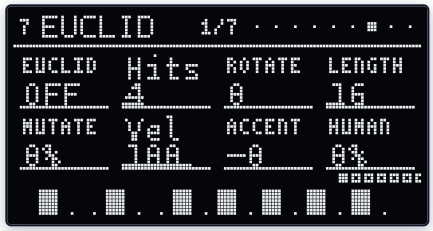

EUCLID 1/7

Synth PRESET › SYNTH › MOD › FILTER › TRK FX › FX BUS › EUCLID › MIDI FX

Drums PRESET › MOD › FILTER › TRK FX › FX BUS › EUCLID › MIDI FX › SAMPLE

Top left always shows the tile (number and name), top right the page inside the tile (for example 2/2) followed by the dots of the tiles. The same page display applies to every tile.
Order for synths: 1 PRESET · 2 SYNTH · 3 MOD · 4 FILTER (+ EQ) · 5 SENDS (+ BEADS) · 6 FX BUS (+ FX BUS 2) · 7 EUCLID · 8 MIDI FX · 9 SAMPLE.
Order for drums: 1 PRESET · 2 MOD · 3 FILTER (+ EQ) · 4 SENDS (+ BEADS) · 5 FX BUS (+ FX BUS 2) · 6 EUCLID · 7 MIDI FX · 8 SAMPLE.


6 Tiles in detail

Tile	Contents
PRESET	Engine, attack, decay, tone, tune, pan, voices, volume – the knobs for instant sound shaping. Drums have drive instead of attack and a delay send instead of voices. Turning the engine knob scrolls the presets.
SYNTH	Synth tracks only. Engine with wave, sub, drive, filter; jog click = ENGINE 2 (noise, fold, chop, tremolo, auto-pan …).
MOD	Top row: ring, ring frequency, pump, wobble (rumble instead of wobble on drums). Bottom row: duck (sidechain depth), duck release, duck source, pump curve (rumble tail on drums).
FILTER · EQ	Low and high pass, resonance, filter envelope, decay, key tracking, mode, crush. Jog click = second page EQ: three bands with frequency, width and output, ±12 dB.
FX · GRAIN	Sends to the shared delay and reverb (Dly, Rvb), the insert effect, output (Out) and morph – per synth track and, on drum tracks, per pad sound (INIT sounds and new synth tracks start without delay and reverb; reverb fully off = Rvb knob at 0); jog click = second page GRAIN: the granulator (grain, size, spread, pitch …) per sound, with a grain display.
FX BUS · FX BUS 2	The shared FX bus: one delay (time, feedback, type PING/TAPE/DUB, tone) and one reverb (size, darkness, type HALL = Dattorro plate / ECHO / SHIM, return). It serves every track and saves a lot of CPU; each track only sends its send level into it. Jog click = second page FX BUS 2 (delay return, widths, reverb low cut and the master tape knobs Tape, Hiss and Wow: cassette saturation, hiss and pitch wobble, off by default; also under HOME → MORE → TAPE).
EUCLID	First page: Euclid switch (OFF, ON, ADD; OFF by default, the steps are then not overwritten), hits, rotate, length, mutate, velocity, accent, human. Then two pages trigger + extra and note, then four lanes per sound (each starting with “N Length”). Jog click = next page (1/7 to 7/7).
MIDI FX	MIDI effect (off by default; octaver, chord, arpeggio, strum, echo …), amount, param, track key; bottom row: arp, arp rate, track scale, probability. Jog click = second MIDI effect (with velocity bias). Multi-note effects (octave, chord, diatonic chord) share the level between their notes so nothing overloads.
CHORD	Synth tracks only, only in chord mode (Shift + step 8), first in the row. Switching it on jumps the screen here, switching it off returns. Page 1: mode, chord type, level, track key, track scale; jog click = page 2: layer FX with amount and param, prob, velocity bias. Track key / track scale apply to this track only (“Mstr” = follow the master); the key moves the pads. 28 scales, among them minor, major, modes, pentatonic, blues, whole tone, diminished, Hirajoshi.
SAMPLE (Drums)	Load your own samples (drum tracks only, last tile): file, start, end, gain, attack, release, stretch, mode. Jog click cycles SAMPLE → SLICE → ENV → TOOLS.

7 Sound and kit browser

Open: jog click on SEQ/PRESET or on any page Jog click. Long names scroll by themselves on the highlighted line.


- **Turn**: scroll – you hear every sound as you go.
- **Click**: keep the sound. **Back**: cancel.
- **Shift + jog click**: set / remove a favourite.
- On drum tracks the browser opens directly in the category of the selected pad (kick pad → KICK).

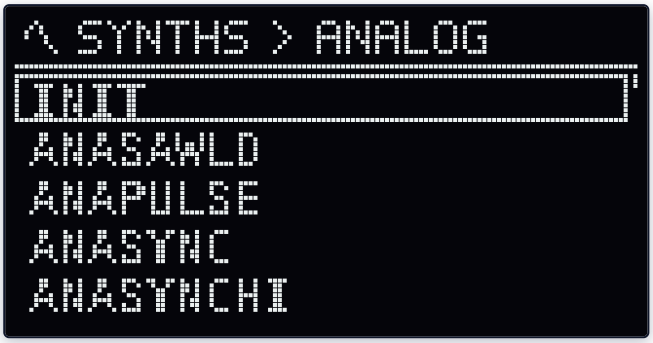


Browser: KICK → CLASSIC

Folders

Folder	Contents
SYNTHS	Sound engines: analog, wavetable, FM, fold, string … (starting points for your own sounds, beginning with the plain FM init)
SOUNDS	Ready-made presets by type: bass, lead, chord, pad …
DRUMS	Kits, by style and by type (kick, snare, hats, perc, FX), plus drum synths
FAVORITES	Your favourites

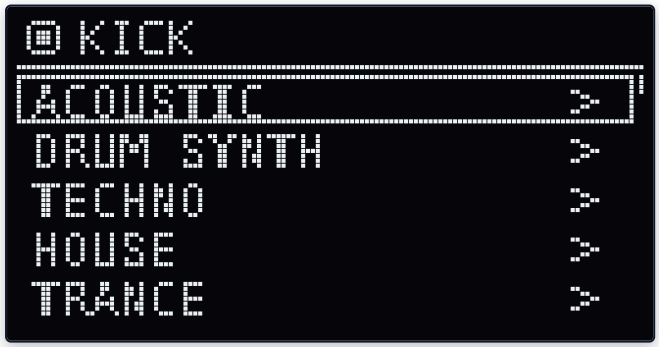

Drum track: sound by type

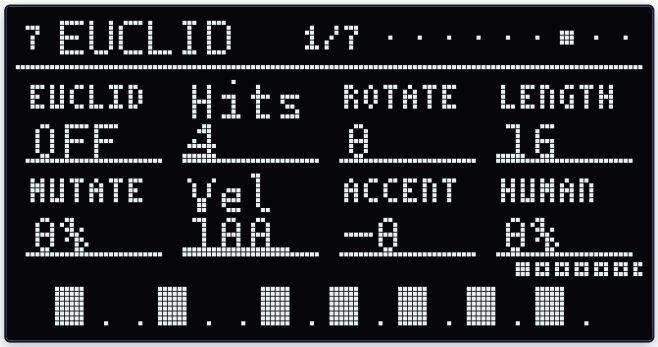

Euclid lanes

Jog wheel directly on PRESET

On synth tracks scrolling stays with the synth sounds (BASS, LEAD, CHORD). You reach drum sounds only on purpose through the browser. Kits are offered while a newly created drum track has not chosen a sound yet.

8 Shift + step: jumps and switches

With Shift held the step buttons that have a function light up. LIVE FX, NOTE REPEAT and STEP GRID show their state (bright = on). The clips open with the Menu button. Shift + Step 11 opens the Note Repeat options (rate, repeat on/off, full velocity …) even when that mode is not open. Shift + Step 4 (Live FX), 8 and 12 also work in the clip view: they switch to the track's pads. Violet = newly arranged. Song (Shift + Step 1 in the clip view): the bottom shows every scene that has notes; steps 1–8 append a scene, steps 9–14 set the bars, every pad is a song step. Copy + pad picks a step, Copy + another pad pastes a copy there; hold Delete + pad deletes that step (a short tap on Delete deletes the selected one).



Step	What happens
1 PROJECT	Project slots: LOAD, SAVE HERE, RENAME, NEW EMPTY, DELETE. In name entry Back deletes a character (Shift + Back cancels), left / right move the cursor.
2 HOME	Main menu: SOUND (with the device chain), TRACK, MIX, BUS, OPTIONS, MORE (including SONG, PROJ, EQ, TAPE).
3 QUANT OPT.	Quantize options: grid (1/4, 1/8, 1/8T, 1/16, 1/16T, 1/32), strength (25–100 %), record snap, launch, layout (KEY, SEQ, OCT, 4THS, 3RDS, ROW8), key, scale. While recording every note snaps to the grid; the remainder is kept as nudge.
4 LIVE FX	Live FX pads on / off (the step glows bright while they are on).
8 LAYOUT	Steps through the pad modes: drum track PITCH → REPEAT → STEPS, synth track CHORD → STEPS.
12 STEP GRID	Step grid pads on / off (the step glows bright while they are on).
15 DOUBLE	Doubles the clip length and copies the content.
16 QUANTIZE	Quantises the timing of all notes of this sound to the chosen grid at once (strength sets the amount). Also: Menu → EDIT CLIP → Quantize now. Undo reverts it.

More Shift combinations

Combination	Function
Shift + Play	Stop, rewind, all notes off (panic)
Shift + Rec	Metronome on / off
Shift + Undo	Redo
Shift + Capture	Fill: one bar of roll at the end, then everything returns by itself
Shift + Sample	Stronger random variation
Shift + Jog	Sound browser (on every sound page)
Shift + Up / Down	Track above / below
Shift + Left / Right	Step page A / B (tracks over 16 steps)
Shift + Track	Switch the track between drums and synth
Shift + Mute	Solo
Shift + Copy + Track	Copy the whole track
Shift + Menu	Help window
Shift + Back	Quit Taktile at once

9 Live FX

Shift + step 4 (or Menu → SOUND → Live FX pads on/off). Hold a pad = effect on, release = back. The effects run on the master bus; the top two pad rows (on drums the right block) are the effect pads.

The 16 effects			
REPEAT 1/4	REPEAT 1/8	REPEAT 1/16	REPEAT 1/32
ROLL	TRIPLET	REVERSE	TAPE STOP
GATE 1/8	GATE 1/16	LOW SWEEP	HIGH SWEEP
CRUSH	FREEZE	ECHO THROW	REVERB WASH
HALF SPEED	DOUBLE SPEED	WOBBLE	FLANGER
RING MOD	AUTO PAN	TREMOLO	WAH SWEEP
BASS CUT	TELEPHONE	UNDERWATER	DISTORT
KILL	REPEAT 3/16	BRAKE	PUMP

Bottom rows


The bottom two pad rows are live effects too: half and double speed (an octave down/up), wobble, flanger, ring modulator, auto pan, tremolo, wah, bass cut, telephone, underwater, distortion, kill (everything silent), repeat 3/16, brake and pump (ducking on the beat). They only change the sound: no drum sounds are played any more.

Granulator


On the SENDS tile (page 2) the BEADS granulator chops the sound into tiny grains. It belongs to each sound separately (on drums per pad). Beads = amount, size = grain length from 4 ms (short) to 1.2 s (long), spread = scatter, pitch = pitch, window = the grain window shape (RECT, TRI, SINE, GAUSS, HANN, smoothly blended). The display shows the grains live, each in its window shape.

Undo and redo

Undo reverts the last step wherever it was: steps, sounds, knobs, master, tempo and swing, mutes, track volume, song, scenes, follow actions, pad modes, sounds from the browser. Shift + Undo redoes it. Menu → EDIT CLIP → Undo history lists the latest changes.

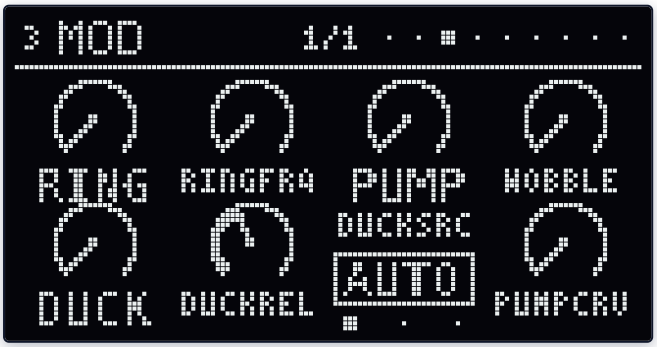

MOD

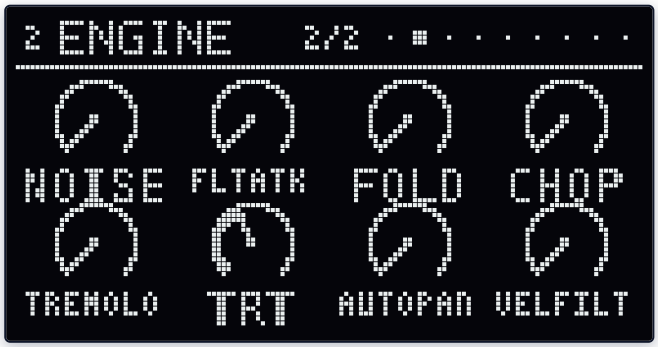

ENGINE 2

10 Sampler and slices

On the SAMPLE tile knob 1 picks the file; **Shift** **jog click** opens the file browser (Shift + click on a folder = kit from 16 WAVs).

Page	What it does
SAMPLE	File, start, end, gain, attack, release, stretch, mode
SLICE	Set markers (add), delete (del), snap to transients (snap); Shift + jog click spreads the slices over the pads
ENV	Sample envelope
TOOLS	Halve / double / move the region, random region, reverse, normalise, reset and FIT (fits the region to whole beats at the current tempo)

When something goes wrong

Problem	Fix
No sound	Track muted? Master knob up? Press a pad on drum tracks, a key on synth tracks.
Lost	Back (one step back) or Shift + Menu (help).
Wrong sound	Undo. The browser remembers your last sound.
Stuck note	Shift + Play: stop + all notes off.
Clear the beat	Delete + track button, then the track button again.

The menu

Open the menu through HOME (Shift + step 2) → OPTIONS; it always starts at the top on QUICK. Groups: QUICK, FIND, THEMES, DESIGN, GLOBAL, EXPERT, PLAY, EDIT CLIP, RANDOM + FEEL, SOUND, GO TO PAGE.

Setting	Effect
Design theme	10 designs for the display (Classic, Minimal, Symbols, Nature, Kids, Tech, Space, Retro, Analog, Knobs)
Button lights	Bright buttons: Mute, copy, delete, undo, back, sample, loop glow even when idle
Slow knobs	Knobs at half speed
Count-in	One bar of count-in when recording
Note repeat	Allow / block note repeat
CPU meter	EXPERT: screen with CPU load, peak, history and the number of sounds / effects (also “Load info”)
Scope	EXPERT: waveform and bands; jog click also switches to the animations DANCE (dancing animals), STARS and RINGS
Quantize now	EDIT CLIP: quantise the timing to the grid right now