Compare Before and After Delta Map Optimization

This feature is to compare performance before and after Optimization.

Generally, it is difficult to use in Time based Analyzer. Because data before and after Optimization will have different time, and GPS information of each data will not be identical.


Therefore, Delta Map feature should be used along with Area Binning Feature. Area Binning is a feature to convert locational data (GPS based) into virtual region, and uses Delta Map feature to calculate data from the created regions.

Delta Map can be executed in two ways:

- Executing Main Tree created by Area Binning (Create Area -> Run Binning -> Create result in Main Tree) result on the Map
- Executing Area Binning and Delta Map in Delta Map Setting window


  However, Create Area must be configured at this point.

Delta Map is activated when two parameters shown below exist in the map. (Refer to Parameter, Comparison Parameter)

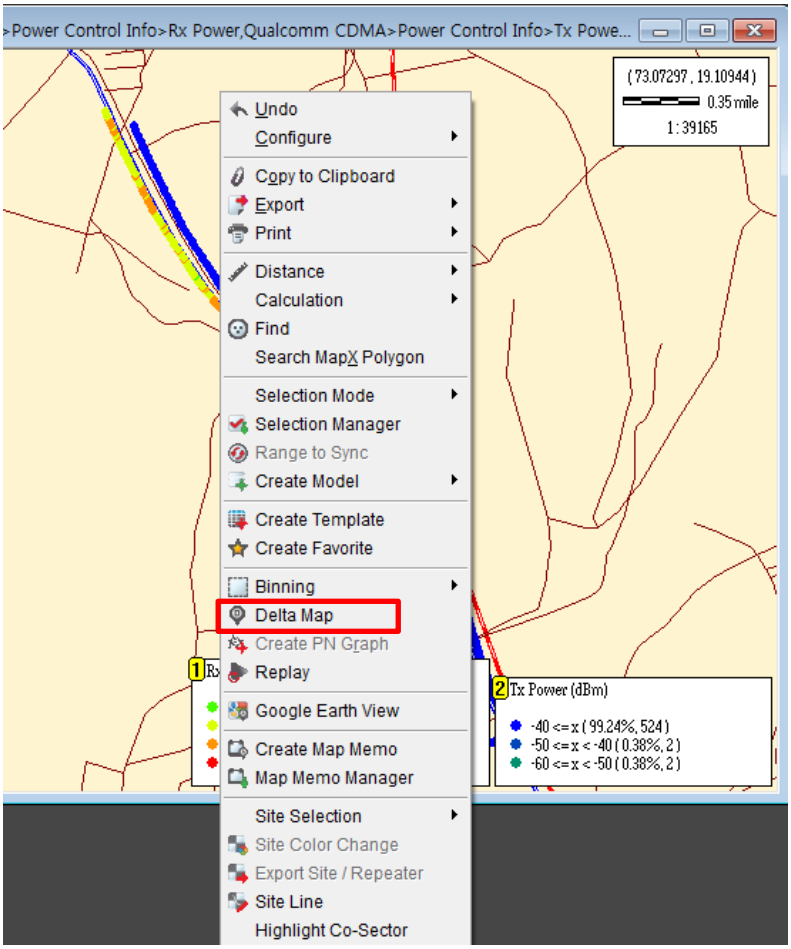

Delta Map Activation

Description of Delta Map Setting is as follows.

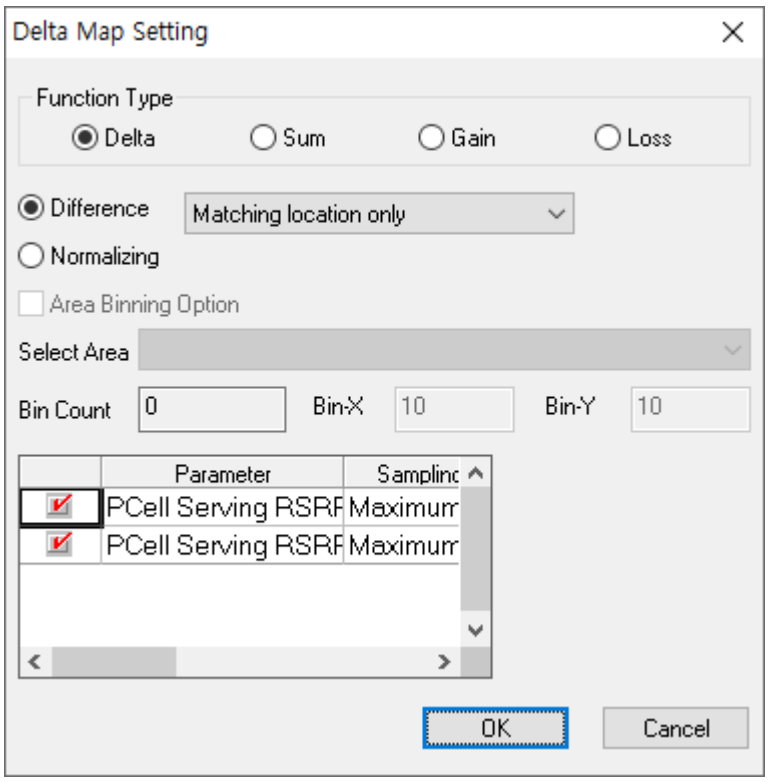


Delta Map Setting Window

Classification	Description	
Function Type	Choose the type of function you want to use(Delta, Sum, Gain, Loss). ◆ Delta: the difference between the two data ◆ Sum: the sum of the two data ◆ Gain: Data that exists only in A-B to B. ◆ Loss: Data that exists only in A in A-B.	
Difference	Choose how to compare the two parameter data	
	Matching location only	Calculate only when data in identical GPS exists in both Parameters. Or, when data exists in identical Bin number.
	Use nearest found location	Use previous or next value when data in identical GPS does not exist in Two Parameters to calculate. Or, when data does not exist in identical Bin number, use previous or next value.
Normalizing	General setting is similar to Matching location only. Calculate only when data exists in identical time in two Parameters. Only equation differs from Matching location only. Equation: (A-B) / (A average – B average)	
Area Binning Option	Designate Area Binning to execute before executing Delta Map.	
Select Area	Select Area to execute Area Binning. Displays all configured Area in Manage Area window.	
Bin Count	Displays number of Bin in selected Area. Number of Bin automatically changes based on user selected Bin-X and Bin-Y value in Manage Area window.	
Bin-X, Bin-Y	Apply to all Bin-X and Bin-Y size as Large or Medium.	
Sampling	Displays standard function to calculate representative value for each Bin while	

Classification	Description
Function	Binning.

The result screen is shown as below.

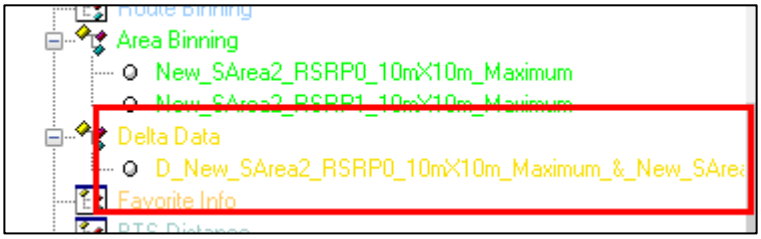

Delta Map Result in Parameter Tree