
5G-NR/LTE RB Scheduling Map Usage

Scheduling information of 5G-NR/LTE Downlink and Uplink RB(Resource Block)

LTE Access System Authentication Tool graphically displays LTE Downlink and Uplink scheduling information according to Time Domain and Frequency Domain for each User as shown below.

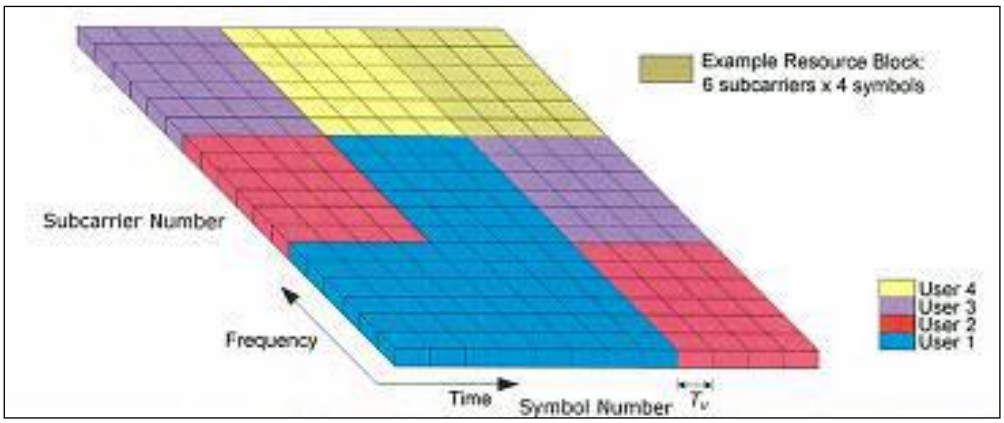

LTE Access System Authentication Tool

Decodes the given DL/UL RB information field for each LTE Chipset and displays RB allocated to corresponding mobiles with Frequency Domain axis for every Time Domain based Slot (0.5ms). (Note: LTE Frame Structure – 1 Radio Frame = 10 Sub-frames(10 TTI) = 20 Slots)

For 5G-NR networks, SCS and slot duration are flexible as various numerology is introduced.

Sub carrier spacing 38.300

μ	SCS $\Delta = 2^{\mu} \times 15$	PRB bandwidth	Frame duration	Subframe duration	Slots per frame	Slots per subframe	Slot duration	Symbols per slot	Symbol duration	Supported for data	Supported for sync
0	15 kHz	180 kHz	10 ms	1 ms	10	1	1 ms	14	71.43 μs	Yes	Yes
1	30 kHz	360 kHz	10 ms	1 ms	20	2	500 μs	14	35.71 μs	Yes	Yes
2	60 kHz	720 kHz	10 ms	1 ms	40	4	250 μs	14	17.86 μs	Yes	No
3	120 kHz	1.44 MHz	10 ms	1 ms	80	8	125 μs	14	8.93 μs	Yes	Yes
4	240 kHz	2.88 MHz	10 ms	1 ms	160	16	62.5 μs	14	4.46 μs	No	Yes


LTE Access System Authentication Tool measures several hundred LTE mobiles, RB scheduling information of all LTE mobiles allocated in one base station can be displayed and monitored in Map format. (Refer to 2. RB Scheduling DL/UL Map)

Acquire LTE DL/UL RB Scheduling information for each mobile and consider System Frame Number and Sub-frame Number to display RB scheduling information of all measured mobiles in Map format.


© Copyright by Accuver Co., Ltd.

RB Scheduling DL/UL Map

4 Mobiles Cell Throughput 63~88Mbps

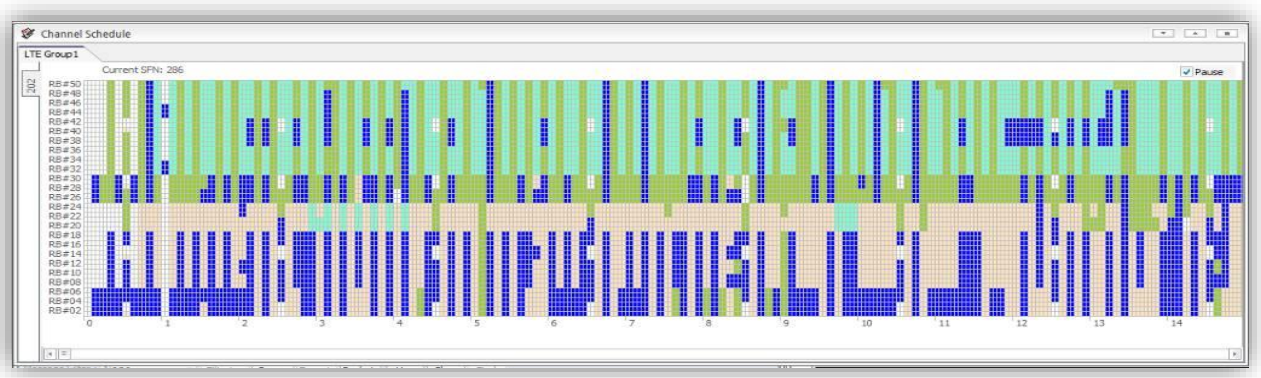

48 Mobiles Cell Throughput 20~30Mbps

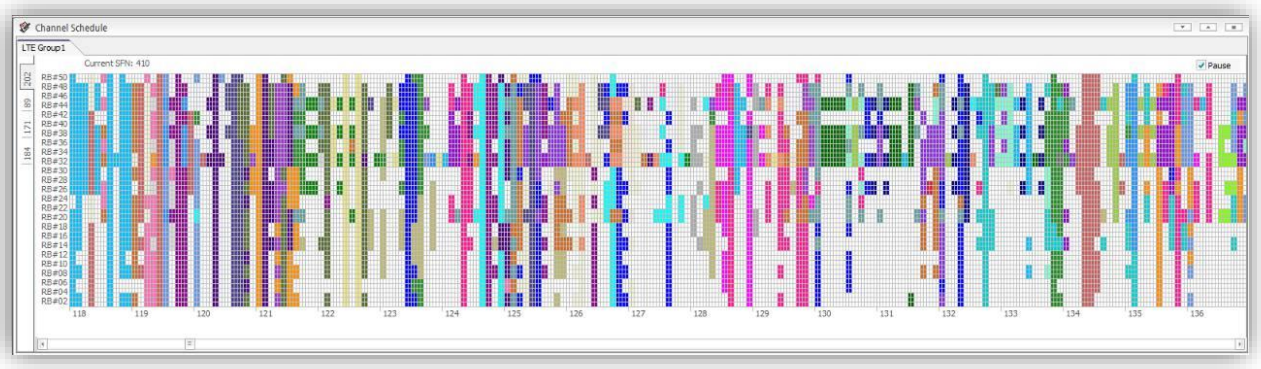



© Copyright by Accuver Co., Ltd.

UI & Usage

The UI and usage of LTE RB Scheduling Map are as follows.


1. Select LTE RB Scheduling Map of Analysis of Tools menu in Main Window.

When measuring by connecting to a 5G-NR network, use the 5G-NR RB Scheduling Map menu.

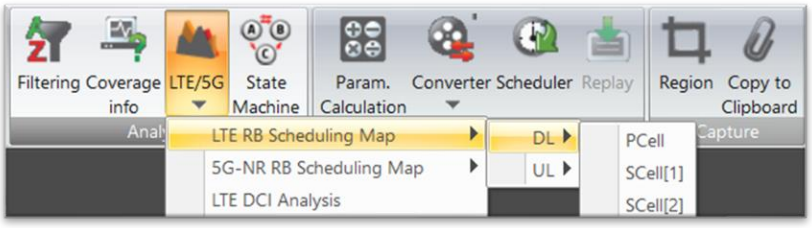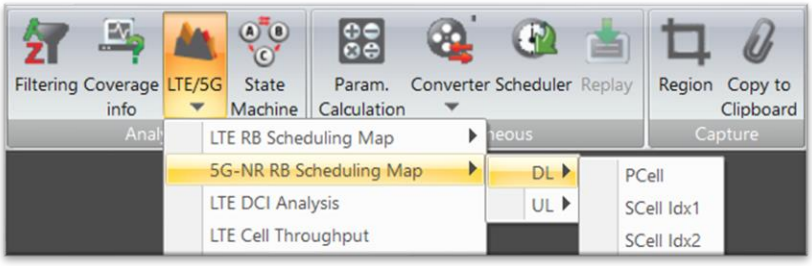LTE	
5G-NR	


2. When you select the menu, window pops up as below:

Parameter shown below must be reprocessed and activated in order to use this feature. (Applies to 5G-NR/LTE Qualcomm Chipset only)

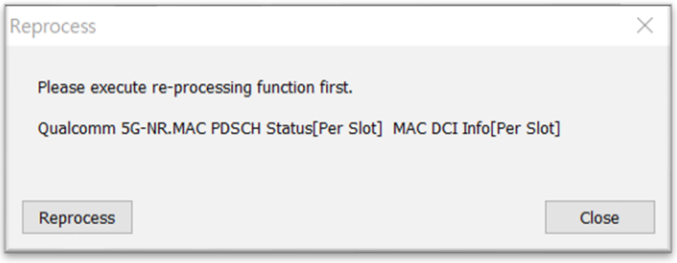
LTE	
5G-NR	

© Copyright by Accuver Co., Ltd.

3. Click the Reprocess button to reprocess the parameters and display the result window.

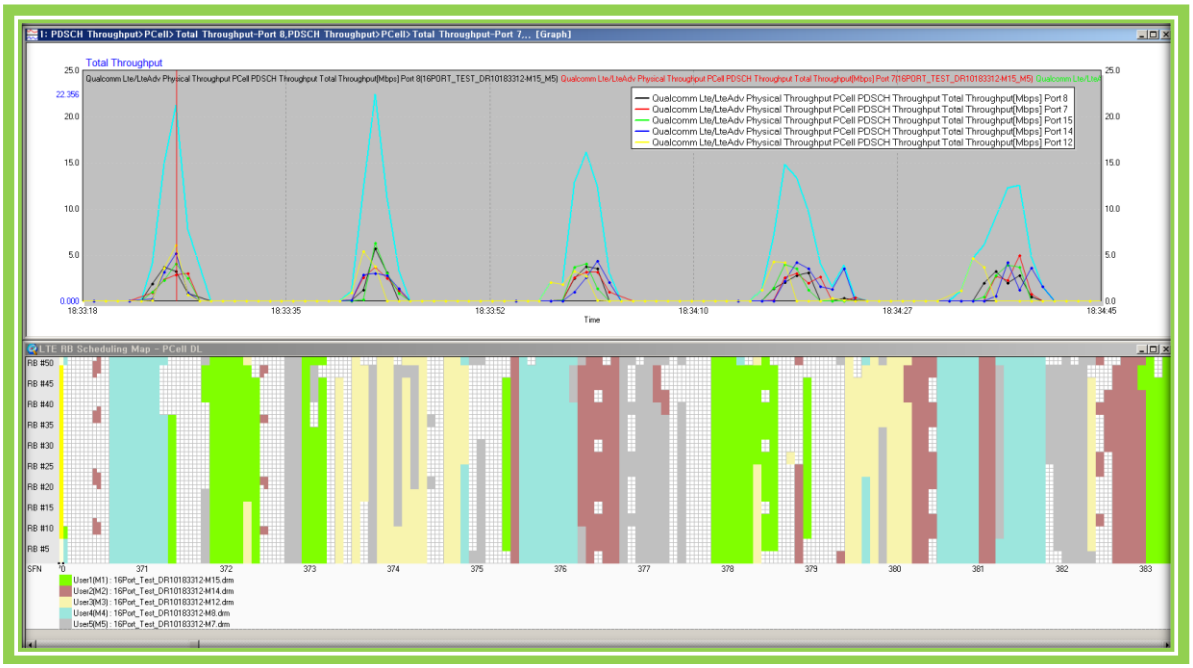

4. The pop up menu of LTE RB Scheduling Map window is as below:

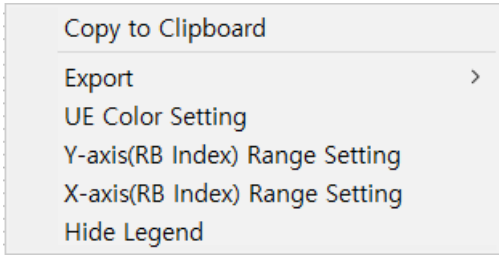

The detailed description is as follows.

Classification	Description
Copy to Clipboard	Clipboard Copy Feature
Export	Provides Export feature in BMP, JPG, GIF, EXCEL, Power Point format
UE Color Setting	Configures color of each Mobile (Model)
Y-axis(RB Index) Range Setting	Configure range of Y-axis
X-axis(RB Index) Range Setting	Configure range of X-axis
Hide Legend	Provides Legend Box Display Toggle feature

© Copyright by Accuver Co., Ltd.