
Map Display of Inbuilding Data

This feature merges all Inbuilding log files by each floor.


Usage

Procedure is shown below.

1. Open New window, select a log file and click Open.

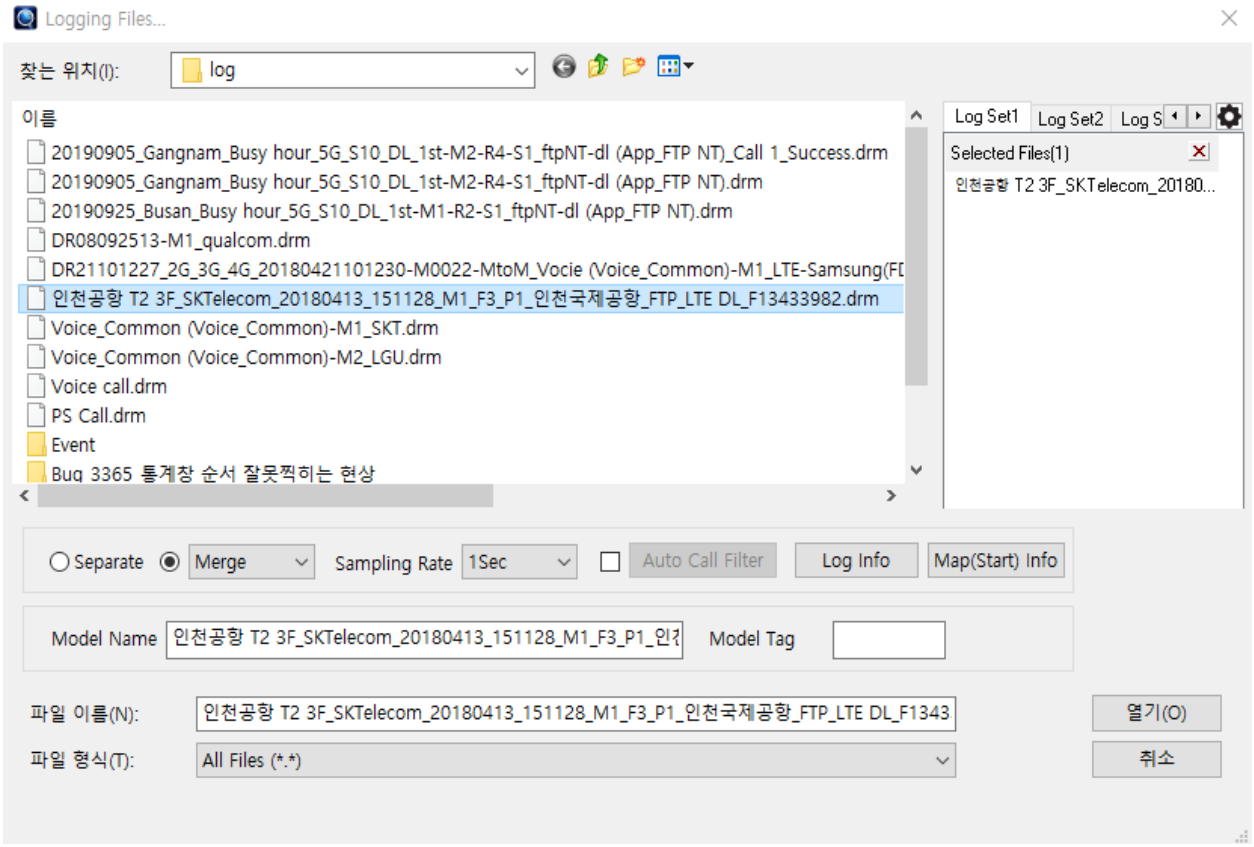


2. Three Filters will be created in Model manager when Model is created. The first is building information, second is floor information, and the third is point information.

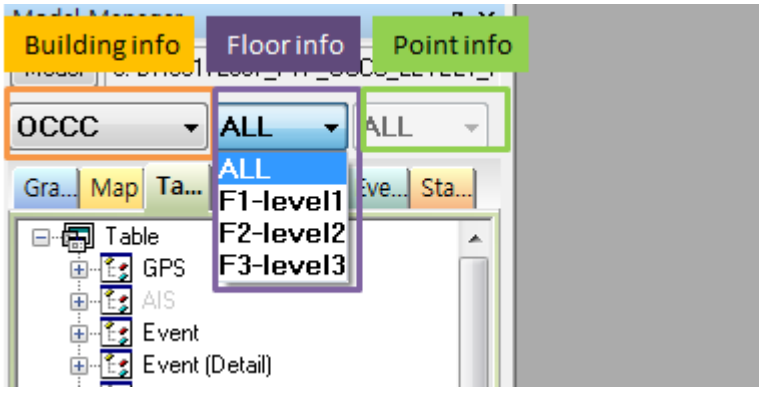

3. In case of Inbuilding, it may analyze by merging log files of multiple floors, but since


© Copyright by Accuver Co., Ltd.

the Map is 2-dimensional, Floor Info must be selected to convert parameter of the Map to allow analysis.

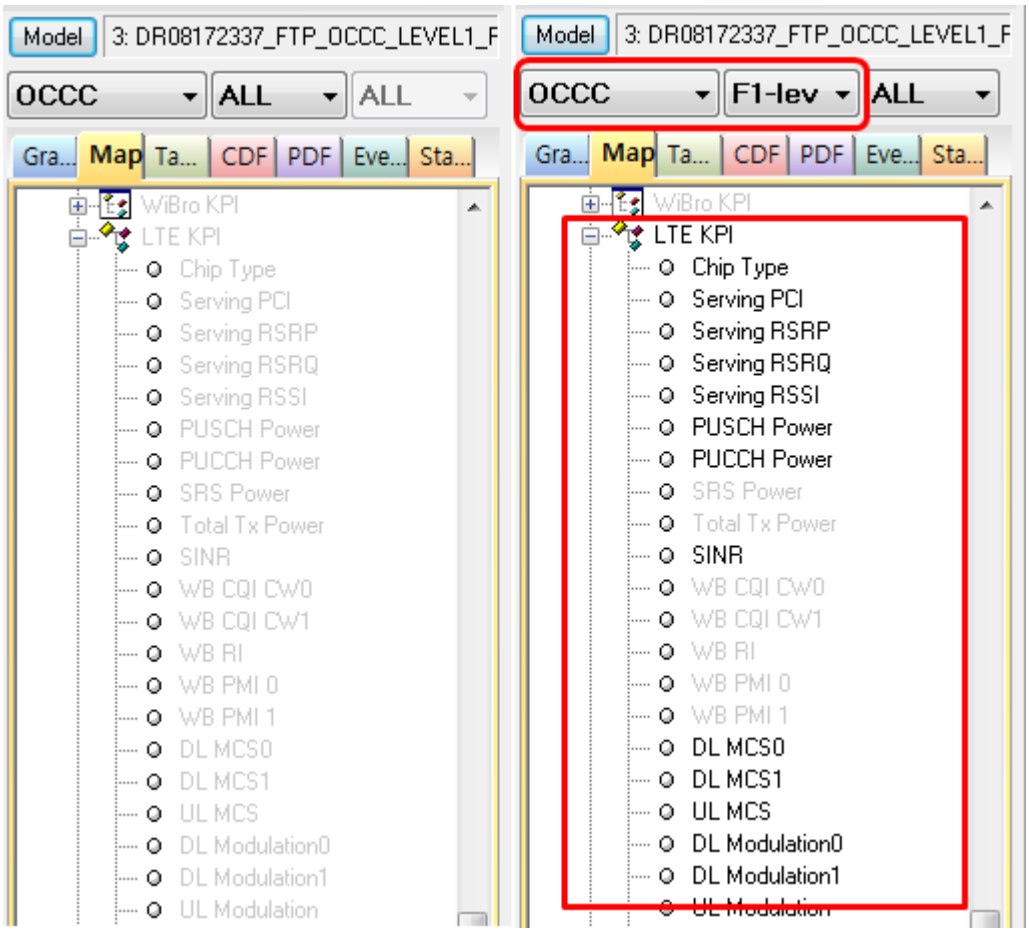


4. Modify Floor information and activate Map to display the corresponding floor data on the Map.

(F1 Result)

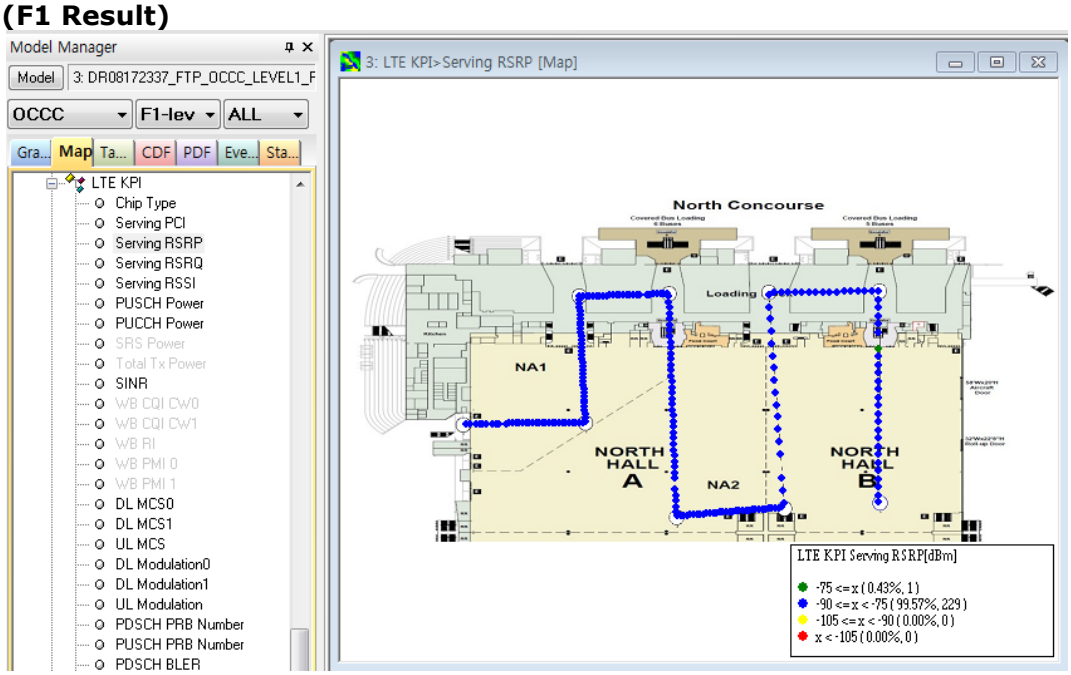


(F2 Result)

© Copyright by Accuver Co., Ltd.

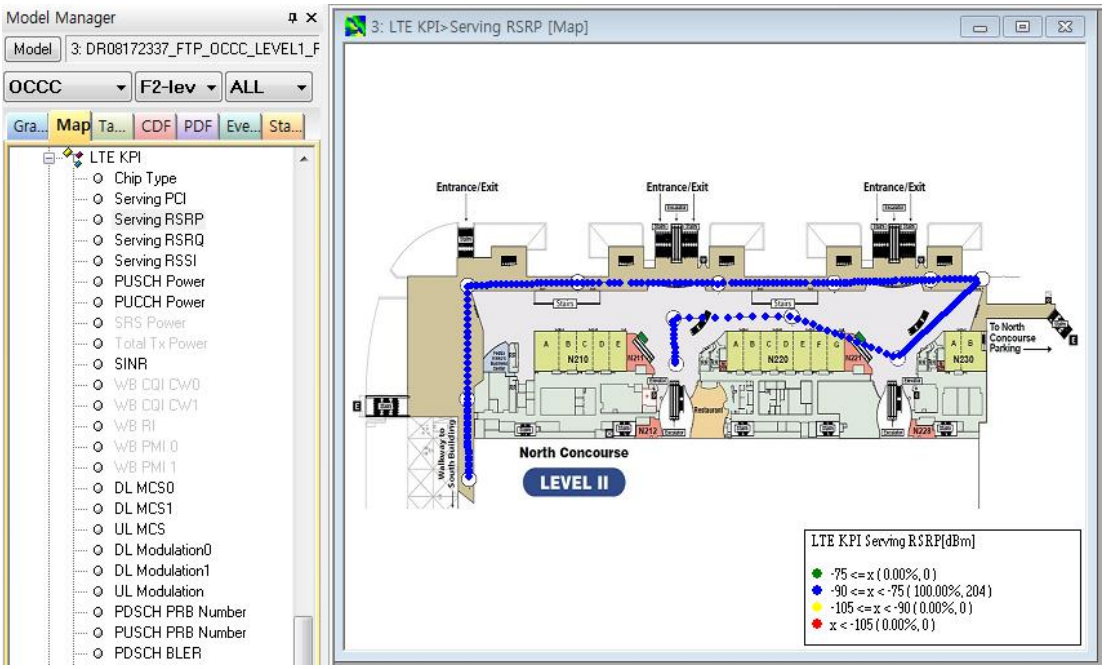


(F3 Result)

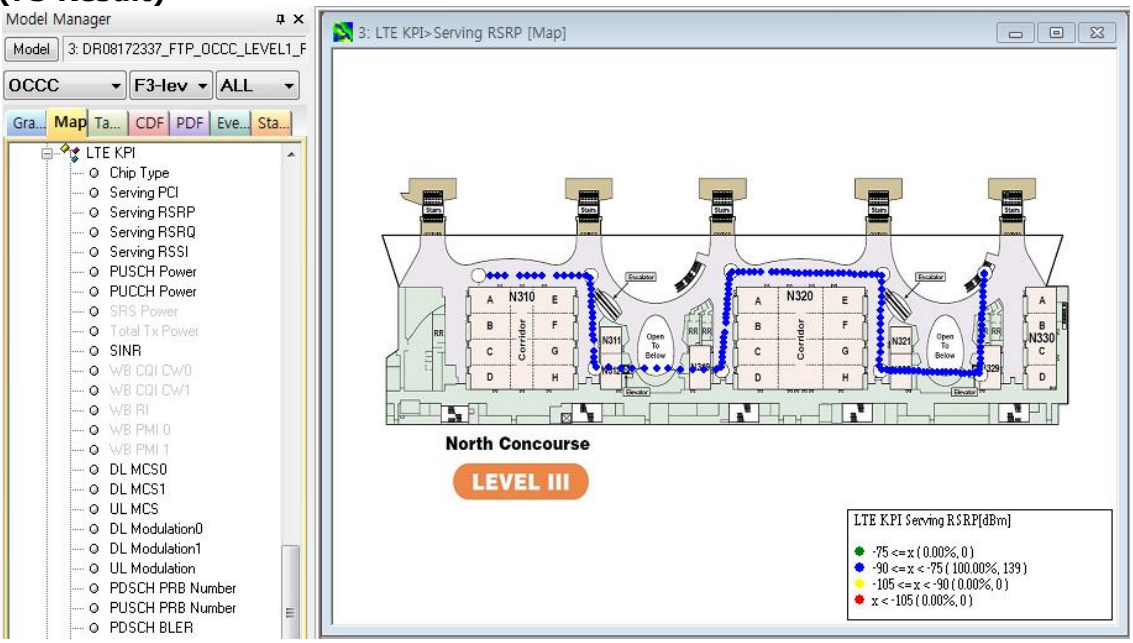



5. To modify Point coordinate or Image, select Configure>Reset Inbuilding map and execute parameter in Parameter tree to create Inbuilding Map Initialization dialog.
6. When the dialog below is executed, load Bitmap. (Bitmap is stored in the Model folder as Default.)
7. To move Point number 10 from the sample below, selection 10 in Event position and drag & drop to a desired location in Map View.
8. Use undo button to return to previous state.

© Copyright by Accuver Co., Ltd.

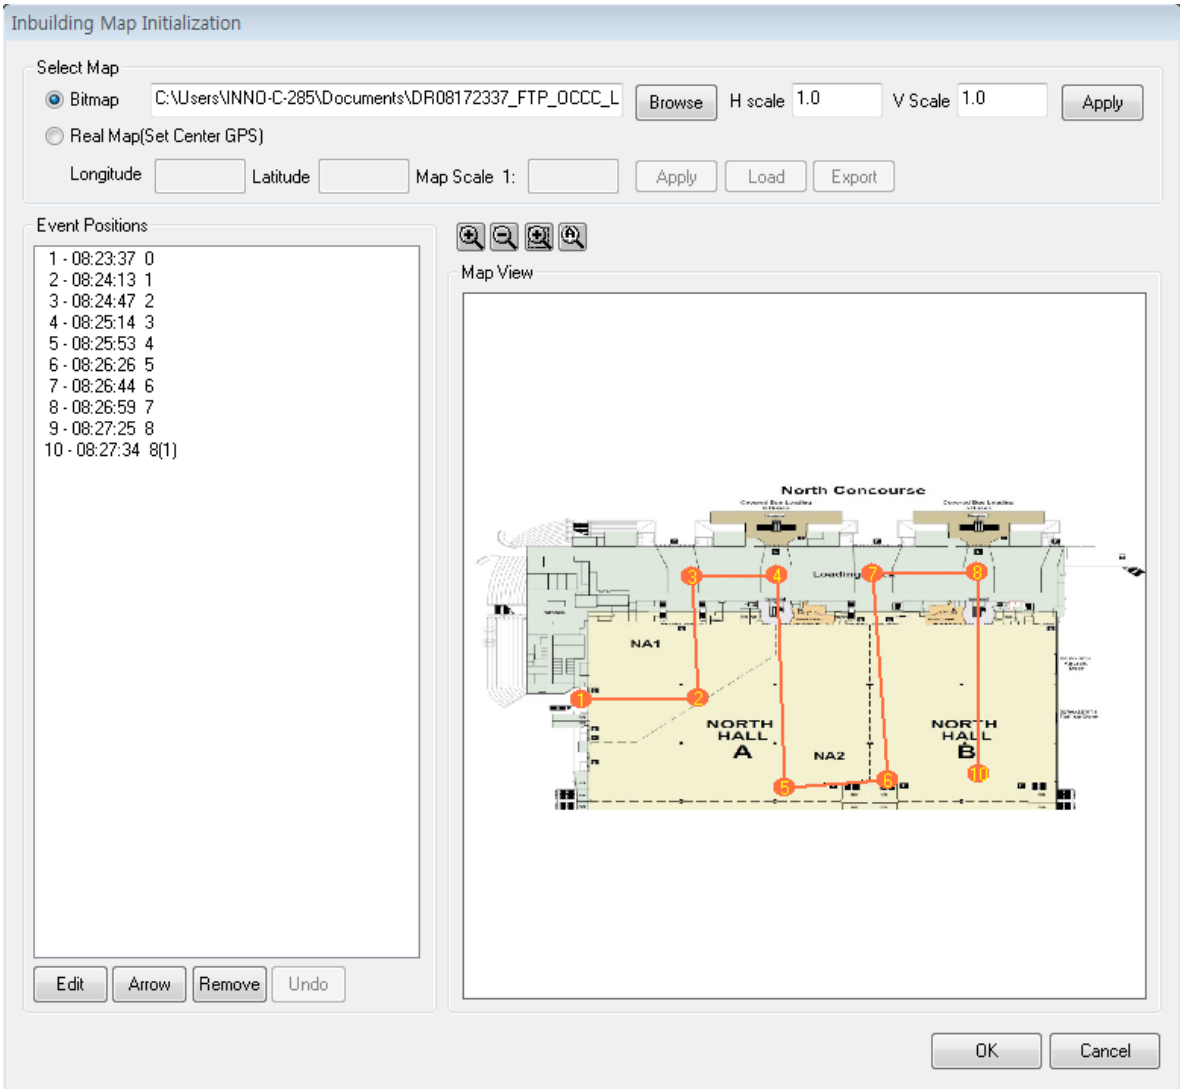
Inbuilding Map Initialization
Select Map
Bitmap
C:\Users\INNO-C-285\Documents\DR08172337_FTP_OCCC_L
Browse
H scale 1.0
V Scale 1.0
Apply
Real Map(Set Center GPS)
Longitude
Latitude
Map Scale 1:
Apply
Load
Export
Event Positions
1 - 08:23:37 0
2 - 08:24:13 1
3 - 08:24:47 2
4 - 08:25:14 3
5 - 08:25:53 4
6 - 08:26:26 5
7 - 08:26:44 6
8 - 08:26:59 7
9 - 08:27:25 8
10 - 08:27:34 8(1)
Edit
Arrow
Remove
Undo
Map View
North Concourse
Loading
NA1
NORTH HALL A
NA2
NORTH HALL B
OK
Cancel

Edit Result

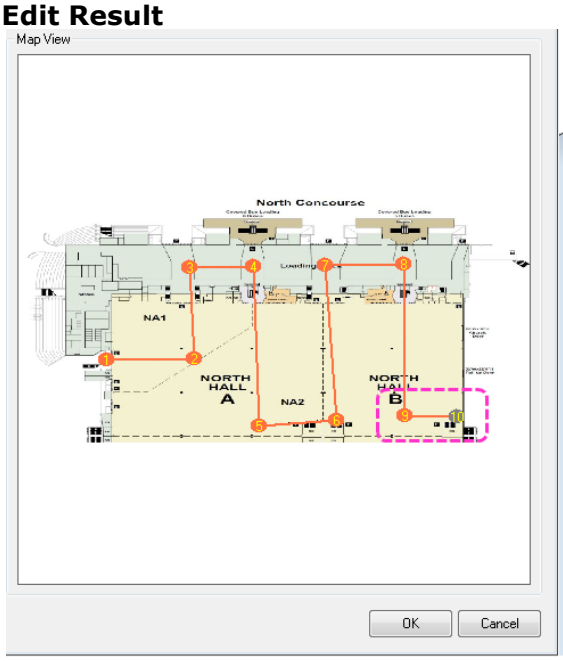

Map View
North Concourse
NA1
NORTH HALL A
NA2
NORTH HALL B
OK
Cancel

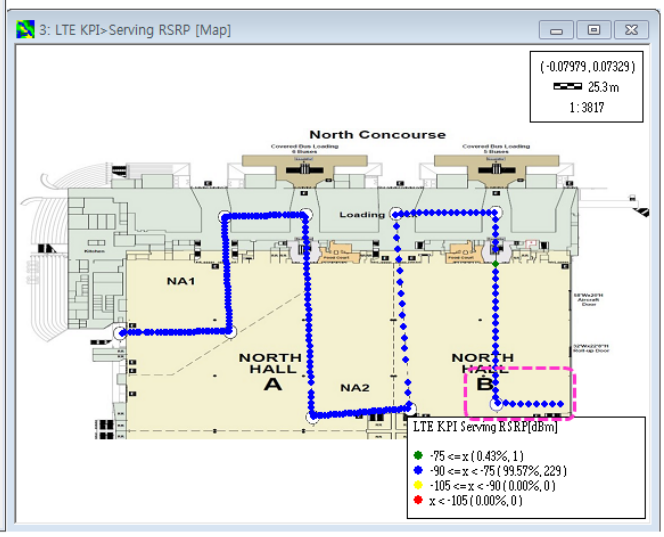

3: LTE KPI>Serving RSRP [Map]
(-0.07979, 0.07329)
25.3 m
1:3817
North Concourse
Loading
NA1
NORTH HALL A
NA2
NORTH HALL B
LTE KPI Serving RSRP[dBm]
-75 <= x (0.43%, 1)
-90 <= x < -75 (99.57%, 229)
-105 <= x < -90 (0.00%, 0)
x < -105 (0.00%, 0)

Other Features of Inbuilding

If user knows actual distance between Point

Use Config>Set Reduced Scale feature to configure Scale and use Distance line feature to calculate the entire measurement distance.

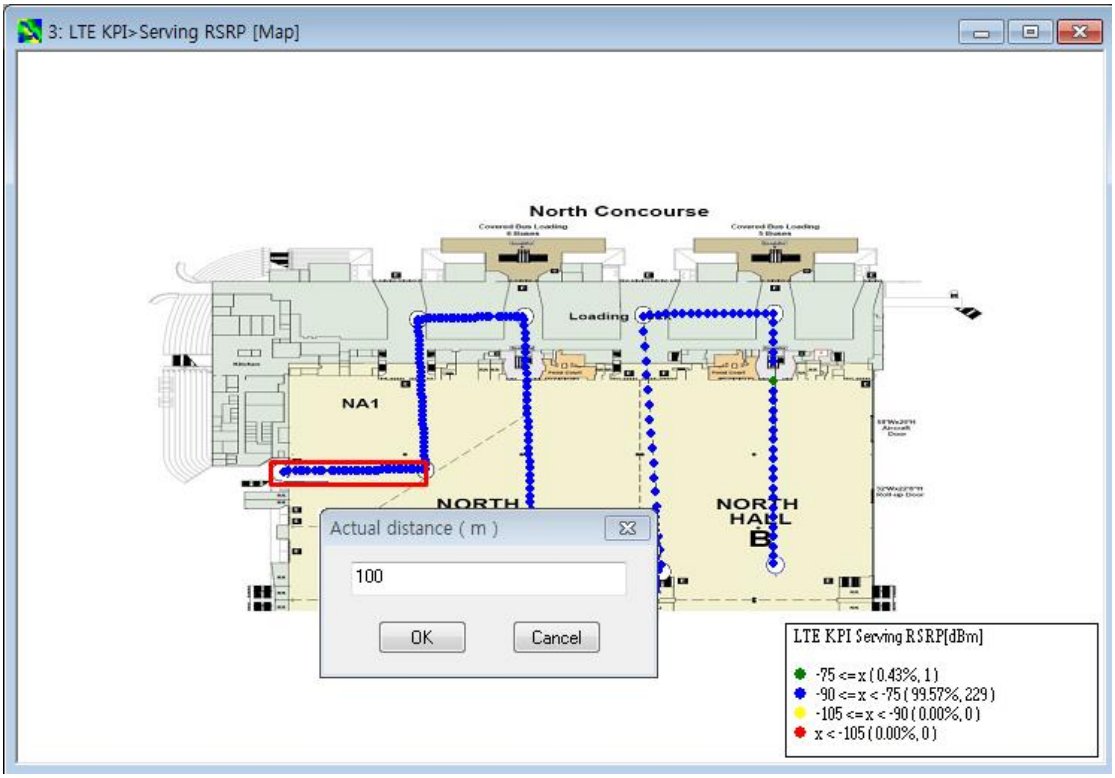


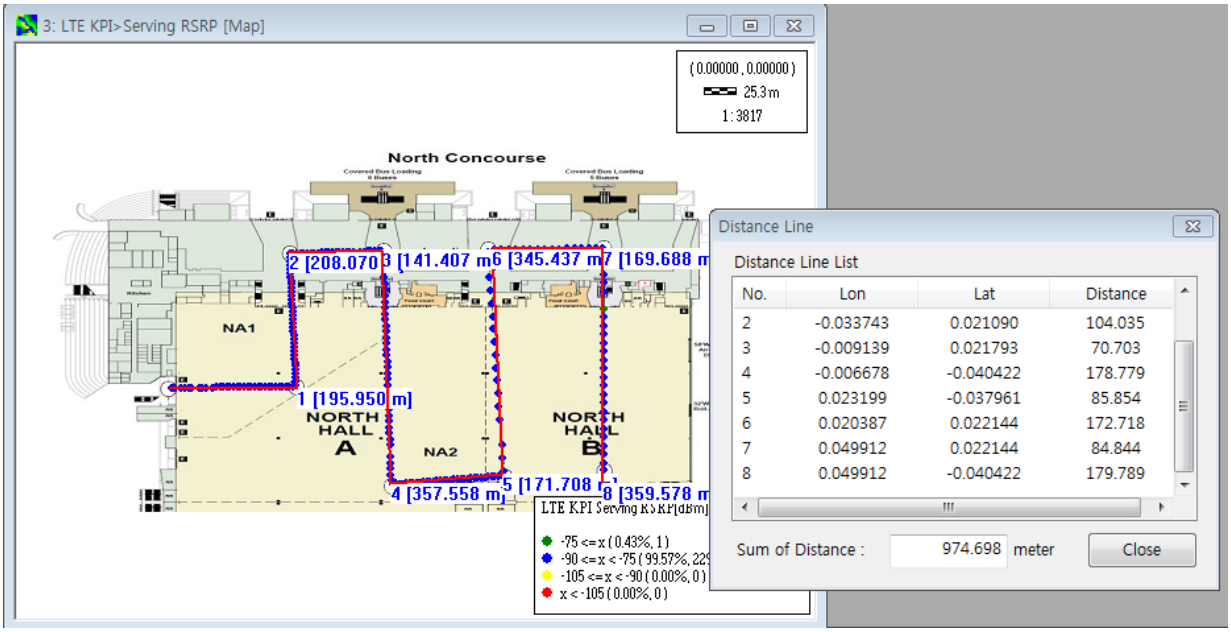


© Copyright by Accuver Co., Ltd.

To Display Call Event with the Map

Configure Tools>Options>Map property>Display offset> x/y as all 0 to display Call Event at the Point of the Event.

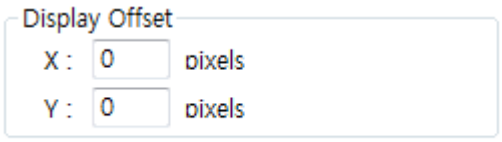

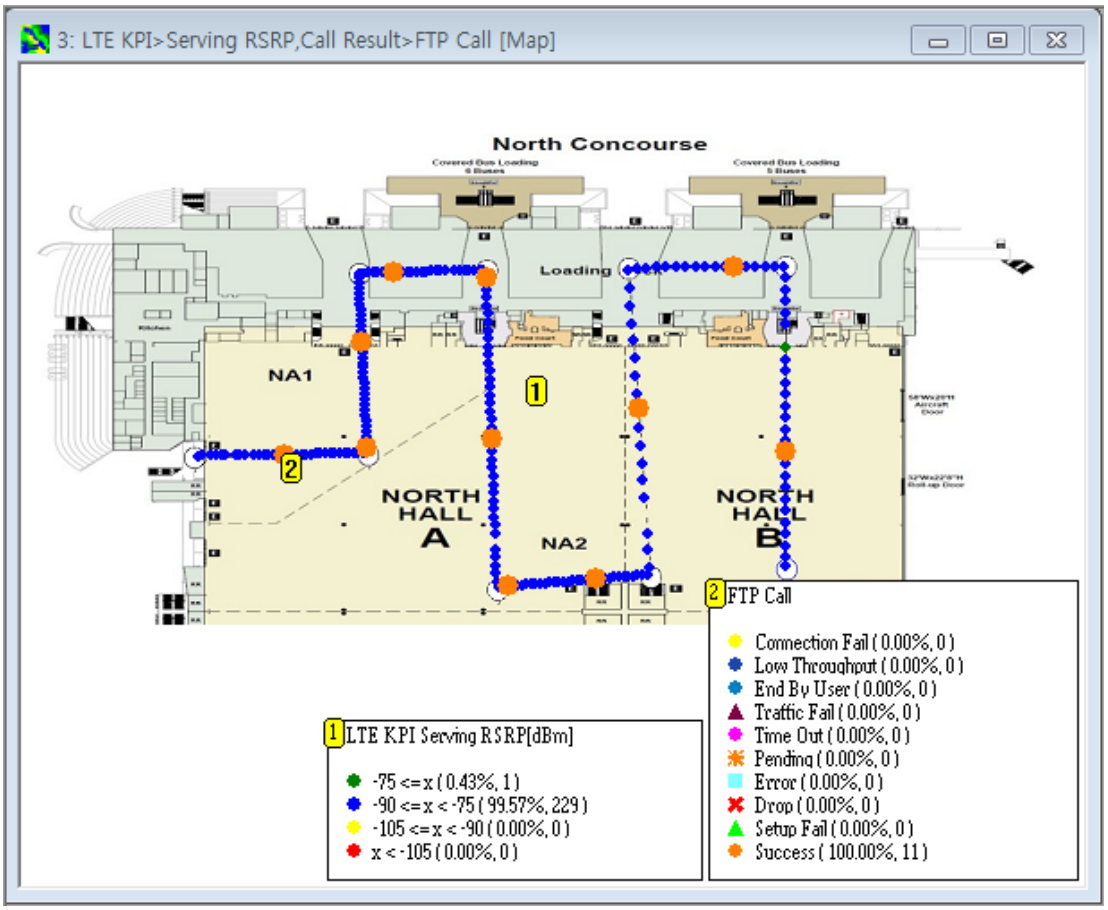

© Copyright by Accuver Co., Ltd.