LITTLE MAGICIAN Dryer Manual

Model: GDZ70-M788E PRO

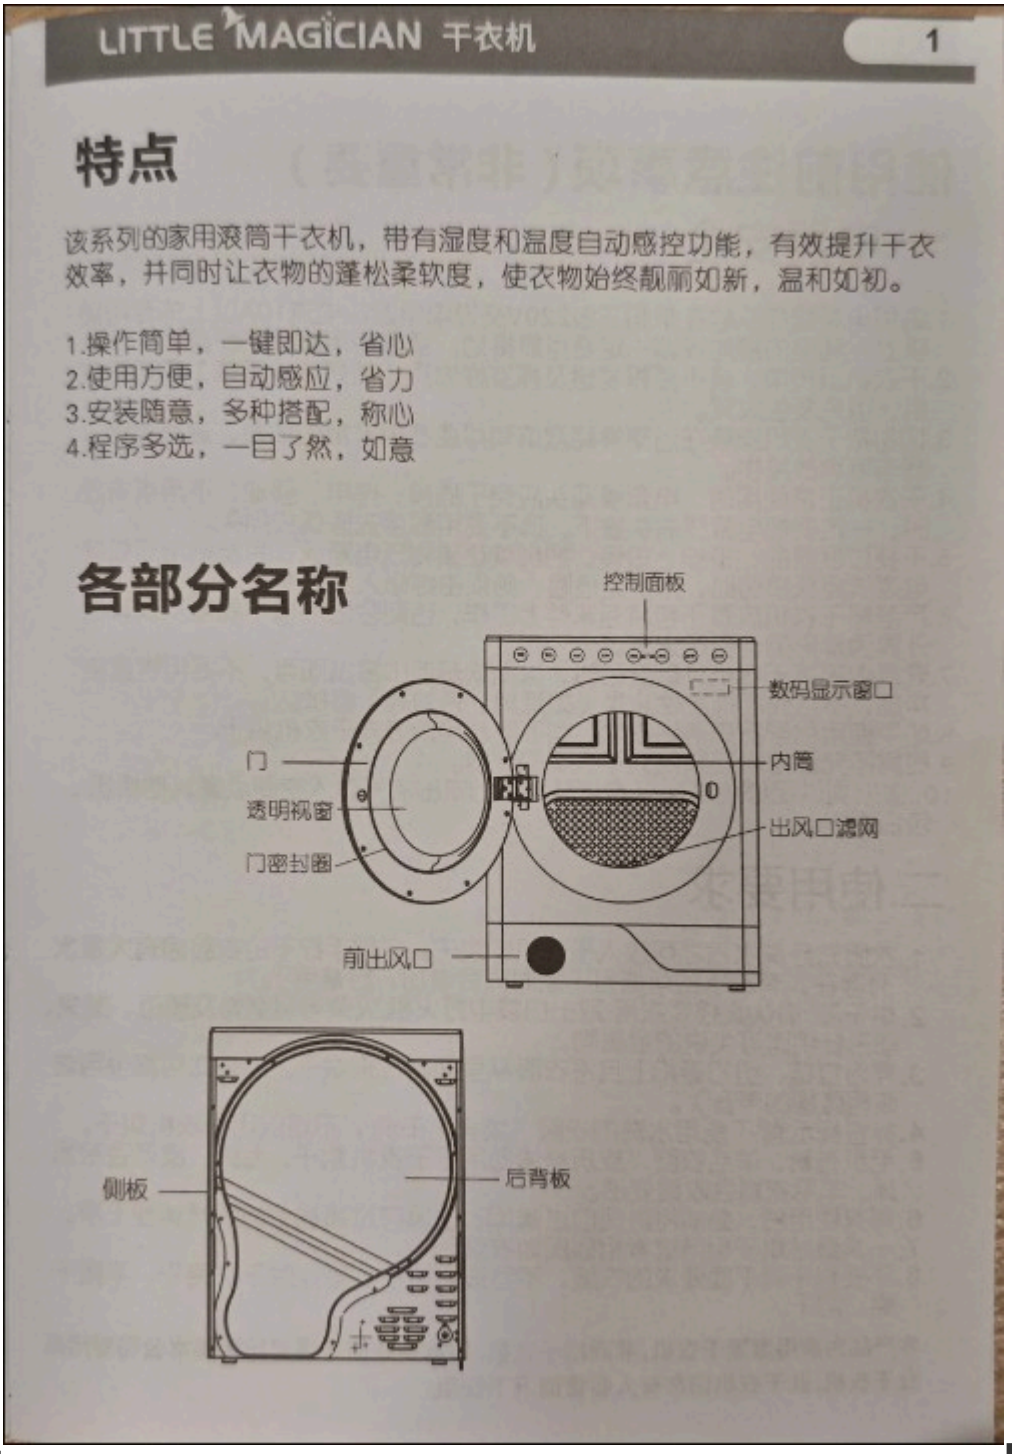

LITTLE MAGICIAN 干衣机 1

特点

该系列的家用滚筒干衣机，带有湿度和温度自动感控功能，有效提升干衣效率，并同时让衣物的蓬松柔软度，使衣物始终靓丽如新，温和如初。

1.操作简单，一键即达，省心
2.使用方便，自动感应，省力
3.安装随意，多种搭配，称心
4.程序多选，一目了然，如意

各部分名称

Fig. 1 — Dryer Parts & Components

- **Top section: Control Panel, Digital Display Window, Inner Drum, Exhaust Air Filter, Door, Transparent Window, Door Seal Gasket, Front Exhaust Vent**

- **Bottom section: Back Panel, Side Panel**

⚠ Important Safety Precautions Before Use

I. Electrical Safety

1. Plug the power cord into a dedicated single-phase three-pin 220V AC power outlet with 10A or above. The grounding wire of the outlet must be reliably grounded. A leakage protector is recommended.
2. Do not place flammable or volatile substances (such as gasoline, alcohol) near the dryer during operation to avoid fire hazards.
3. Do not install the dryer in bathrooms or other damp places where it may be exposed to rain, to prevent electric shock or leakage.
4. The power plug should be easily accessible during normal use. Always unplug when there is a power outage, moving, not in use, or before cleaning. Do not plug or unplug with wet hands.
5. Do not excessively bend, stretch, twist, bundle, or place heavy objects on the power cord. If the power cord or plug is damaged, it must be replaced by a repair technician to avoid danger.
6. Do not place the dryer on packaging foam for operation, as this may cause fire hazards due to poor heat dissipation or other external factors.
7. When cleaning the drum interior or dryer exterior, wipe with a soft damp cloth only. Do not rinse with water directly, and do not use volatile oils (such as alcohol, gasoline) for wiping.
8. If using chemical cleaning products on clothes, do not use the drum dryer to dry them.
9. Lint must not accumulate around the drum dryer.
10. Adequate ventilation must be provided to avoid gases flowing back from the appliance igniting other substances, including open flames.

II. Usage Requirements

1. Clothes must be thoroughly spin-dried before placing in the dryer. (Clothes wrung out by hand still contain large amounts of water, which may leak and increase drying time — avoid this.)
2. Before drying, carefully check clothes and remove lighters, matches, coins, hairpins, paper clips, keys, and other sharp metal objects from pockets.
3. Fasten zippers and buttons, and turn clothes inside out before drying. (This reduces collision sounds with the drum.)
4. Do not dry clothes with care labels stating "do not wash with water" or "dry clean only — do not use dryer."
5. Do not dry woolen, cashmere, leather, or fur items in the dryer — leather and fur will be damaged, wool will shrink and deform.
6. After each use, lint on the intake air filter and exhaust air filter cotton must be cleaned.
7. It is best to dry clothes of the same or similar fabric type together.
8. Do not dry clothes with the following requirements: Do not tumble dry, hang to dry, drip dry, flat dry, or air dry.

⚠ **Note:** This product is a household drum dryer, not for commercial use. For commercial use, please purchase a dedicated commercial dryer from our company. This dryer should be used under supervision.

Installation

The dryer should be placed on a level, sturdy floor, table, or dedicated stand. If used in a narrow space, an exhaust fan can be installed to vent moist air outdoors.

1. Level Positioning

Do not invert the dryer. When placed on a level floor or table, ensure the surface is sturdy, level, and not tilted.

2. Optional Installation — Dryer Stand

When installing the dryer on a stand, the stand must be sturdy and reliable. If floor-mounted, it must be stable with a firm connection between the stand and the wall to ensure stability. (Stand is a non-standard accessory.)

Cleaning & Maintenance

Dryer Body Cleaning

Unplug the power cord before cleaning. Wipe with a soft damp cloth. For stubborn dirt, use kitchen cleaner, then wipe dry with a clean cloth.

⚠ **Caution:** Do not use thinners, gasoline, or alcohol to wipe the body.

Filter Cleaning

⚠ **Important:** Filters must be installed before operating the dryer. Clean after every use. Unplug before cleaning.

1. Removing the filter: Insert fingers into the two holes beside the filter cover center, pull upward.

2. Cleaning lint: Open the filter, clean the filter screen with a brush.

3. Reinstalling filter: Close the filter, align with filter installation opening and insert.

Order: Lower filter → Upper filter → Front filter cover

Interior Cleaning

It is recommended to clean the dryer interior every 20-25 uses. Open the door, remove the filter, insert a vacuum cleaner into the filter installation openings to suck out dust and lint.

☒ Do NOT Dry These Items

Clothes with the following symbols should NOT be placed in the dryer:

- Do not tumble dry
- Hang to dry
- Drip dry
- Flat dry
- Air dry

Control Panel — Original Icons

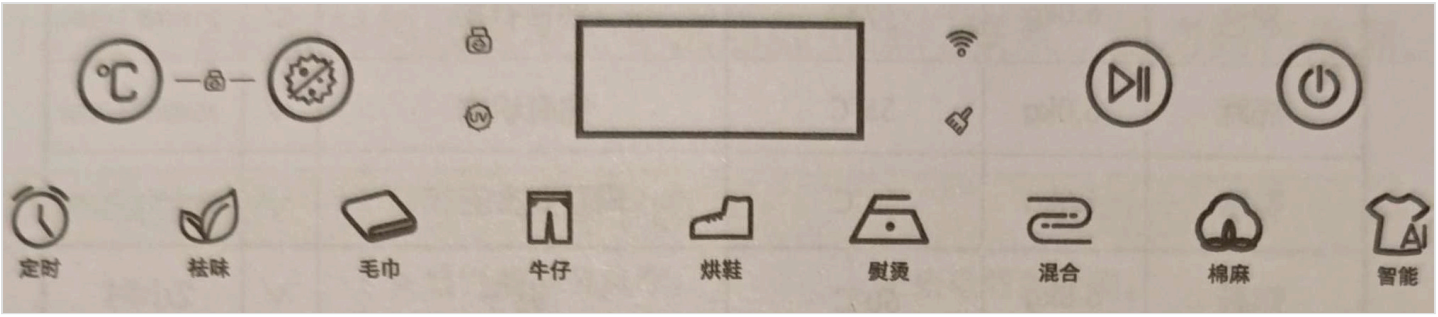

Fig. 2 — Control Panel (as shown in original manual)

Program Buttons (Lower Row) — Press to Select Program

Button	Function
Timer (定☒)	Set custom drying time — cycles through 0:15 → 0:30 → 1:00 → 1:30 → 2:00 → 2:30
Deodorize (祛味)	Remove moisture and odors (no heat)
Towel (毛巾)	For towels
Jeans (牛仔)	For denim / jeans
Shoes (烘鞋)	For shoes (drum does not rotate, hot air only)
Iron Dry (熨☒)	For items needing ironing
Mixed (混合)	For mixed fabrics
Cotton/Linen (棉麻)	For cotton and linen fabrics
Smart (智能)	Auto-sensing intelligent program (default if started without selecting)

Control Buttons (Upper Row)

Button	Function
°C (Temperature)	Select drying temperature: 60°C, 50°C, 40°C, or 0°C (no heat)
Child Lock (童⊠)	Press and hold °C + UV buttons together for 2 seconds to lock/unlock. Display shows padlock icon when active.
UV (紫外⊠)	Toggle UV disinfection lamp on/off. UV indicator flashes when active.
Start/Pause	Start (2-second delay) or pause cycle. Can add/remove clothes when paused — beware of hot steam!
Power	Turn dryer on / off

Display Indicators

- **UV** — Flashes when UV lamp is active
- **Padlock** — Lights up when child lock is engaged
- **Water drop** — Appears when water tank is full or filter needs cleaning
- **WiFi** — Indicates network/smart connectivity status

Operating Instructions

1. Press Power button to turn the dryer on.
2. **Select a program** — Press the corresponding button on the lower row. The indicator light flashes when selected.
3. **Temperature** — When using Timer, press °C to cycle through temperatures. Display shows the selected number.
4. Press Start/Pause to begin. Dryer starts after 2 seconds. Press again to pause, add/remove clothes, then press again to resume. If started without selecting a program, it runs in Smart mode.
5. **Child lock** — While running, hold °C + UV for 2 seconds. Padlock icon lights up. Repeat to unlock.
6. **Auto-tumble (托管)** — If door is not opened after cycle ends, dryer runs 1 minute every 30 minutes (up to 36 hours) to prevent wrinkles.
7. **Shoe drying** — Drum does not rotate; only hot air circulates.
8. **UV light** — Press UV button to toggle lamp on/off.

Program Table

Program	Max Load	Max Temp	Fabric Type	Anti-wrinkle	Max Runtime
Smart	7.0 kg	55°C	Auto-sensing	✓	3 hours (auto-stop when dry)

Mixed	6.0 kg	57°C	Mixed fabrics	✓	3 hours (auto-stop when dry)
Cotton/Linen	5.0 kg	55°C	Cotton / linen	✓	3 hours (auto-stop when dry)
Iron Dry	5.0 kg	50°C	Items needing ironing	✓	3 hours (auto-stop when dry)
Shoes	5.0 kg	60°C	Shoes	✓	2 hours
Jeans	5.0 kg	55°C	Jeans / denim	✓	2 hours
Towel	5.0 kg	60°C	Towels	✓	2 hours
Deodorize	5.0 kg	No heat	Remove moisture / odor	✓	2 hours
Timer	Variable	60 / 50 / 40°C or no heat	Custom (user sets time & temp)	✓	User-set

Troubleshooting

Problem	Possible Cause	Solution
Dryer won't start	Power outage or tripped breaker	Wait for power to restore
	Loose power connection	Check and secure the power connection
	Overloaded with wet clothes	Maximum dry weight: 5.0 kg (wet weight)
	Temperature controller tripped	Call technician to replace temperature controller
Dryer is hot externally or smells hot	Lint filter clogged with debris	Clean lint filter before and after each use
	Exhaust vent or duct blocked	Clear all blockages from exhaust vent
Clothes not drying	Too full	Dry in smaller batches
	Filters clogged, affecting airflow	Clean intake and exhaust filters regularly

	Clothes tangled	Shake out clothes before re-drying
	Machine in cramped, poorly ventilated space	Reposition machine to a well-ventilated area
Excessive wrinkles	Too full	Do not overfill the drum
	Clothes not removed promptly after cycle	Remove clothes immediately when cycle ends
	Clothes not properly sorted	Sort by fabric type before drying
	Temperature set too high	Follow care label instructions
Clothes shrinking	Over-dried	Follow care label instructions. Check shrink-prone items frequently. Remove while slightly damp and hang or lay flat to finish drying
Pilling on clothes	Normal friction with synthetic / permanent-press fabrics	Use fabric softener. Spray starch on collars and cuffs when ironing. Turn clothes inside out to reduce friction

This manual has been translated from Chinese. Original icons and diagrams are preserved from the manufacturer's manual.