


Set up the LAAS app

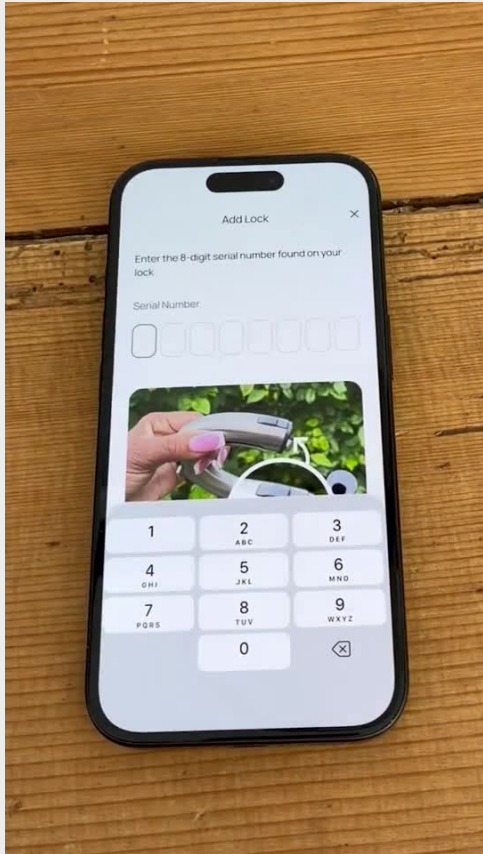

From the LAAS video guide

- 01** Download and open the LAAS app. Allow Bluetooth access when your phone asks.
- 02** Stand beside your lock and enter its 8-digit serial number.
- 03** Give your lock a name and follow the remaining on-screen steps.

No forced login. Optional Apple or Google sign-in lets you recover access on a replacement phone.

Watch the video and read the full guide >

Mount with frame holes



From the LAAS video guide

- 01** Line up the lock brackets with the frame's mounting holes. Choose the bracket holes that give the lock enough height above the tire.
- 02** Insert the supplied M5 screws.
- 03** Align the lock and tighten the screws with a 4 mm hex key.

Use the included M5 screws and a 4 mm hex key (not included). Check tire clearance before riding.

Watch the video and read the full guide >

Fit with Flex Mount



From the LAAS video guide

- 01** Place the metal nuts into the slots inside the Flex Mount brackets. Loosely attach the brackets to the lock with the M5 screws and a 4 mm hex key. Do not tighten yet.
- 02** Gently bend the plastic clamp strips so they will wrap around the frame.
- 03** Wrap the strips around the frame. Insert the plastic screws and tighten slightly with a flathead screwdriver. Leave enough movement to adjust the lock.
- 04** Centre the lock and check the tire clearance. Tighten the M5 screws, then tighten the plastic clamp screws.
- 05** Trim the excess clamp strip with pliers or a knife.

You need Flex Mount, a 4 mm hex key, a flathead screwdriver and pliers or a knife to trim the strips.

Watch the video and read the full guide >

Lock and unlock




From the LAAS video guide

- 01** Lift and rotate the handle until it clicks. The locking bar closes through the wheel.
- 02** To unlock, stand beside the bike, open LAAS and tap Unlock.
- 03** Check that the locking bar is fully open before riding.

If a spoke is in the way, move the wheel. Do not force the mechanism.

Watch the video and read the full guide >

Share access

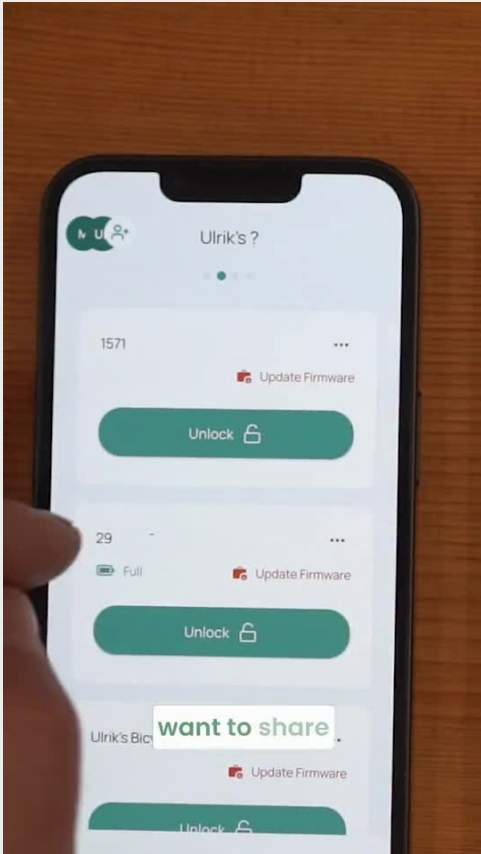

From the LAAS video guide

- 01** Open the lock's sharing controls in the LAAS app.
- 02** Choose Owner or Guest access and add a note to identify the invitation.
- 03** Send the invitation link in a message.
- 04** The recipient opens the link and accepts it in LAAS. They do not have to create an account.

Guest: can unlock. Owner: can also manage access. Revoke an unused invitation or remove a person from the access list.

Watch the video and read the full guide >

Battery and charging



From the LAAS video guide

- 01** Lift the rubber cover over the USB-C port.
- 02** Connect a USB-C charger, laptop or power bank. A phone can also supply power if it supports USB-C power output.
- 03** The LED lights up while charging and switches off when the battery is full.
- 04** Unplug the cable and close the rubber cover.

Do not charge below 2°C. Wait for the LED to switch off; the app battery display can be inaccurate while charging. Roughly six months between charges with normal use.

Watch the video and read the full guide >

Apple Find My



From the LAAS video guide

- 01** Locate the button on the side of your lock and press it three times.
- 02** The LED starts blinking. Pairing mode stays active for ten minutes.
- 03** Open Apple Find My on your iPhone. Go to Items, tap +, then Add Other Item.
- 04** Select Ring-Lock when it appears, tap Connect, and follow the on-screen steps.

Use Find My to locate your bike. Unlock with LAAS. The two apps are set up separately.

Watch the video and read the full guide >

Troubleshooting



From the LAAS video guide

- 01** Press the button. No light? Plug it in and charge it. The battery may be empty.
- 02** Check that nothing is blocking the lock, such as a wheel spoke.
- 03** If it still won't open, contact LAAS Support.

If the problem is a failure of your LAAS lock, keep moving. Keep your receipts and contact us when you can. Support: +45 31 33 82 13 · hello@laas.me

Watch the video and read the full guide >