


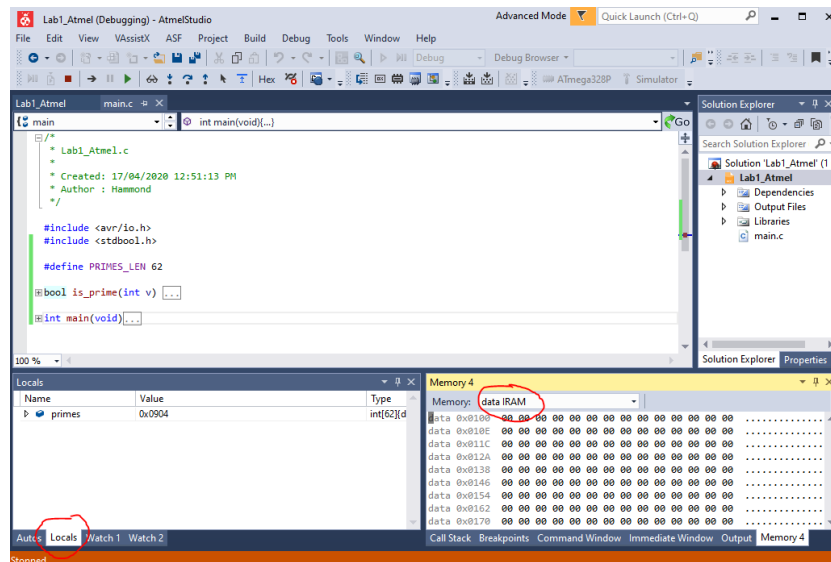

- 11) Press "Continue" (it may take a few minutes to simulate - so be patient):



- 12) Using the memory location given in the "Locals" window (under "Value", e.g. for us 0x0880), find the corresponding memory address in the Memory window. Verify that both of the "Locals" and "Memory" windows show you a list of 62 prime numbers up to 300. Confirm that both windows are actually showing you the same numbers in decimal and hex (we include an example here – note that your memory addresses may differ):

Locals		
Name	Value	Type
primes	0x0880	uint16_t[62](data)@0x0880 ([R28]+7)
[0]	2	uint16_t(data)@0x0880
[1]	3	uint16_t(data)@0x0882
[2]	5	uint16_t(data)@0x0884
[3]	7	uint16_t(data)@0x0886
[4]	11	uint16_t(data)@0x0888

Memory 4		
Memory:	data IRAM	Address: 0x0880,data
data 0x0880	02 00 03 00 05 00 07 00 0b 00 0d 00 11 00 13 00 17 00 1d 00 1f 00 25 00 29	
data 0x0899	00 2b 00 2f 00 35 00 3b 00 3d 00 43 00 47 00 49 00 4f 00 53 00 59 00 61 00	

- 13) While the debugger is running, at the top of the code window you should also see a new Disassembly tab. You may be interested in having a look at this, which shows the assembly code that your C code has compiled to. When you are finished, click "Stop Debugging" to return to your code.

Q P.1: What was the largest number stored in the array, in decimal and in hex?

293

Q P.2: Why did the memory window show a lot of 00 elements between some of the numbers in the array?

for smaller numbers only
one byte is used