



Unidade de controle IEP Technologies – EX8000

- Procedimento de leitura do painel EX8000
 - Não há necessidade de desarmar o painel para realizar a leitura
 - Conectar o cabo USB-B ao painel de controle
 - Abrir o software EX8000-Viewer no Laptop
 - Alterar o idioma para o inglês (Sugestão)
 - Conectar ao painel através do botão na parte inferior esquerda da tela do software
 - Após conectado ao painel, a barra de status ficará verde e com a mensagem de “conectado ao EX8000”

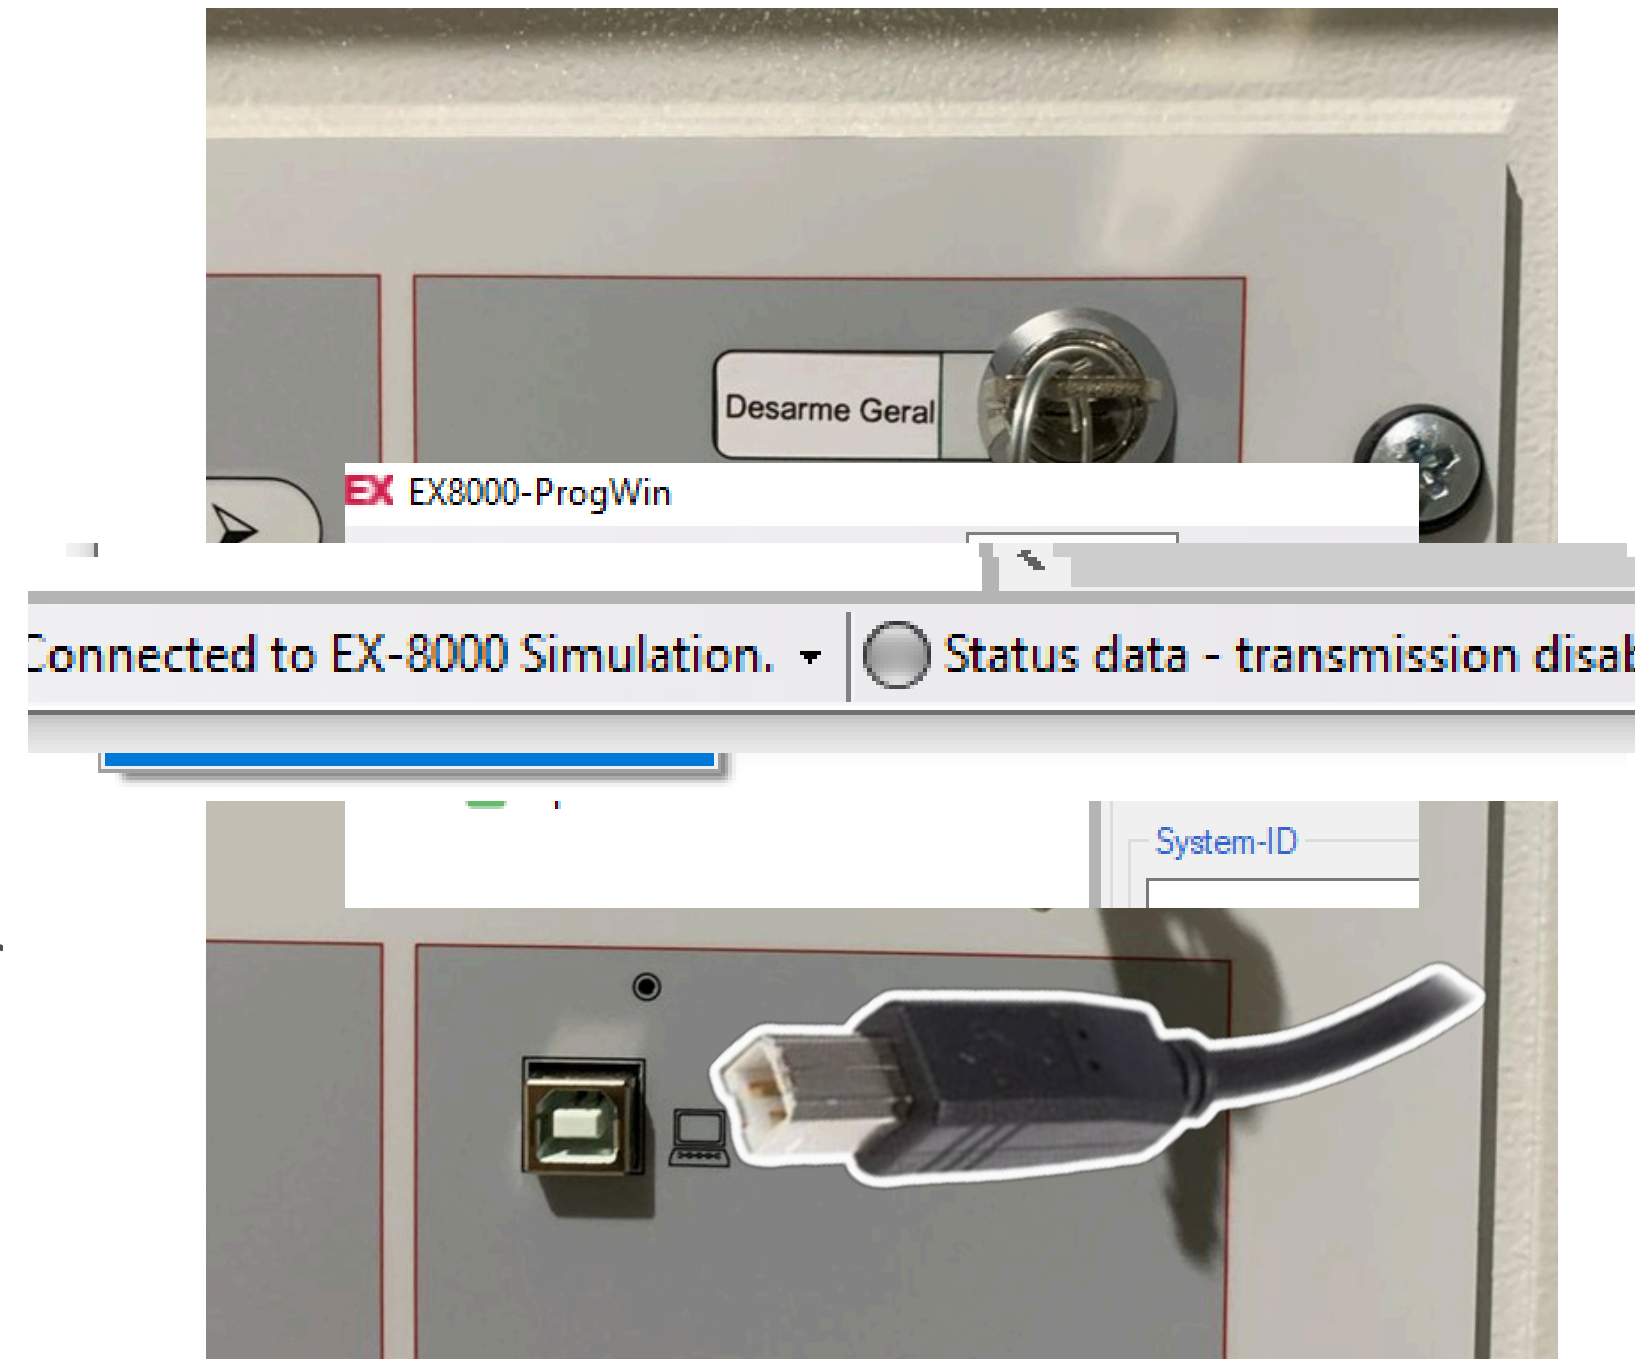

Unidade de controle IEP Technologies – EX8000

- Prodecimento de leitura do painel EX8000
- Clicar em “System” e “Read back” na sequência
- Pop-up de leitura em progresso aparecerá na tela
- Após concluída a leitura clicar em “File” e depois em “Save As” para salvar o arquivo
- Este arquivo salvo que a IEP pede para análise (Extensão .ex8prj)
- Caso desejar abrir o histórico para leitura, clicar em “History” e depois em “Show”
- A janela com a lista do histórico do painel abrirá na tela

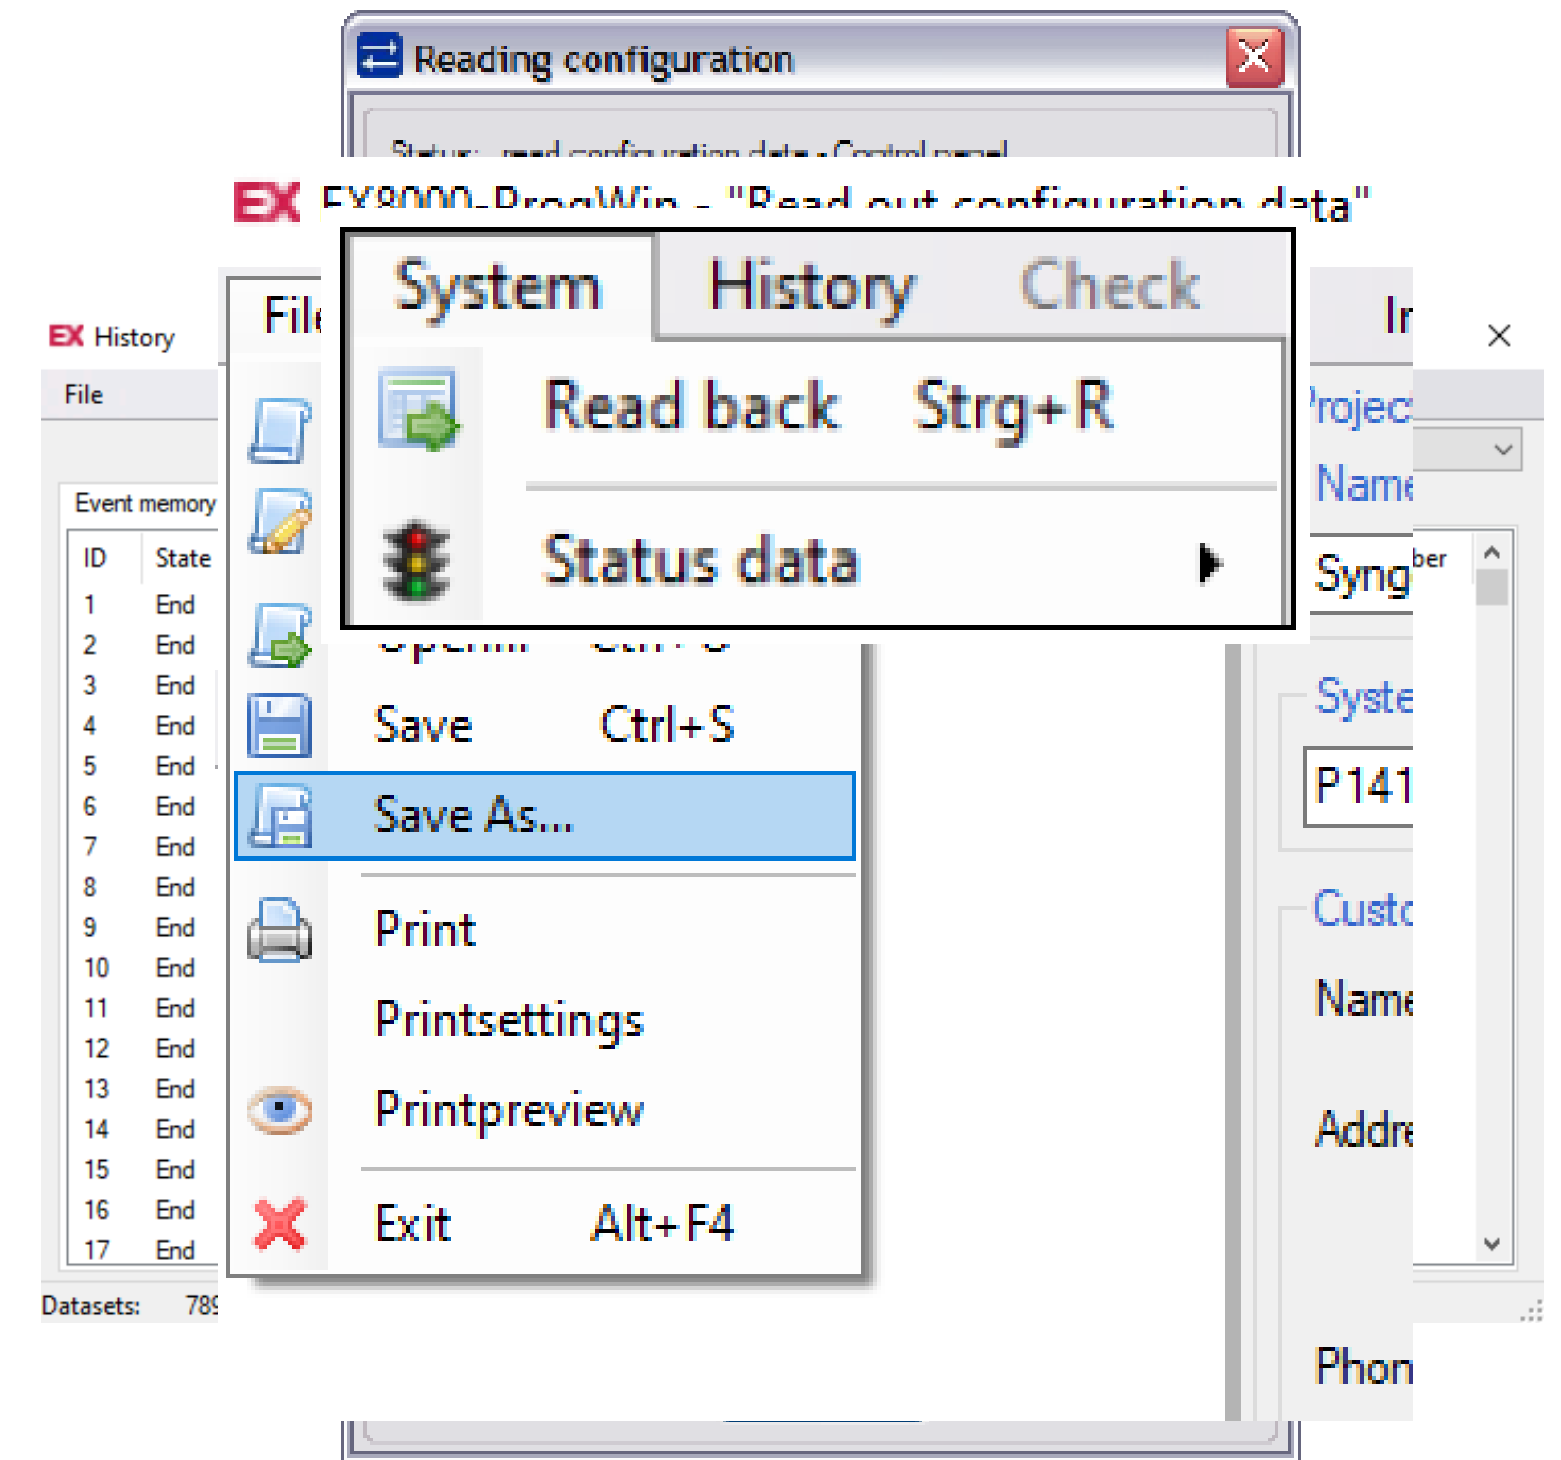

Lista de falhas e alarmes – EX8000

- Páginas 59 à 61 do manual do painel

EX8000 Documentation			
7 Service			
Table 9 lists control unit fault messages and measures of fault elimination.			
 Caution! In case of control unit faults it is recommended to always inform IEP Technologies.			
Message	Mapping	Cause	Measures
Fault Prio 1	Base module	Collective message in addition to other fault messages Single message: hardware fault	Check other fault messages; Check yellow LED "Fault 1 high priority" at control panel and base module → must be on Inform IEP GmbH
General fault (event history)	Base module	Collective message in addition to other fault messages	Check other fault messages; Check yellow LED "Fault 2 low priority" at control panel and base module → must be on
Pre-fault battery	Power supply module	Battery pre-fault; 10 seconds delay time	(Refer to "Battery fault")
Battery fault	Power supply module	Battery not connected Battery discharged (after long power loss)	Check connections between power extension board and both batteries (ensure right polarity!). Check fuses on power extension board. Disconnect batteries and verify voltage between plus and minus clamps.
Pre-fault power	Power supply module	Power pre-fault; 30 seconds delay time	(Refer to "Power fault")
Power fault	Power supply module	Power supply output voltage is out of bounds Mains fuse of 230V supply is defect or released	Check voltage at connection X1 of power extension board (U _{in}) between terminal + and - (21-26V) Check mains fuse / circuit breaker
Fault V extern	Power supply module	External supply voltage of power extension board is out of bounds	Check voltage at connection X12 of power extension board (U _{ext}) between terminal + and - (19-29V)
Power failure	Power supply module	Mains fault is present and battery fault bypass time is expired	(Refer to "Power fault"; "Battery fault")

EX8000 Documentation			
Message	Mapping	Cause	Measures
Ground fault	Power supply module	Wiring ground fault	Localize and eliminate ground fault. Ground faults can occur at internal and external wiring. Most common cause – moisture in connection boxes or at suppressors.
PLC fault	Control input	Invalid signal from PLC	Check PLC status – maybe switched off or failed
Fault ign. circ.	Suppressor	Base board hardware fault	Reset control unit via control panel key; if there is no effect → base board has to be exchanged by IEP service personnel
Capacitor fault	Suppressor	Base board hardware fault	Reset control unit via control panel key; if there is no effect → base board has to be exchanged by IEP service personnel
Fault	Control input	Wiring fault	Ensure correct wiring of cables at connection module screw terminals. Check external connections.
Open circuit	Sensor, Suppressor	Wiring fault	Ensure correct wiring of cables at connection module screw terminals. Check external connections (suppressor disconnected, cable damaged mechanically).
Short circuit	Sensor, Suppressor	Wiring fault	Ensure correct wiring of cables at connection module screw terminals. Check external connections (cable damaged mechanically, moisture in connection boxes).
Drift line res.	Sensor	Wiring fault	Ensure correct wiring of cables at connection module screw terminals. Check external connections (cable damaged mechanically, moisture in connection boxes).
Single alarm	Sensor	A single detector is alarmed as a part of a multi-sensor logic	Reset control unit via control panel key

EX8000 Documentation			
Message	Mapping	Cause	Measures
Fault Input	Sensor	Can occur in relation to detector line short circuit Base board hardware fault	(Refer to short circuit of sensors) Reset control unit via control panel key; if there is no effect → base board has to be exchanged by IEP service personnel
Fault Rev	Control input	Message in disarmed state	(Refer to "Fault")
Open circuit Rev	Sensor	Message in disarmed state	(Refer to "Open circuit")
Short circuit Rev	Sensor	Message in disarmed state	(Refer to "Short circuit")
Drift line Rev	Sensor	Message in disarmed state	(Refer to "Drift line res.")
Single alarm Rev	Sensor	Message in disarmed state	(Refer to "Single alarm")
Fault Input Rev	Sensor	Message in disarmed state	(Refer to "Fault input")
Suppressed	Sensor, Suppressor	Base board controller program fault	Reset control unit via control panel key; if there is no effect → inform IEP Technologies
Fault ign. relay	Suppressor	Base board hardware fault	Reset control unit via control panel key; if there is no effect → base board has to be exchanged by IEP service personnel

Table 9: Troubleshooting measures