



After flashing the Arduino with the code below, open the serial monitor and set it to append *carriage return* only and then set the baud rate to 9600.

Arduino Mega

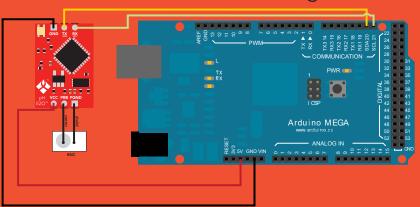

Arduino Uno

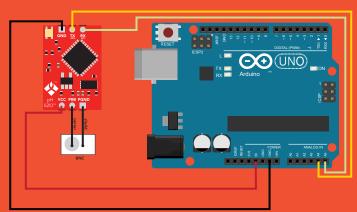

Click here to download the sample code