

How to use the CD player

Enjoy MARTY software

•How to start

MARTY Soft	How to start	
CD-ROM	Set up the CD-ROM	Press the reset button.
CD-ROM+IC card	Set the IC card, then the CD-ROM	
※1 CD-ROM + floppy disk	Set the floppy disk, then the CD-ROM	
※1 Floppy disk	Set the floppy disk	

•About floppy disks

Depending on the software, some software requires a floppy disk (data floppy) to store data. ※1


For information on how to make a data floppy, see page 24.

•When using the MARTY pad as a MARTY mouse


Some MARTY softwares can be operated with a mouse, but with CAR MARTY, you can also use the pad instead of the mouse.

When using the pad instead of the mouse, the pad buttons work as follows.

MARTY Mouse (sold separately)

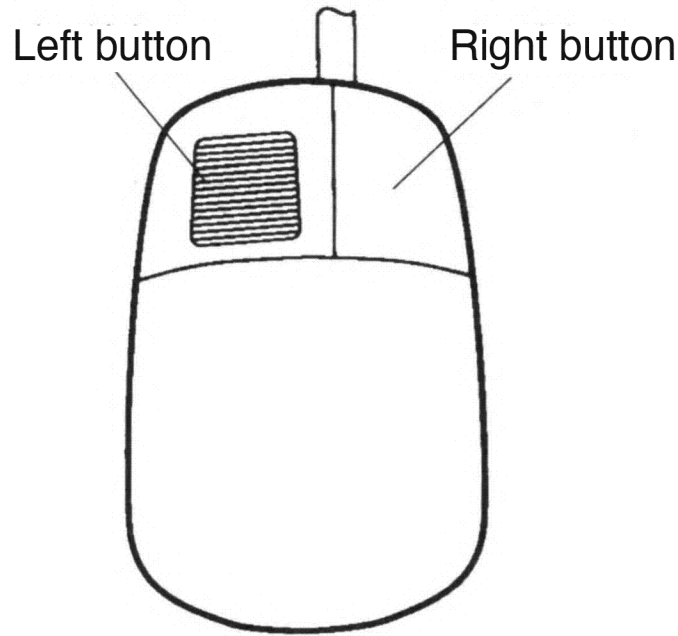

MARTY pad

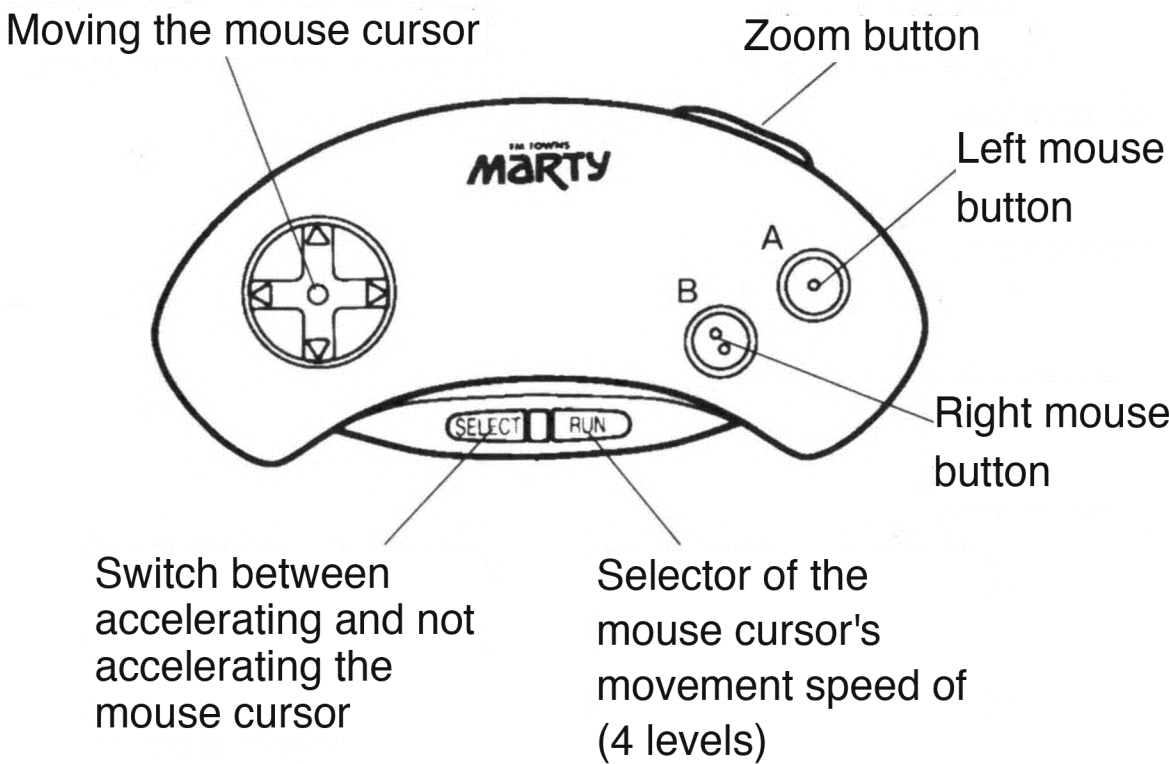

For reference!!

When selecting "Accelerate" with the SELECT button, if you continue to press the mouse movement button, the mouse cursor will move faster and faster.

Attention!!

- ※ 1 •If you want to use a floppy disk, please purchase a separately sold floppy disk drive unit (FDD-1).
- F floppy disk drive units cannot be used in cars.
- When creating data floppies, the floppy discs that can be used are micro floppy discs 2HD or 2DD.