EXTERNAL FLOPPY DISK DRIVE

EFD - 160 / 360
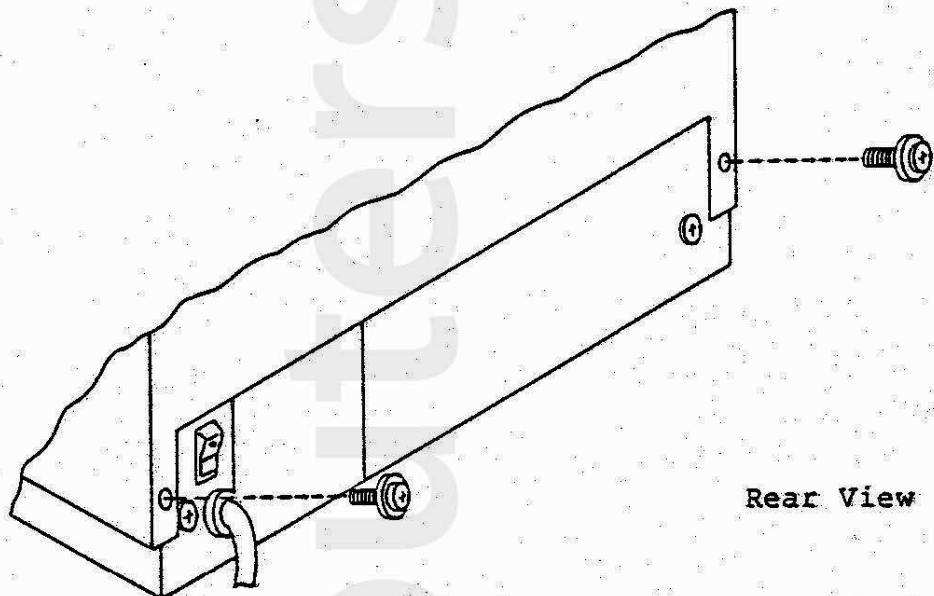
INSTALLATION MANUAL
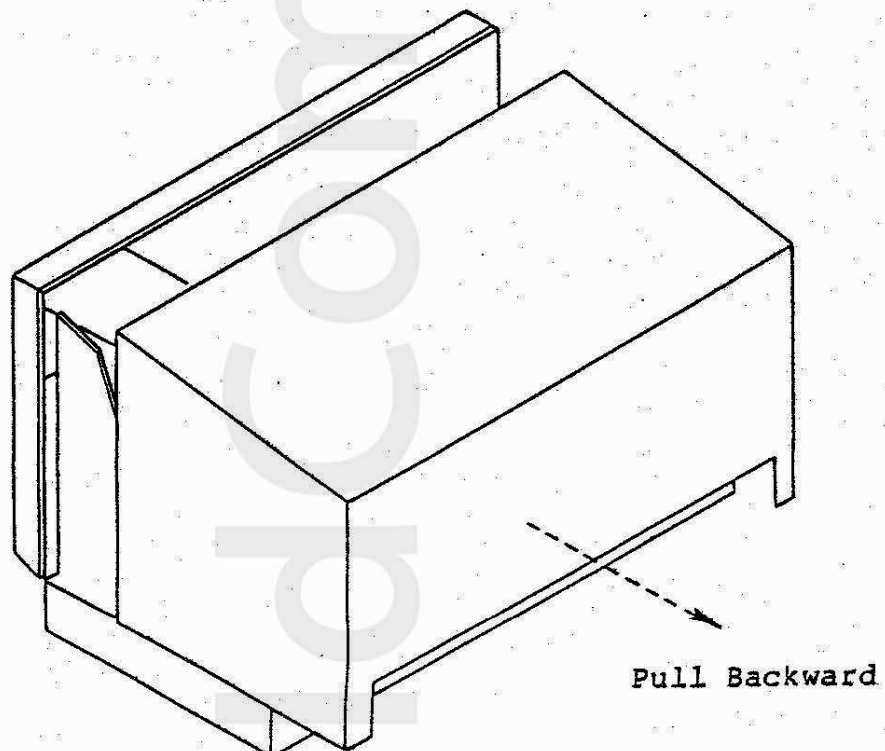
⊘ SANYO

1. Setting the Built-in Floppy Disk Drive
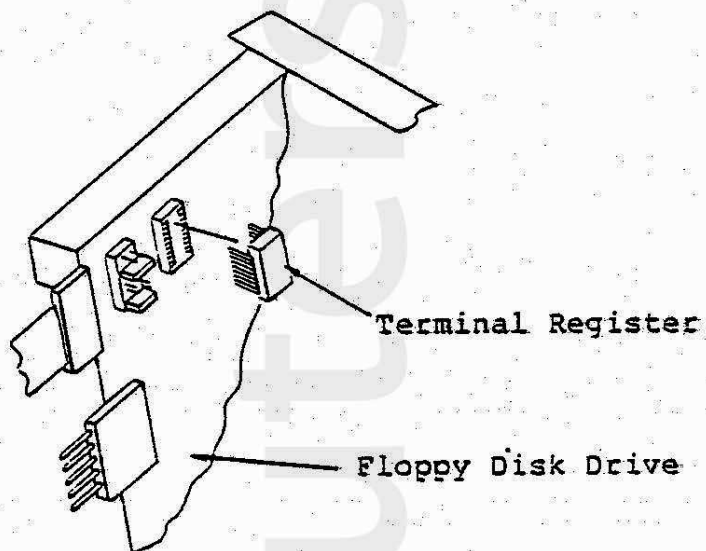
   1) Remove two screws fixing the rear panel of the computer.

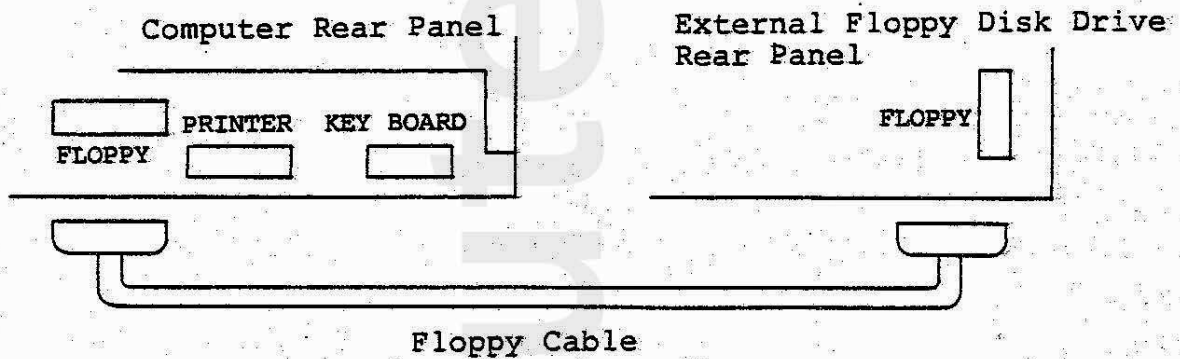Rear View

2) Pull the cabinet backward and remove it.

Pull Backward

1 - 1

3) Pull out the terminal register of the disk drive.
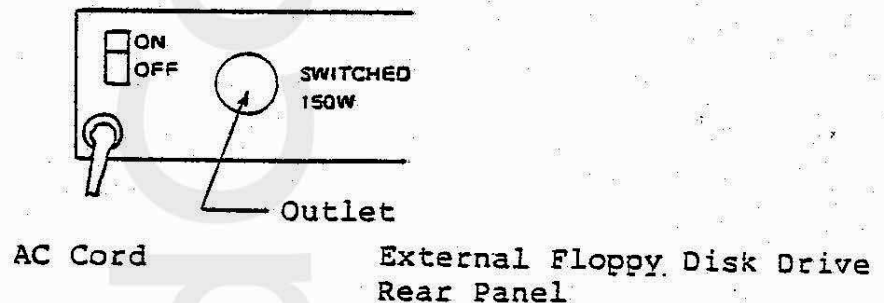
Terminal Register

Floppy Disk Drive

4) Put back the cabinet and fix it with two screws.

2. Connection of the External Floppy Disk Drive

1) Connect the computer and the external floppy disk drive with the floppy cable as follows:
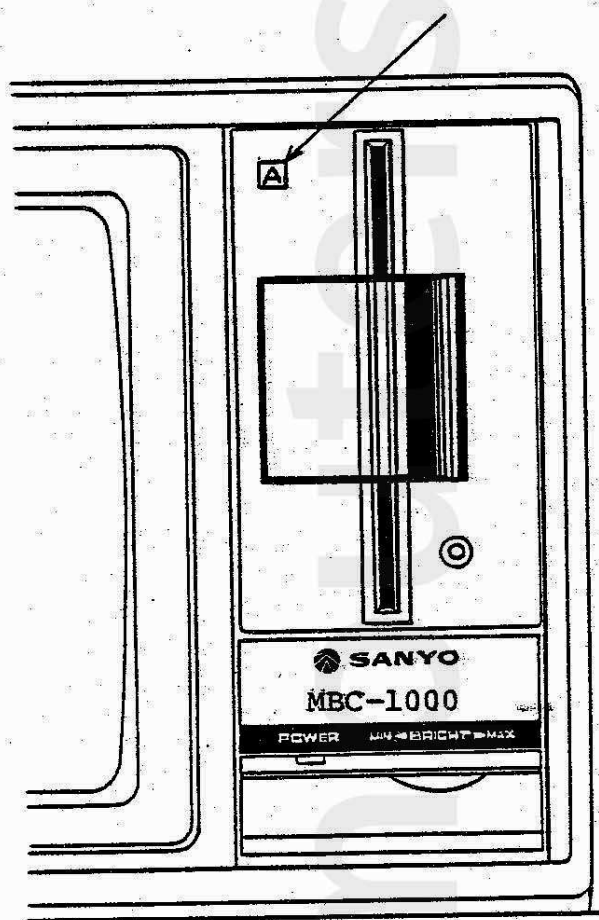
```
        Computer Rear Panel              External Floppy Disk Drive
                                         Rear Panel

     ┌─────┐                                              ┌──┐
     │     │  PRINTER   KEY BOARD             FLOPPY      │  │
     FLOPPY  ┌──────┐   ┌──────┐                          └──┘
             └──────┘   └──────┘

      └─────┐                                        ┌─────┘
            └────────────────────────────────────────┘

                      Floppy Cable
```

2) Put the AC plug of the computer into the outlet of the external floppy disk drive.

```
             ┌───────────────────────┐
             │ ┌┐ ON                  │
             │ └┘ OFF    ╭─╮ SWITCHED │
             │           │ │ 150W     │
             │  ○        ╰─╯          │
             └──│──────────│──────────┘
                │          └── Outlet
             AC Cord          External Floppy Disk Drive
                              Rear Panel
```

3. Labeling

Put the label A on the front of the built-in
floppy disk drive.

SANYO