


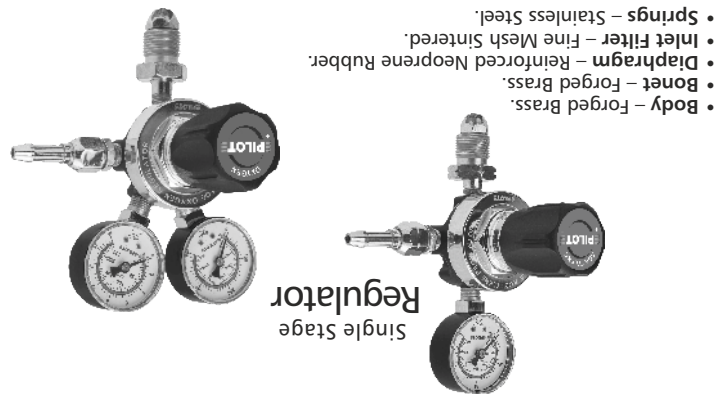

Single Stage Regulator

1. Release the pressure adjusting knob immediately after use to avoid damage of diaphragm. If the regulator is left in "On" position, it may cause permanent deformation to the diaphragm, affecting the functionality of the regulator.
2. Clean the Regulator and store it properly to ensure that dirt, dust do not enter the regulators.

CLOSING THE REGULATOR AFTER USE:

1. Slowly open the cylinder valve of one full turn. No additional leverage is required for key operated valves. If excessive force is required then the cylinder should be replaced from service.
2. Test the regulator inlet joint with detergent water solution for leakages.
3. The safety valve in the regulator automatically releases pressure above 1.5 times of delivered working pressure.
4. In regulators, the inlet and outlet bonnets have relief holes as preventive measure in case of accidental failure.
5. Turn the pressure adjusting knob in a clockwise direction to increase pressure and in an anti-clockwise direction to decrease pressure until the required working pressure is obtained on the outlet pressure meter.

OPERATING THE REGULATOR:

TECHNICAL DATA SHEET

Sr. no.	Models	Gases	Application	Pressure Range		Connections		Max Flow
				Inlet (P1)	Outlet (P2)	Inlet (P1)	Outlet (P2)	Q1
1	GRA - SSSG Single Meter	Dissolved Acetylene (DA)	All Welding, Cutting & Heating Application	0 - 25 Bar	NA	G 5/8" LH MALE	G 3/8" LH MALE	1 M ³ / HR
2	GRA - SSDG Double Meter			0 - 25 Bar	0 - 1.5 Bar	G 5/8" LH MALE	G 3/8" LH MALE	
3	GRO - SSSG Single Meter	Oxygen, Nitrogen, Argon Hydrogen, Air, Helium, Nitrous Oxide & other Compressed Gases	All Welding, Cutting & Heating Application	0 - 150 Bar	NA	G 5/8" RH MALE	G 3/8" RH MALE	30 M ³ / HR
4	GRO - SSDG Double Meter			0 - 150 Bar	0 - 10 Bar	G 5/8" RH MALE	G 3/8" RH MALE	

DO's

- ✓ Regulator should be kept in neat and clean place and free from oil, grease and dust.
- ✓ Cylinder valve should be opened slowly.
- ✓ Set the pressure on the regulator according to the requirement of the job.
- ✓ Gas regulator controls highly pressurised gases, so handle carefully.

DON'T's

- ✗ No oil or greasy substance to be applied on the regulator or the hose pipe. Excessive heat may cause fire.
- ✗ Cylinder valve should not be opened suddenly as sudden high pressure from the cylinder can damage the meters.
- ✗ Do not apply pressure beyond recommended working pressure.
- ✗ Do not handle gas regulator and equipments roughly.

OPERATING INSTRUCTIONS:

1. The cylinder should be placed securely, so that it does not get knocked down. It should be securely supported in a vertical position and the cylinder key should be within the reach of the operator so that he can close the cylinder in case of an emergency.
2. Before fitting a regulator, the valve seating and regulator inlet, should be checked for damage, paint. If any of these are present the regulator should be removed from use.
3. Never change a regulator inlet to be used with another gas.
4. Oxygen and inert gas regulators have connections with right hand threads need to be tightened clockwise, while Fuel gas regulators have left-handed threads to be tightened anti-clockwise.
5. Regulator should be tightened using the correct size spanner. Excess force should not be applied as it can damage the threads.
6. Replace faulty meters immediately, as improper gas pressure indication can be dangerous.
3. Never change a regulator inlet to be used with another gas.

CHECKLIST BEFORE USE:

- ✓ Selection of correct regulator for Gas and Pressure rating is important.
- ✓ Gas pressure has to be released after use. If not released, it may damage the rubber parts.
- ✓ Ensure that the pointer of the meter is at zero when the pressure adjusting knob is unscrewed.
- ✓ Regulator should be always stored in normal ambient temperature.
- ✓ Ensure that regulator and hose pipe should be free from grease oil or any foreign substance. If not it can be dangerous during operation.
- ✓ Ensure the regulator inlet & nut are compatible with the thread of the cylinder and pipeline outlet.
- ✓ Open the cylinder valve slowly and check if the inlet pressure meter indicates the pressure of the cylinder.




Single Stage Regulator

Premium / Eco

INSTRUCTION
MANUAL



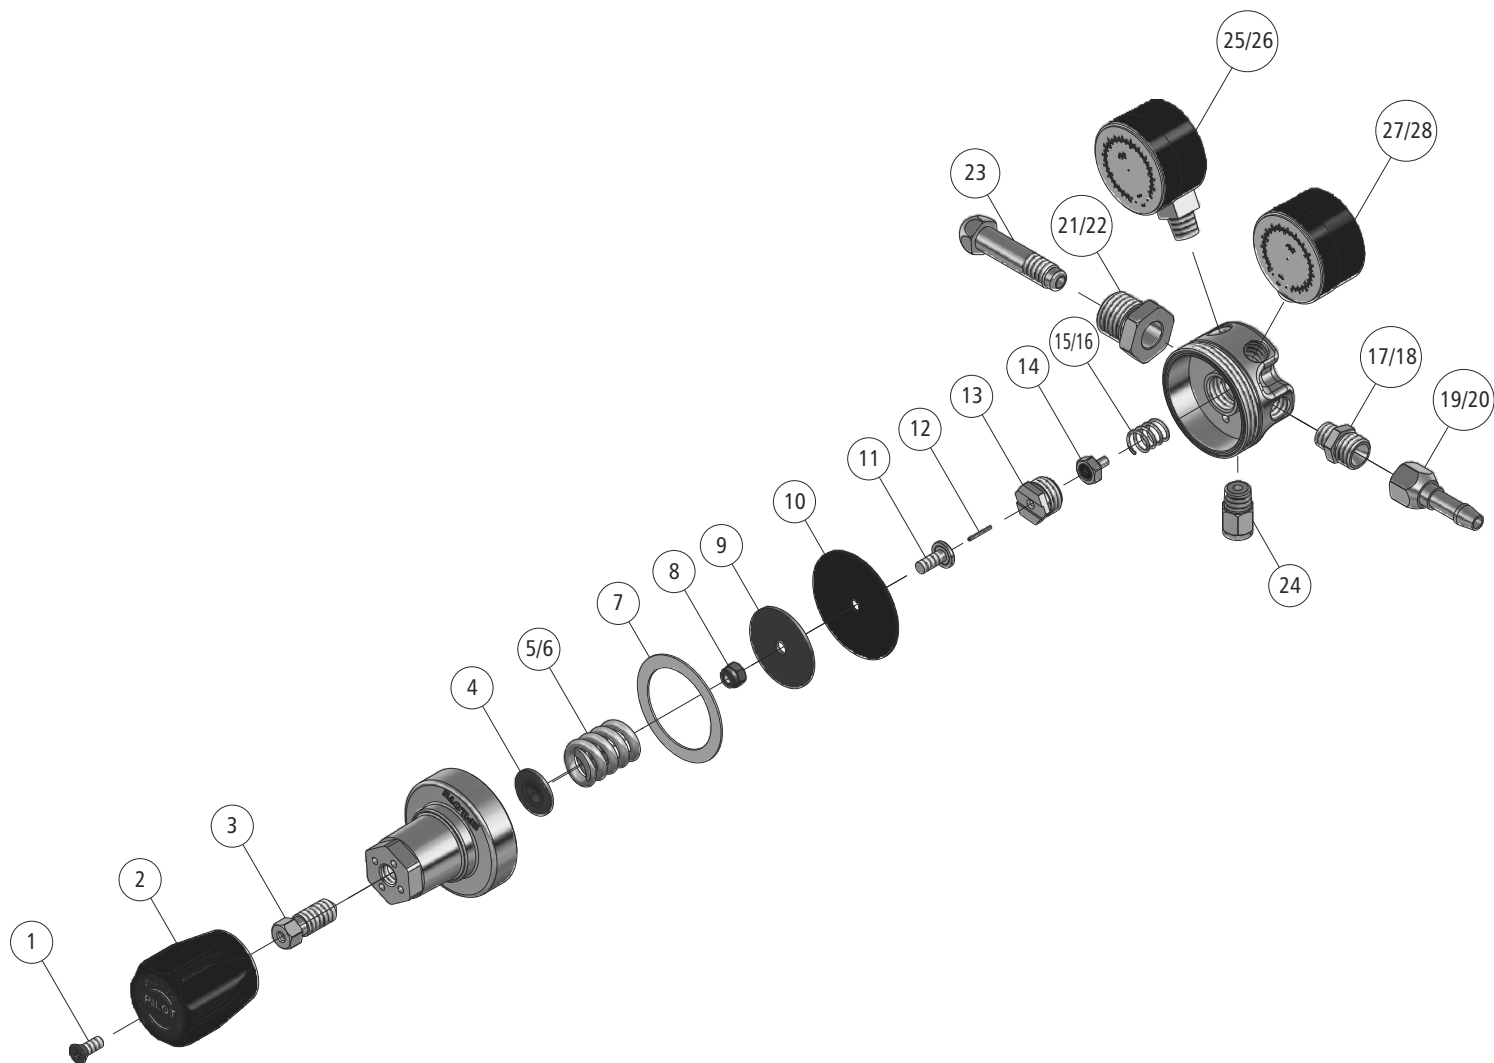

PART LIST

Item no	Title	Sale list	Quantity	SSSGO		SSDGO		SSSGA		SSDGA	
				Premium	Eco	Premium	Eco	Premium	Eco	Premium	Eco
1	CSK SCREW	GRN - 21001	1	✓	✓	✓	✓	✓	✓	✓	✓
2	PRESSURE ADJ KNOB	GRN - 21002	1	✓	✓	✓	✓	✓	✓	✓	✓
3	KNOB BOLT	GRNP- 21003	1	✓	-	✓	-	✓	-	✓	-
3	KNOB BOLT	GRNE - 22003	1	-	✓	-	✓	-	✓	-	✓
4	SPRING CAP (BIG)	GRN - 21005	1	✓	✓	✓	✓	✓	✓	✓	✓
5	TOP SPRING (OXY)	GRO - 21006	1	✓	✓	✓	✓	-	-	-	-
6	TOP SPRING (ACY)	GRA - 21007	1	-	-	-	-	✓	✓	✓	✓
7	GASKET (BIG)	GRNP - 21008	1	✓	-	✓	-	✓	-	✓	-
7	GASKET	GRNE - 22008	1	-	✓	-	✓	-	✓	-	✓
8	DIAPHRAGM NYLOCK NUT	GRN - 21009	1	✓	✓	✓	✓	✓	✓	✓	✓
9	PRESSURE PLATE (BIG)	GRNP - 21010	1	✓	-	✓	-	✓	-	✓	-
9	PRESSURE PLATE	GRNE - 22010	1	-	✓	-	✓	-	✓	-	✓
10	DIAPHRAGM (BIG)	GRNP - 21011	1	✓	-	✓	-	✓	-	✓	-
10	DIAPHRAGM	GRNE - 22011	1	-	✓	-	✓	-	✓	-	✓
11	DIAPHRAGM BOLT	GRN - 21012	1	✓	✓	✓	✓	✓	✓	✓	✓
12	PIN	GRN - 21013	1	✓	✓	✓	✓	✓	✓	✓	✓
13	HEX VALVE BODY	GRN - 21014	1	✓	✓	✓	✓	✓	✓	✓	✓
14	HEX VALVE COMPLETE	GRN - 21015	1	✓	✓	✓	✓	✓	✓	✓	✓
15	VALVE SPRING (OXY)	GRO - 21016	1	✓	✓	✓	✓	-	-	-	-
16	VALVE SPRING (ACY)	GRA - 21017	1	-	-	-	-	✓	✓	✓	✓
17	REDUCER NIPPLE (RH)	GRO - 21018	1	✓	✓	✓	✓	-	-	-	-
18	REDUCER NIPPLE (LH)	GRA - 21019	1	-	-	-	-	✓	✓	✓	✓
19	HOSE CONNECTOR COMPLETE(RH)	GRO - 21020	1	✓	✓	✓	✓	-	-	-	-
20	HOSE CONNECTOR COMPLETE (LH)	GRA - 21021	1	-	-	-	-	✓	✓	✓	✓
21	GAS CONNECTOR NUT (RH)	GRO - 21022	1	✓	✓	✓	✓	-	-	-	-
22	GAS CONNECTOR NUT (LH)	GRA - 21023	1	-	-	-	-	✓	✓	✓	✓
23	GAS CONNECTOR	GRN - 21024	1	✓	✓	✓	✓	✓	✓	✓	✓
24	EXHAUST VALVE BODY COMPLETE	GRO - 21025	1	✓	✓	✓	✓	-	-	-	-
25	PRESSURE GAUGE INLET (OXY)/0- 400 BAR	GRO - 21026	1	✓	✓	✓	✓	-	-	-	-
26	PRESSURE GAUGE INLET (ACY)/0- 40 BAR	GRA - 21028	1	-	-	-	-	✓	✓	✓	✓
27	PRESSURE GAUGE OUTLET (OXY)/0- 16 BAR	GRO - 21027	1	✓	✓	✓	✓	-	-	-	-
28	PRESSURE GAUGE OUTLET (ACY)/0- 2.5 BAR	GRA - 21029	1	-	-	-	-	✓	✓	✓	✓

IMPORTANT: For packing purposes, the pressure adjusting knob of the regulator may be either turned in or packed separately. If installed in the regulator, back out the knob (turn counter clockwise) until it turns freely. If packed separately, install the knob in the regulator cap and turn it (clockwise).