

The PILOT logo is located in the top right corner. It consists of the word "PILOT" in a bold, sans-serif font, flanked by stylized horizontal lines on both sides that suggest motion or a flame.

PILOT



Gas cutting torch

GCT-07


Instruction manual

Check before use


1. Plate thickness refers to mild steel for cutting.
2. Clean the orifices with piece of fine emery cloth at right angle or tip cleaner. you may use a piece of soft copper wire
3. Tip and Nozzle may become dirty after prolonged use so clean it before use.
4. Do not interfere with sealing surfaces either in the nozzle or in the cutting torches nozzle holder.
5. To avoid the Backfire or Sustained back fire always use recommended gas pressure.
6. The preheat flames must furnish just the right amount of heat, and the oxygen jet orifice must deliver the correct amount of oxygen at just the right pressure and velocity to produce a clean cut.

Instructions for safe operation

1. First check that all the gas control knobs on the cutting torches are closed. Then adjust the gas pressure to the suitable thickness of the work piece in accordance with the cutting data.
2. Wear correct eye and body protections.
3. Keep head away from fumes.
4. Keep gas hoses away from flame spatters and red hot material.
5. Do not drop the gas cutting torch or allow heavy objects to fall on it.
6. Ensure grease, oil or other Inflammable fluids are not use in gas supply connections.

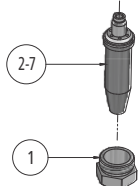

Gas Cutting Torch GCT- 07

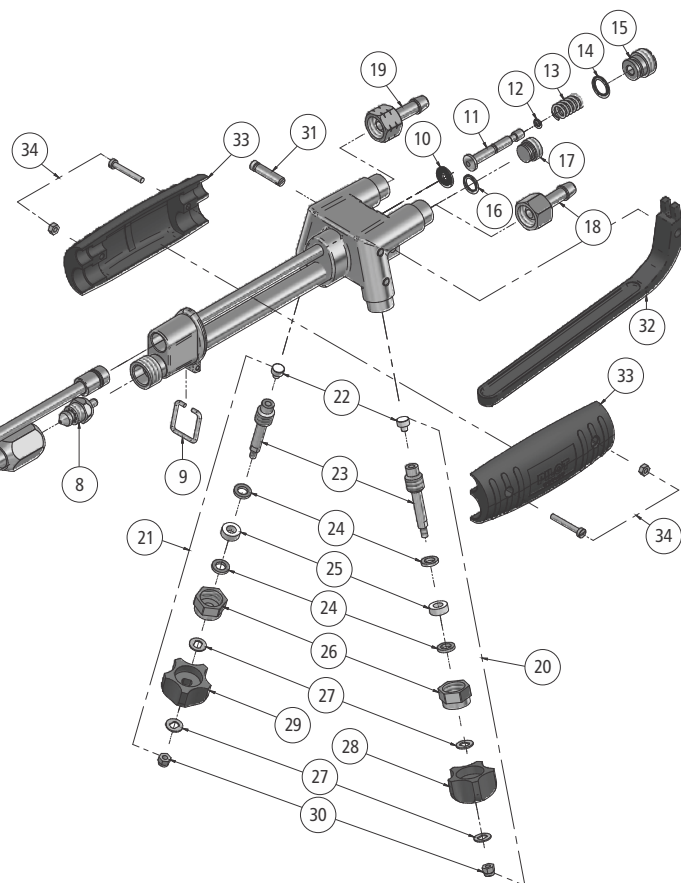

Operating the cutting torches during use

1. The valve of both oxygen and acetylene / LPG gases cylinder should be cracked, opened only slightly and then closed to blow out possible external particles before connecting the regulator.
2. Connect the oxygen Regulator and Acetylene / LPG gases Regulator to the respective cylinder by means of a suitable wrench.
3. Connect the black rubber hose to the oxygen regulator and the red to the acetylene / LPG gases regulator.
4. Connect the other end of the black hose to the oxygen inlet connection of the cutting torch and the other end of the hose to the acetylene / LPG gases inlet connection of the cutting torch.
5. Secure all hose connections with suitable hose clips only.
6. Connect the suitable nozzle and tips as per the job requirement and secure them tightly. Take the guidance from the operating manual provided.
7. Open the acetylene / LPG gases cylinder slowly not more than one and half turns after ensuring that the regulator knob is not applying any pressure.
8. Open the oxygen cylinder slowly and wait till the content pressure gauge registers the full content pressure and then open the cylinder fully.
9. Set the acetylene / LPG gases and oxygen working pressure as per the operating manual provided.
10. Open the acetylene / LPG gases knob of the cutting torch and feel the flow of gas and ignite it using a friction lighter. Open the oxygen knob and adjust both the knobs to get a neutral flame.
11. After use first close the acetylene / LPG gases knob of the cutting torch and then the oxygen knob. Then close the cylinder valves.
12. Release all pressures from the regulator and the hose.

Sr. No.	Discription	Code No.	Sr. No.	Discription	Code No.
1	Nozzle Complete	GCT-0701	17	Control Valve Complete	GCT-0727
2	Nozzle Holder Nut	GCT-0702	18	Control Valve Small Nut	GCT-0727a
3	O Ring for Oxygen Pipe	GCT-0705	19	Black Knob	GCT-0727b
4	Mixer	GCT-0708	19	Red Knob	GCT-0727c
5	Lever Clip	GCT-0710	20	Control Valve Big Nut	GCT-0727d
6	Screw	GCT-0715	21	Brass Washer Thin	GCT-0727e
7	Nut	GCT-0716	22	Teflon Washer	GCT-0727f
8	Handle	GCT-0717	23	Brass Washer Thick	GCT-0727g
9	O Ring for Seal Screw	GCT-0719	24	Control Valve	GCT-0727h
10	Seal Screw	GCT-0720	25	Pressure Release Lever	GCT-0728
11	Rubber Washer	GCT-0721	26	Lever Screw	GCT-0729
12	Spring for Bush	GCT-0722	27	Hose Coupling R/h	GCT-0730
13	O Ring Pressure Valve	GCT-0723	28	Hose Coupling L/h	GCT-0731
14	Pressure Valve	GCT-0724			
15	O Ring for Bush	GCT-0725			
16	Bush	GCT-0726			

TECHNICAL DATA

Nozzle	Oxygen		LPG		Acetylene		Cut (M.S.)	
	bar	psi	bar	psi	bar	psi	mm	inch
1/32"	1.5	20	0.10	1.4	0.15	2	6	1/4"
3/64"	2.0	30	0.10	1.4	0.15	2	12	1/2"
1/16"	3.0	45	0.10	1.4	0.15	2	50	2"
5/64"	4.0	60	0.2	3	0.2	3	100	4"
3/32"	4.0	60	0.2	3	0.2	3	150	6"
1/8"	4.5	65	0.2	3	300	12"		

Uneven flame when cutting torch is used during cutting

1. Set oxygen pressure and acetylene / LPG gases pressure regulator gas flow / gas pressure either to high or too low, adjust by manipulating gas control valves of cutting torch.
2. The Nozzle and Tip orifice has been obstructed.
3. The Nozzle and Tip has became over heated.
4. Slag particals have logged in the Nozzle and Tip orifice during cutting operation.

Precaution

1. Set oxygen and acetylene / LPG gases pressure as per manual.
2. Check the nozzle and tip seal free from dent & scratch marks.
3. In case due to any reason nozzle and tip and holder / shank getting over heated, dip the holder / shank of cutting torch with the nozzle and tip in the water. Reuse the blowpipe safety.

Also available: Gas Torch



Detachable
type nozzle

Swage
type nozzle



Mfd. by:

Rails Engineering Works

21, Balaji Industrial Estate, Hanuman Nagar, Akurli Village,
Kandivali East, Mumbai 400 101 MH. INDIA • Tel.: +91 22 660 47 000