
How to type $3.2 \cdot 10^{-3}$ on each scientific calculator

1970s – early 1980s

fx-80, fx-100, fx-115, fx-3600P

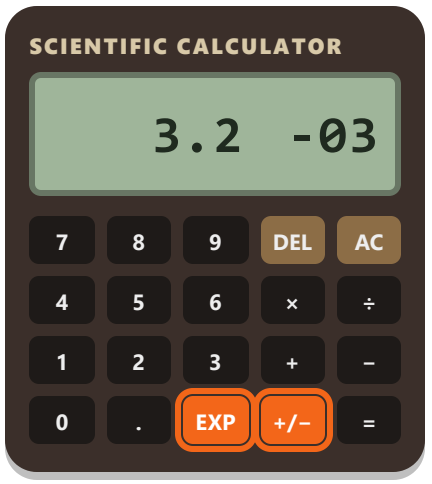


3 . 2 EXP 3 +/−

One-line screen: the exponent appears on the right.

1982 – 1996

fx-82, fx-82A, fx-82B, fx-82L, fx-82SOLAR, fx-82SUPER, fx-82SX

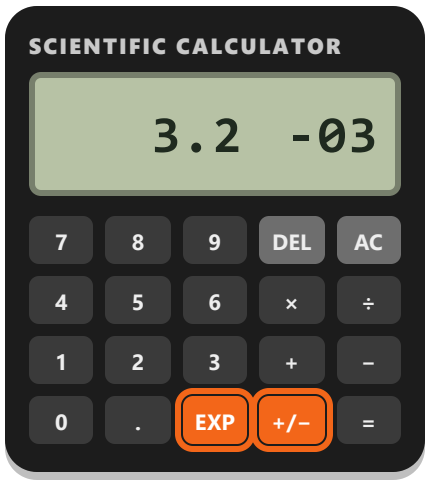


3 . 2 EXP 3 +/−

Same method: the classic school family.

1997 – 2003

fx-82W, fx-82TL, fx-82MS, fx-85MS, fx-350MS, fx-570MS, fx-991MS

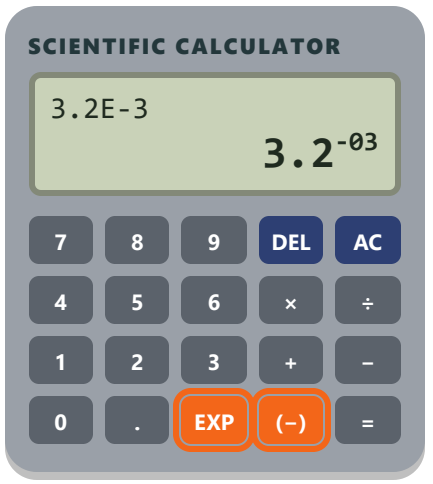


3 . 2 EXP (−) 3

Two lines: “E” on the top line means × 10⋯

2004 – 2014

fx-82ES, fx-85ES, fx-350ES, fx-570ES, fx-991ES (PLUS)

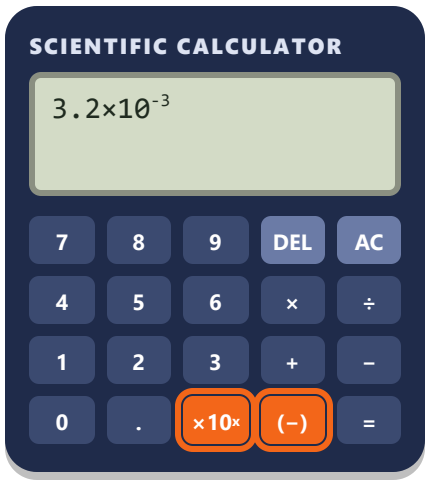


3 . 2 ×10x (−) 3

Natural Display: it is written as in your book.

2015 – 2022

fx-82EX, fx-85EX, fx-350EX, fx-570EX, fx-991EX

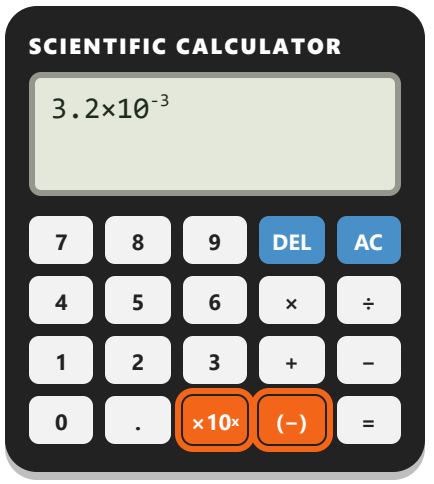


3 . 2 ×10x (−) 3

ClassWiz: high-resolution screen, same keys.

2023 – today

fx-82CW, fx-85CW, fx-350CW, fx-570CW, fx-991CW

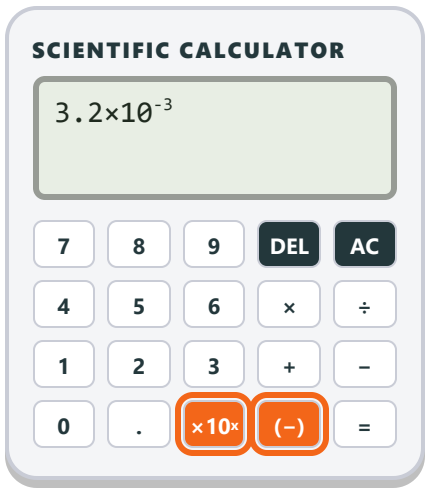

3 . 2 ×10x (−) 3

ClassWiz CW: clearer menus, same idea.

EXP and **×10ˣ** are the same key: it means **“× 10 to the power of”**. Never type “× 1 0” before it!

The minus sign of the exponent: **+/−** goes **after** the number (old models); **(−)** goes **before** it (from 1997).

Simplified drawings: the position of the keys can change from one model to another.