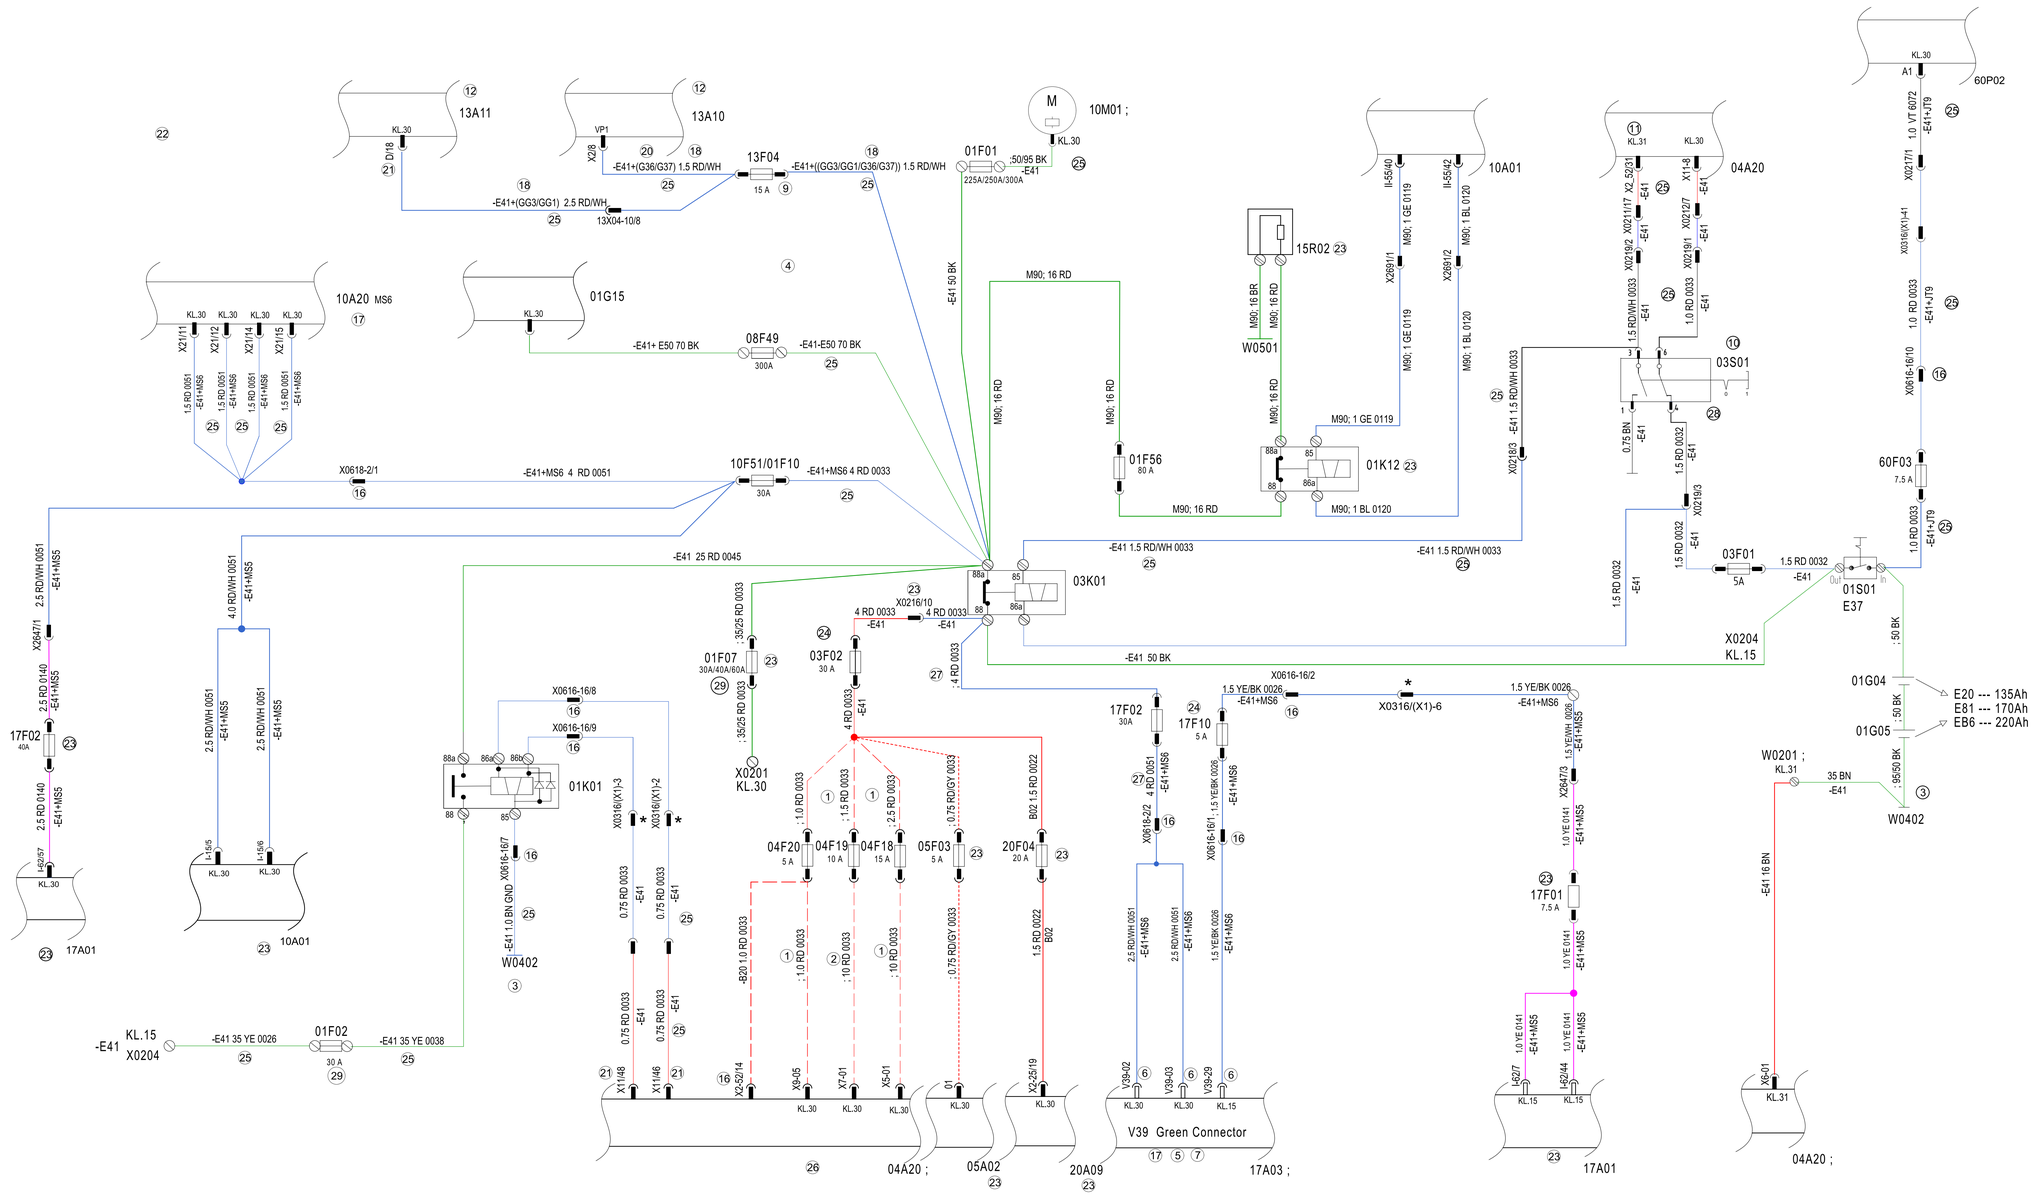

04A20	ASAM Control Unit	04F19	ASAM KL.30 Fuse	01G15	RKM
05A02	Central gateway CGW	04F20	ASAM KL.30 Fuse	01K01	Additional relay terminal KL.15
10A01	Engine control MR control unit	05F03	CAN gateway KL30 fuse	03K01	Main Isolator Switch Relay
10A20	Engine management MCM control unit	08F49	RKM KL.30 Fuse	10K12	Battery disconnect switch relay
13A10	Transmission control module ZF (TCMZ)	10F51	MCM KL.30 Fuse	10M01	Starter Motor
13A11	Transmission control module Voith (TCMV)	10F72	ACM 3 KL.15 Fuse	60P02	Tachograph
15R02	Intake air preheating heating resistor	13F04	Kl.30 Transmission ZF/Voith fuse	01S01	Main Manual Battery Switch
17A01	Frame module selective catalitic reduction (SCR) control unit	15F10	K.I15 Fuel Cuttoff Valve fuse (8)	03S01	Main Isolate Switch
17A03	Exhaust aftertreatment control unit (ACM 3)	17F01	SCR KL.15 fuse (8)	W0201	Ground 1 Main control Panel
01F01	Starter Motor Fuse KL.30 Battery Box	17F02	ACM 3 KL.30 Fuse / SCR KL.30 fuse	W0402	Ground 2 rear
01F02	Main fuse KL.15 (8)	17F10	ACM 3 KL.15 Fuse	X0204	KL.15 Main Distribuitor electric Compartment
01F07	Main Fuse KL.30 Battery Box (8)	20A09	GABS+_Global anti-lock braking system	X0201	KL.30 Main Distribuitor electric Compartment
01F10	MR engine control main fuse	20F04	EBS KL 30 fuse / ABS KL 30 fuse	X0202	Distribuitor Main Control Panel KL30
03F01	Main Security Switch Fuse	60F03	Tachograph/instrument node fuse	65Y02	Fuel Solenoid Valve
03F02	Emergency shutoff KL.30	01G05	Battery 2		
04F18	ASAM KL.30 Fuse	Item	Description		
Item	Description	01G04	Battery 1	Item	Description

* Applicable only for Artic

CODE:
E50-MODULO DE RECUPERACAO DE ENERGIA 24V
E35-CHAVE GERAL DE EMERGENCIA CORRENTE E COMBUSTIVEL
(15) E37-CHAVE ELETRICA GERAL
JT9-TACOGRAFO DIGITAL
GG3-CAIXA DE CAMBIO AUTOMATICO VOITH DIWA 6
(14) GG1-AUTOMATIC GEARBOX VOITH DIWA 6
G36-AUTOMATIC GEARBOX ZF ECOLIFE AP 1220B
(19) G37-AUTOMATIC GEARBOX ZF ECOLIFE AP 2020B
B20-BUS STOP BRAKE
(14) B02-ANTILOCK BRAKING SYSTEM ABS
M90-ELECTRIC HEATING OF INTAKE AIR

18/A3/Change wire area & codes/19/F5/Add codes/20/A3/Deleted Connection /21/E3/Change cavity/22/A1/deleted component/23/d1/add component/24/D4/renamed component/25/A1-D8/updated code/26/F2/Updated table/27/D4/Changed wire area/28/B8/Updated connections/29/E3,D5 Fuses capacity change.	003	BAR2817N11	brclaro 23-06-14	remotta 23-06-14	siehe Smaragd
1/D5/Add area,color & Circuit number/2/D5/Change area/3/C5/Change Reference Name/4/B4/Deleted Fuse 01F20/5/B1/Delete wire & Connector	002	BAR2817N09	jonflor 21-11-16	rcavana 21-11-16	siehe Smaragd

Aenderungsindex / Aenderungsbeschreibung / state of revision / revision text — ZGS — Auftrags-Nr. / order no. — Bearb./auth. Datum/date — Pruef./check Datum/date — Norm/stand. Datum/date

Werkstoff (Endzustand) / material (fi.co.) — Oberfl.sch./surf.prot. DBL — Datum/date — Farbe/color — Bearb./auth. - - — Dekor/decoration MBN 31030 — Pruef./check - - — Oberfl.ang./surf.texture MBN 31007 — Norm/stand. - - — Oberflaeche/surface (m²) — Freig./rel. see Smaragd

Stammdaten/ masterdata: Smaragd — D-Pflicht/required MBN 10317 — Art/type — Anzahl Merkmale/ number of features — VeDoc-Relevanz/relevance MBN 10385 — Anzahl/number of VPD-Ident-Nr./no. — ESD-Kennzeichen/code A0598030 N — DS 0 0 0 0 — DZ 0 0 — federf.Abt./resp.dep. -

Allg. Toleranzen/gen. tolerances — gesetzl.Merkmal/st.ftr. — ZGS - — Auftr.-Nr./order no. -

Referenz-Nr./reference no. — Masse/mass (kg) — Benennung/title: STROMLAUFPLAN — ELECTROTECHNICAL CIRCUIT DIAGRAM — DIST/EMG 300A

Masstab/scale — System/system: NX 1953

Tolerierung/tolerancing

Mercedes-Benz — © Daimler AG — Schutzvermerk DIN ISO 16016 beachten! / Refer to protection notice DIN ISO 16016! — Formatkz. A0 — Blattish. — Sach-Nr./basic number A 384 546 06 00

Keine Aenderung ohne Zustimmung der federführenden Konstruktion. / Any alterations are subject to the approval of the design department.

28 — Letzter Aend-Index / last state of revision

Ab/As of 2019-11-01
Neuer Firmenname
new company name
Daimler Truck AG

1189x841