



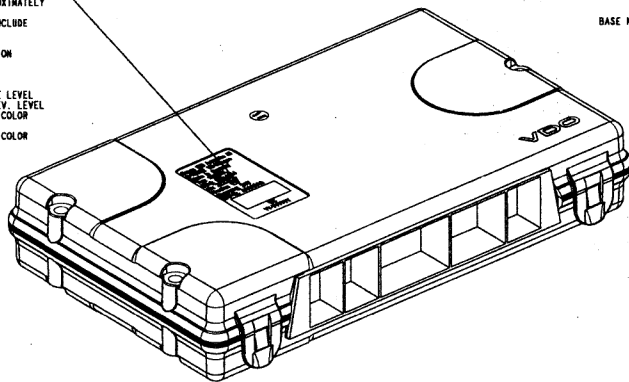

Technical drawing of a vehicle chassis showing a side view of the frame. The frame consists of five rectangular sections labeled 8, 9, 10, 11, and 12. A dimension line on the left indicates a height of 402 ± 0.8 .

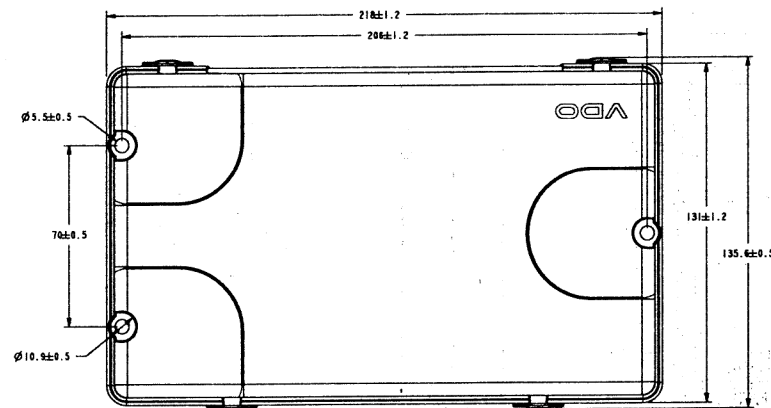


- 1) USE WITH NAMU 2, NAMU 3, NAMU 3.5, OR NAMU 4 INSTRUMENTATION.
- 2) ENGINEERING APPROVAL SUPPLIER:
CONTINENTAL CORPORATION
- 3) GSB-80000003 OR LATEST CONTINENTAL CORPORATION SPECIFICATION
- 4) ACTIVE HIGH INPUTS REQUIRE SYSTEM VOLTAGE TO ACTIVATE.
- 5) ACTIVE LOW INPUTS REQUIRE GROUND TO ACTIVATE.
- 6) NTC INPUTS HAVE HIGH RESISTANCE VALUE FOR LOW TEMP VALUE.
- 7) PTC INPUTS HAVE HIGH RESISTANCE VALUE FOR HIGH TEMP VALUE.
- 8) CONNECTOR LOCATION A: MATES WITH 9-WAY JPT CONNECTOR P20-1183-120
- 9) CONNECTOR LOCATION B: MATES WITH 24-WAY MOS CONNECTOR P20-1172-120
- 10) CONNECTOR LOCATION C: MATES WITH 52-WAY MOS CONNECTOR P20-1172-120
- 11) CONNECTOR LOCATION D: MATES WITH 40-WAY MOS CONNECTOR P20-1172-120
- 12) CONNECTOR LOCATION E: MATES WITH 9-WAY JPT CONNECTOR P20-1183-220
- 13) SPECIFIES SOFTWARE VERSION, SEE BOM.

- 18) BIPOLAR INPUTS ARE BASED AT 1/2 SYSTEM VOLTAGE. INPUT WILL ACTIVATE AT EITHER SYSTEM VOLTAGE OR GROUND.
- 19) TO USE INTEGRATED TERMINATING RESISTOR, CONNECT A JUMPER BETWEEN V-CAN LOW (D38) AND V-CAN LOW T.R. (D40).
- 20) VERSIONS WITH 'OBSOLETE' STATUS ARE SUPERCEDED BY VERSIONS WITH 'PRODUCTION' STATUS. THERE SHALL BE NO VERSIONS WITH THE STATUS 'SERVICE'.
- 21) THIS ANALOG INPUT HAS BEEN RECONFIGURED TO BE USED AS A DIGITAL INPUT
- 22) EMISSION-RELATED PART CODE: D. SEE CPD50374 FOR REQUIREMENTS
- 23) PCIR 3158 APPROVED TO CHANGE INTERNAL VOLTAGE REGULATOR DUE TO PTH
- 24) ALL MODEL 320 VEHICLES WILL BE UPDATED AND RENAMED AS MODEL 520 IN 1997
- 25) NAMEX 2 VEHICLES DO NOT HAVE A C-D CAN WIRED FOR USE. HOWEVER D-CAN MAY BE WIRED MANUALLY TO FLASH THE CECBS.
- 26) PCIR 5132 APPROVED TO CHANGE THE K-LINE TRANSCEIVER AND CRYSTAL OSCILLATOR DUE TO PART TERMINATION NOTICE (PTN)

[illegible]

CONNECTOR A PIN DESCRIPTION						
PIN	NAMUX 4 DESCRIPTION	NAMUX 3, 5 DESCRIPTION	NAMUX 3 DESCRIPTION	NAMUX 2 DESCRIPTION	PLC NAME IN CONFIGURATION MANAGER	NOTES
A01	CVSG POWER	CVSG POWER	CVSG POWER	CVSG POWER	OUT_03.61.HS	OUTPUT, ACTIVE HIGH (1, 02A)
A02	CECU POWER (BATT) #1	INPUT POWER 1	INPUT POWER 1	INPUT POWER 1		CECU 3 INPUT POWER #1, 15A FUSE PROTECTION REQUIRED.
A03	DOME LAMP OUTPUT	DOME LAMP	DOME LAMP	DOME LAMP	OUT_04.62.HS	OUTPUT, ACTIVE HIGH, PWR (5A)
A04	MCS POWER	MCS POWER	MCS POWER	MCS POWER	OUT_03.61.HS	SHORTED TO A01 (SEE ABOVE).
A05	GND	GND	GND	GND		CECU 3 GROUND.
A06	MCS GND	MCS GND	MCS GND	MCS GND		MCS GROUND.
A07	DASH ILLUMINATION 1	DASH ILLUMINATION 1	DASH ILLUMINATION 1	DASH ILLUMINATION 1	OUT_01.61.HS	OUTPUT, ACTIVE HIGH, PWR (4A).
A08	DASH ILLUMINATION 2	DASH ILLUMINATION 2	DASH ILLUMINATION 2	DASH ILLUMINATION 2	OUT_02.62.HS	OUTPUT, ACTIVE HIGH, PWR (4A).
A09	CECU POWER (BATT) #2	INPUT POWER 2	INPUT POWER 2	INPUT POWER 2		CECU 3 INPUT POWER #2, 15A FUSE PROTECTION REQUIRED.

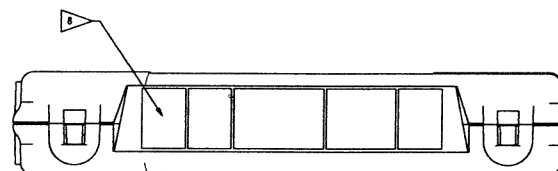


USAGE NOTE:
USE WITH NAMUX 2, NAMUX 3, NAMUX 3.5, OR NAMUX 4 INSTRUMENTATION.

USAGE NOTE:
USE WITH NAMUX 2, NAMUX 3, NAMUX 3.5, OR NAMUX 4 INSTRUMENTATION.


CONNECTOR B PIN DESCRIPTION

PIN	NAMUX 4 DESCRIPTION	NAMUX 3.5 DESCRIPTION	NAMUX 3 DESCRIPTION	NAMUX 2 DESCRIPTION	PLC NAME IN CONFIGURATION MANAGER	NOTES
B01	MCS A	MCS A	MCS A	MCS A	MCS_LEFT	MCS LEFT
B02	MCS B	MCS B	MCS B	MCS B	MCS_RIGHT	MCS RIGHT
B03	MCS ENTER SWITCH	MCS ENTER	MCS ENTER SWITCH	MCS ENTER SWITCH	MCS_ENTER	MCS ENTER
B04	EXTERIOR LIGHTING SELF TEST SWITCH	PASSENGER DOOR JAMB	PASSENGER DOOR JAMB SWITCH	PASSENGER DOOR JAMB SWITCH	IN_D16_32	DIGITAL INPUT, ACTIVE HIGH, WAKE-UP (ONA)
B05	START (CRANK) KEYSWITCH	OVERCRANK SIGNAL	IGNITION INPUT (START)	BRAKE SWITCH INPUT	IN_D16_33	DIGITAL INPUT, ACTIVE HIGH (ONA)
B06	DOME LAMP INPUT	LYD ALARM INPUT	DOME LAMP SWITCH	DOME LAMP SWITCH	IN_D16_34	DIGITAL INPUT, ACTIVE HIGH, WAKE-UP (ONA)
B07	SEAT BELT SWITCH	DRIVER SEAT OCCUPANCY / SEAT BELT	SEAT BELT SWITCH	SEAT BELT SWITCH	IN_D16_35	DIGITAL INPUT, ACTIVE LOW (ONA)
B08	CRUISE SET SWITCH	CRUISE SET	CRUISE SET SWITCH	CRUISE SET SWITCH	IN_D16_36	DIGITAL INPUT, ACTIVE LOW (ONA)
B09	CRUISE RESUME SWITCH	CRUISE RESUME	CRUISE RESUME SWITCH	CRUISE RESUME SWITCH	IN_D16_37	DIGITAL INPUT, ACTIVE LOW (ONA)
B10	BACK UP ALARM MUTE SWITCH	SPARE	BACK UP ALARM MUTE SWITCH	DUAL STEER TRIGGER (PS 320/328 ONLY)	IN_D16_38	DIGITAL INPUT, ACTIVE LOW (ONA)
B11	RETARDER SELECT 1	RETARDER SELECT 1	RETARDER SELECT 1	RETARDER SELECT 1	IN_D16_39	DIGITAL INPUT, ACTIVE LOW (ONA)
B12	RETARDER SELECT 2	RETARDER SELECT 2	RETARDER SELECT 2	RETARDER SELECT 2	IN_D16_40	DIGITAL INPUT, ACTIVE LOW (ONA)
B13	CLUTCH SWITCH	CLUTCH SWITCH	CLUTCH SWITCH	CLUTCH SWITCH	IN_D16_41	DIGITAL INPUT, ACTIVE LOW (ONA)
B14	PARK LAMP SWITCH	HEADLAMP ACTIVE	HEADLAMP SWITCH	HEADLAMP ACTIVE	IN_D16_42	DIGITAL INPUT, ACTIVE LOW, WAKE-UP (ONA)
B15	REMOTE SET SWITCH	REMOTE SET SWITCH	REMOTE SET SWITCH	REMOTE SET SWITCH	IN_D16_43	DIGITAL INPUT, ACTIVE LOW (ONA)
B16	REMOTE RESUME SWITCH	REMOTE RESUME SWITCH	REMOTE RESUME SWITCH	REMOTE RESUME SWITCH	IN_D16_44	DIGITAL INPUT, ACTIVE LOW (ONA)
B17	ENGINE FAN OVERRIDE SWITCH	ENGINE FAN OVERRIDE	ENGINE FAN OVERRIDE SWITCH	ENGINE FAN OVERRIDE SWITCH	IN_D16_45	DIGITAL INPUT, ACTIVE LOW (ONA)
B18	FORCE REGENERATION SWITCH	FORCE REGENERATION SWITCH	FORCE REGENERATION SWITCH	FORCE REGENERATION SWITCH	IN_D16_46	DIGITAL INPUT, ACTIVE LOW (ONA)
B19	INHIBIT REGENERATION SWITCH	INHIBIT REGENERATION SWITCH	INHIBIT REGENERATION SWITCH	INHIBIT REGENERATION SWITCH	IN_D16_47	DIGITAL INPUT, ACTIVE LOW (ONA)
B20	ABS OFF ROAD SWITCH	SPARE	ABS OFF ROAD SWITCH	SPARE	IN_D16_48	DIGITAL INPUT, ACTIVE LOW (ONA)
B21	CAB MARKER/CLEARANCE LAMP SWITCH	SPARE	CAB MARKER/CLEARANCE LAMP SWITCH	SPARE	IN_D16_49	DIGITAL INPUT, ACTIVE LOW WAKE-UP (ONA)
B22	KEY IGNITION SWITCH / TRANSFER CASE INPUT	MCS BACK BUTTON	LYD INPUT	LYD INPUT	IN_D16_50	DIGITAL INPUT, ACTIVE HIGH (ONA)
B23	TRANSFER CASE INPUT	TRANSFERCASE ENGAGED INPUT	TRANSFERCASE ENGAGED SWITCH	TRANSFERCASE ENGAGED SWITCH	IN_D16_51	DIGITAL INPUT, ACTIVE LOW (ONA)
B24	PASS SEAT OCCUPANCY / SEAT BELT	PASS SEAT OCCUPANCY / SEAT BELT	PASS SEAT OCCUPANCY / SEAT BELT	PASS SEAT OCCUPANCY / SEAT BELT	IN_D16_52	DIGITAL INPUT, ACTIVE LOW (ONA)

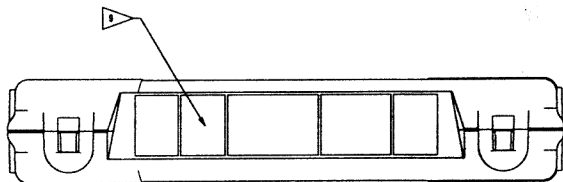

USAGE NOTE:
USE WITH NAMUX 2, NAMUX 3, NAMUX 3.5, OR NAMUX 4 INSTRUMENTATION.


CONNECTOR C PIN DESCRIPTION						
PIN	NAMUX 4 DESCRIPTION	NAMUX 3.5 DESCRIPTION	NAMUX 3 DESCRIPTION	NAMUX 2 DESCRIPTION	PLC NAME IN CONFIGURATION MANAGER	NOTES
C01	ANALOG SENSOR POWER SUPPLY	ANALOG SENSOR POWER SUPPLY	ANALOG SENSOR POWER SUPPLY	ANALOG SENSOR POWER SUPPLY	OUT_ANA_PWR	POWER OUTPUT, ACTIVE HIGH, (5V @ 350MA)
C02	ANALOG SENSOR RETURN	ANALOG SENSOR RETURN	ANALOG SENSOR RETURN	ANALOG SENSOR RETURN		SENSOR GROUND
C03	ELECTRIC OVER AIR SWITCH #1 (ACTIVE LOW)	PTO OIL PUMP	SPARE	PTO OIL TEMP	IN_ANA.20	ANALOG INPUT, RESISTIVE, RNTC (22K-100K Ω)
C04	K-LINE (NOT USED)	K-LINE	K-LINE (NOT USED)	K-LINE	IN_ANA.01	RP=100K Ω
C05	HOOD TILT SWITCH	SPARE	DIMMER	DIMMER	IN_ANA.02	ANALOG INPUT, RESISTIVE, (390-1390 Ω)
C06	PRIMARY AIR SUPPLY	PRIMARY AIR SUPPLY	PRIMARY AIR SUPPLY	PRIMARY AIR SUPPLY	IN_ANA.03	ANALOG INPUT, VOLTAGE (0-5V)
C07	SECONDARY AIR SUPPLY	SECONDARY AIR SUPPLY	SECONDARY AIR SUPPLY	SECONDARY AIR SUPPLY	IN_ANA.04	ANALOG INPUT, VOLTAGE (0-5V)
C08	APPLICATION AIR/SERVICE BRAKE	APPLICATION AIR/SERVICE BRAKE	APPLICATION AIR/SERVICE BRAKE	APPLICATION AIR/SERVICE BRAKE	IN_ANA.05	ANALOG INPUT, VOLTAGE (0-5V)
C09	GAUGE 1 OR KWA TRAILER AIR SENSOR	AMMETER	SPARE	AMMETER	IN_ANA.06	ANALOG INPUT, VOLTAGE (0-5V)
C10	AIR FILTER RESTRICTION	AIR FILTER RESTRICTION	AIR FILTER RESTRICTION	AIR FILTER RESTRICTION	IN_ANA.07	ANALOG INPUT, VOLTAGE (0-5V)
C11	GAUGE SENSOR 2/ KWA REAR SUSPENSION AIR PRESSURE	FUEL FILTER RESTRICTION	SPARE	FUEL FILTER RESTRICTION		
C12	DIMMER UP SWITCH (ACTIVE LOW)	FUEL LEVEL 1	SPARE	FUEL LEVEL 1	IN_ANA.08	ANALOG INPUT, RESISTIVE (0 Ω -250K Ω)
C13	DIMMER DOWN SWITCH (ACTIVE LOW)	SPARE	SPARE	FUEL LEVEL 2	IN_ANA.09	ANALOG INPUT, RESISTIVE (0 Ω -250K Ω)
C14	CVSS DATA	CVSS DATA	CVSS DATA	CVSS DATA		CVSS DATABASE (PROPRIETARY, SERIAL)
C15	CVSS GND	CVSS GND	CVSS GND	CVSS GND	IN_ANA.10	GROUND
C16	OUTSIDE AIR TEMP	OUTSIDE AIR TEMP	OUTSIDE AIR TEMP	OUTSIDE AIR TEMP	IN_ANA.11	ANALOG INPUT, RESISTIVE, RNTC (22K-100K Ω)
C17	ELECTRIC OVER AIR SWITCH #3 (ACTIVE LOW)	AXLE TEMP, FRONT	SPARE	AXLE TEMP, FRONT	IN_ANA.12	ANALOG INPUT, RESISTIVE, RNTC (22K-100K Ω)
C18	ELECTRIC OVER AIR SWITCH #4 (ACTIVE LOW)	AXLE TEMP, REAR	SPARE	AXLE TEMP, REAR	IN_ANA.13	ANALOG INPUT, RESISTIVE, RNTC (22K-100K Ω)
C19	ELECTRIC OVER AIR SWITCH #5 (ACTIVE LOW)	AXLE TEMP, CENTER/STEER	SPARE	AXLE TEMP, CENTER/STEER	IN_ANA.14	ANALOG INPUT, RESISTIVE, RNTC (22K-100K Ω)
C20	ELECTRIC OVER AIR SWITCH #6 (ACTIVE LOW)	GENERAL OIL TEMP	SPARE	GENERAL OIL TEMP	IN_ANA.15	ANALOG INPUT, RESISTIVE, RNTC (22K-100K Ω)
C21	TRANSMISSION OIL TEMP	TRANSMISSION OIL TEMP	TRANSMISSION OIL TEMP	TRANSMISSION OIL TEMP	IN_ANA.16	ANALOG INPUT, RESISTIVE, RNTC (22K-100K Ω)
C22	ELECTRIC OVER AIR SWITCH #7 (ACTIVE LOW)	AUXILIARY TRANSMISSION OIL TEMP	SPARE	AUXILIARY TRANSMISSION OIL TEMP	IN_ANA.17	ANALOG INPUT, RESISTIVE, RNTC (22K-100K Ω)
C23	PYROMETER	PYROMETER	PYROMETER	PYROMETER	IN_ANA.18	ANALOG INPUT, RESISTIVE, RNTC (22K-100K Ω)
C24	ELECTRIC OVER AIR SWITCH #8 (ACTIVE LOW)	SPARE	SPARE	SPARE		
C25	ANALOG GND	ANALOG GND	ANALOG GND	ANALOG GND	IN_ANA.19	ANALOG SENSOR GROUND
C26	ELECTRIC OVER AIR SWITCH #2 (ACTIVE LOW)	TRANSFER CASE OIL TEMP	SPARE	TRANSFER CASE OIL TEMP	IN_ANA.21	ANALOG INPUT, RESISTIVE, RNTC (22K-100K Ω)
C27	REMOTE ACCELERATOR	REMOTE ACCELERATOR	REMOTE ACCELERATOR	REMOTE ACCELERATOR	IN_ANA.22	ANALOG VOLTAGE INPUT (0-5V)
C28	SPARE	RKE INPUT LOCK	SPARE	GAUGE SENSOR 1	IN_ANA.23	ANALOG VOLTAGE INPUT (0-5V)
C29	SPARE	RKE INPUT UNLOCK	SPARE	GAUGE SENSOR 2	IN_ANA.24	ANALOG VOLTAGE INPUT (0-5V)
C30	GAUGE SENSOR 3	SUSPENSION AIR PRESSURE	SPARE	GAUGE SENSOR 3	IN_ANA.25	ANALOG INPUT, RESISTOR LADDER (0 Ω -1500K Ω)
C31	WIPER RESISTOR LADDER	WIPER RESISTOR LADDER	WIPER RESISTOR LADDER	WIPER RESISTOR LADDER	IN_ANA.26	ANALOG INPUT, RESISTOR LADDER (0 Ω -1500K Ω)
C32	TURN SIGNAL RESISTOR LADDER	SPARE	TURN SIGNAL RESISTOR LADDER	SPARE	IN_ANA.27	ANALOG INPUT, VOLTAGE (0-20V)
C33	LVD BATTERY VOLTAGE	SPARE	LVD BATTERY VOLTAGE	SPARE	IN_ANA.28	ANALOG VOLTAGE INPUT (0-5V)
C34	GAUGE SENSOR 4	VSOP PRESSURE SENSOR	SPARE	GAUGE SENSOR 4/ VSOP PRESSURE SENSOR		
C35	C-CAN GND (NOT USED)	C-CAN GND	C-CAN GND (NOT USED)	C-CAN GND (NOT USED)		CAB CAN (C-CAN) GROUND
C36	LIN (NOT USED)	SPARE	LIN (NOT USED)	SPARE		LIN BUS, PARTS STUFFED, NO SOFTWARE
C37	CAB CAN H (C-CAN)	CAB CAN H (C-CAN)	CAB CAN H (C-CAN)	CAB CAN H (C-CAN)		C-CAN HIGH (TERMINATED)
C38	CAB CAN L (C-CAN)	CAB CAN L (C-CAN)	CAB CAN L (C-CAN)	C-CAN L (NOT USED)		C-CAN LOW (TERMINATED)
C39	TRAILER STOP LAMP RELAY CONTROL	SPARE	TRAILER STOP LAMP RELAY CONTROL	SPARE	OUT_13	OUTPUT, ACTIVE LOW (0.2A)
C40	DIAGNOSIS CAN H (D-CAN)	DIAGNOSIS CAN H (D-CAN)	DIAGNOSIS CAN H (D-CAN)	D-CAN H		D-CAN HIGH (TERMINATED)
C41	DIAGNOSIS CAN L (D-CAN)	DIAGNOSIS CAN L (D-CAN)	DIAGNOSIS CAN L (D-CAN)	D-CAN L		D-CAN LOW (TERMINATED)
C42	DIAGNOSIS CAN GND (NOT USED)	CAN GND DIAGNOSIS	DIAGNOSIS CAN GND (NOT USED)	D-CAN GND (NOT USED)		D-CAN GROUND
C43	BODY BUILDER CAN H (B-CAN)	BODY BUILDER CAN H (B-CAN)	BODY BUILDER CAN H (B-CAN)	BODY BUILDER CAN H (B-CAN)		BODY BUILDER CAN HIGH (TERMINATED)
C44	BODY BUILDER CAN L (B-CAN)	BODY BUILDER CAN L (B-CAN)	BODY BUILDER CAN L (B-CAN)	BODY BUILDER CAN L (B-CAN)		BODY BUILDER CAN LOW (TERMINATED)
C45	BODY BUILDER CAN GND (NOT USED)	BODY BUILDER CAN GND	BODY BUILDER CAN GND (NOT USED)	BODY BUILDER CAN GND (NOT USED)		BODY BUILDER CAN GROUND
C46	MARKER FLASH SWITCH	SPARE	MARKER FLASH SWITCH	SPARE	IN_DIG.53	DIGITAL INPUT, BIPOLAR (0MA)
C47	WINDSHIELD WASHER PUMP SWITCH	KINGPIN RELEASE	WINDSHIELD WASHER PUMP SWITCH	SPARE	IN_DIG.54	DIGITAL INPUT, ACTIVE LOW (0MA)
C48	DRL INTERRUPT SWITCH	SPARE	DRL INTERRUPT SWITCH	SPARE	IN_DIG.55	DIGITAL INPUT, ACTIVE LOW (0MA)
C49	TRAILER MARKER/CLEARANCE LAMP SWITCH	SPARE	TRAILER MARKER LAMP INPUT	SPARE	IN_DIG.56	DIGITAL INPUT, ACTIVE LOW, WAKE-UP (0MA)
C50	FUEL LEVEL SENDER SELECT SWITCH	DIMMER UP	FUEL LEVEL SENDER SELECT SWITCH	SPARE	IN_DIG.57	DIGITAL INPUT, ACTIVE LOW (0MA)
C51	HEADLAMP FLASH SWITCH	DIMMER DOWN	HEADLAMP FLASH SWITCH	SPARE	IN_DIG.58	DIGITAL INPUT, ACTIVE LOW (0MA)
C52	HEADLAMP HIGHBEAM SWITCH	SPARE	HEADLAMP HIGHBEAM SWITCH	SPARE	IN_DIG.59	DIGITAL INPUT, ACTIVE LOW (0MA)

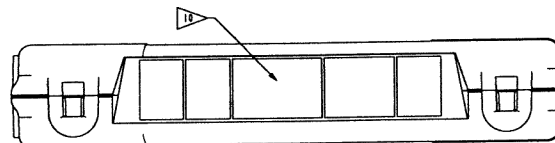

USAGE NOTE:
USE WITH NAMUX 2, NAMUX 3, NAMUX 3.5, OR NAMUX 4 INSTRUMENTATION.

CONNECTOR D PIN DESCRIPTION

PIN	NAMUX 4 DESCRIPTION	NAMUX 3.5 DESCRIPTION	NAMUX 3 DESCRIPTION	NAMUX 2 DESCRIPTION	PLC NAME IN CONFIGURATION MANAGER	NOTES
D01	IGNITION POWER KEYSWITCH	IGN POWER	IGN POWER	IGN POWER	IN.DIG.01	DIGITAL INPUT, ACTIVE HIGH, WAKE-UP (1.BNA)
D02	GENERAL PURPOSE WAKEUP	DRIVER DOOR JAMB	DRIVER DOOR JAMB SWITCH	DRIVER DOOR JAMB SWITCH	IN.DIG.02	DIGITAL INPUT, ACTIVE HIGH, WAKE-UP (4NA)
D03	ACCESSORY POWER KEYSWITCH	ACC POWER	ACC POWER	ACC POWER	IN.DIG.03	DIGITAL INPUT, ACTIVE HIGH, WAKE-UP (1.BNA)
D04	FLASHER/HAZARD SWITCH	FLASHER/HAZARD	FLASHER/HAZARD SWITCH	FLASHER/HAZARD SWITCH	IN.DIG.04	DIGITAL INPUT, ACTIVE HIGH, WAKE-UP (1.BNA)
D05	SERVICE BRAKE SWITCH	PARK LAMP/HEADLAMP ACTIVE	SERVICE BRAKE SWITCH	PARK LAMP/HEADLAMP ACTIVE	IN.DIG.05	DIGITAL INPUT, ACTIVE HIGH, WAKE-UP (0NA)
D06	AUTO START ENABLE SWITCH	HIGH BEAM ACTIVE	SPARE	HIGH BEAM ACTIVE	IN.DIG.06	DIGITAL INPUT, ACTIVE HIGH (0NA)
D07	PARK BRAKE SWITCH	PARK BRAKE	PARK BRAKE SWITCH	PARK BRAKE SWITCH	IN.DIG.07	DIGITAL INPUT, ACTIVE LOW (0NA)
D08	PRIMARY FOG LAMP SWITCH	LEFT TURN	PRIMARY FOG LAMP SWITCH	LEFT TURN	IN.DIG.08	DIGITAL INPUT, ACTIVE HIGH (4NA)
D09	MCS BACK/HOME SWITCH	RIGHT TURN	HVAC SWITCH	RIGHT TURN	IN.DIG.09	DIGITAL INPUT, ACTIVE HIGH (4NA)
D10	CRUISE ON/OFF SWITCH	CRUISE ON/OFF SWITCH	CRUISE ON/OFF SWITCH	CRUISE ON/OFF SWITCH	IN.DIG.10	DIGITAL INPUT, ACTIVE LOW (0NA)
D11	SPARE	INTER AXLE DIFF LOCK	INTER AXLE DIFF LOCK TELLTALE	INTER AXLE DIFF LOCK TELLTALE	IN.DIG.11	DIGITAL INPUT, ACTIVE LOW (0NA)
D12	HEAD LAMP SWITCH	FIFTH WHEEL SLIDE	FIFTH WHEEL SLIDE TELLTALE	FIFTH WHEEL SLIDE TELLTALE	IN.DIG.12	DIGITAL INPUT, ACTIVE LOW (0NA)
D13	TRACTOR ABS TELLTALE	TRACTOR ABS TELLTALE	TRACTOR ABS TELLTALE	TRACTOR ABS TELLTALE	IN.DIG.13	DIGITAL INPUT, ACTIVE LOW (0NA)
D14	TRAILER ABS TELLTALE	TRAILER ABS TELLTALE	TRAILER ABS TELLTALE	TRAILER ABS TELLTALE	IN.DIG.14	DIGITAL INPUT, ACTIVE LOW (0NA)
D15	CHECK ENGINE TELLTALE	CHECK ENGINE TELLTALE	CHECK ENGINE TELLTALE	CHECK ENGINE TELLTALE	IN.DIG.15	DIGITAL INPUT, ACTIVE LOW (0NA)
D16	STOP ENGINE TELLTALE	STOP ENGINE TELLTALE	STOP ENGINE TELLTALE	STOP ENGINE TELLTALE	IN.DIG.16	DIGITAL INPUT, ACTIVE LOW (0NA)
D17	WINDSHIELD WIPER FAST SWITCH	WINDSHIELD WIPER FAST	WINDSHIELD WIPER FAST SWITCH	PTO ON 1	IN.DIG.17	DIGITAL INPUT, ACTIVE LOW (0NA)
D18	ECO OFF SWITCH	FOG LAMP	SECONDARY FOG LAMP SWITCH	SRS	IN.DIG.18	DIGITAL INPUT, ACTIVE LOW (0NA)
D19	EDITABLE TELLTALE 1	EDITABLE TELLTALE 1	EDITABLE TELLTALE 1	EDITABLE TELLTALE 1	IN.DIG.19	DIGITAL INPUT, BIPOLAR (0NA)
D20	EDITABLE TELLTALE 2	EDITABLE TELLTALE 2	EDITABLE TELLTALE 2	EDITABLE TELLTALE 2	IN.DIG.20	DIGITAL INPUT, BIPOLAR (0NA)
D21	EDITABLE TELLTALE 3	EDITABLE TELLTALE 3	EDITABLE TELLTALE 3	EDITABLE TELLTALE 3	IN.DIG.21	DIGITAL INPUT, BIPOLAR (0NA)
D22	AUTO START DISABLE SWITCH	EDITABLE TELLTALE 4	EDITABLE TELLTALE 4	EDITABLE TELLTALE 4	IN.DIG.22	DIGITAL INPUT, BIPOLAR (0NA)
D23	EDITABLE TELLTALE 5	SPARE	SPARE CHASSIS RELAY CONTROL	SPARE	IN.DIG.23	DIGITAL INPUT, BIPOLAR (0NA)
D24	EDITABLE TELLTALE 6	EDITABLE TELLTALE 6	EDITABLE TELLTALE 6	EDITABLE TELLTALE 6	IN.DIG.24	DIGITAL INPUT, BIPOLAR (0NA)
D25	EDITABLE TELLTALE 7 (NOT USED)	EDITABLE TELLTALE 7 (NOT USED)	EDITABLE TELLTALE 7 (NOT USED)	VAR SPD COOLANT PUMP HVAC CONTROL	IN.DIG.25	DIGITAL INPUT, BIPOLAR (0NA)
D26	LNG FUEL TEMP OR CNG FUEL CAP SENSOR	EDITABLE TELLTALE 8	EDITABLE TELLTALE 8	EDITABLE TELLTALE 8	IN.DIG.26	DIGITAL INPUT, BIPOLAR (0NA)
D27	METHANE SYSTEM SENSOR	EDITABLE TELLTALE 9	EDITABLE TELLTALE 9	EDITABLE TELLTALE 9	IN.DIG.27	DIGITAL INPUT, BIPOLAR (0NA)
D28	SPARE ALARM 1A	SPARE ALARM 1A	SPARE ALARM 1A	SPARE ALARM 1A	IN.DIG.28	DIGITAL INPUT, BIPOLAR (0NA)
D29	SPARE ALARM 1B	SPARE ALARM 1B	SPARE ALARM 1B	SPARE ALARM 1B	IN.DIG.29	DIGITAL INPUT, BIPOLAR (0NA)
D30	SPARE ALARM 1C	SPARE ALARM 1C	SPARE ALARM 1C	SPARE ALARM 1C	IN.DIG.30	DIGITAL INPUT, BIPOLAR (0NA)
D31	SPARE ALARM 2	SPARE ALARM 2	SPARE ALARM 2	SPARE ALARM 2	IN.DIG.31	DIGITAL INPUT, BIPOLAR (0NA)
D32	FRAME CAN H (F-CAN)	FRAME CAN H (F-CAN) (NOT USED)	FRAME CAN H (F-CAN)	M-CAN HIGH (NOT USED)		F-CAN HIGH (TERMINATED)
D33	FRAME CAN L (F-CAN)	FRAME CAN L (F-CAN) (NOT USED)	FRAME CAN L (F-CAN)	M-CAN LOW (NOT USED)		F-CAN LOW (TERMINATED)
D34	INSTRUMENTATION CAN H (I-CAN)	INSTRUMENTATION CAN H (I-CAN)	INSTRUMENTATION CAN H (I-CAN)	INSTRUMENTATION CAN H (I-CAN)		I-CAN HIGH (TERMINATED)
D35	INSTRUMENTATION CAN L (I-CAN)	INSTRUMENTATION CAN L (I-CAN)	INSTRUMENTATION CAN L (I-CAN)	INSTRUMENTATION CAN L (I-CAN)		I-CAN LOW (TERMINATED)
D36	INSTRUMENTATION CAN GND (NOT USED)	INSTRUMENTATION CAN GND	INSTRUMENTATION CAN GND (NOT USED)	INSTRUMENTATION CAN GND (NOT USED)		I-CAN GROUND
D37	VEHICLE CAN H (V-CAN)	VEHICLE CAN H (V-CAN)	VEHICLE CAN H (V-CAN)	VEHICLE CAN H (V-CAN)		V-CAN HIGH (TERMINATED)
D38	VEHICLE CAN L (V-CAN)	VEHICLE CAN L (V-CAN)	VEHICLE CAN L (V-CAN)	VEHICLE CAN L (V-CAN)		V-CAN LOW
D39	VEHICLE CAN GND (NOT USED)	VEHICLE CAN GND	VEHICLE CAN GND (NOT USED)	VEHICLE CAN GND (NOT USED)		V-CAN GROUND
D40	V-CAN L TR	V-CAN L TR	V-CAN L TR	V-CAN L TR		V-CAN LOW (TERMINATED)



USAGE NOTE:
USE WITH NAMUX 2, NAMUX 3, NAMUX 3.5, OR NAMUX 4 INSTRUMENTATION.

CONNECTOR E PIN DESCRIPTION

PIN	NAMUX 4 DESCRIPTION	NAMUX 3.5 DESCRIPTION	NAMUX 3 DESCRIPTION	NAMUX 2 DESCRIPTION	PLC NAME IN CONFIGURATION MANAGER	NOTES
E01	IDLE TIMER/AUTO START IGM TBA RELAY CONTROL	IDLE TIMER TBA	IDLE TIMER TBA RELAY CONTROL	IDLE TIMER TBA RELAY CONTROL	OUT_05	OUTPUT, ACTIVE LOW (0.3A)
E02	WINDSHIELD WIPER RELAY CONTROL	SPARE	WINDSHIELD WIPER RELAY CONTROL	DUAL STEER STATE OUTPUT (PB 320/520 ONLY)	OUT_06	OUTPUT, ACTIVE LOW (1A)
E03	IGNITION RELAY CONTROL (START)	IGNITION RELAY CONTROL (START)	IGNITION RELAY CONTROL (START)	IGNITION RELAY CONTROL (START)	OUT_07	OUTPUT, ACTIVE LOW (0.2A)
E04	CAB MARKER/CLEARANCE LAMP RELAY/ TBA HEADLAMP WASHER	HEADLAMP "ON" WITH WIPER / RKE	CLEARANCE LAMP RELAY CONTROL	SPARE	OUT_08	OUTPUT, ACTIVE LOW (0.2A)
E05	GND	GND	GND	GND		OUTPUT GROUND
E06	LVD BUS RELAY CONTROL	SPARE	LVD BUS 1	SPARE	OUT_09	OUTPUT, ACTIVE LOW (0.2A)
E07	PARK LAMPS RELAY CONTROL	FOG LIGHTS WITH LOW BEAM ONLY	LVD BUS 2 (NOT USED)/ FRT DRIVE AXLE SPD INTERLOCK (PB ONLY)	FRONT DRIVE AXLE SPEED INTERLOCK (PB ONLY)	OUT_10	OUTPUT, ACTIVE LOW (0.2A)
E08	TRAILER MARKER/CLEARANCE RELAY CONTROL	ABS BRAKE LIGHT RELAY	DIFFERENTIAL LOCK SPEED INTERLOCK (PB ONLY)	DIFFERENTIAL LOCK SPEED INTERLOCK (PB ONLY)	OUT_11	OUTPUT, ACTIVE LOW (0.2A)
E09	MIRROR HEAT RELAY CONTROL	MIRROR HEAT RELAY	EXTERIOR REGEN NOTIFICATION	EXTERIOR REGEN NOTIFICATION	OUT_12	OUTPUT, ACTIVE LOW (0.2A)

