




USB In

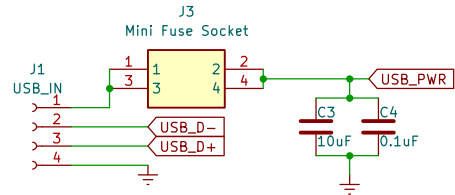

Hub Usb 2.0

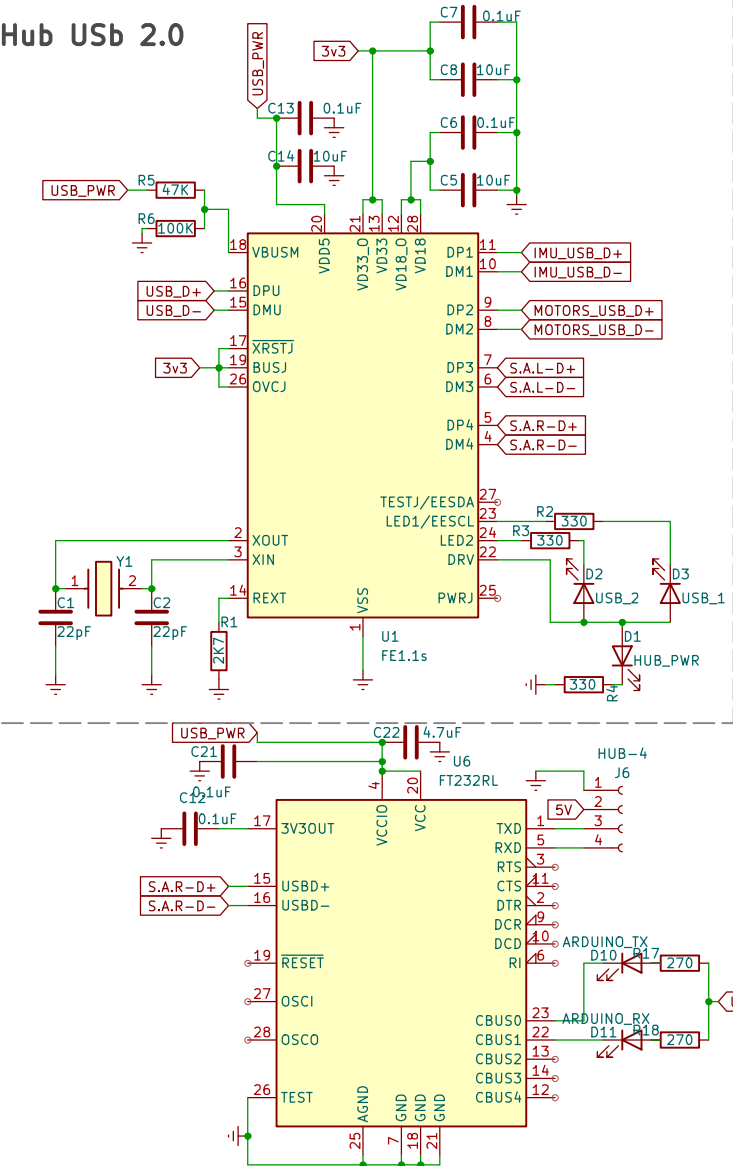

USB to RS485 (Motors)

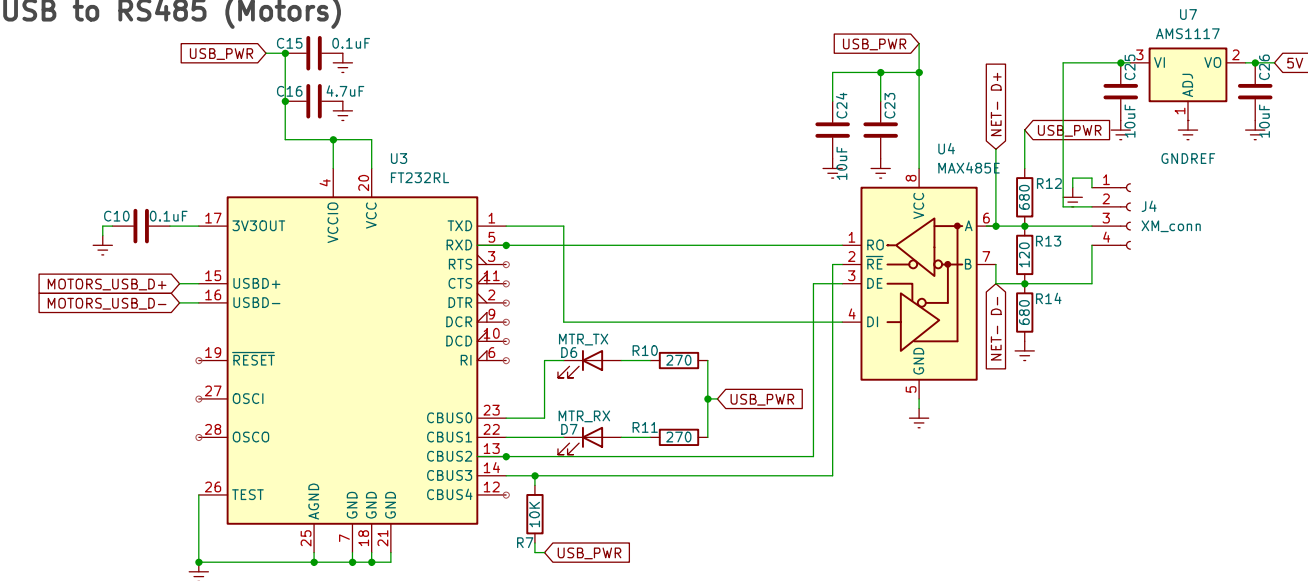

USB to TTL (IMU)

