



ZigBee Direct Android APP 操作指引（中文版）

AN-200512-C1

Ver.1.0.0

2023/03/07

关键词

Android APP 操作指引

摘要

Android APP 操作指引

Published by

Telink Semiconductor

Bldg 3, 1500 Zuchongzhi Rd,

Zhangjiang Hi-Tech Park, Shanghai, China

© Telink Semiconductor

All Right Reserved

Legal Disclaimer

This document is provided as-is. Telink Semiconductor reserves the right to make improvements without further notice to this document or any products herein. This document may contain technical inaccuracies or typographical errors. Telink Semiconductor disclaims any and all liability for any errors, inaccuracies or incompleteness contained herein.

Copyright © 2023 Telink Semiconductor (Shanghai) Ltd, Co.

Information



Telink

For further information on the technology, product and business term, please contact Telink Semiconductor Company (www.telink-semi.com).

For sales or technical support, please send email to the address of:

telinkcnsales@telink-semi.com

telinkcnsupport@telink-semi.com



更改历史

Version 1.0.0 (2023-03-07)

Section	Change Description

Version 1.0.0 (2023-03-07)

This is the Initial release.

1. 设备组网

打开 app 后，点击主界面右上角的“+”按钮进入添加界面，APP 会自动搜索周边设备（如图 1-2），可点击对应设备右边的 **ADD** 按钮单独组网，也可以点击对应设备右上角 ✕ 删除对应的设备后通过 **ADD ALL** 按钮组网列表里面剩下的所有设备。 右上角  为重新加载按钮， 点击后可以重新扫描设备。

图 1-1 APP 首页



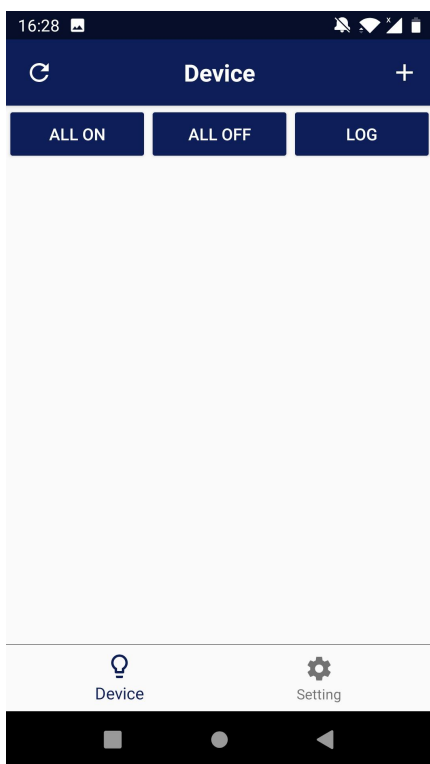


图 1-2 扫描到的设备列表

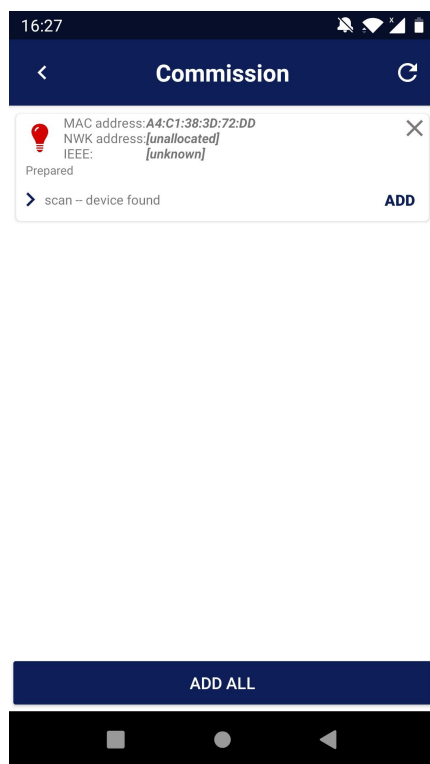

2.Device 界面指引

图 2-1 APP Device 界面

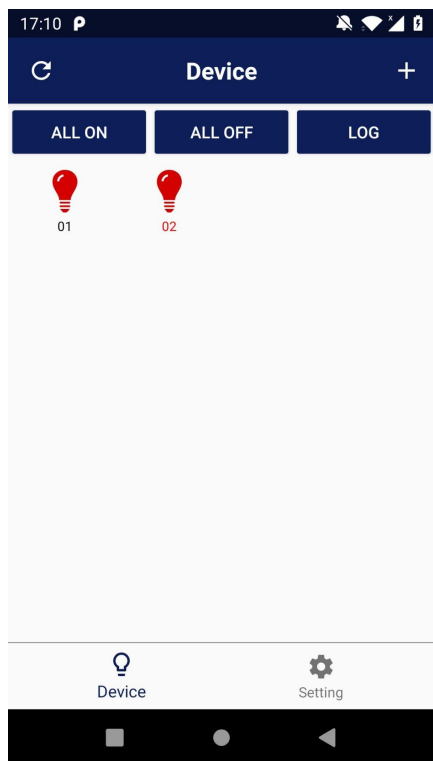

2.1 刷新 Device

APP 首页左上角按钮可刷新当前已组网的设备状态

2.2 Set on/off

分别点击 ALL ON, ALL OFF 按钮可以发送 all on/off 指令控制所有已组网的设备开/关灯（红色为开启状态，灰色为关闭状态，图标下方的设备名称红色是直连设备）


点击单个设备图标可开/关灯（红色为开启状态，灰色为关闭状态，图标下方的设备名称红色是直连设备）

tips: APP 在发送 set onoff 后，不会主动获取设备状态，需要固件端打开 APP_AUTO_RSP_ENABLE 这个宏，当设备端灯的状态发生变化时，就会自动发送 Read Attribute Response 命令，上报当前状态。如果没有打开 APP_AUTO_RSP_ENABLE 这个宏，在 APP 发送 set on off 后，需要手动点击刷新按钮以获取状态。

2.3 Log

log 界面将会记录当前操作的 log 信息，Save In File 可保存 log（log 保存路径：默认存储在 /Android/data/com.telink.lt.zgb/files/TelinkZvdLog），Refresh 可刷新 log，Clear 清空 log 信息。


图 2-6 Android 版 Log 界面

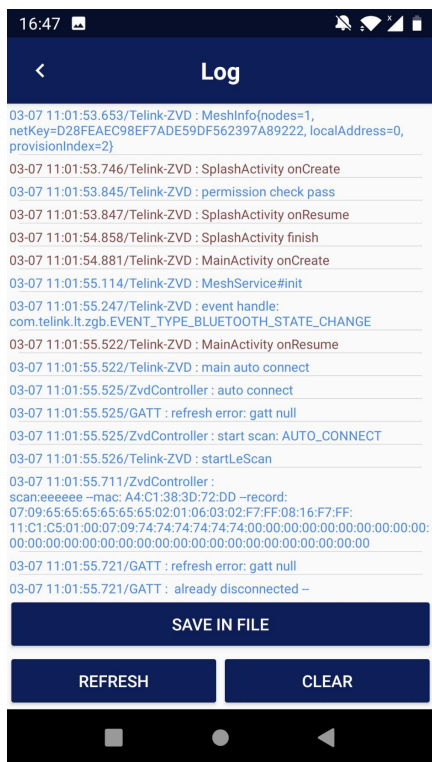

2.4 Device Setting

APP 首页长按已组网的 Light 设备图标可进入 Device Setting 界面， 点击该页面中 KICK OUT 可以将设备移除

图 2-8 light 设备 Device Setting 界面

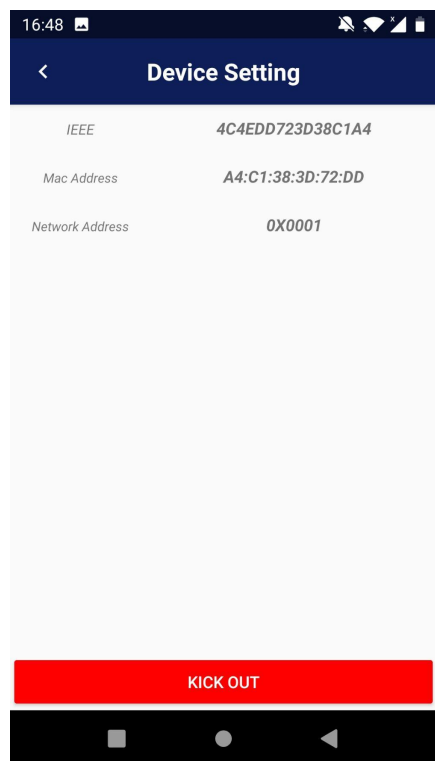

3.Setting 界面

Setting 界面可显示当前网络参数信息， 点击 RESET NETWORK 按钮可以清除并重置网络信息

图 4-1 Setting

